

instruction for installation

Note: Cables, ropes, and tools for mounting ropes are not included.

INSTALLATION

For concrete or wood floor



Step1. Mark the drilling points at the appropriate installation locations.



Step2. use a hammer drill to make a hole for $\varnothing$ 12 at the marked points.



Step3. Hammer the anchor screw into the drilled hole.



Step4.Tighten the screws




Step5.Close the lid and finish fixing the post.

Note: Ensure that the column is upright when fixing the bottom plate of the post.

Mount with handrail(horizontal)

Step1: Fixed bracket

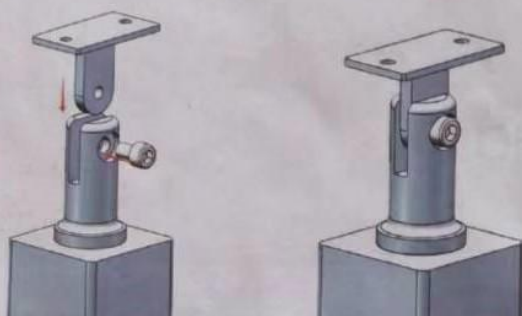

Step2: Determine the installation position of the handrail, and then mark the position under the handrail and bracket holes and drill holes with a $\varnothing 5.5$ - $\varnothing 5.6$ mm drill.



Step3: Use the self-tapping screws in the accessory to fix the handrail to the support.



It is also suitable for the installation of arc handrails and brackets.