

# Installation



Wooden Board  
1 pcs



Wooden Stick  
1 pcs



Bracket  
2 pcs



Hook  
8 pcs



Short Screw  
4 pcs





Long Screw  
2 pcs



Wall Plug  
2 pcs



## Step 1:

To put the wood board right in place, there would be about 32mm on both sides. Find the small holes at bottom of the bracket, push the small screws through the holes into the wood in order to fix the wood board with the bracket.

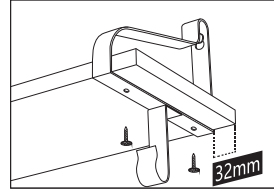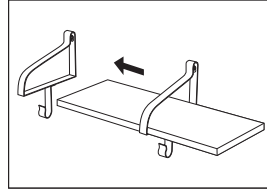



## Step 2:

Keep the wood board horizontally, then mark two gauge points from the holes at top of iron brackets.

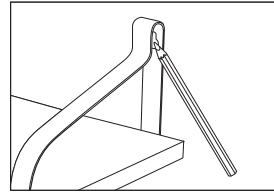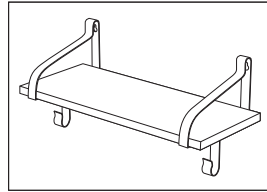



## Step 3:

Drill holes at the marked points and hammer the wall plugs in.

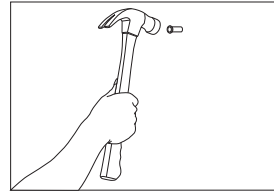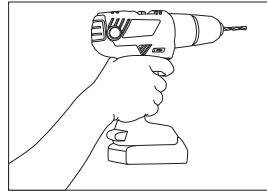

## Step 4:

Screw the long screws in (NOT totally in, leave the screws out for hanging). Then align the holes of iron bracket with screws, hang the bracket on the screws and pull down it to fasten.

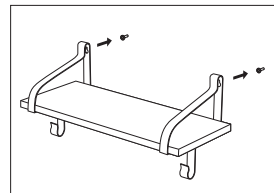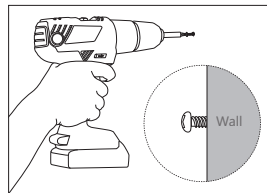

## Step 5:

Hang the wood stick on the hook of iron bracket. Hang the hooks on the wood stick as needed.

