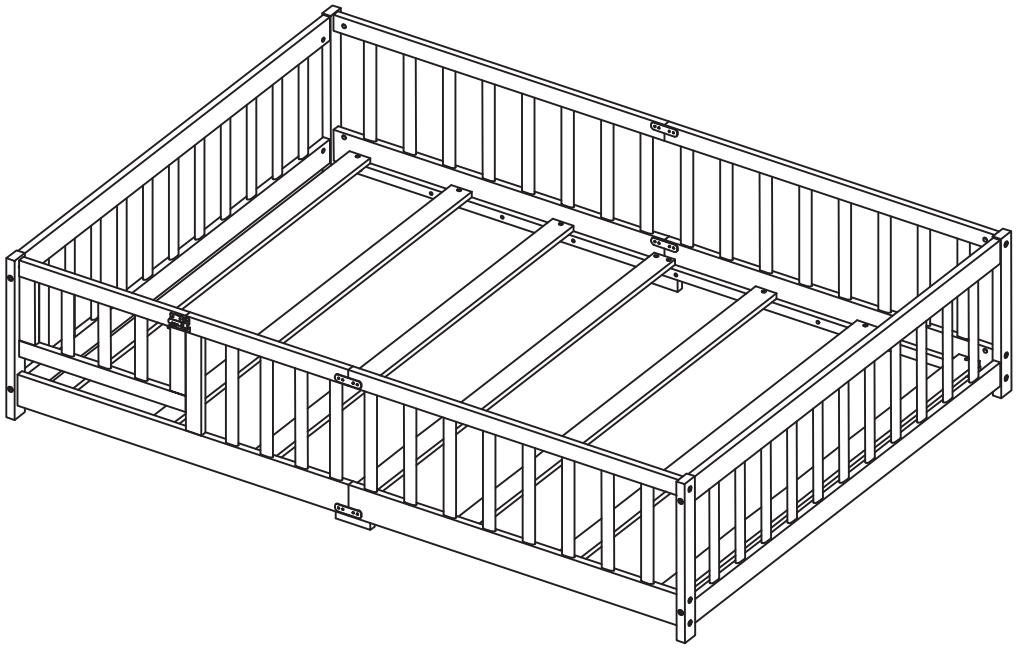
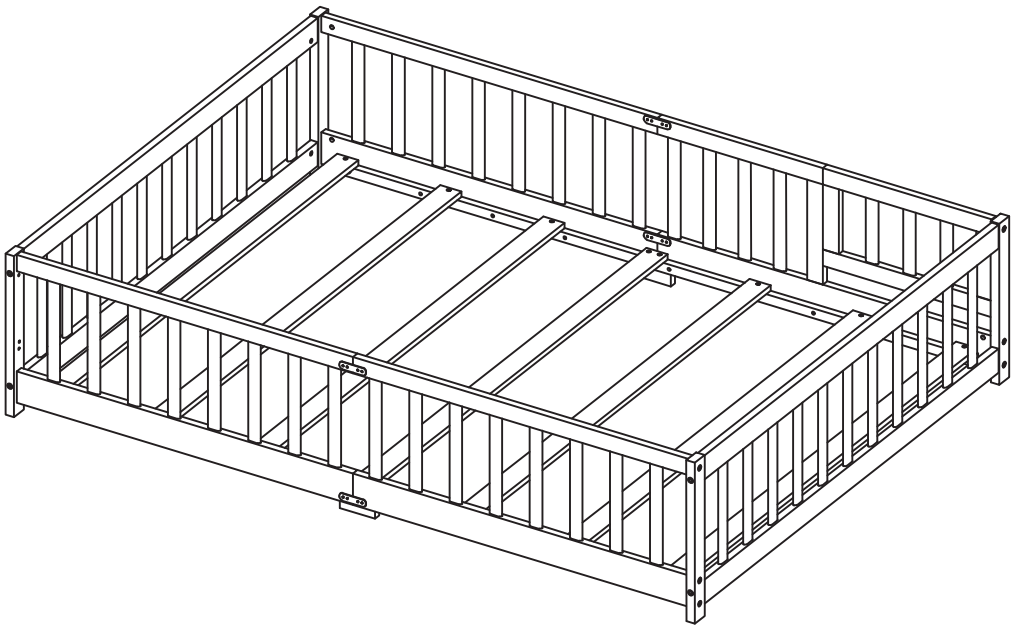
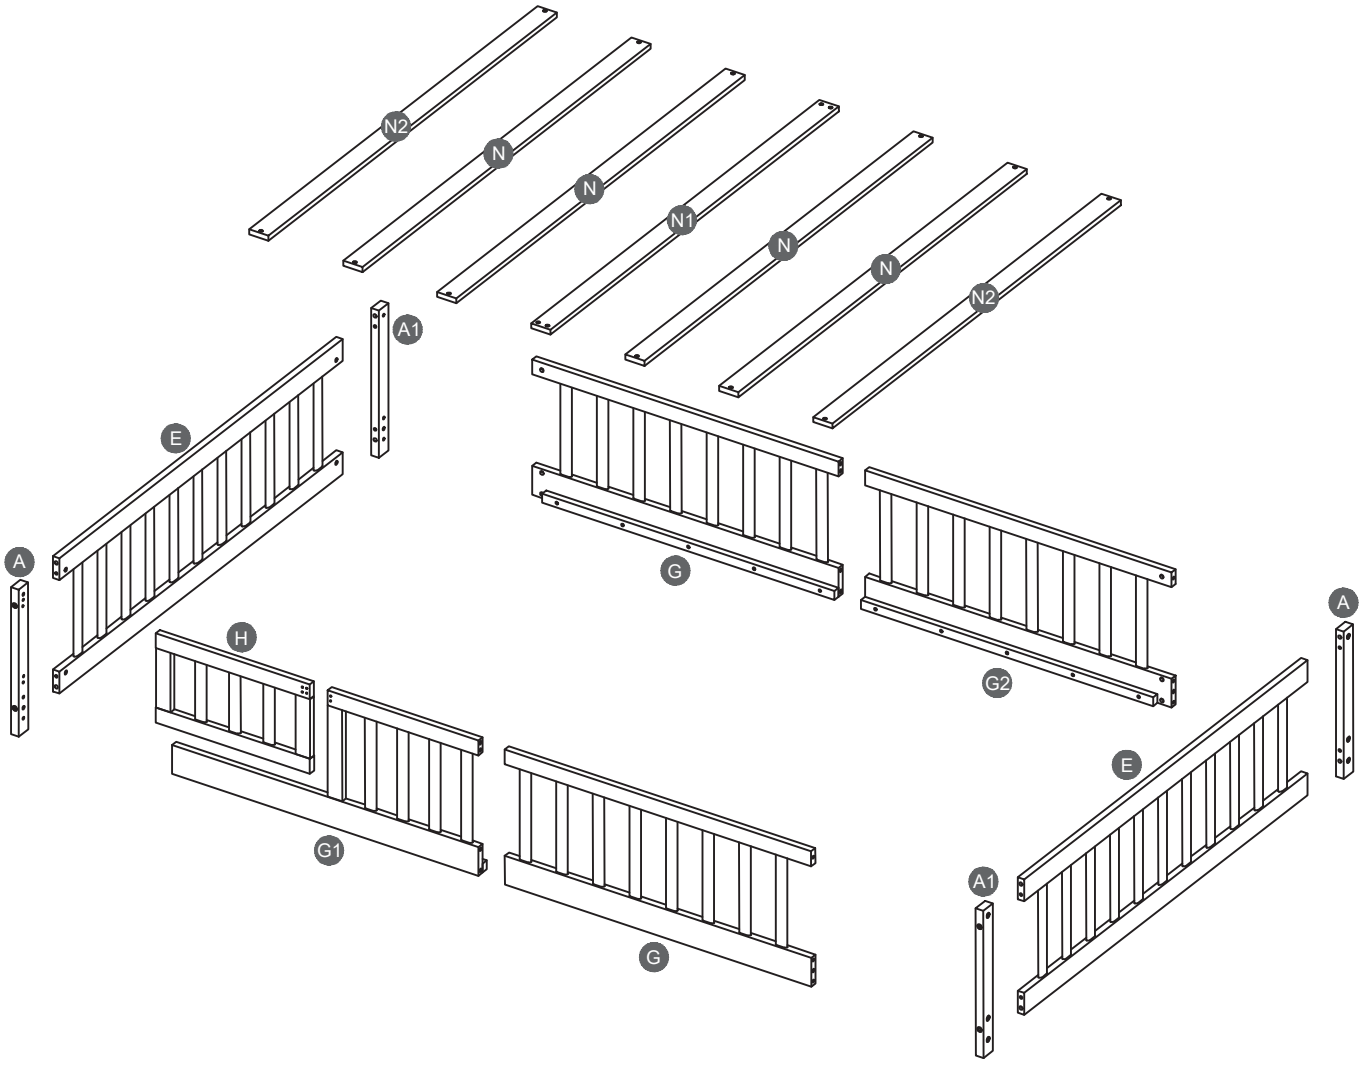
ASSEMBLY INSTRUCTIONS

FULL FLOOR BED WITH FENCE



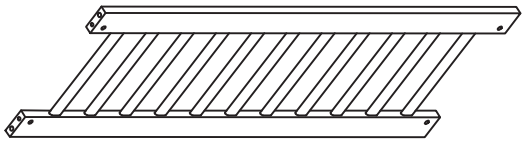
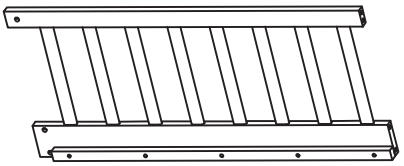
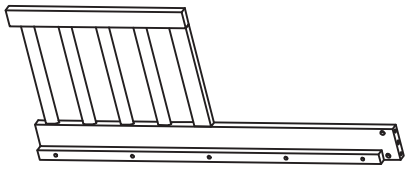
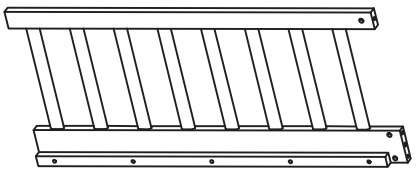
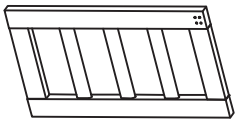















Detail View




Part List

A  Leg - 2pcs	**A1**  Leg - 2pcs
E  Hb. Fb. Panel - 2pcs	**G**  Side Rail - 2pcs
G1  Side Rail - 1pc	**G2**  Side Rail - 1pc
H  Door - 1pc	**N**  Bed Slats - 4pcs
N1  Bed Slats (Mid.) - 1pc	**N2**  Bed Slats (End) - 2pcs

Hardware List

1  M6 x 80mm JCBC (8pcs)	**2**  M6 x 65mm JCBC (11pcs)	**3**  M6 x 15mm Barrel Nut (19pcs)
4  M10 x 30mm Wood Dowel (Short) (12pcs)	**5**  Metal Bracket (8pcs)	**6**  M3.5 x 16mm CSK Screw (46pcs)
7  Side Rail Bottom Support (2pcs)	**8**  M4 x 32mm CSK Screw (4pcs)	**9**  M4 x 25mm CSK Screw (12pcs)
10  M6 x 30mm JCBC-W (4pcs)	**11**  20 x 20 x 230mm Wood Block (1pc)	**12**  Sticker Cap (2pcs)
13  6 x 24 x 55mm (135°) Hinges (2pcs)	**14**  10 x 40 x 60mm Lock (1pc)	**15**  M10 x 40mm Wood Dowel (Long) (8pcs)
16  M4 Allen Key (1pc)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)






PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

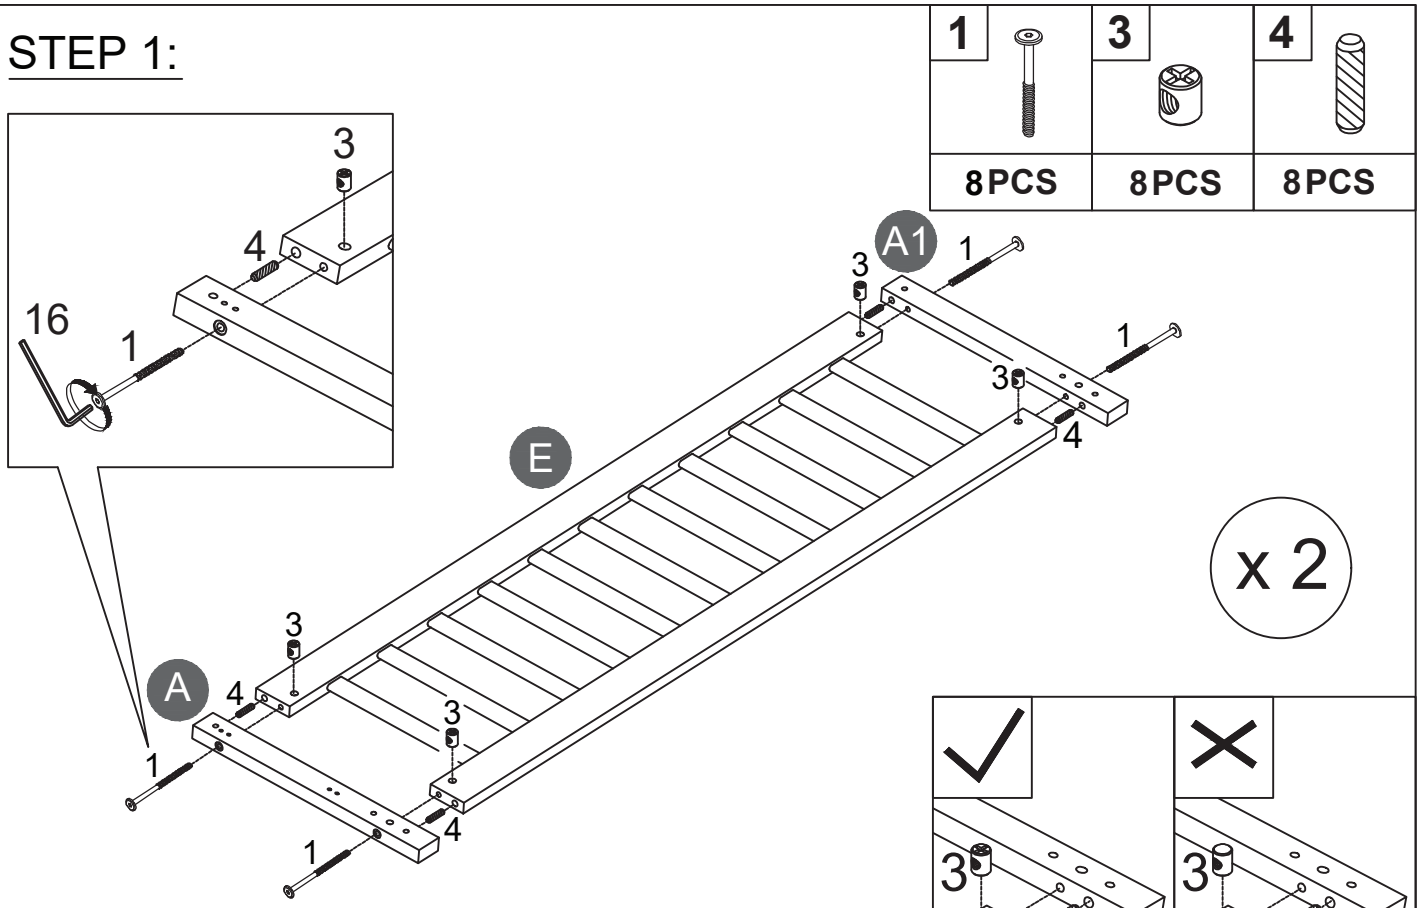STEP 1:




Note:Part3 will face up with the"x" mark on it, otherwise it cannot be tightened

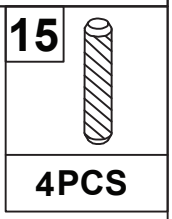STEP 2:




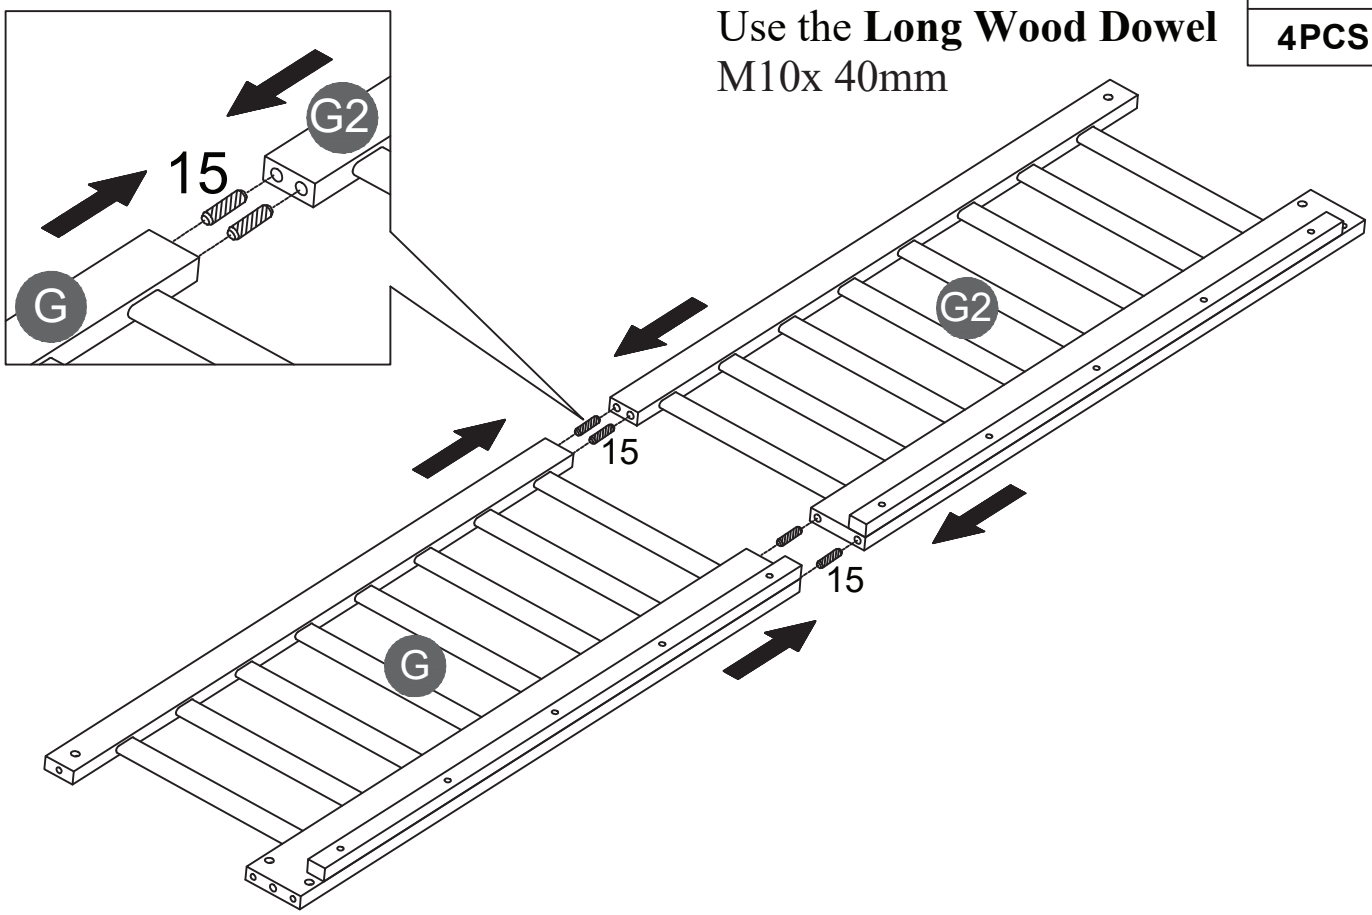Note:
Use the **Long Wood Dowel**
M10x 40mm




STEP 3:

5	6
2PCS	8PCS

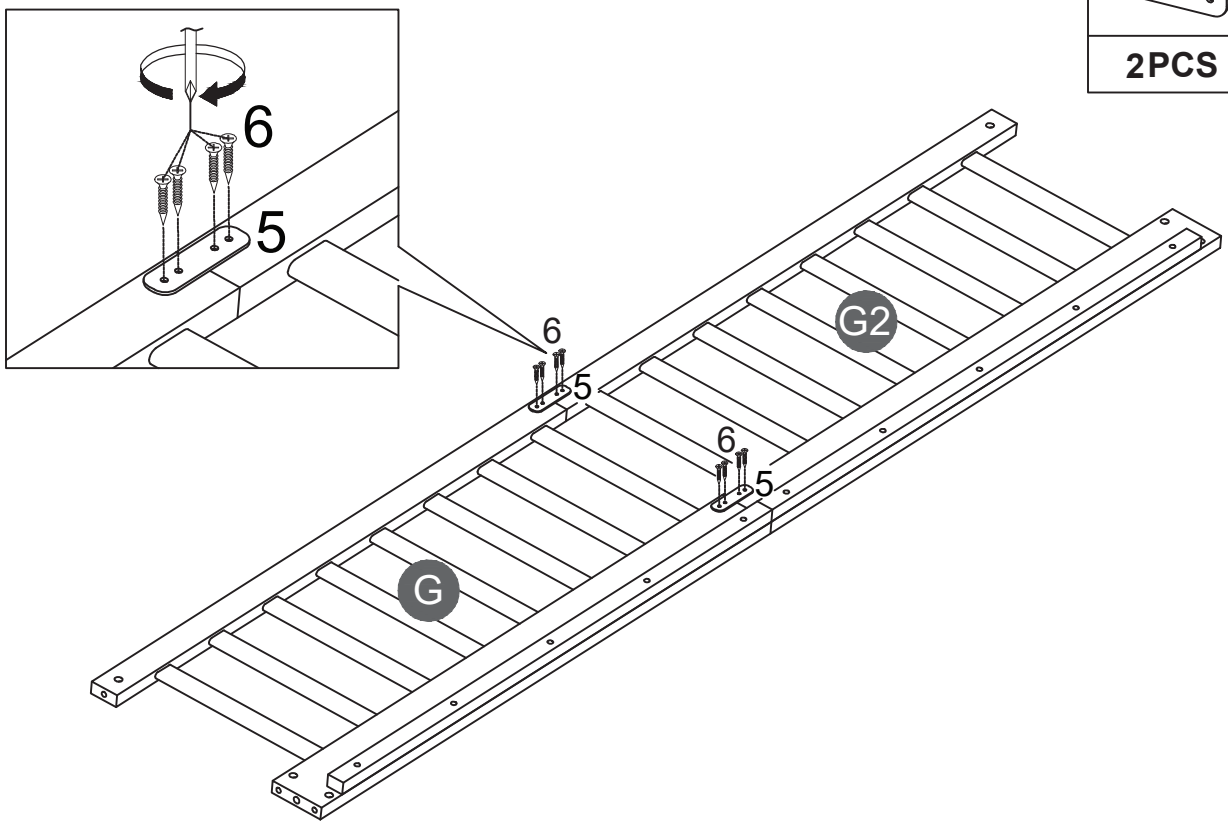


STEP 4:

5	6
2PCS	8PCS

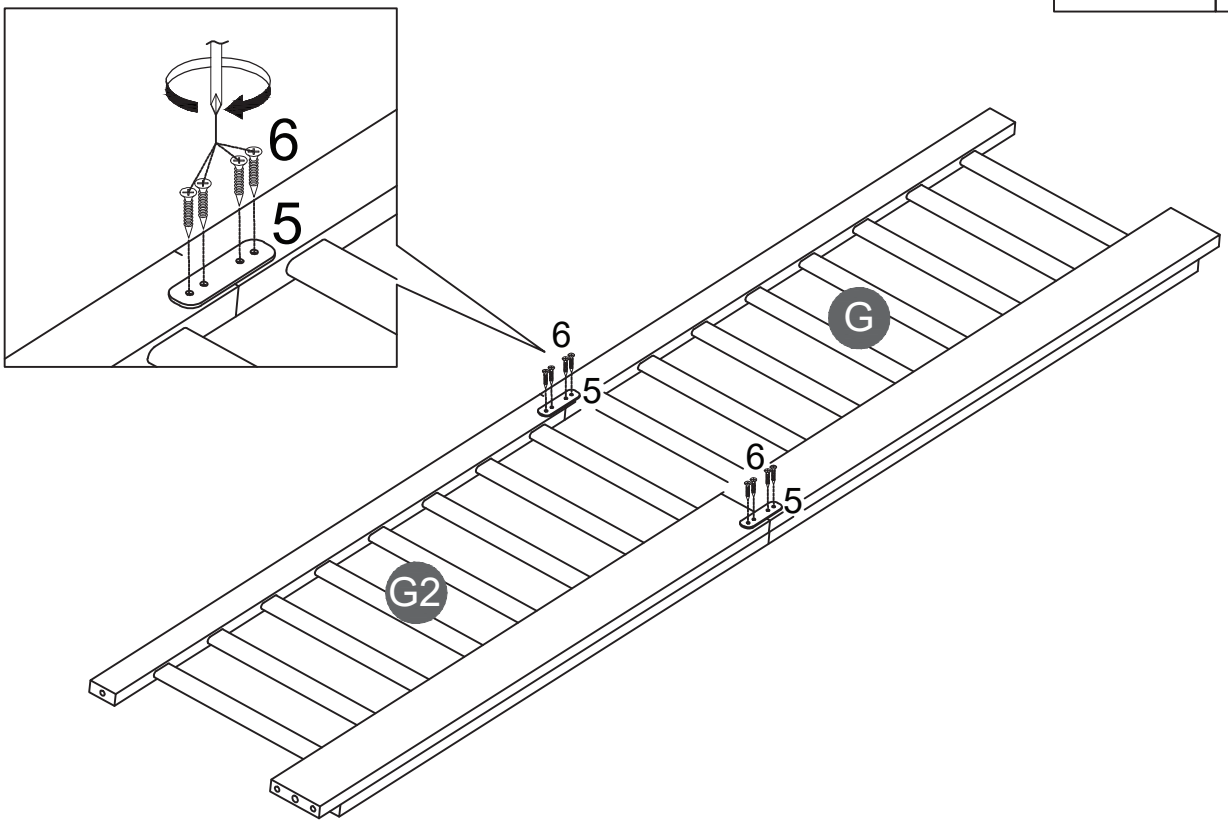


After completing the installation of Step 3, please flip to the other side.

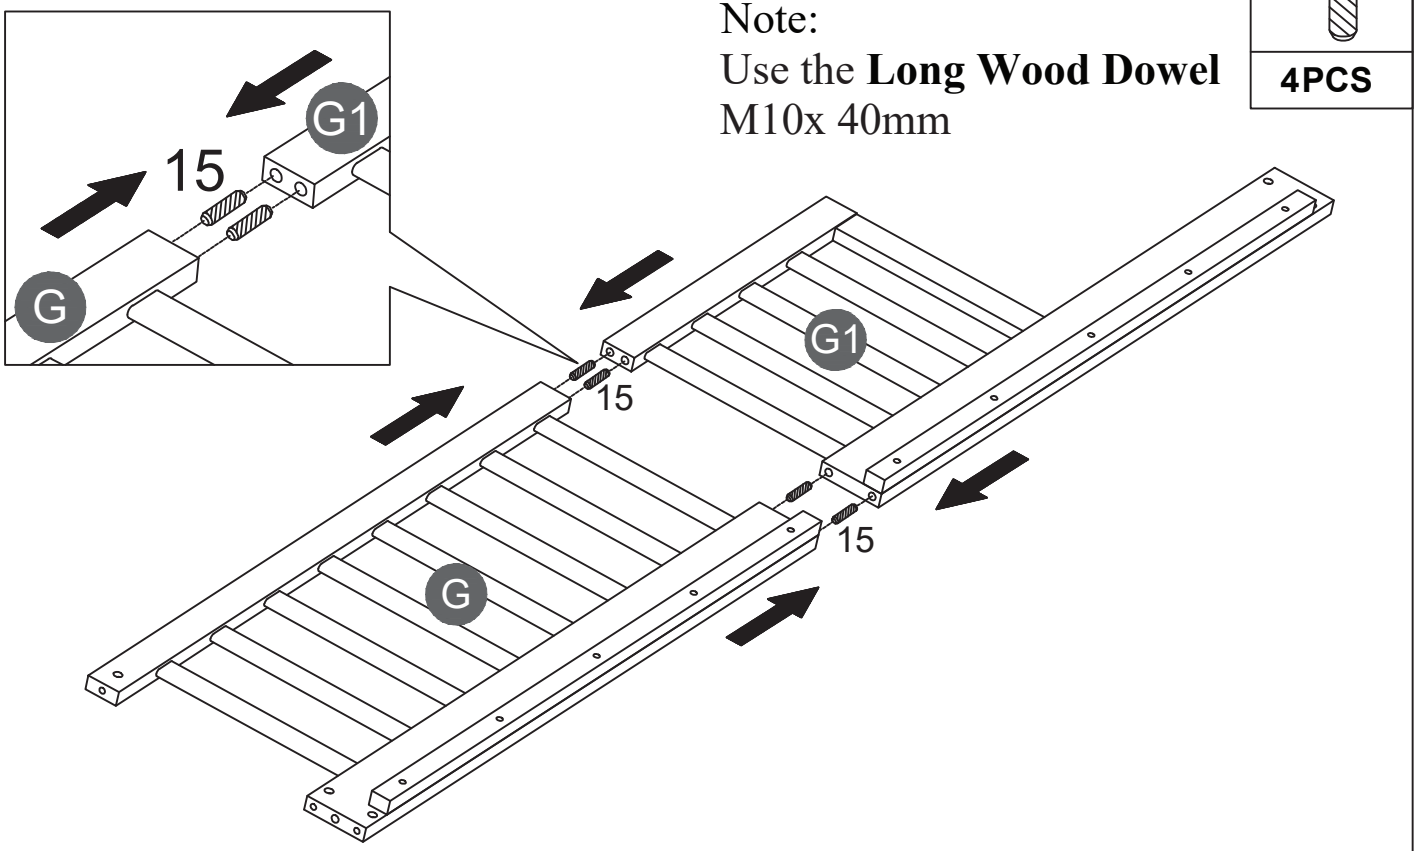STEP 5:



15
4PCS
Note:
Use the **Long Wood Dowel**
M10x 40mm
G1
15
G
G1
15
15
G

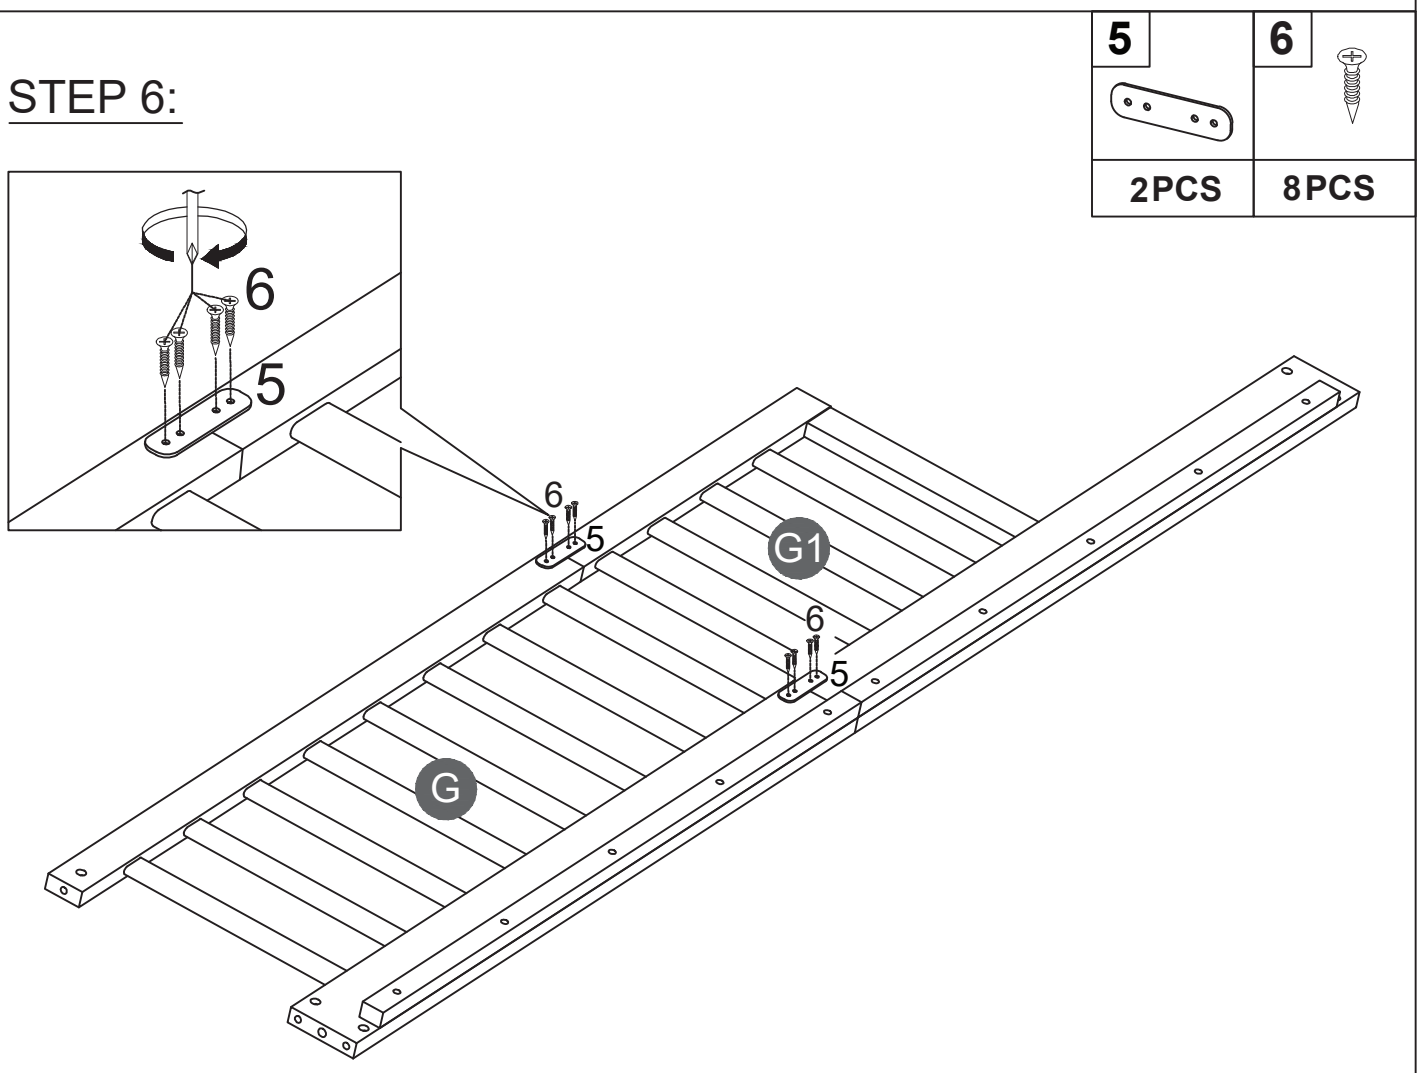STEP 6:


5
2PCS
6
8PCS
6
5
6
5
G1
6
5
G

STEP 7:


5	6
2PCS	8PCS

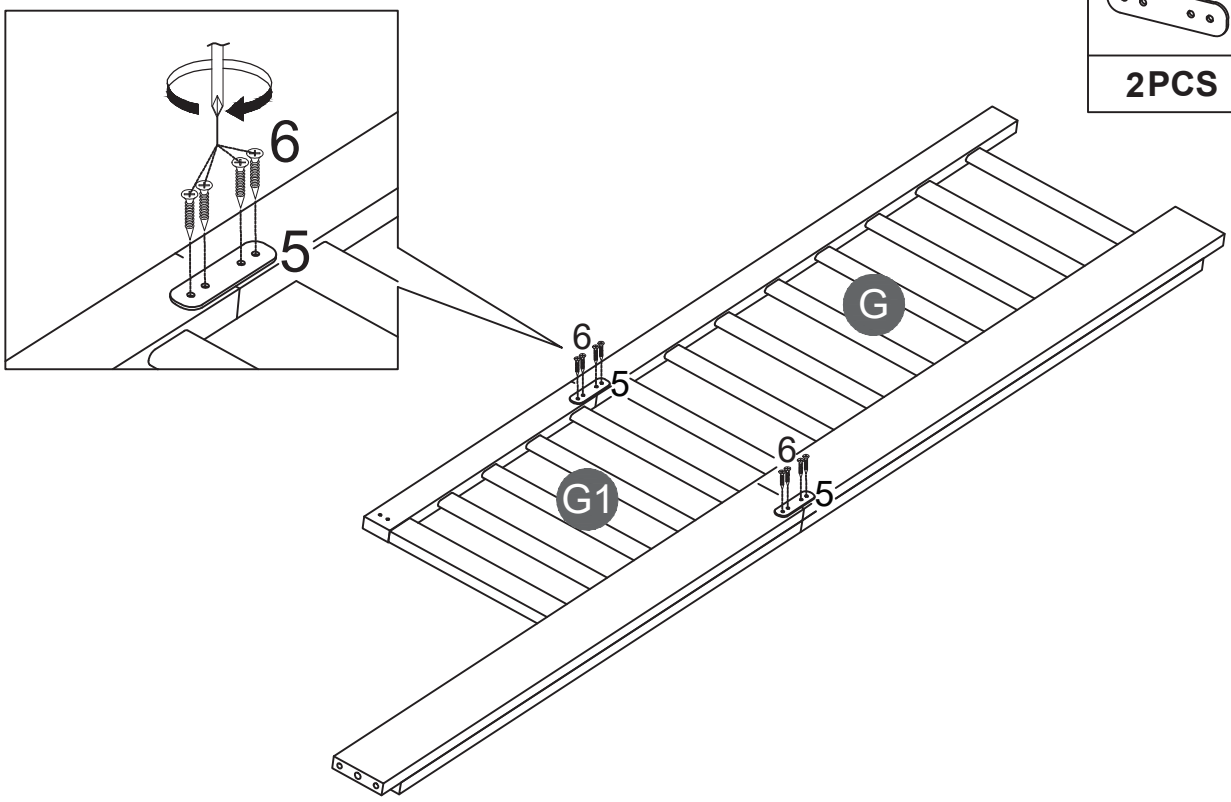

After completing the installation of Step 6, please flip to the other side.


STEP 8:

7	8
2PCS	4PCS

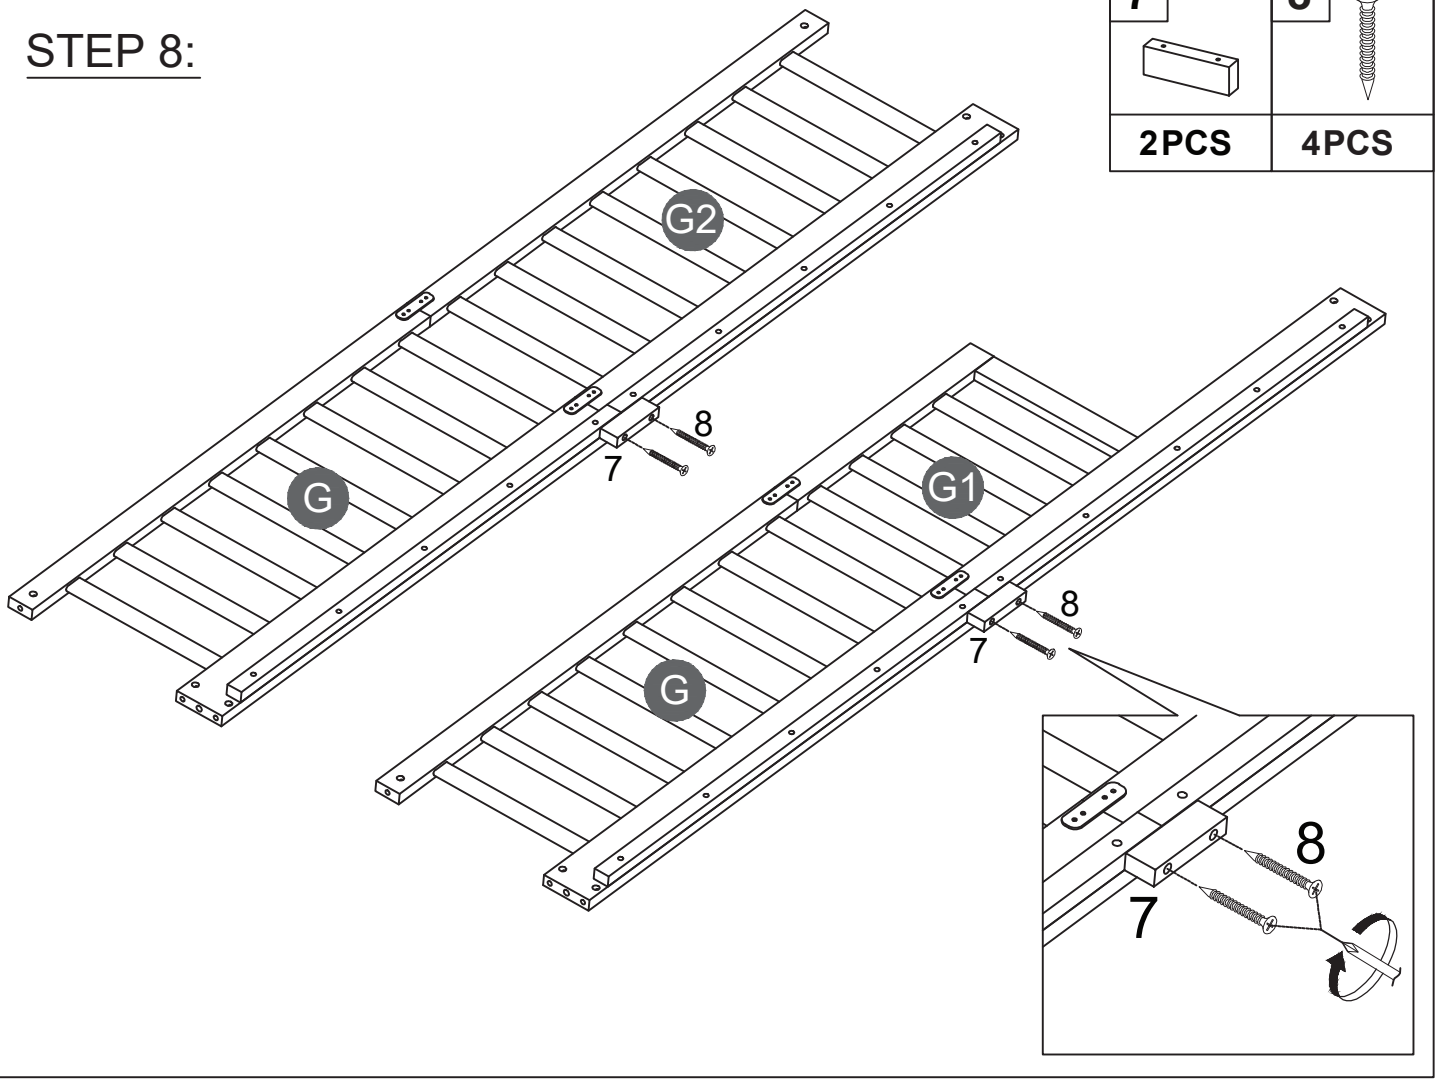

STEP 9:


2	3	4	12
11PCS	11PCS	4PCS	2PCS

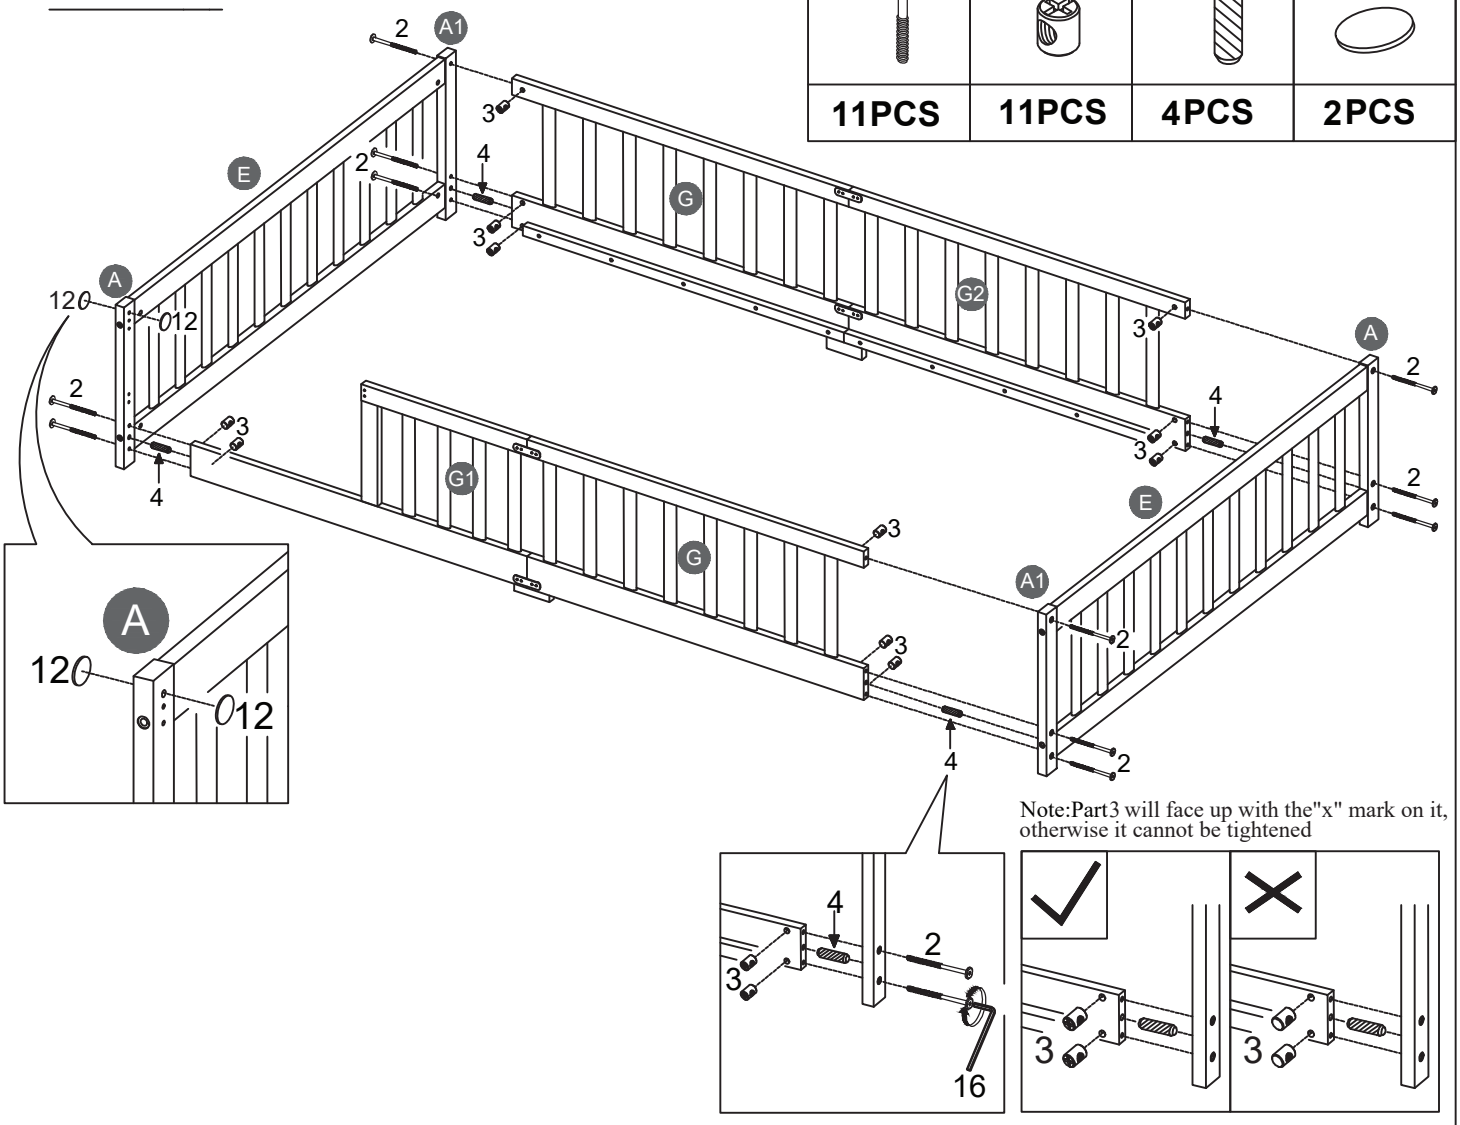


Note:Part3 will face up with the"x" mark on it, otherwise it cannot be tightened

STEP 10:

6	13
4PCS	2PCS

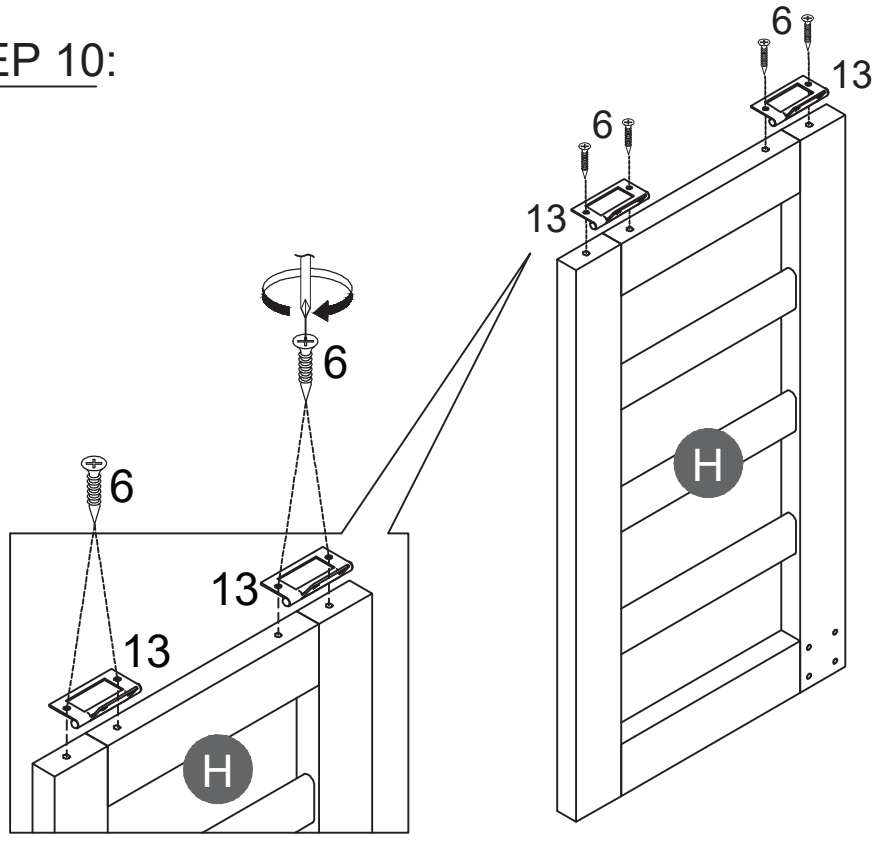


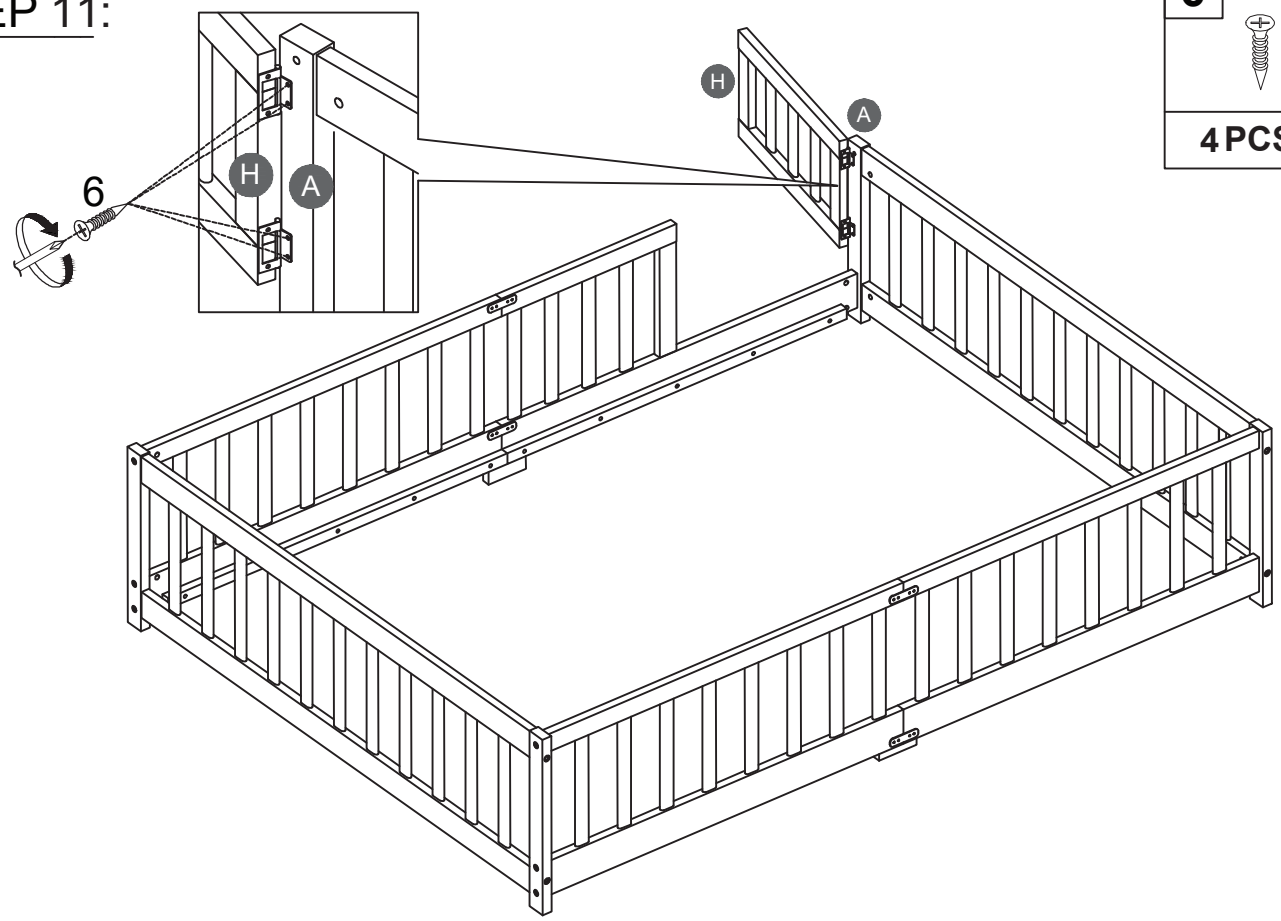STEP 11:



6	
4 PCS	

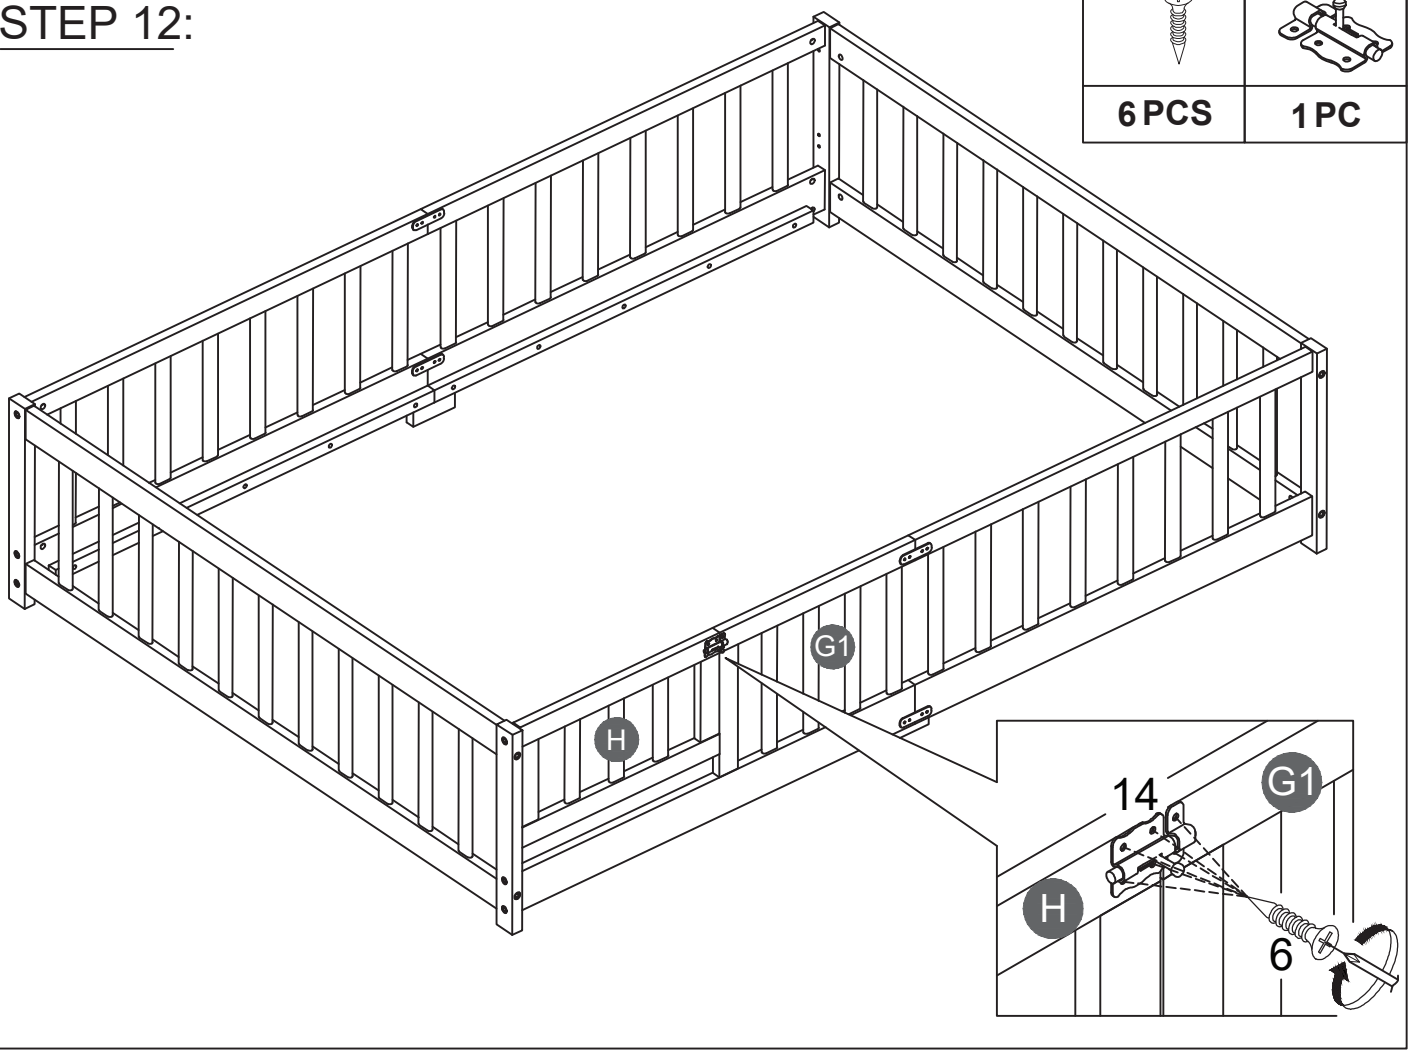
STEP 12:




6	14
6 PCS	1 PC


STEP 13:

9	10	11
12PCS	4PCS	1PC

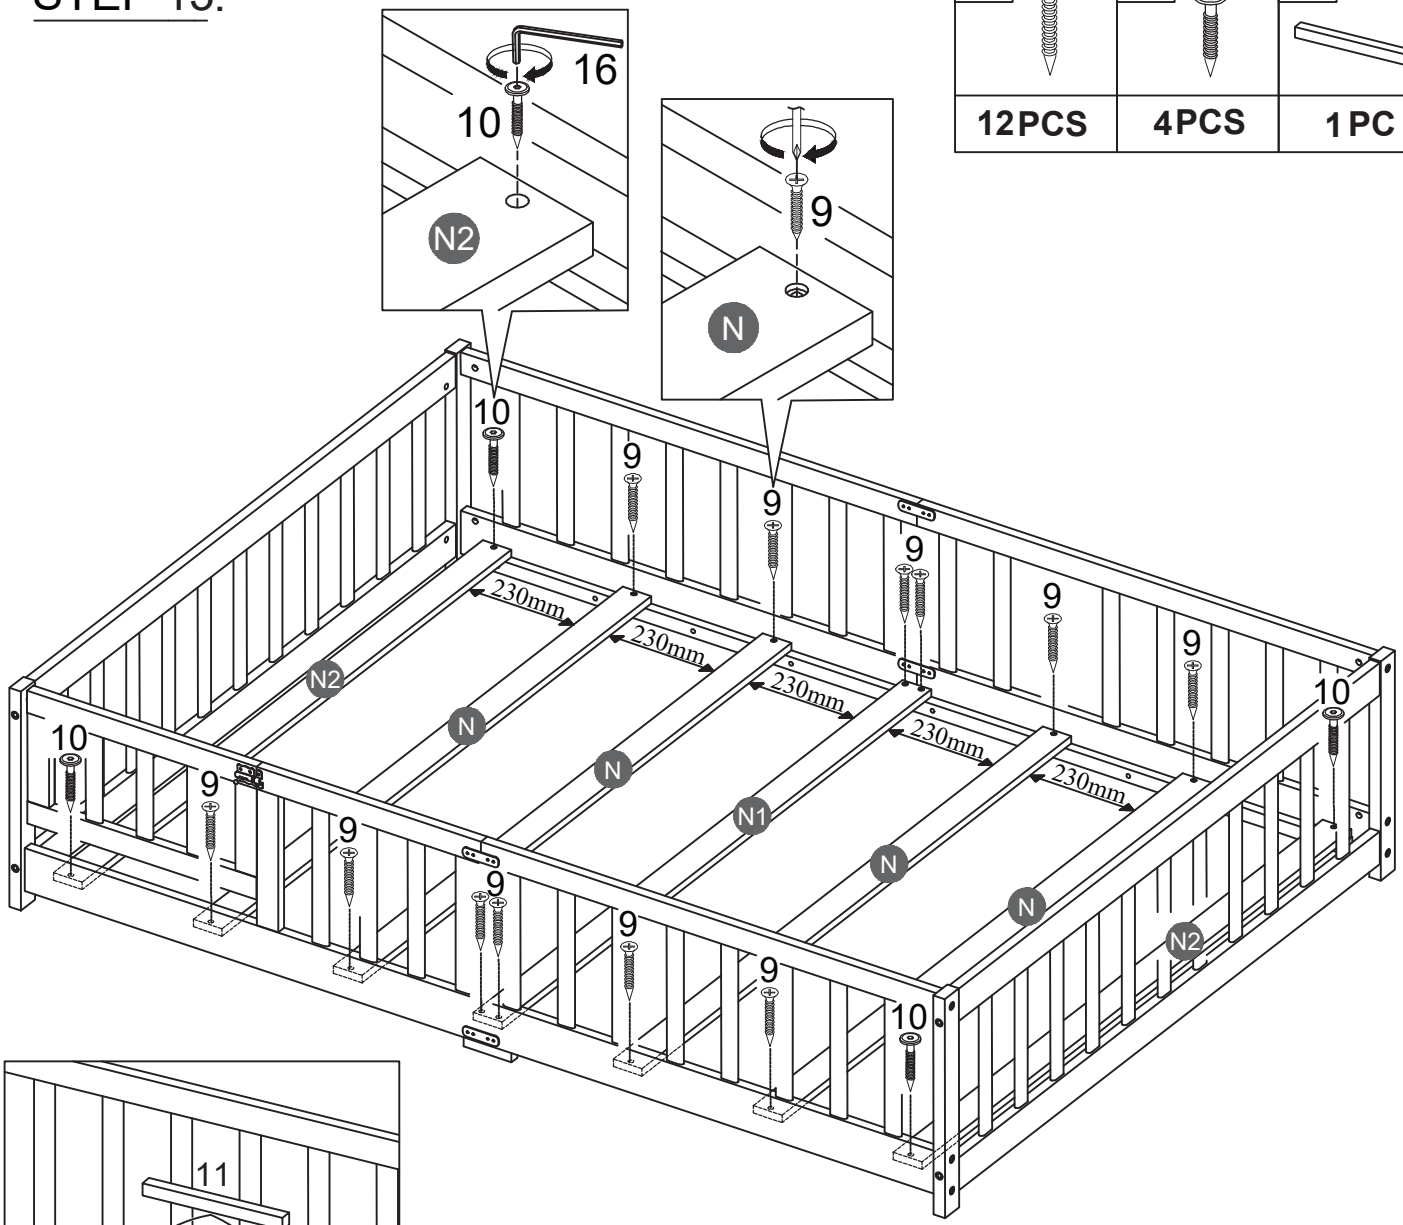

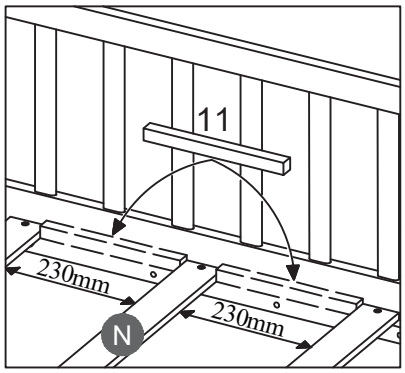

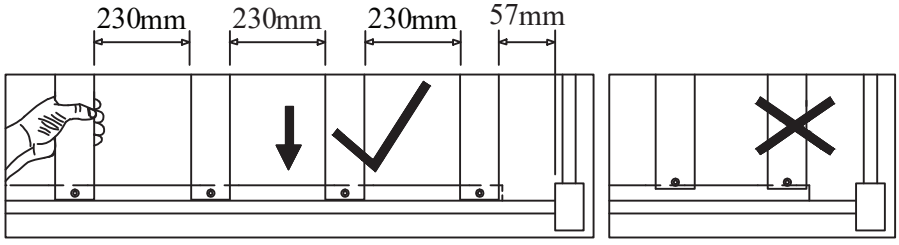Note: Use Wood Block as a guidance distance between Bed Slats.



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.