


ASSEMBLY INSTRUCTIONS

1. Carefully lay all parts out in a line on a flat surface. Be careful not to pull the center cord heavily as a bad connection may result.
2. Begin the assembly of the lamp at the base and proceed upward to the shade.
3. Screw the lower stem onto the base clockwise until secure.
4. Assemble the next section of middle stem by screw onto top of lower stem until secure.
5. Turn the upper stem counter clockwise several times in order to avoid damage to the center cord and then screw the upper stem clockwise onto the middle stem.
6. Screw the threaded pipe onto the top of lamp holder base.
7. Attach the shade onto the threaded pipe and secure with finial (DO NOT OVERTIGHTEN)
8. Install bulbs.

CAUTION - Refer to the wattage caution label located near the lamp holder for recommended maximum wattage-do not exceeds recommended wattage.

WARNING - Do not attempt to replace the bulb while the lamp is plugged into a wall receptacle.

9. Insert plug into wall receptacle.

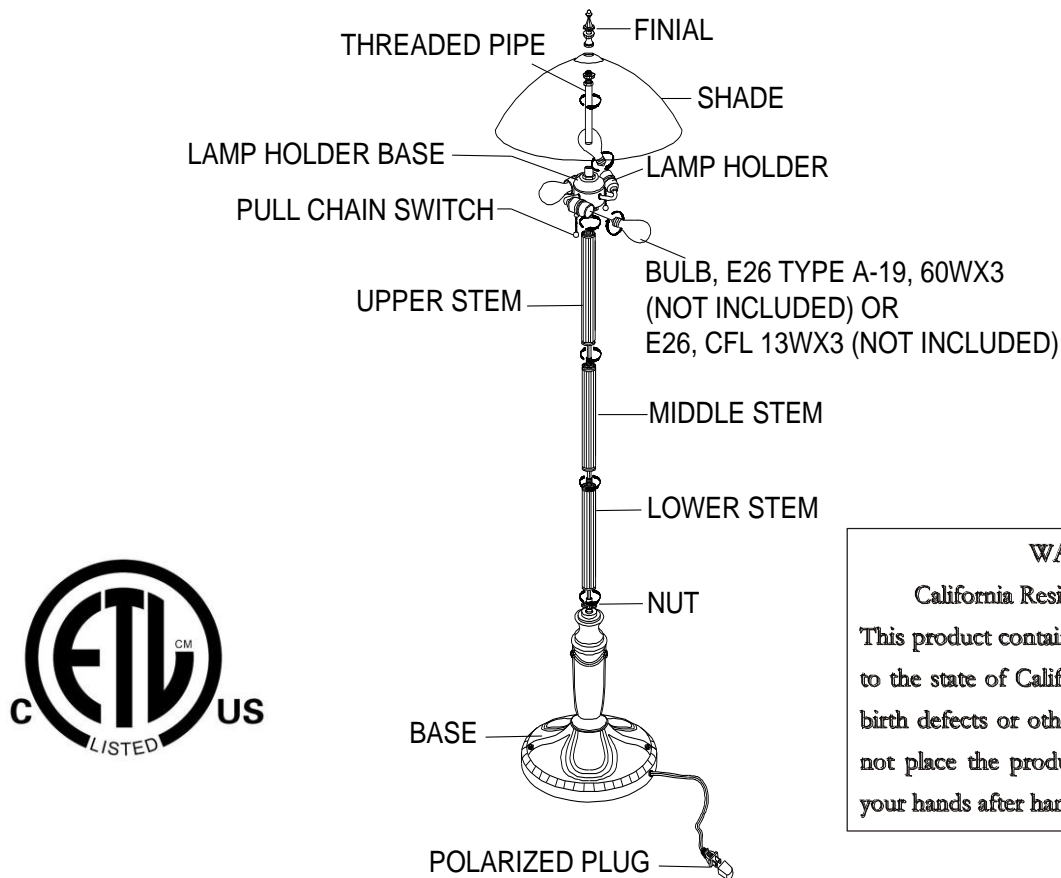

- Note:**
1. The above diagram illustrates the installation of your new luminaire. This is a representative drawing and is not intended to match the style of your luminaire.
 2. This stained glass product has been protected with mineral oil as part of the finishing process. Please use a soft dry cloth to remove any excess oil.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.