

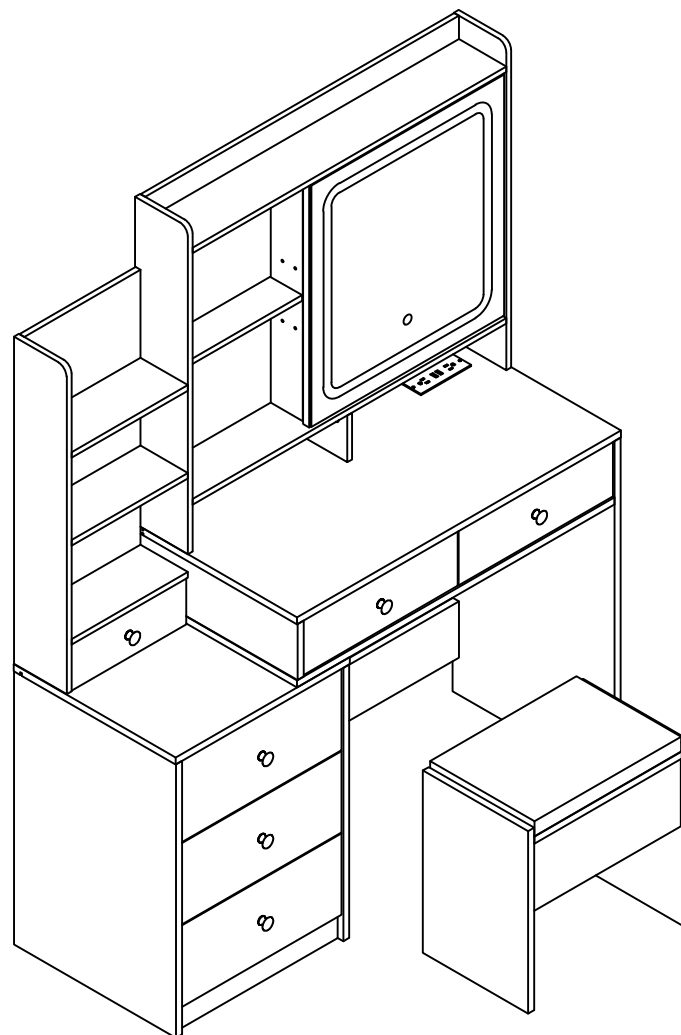
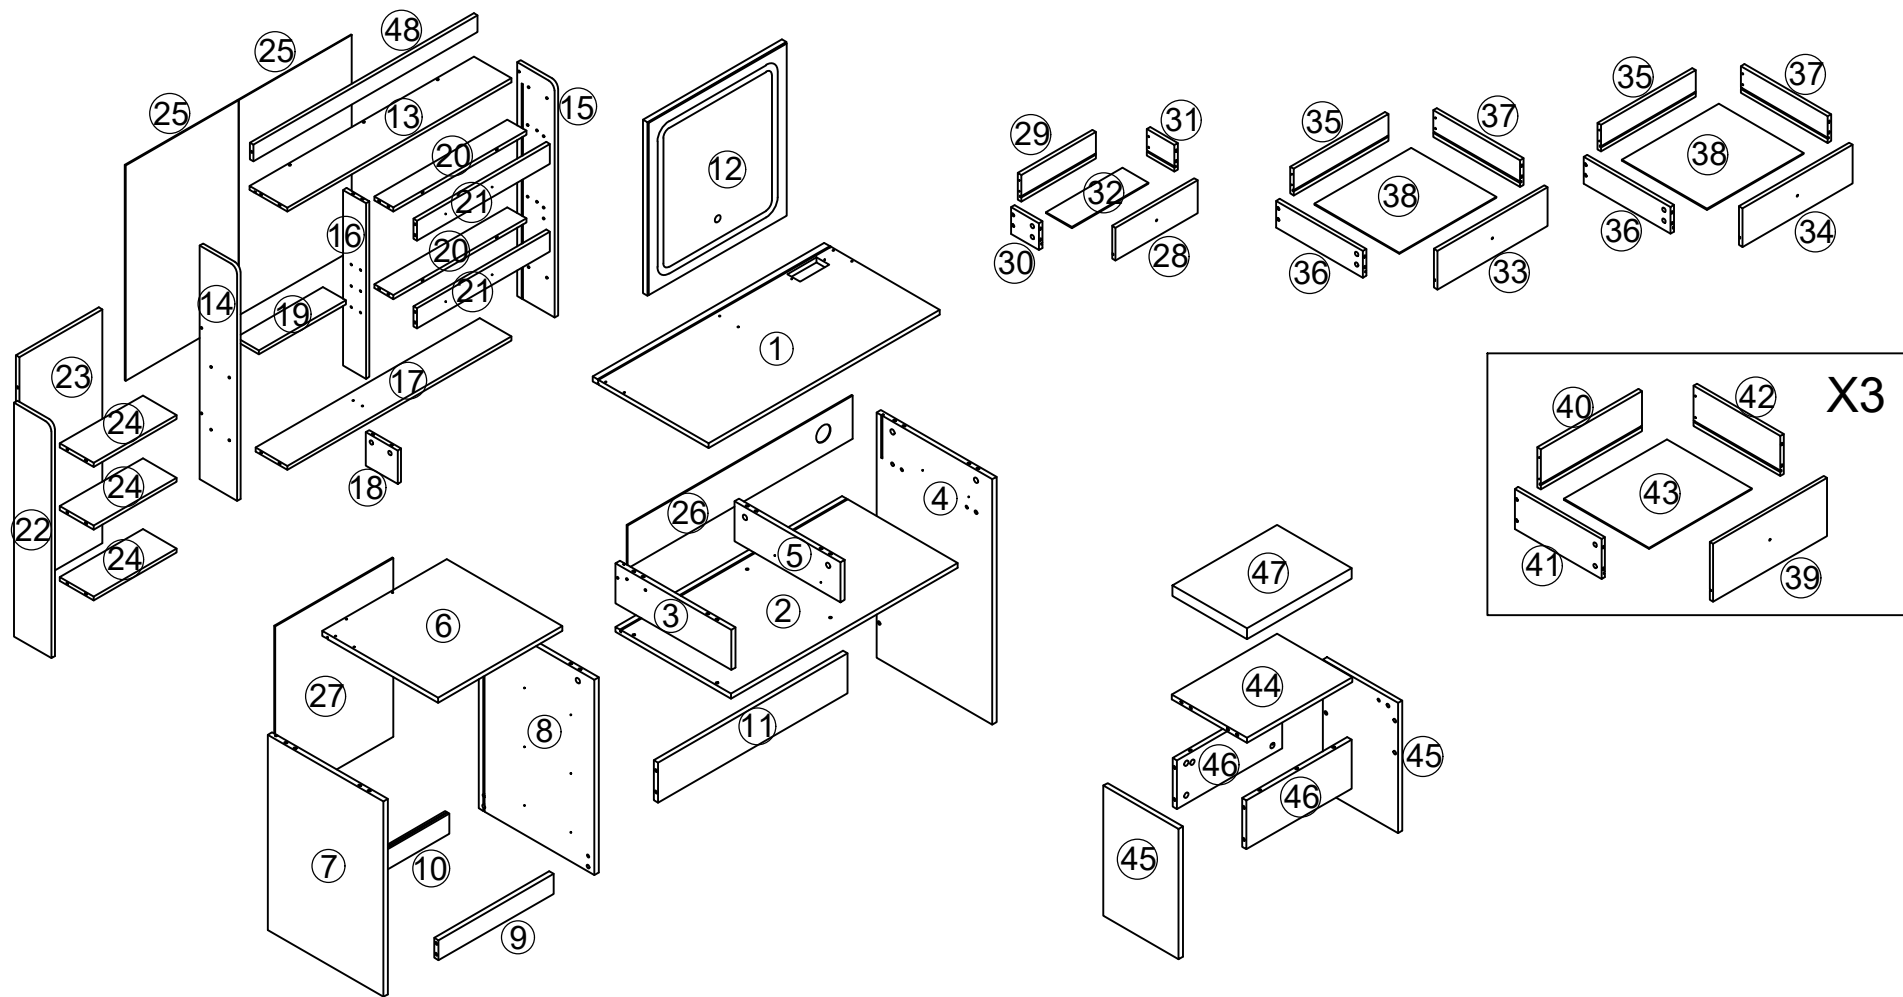











































X3

A	B	C8*40	D3.5*12	E3.5*30	F6*30	G	H	I300mm	J350mm
						 		 	 
36PCS	36PCS	22PCS	50PCS	36PCS	23PCS	56PCS	4PCS	5PCS	1PCS

K7*50	L	M4*16	N	O	P	Q	R6*25
							
4PCS	6PCS	6PCS	1PCS	16PCS	2PCS	1PCS	2PCS

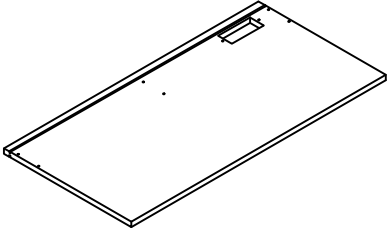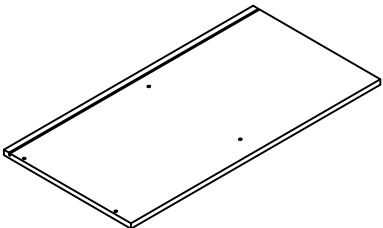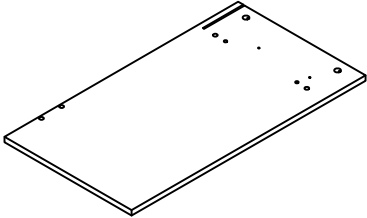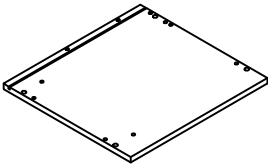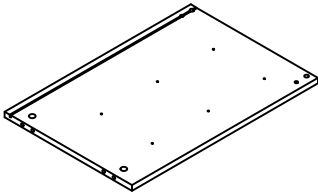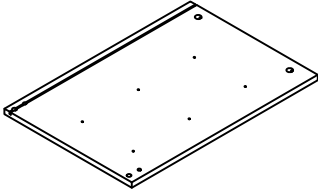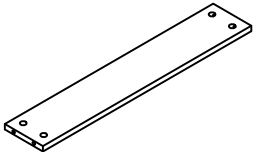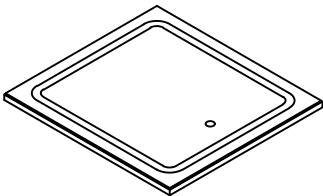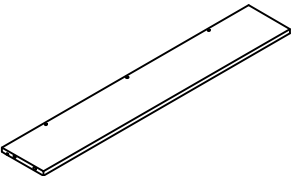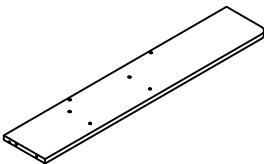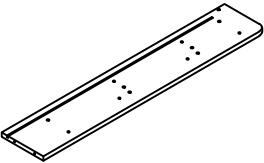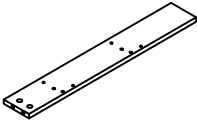1  800*400 1PS	2  784*400 1PS	3  120*400 1PS	4  735*400 1PS
5  120*366 1PS	6  430*400 1PS	7  585*400 1PS	8  585*400 1PS
9  398*60 1PS	10  398*60 1PS	11  655*120 1PS	12  520*480 1PS
13  775*130 1PS	14  700*130 1PS	15  700*130 1PS	16  526*79 1PS

17 775*110 1PS	18 100*110 1PS	19 300*79 1PS	20 460*66 2PS
21 460*60 2PS	22 700*130 1PS	23 700*287 1PS	24 287*117 3PS
25 645*391 2PS	26 778*129 1PS	27 535*408 1PS	28 284*98 1PS
29 258*80 1PS	30 96*80 1PS	31 96*80 1PS	32 265*90 1PS

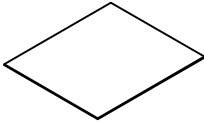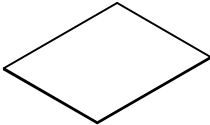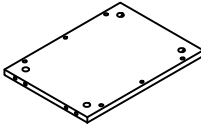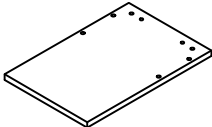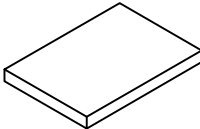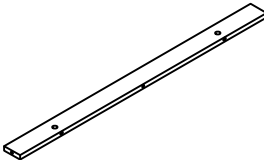
33  381*116 1PS	34  381*116 1PS	35  327.5*80 2PS	36  300*80 2PS
37  300*80 2PS	38  335*294 2PS	39  394*174 3PS	40  349*120 3PS
41  300*120 3PS	42  300*120 3PS	43  356*294 3PS	44  364*260 1PS
45  390*260 2PS	46  364*146 2PS	47  364*260 1PS	48  775*50 1PS




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

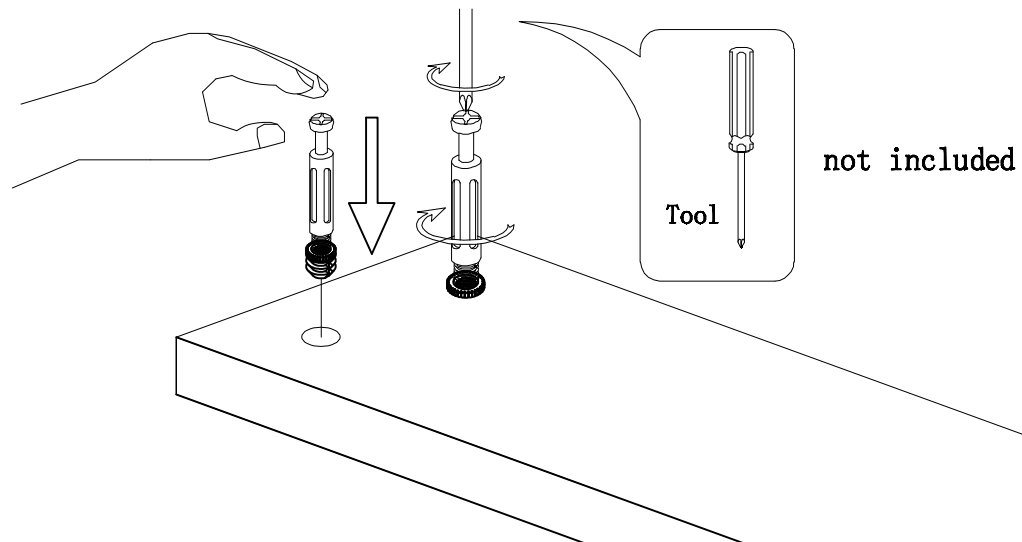

II

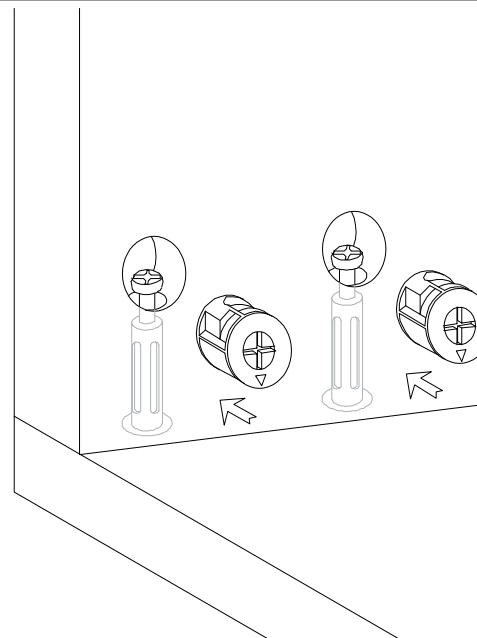

III









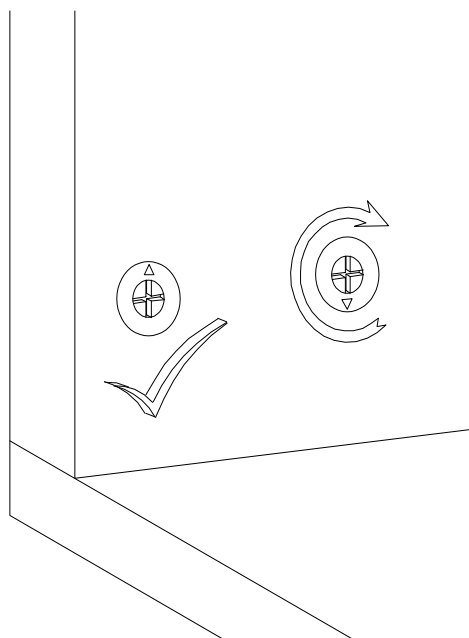


IV


















Scan QR code for assembly video

1

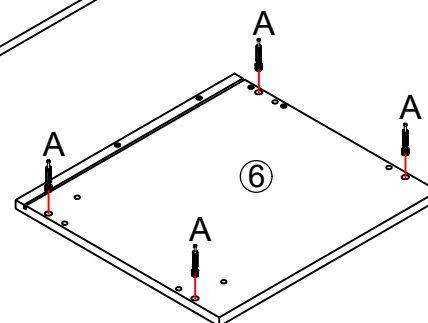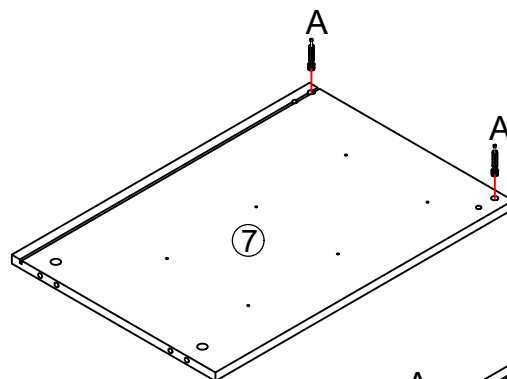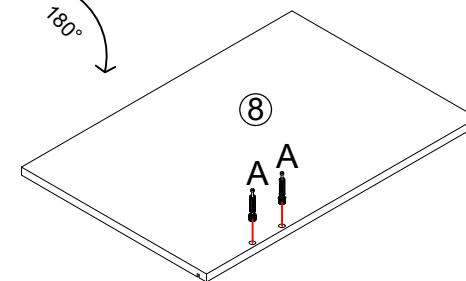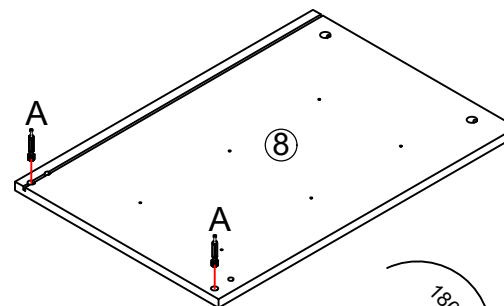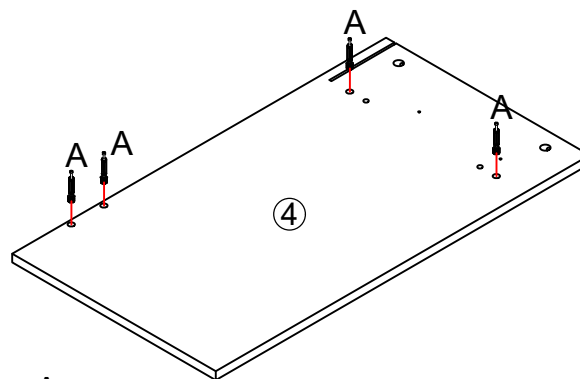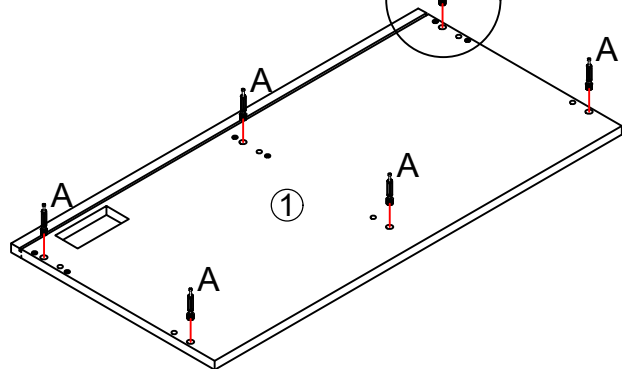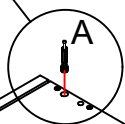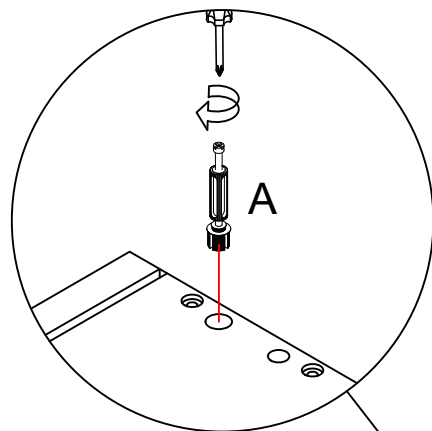




A*20

2

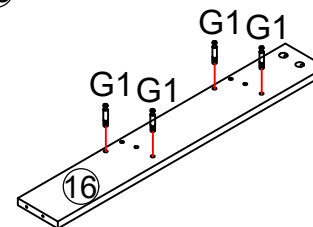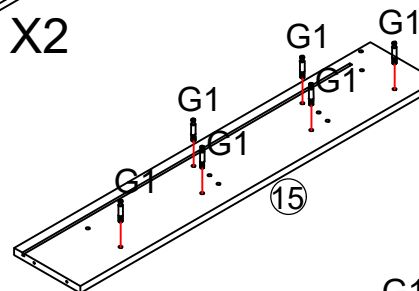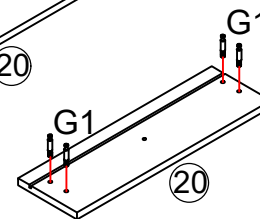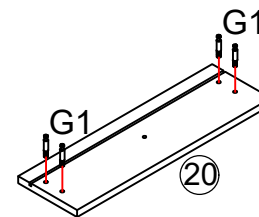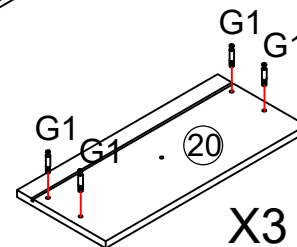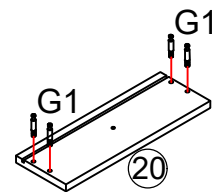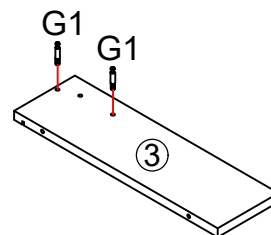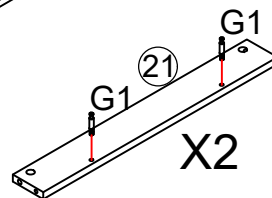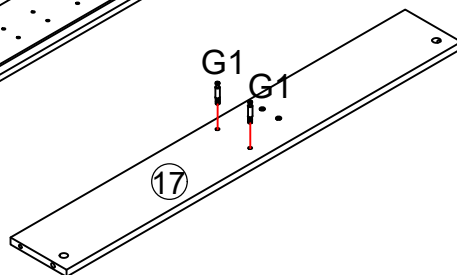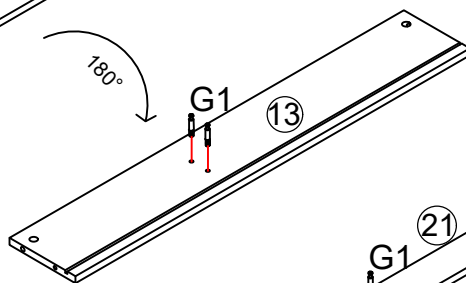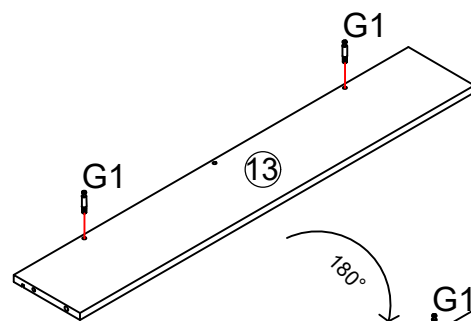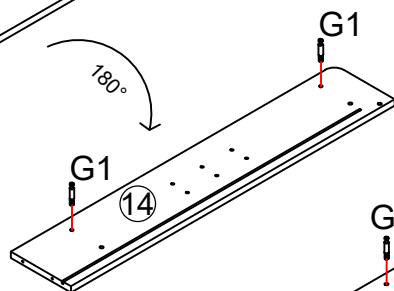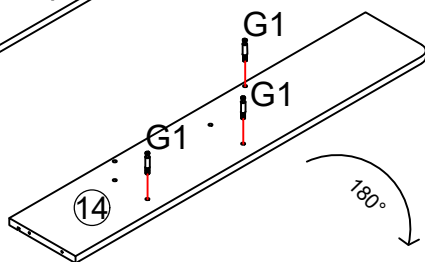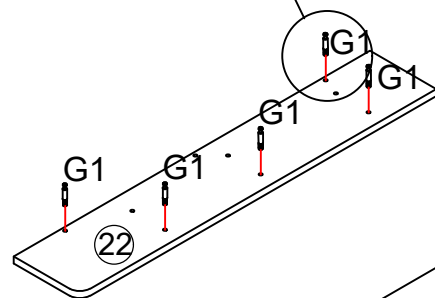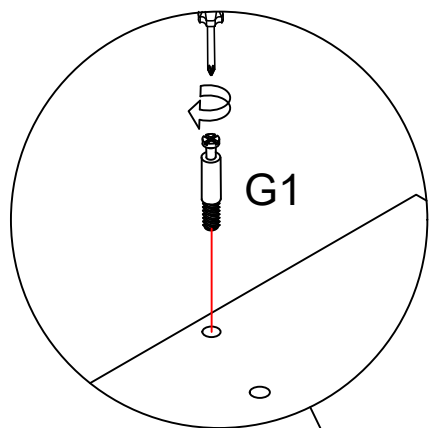


G1*56

3



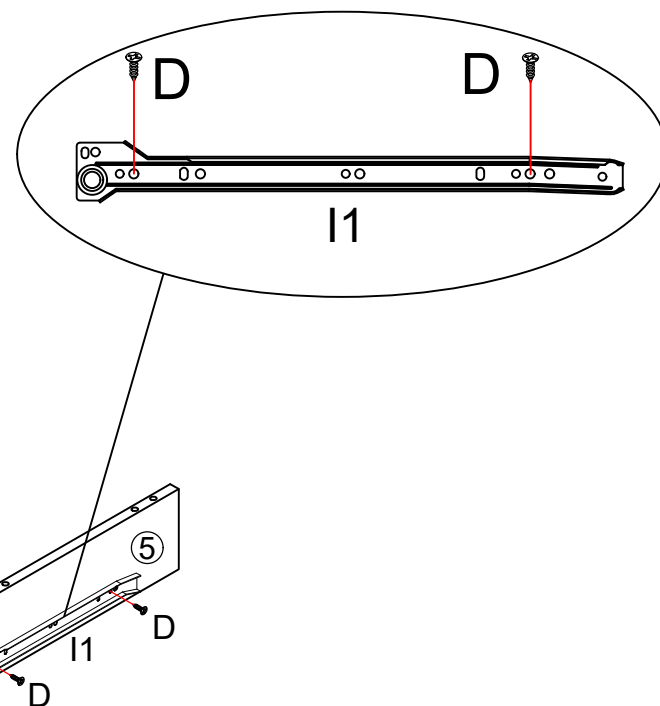
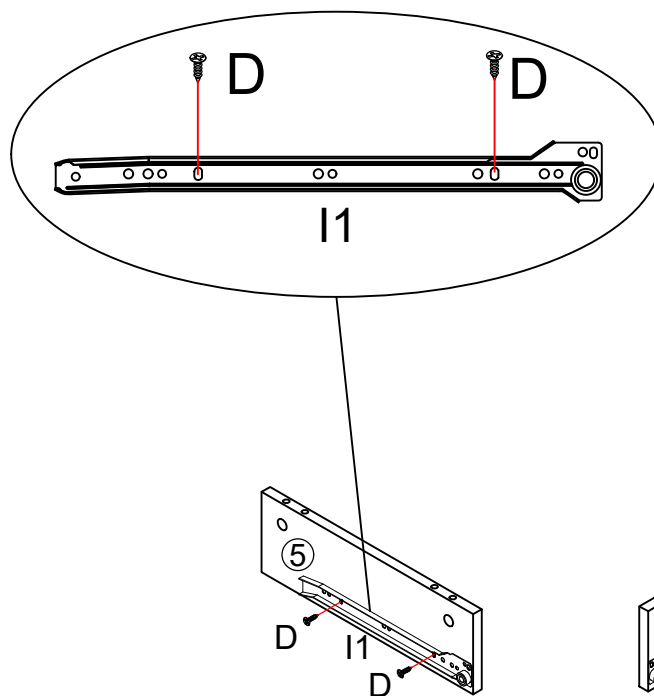
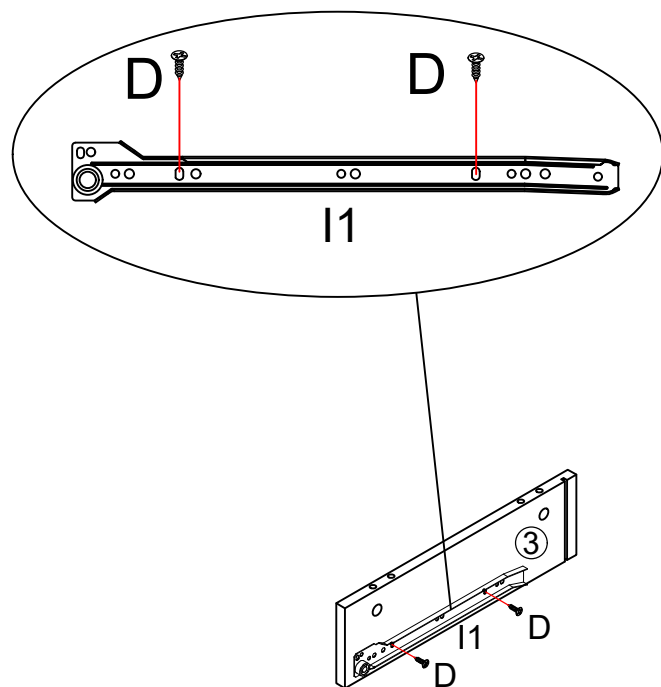


D*6




I1*2

4

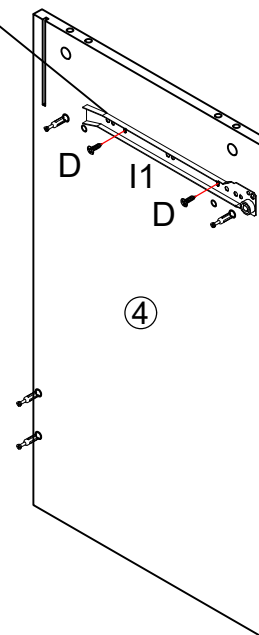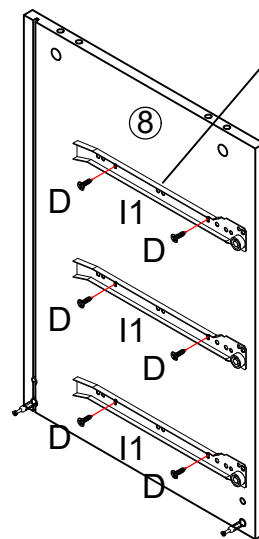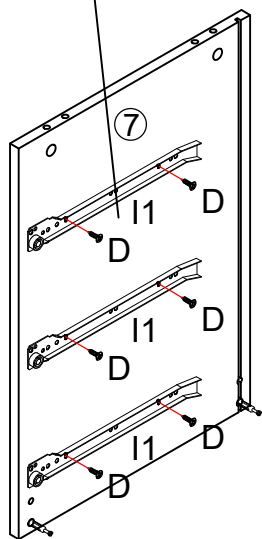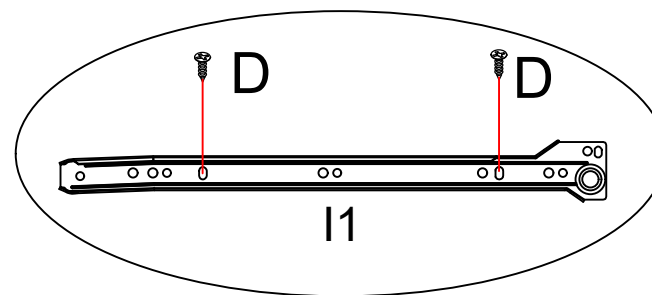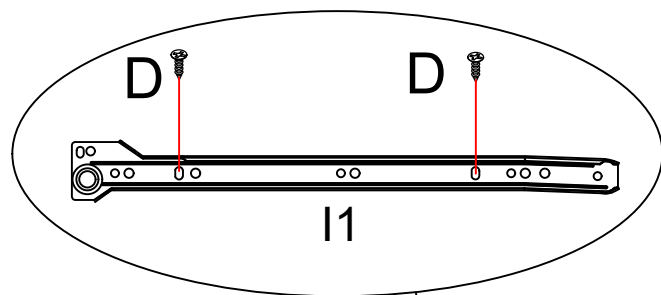





D*14



I1*3

5

Make sure the arrow on the screw align to the hole on the side.



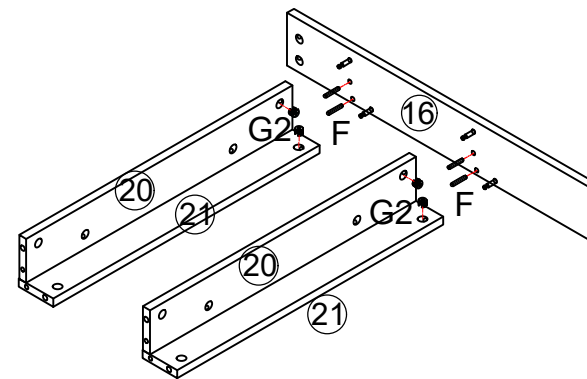

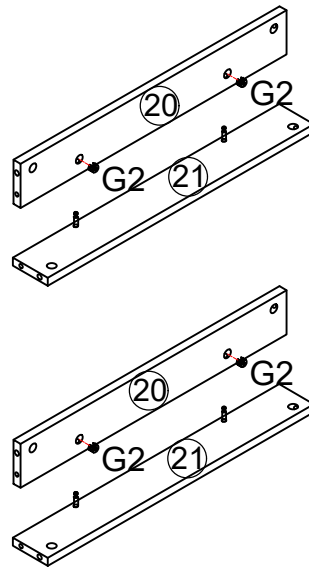
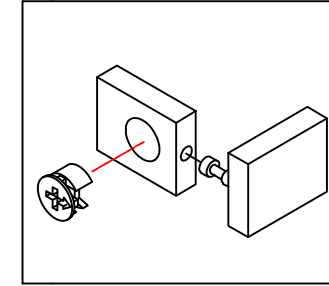


F*4



G2*8

6

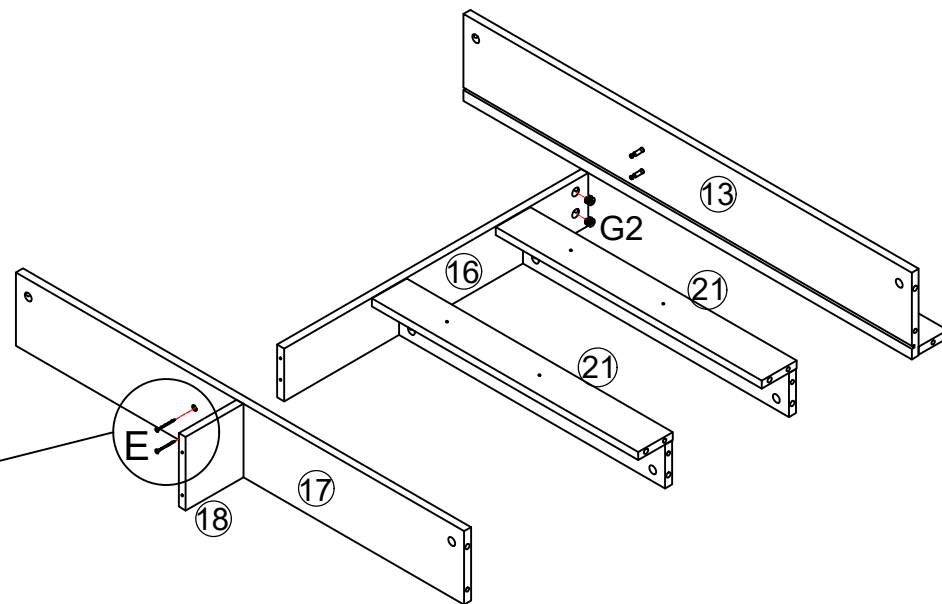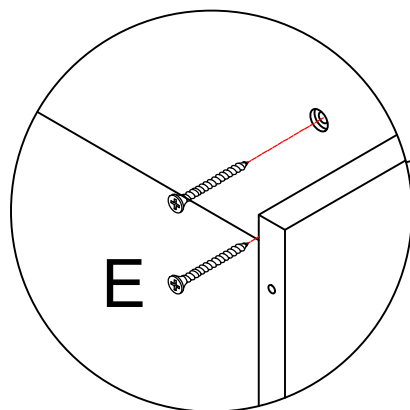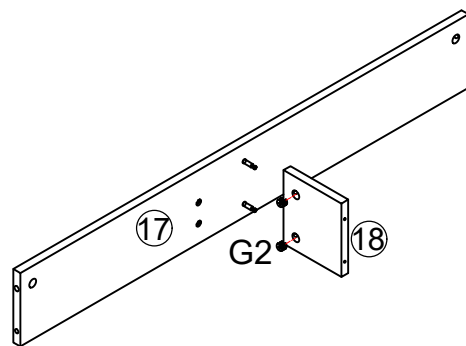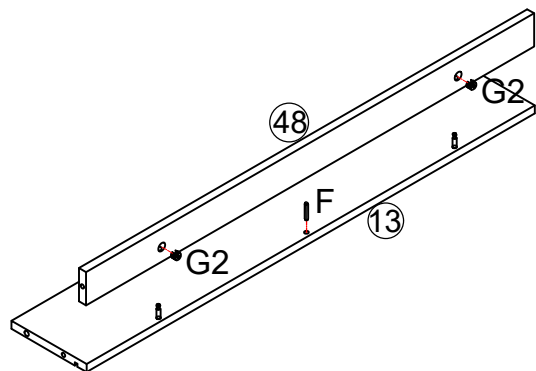

E*2




F*1



G2*6

7





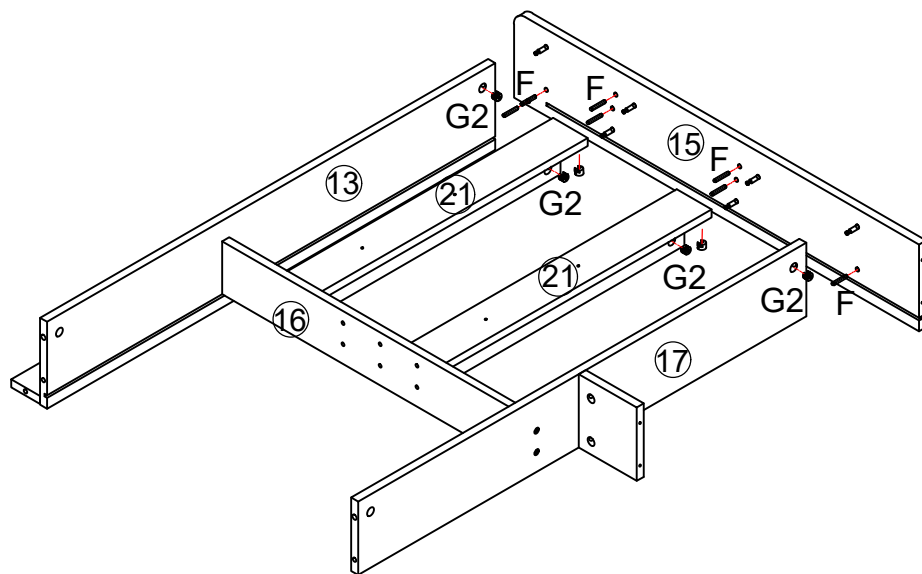


F*7






G2*6

8

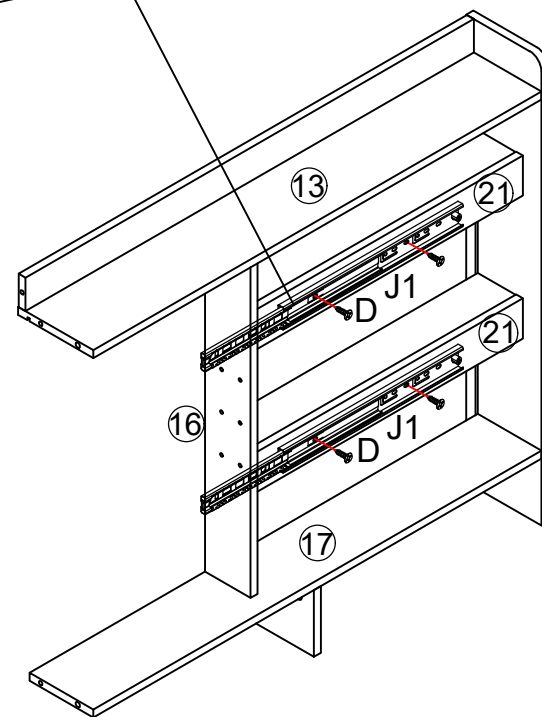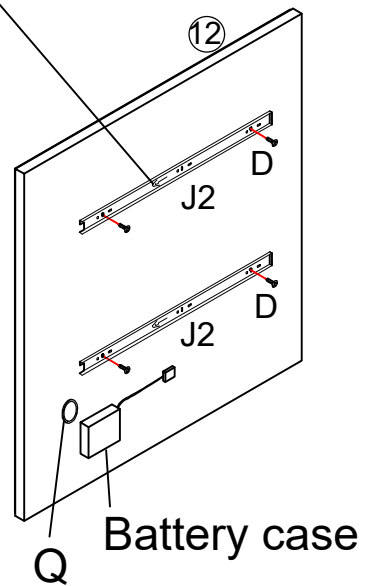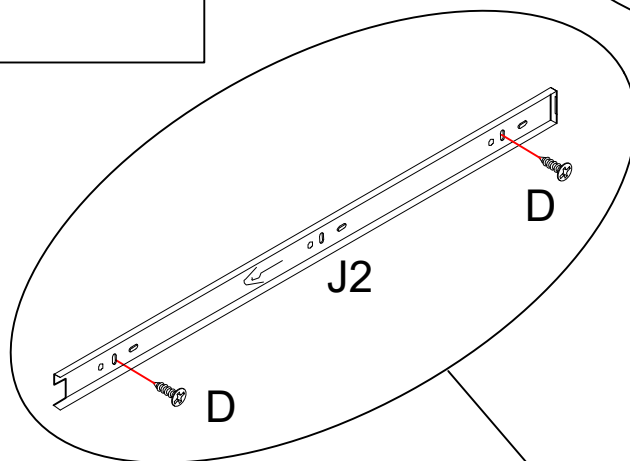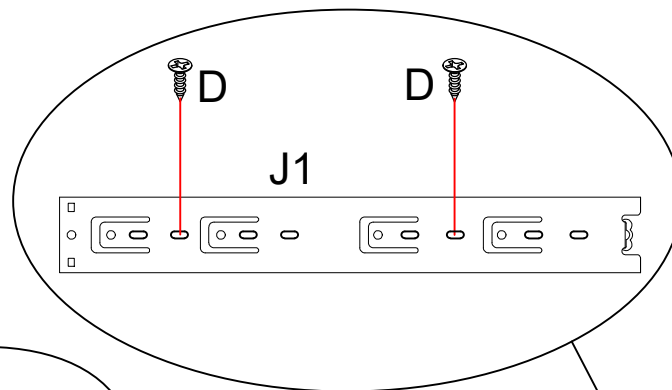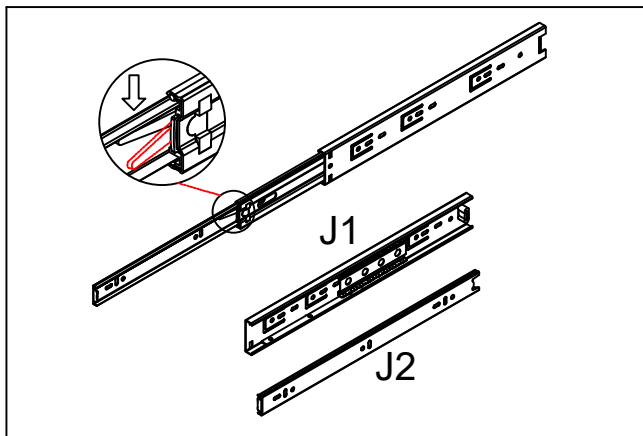

	D*8
	J*1
	Q*1

9


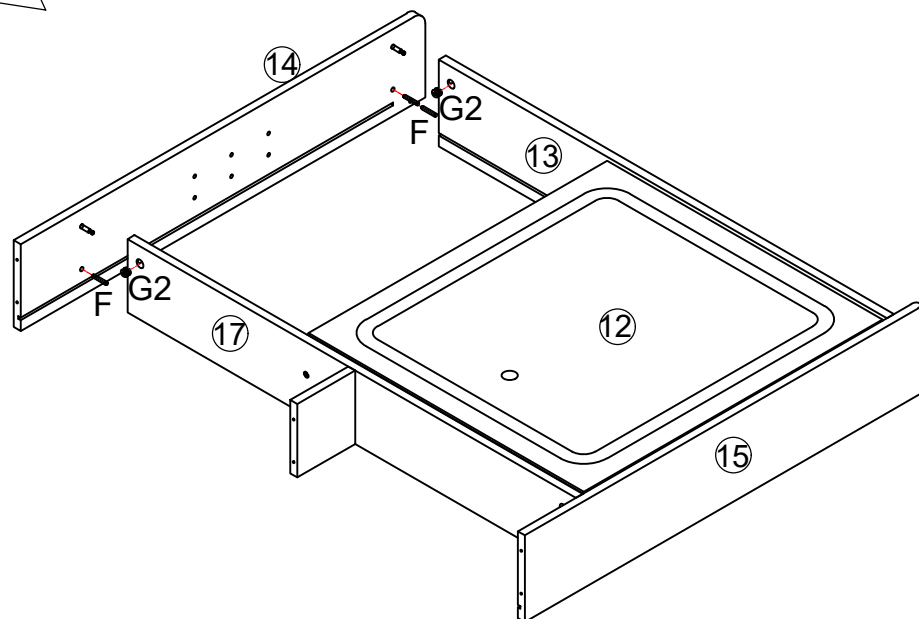

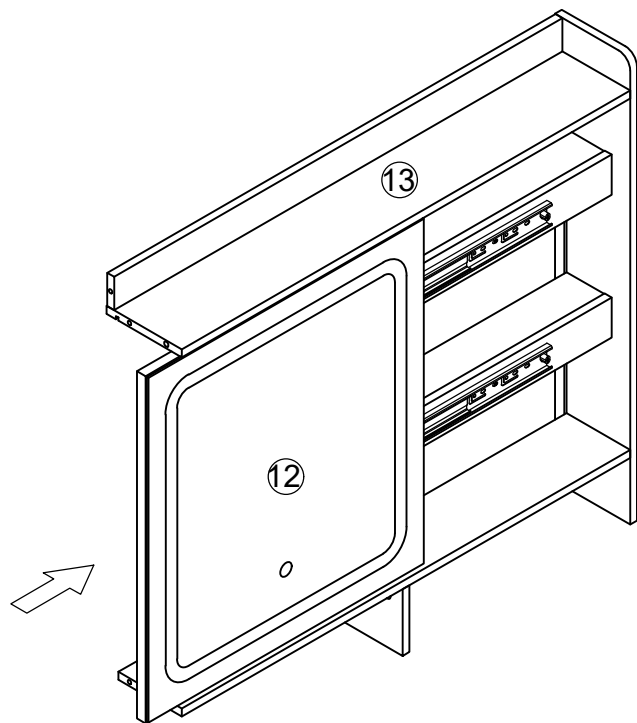


F*3



G2*2





10

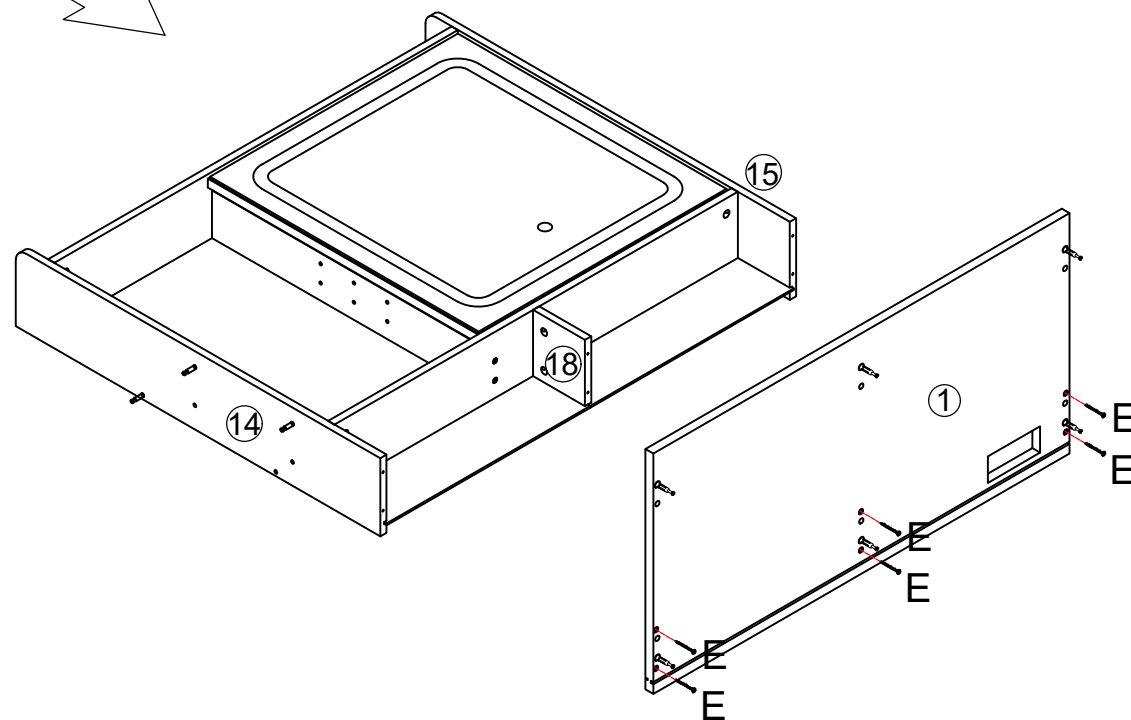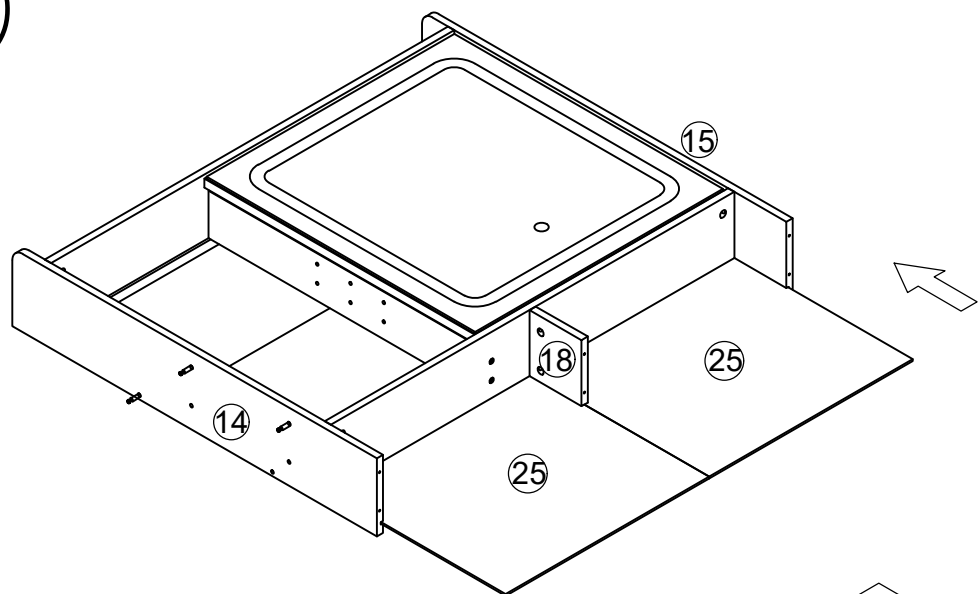


E*6

11


Make sure the arrow on the screw align to the hole on the side.

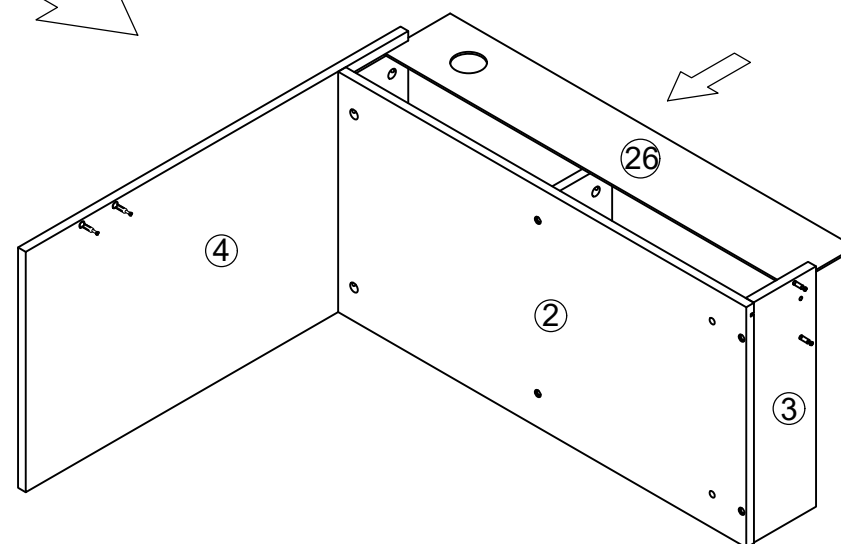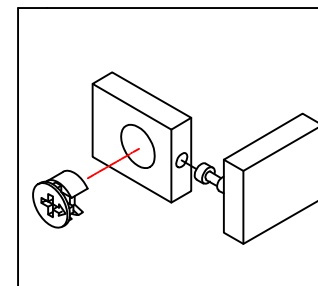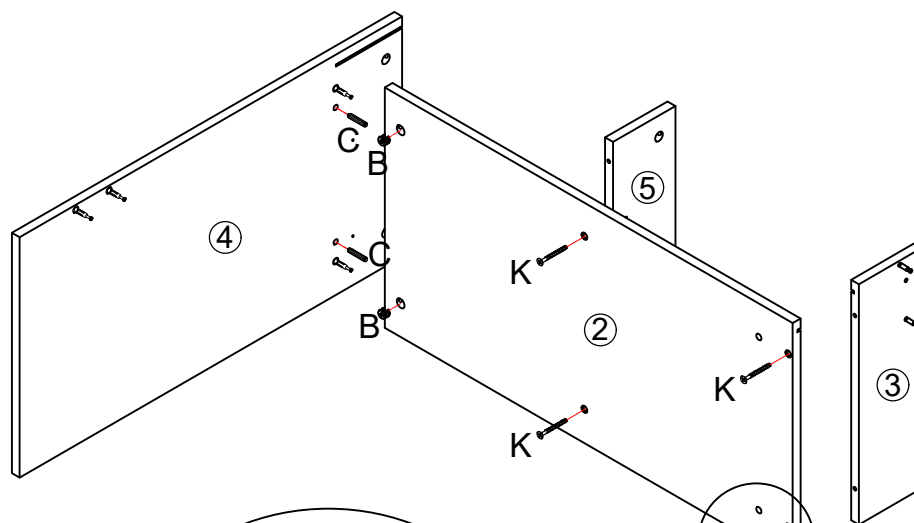

B*2




C*2



K*4

12


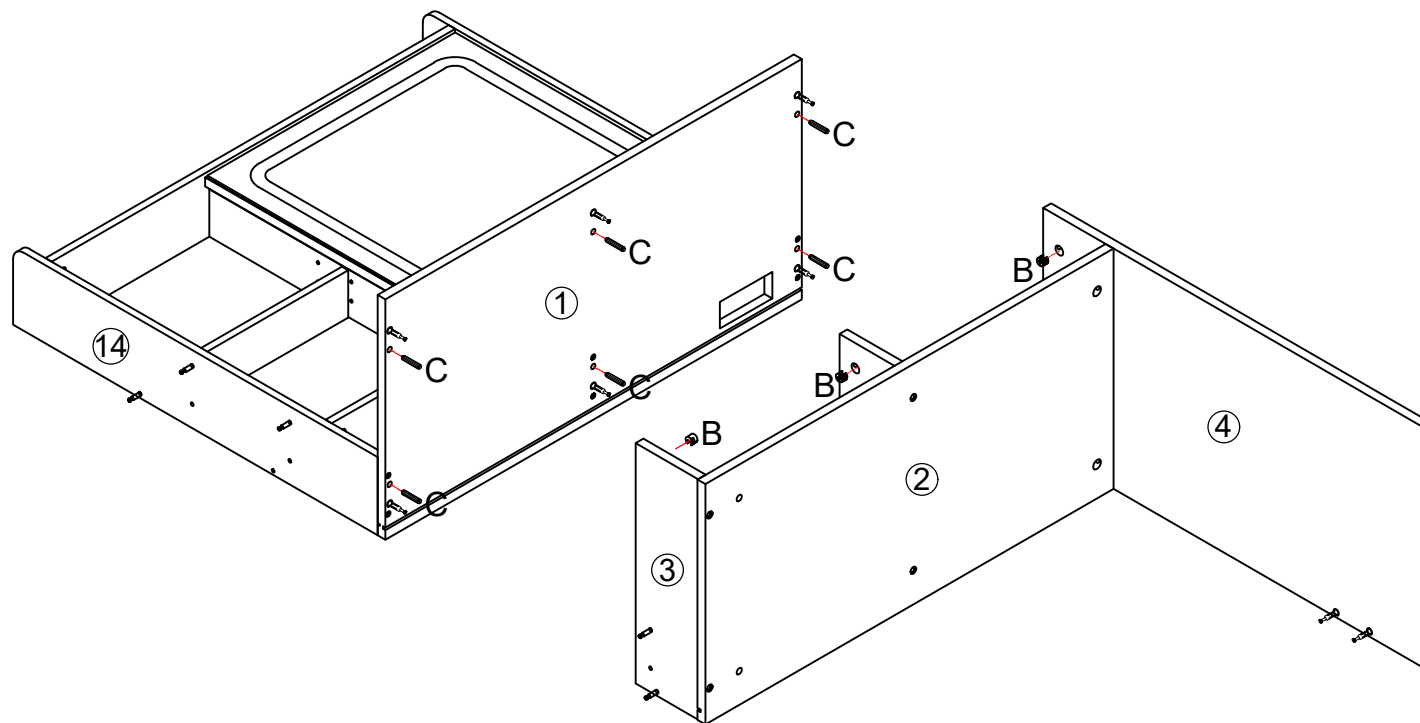


B*6



C*6

13


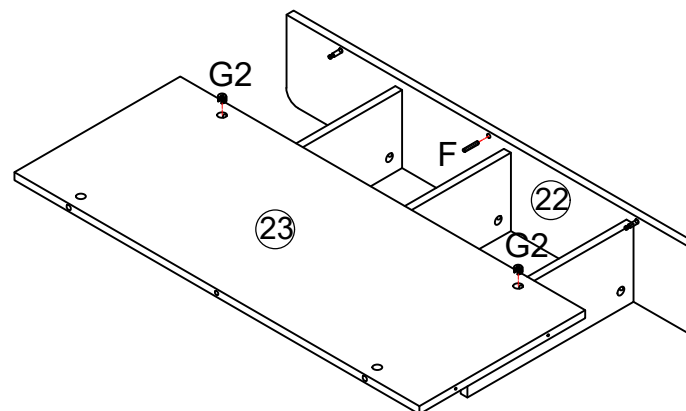
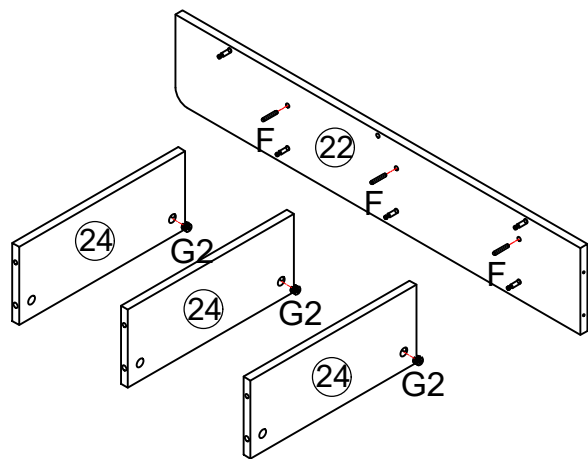


F*4




G2*5


14

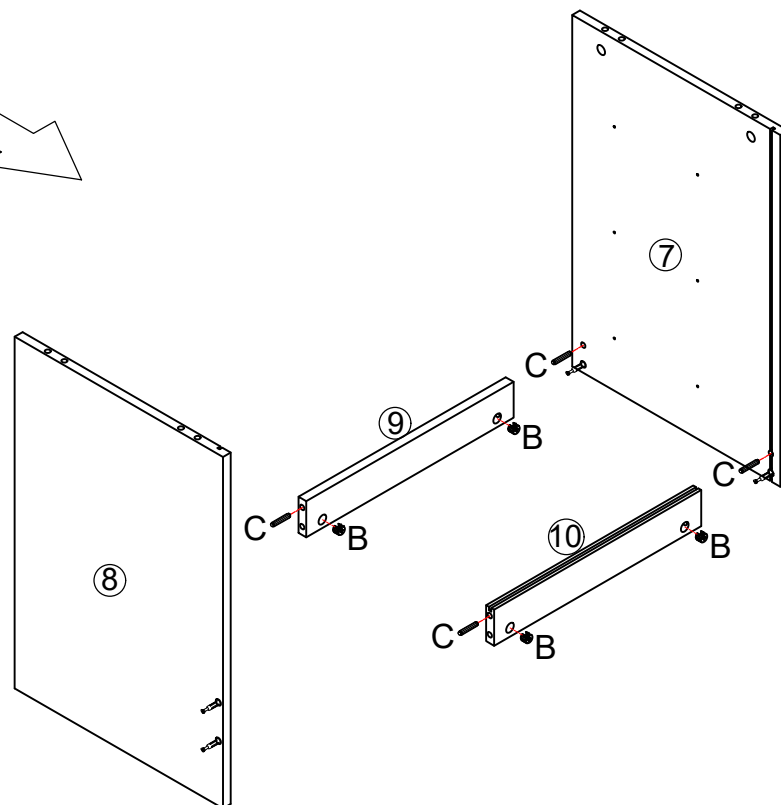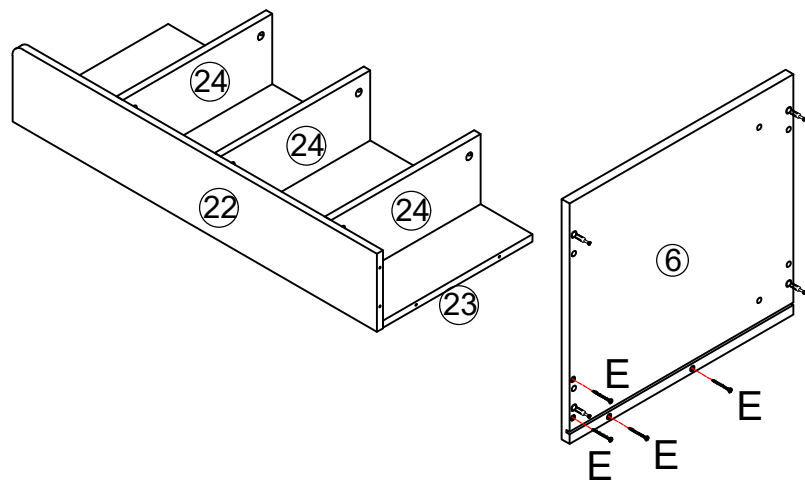

B*4






C*4




E*4

15

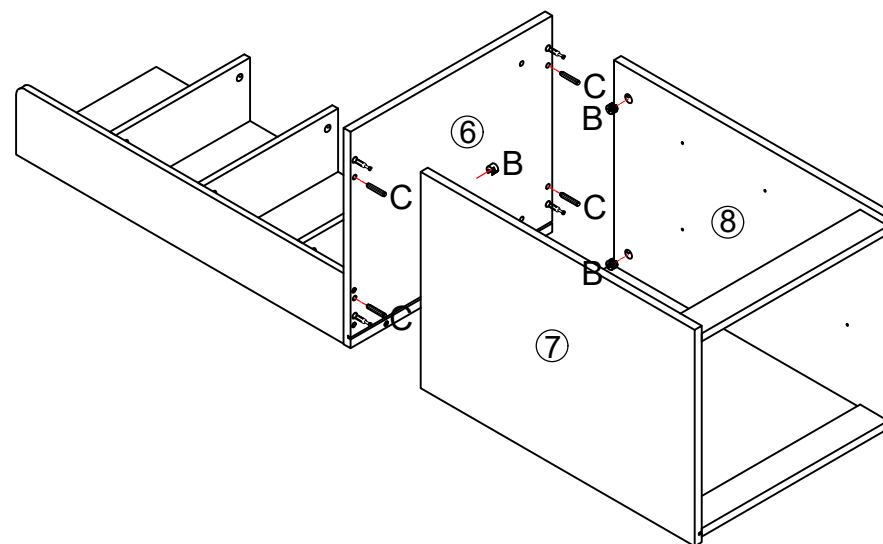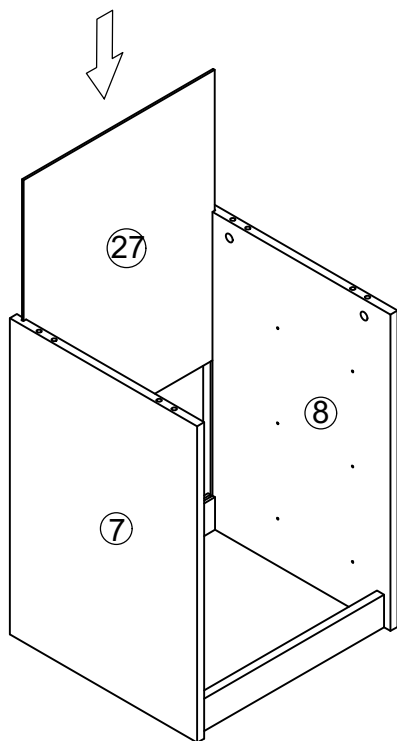


B*4



C*4

16

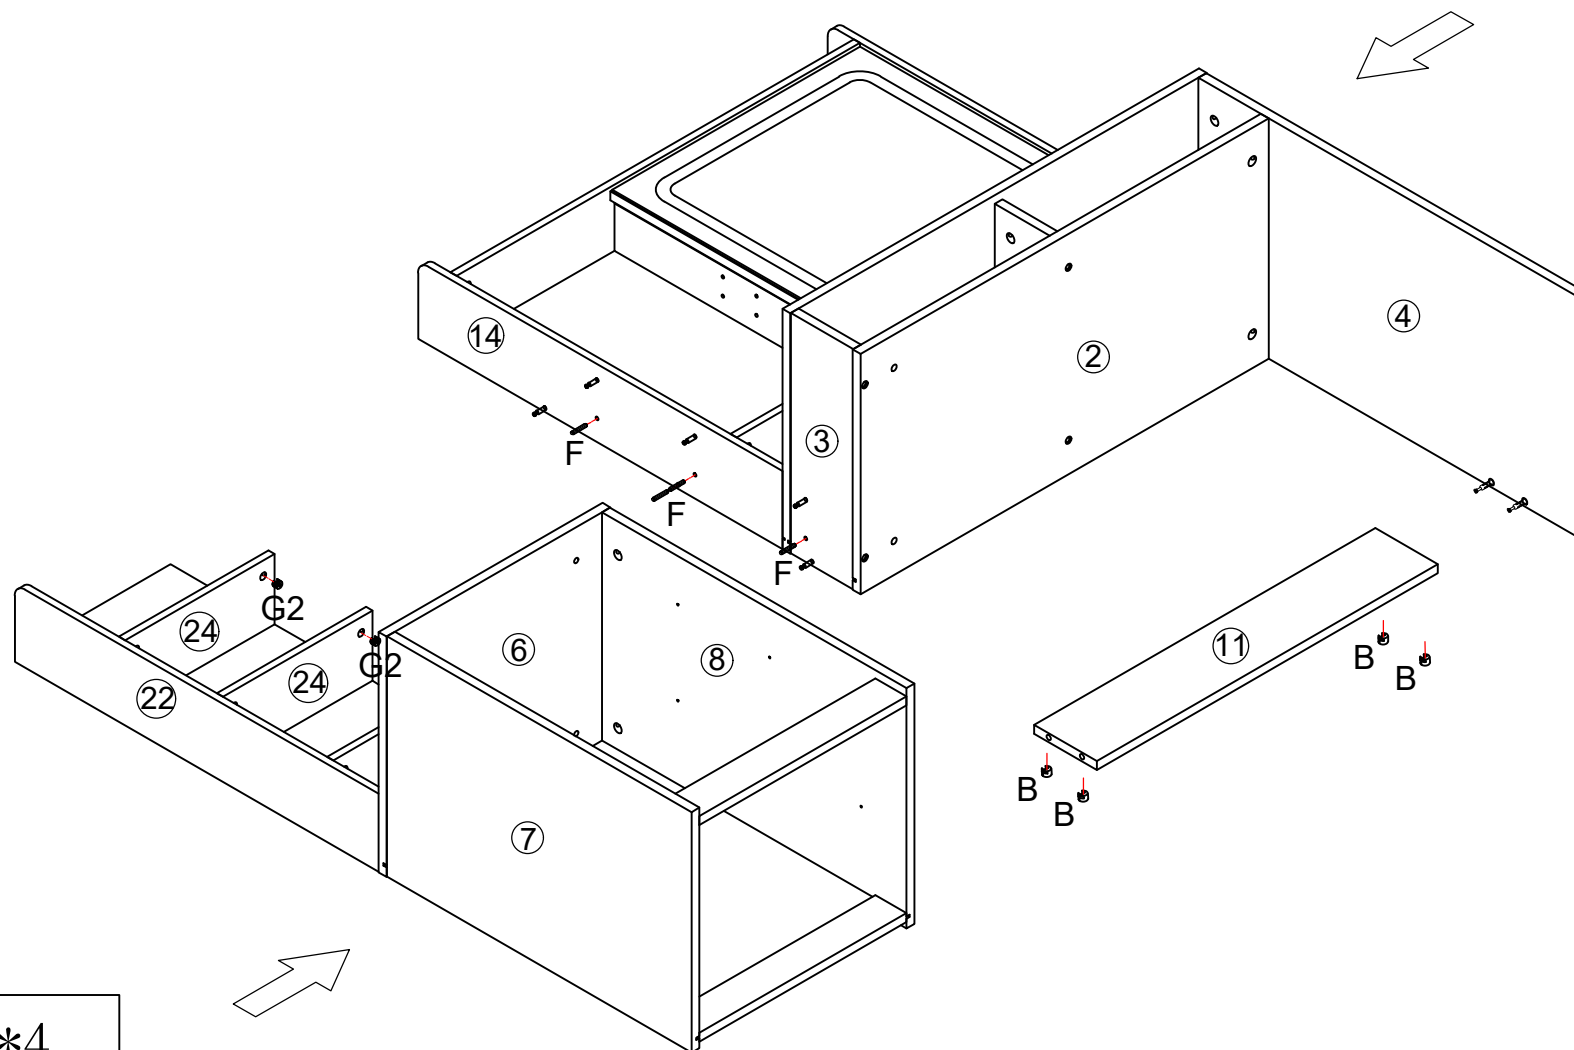

B*4




F*4




G2*5

17

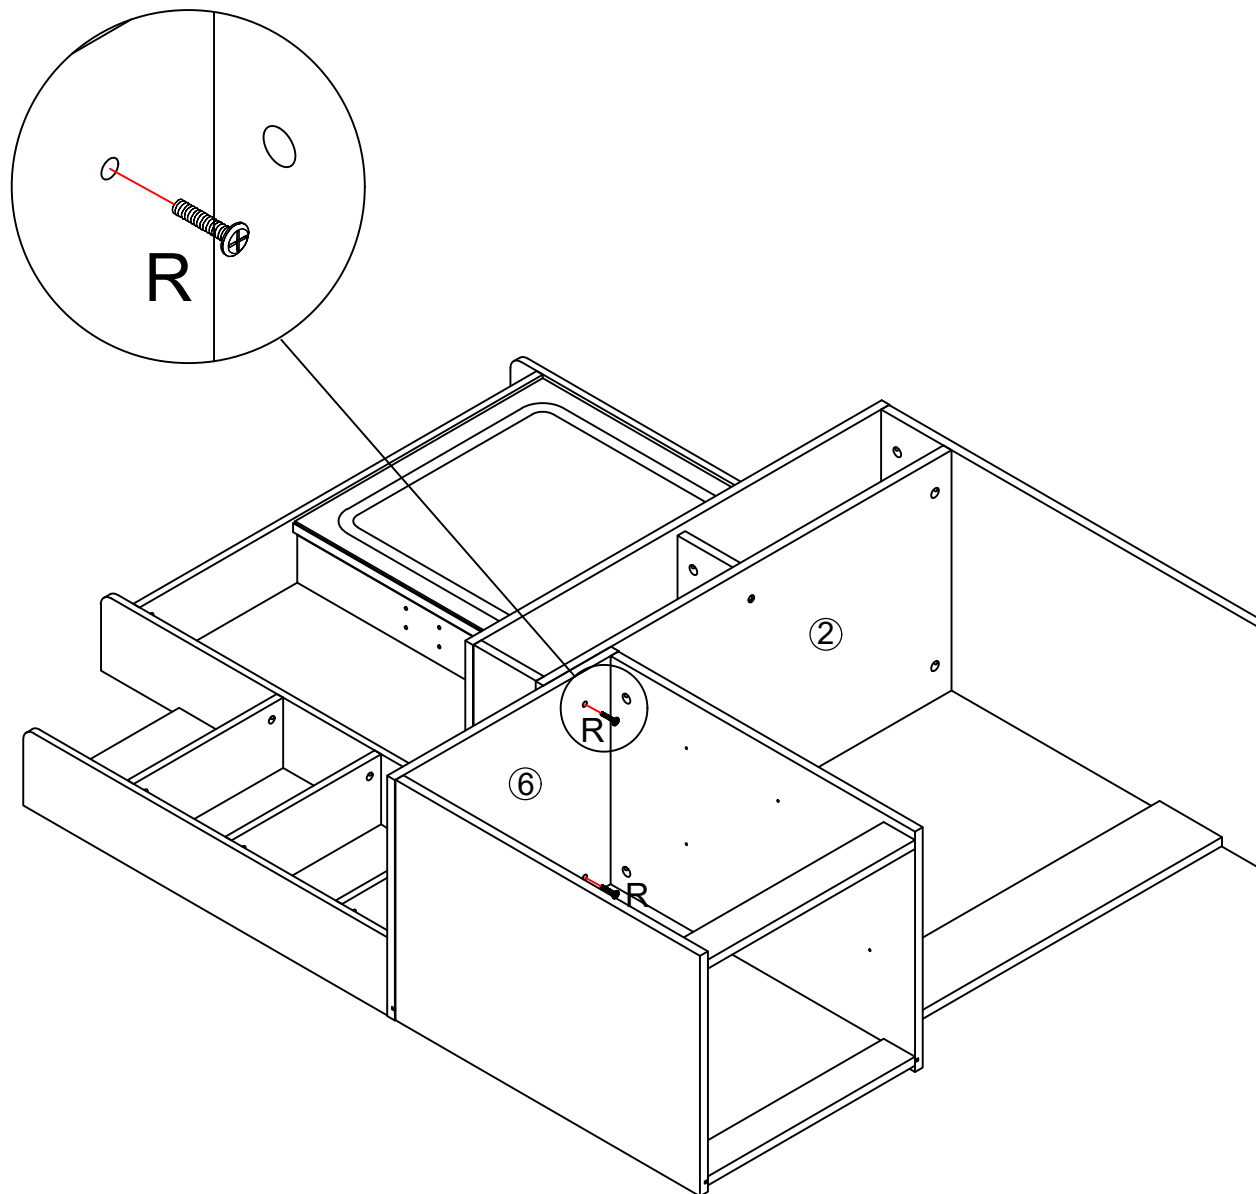

R*2

18

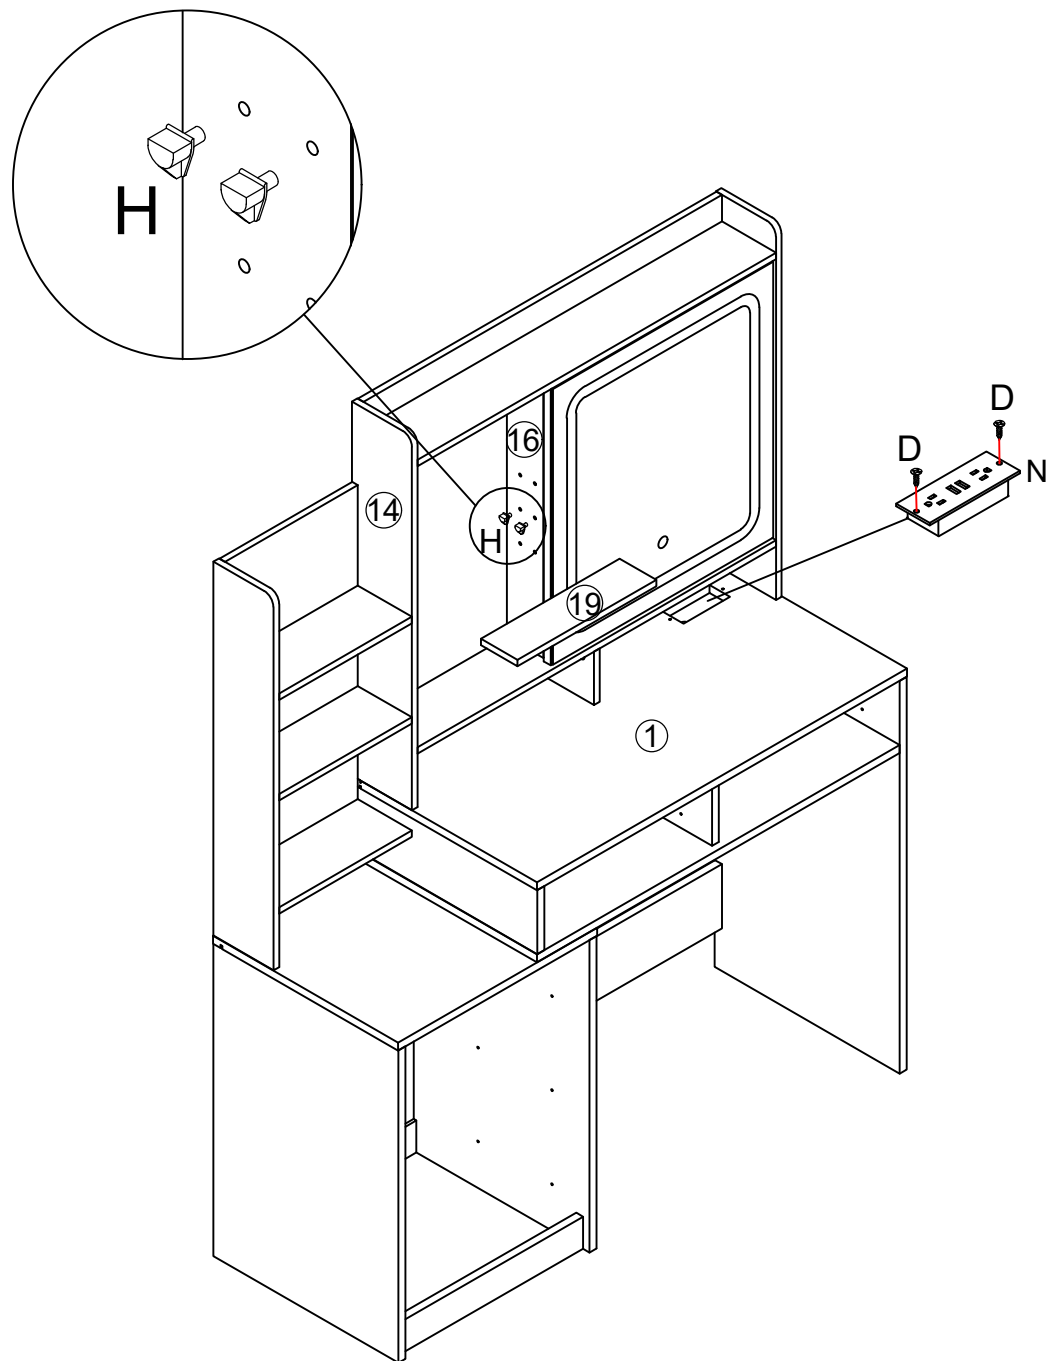

D*2








H*4




N*1

19

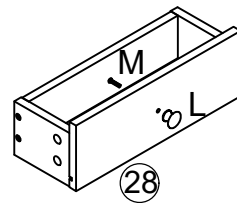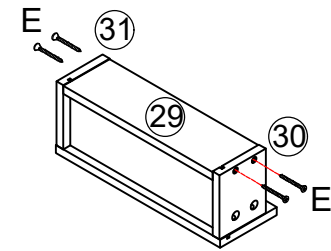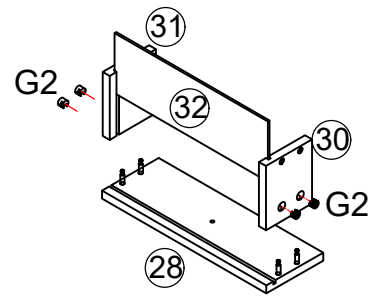

G2*4



E*4








L*1



M*1


20

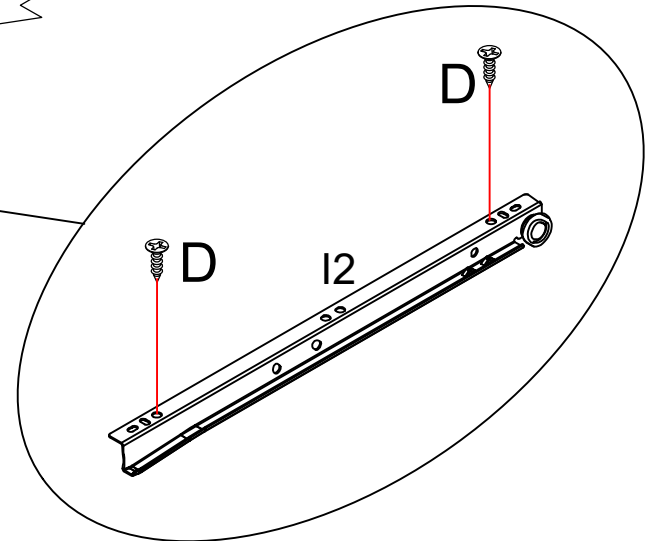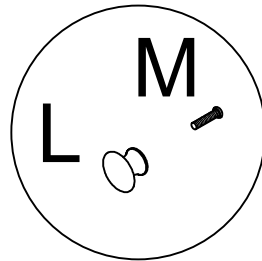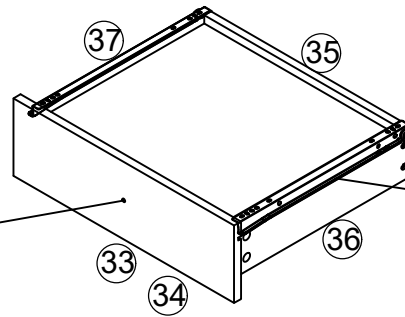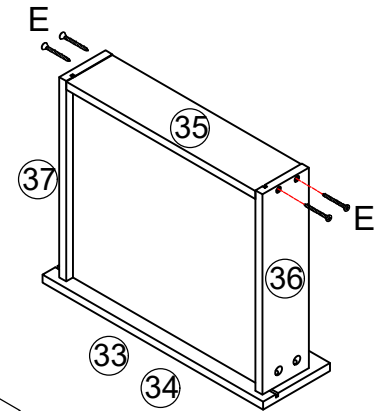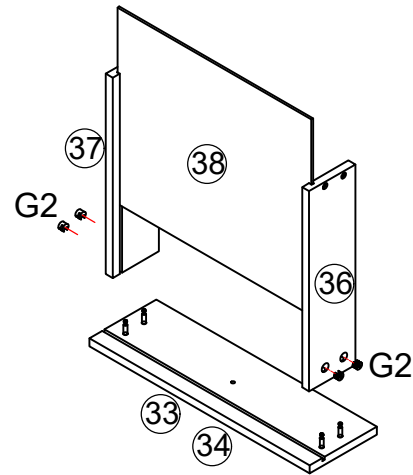


G2*8



D*8



E*8



I2*2










L*2




M*2




21

X3

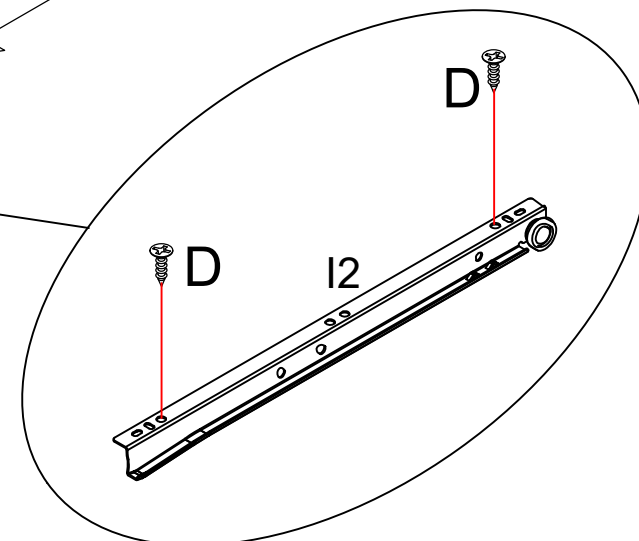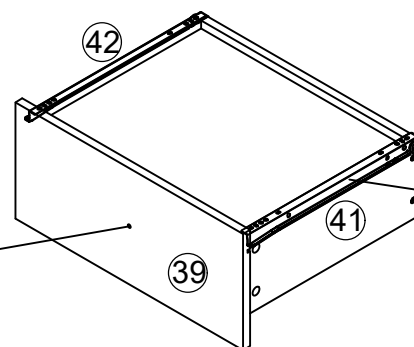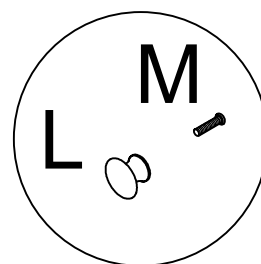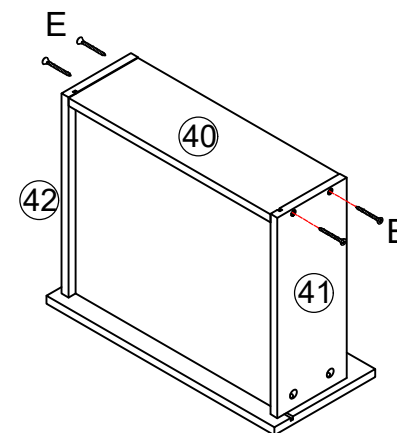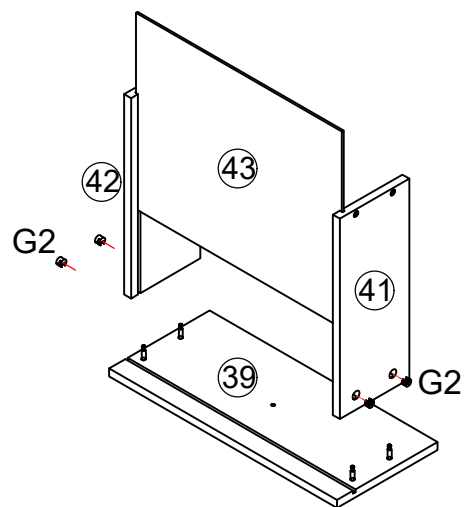






	G2*12
	D*12
	E*12
	I2*3
	L*3
	M*3

22

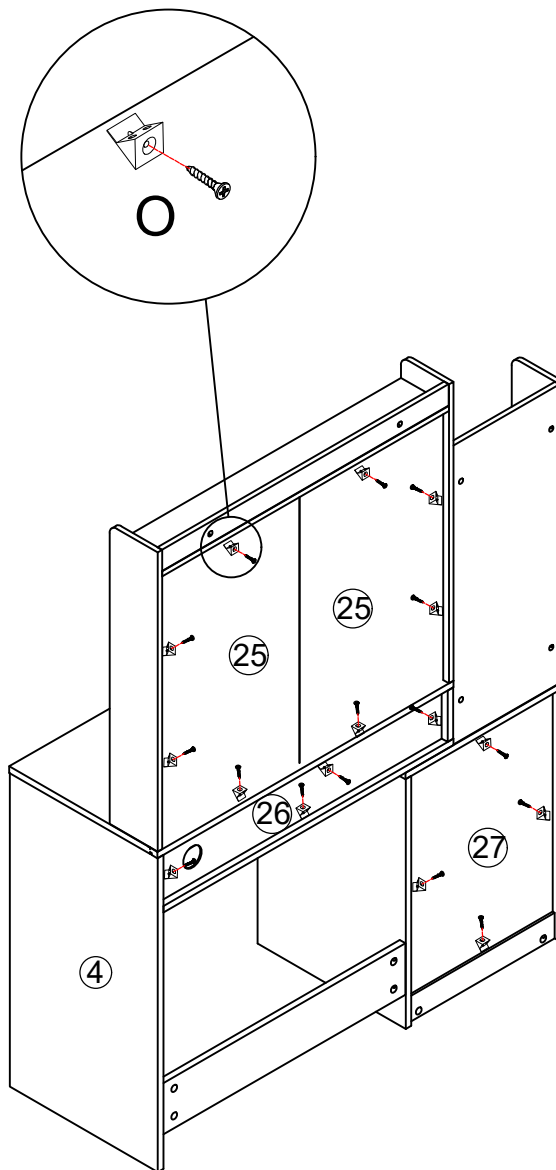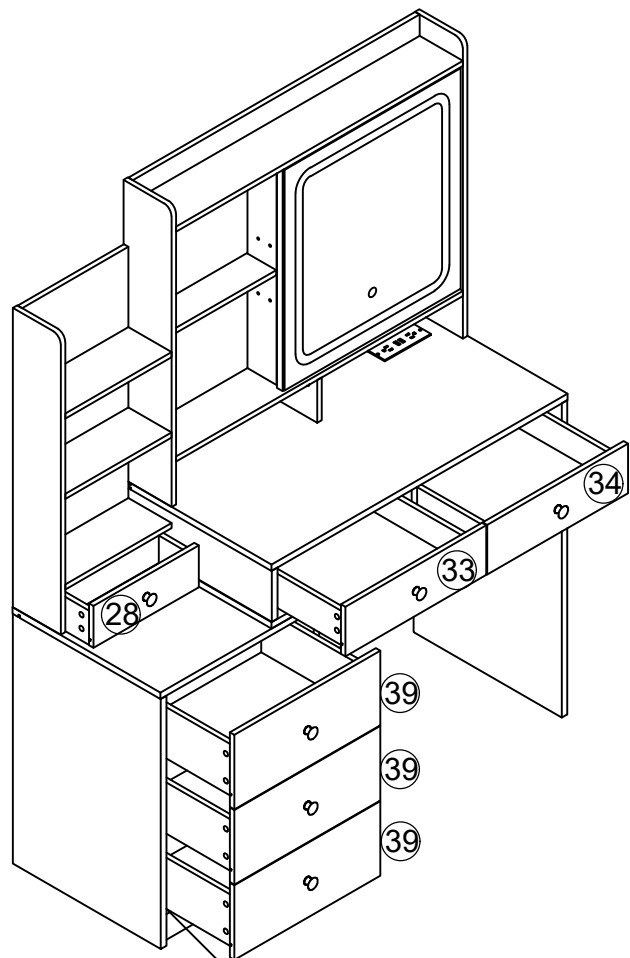

0*16

23

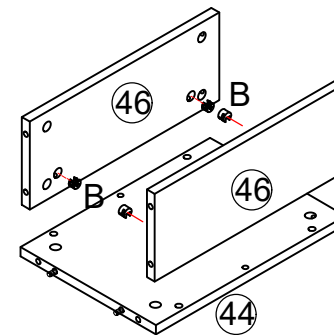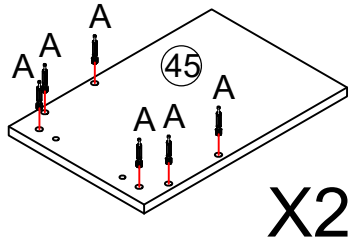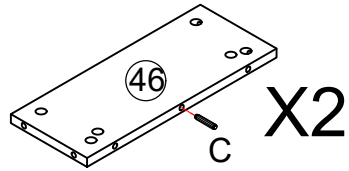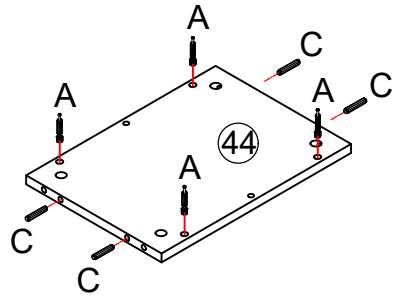

A*16




B*4









C*6

24

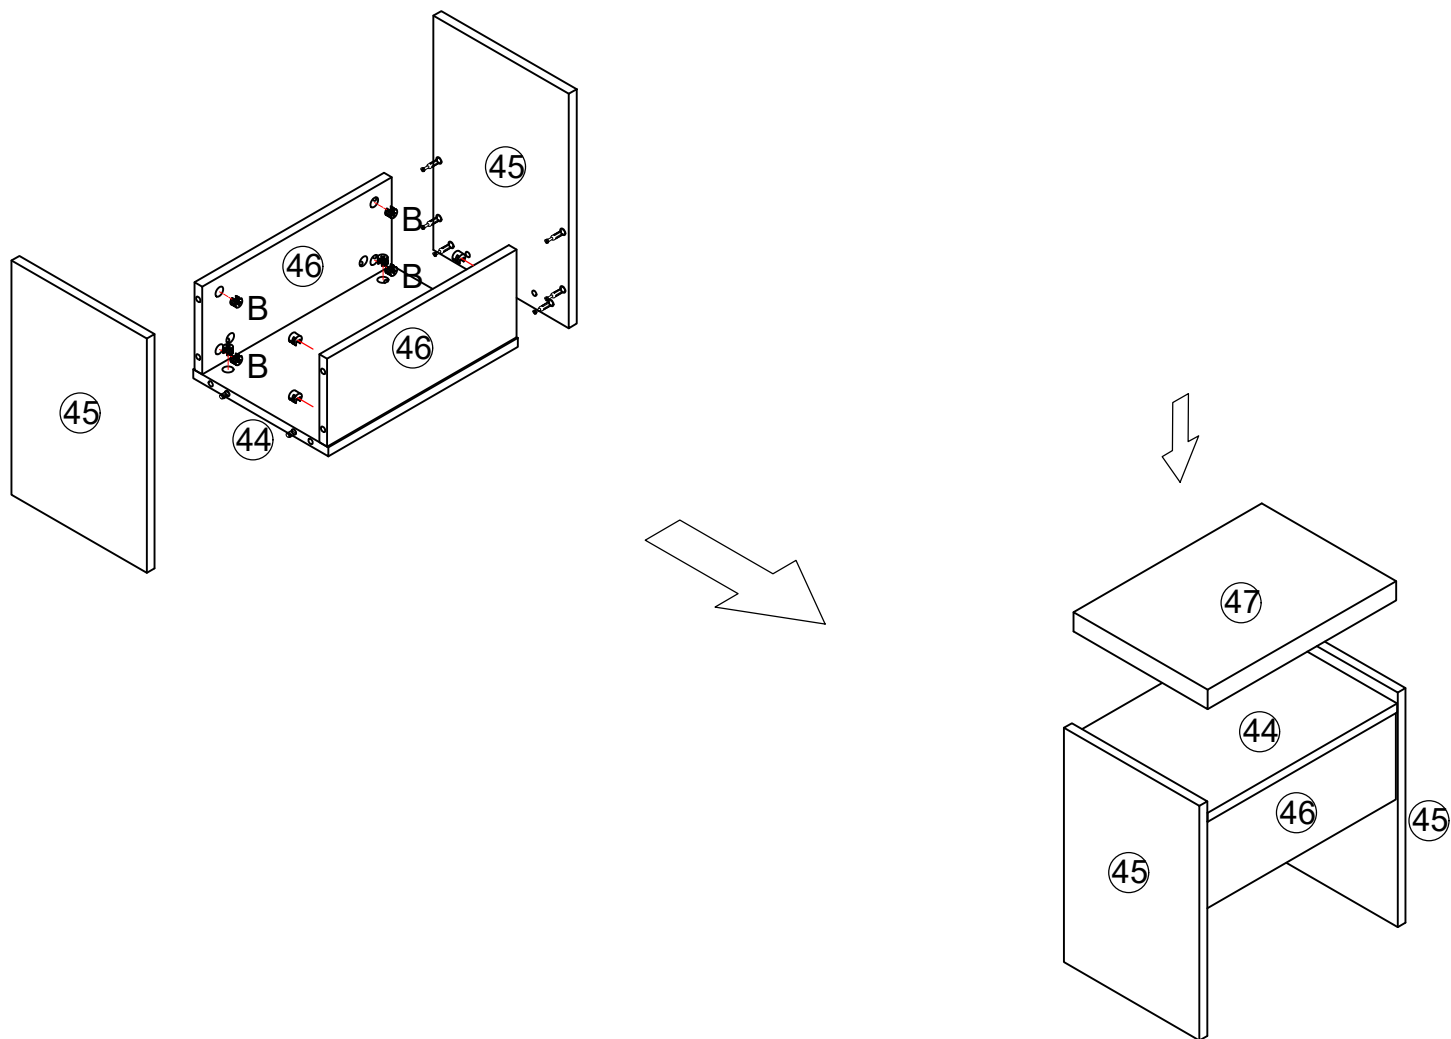

B*12

25

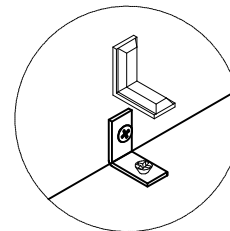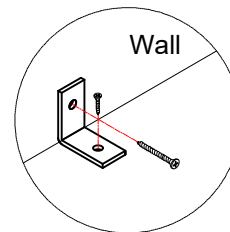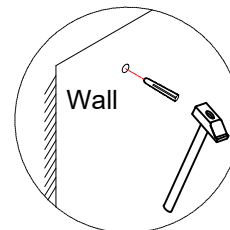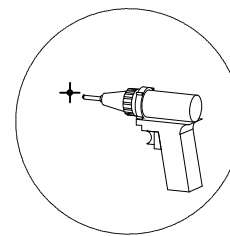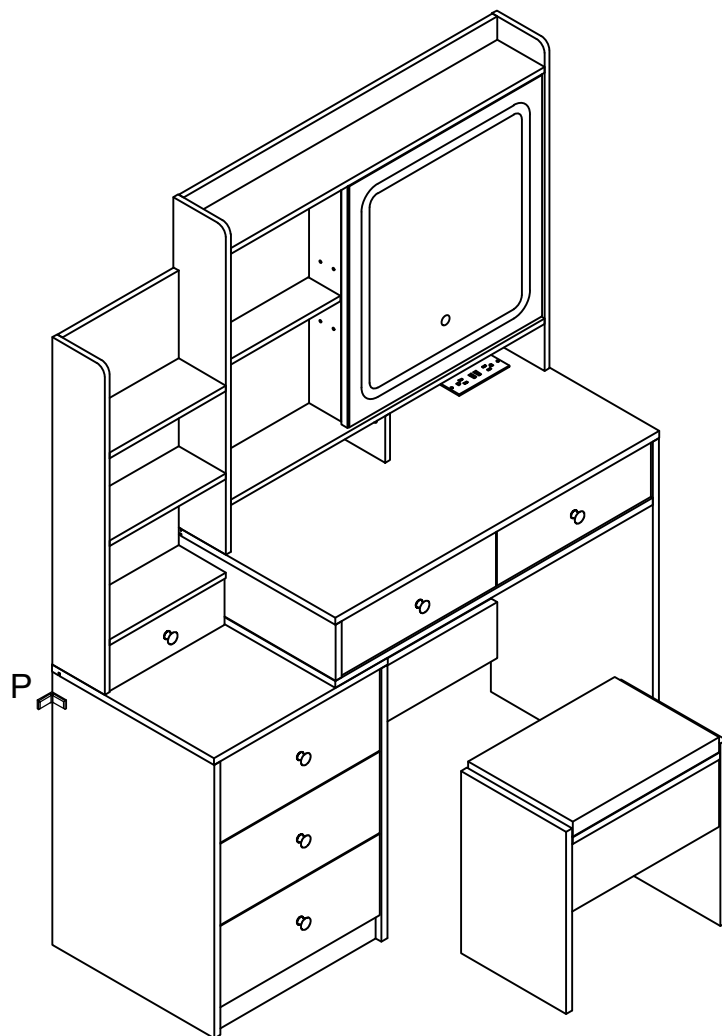

P*2

Please install tip-proof fitting.