

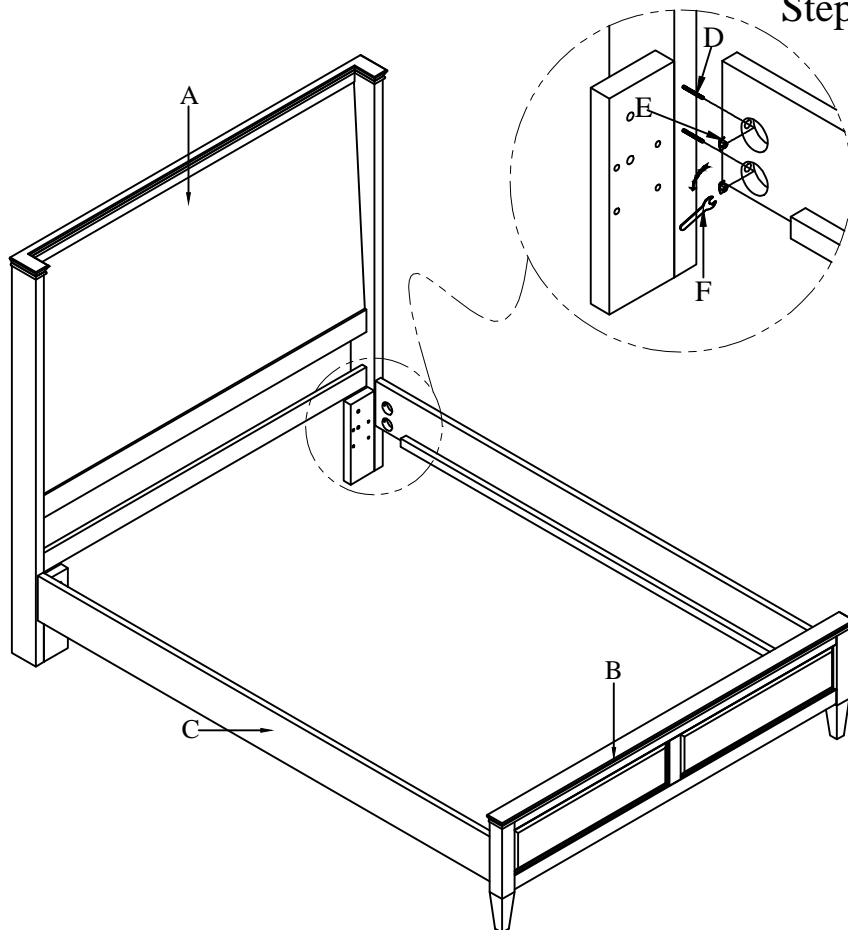
## ASSEMBLY INSTRUCTION




### 77-150CP SLEIGH BED

#### IMPORTANT NOTES :

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children.

#### Step1



NO.	PART DESCRIPTION		Q'TY
D		THREAD ROD (5/16*88mm)	8
E		CURVED SLOTTED WASHER (5/16")	8
F		WRENCH (12*75mm)	1

**MADE IN VIETNAM**