
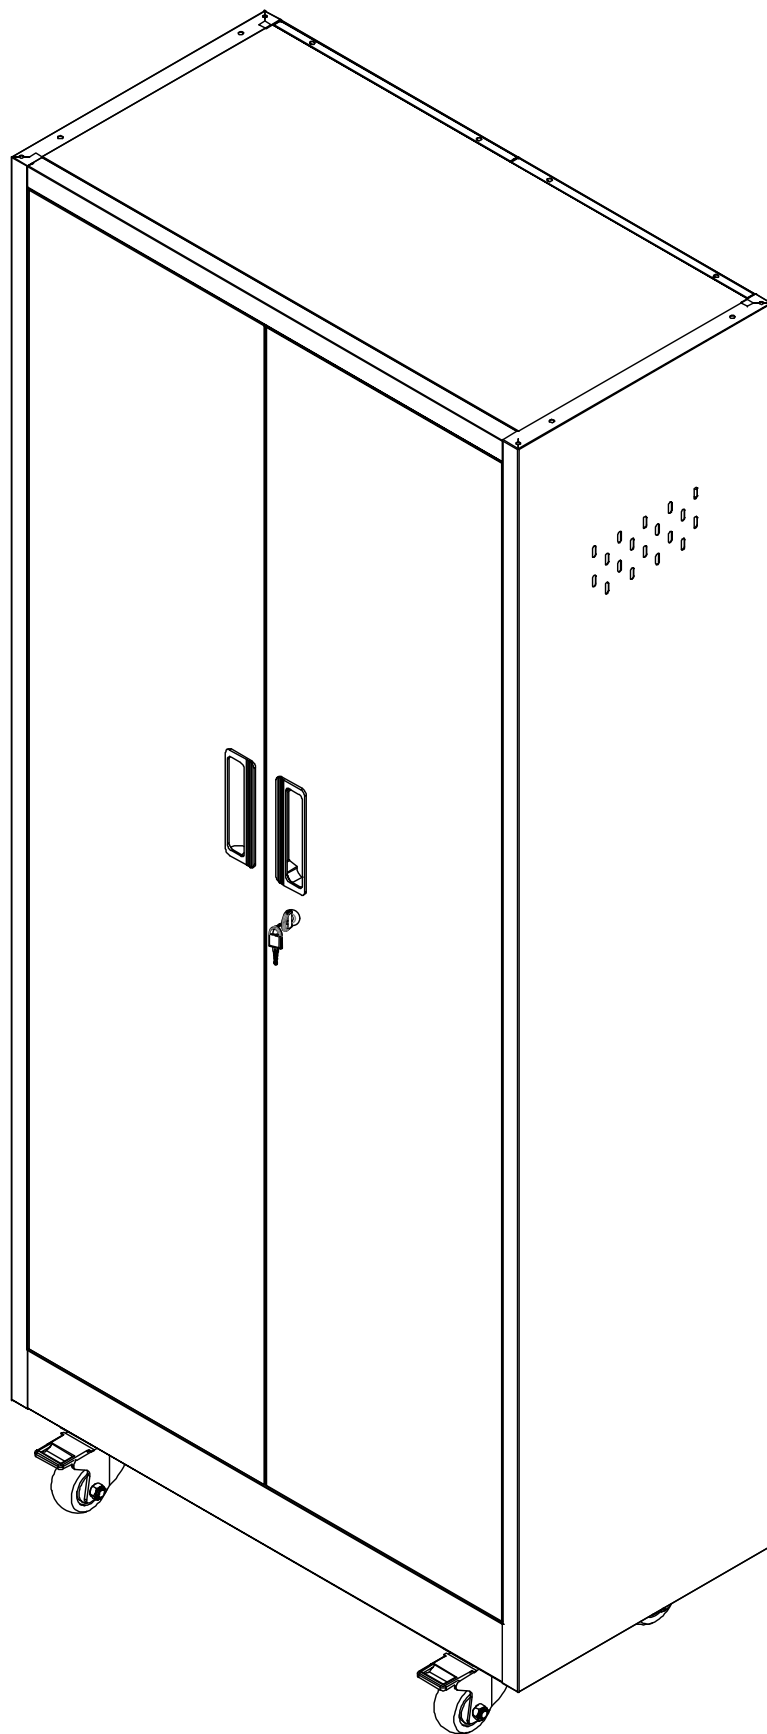


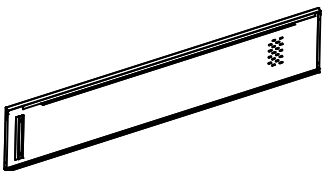

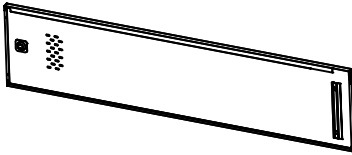
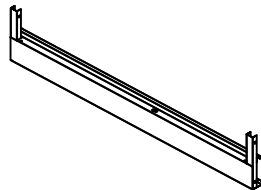
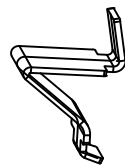
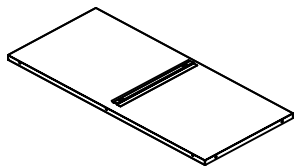
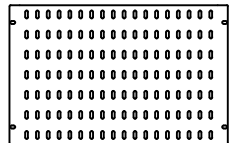
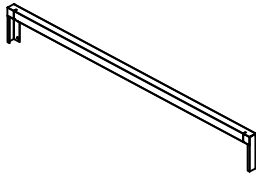

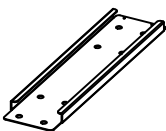
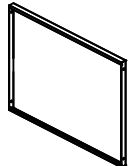









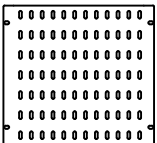

Accessories

Name		Picture	QTY	Name		Picture	QTY
A	Left Back Panel		1	K	Left Door		1
B	Right Back Panel		1	L	1-3/16 " Wall		2
C	Left Side Panel		1	M	Wall Anchor Screw		2
D	Right Side Panel		1	N	13/32 " Screw		53
E	Kick Plate		1	O	Shelf Clip		16
F	Bottom Panel		1	P	Pegboard		3
G	Top Rail		1	Q	Middle Plate		1
H	Top Panel		1	R	Baseplate		2
I	Shelf		4	S	Door Pivot Pin		2
J	Right Door		1	T	Shim		4

Accessories

Name		Picture	QTY	Name		Picture	QTY
U	Foam Pad		2	Y-1	Front wheel		2
V	Towel Rail		2	Y-2	Rear wheel		2
W	Pedestal		2	Z	M6 × 12		16
X	M3 × 8		8	AA	Hook		10
BB	Hanger Rod		1	CC	Peg		3
J J	Pegboard		2				



CAUTION


An assistant is required

If there is any problem, please feel free to contact our customer service team and we are always here to assist with you!
If there is any slight dent or damage, you can try to fix it by pliers or hammers or contact us.

Step 1

(N)  × 3


Connect left back panel A and right back panel B with 3 screws N

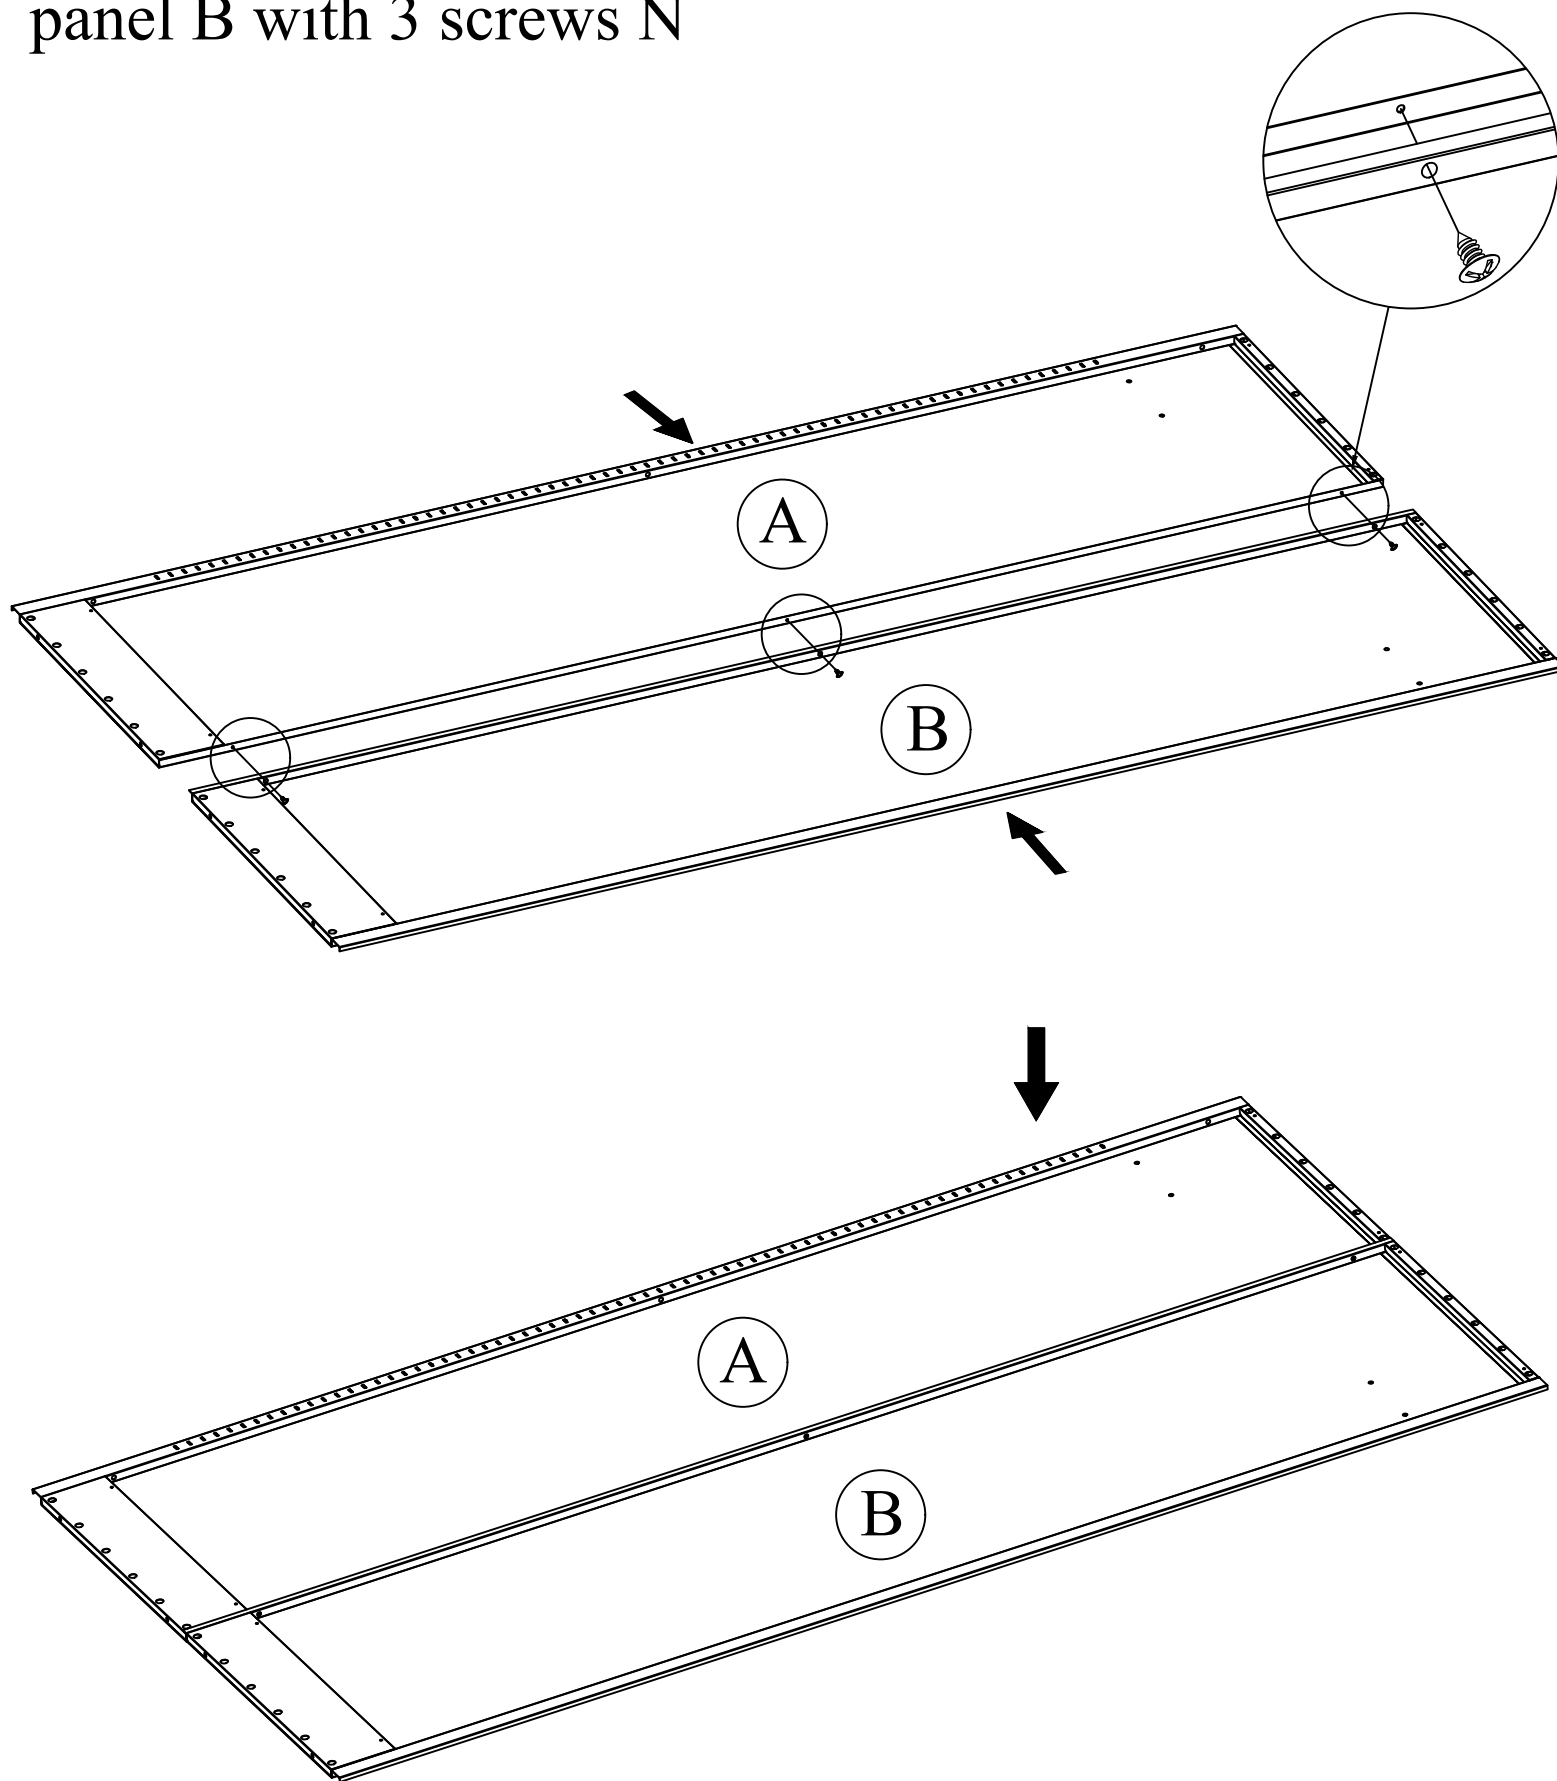

Step 2



(N)  × 6

Connect left side panel C and right side panel D on back panels with 6 screws N

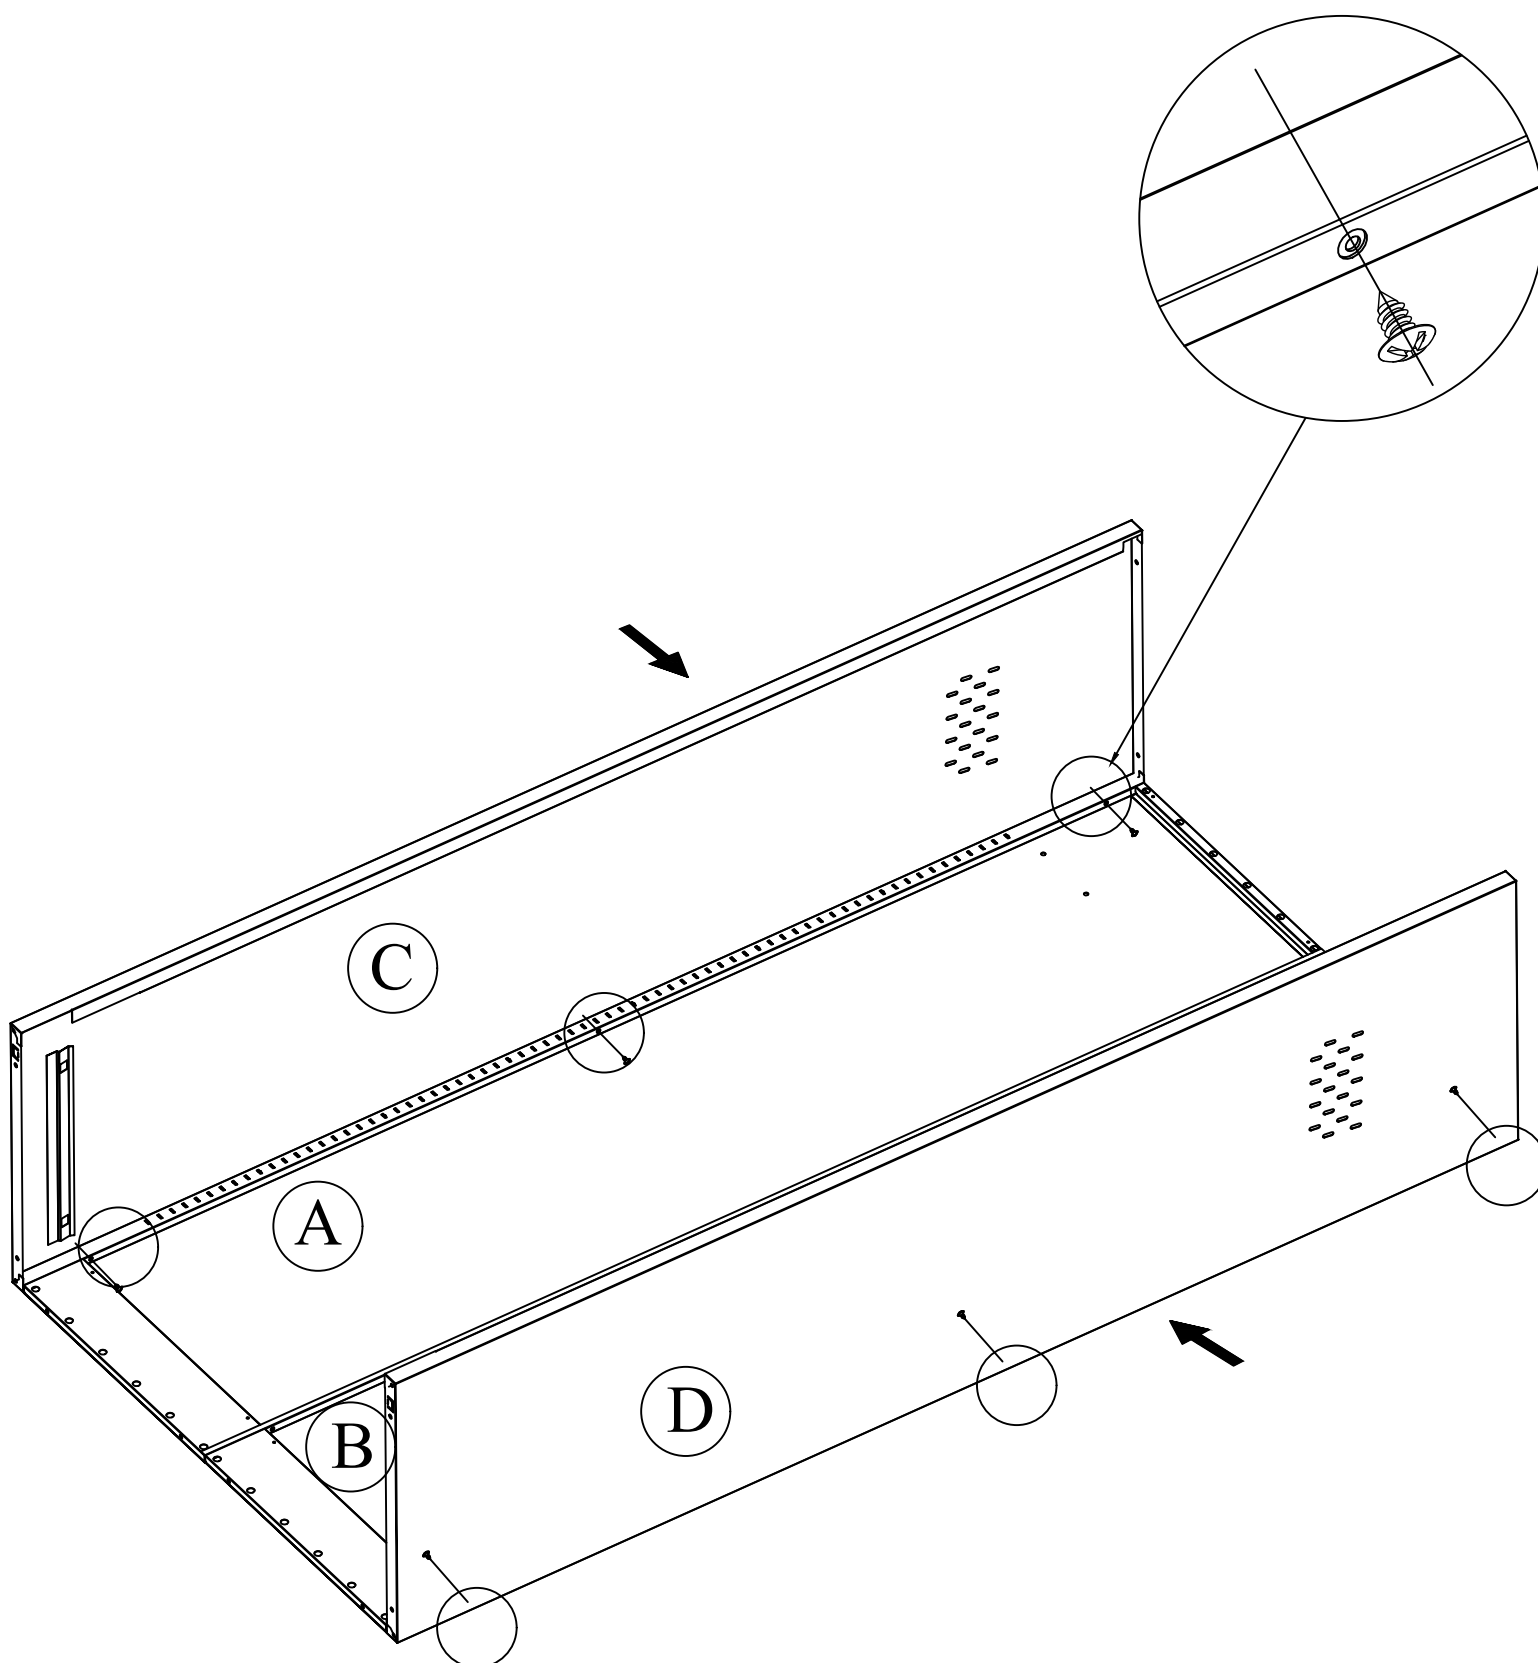


Step 3

Insert kick plate E into the bottom

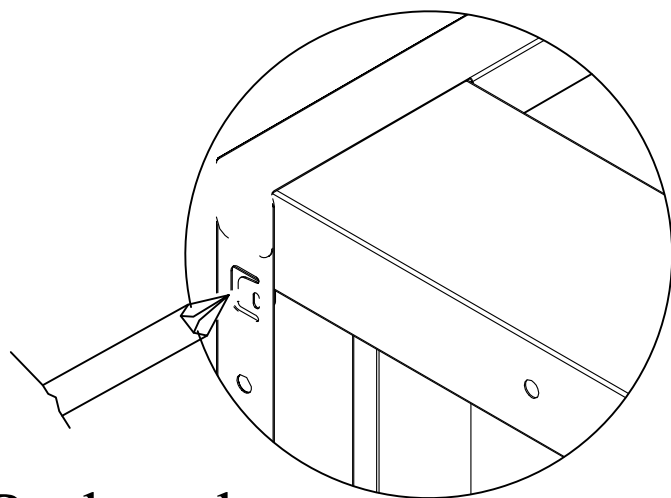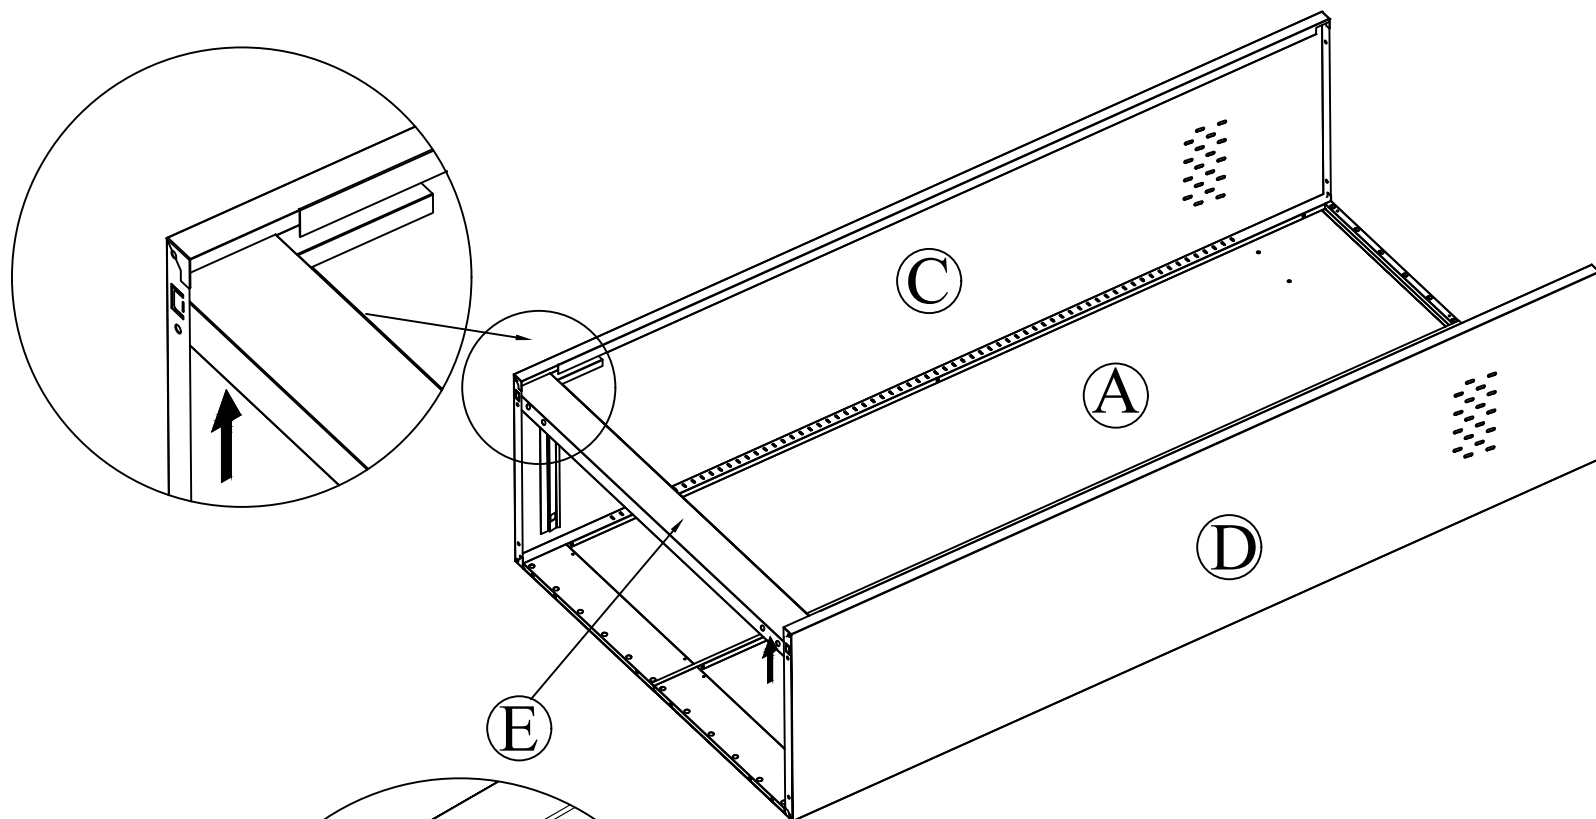

Push up here

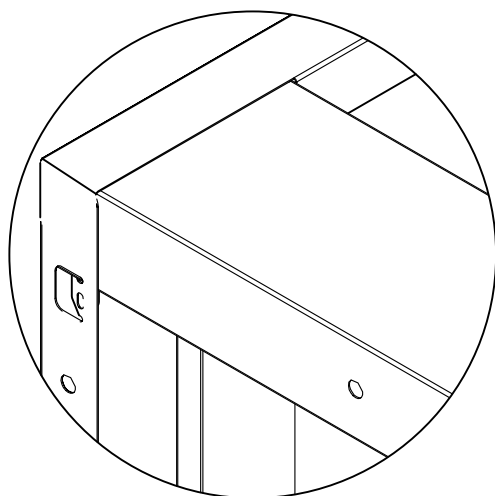


Step 4

(N)  × 11

Fix top rail G with 4 screws N


Fix bottom panel F with 7 screws N

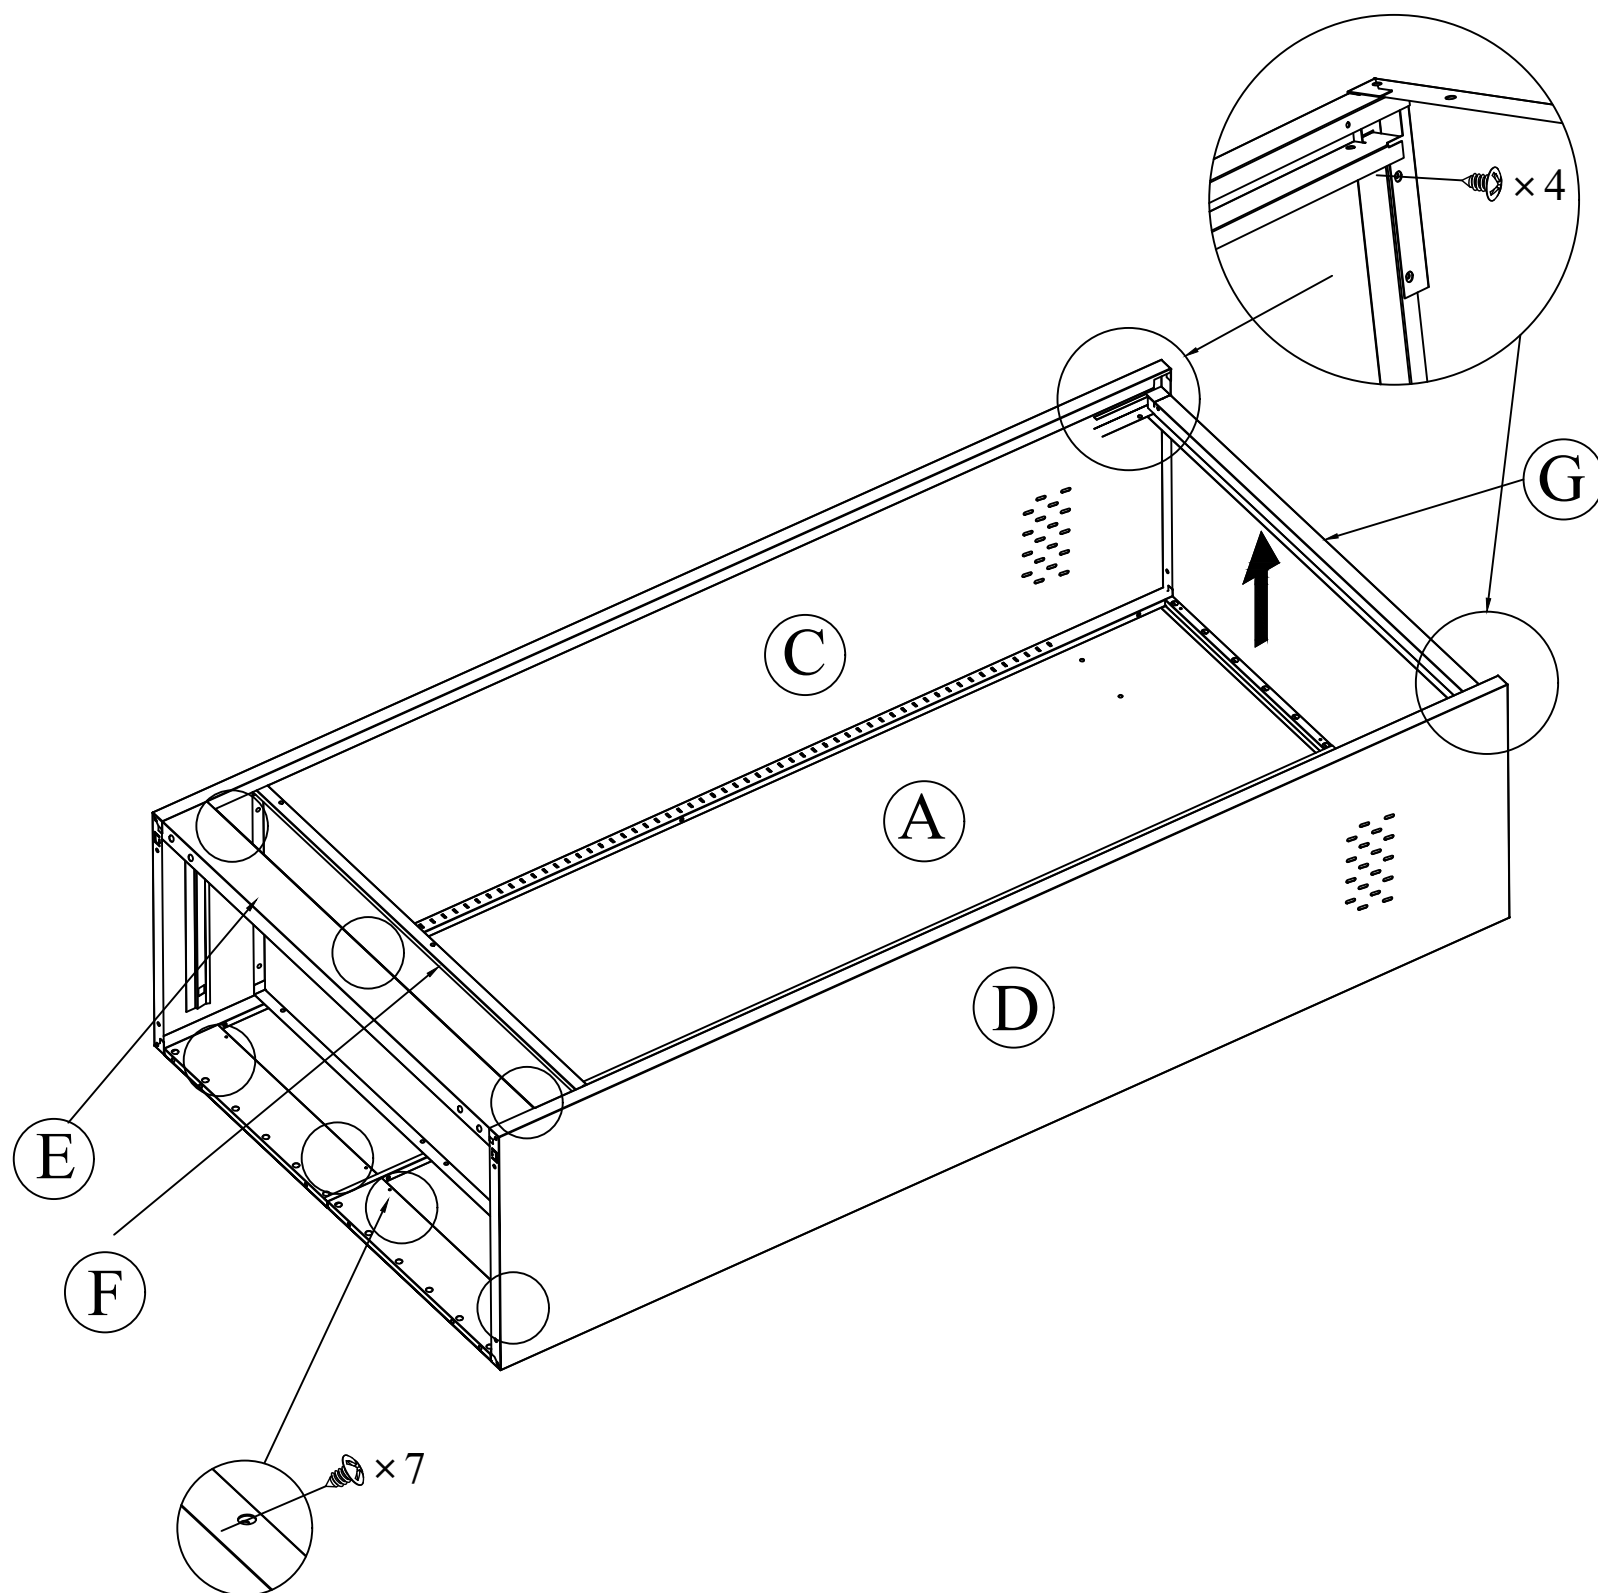



Step 5

Ⓝ  × 7

Fix top panel H with 7 screws N

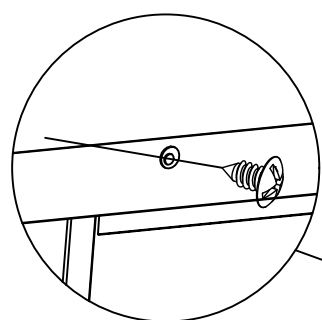


× 7

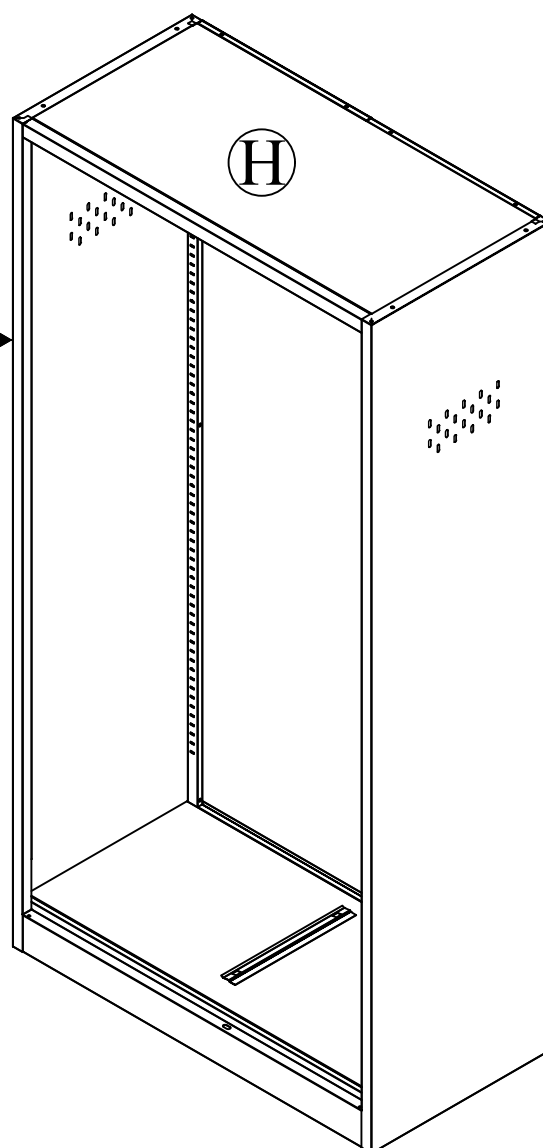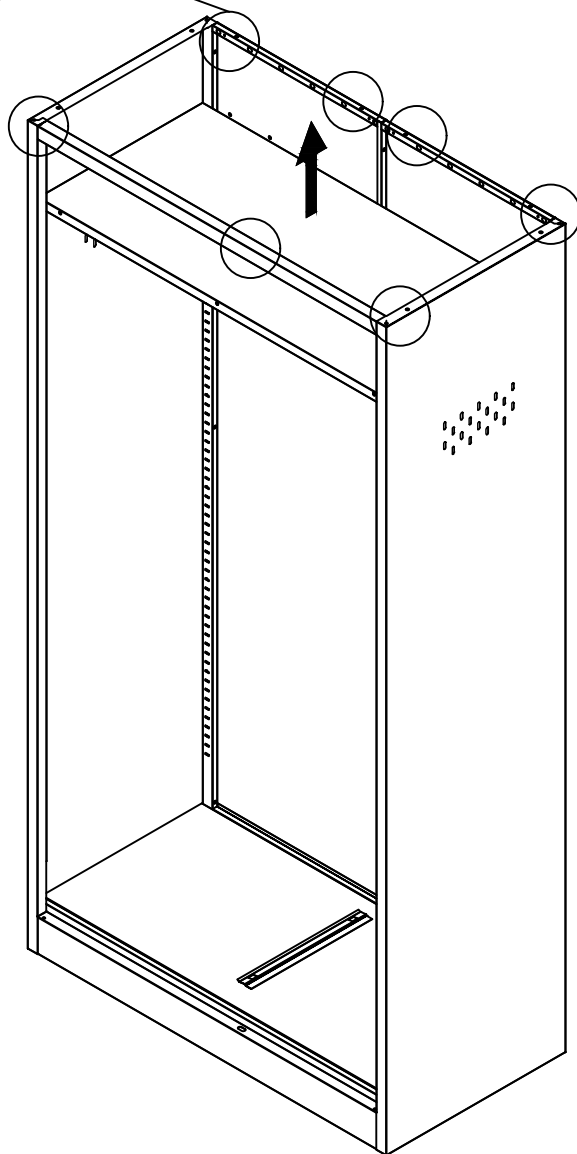

Step 6

Put the middle plate Q into the cabinet

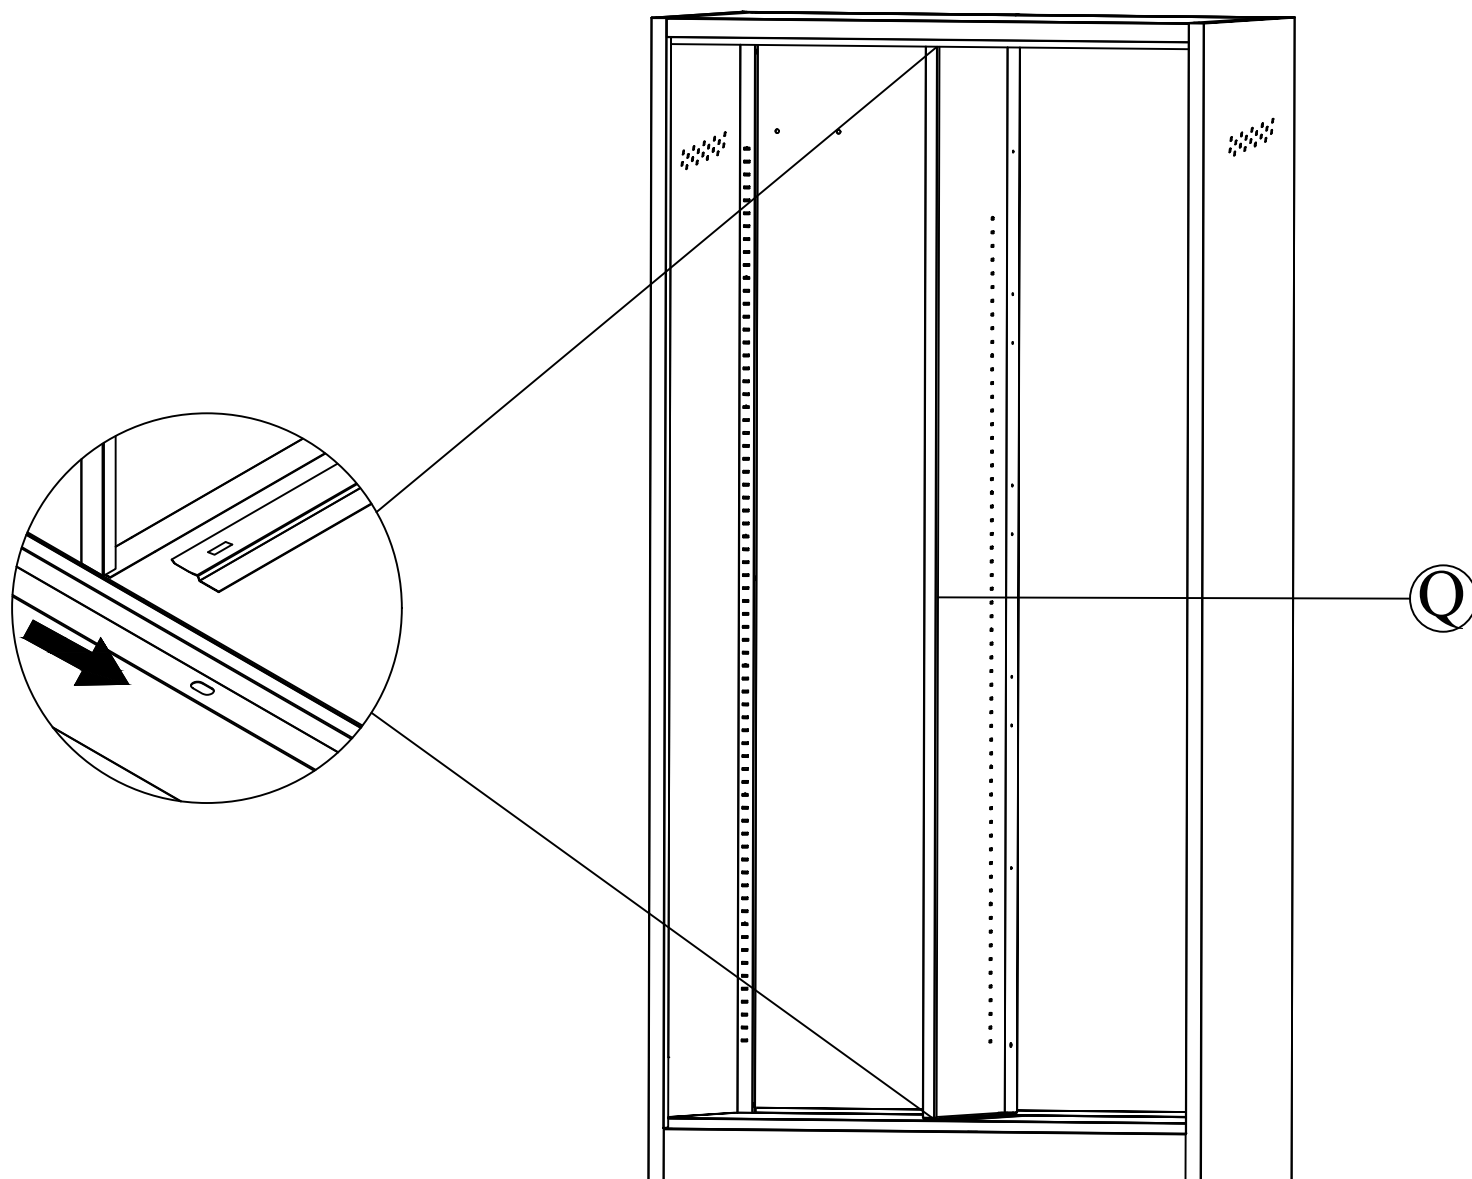


Step 7

Fix baseplate R to the bottom with 4 screws N


Fix 2 wheels Y-1 and 2 wheels Y-2 with 16 screws Z

(N)  × 4


(Y-1)  × 2

(Y-2)  × 2

(Z)  × 16

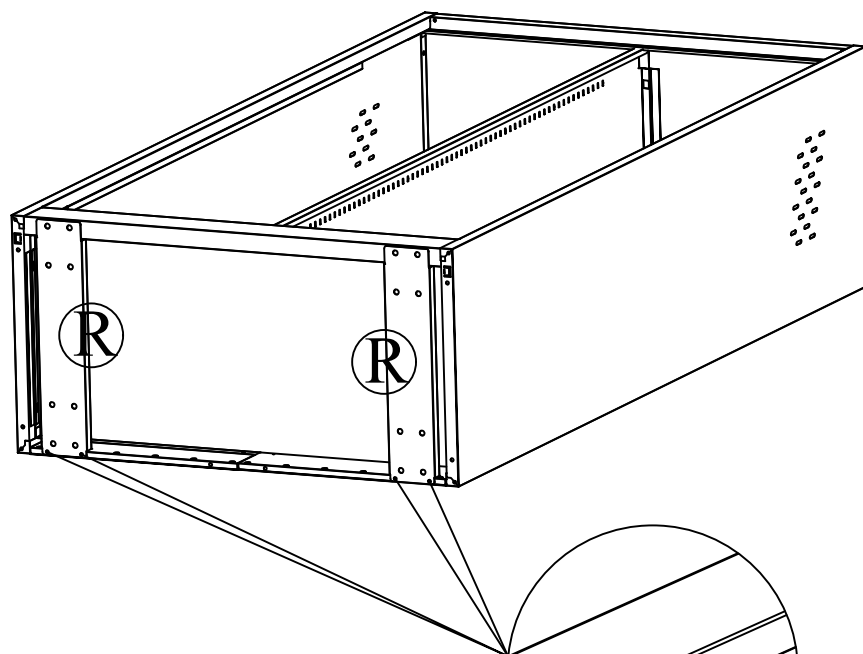




Please lock two wheels to keep the cabinet stable before the next step.

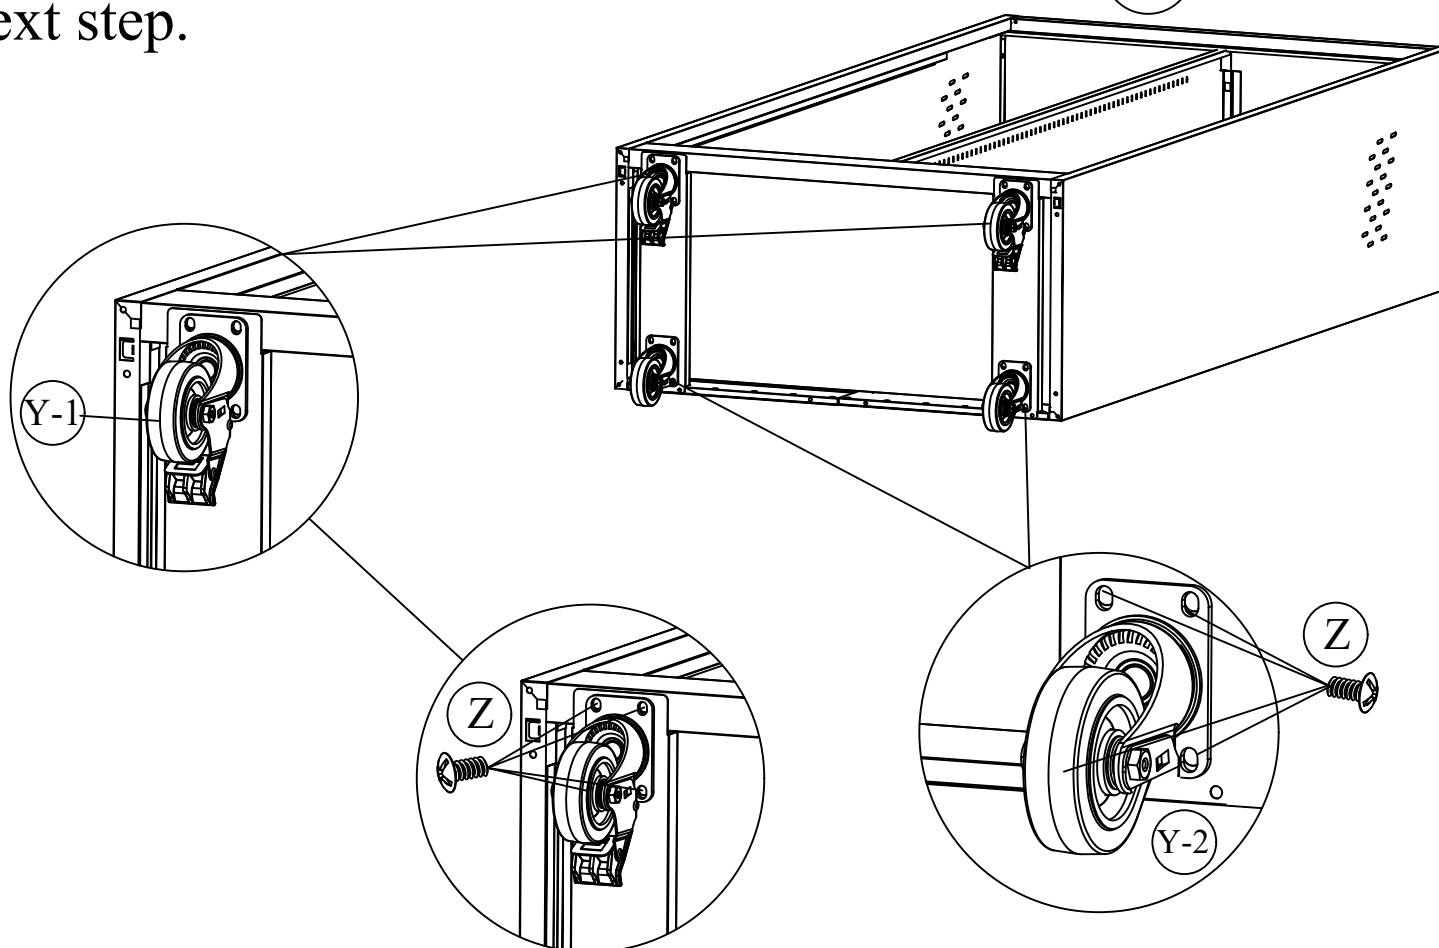


Step 8

○  × 16

Install shelf clips O at the same level and put the shelves I on them

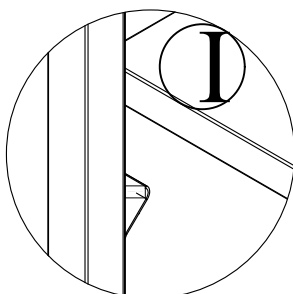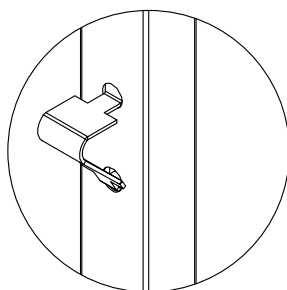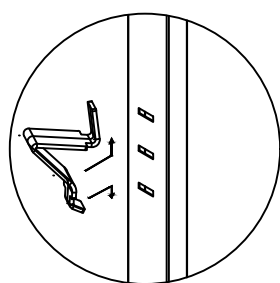


I

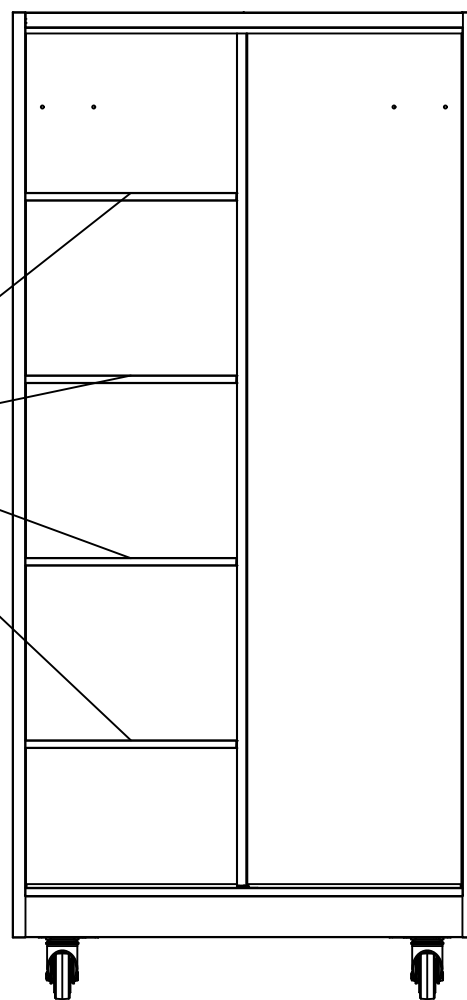

Step 9

(N)  × 14

Fix the middle plate Q and pegboard P
with 14 screws N


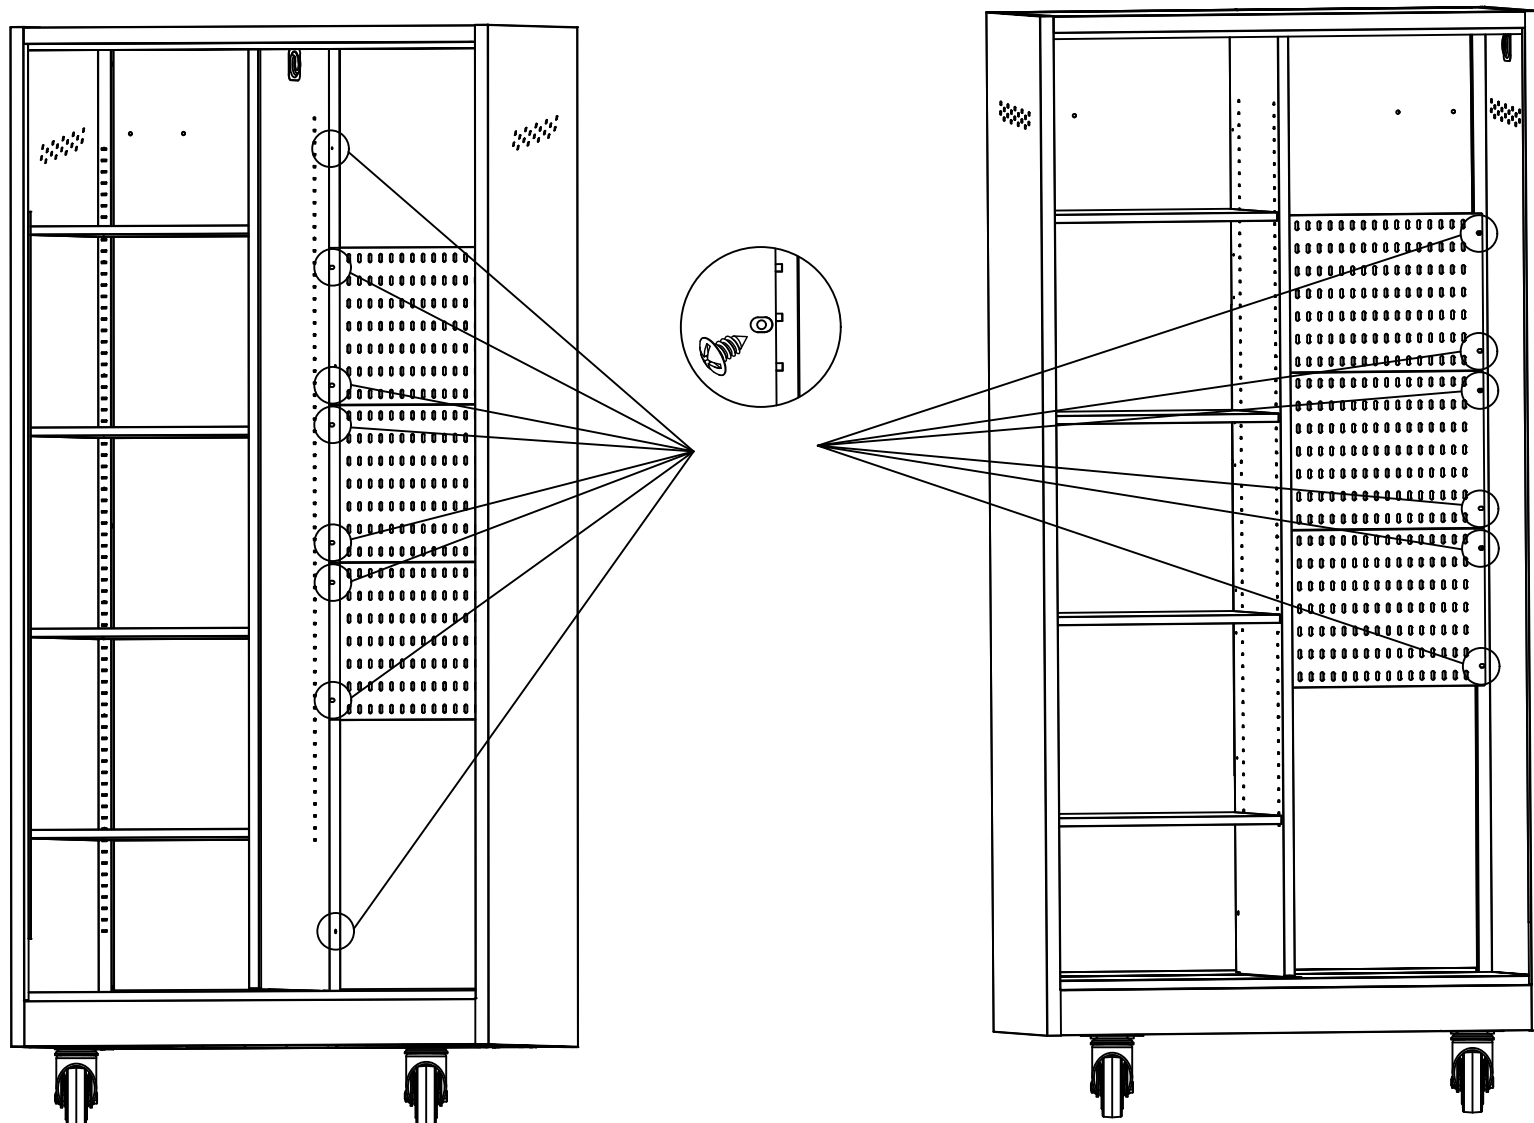


Step 10

Install the hanger rod BB on the top

Hang the pegs CC on the hanger rod BB





Hang the hooks AA on the pegboard P

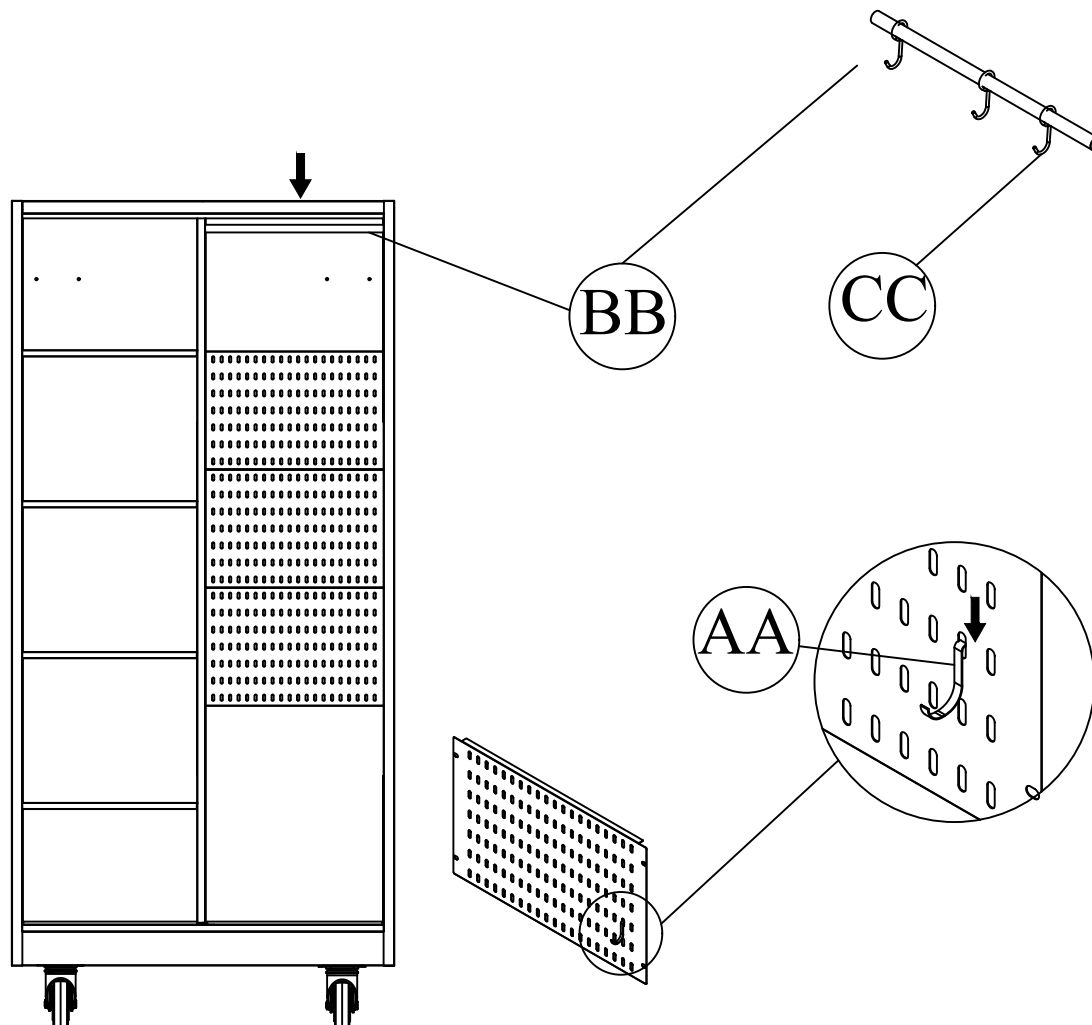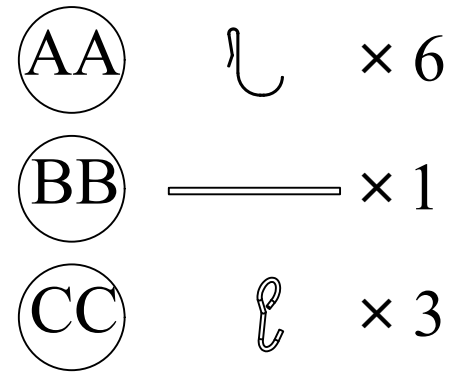

Step 11

Install the pedestals W on the right door K
Fix the towel rails V on the pedestals with 8 screws X

- V — × 2
- W   × 2
- X  × 8

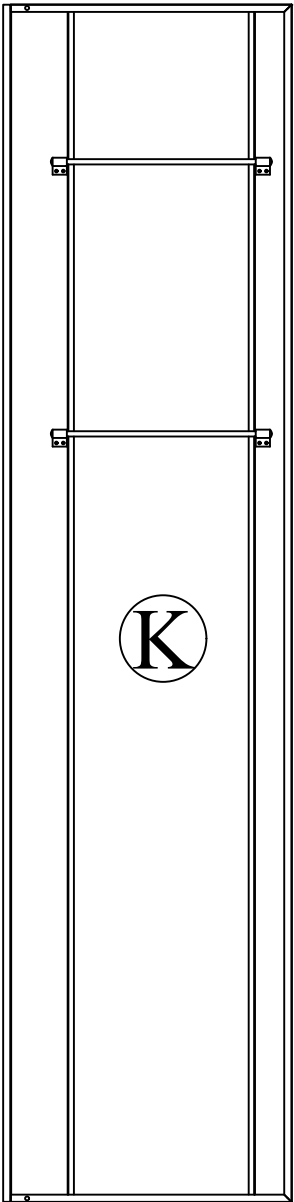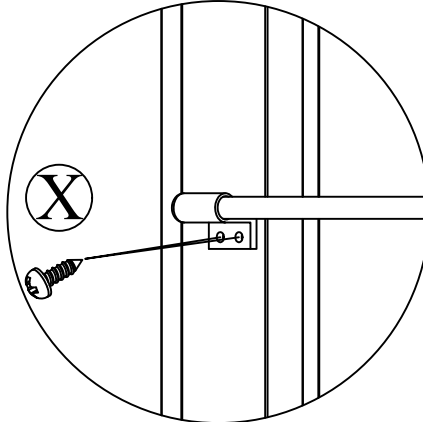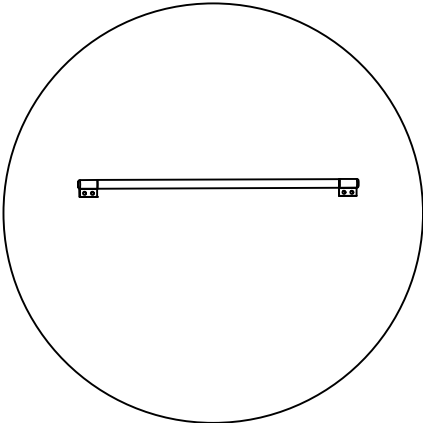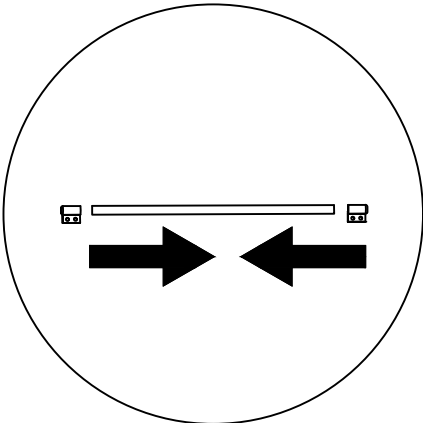


Step 12

Install pegboards JJ on the right door J with 8 screws N

Hang hooks AA on the pegboards


(N)  × 8


(AA)  × 4

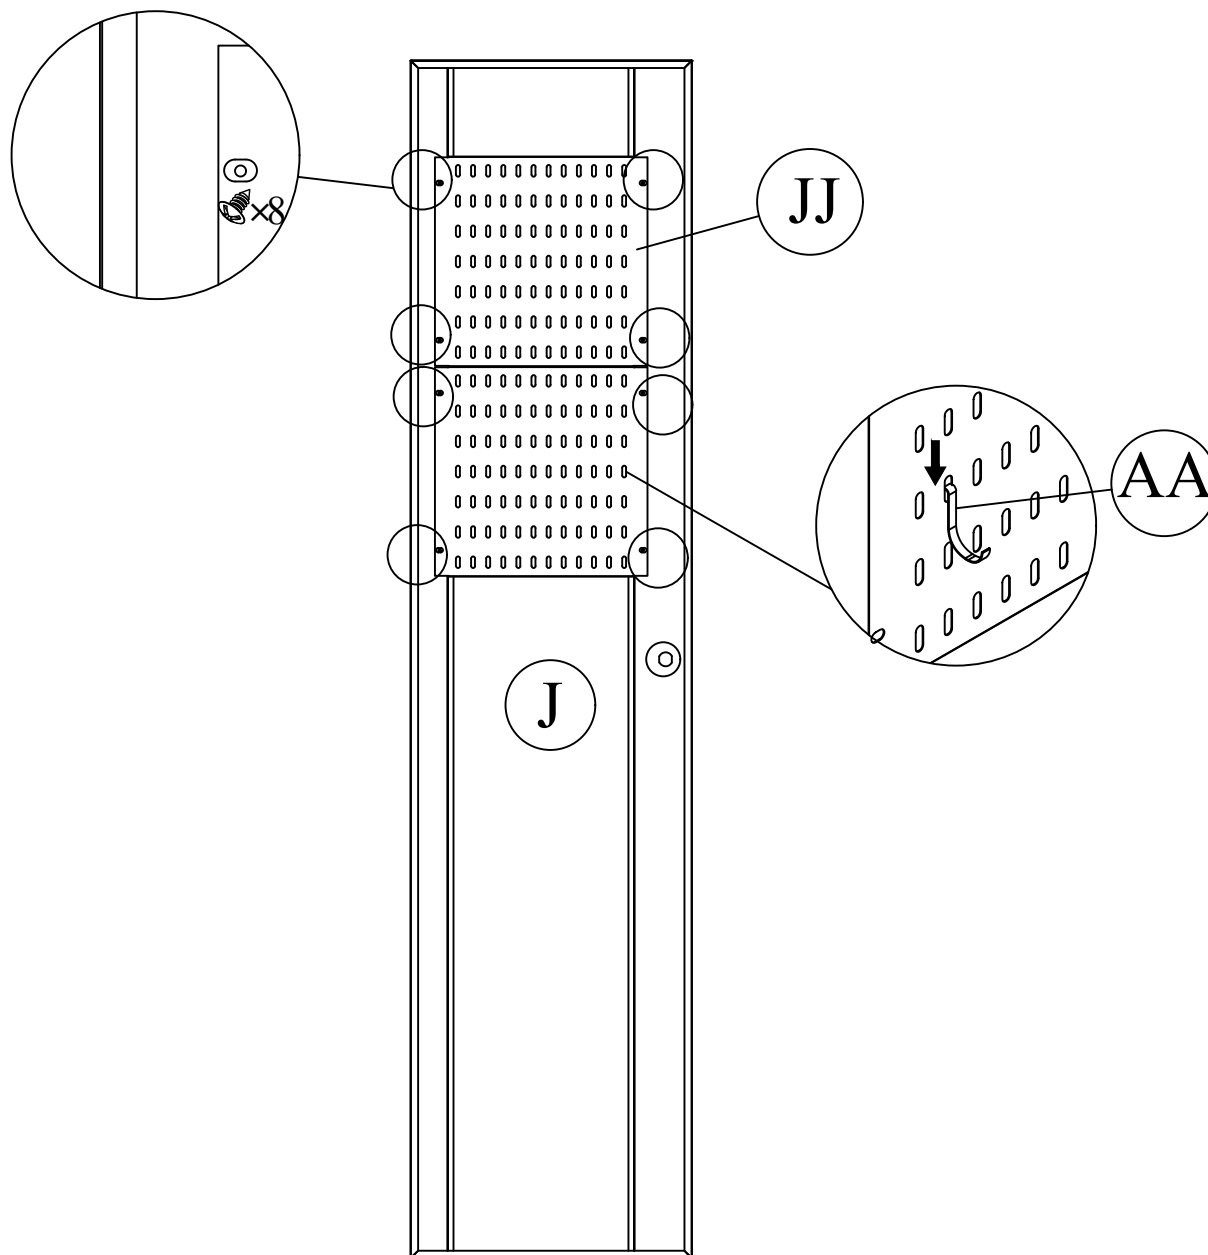

Step 13

Insert S and T on each bottom corner of the cabinet, then install door K and J (0/1/2 shim T can be used to adjust the seam)


- (S)  × 2
- (U)  × 2
- (T)  × 4

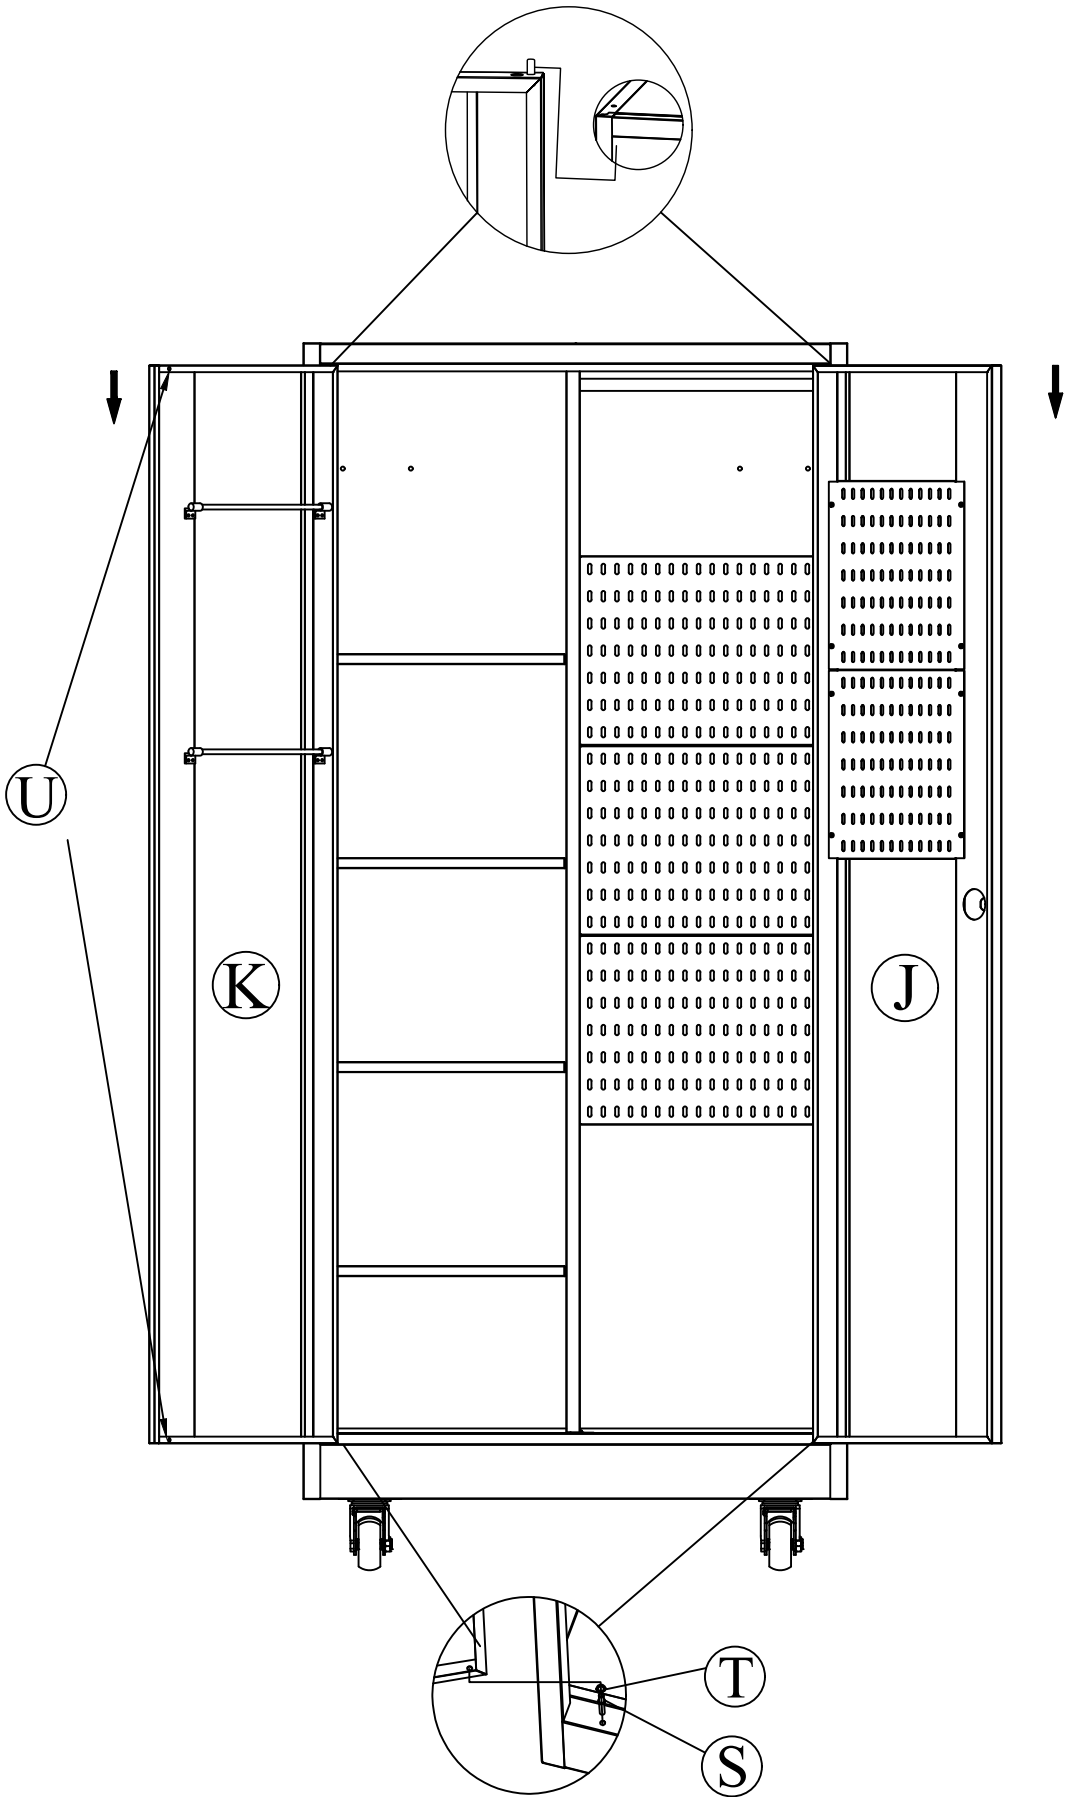


Step 14


Fix the cabinet on the wall with 2 screws M
and 2 screws L

Ⓛ  × 2

Ⓜ  × 2

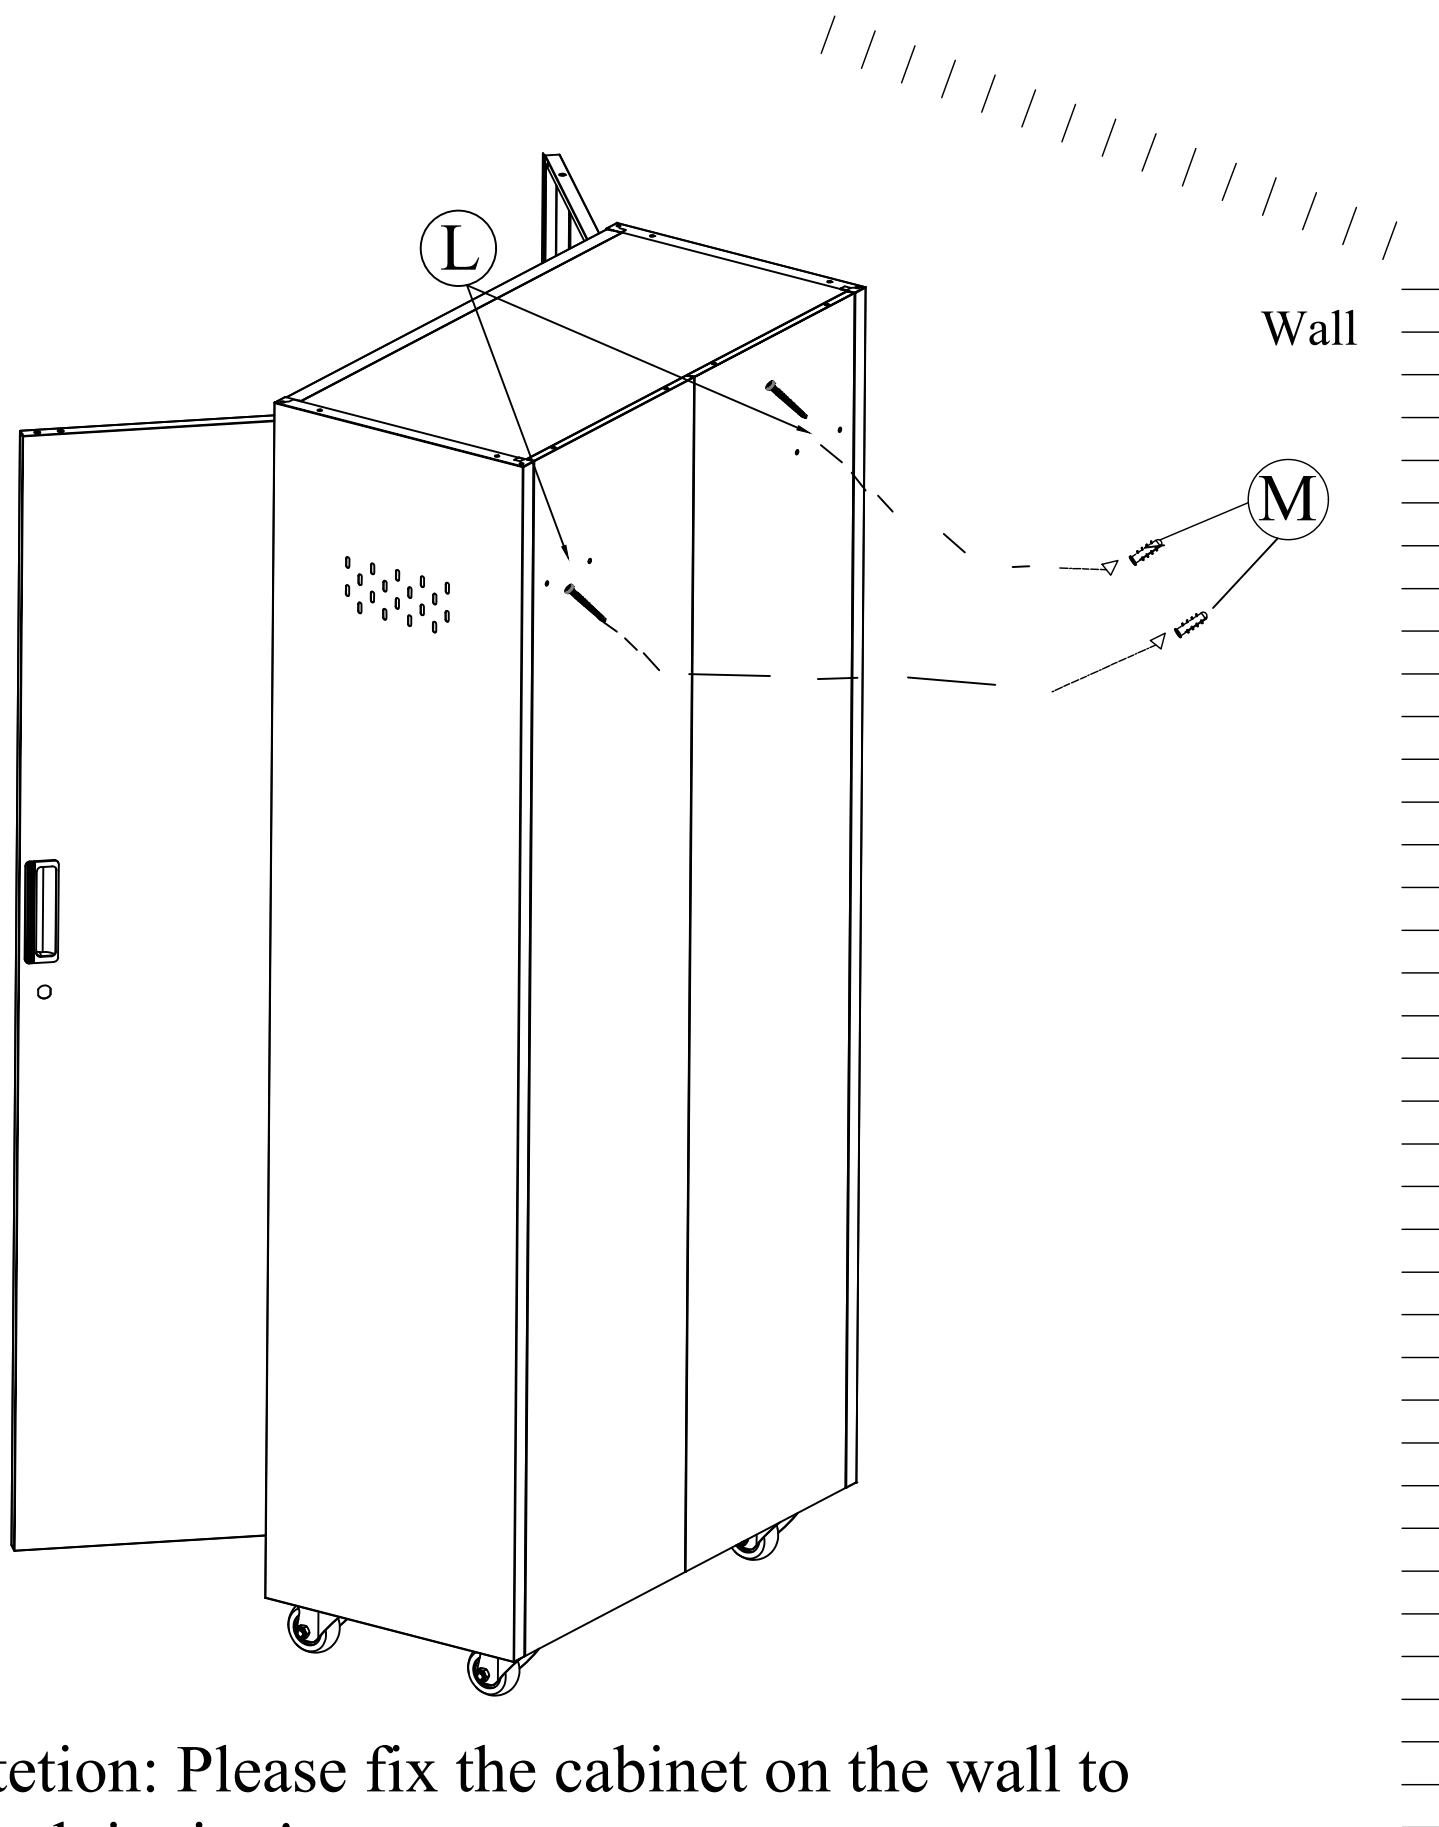

Attention: Please fix the cabinet on the wall to avoid tipping!

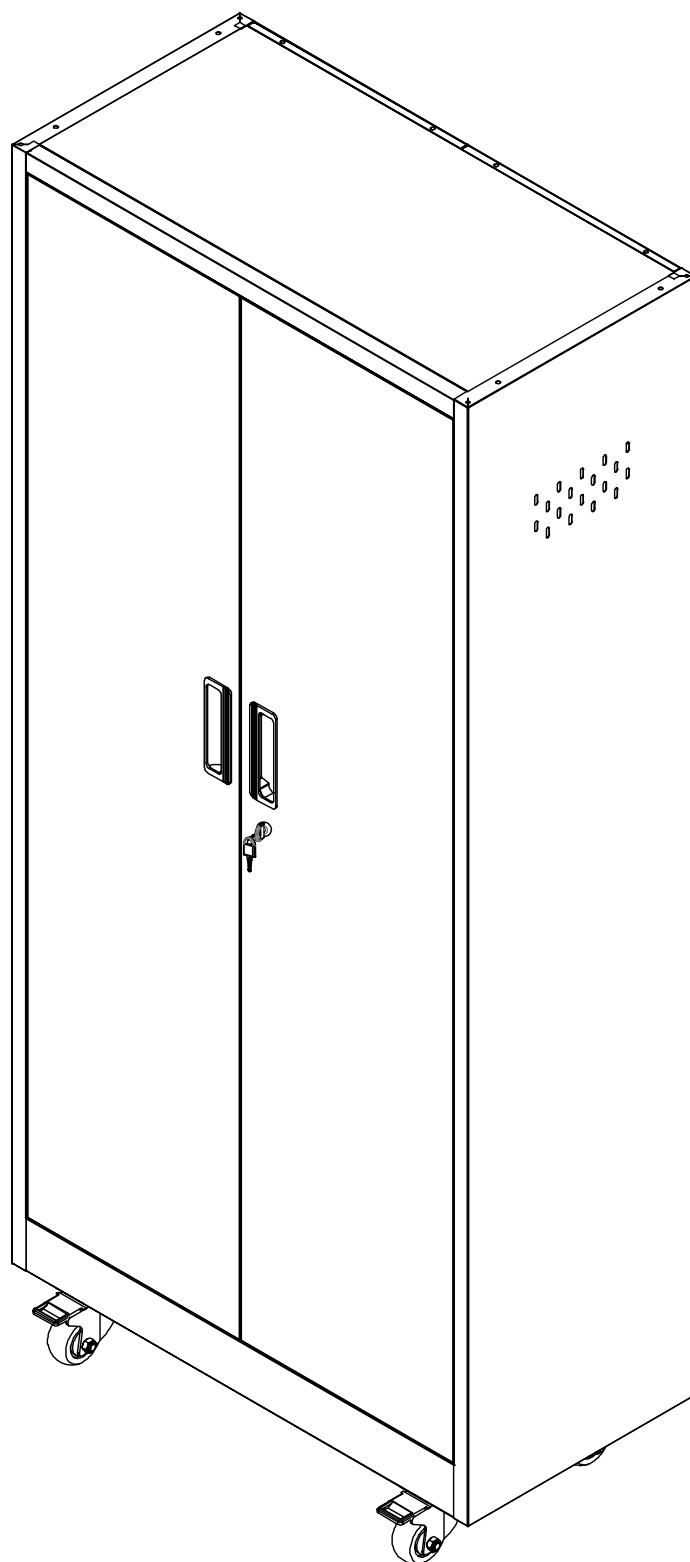

Installation Guide Video