


IMPORTANT!

Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

- 1 Insert the Cam Post (A) to the Top Spacer (G), Install the Top Spacer (G) to the Glass Top;

Notes:

All metal parts are in hardware box of

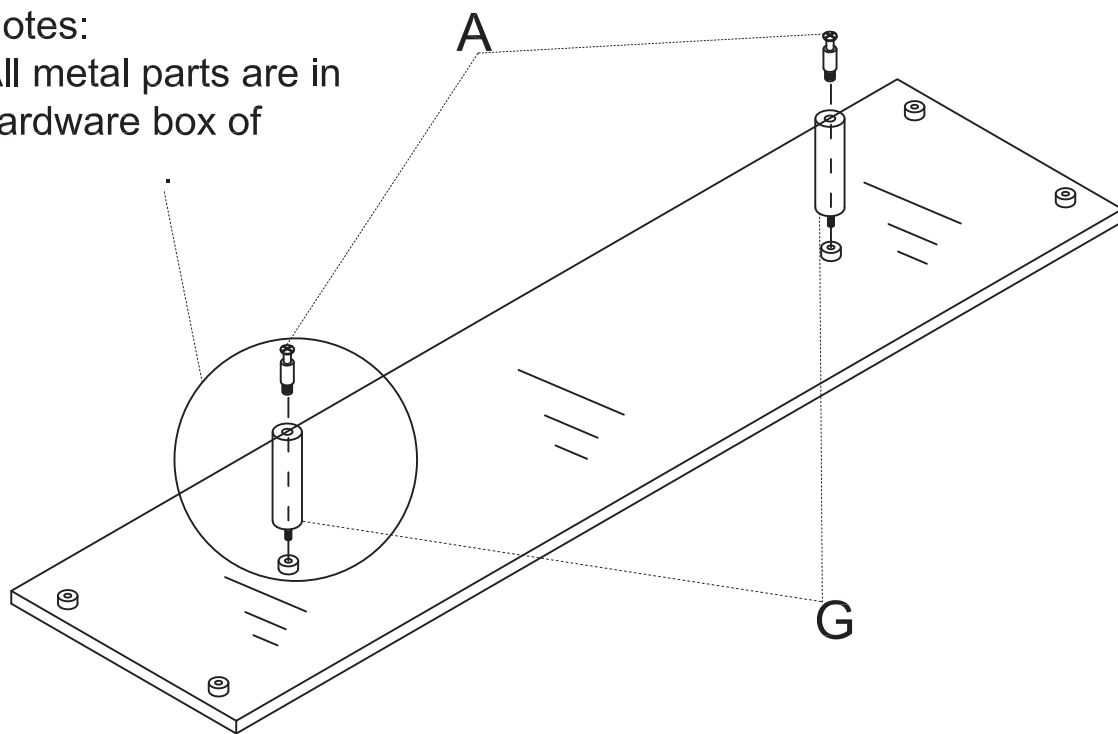

- 2** Fasten the Cam Lock (C) on the Back Panel (K), Use the Screws (J & H) and L Bracket (I) to connect the Pedestal and Top Glass, Attach the Cam Sticker to cams.

