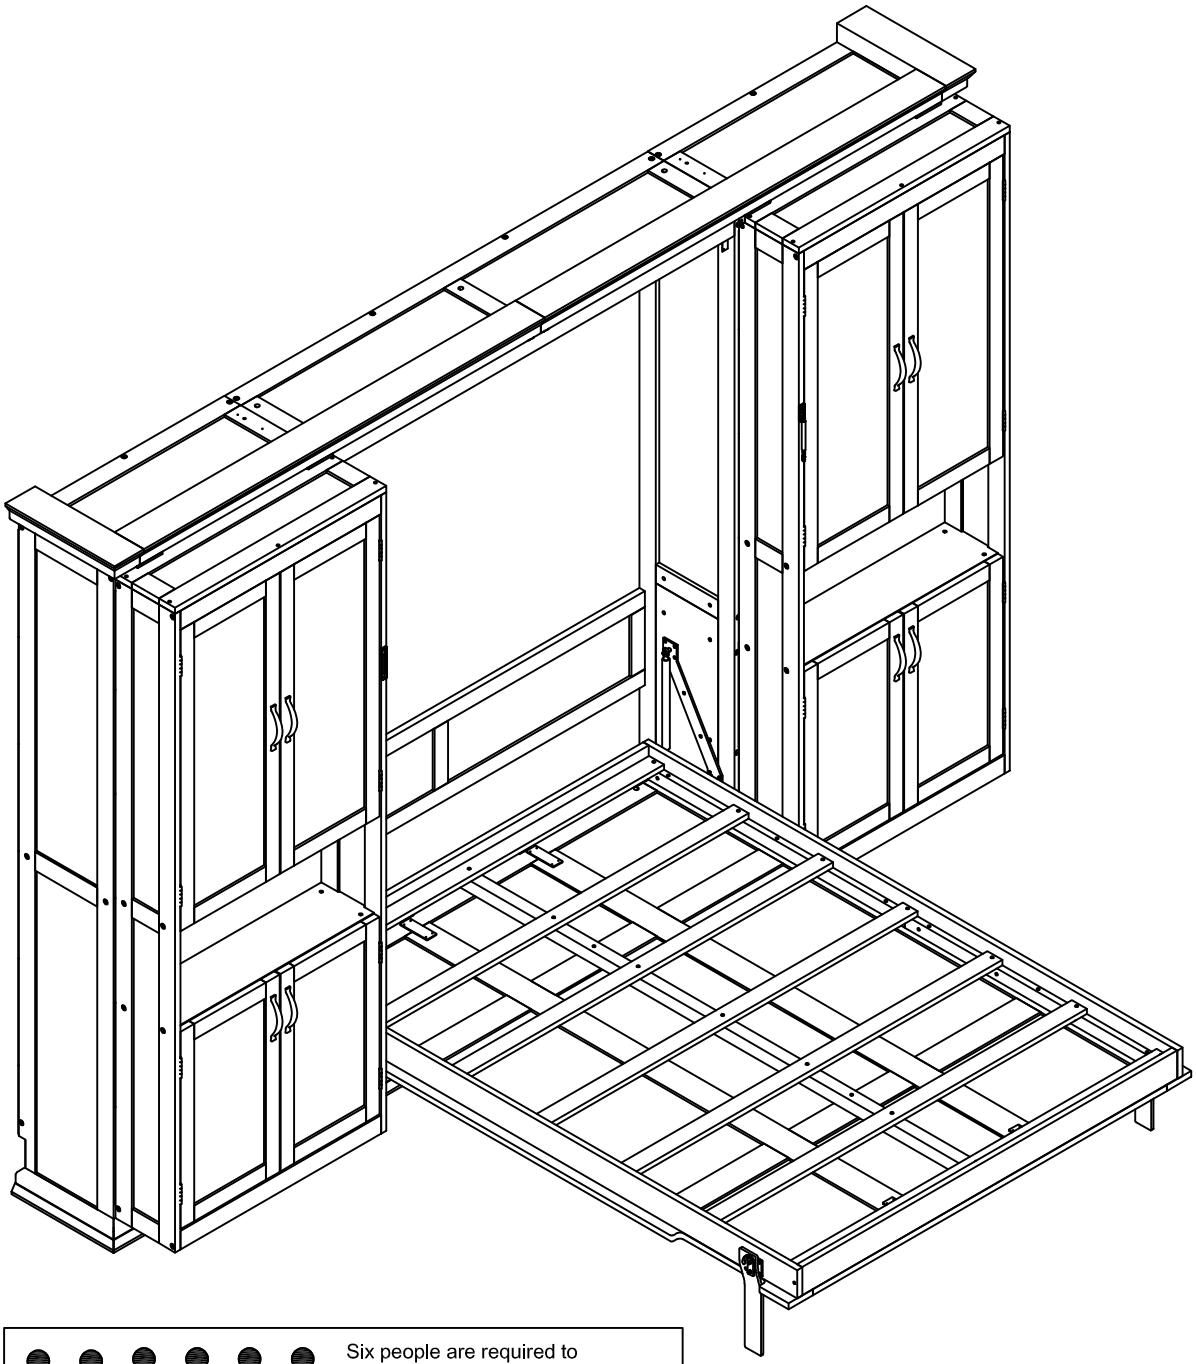
ASSEMBLY INSTRUCTION

INSTRUCTIONS DE MONTAGE





Six people are required to assemble and move this model.
Six personnes sont nécessaires pour assembler et déplacer ce modèle.




.Nécessite 6 personnes pour l'assemblage (2 personnes tiennent le grand meuble en place et 2 personnes inclinent le lit jusqu'à ce que les accessoires soient en place)

Note: This bed must be equipped with a mattress equivalent to 39 lb

Remarque : Ce lit doit être équipé d'un matelas équivalent à 39 livres

01/65

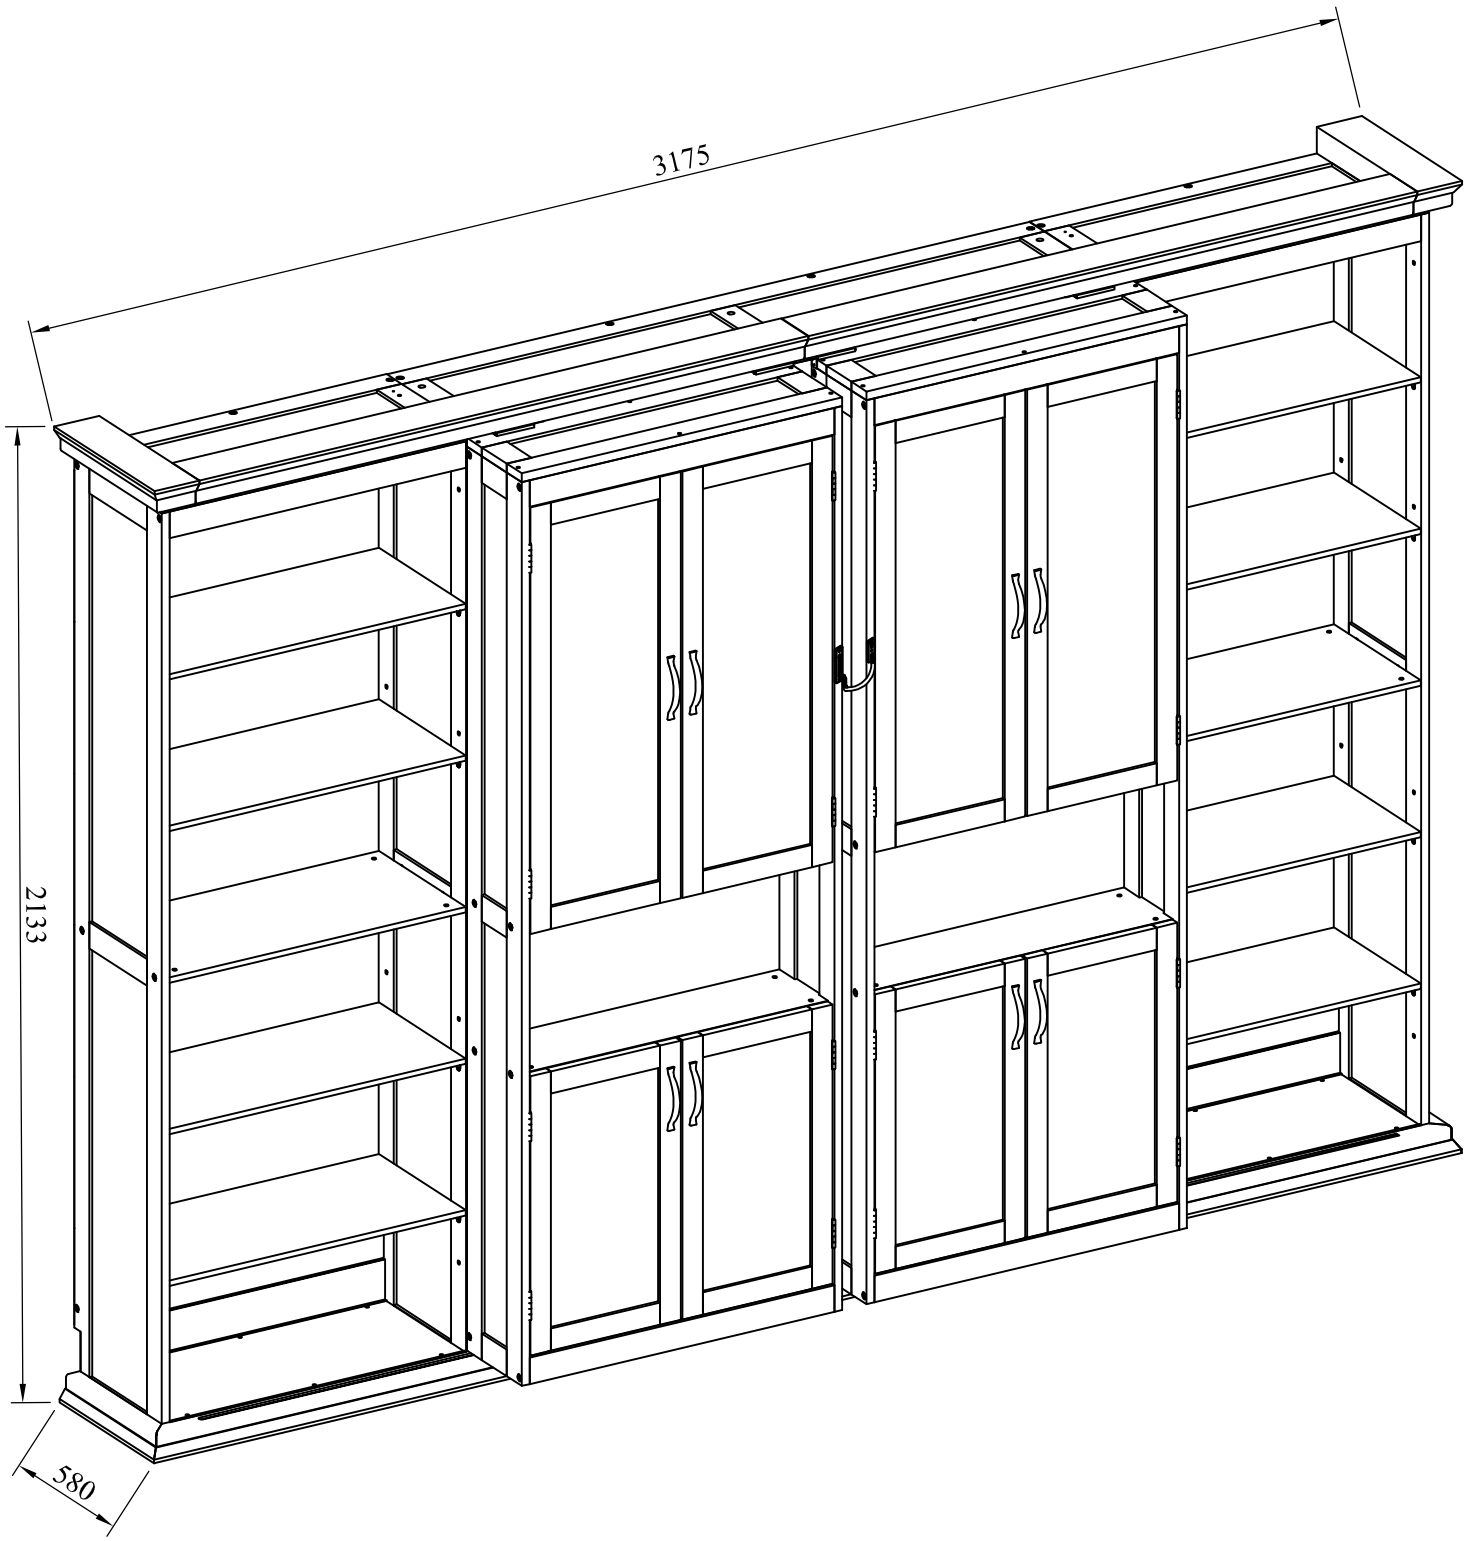
STYLE 1 : CLOSED CABINETS is FRONT of the MURPHY BED



SPECIFICATIONS USED ARE MM

Die verwendeten Spezifikationen sind in Millimetern angegeben.

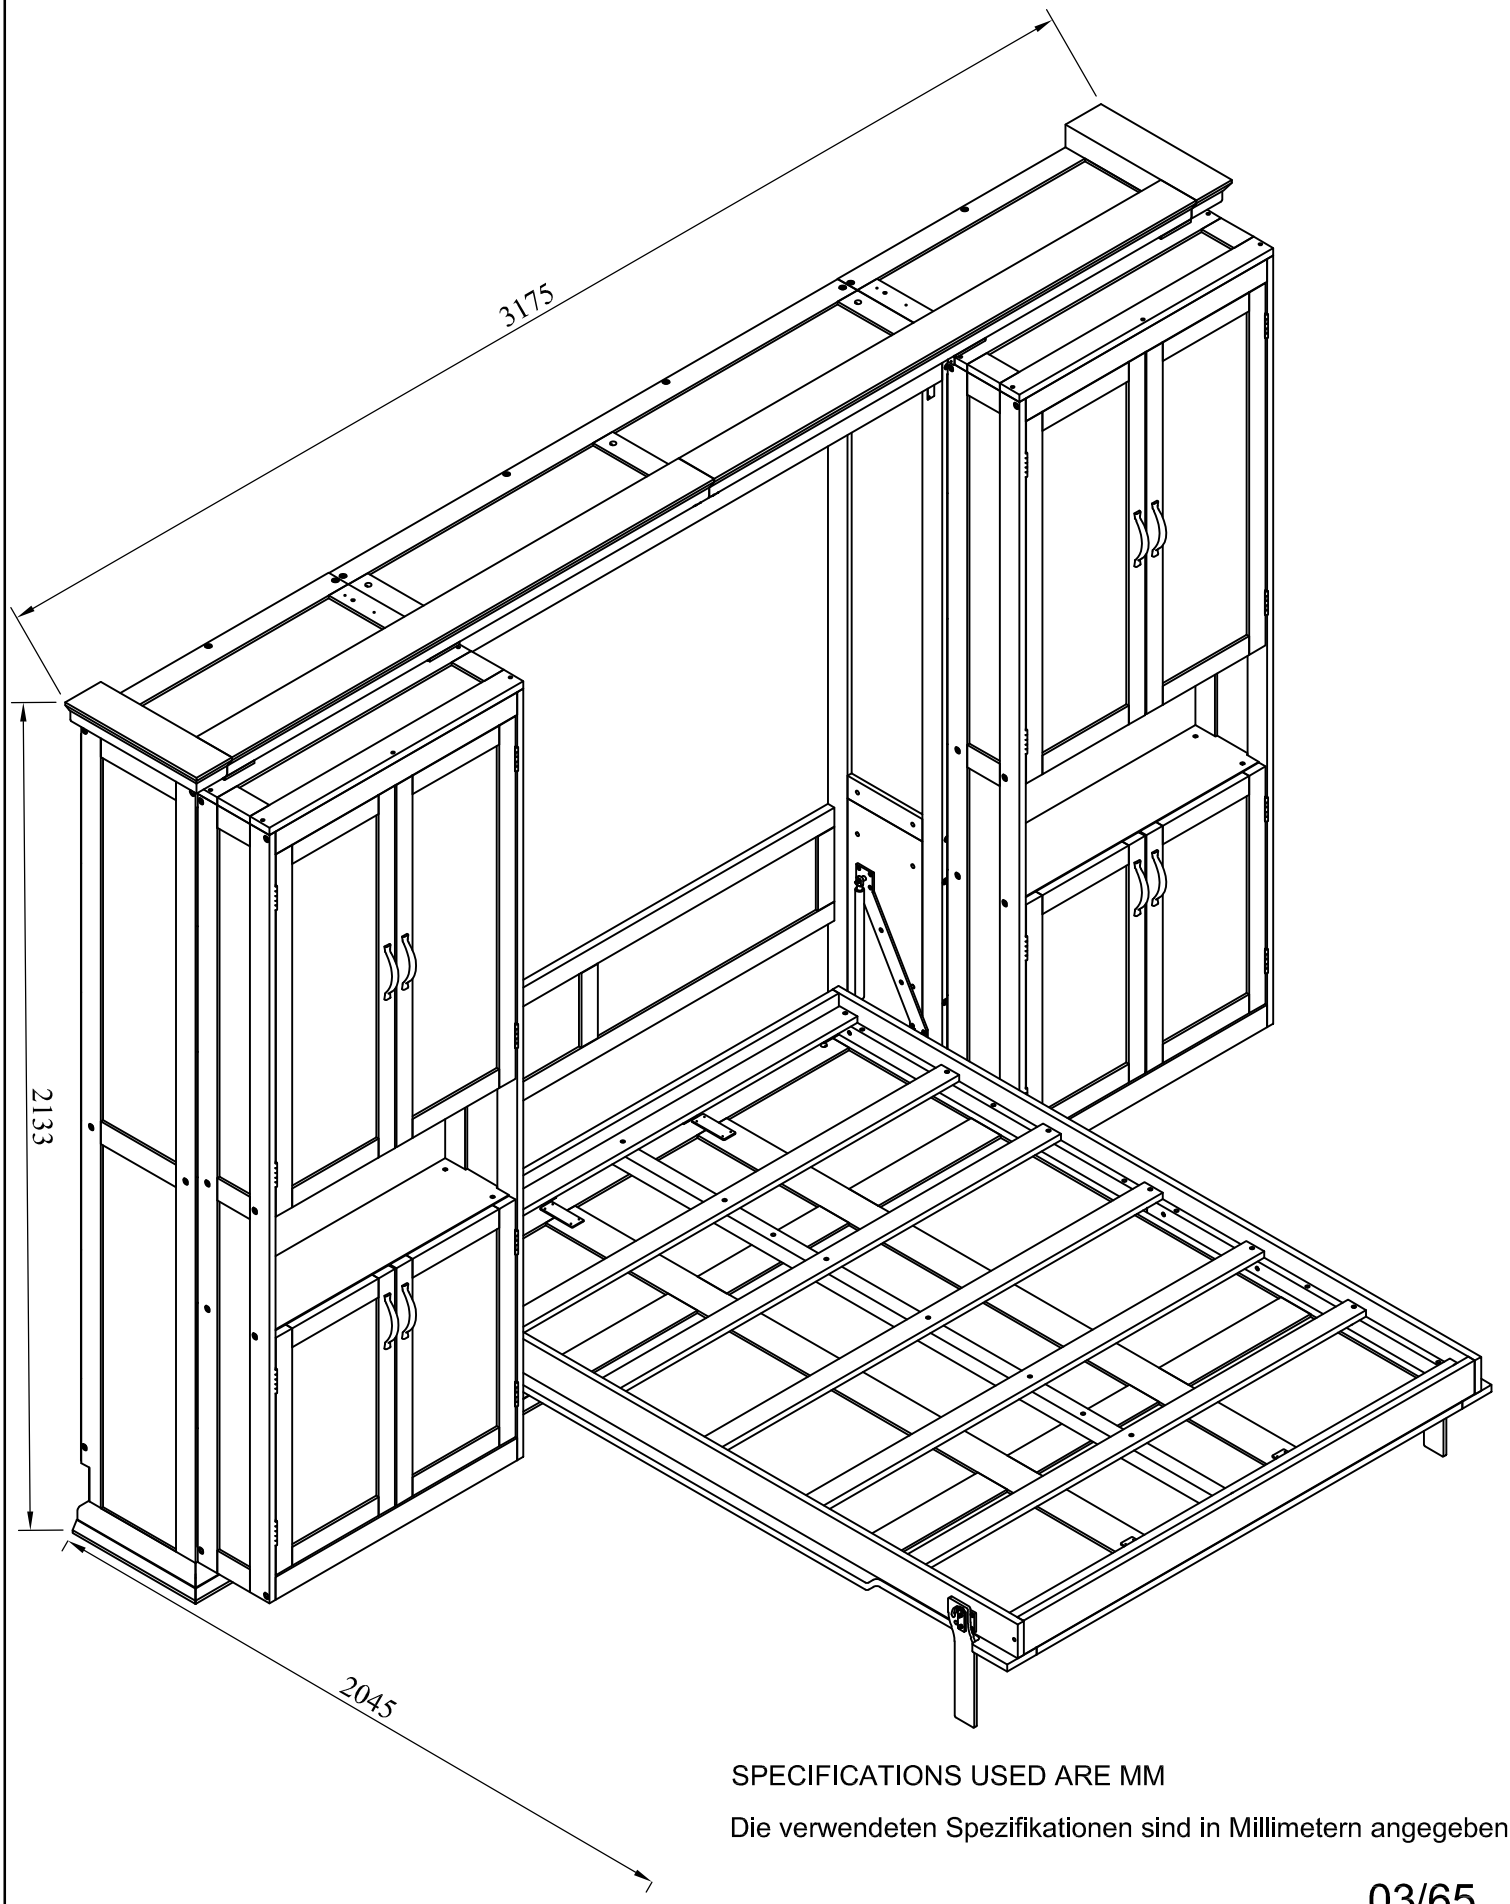STYLE 2 : CABINETS positioned to sides and with the Murphy bed opened




SPECIFICATIONS USED ARE MM

Die verwendeten Spezifikationen sind in Millimetern angegeben.


1- Determine the position of the bed in the room.

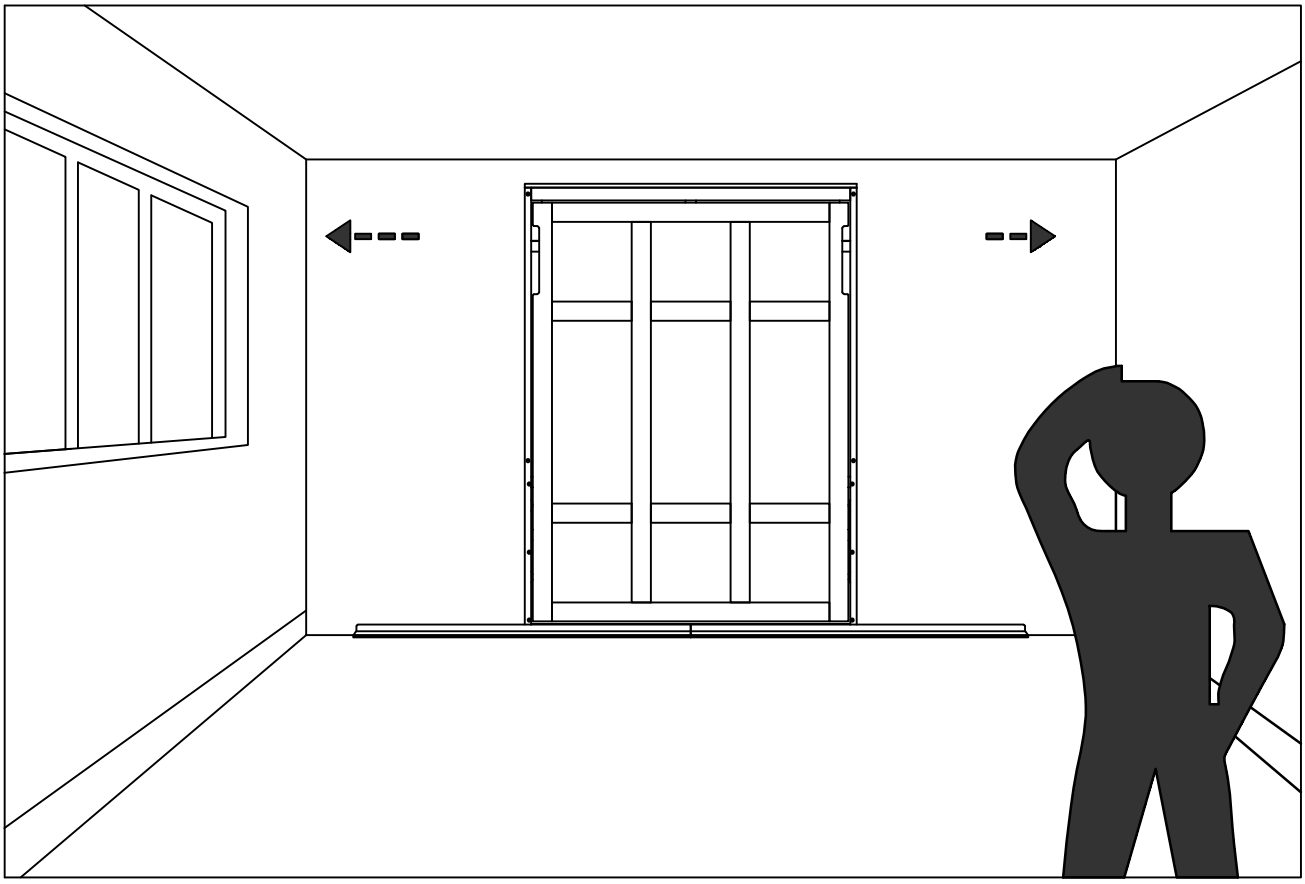1- Déterminez la position du lit dans la pièce




2- Put the bed back in its place. Please keep it vertical and horizontal.

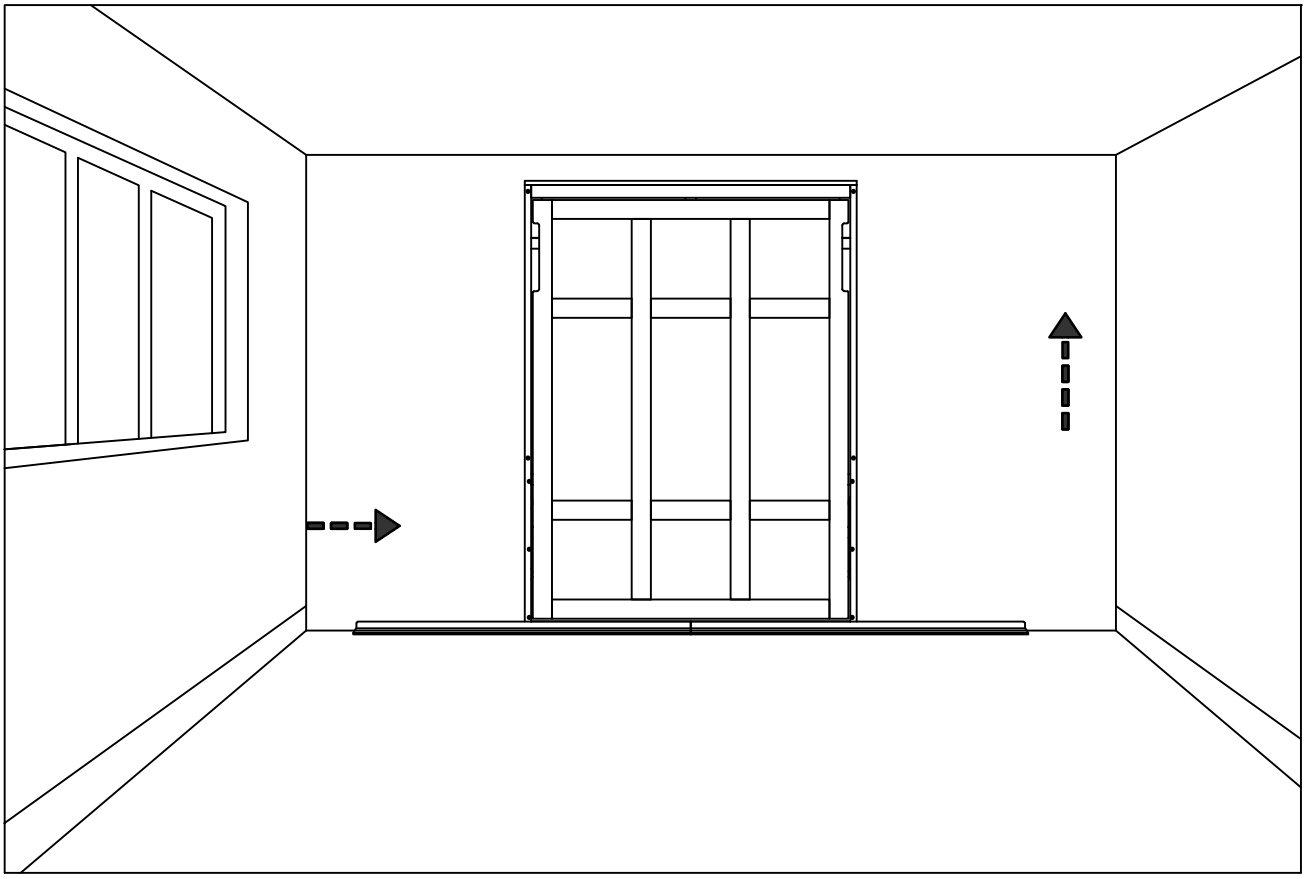2- Remettez le lit à sa place. Veuillez le garder vertical et horizontal.




Hardware option 1: FOR USE ON WOODEN FRAME WALLS

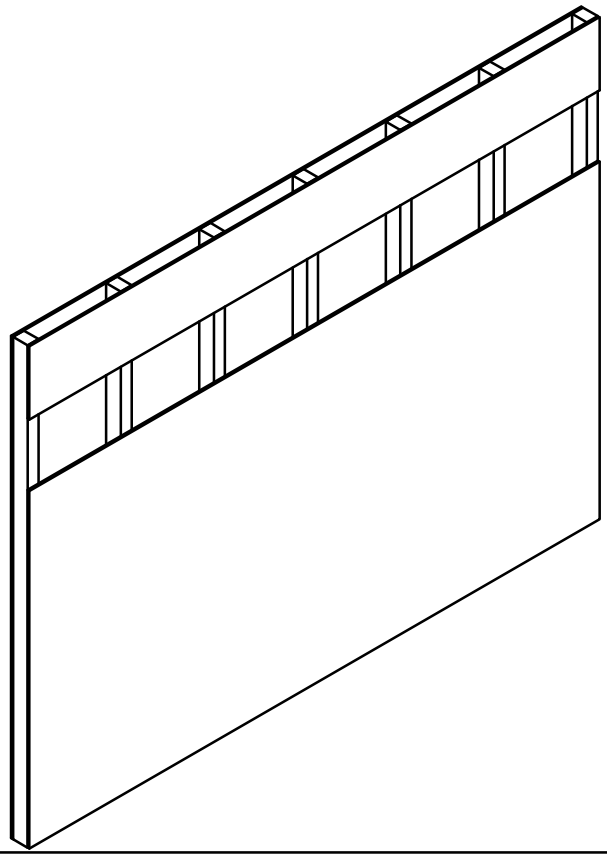ZUR VERWENDUNG AUF HOLZFACHWERKSWÄNDEN



Hardware option 1:

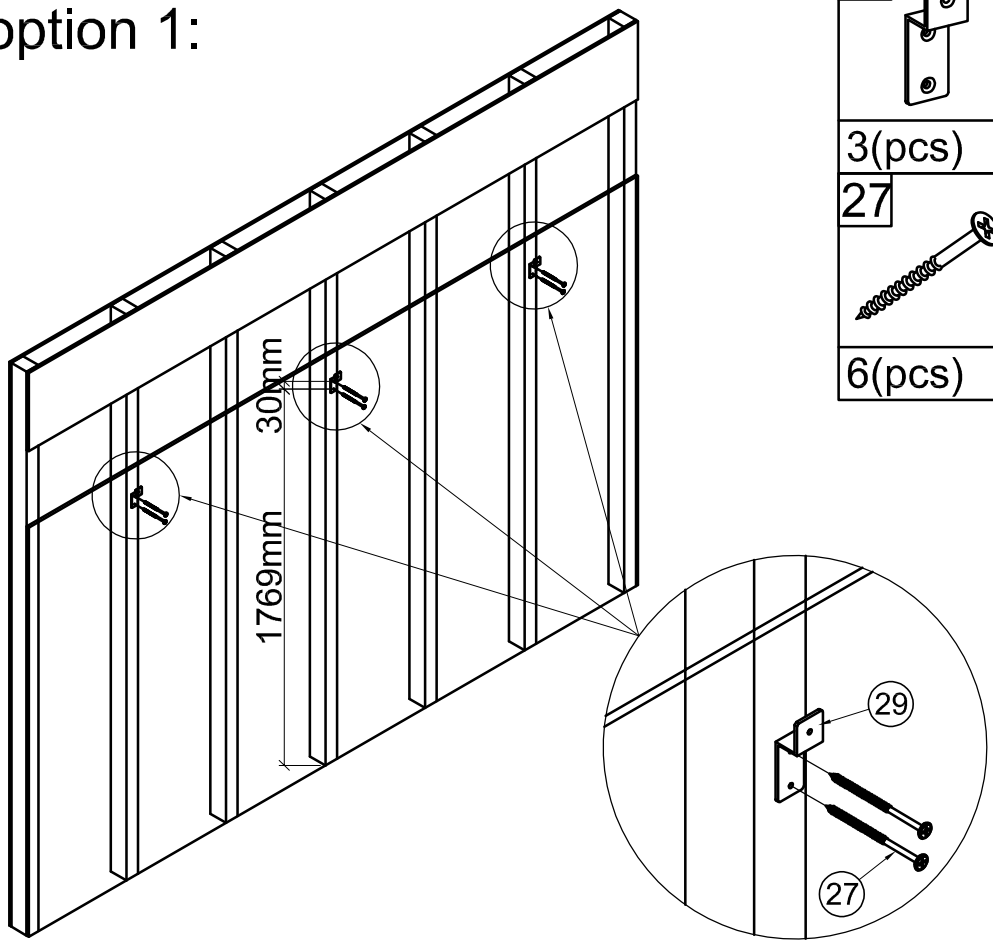

29

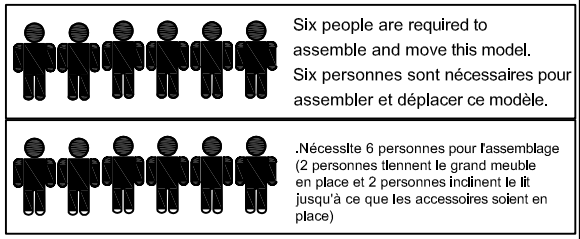
3(pcs)

27

6(pcs)

Raise the bed from its previously fixed position, press it against the wall and lower it (as shown).


Soulevez le lit de sa position précédemment fixée, appuyez-le contre le mur et abaissez-le (comme indiqué).



Six people are required to assemble and move this model.
Six personnes sont nécessaires pour assembler et déplacer ce modèle.

.Nécessite 6 personnes pour l'assemblage (2 personnes tiennent le grand meuble en place et 2 personnes inclinent le lit jusqu'à ce que les accessoires soient en place)


15



3(pcs)


Hardware option 1

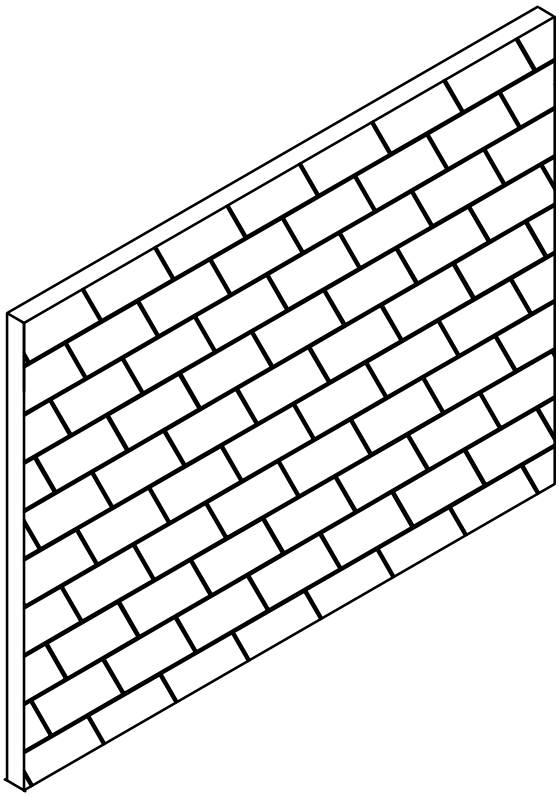Hardware option 2




Hardware option 2:

29



3(pcs)

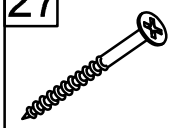27



6(pcs)

SAFETY & CAUTIONARY REMINDERs :

Murphy Beds are designed to be space saving and functional and creative. The styles and designs of Murphy Beds are not limited to just a Murphy Bed (Horizontally or Vertically mounted to the wall) but comes styled with Shelves and Cabinets and Drawers. It is the absolute responsibility that the Customer takes full responsibilities to ensure that :

a.) you are thoroughly familiar with the contents of this purchase;

b.) diligently read through the Instructions Manual below before engaging a Qualified Professional Contractor(s) for Installation(s);

b.) confer and consult a Qualified Professional Contractor(s) and Relevant Services ;

c.) keep child / children, elderly person(s), non-ambulatory person(s) and pet(s) at bay during and throughout the entire assembly until the Qualified Professional Contractor gives an ALL CLEAR to use the safely secured product.

d.) In the event that either your assessment and or that of your Qualified Professional Contractor, from a safety stand point, that needs added safety latches, hardware and or others, proactively add on such added Safety Latches and or Hardware;

e.) all actions must be heeded :

i.) in the use of RIGHT mattress size and weight;

ii.) heed ADULT USE ONLY Murphy Bed, unless it is a Murphy Bunk Bed - supervise the right age of the child to use the Bunk Beds;

iii.) heed to all relevant information provided here for Opening and Closing of your Murphy Bed, before & during & after use;

iv.) SECURE all Safety Latches provided when the Murphy Bed is NOT in use.

f.) Every Product has its lifespan and Every DIY Assembled product REQUIRES your diligence in self maintenance and or Qualified Professional Services in the recommended and not limited to the areas herebelow :

i.) frequent checks to ensure all parts are fully tightened, locked and secured ;

ii.) where relevant check the Pneumatic Pressure Hinges for maintenance and or repair and or replacement(s);

g.) Certain Styles of Murphy Beds, may require you to ensure that :

i.) At all times of OPENING, ALWAYS PUT UP ONE HAD TO HOLD UP the Murhpy Bed to ensure the Murphy Bed does not OPEN / FALL OUT UNEXPECTEDLY..

ii.) KEEP ACCESS TO MURPHY BED (bedroom and or use) CONTROLLED.

iii.) During Opening for Use and Closing after Use - have a partner nearby to assist.

iv.) During Opening and Closing of Murphy Bed - KEEP ALL : Child / Children and Elderlies and Non Ambulatory Person(s) at bay.

v.) Always supervise Children (in the case of Bunk Bed) when Using this Murphy Bed.

vi.) Wait for the Qualified Installer / Assembler to give the ALL CLEAR and OK before Using the Murphy Bed.

vii.)When NOT IN USE, keep your Murphy Bed Latched Up / Chained with the Safety Restraints that you have installed.

Montage Murphy Bed
Your Montage Murphy Bed is designed with a Foldaway Murphy Bed and accessorised with storage features and functions.

CAUTIONARY / REMINDER : This is NOT A CLOTHING STORAGE UNIT.
DO NOT USE THIS AS A CLOTHING STORAGE UNIT.

This Montage Murphy Bed has a 2 styles in one Murphy Bed feature whereby :

Phase I : The Bed Box mainframe, Murphy Bed and the Side Shelves Storage forms the "backbone" and is to be assembled to be half the unit. This UNIT MUST BE PERMANENTLY and SECURED ATTACHED to the Studs by your Qualified Professional Contractor.
&
Phase II : The Sliding Cabinets in front of the Bed and Storage Shelves.
For SAFETY, when the Murphy Bed is NOT in use, AT ALL TIMES. these 2 SIding Cabinets MUST BE slid to the MIDDLE of the entire frame and the Safety Chain latched on.

WARNING : To AVOID any incidents, FOR ALL SLIDE OPEN and or CLOSE of the Side Cabinets, and the OPENING AND CLOSING of the Murphy Bed, at all times conducted by an Adult.
Keep ALL CHILD / CHILDREN / ELDERLY PERSON(s) and or NON-AMBULATORY PERSON(s) and or PET(s) at bay.

IMPORTANT INFORMATION PACKAGE.

THIS INFORMATION PACKAGE CONTAINS WARNING AND PRODUCT SAFETY INFORMATION. DO NOT PROCEED WITHOUT REVIEWING THOROUGHLY.

A. WARNING LABELS.

Your purchased Murphy Bed is delivered to you with WARNING LABELS to constantly remind you to take and adopt Safety Measure throughout the entire assembly and mounting points of the Bed to the walls.

DO NOT REMOVE these labels.

These Warning Labels serve as a Reminder Tool for visiting friends and relatives when using the Murphy Bed to ensure Safety Precautions are taken.

! WARNING.

IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall.
For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.

Seek Certified Professional Consultant / Contractors for their Services to:
1.) DETERMINE the WALL Type in Your Home;
2.) PRECISE HARDWARE that suits to the Wall Type in Your Home;
3.) INSTALL / ATTACH of the Murphy Bed to the Wall in Your Home;
4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached.

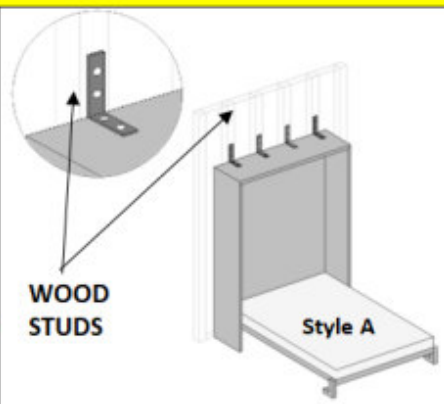
The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material.

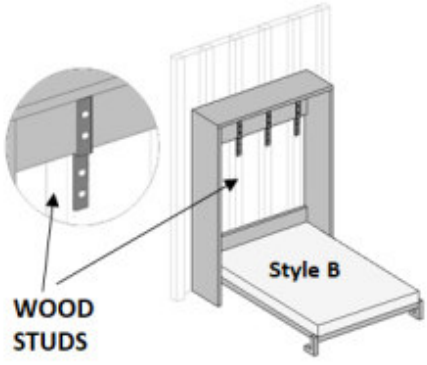
Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attchment of the Murphy Bed to the Wall.

FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.

SAFETY PRECAUTION :

1.) **MAXIMUM Mattress Weight** suited to your Murphy Bed **: __lbs (___kg);**
   MAXIMUM mattress thickness: __ inches (__ cm);
2.) **ENSURE ADULTS ONLY** throughout the entire assembly and attachment.
3.) **KEEP ALL Children, Non-Ambulatory persons and Pets** at bay during the entire assembly and attachment.






LINE ART for Reference only and **NOT DRAWN TO SCALE.**

CAUTION : Homes are renovated differently. There are CONCRETE walls and "hollow walls". Hollow walls are reinforced with STUDS of Wooden or Steel Materials. Seek advice from professionals.

Style A - VERTICAL Murphy Bed with SEALED/CLOSED Back board.

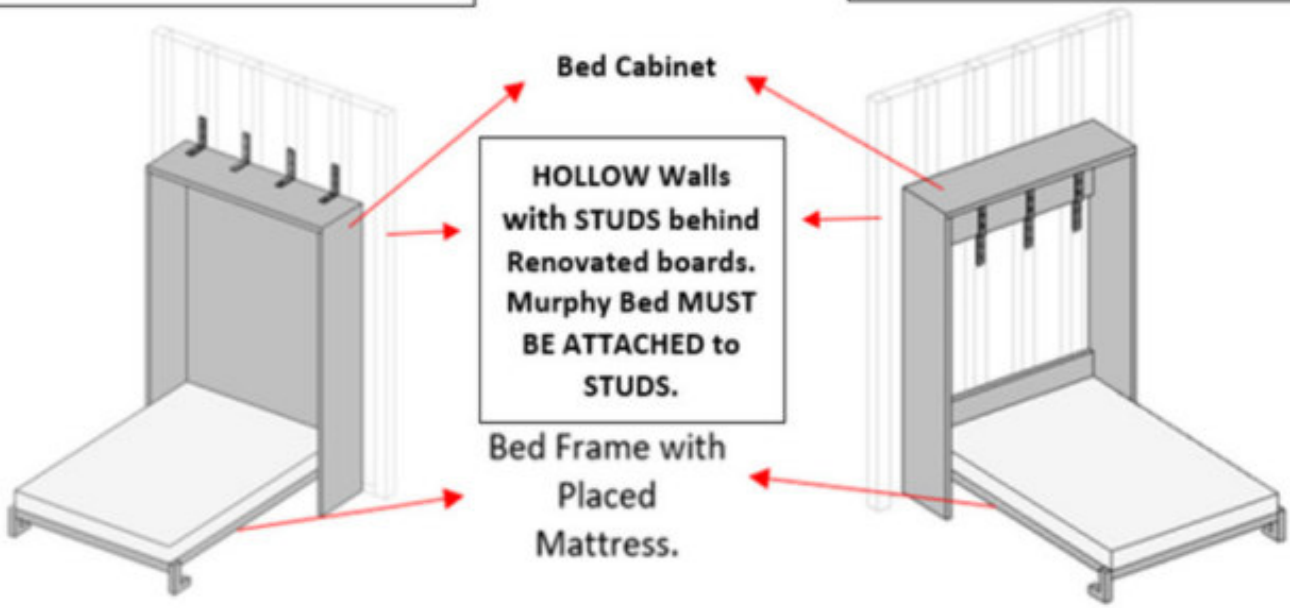Style B - VERTICAL Murphy Bed with OPEN STYLE Back board.



B.) SAFETY REMINDERS.

MARKINGS in WALL – WHERE TO ATTACH the MURPHY BED.

Irrespective of the wall type, whether **Solid Concrete Walls** OR **Decorative Walls with WOODEN Studs** OR **Decorative Walls with Metal Studs**, ensure that

a. **) you choose a professional installer who has a good understanding of the wall structure where the Murphy Bed is anchored, including the position of the wall studs and structural components in the case of a wood or metal structure.**
b. **) precise markings of the positions of the anchor points are to be made on the wall for easy identification during the Murphy Bed attachment to the wall.**
c. **) the relevant and appropriate Hardware with Metal Brackets are READY for this attachment and are within easy access for prompt and efficient attachment.**

This product requires Professional Consultation and Installation*.

* When you choose the professional installer, make sure to comply with all applicable laws, regulations and rules in the city, state or country where the Murphy Bed is installed.

To have your Murphy Bed fully assembled and to achieve its intended functionality – you **MUST READ** through this entire Assembly Instructions Manual before you start the assembly of the bed

1.) **There are numerous Safety Issues and Safety Precautionary Actions that you MUST KNOW before you start the Assembly.**

2.) **CAUTION - Failure to FOLLOW / ADHERE to the GUIDE, WARNING AND REMINDERS here, may result in serious / severe injuries or death.**

3.) **PRECAUTION : For the assembly, Adult Partners only, to assist in the entire assembly. Ensure 4 (four) to 6 (six) ABLE BODIED BODIED ADULT PARTNERS ONLY in the entire assembly and attachment of this Murphy Bed to the walls of your home.**

4.) **CAUTION : During the entire assembly process and attachment of the Murphy Bed to the walls of your home, Keep ALL Children, Non-Ambulatory Persons and Pets completely at bay.**

6.) SAFETY REMINDER on / to : Personal, Family Members and Pets. The Murphy Bed may be shipped to you in 3 to 5 packages and are HEAVY. Each carton holds many parts and components. Some of these components eg., bolts and screws are relatively small* in size.

***. During the assembly process, ensure that any misplaced bolts and nuts are picked up so that Children and or Pets do not play or ingest these.**

7.) This Murphy Bed is intended for ADULT USE ONLY.

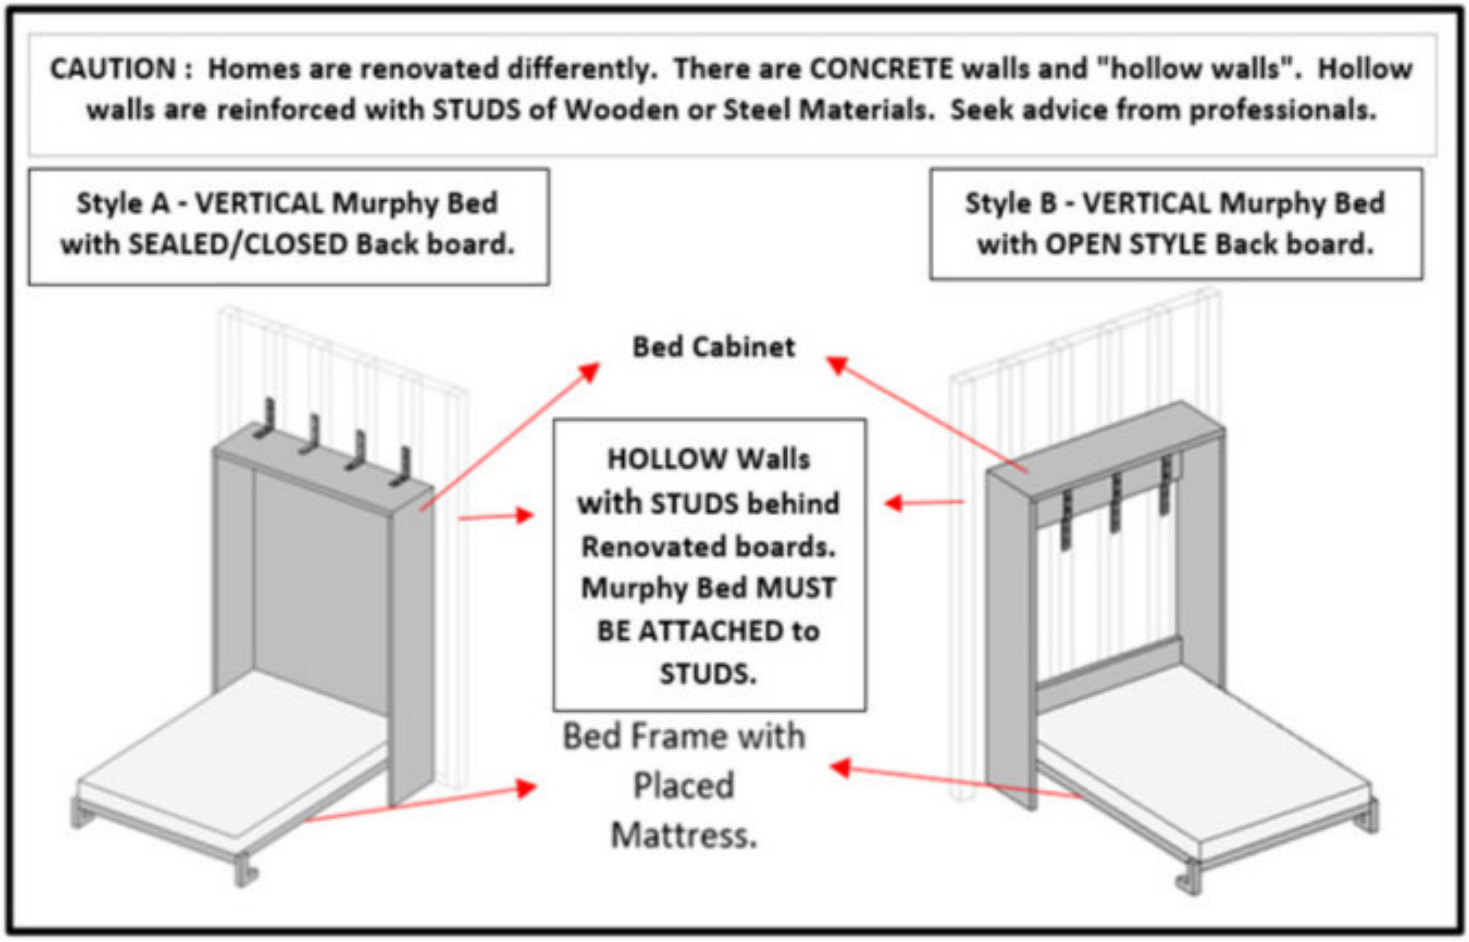
8.) This Murphy Bed is delivered to you pre-packed with Hardware - suitable for wood-framed walls renovated with WOOD STUDS ONLY.

9.) **Your Home's Wall Type** - Every home is renovated differently with different wall(s) type / finishes. Before you proceed to assemble your Murphy Bed :

a.) **SEEK and CONSULT Professional Services** to ascertain the wall type in the designated location where you intend to attach the Murphy Bed;
b.) **ENSURE** the Consultant-Contractor specifically **INFORMS** you of the **WALL TYPE** in the designated spot where you intend to attach the Murphy Bed.
c.) **ENSURE** the Consultant **INFORMS** you specifically on the matching and relevant Hardware / Brackets to secure and attach the Murphy Bed to the wall.

10.) **WARNING – YOU MUST HEED THE INSTRUCTIONS** given by your appointed Consultant-Contractor on the :

a.) Mounting Hardware Type that suits the wall(s) type - where / when it is NOT WOOD STUDS, the **pre-packed Screws for Wood Stud Walls would not match/ not fit.**
b.) Number of Mounting Points for the Murphy Bed to the Wall.



11.) This Murphy Bed is designed for home use and not intended for commercial use.

12.) This Murphy Bed is not intended to be moved, modified, uninstalled or disassembled once professionally installed.

C.) MOUNTING INFO & HARDWARE.

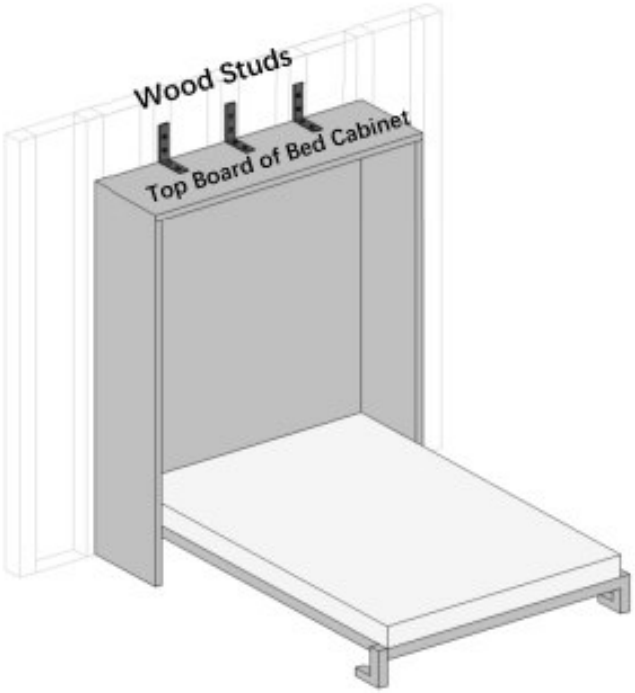
1.) REMINDERS :

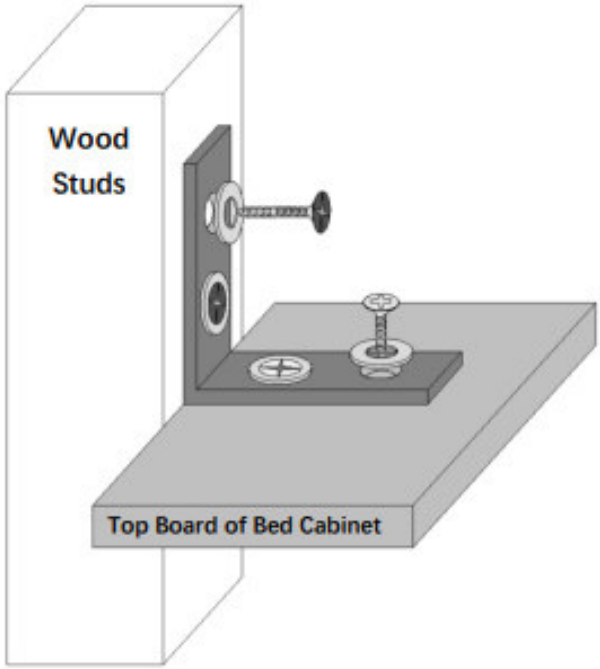
a.) **In the event, that this pre-packed Screws Set does not match to the walls in your home – DO NOT USE / DISCARD these hardware.**
b.) **ADHERE to the Professional Consultant-Contractor** instructions and information on the **RELEVANT** mounting hardware that suits your wall.
c.) Procurement of these **RELEVANT** hardware is an arrangement made between your Consultant-Contactor and you.

2.) A step ladder (not provided) is needed to attach the L-Brackets to the wall, at the Top of the Murphy Bed. **DO NOT** lean against the Top of the Murphy Bed, it may cause sagging.


Murphy Bed Style A


L-Bracket Fixture to Wood Studs





Z-Bracket Fixture to Wood Studs

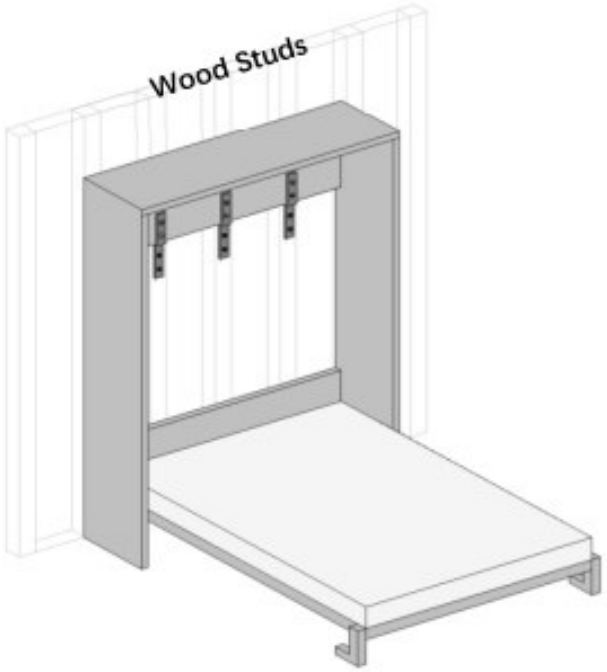

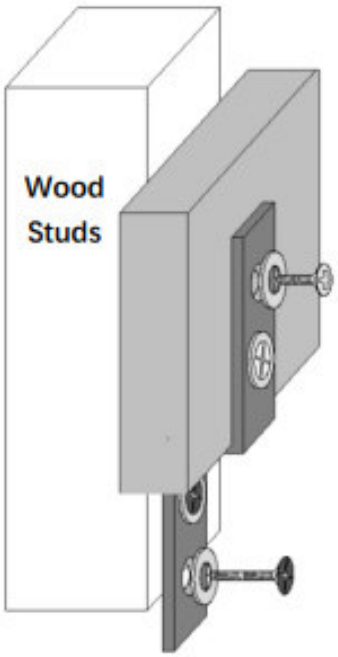

D.) IDENTIFICATION of TOOLS and ATTACHMENT SKILL.

The parts and components to assemble the Bed Frame are stated in the Assembly Instructions. Follow the instructions with attention.

For an efficient assembly, after opening the cartons shipped to you :

a.) open and layout all parts and components in sequence;
b.) account for every part, hardware and component;
c.) then lay out the parts close to each other;

Assemble and tighten each bolt / nut / screw up to 80% to allow for the Bed Frame and Bed Cabinet (all other relevant styles of shelves and or drawers) to be HELD together.

Upon FINAL assembly where all the parts and components are FITTED precisely, in a sequential manner – proceed to tighten each bolt & nut & screw gradually.

CAUTION :

1.) **The METAL PLATES to the sides of the Side Rails – MUST BE FULLY and SECURELY ATTACHED to the SIDE RAILS.**
2.) **The Piston L-Brackets that are attached to the INNER WALL of the Bed Cabinet – MUST BE FULLY and SECURELY TIED to these Inner Walls.**
3.) **These Metal Plates and the L-Brackets – are the components that are holding the Pistons that allow your Bed to "travel" to an OPEN or CLOSED position.**
4.) **Frequent Inspections of these Metal Plates / Brackets and Pistons Bolts, up to Once a Month – to ascertain these DO NOT BECOME LOOSE. For if these bolts to the Bed Frame and or Bed Cabinet or Pistons are loose, may cause the BED FRAME to become DISLODGED and cause injuries.**

REMINDER : NEVER FULLY TIGTHEN any screw / nut or bolt in one session. If you DO TIGHTEN the hardware all the way into the core of the wood, this cause the parts to become skewed that would impact other parts of the item not being able to be aligned to its mounting points for assembly.

E. ALL ASSEMBLY WORKS REQUIRES A TEAM OF NO LESS THAN 4 ADULTS.

Reminder : Per above info, the cartons and products are heavy – therefore exercise CAUTION at all times and ENSURE YOUR TEAM OF 4 minimum for the entire ASSEMBLY.

F.) ASSEMBLY of BED FRAME.

Identify all parts and components for the Bed Frame.
Assemble the Bed Frame according to the Assembly Instructions.

Upon completion of assembly of the Bed Frame, make a final inspection that all joints and parts are fully and securely attached.

Then place this assembled Bed Frame horizontally flat on the ground, some 10feet away, so as to allow room for the assembly of the Bed Cabinet.

G.) ASSEMBLY OF BED CABINET.

Identify all parts and components for the Bed Cabinet.
Assemble the Bed Cabinet according to the Assembly Instructions.

Upon the completion assembly of the Bed Cabinet, make a final inspection that all joints and parts are fully and securely attached.

CLEAR all debris in the area where your Murphy Bed is going to be attached to the wall.

Move this FULLY ASSEMBLED BED CABINET and position this BED CABINET some 2feet to 3 feet away from the designated Wall, where you have previously made markings.

SAFETY REMINDER – The Cabinet is NOT ATTACHED TO THE WALL, YET. From here on - YOU MUST HAVE 2 ADULT to HOLD and STABILISE this BED CABINET, to prevent the Bed Cabinet from TIPPING OVER.

H. ATTACHMENT OF BED FRAME TO BED CABINET.

Safety Reminder: DO ENSURE the 2 able bodied adult persons holding the Bed Cabinet are IN POSITION ALL THE TIME
The other 2 adults shall lift and carry the Bed Frame and attach to the L-Bracket – at the inner walls of the Bed Cabinet.

Thereafter, gently LIFT THE Bed Frame to a CLOSED POSITION.

I.) ATTACHMENT OF PISTONS TO HOLD &

SUPPORT BED CABINET TO BED FRAME.

The Murphy Bed, is now still placed at 2feet to 3feet, from the wall.

The 2 adults, upon attachment the Bed Frame to the Bed Cabinet, shall get the Pistons, and move to the back of the Murphy Bed. Both persons shall - then attach the Pistons to the Bed Frame and Bed Cabinet.

You may need to – LIGHTLY slide forward-backward to adjust and create gap space so as to enable the Pistons to be hooked to both ends of the hanging bolts in the Inner Wall of the L-BRACKET

Fully Secure and Tighten these Bolts at each end of the Pistons.

J.) Attachment of Safety Latches.

Upon completion of Step I above, ensure the entire structure of Bed Frame to Cabinet is fully and securely attached as ONE UNIT – affix the Safety Latches.

These Latches are to be reachable by Adults Only. Thus, the minimum height shall be no less than 5feet (1.5m) from ground.

K.) POSITIONING THE MURPHY BED INTO ITS FINAL POSITION.

At this juncture, the Murphy Bed is ASSEMBLED BUT NOT AS A FULL & COMPLETE piece of furniture AND NOT FUNCTIONAL AS A BED YET, as it is NOT SECURED TO THE WALL.

DO NOT ATTEMPT TO OPEN THE MURPHY BED AND OR TEST SLEEP AND OR LIE-INTO the Murphy Bed.

ALL 4 (four) adults shall now move the entire Murphy Bed to the FINAL DESIGNATED Position, matching to the previously marked "SCREW-IN" positions in the walls.

L) ATTACHMENT OF MURPHY BED TO WALL.

With the Murphy Bed now in its final designated spot, 2 adult persons shall continue to hold down the entire Murphy Bed.

REMINDER : FOLLOW the INSTRUCTIONS from your Professional Consultant / Contractor.

Position the Ladder (where necessary) and FULLY & SECURELY turn in the BOLTS or SCREWS into the CONCRETE WALL or WOODEN STUDS or STEEL STUDS.

SEQ	Bed Description	Bed Size	Details.
1	Single/Twin(XL)	~38*75/80~ inches	Attach at least 2 pieces of L or Z Hardware onto the Wall or Studs;
2	Full	54*75inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
3	Queen	60*80inches	Install at least 3 pieces of L or Z Hardware onto the Wall or Studs;
4	King	76*80inches	Install at least 4 pieces of L or Z Hardware onto the Wall or Studs;
5	Other Bed Size		Other Bed Sizes - seek advice from your Contractor

Recommended Mattress weight (55)lb or (25)kg / Recommended Mattress thickness (8)in or (20.3)cm - Your Murphy Bed is made having taken into consideration the Bed Frame Weight and Mattress weight to pair with the Pistons Newton Force.

Therefore, load your bed with the RECOMMENDED MATTRESS Weights, Size and Thickness as stated here in the assembly instructions.

DO NOT LOAD any heavier and or LARGER and or LIGHTER Mattress than what is recommended here.

M.) MATTRESS PLACEMENT.

Only after the Murphy Bed is FULLY SECURED to the wall, the 2 adult persons who are holding down the entire Murphy Bed, can now be released for this action.

Have 1 to 2 persons – place equal strengths to the handles and gently and securely, PULL DOWN the Bed Frame until the Bed Frame is horizontally and level to the ground.

Have the other 2 persons – carry and place the Mattress (**within the recommended weight** and **thickness)** and gently place the Mattress on to the Bed Frame.

N) PISTON NEWTON-LOAD STRENGTH.

You are hereby reminded that when the BED FRAME is EMPTY OF MATTRESS, the Bed Frame may NEED a STRONGER force to be pulled down before you can place the Mattress.

This RESISTANCE to be PULLED DOWN is a normal characteristics of the Pistons Newton-Load force is “in action”.

O) BED STRAP – GUIDE STRAP

Your Murphy Bed may or may not come equipped with a Bed Strap.

This Bed Strap serves as a GUIDE STRAP to help you lift the Bed Frame some 6 inches or so off its resting position. Then use both hands to FULLY LIFT HOIST the Bed Frame to its closing position.

SAFETY REMINDER :

1. **) <u>DO NOT USE THE BED STRAP</u> to PULL DOWN TO OPEN the BED FRAME from its CLOSED POSITION.**
2. **) DO NOT USE THE BED STRAP to PULL-LIFT-HOIST the BED FRAME from the OPENED-HORIZONTAL position, to the CLOSED POSITION.**

Both the above may cause injury and or unnecessary strain to your arm(s).

<u>P.) USING YOUR MURPHY BED.</u>

For EVERY USE – exercising Safety Precautionary Measures to ensure the safety of your family members and pets **are** IMPORTANT.

Therefore, PRIOR TO OPENING / PRIOR TO CLOSING OF YOUR MURPHY BED - Make sure all Children / Non Ambulatory Persons and Pets are at bay.

<u>KEEP CHILDREN and NON-AMBULATORY persons from Unlatching the Safety Latches.</u>

<u>Q.) CAUTION : DO NOT BE DISTRACTED During EVERY OPENING and CLOSING of your Murphy Bed.</u>

Every time you Pull to **OPEN** the Murphy Bed from its closed position OR **Lift-Pull to CLOSE** the Murphy Bed to stow it into the Bed Cabinet -

- give these actions your focused and dedicated attention.
- **DURING EVERY OPENING and CLOSING of your Murphy Bed** - always ensure you have an Adult Partner close by for added assistance, where necessary.
- **DO NOT OVER EXERT ADDED FORCE to OPEN the Bed or to CLOSE the Bedframe**. For if you do, the resistance of the Piston will only make it harder for you to complete the task.
- **TO CLOSE the Murphy Bed** : depending on your height – stand some 6inches to 10inches away from the FootBoard edge. Use both your hands and place both hands at about equal distance from the middle of the Bed Frame, spaced at 2 to 3 feet between your hands - GENTLY LIFT-PULL to Close your Murphy Bed.
- **TO OPEN the Murphy Bed** : using equal force – **place your hands to the installed grab handle** and GENTLY PULL towards you to Open. **As you pull Open the Murphy Bed – proceed to move backwards, slowly and steadily, so as to give way to the Murphy Bed's OPEN Position.**

- During **EVERY OPENING or CLOSING** of the Murphy Bed - at about your hip level -

you may find that you need to rotate your hand / wrist - take caution here to prevent injury.

- During EVERY OPENING and CLOSING, keep Children and Pets and Non Ambulatory Persons at bay.
- **NEVER** allow your children to treat this Murphy Bed as a Hide and Seek place of fun or jump on the bed.
- **Care & Maintenance** - Depending on the frequency of use of your Murphy Bed, it is recommended that you take precautionary Care and Maintenance. It is advisable to conduct NO LESS THAN 2 to 3 checks annually on these mounting points & pistons to ensure that these are securely bolted. Where necessary, use a vacuum cleaner to clear all dust and then wipe down with a damp cloth, then proceed with your maintenance work.

- Whenever NOT in use and after the Murphy Bed has been LIFTED and stowed in its **CLOSED POSITION - ALWAYS LATCH UP**.

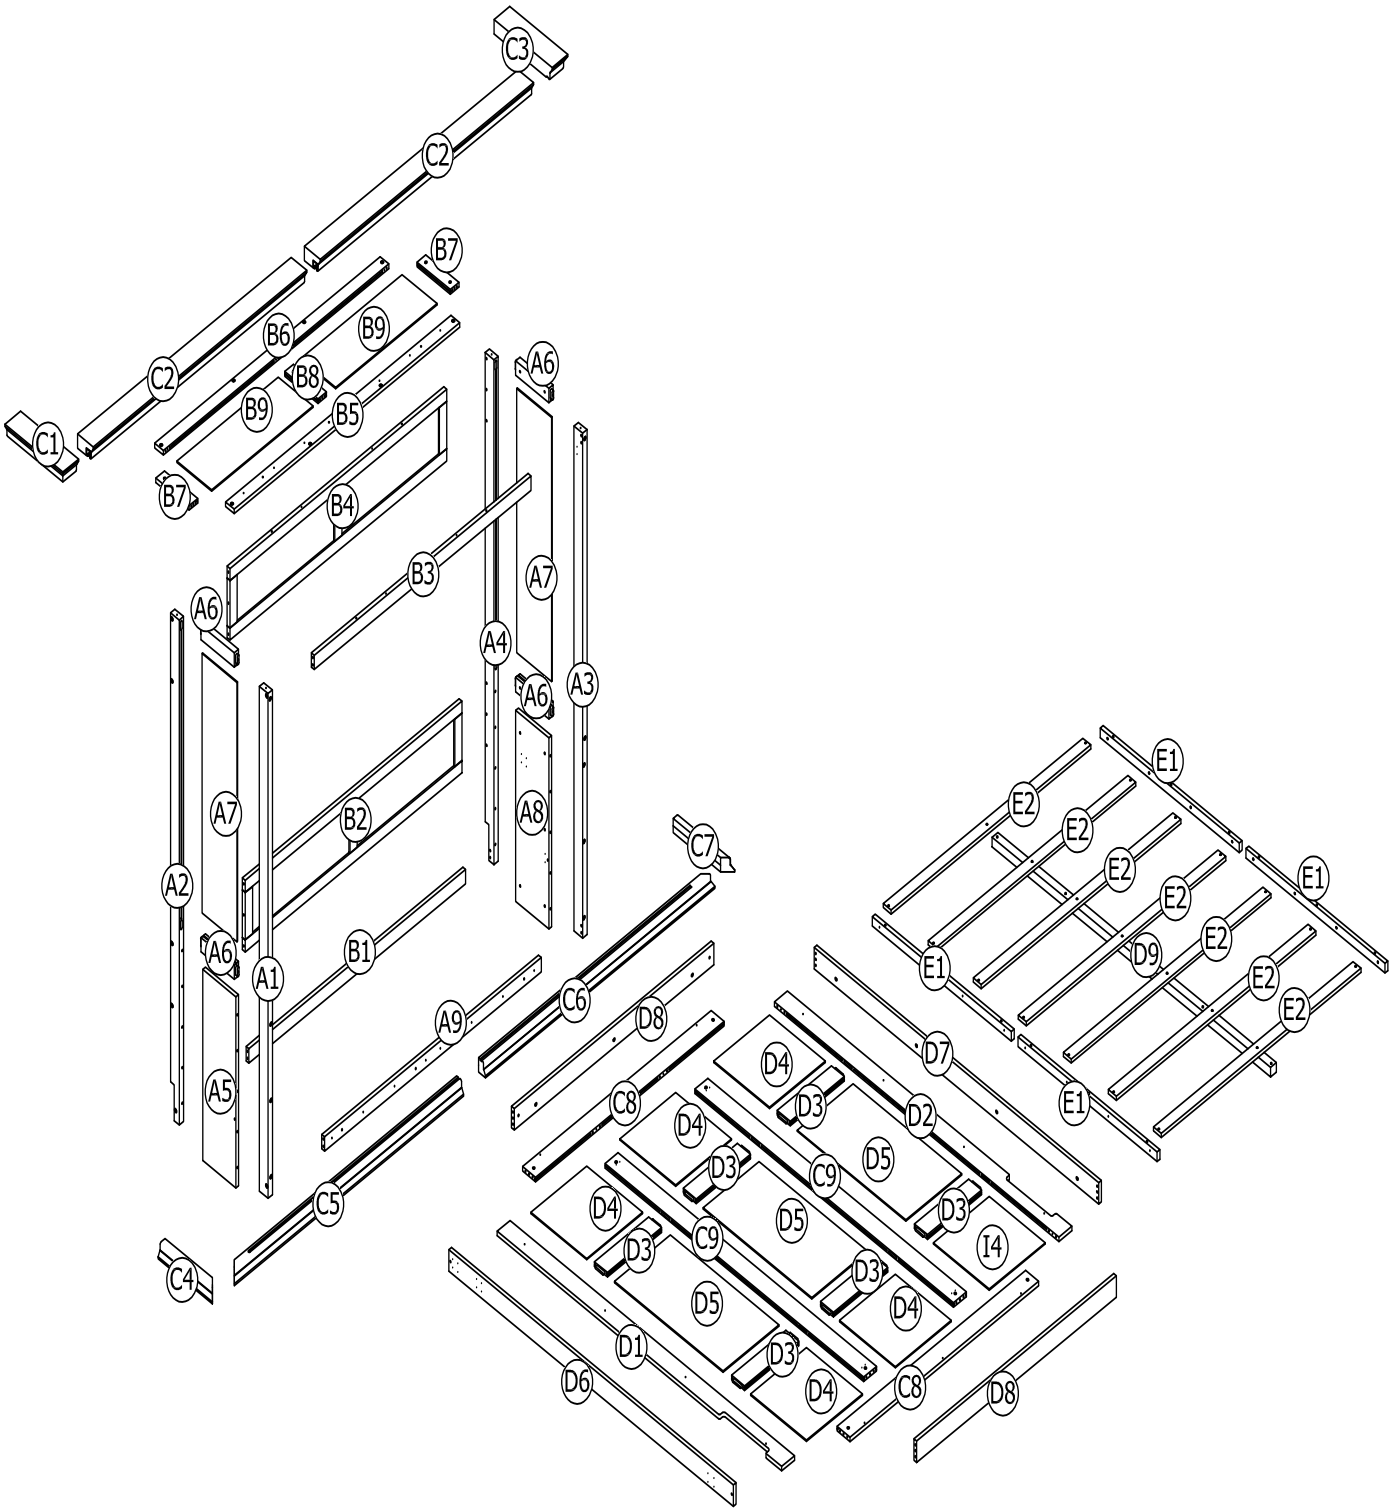
Frequently Asked Questions.
Malfunctioned Pistons.

How do you know when the Murphy Bed's Piston has malfunctioned?
It would be quite evident in that :


a. **) the Bed Frame may become LOPSIDED and**
b. **) the Lift-PULL force to CLOSE may be "heavier" than before.**

IMMEDIATELY - STOP USING YOUR MURPHY BED.
SEEK and CONSULT professional maintenance service to ascertain the problem and repair and or have the pistons changed.






















ASSEMBLY INSTRUCTION
INSTRUCTIONS DEMONTAGE









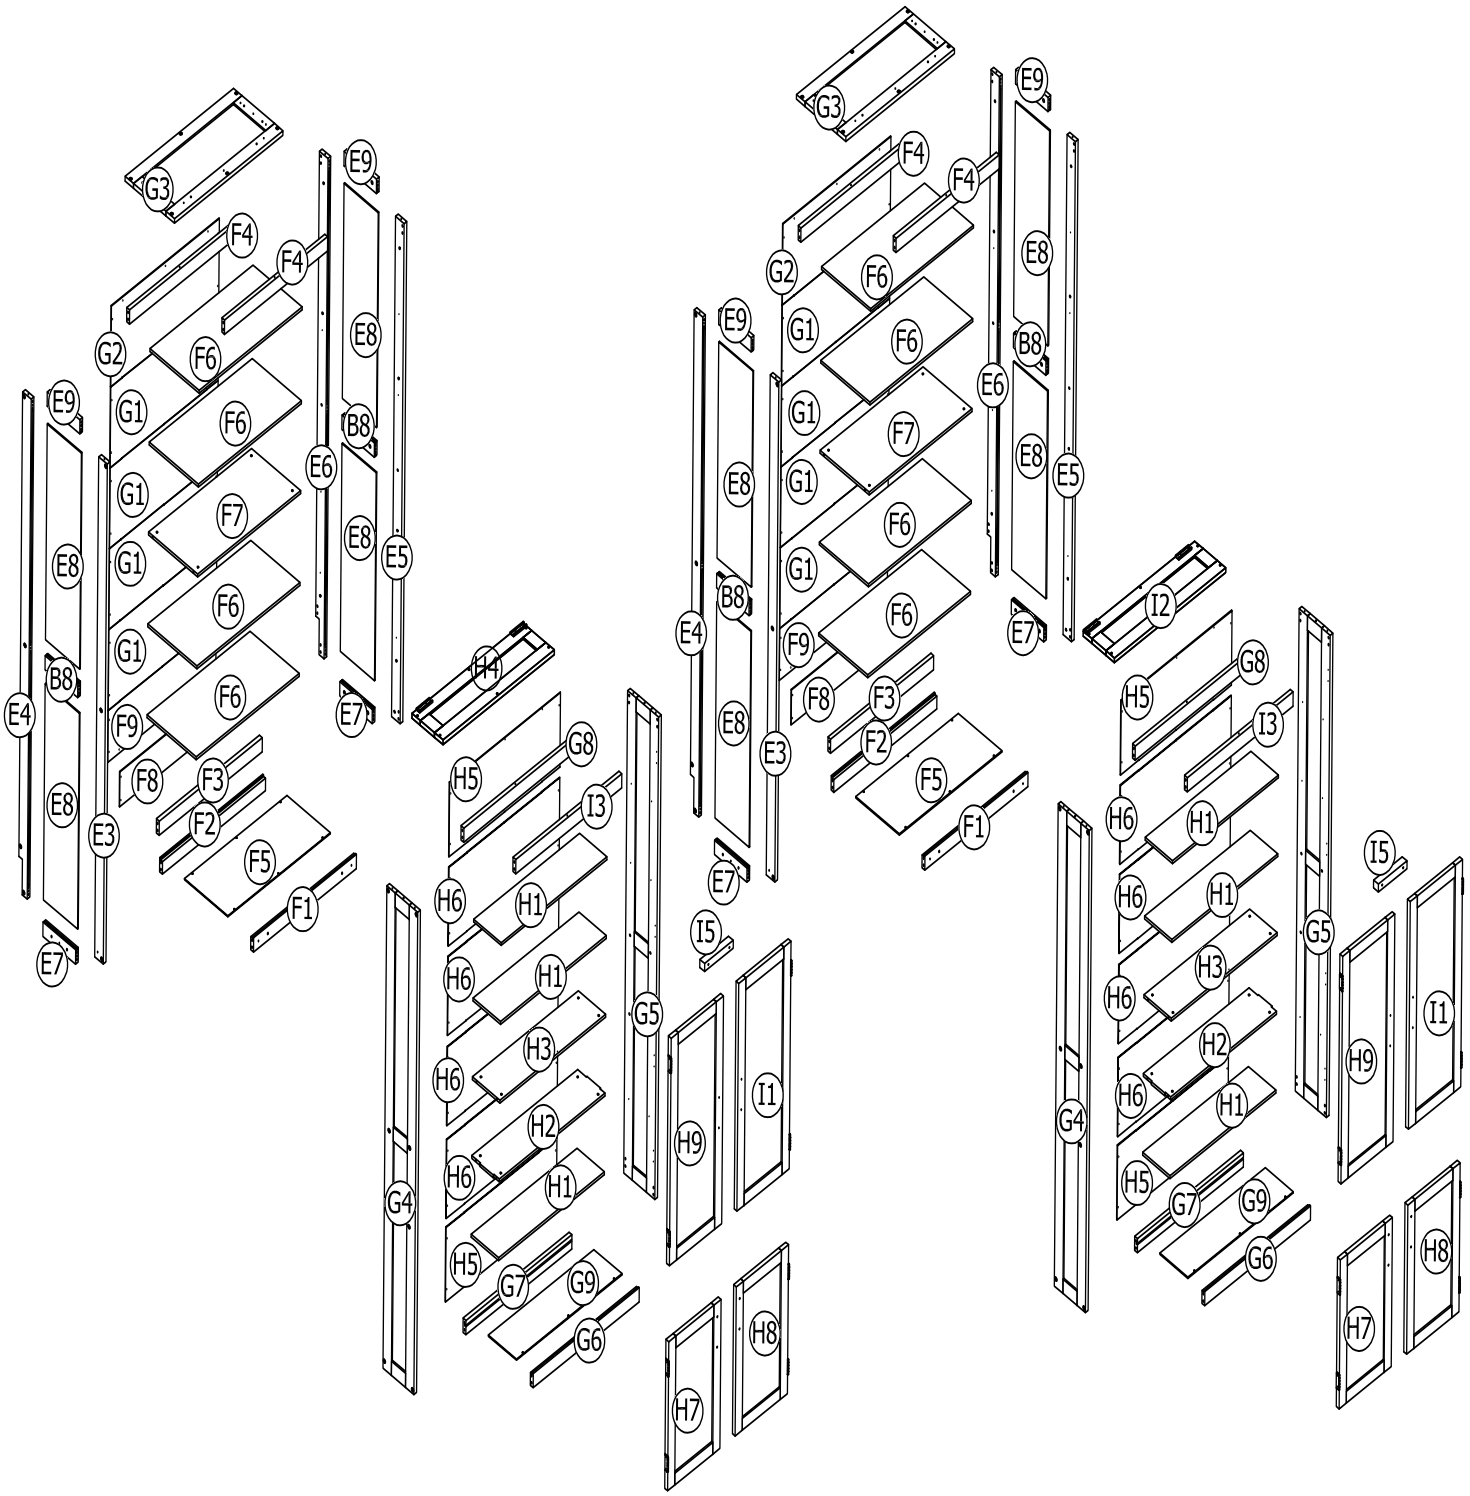
ASSEMBLY INSTRUCTION
INSTRUCTIONS DEMONTAGE



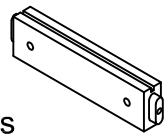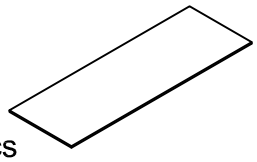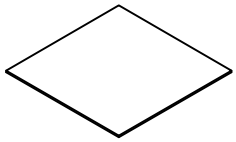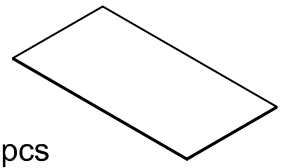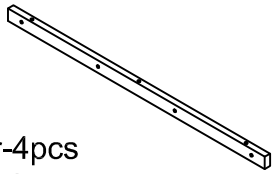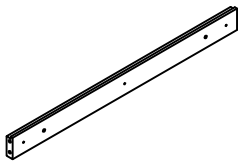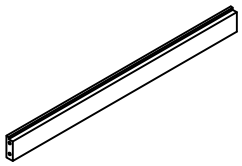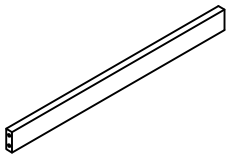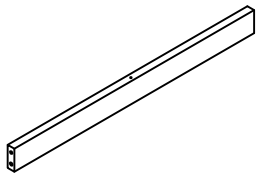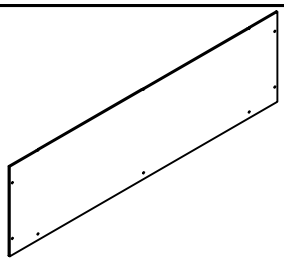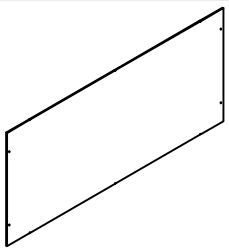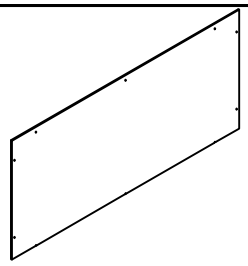
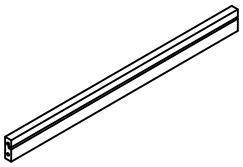
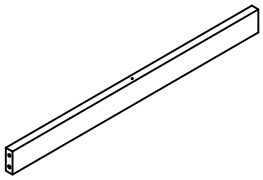
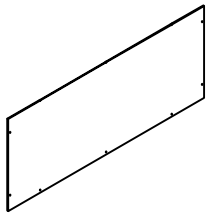
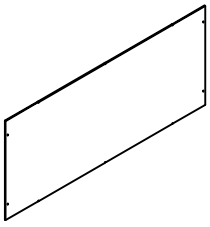




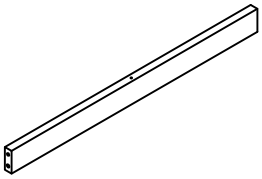
Part List & Hardware List
Liste des pièces et liste du matériel

A6  WoodBar-4pcs Barres de bois	B9  Panel-2pcs Planche	D4  Panel-5pcs Planche
D5  Panel-3pcs Planche	E1  WoodBar-4pcs Barres de bois	F1  WoodBar-2pcs Barres de bois
F2  WoodBar-2pcs Barres de bois	F3  WoodBar-2pcs Barres de bois	F4  WoodBar-4pcs Barres de bois
F9  Panel-2pcs Planche	G1  Panel-8pcs Planche	G2  Panel-2pcs Planche
G7  WoodBar-2pcs Barres de bois	G8  WoodBar-2pcs Barres de bois	H5  Panel-4pcs Planche
H6  Panel-8pcs Planche	H7  Panel-2pcs Planche	H8  Panel-2pcs Planche
H9  Panel-2pcs Planche	I1  Panel-2pcs Planche	I3  WoodBar-2pcs Barres de bois

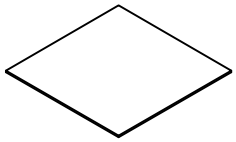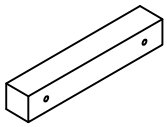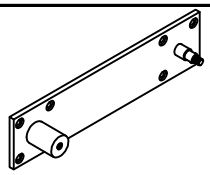

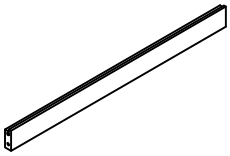
Part List & Hardware List
Liste des pièces et liste du matériel

I4  Panel-1pc Planche	I5  WoodBar-2pcs Barres de bois	I6  Metal corner link-2pcs Lien d'angle métallique
I7  Metal corner link-1pc Lien d'angle métallique	I8  Metal corner link-1pc Lien d'angle métallique	I9  Piston Steam-2pcs Vapeur de piston
G6  WoodBar-2pcs Barres de bois		






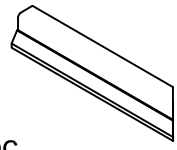
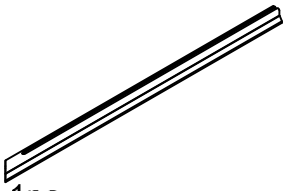
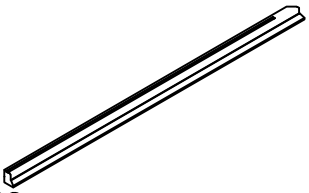
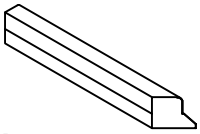
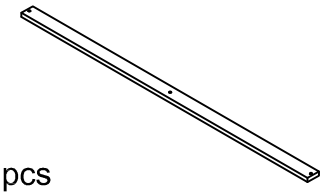




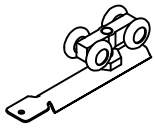
Part List
Liste des pièces

A1  Leg-1pc Jambe	A2  Leg-1pc Jambe	A3  Leg-1pc Jambe
A4  Leg-1pc Jambe	C4  WoodBar-1pc Barres de bois	C5  WoodBar-1pc Barres de bois
C6  WoodBar-1pc Barres de bois	C7  WoodBar-1pc Barres de bois	E2  Slats-7pcs Lattes
E3  Leg-2pcs Jambe	E4  Leg-2pcs Jambe	E5  Leg-2pcs Jambe
E6  Leg-2pcs Jambe	J1  Metal leg-1pc Pied métallique	J2  Metal leg-1pc Pied métallique
J4  End cap-2pcs Embout	J5  Sliding wheel-2pcs roue coulissante	J6  Sliding wheel-2pcs roue coulissante

















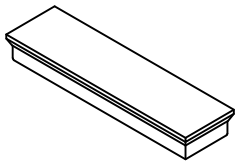
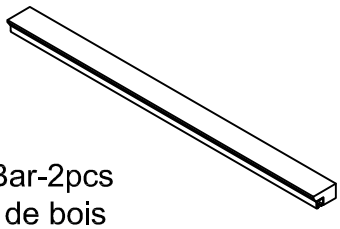
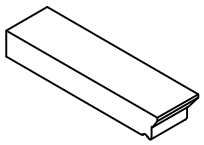
Part List
Liste des pièces

C1  WoodBar-1pc Barres de bois	C2  WoodBar-2pcs Barres de bois	C3  WoodBar-1pc Barres de bois
G4  Panel-2pcs Planche	G5  Panel-2pcs Planche	

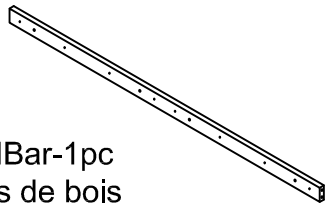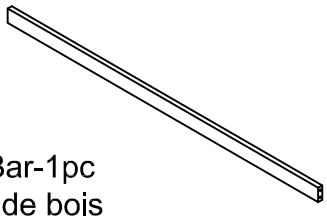
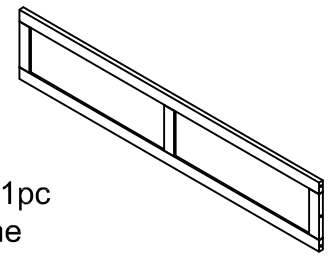
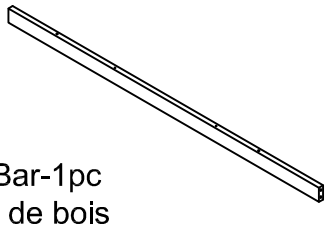
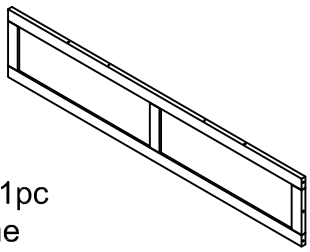
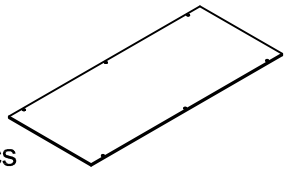
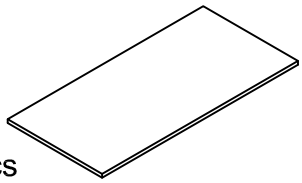
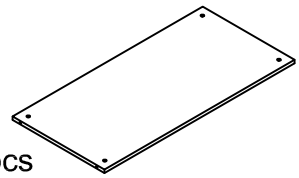
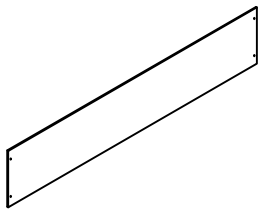
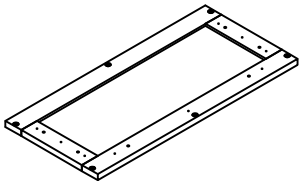
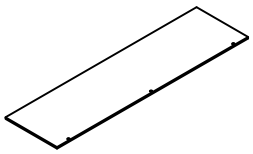
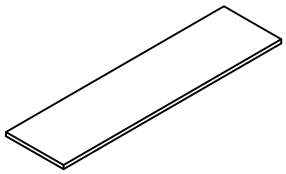
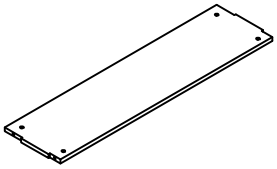
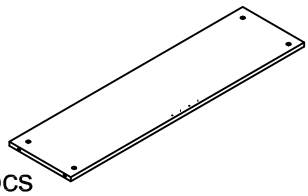
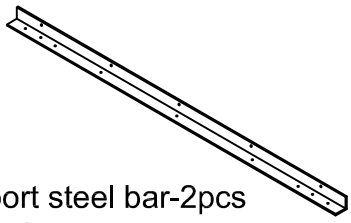
Part List
Liste des pièces

A9  WoodBar-1pc Barres de bois	B1  WoodBar-1pc Barres de bois	B2  Panel-1pc Planche
B3  WoodBar-1pc Barres de bois	B4  Panel-1pc Planche	F5  Panel-2pcs Planche
F6  Panel-8pcs Planche	F7  Panel-2pcs Planche	F8  Panel-2pcs Planche
G3  Panel-2pcs Planche	G9  Panel-2pcs Planche	H1  Panel-6pcs Planche
H2  Panel-2pcs Planche	H3  Panel-2pcs Planche	J3  Support steel bar-2pcs Barre de support

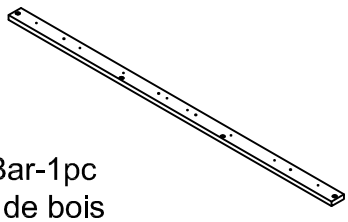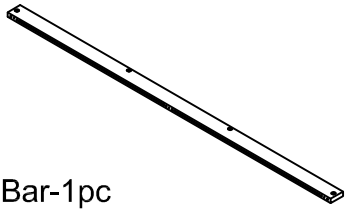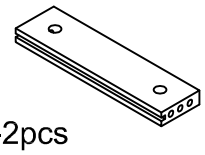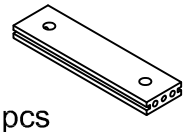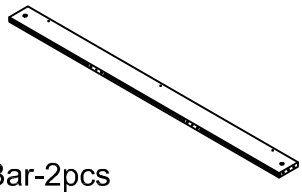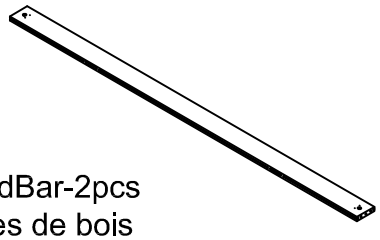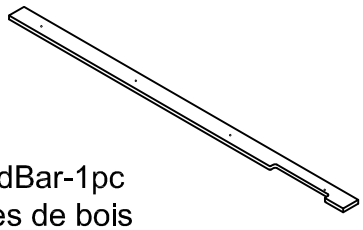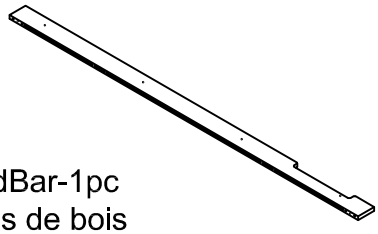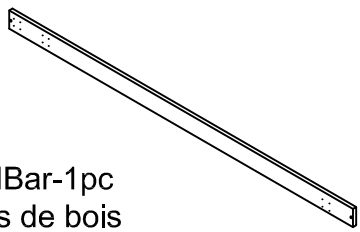
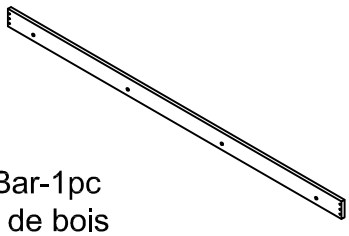
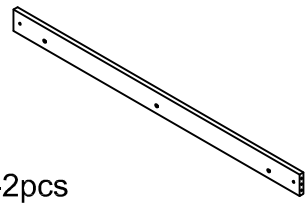
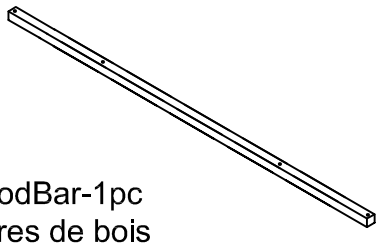
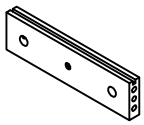

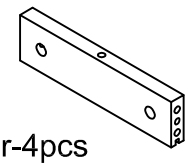
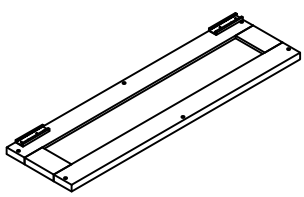
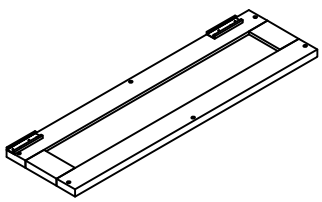
Part List
Liste des pièces

A5  Panel-1pc Planche	A7  Panel-2pcs Planche	A8  Panel-1pc Planche
B5  WoodBar-1pc Barres de bois	B6  WoodBar-1pc Barres de bois	B7  WoodBar-2pcs Barres de bois
B8  WoodBar-5pcs Barres de bois	C8  WoodBar-2pcs Barres de bois	C9  WoodBar-2pcs Barres de bois
D1  WoodBar-1pc Barres de bois	D2  WoodBar-1pc Barres de bois	D3  WoodBar-6pcs Barres de bois
D6  WoodBar-1pc Barres de bois	D7  WoodBar-1pc Barres de bois	D8  WoodBar-2pcs Barres de bois
D9  WoodBar-1pc Barres de bois	E7  WoodBar-4pcs Barres de bois	E8  Panel-8pcs Planche
E9  WoodBar-4pcs Barres de bois	H4  Panel-1pc Planche	I2  Panel-1pc Planche

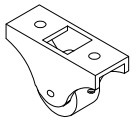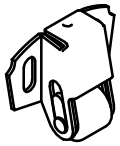Hardware List
Liste du matériel

1  Screws 1/4" x40mm- 32pcs Vis	2  Allen Key - 2pcs Clé Allen	3  Wheels -4pcs Roues
4  Bolts Ø1/4" x 60 mm - 64pcs Boulon	5  Bolts Ø1/4" x 80 mm - 16pcs Boulon	6  Bolts Ø1/4" x 100 mm - 18pcs Boulon
7  Wood dowel Ø8 x 30 mm -174pcs Cheville en bois	8  Ø1/4" x 13 mm Horizontal-Hole bolts - 98pcs Boulons à trou horizontal	9  Cam bolt 52pcs Boulon à came
10  Cam lock Ø15 x 12 mm- 52pcs Serrure à came	11  Door Wheel Catcher-4pcs Attrapeur de Roue de Porte	12  Ø1/3" x 40 mm Hex-Head bolts 2pcs
13  Nut 4pcs Écrou	14  Door Wheel -4pcs Roue de Porte	15  Wood Screws M4 x 20mm-105pcs Les vis à bois
16  Wood Screws M4 x 30mm-41pcs Les vis à bois	17  Wood Screws M4 x 40mm-58pcs Les vis à bois	18  Wood Screws M4 x 15mm-260pcs Les vis à bois
19  Wood Screws M3.5 x 15mm-48pcs Les vis à bois	20  Wood Screws M4 x 50mm-16pcs Les vis à bois	21  Steel Bracket - 4pcs Support en acier

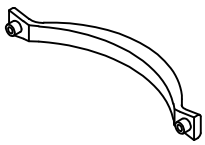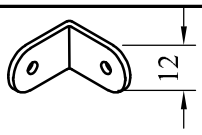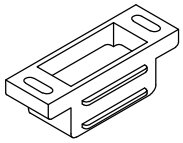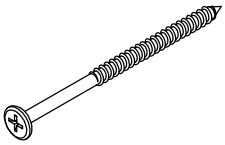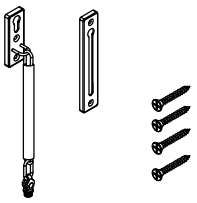Hardware List
Liste du matériel

22  Bolts Ø1/6" x 15 mm - 16pcs Boulon	23  Handle 8pcs Poignée	24  Angle Metal 10pcs Angle métallique
25  Angle Metal 80pcs Angle métallique	26  Magnet Door Catcher 8pcs Attrape-porte aimanté	27  Screws M5 x75mm- 6pcs Vis
28  Wood Screws M3.5x12mm-168pcs Les vis à bois	29  Angle Metal 3pcs Angle métallique	30  M8 x 80 mm Plastic anchor 6pcs Cheville en plastique
31  Lock - 1set Verrou		




Assembly Tools Required (Not Included)
Outils d'assemblage requis (Non Inclus)

STEP 1:

Étape 1:

8	7	6
10(pcs)	4(pcs)	9(pcs)

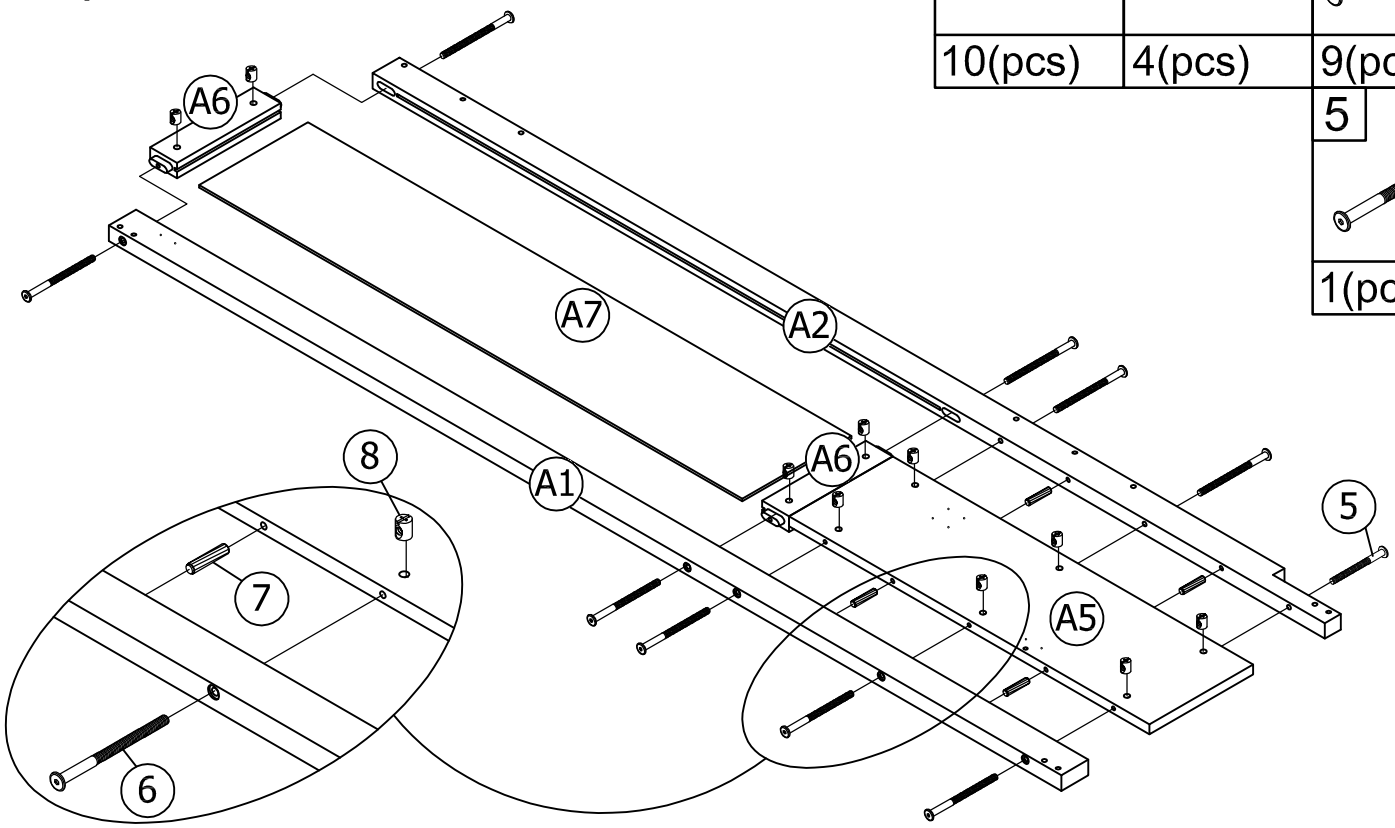
5
1(pc)



STEP 2:

Étape 2:


5	8	7	6
1(pc)	10(pcs)	4(pcs)	9(pcs)

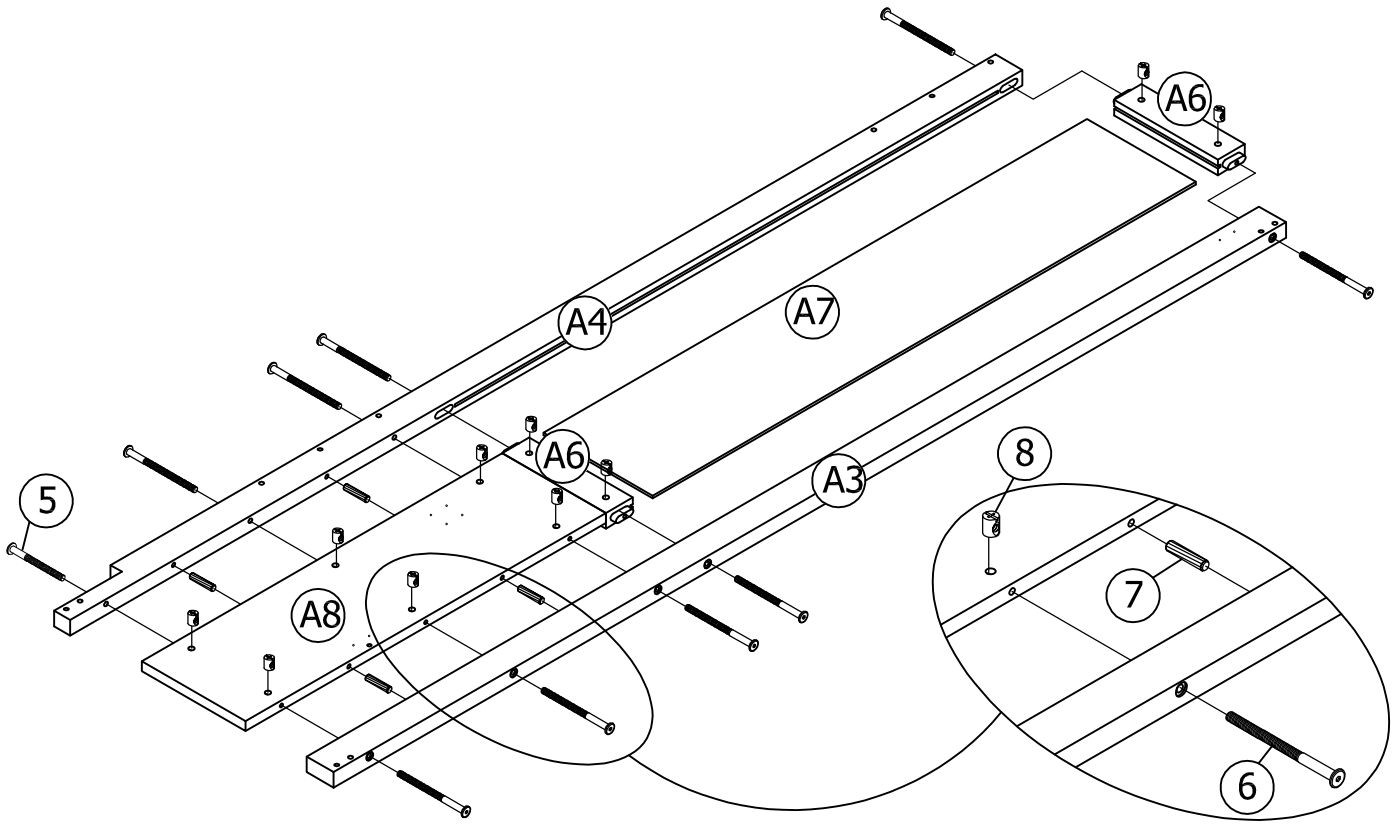

STEP 3:

Étape 3:


8	7	5
		
14(pcs)	10(pcs)	14(pcs)

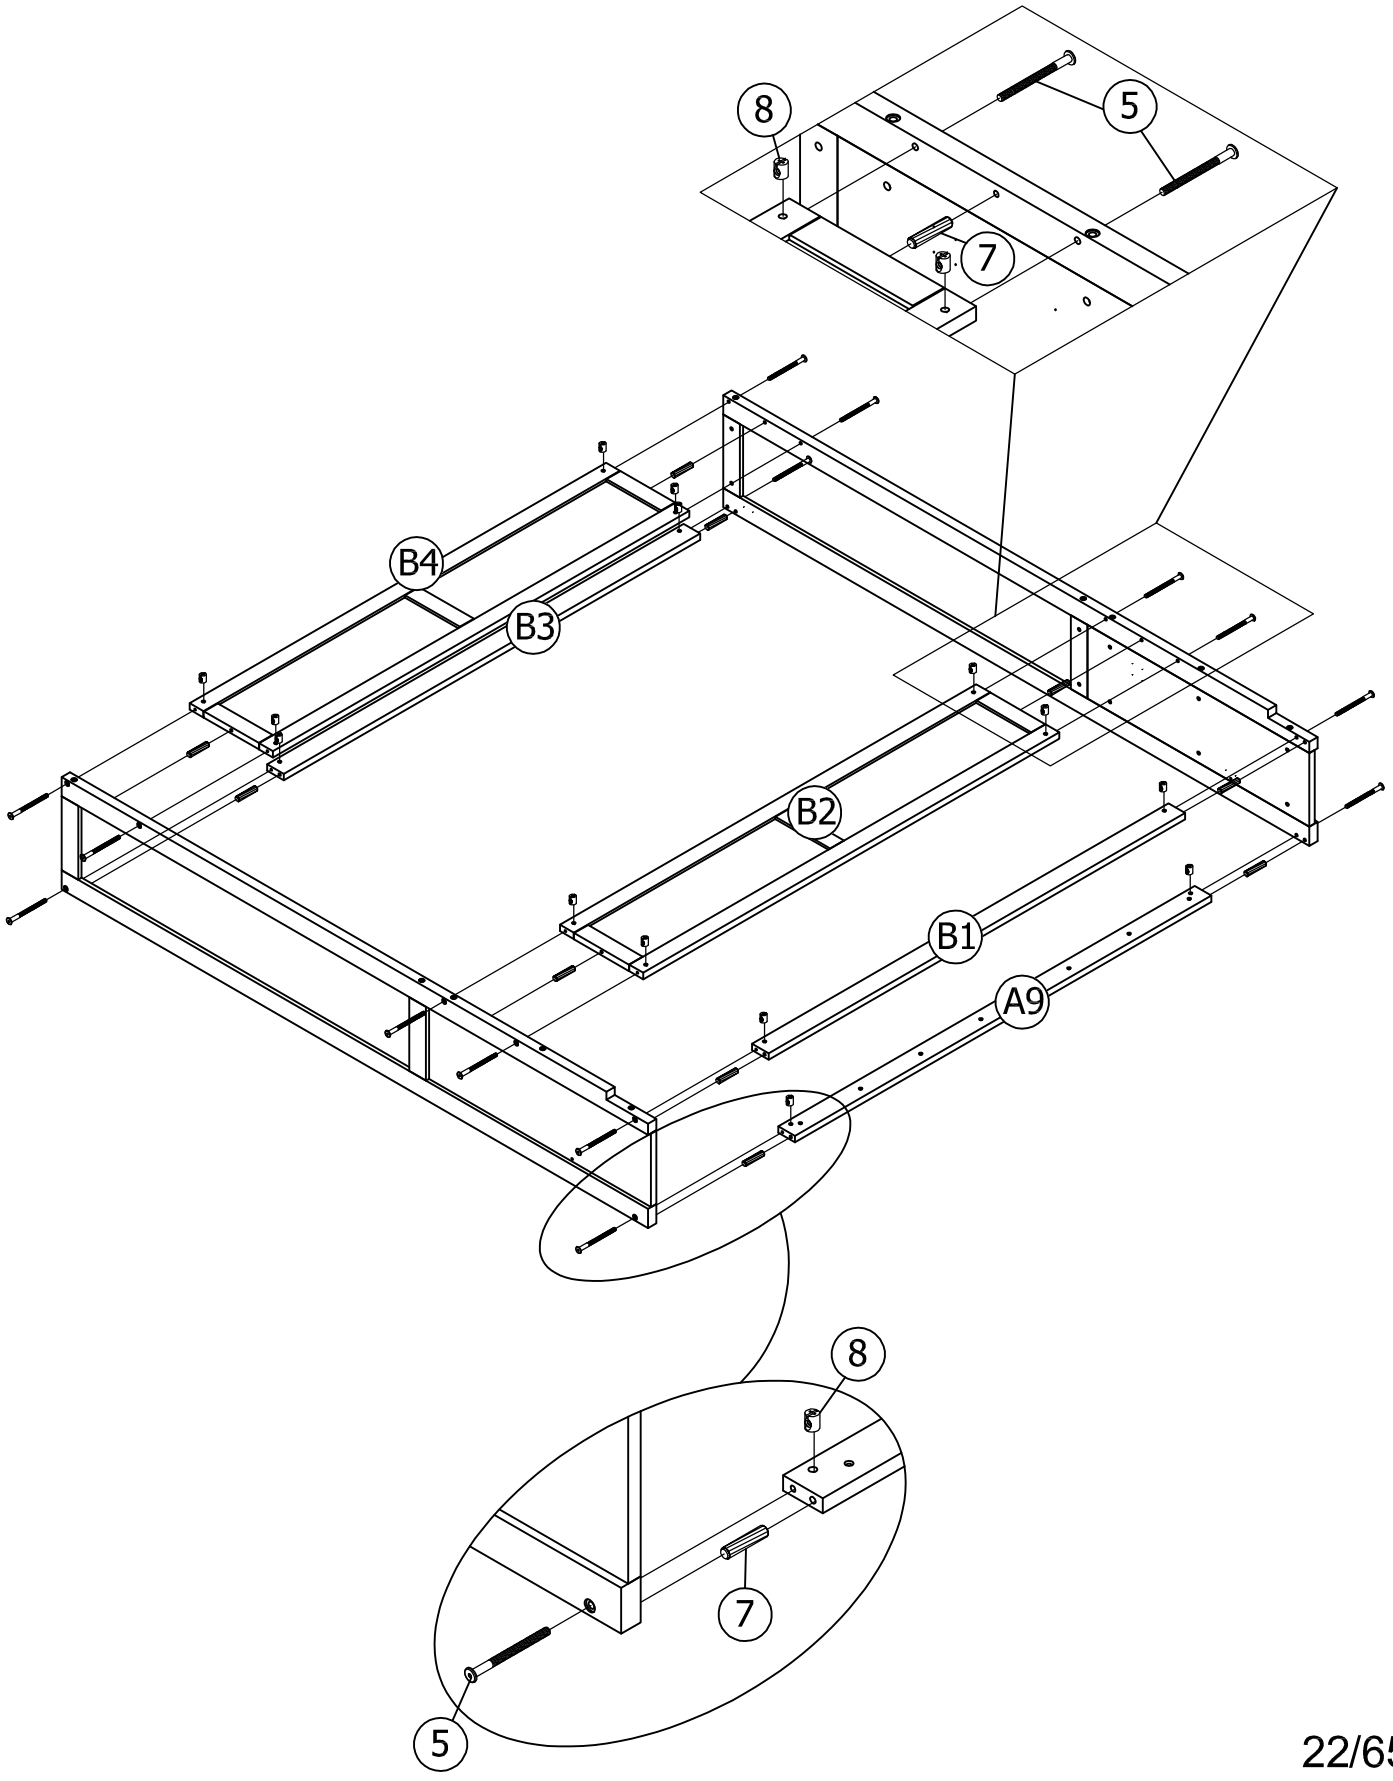

STEP 4:

Étape 4:

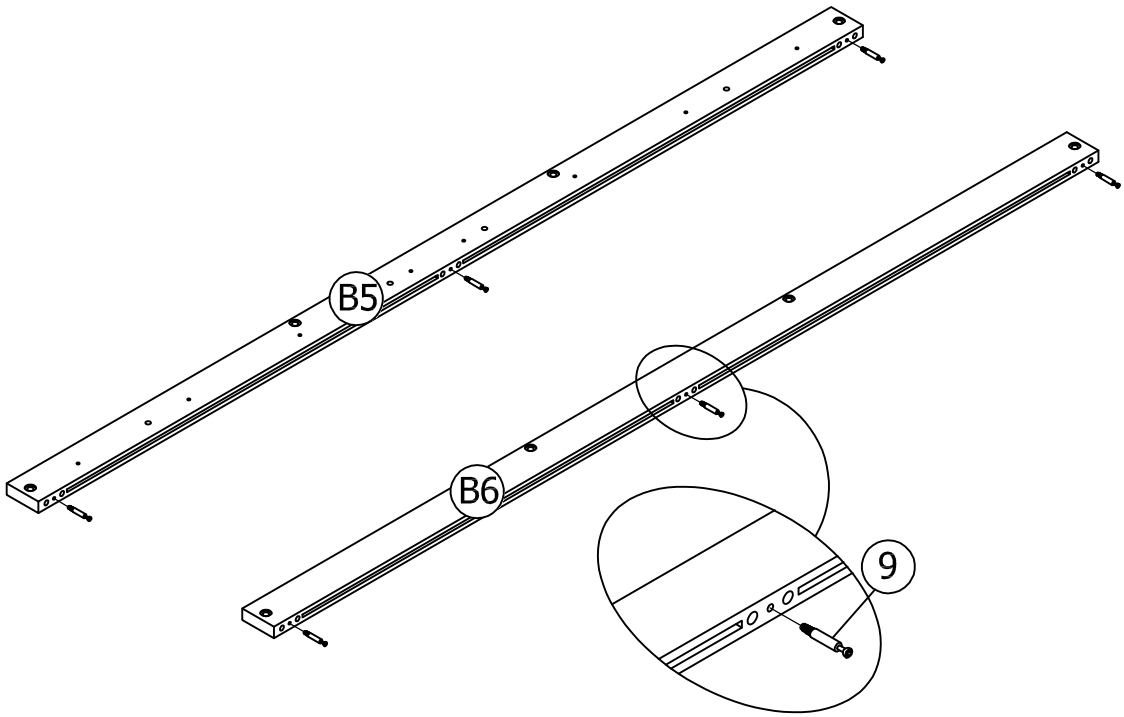
9
6(pcs)



STEP 5:


Étape 5:


10	7
6(pcs)	12pcs)

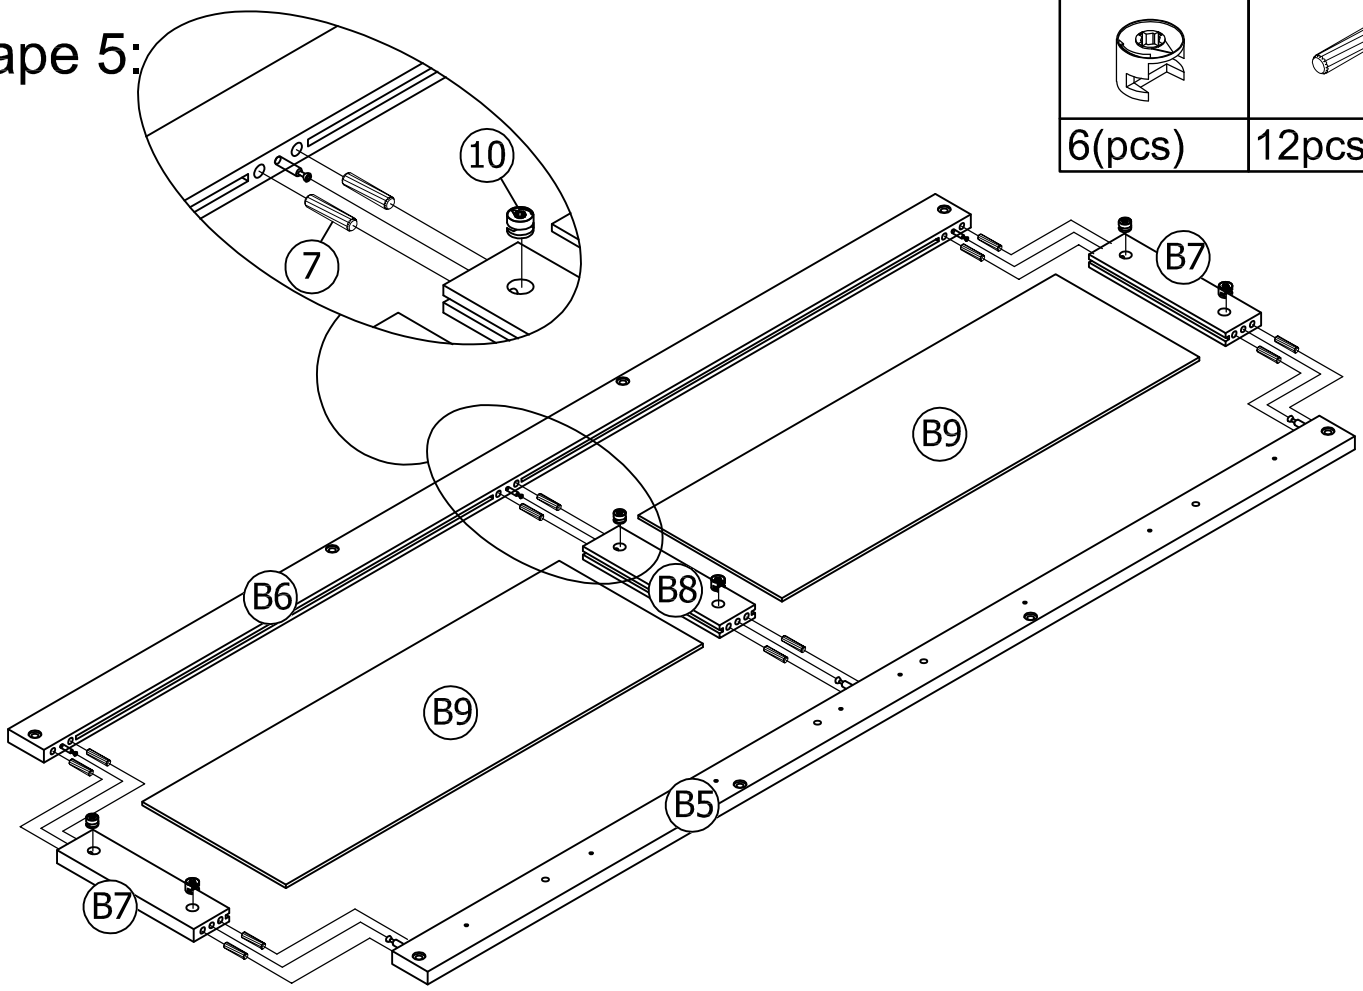

STEP 6:

Étape 6:


7	1
	
4(pcs)	8(pcs)

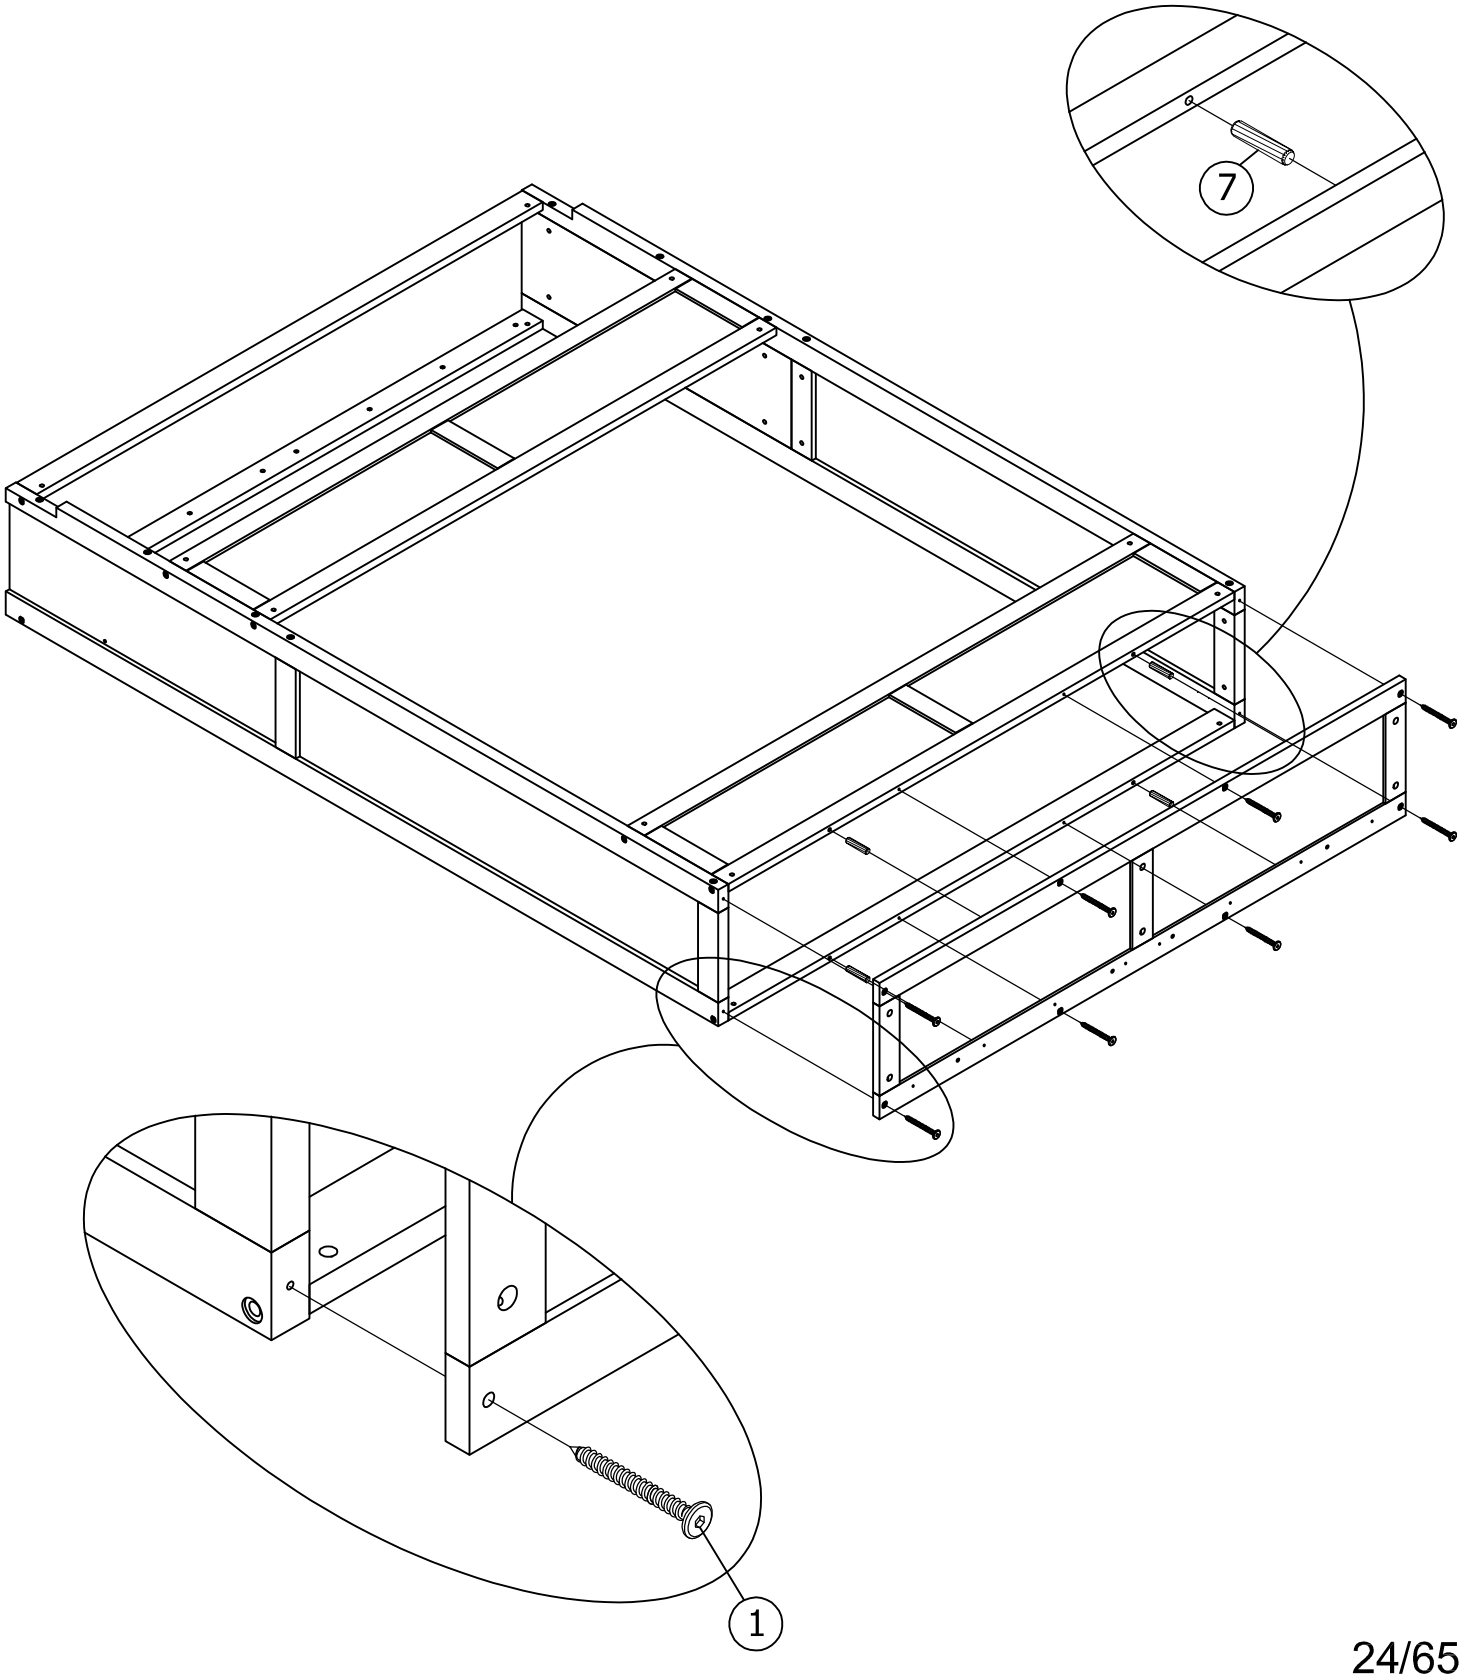


STEP 7:


Étape 7:


15



20(pcs)

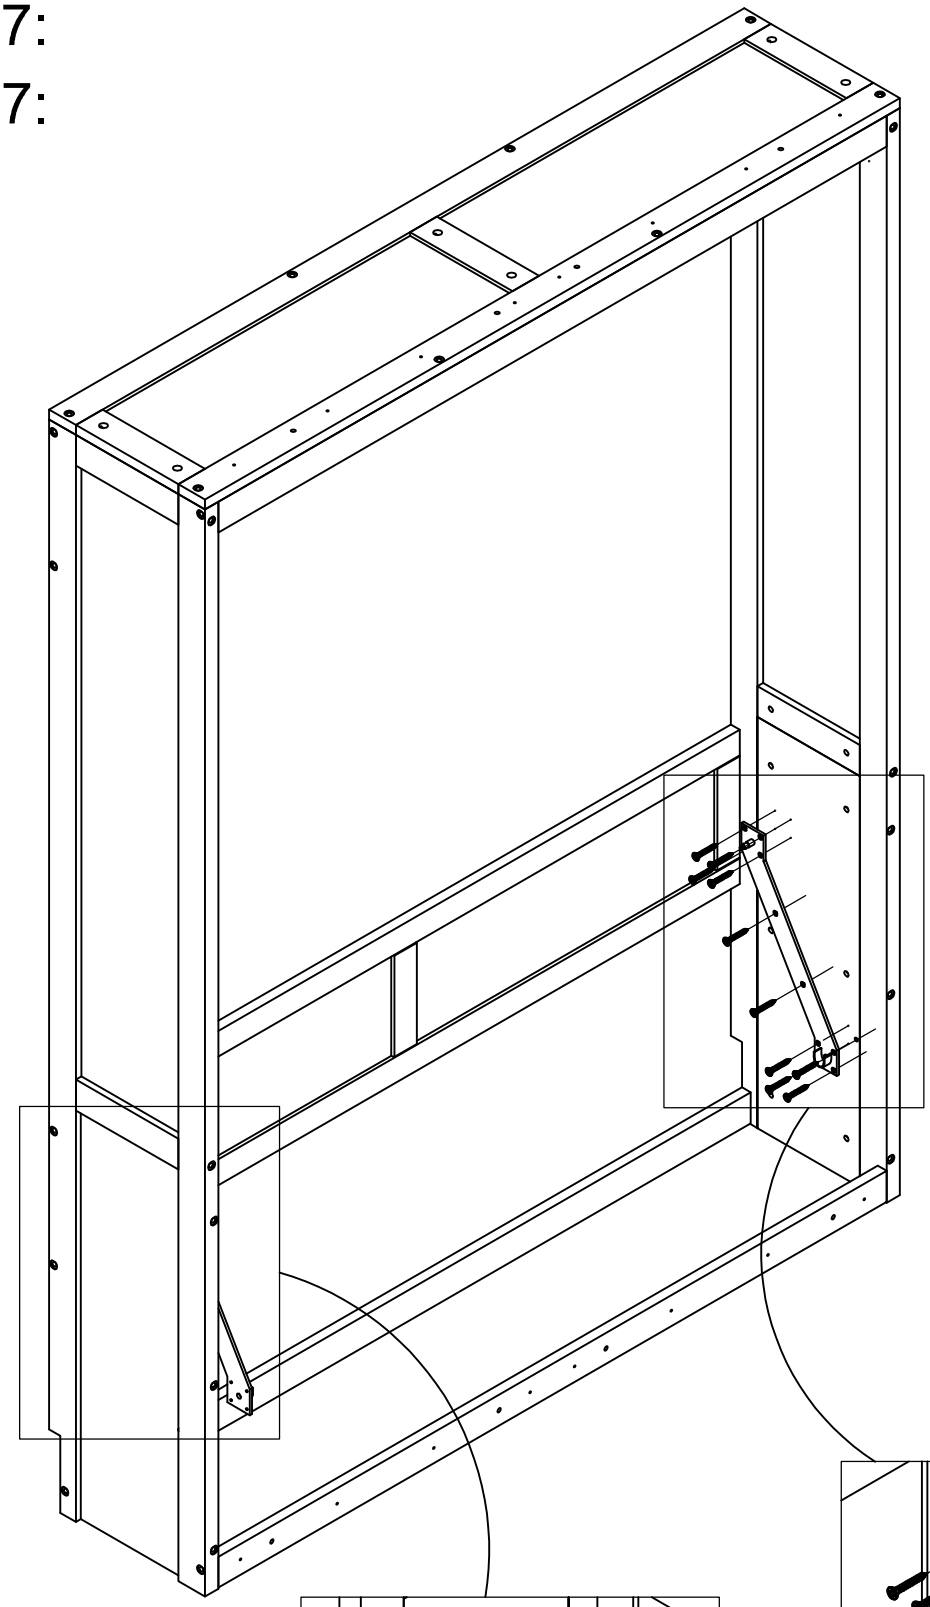


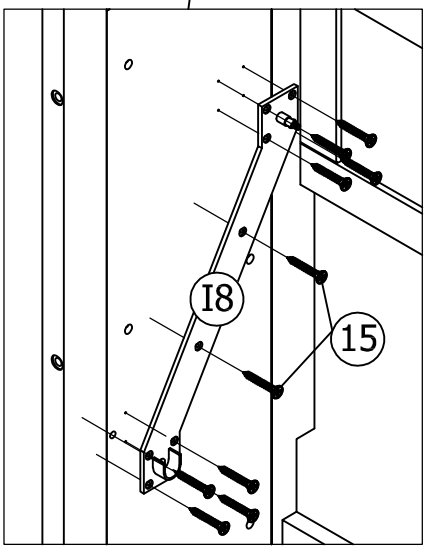


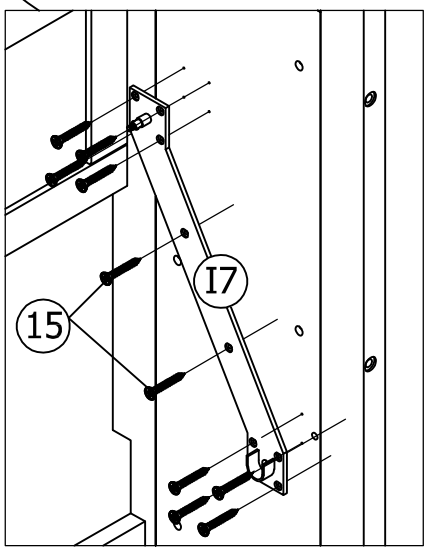

STEP 8:

Étape 8:


9

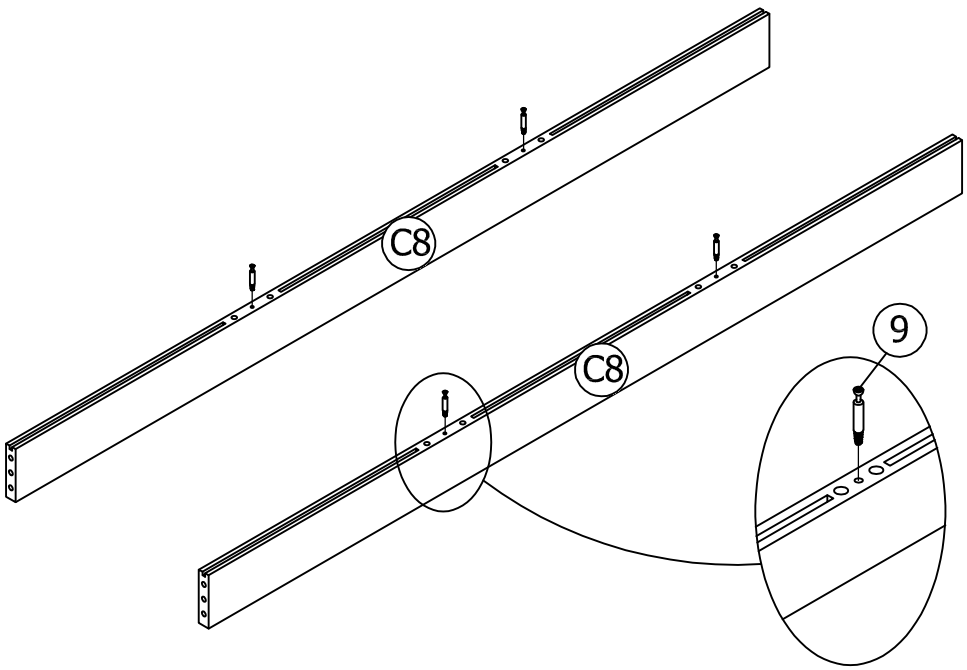4(pcs)



STEP 9:

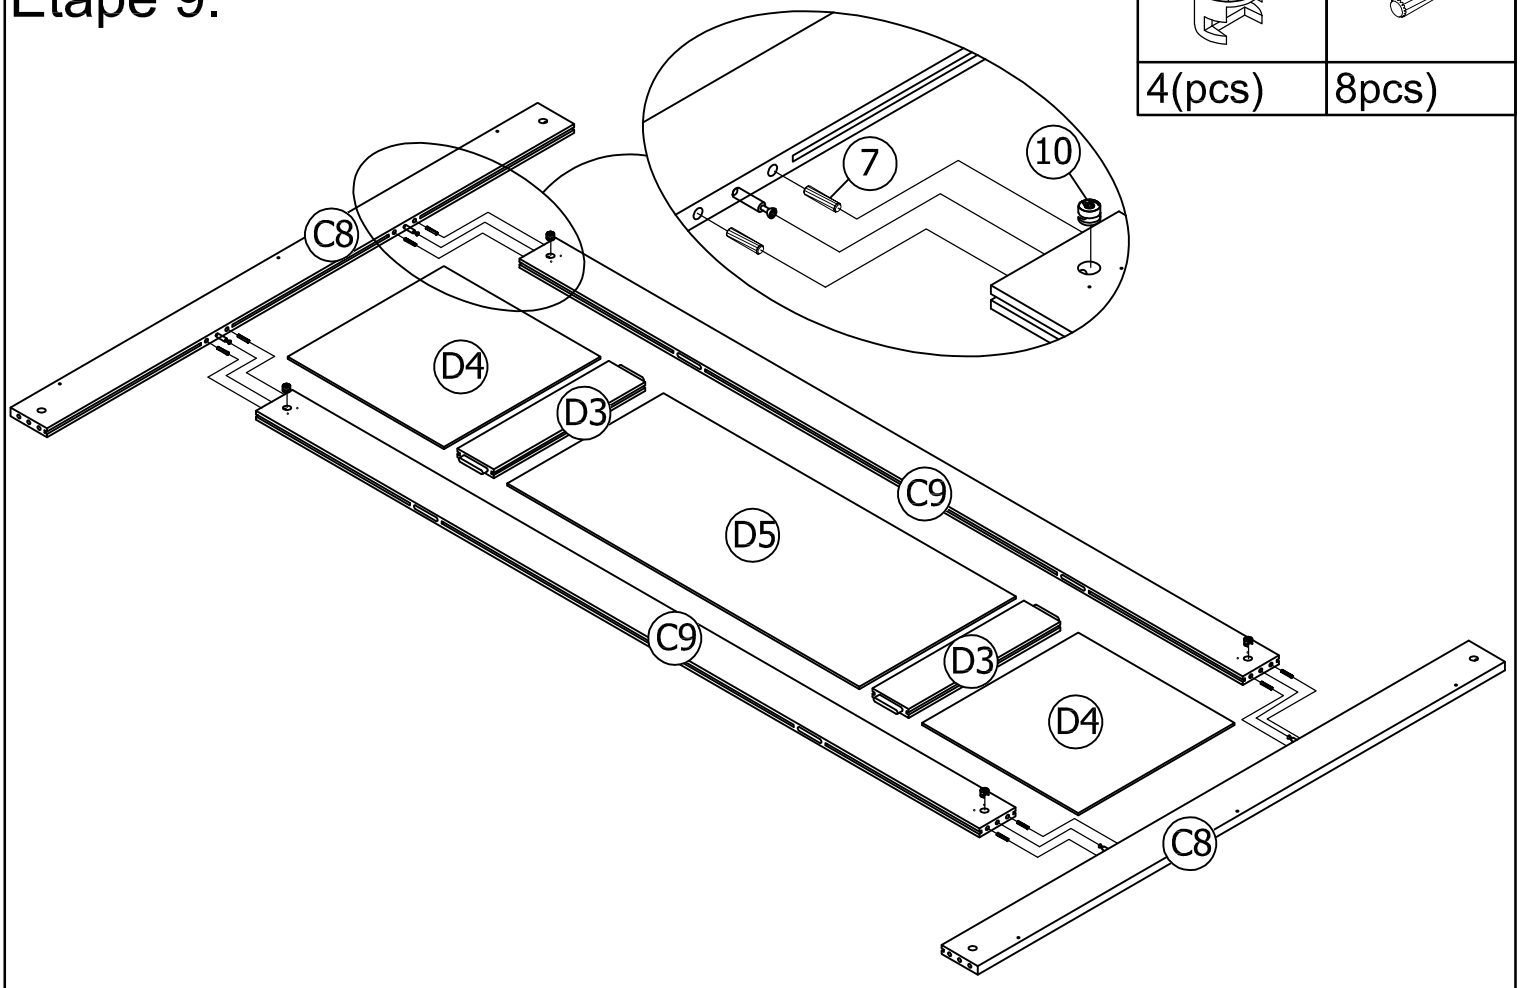
Étape 9:

10	7
	
4(pcs)	8pcs)



STEP 10:

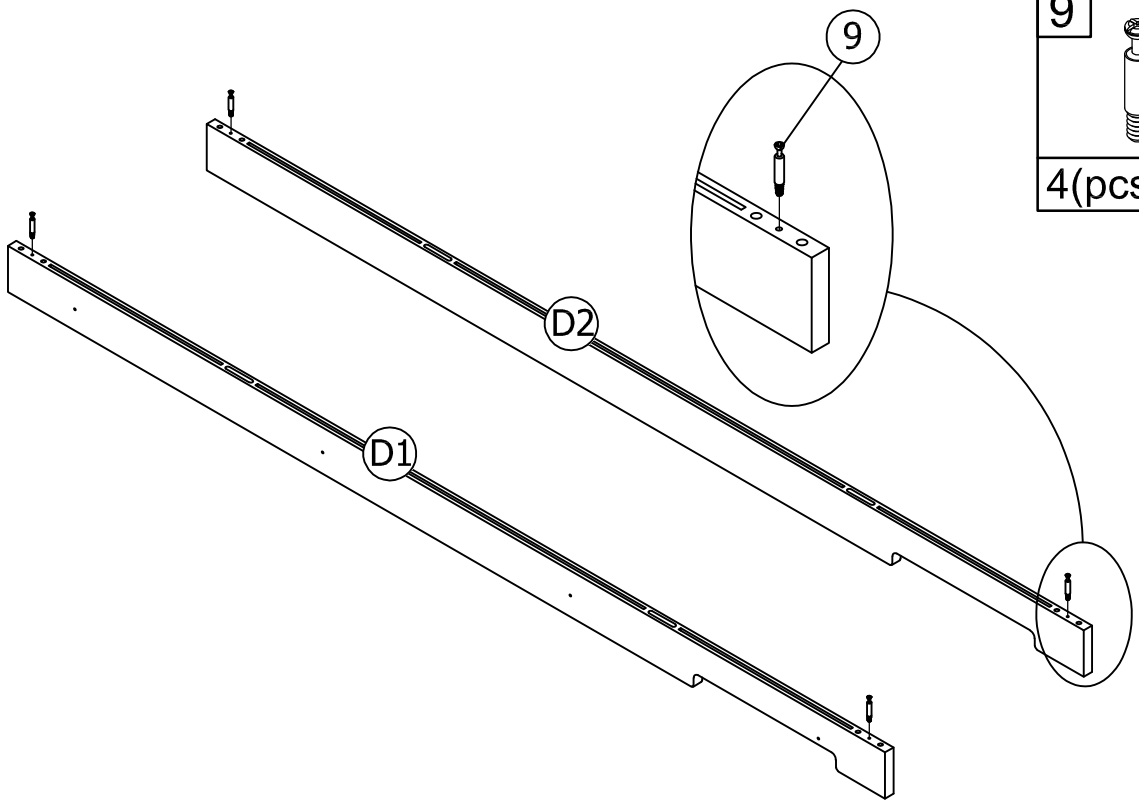Étape 10:




9	
	4(pcs)

STEP 11:

Étape 11:


10	7
4(pcs)	8pcs)

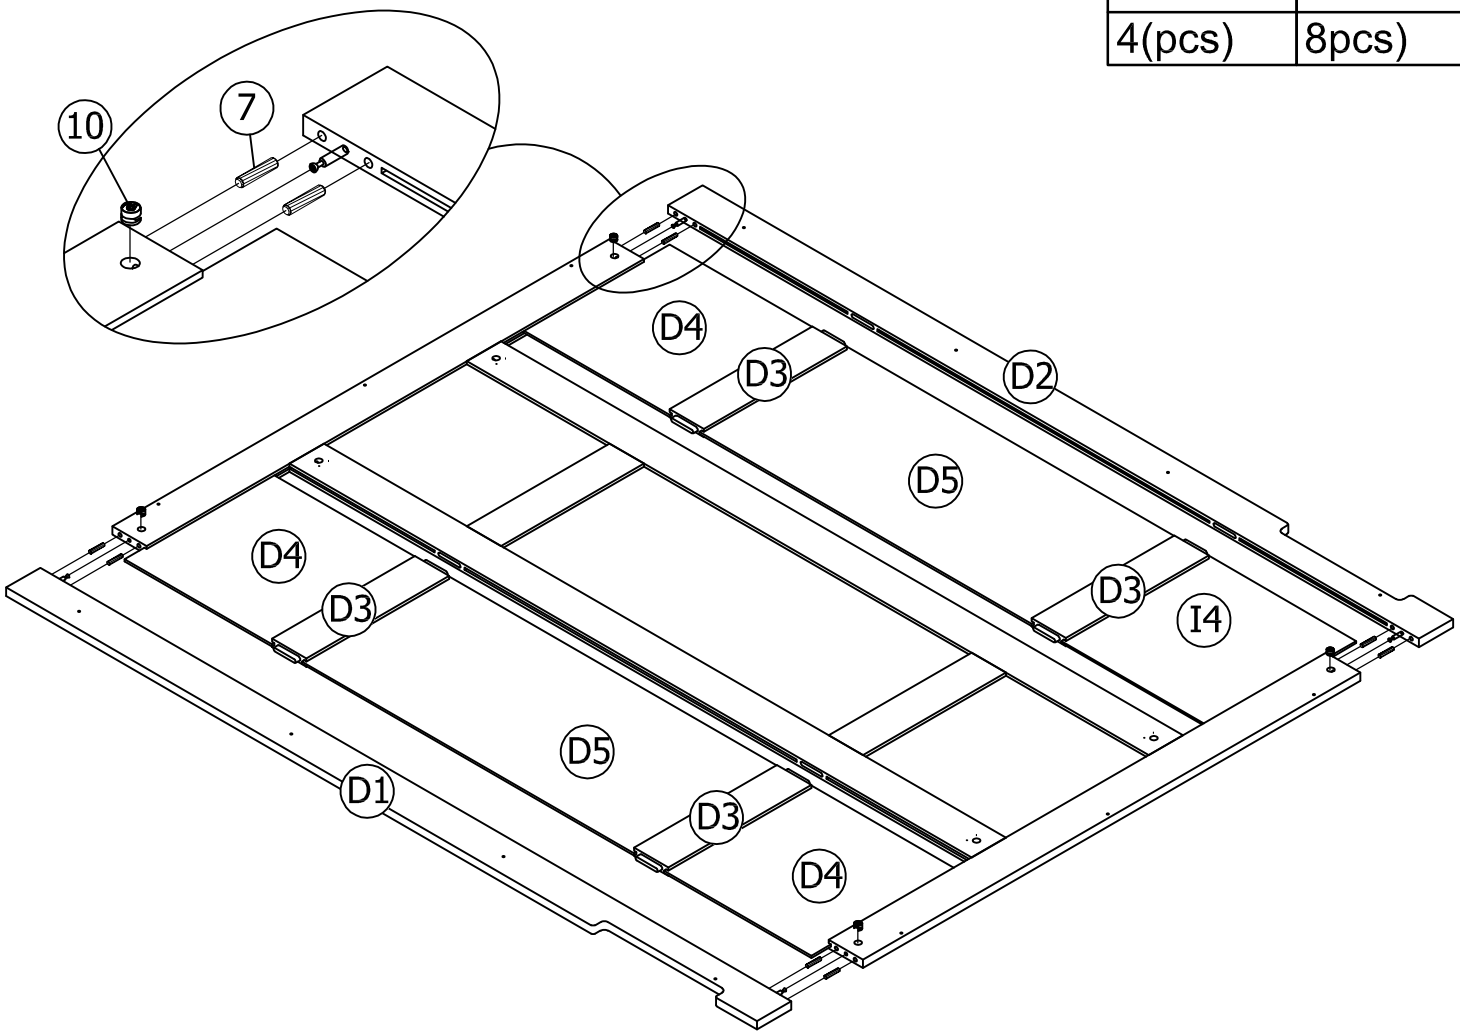

STEP 12:

Étape 12:

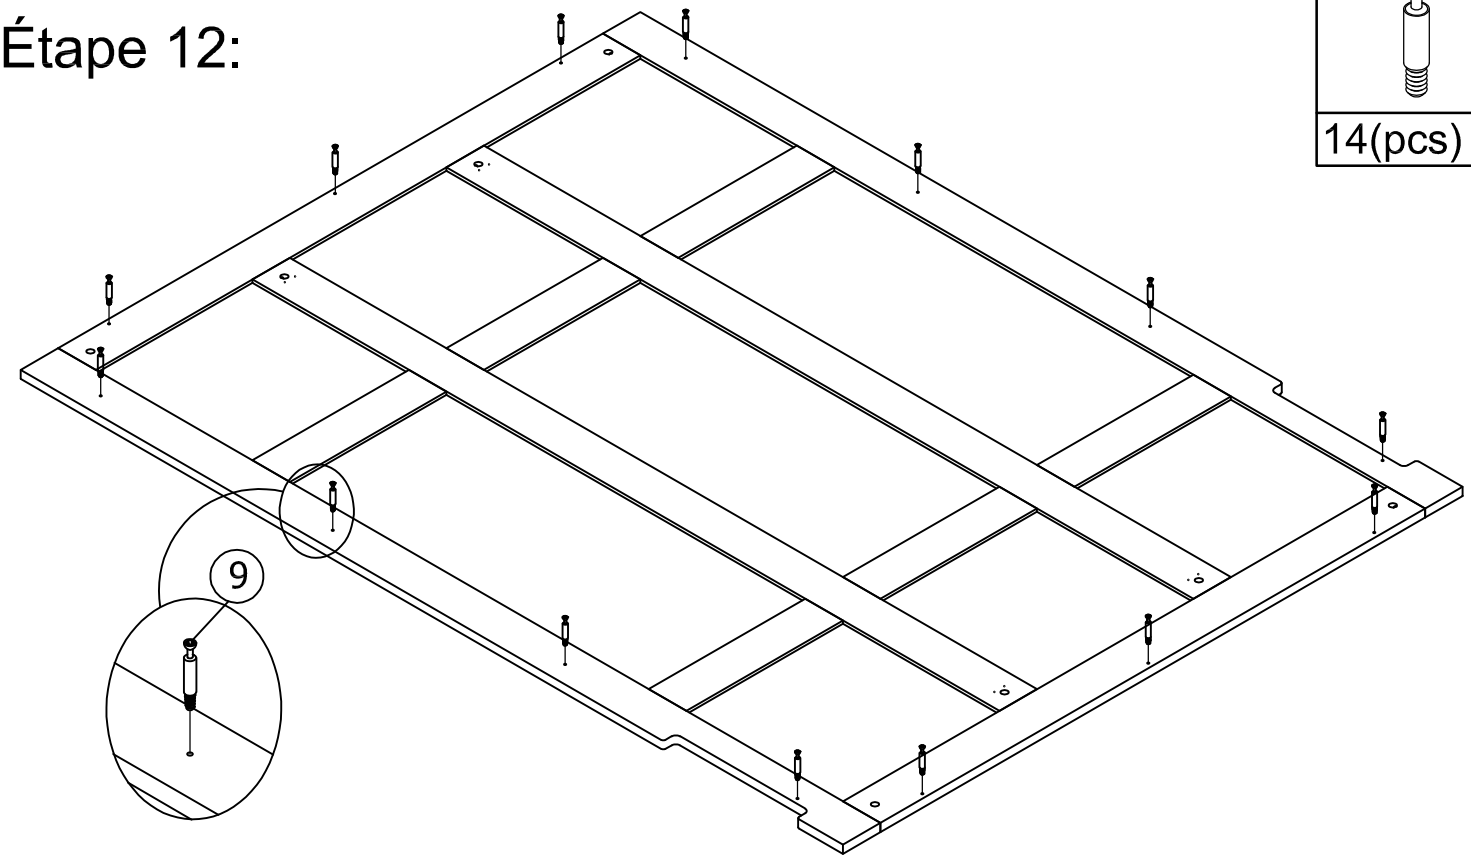
9
14(pcs)



STEP 13:

Étape 13:

8	7	4
4(pcs)	8(pcs)	4(pcs)

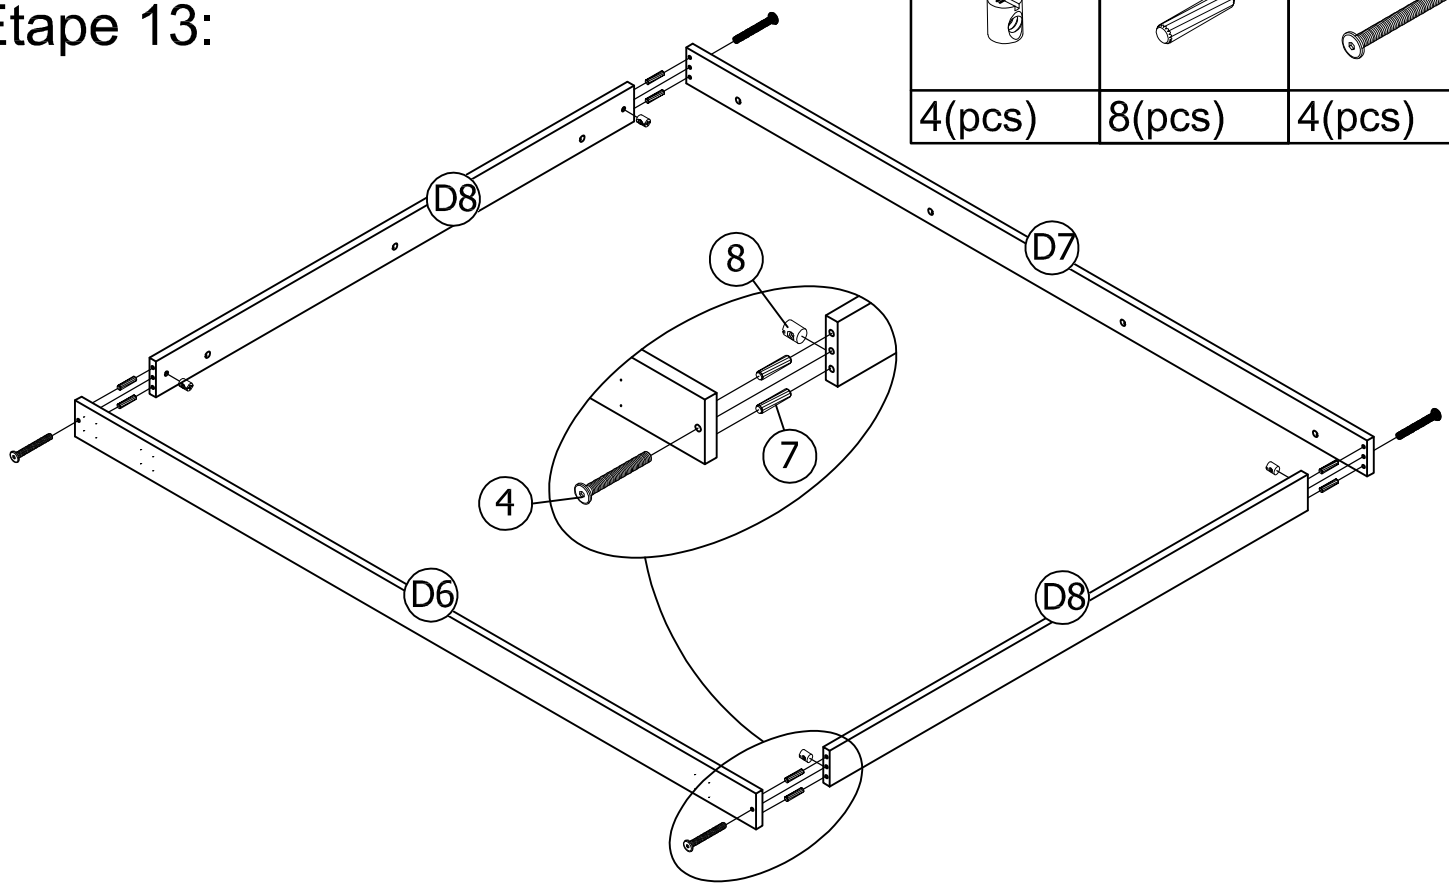


STEP 14:

Étape 14:



10

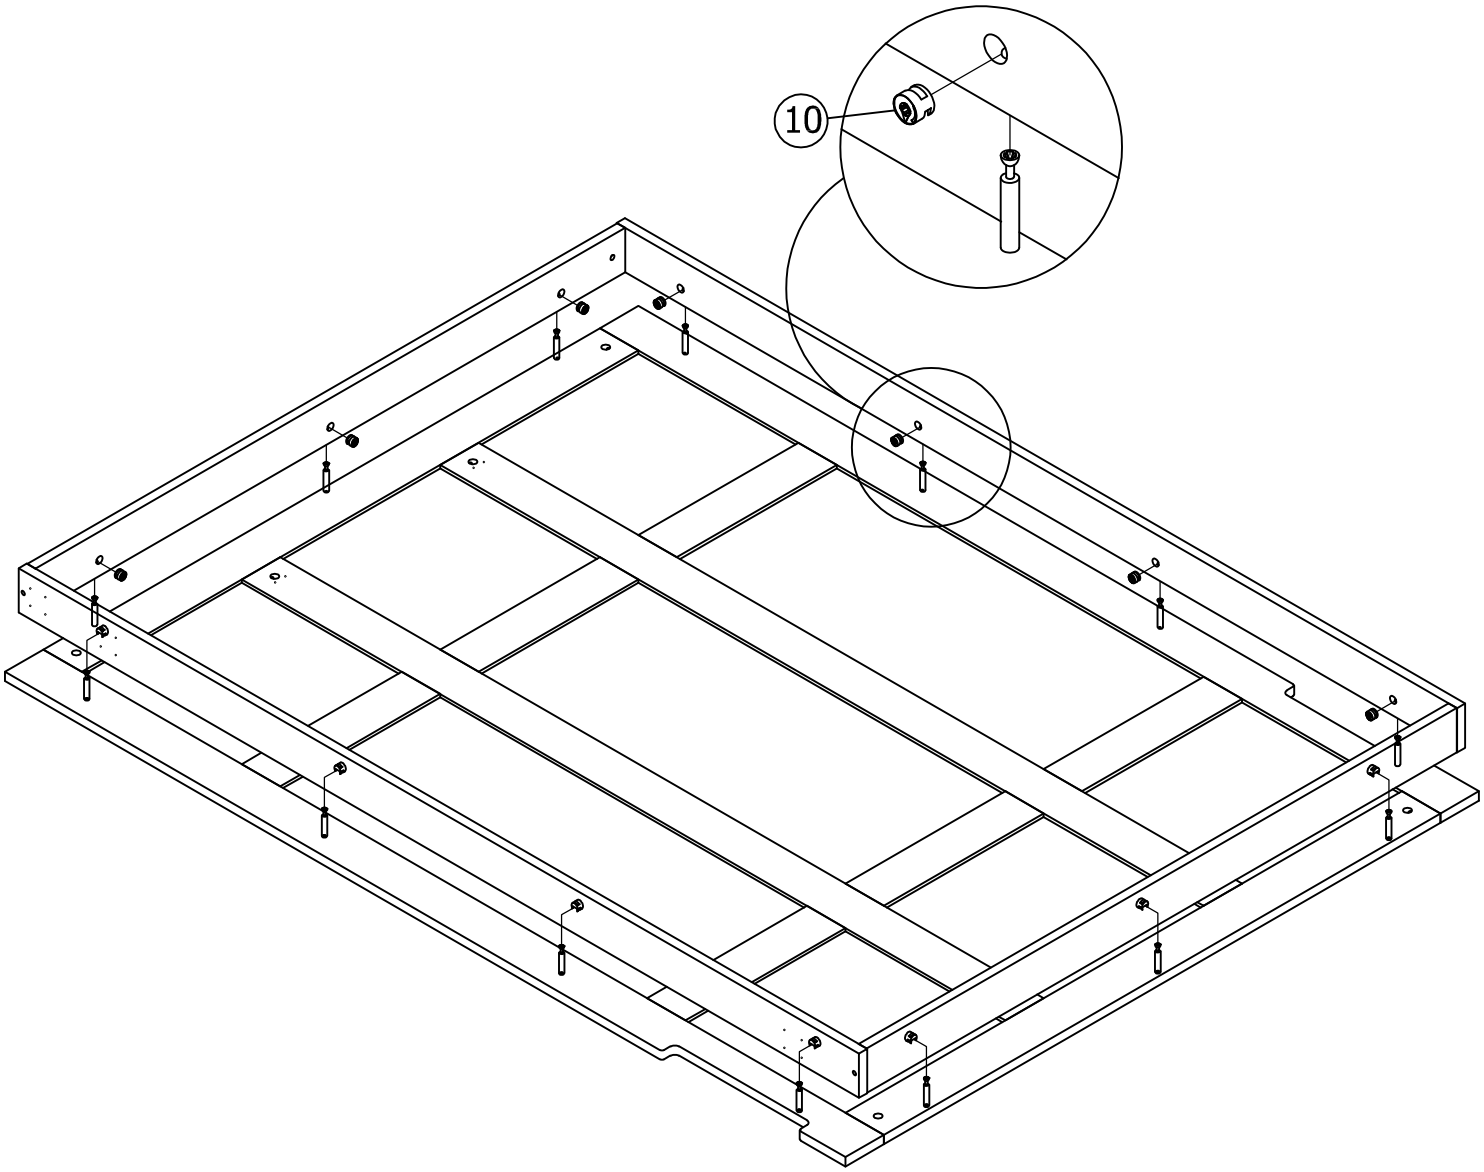
14(pcs)





STEP 15:

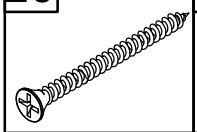Étape 15:

20	16
	
16(pcs)	16(pcs)

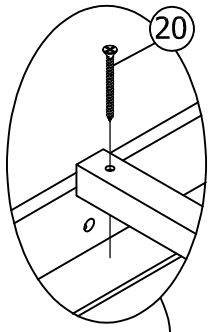


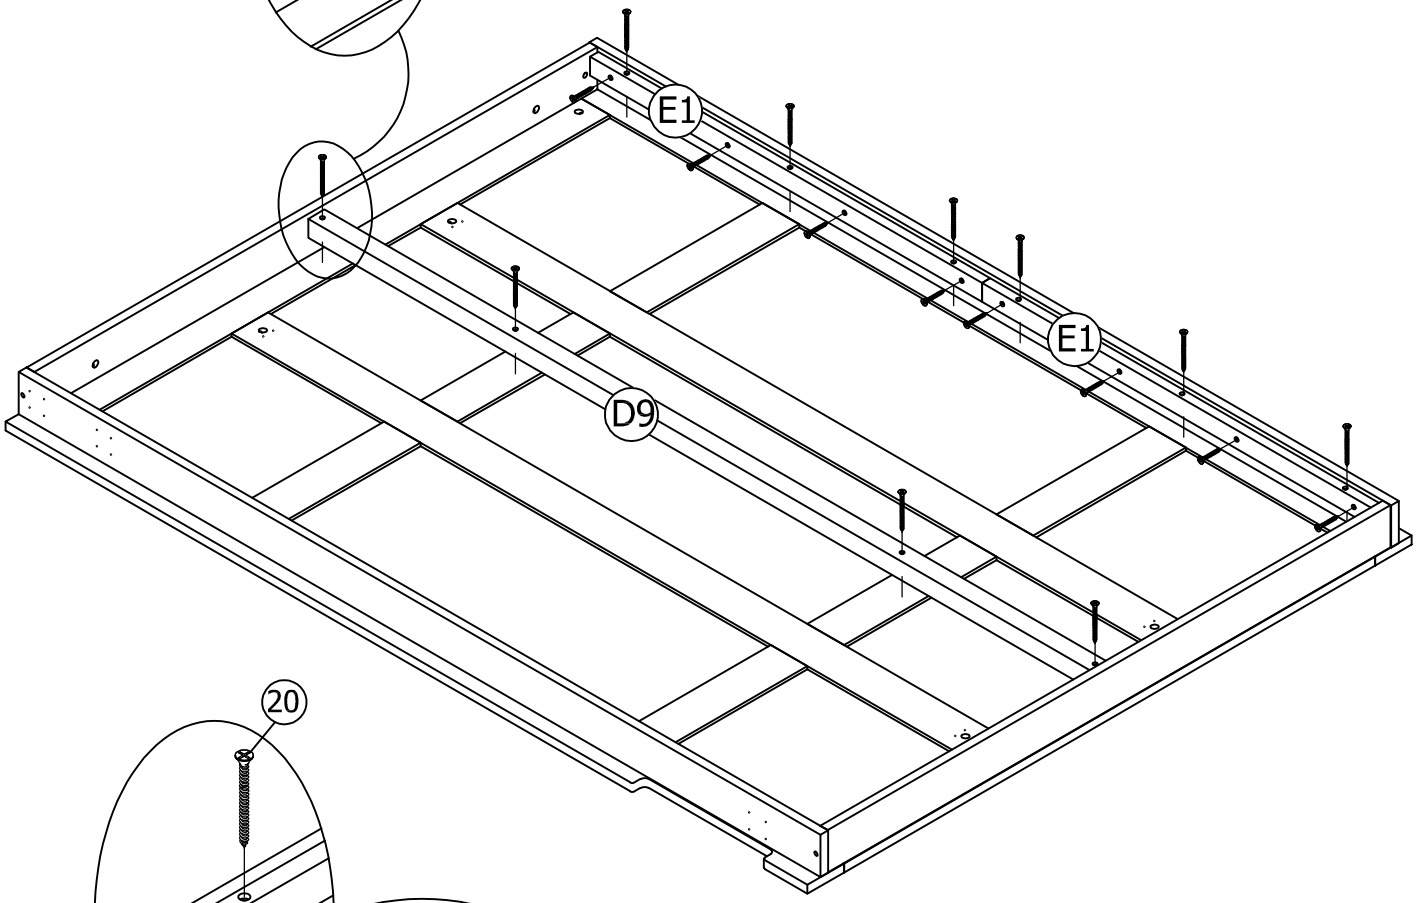

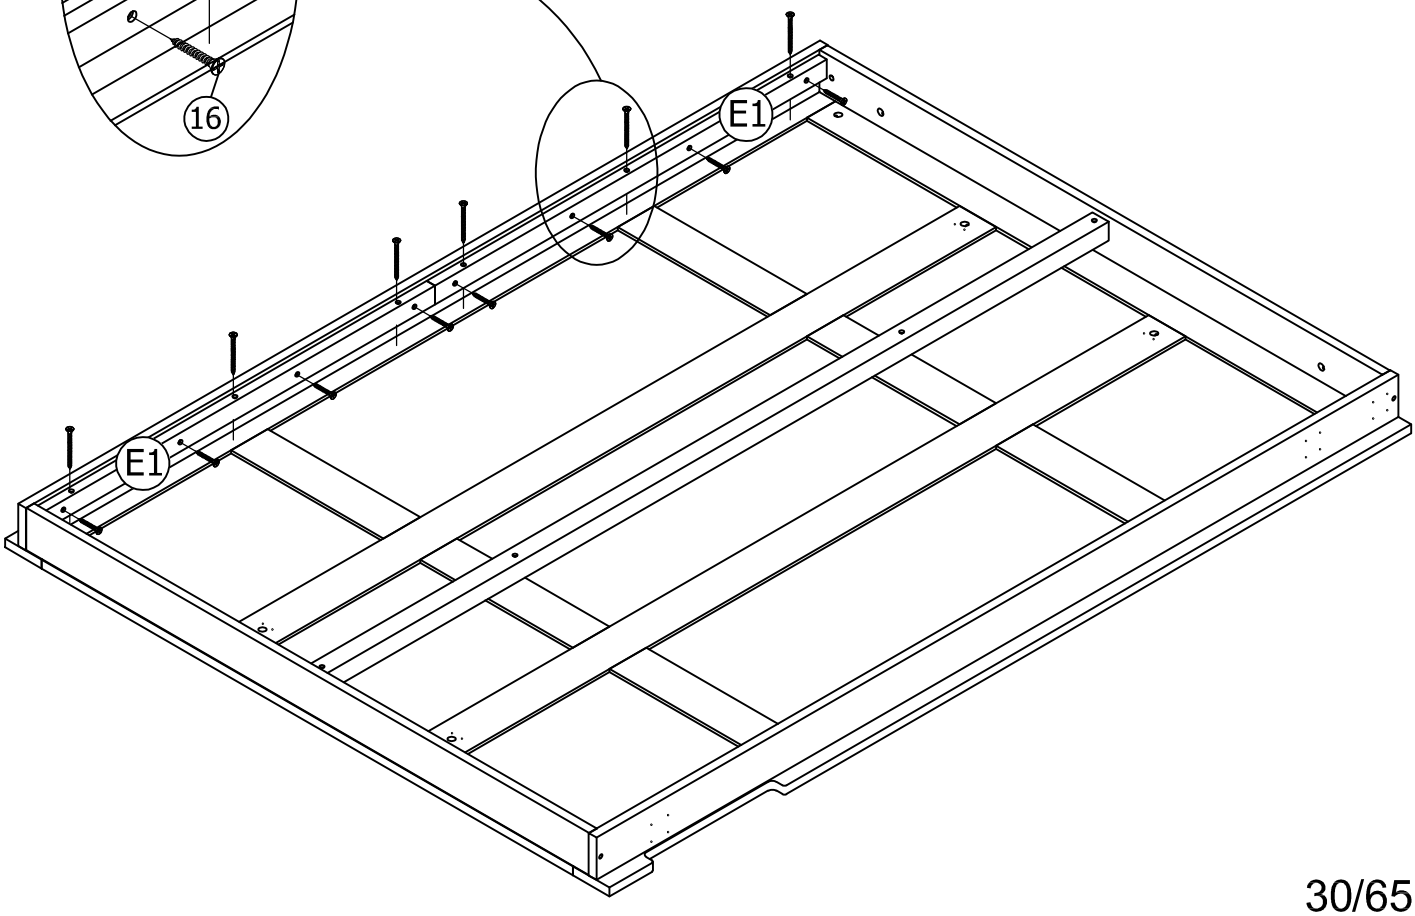

STEP 16:

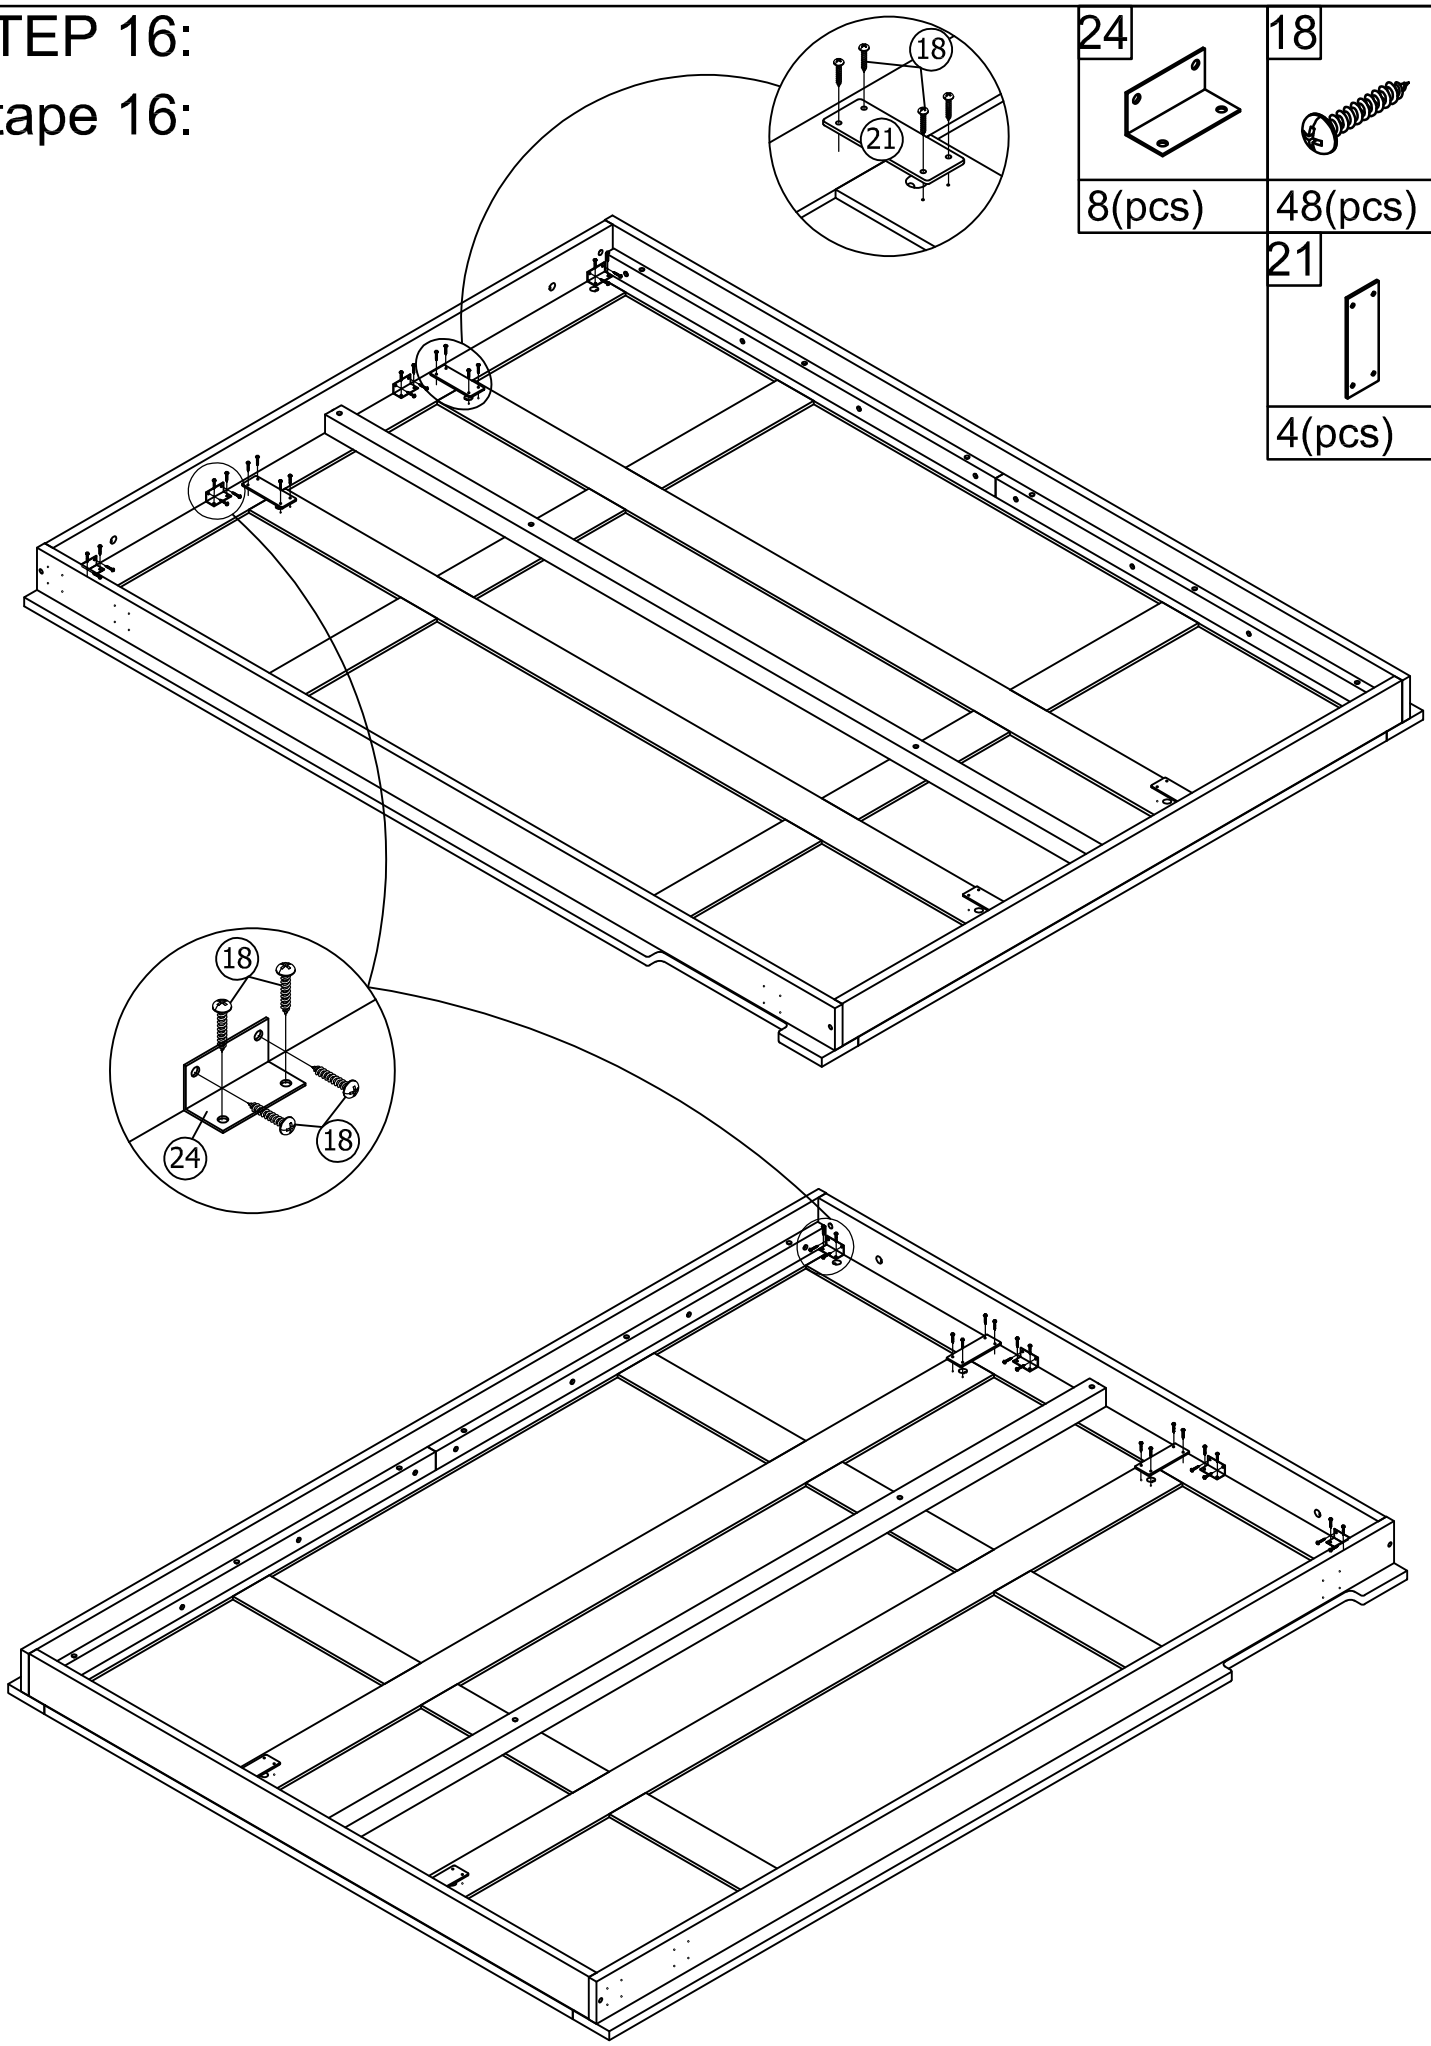Étape 16:




24	18
8(pcs)	48(pcs)

21
4(pcs)


STEP 17:

Étape 17:

16




21(pcs)

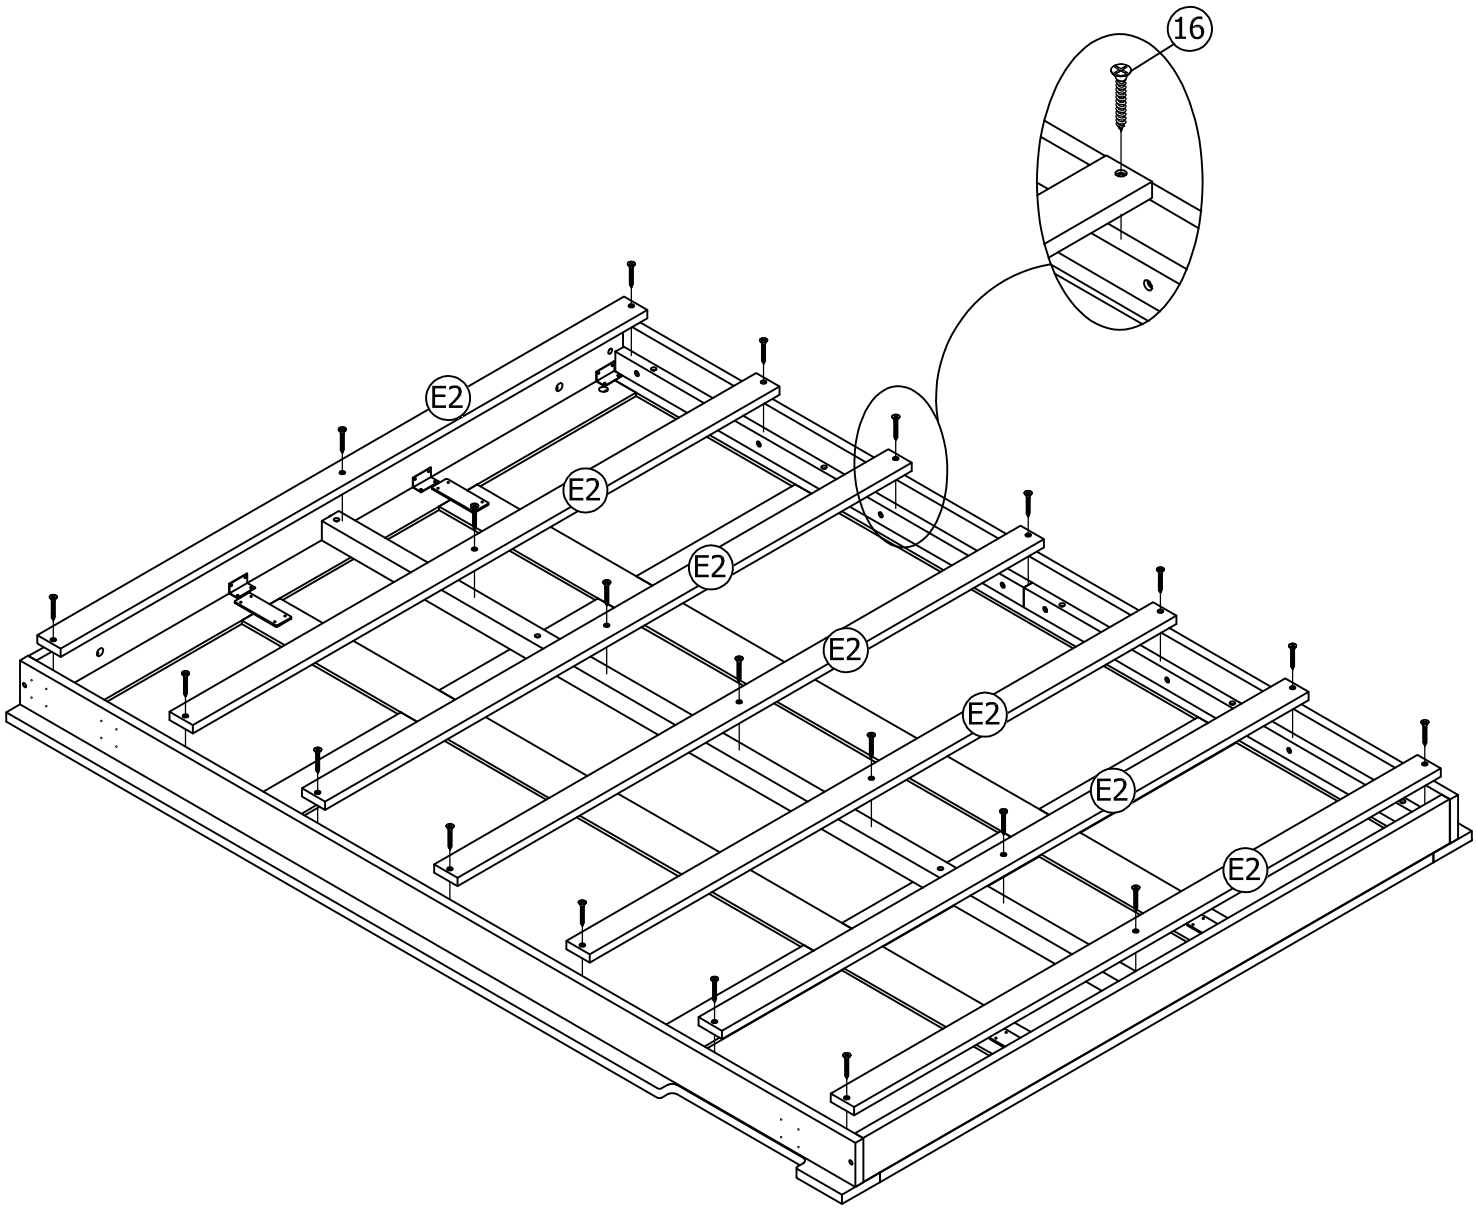

STEP 18:

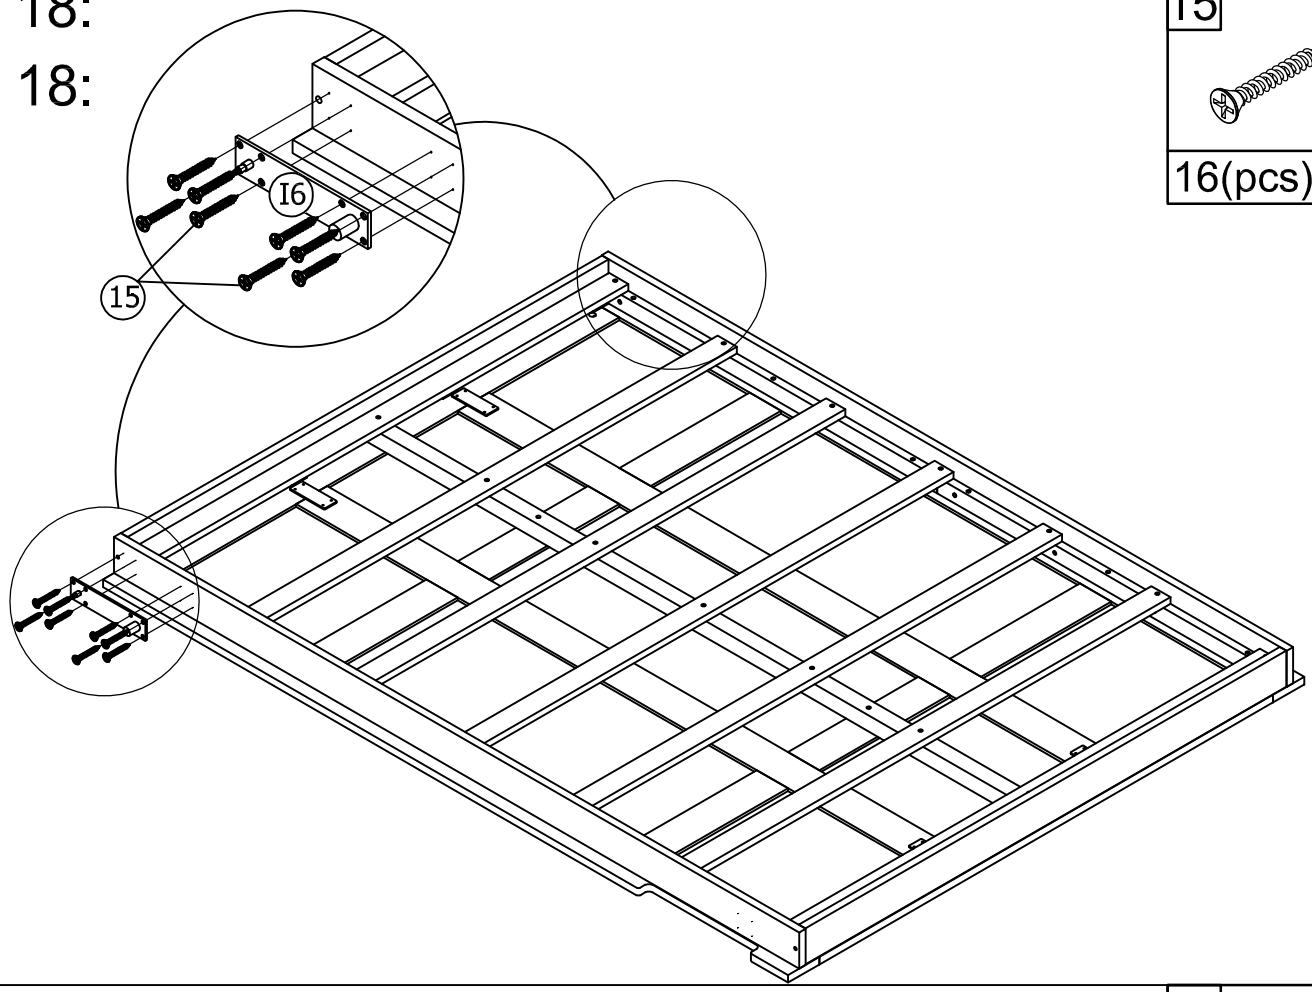Étape 18:




15

16(pcs)

STEP 19:

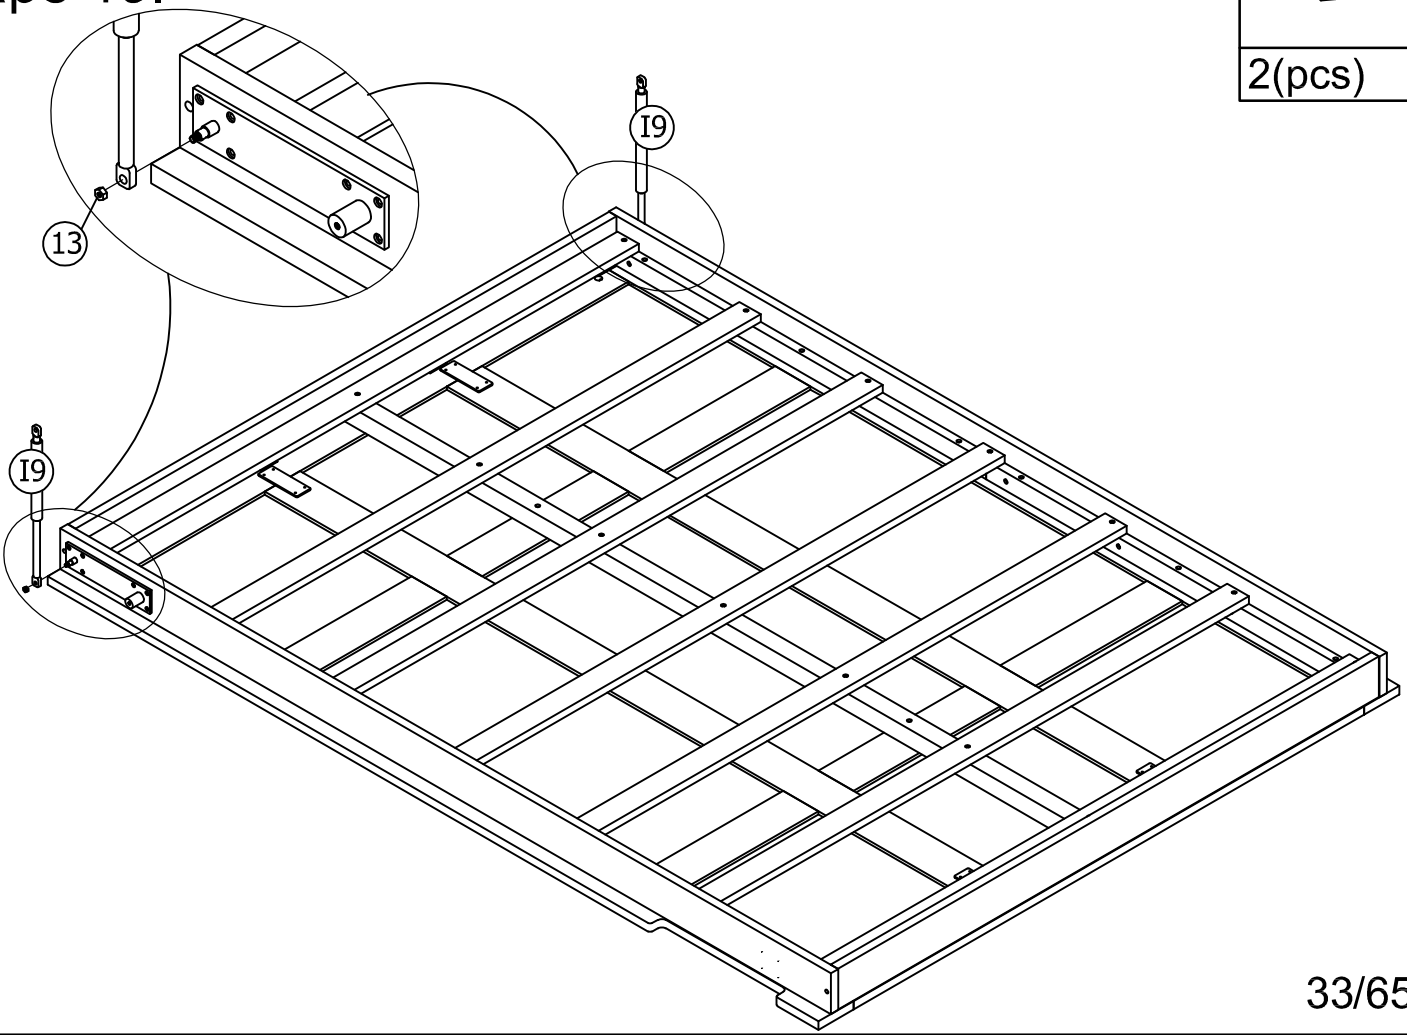Étape 19:




13



2(pcs)

STEP 20:

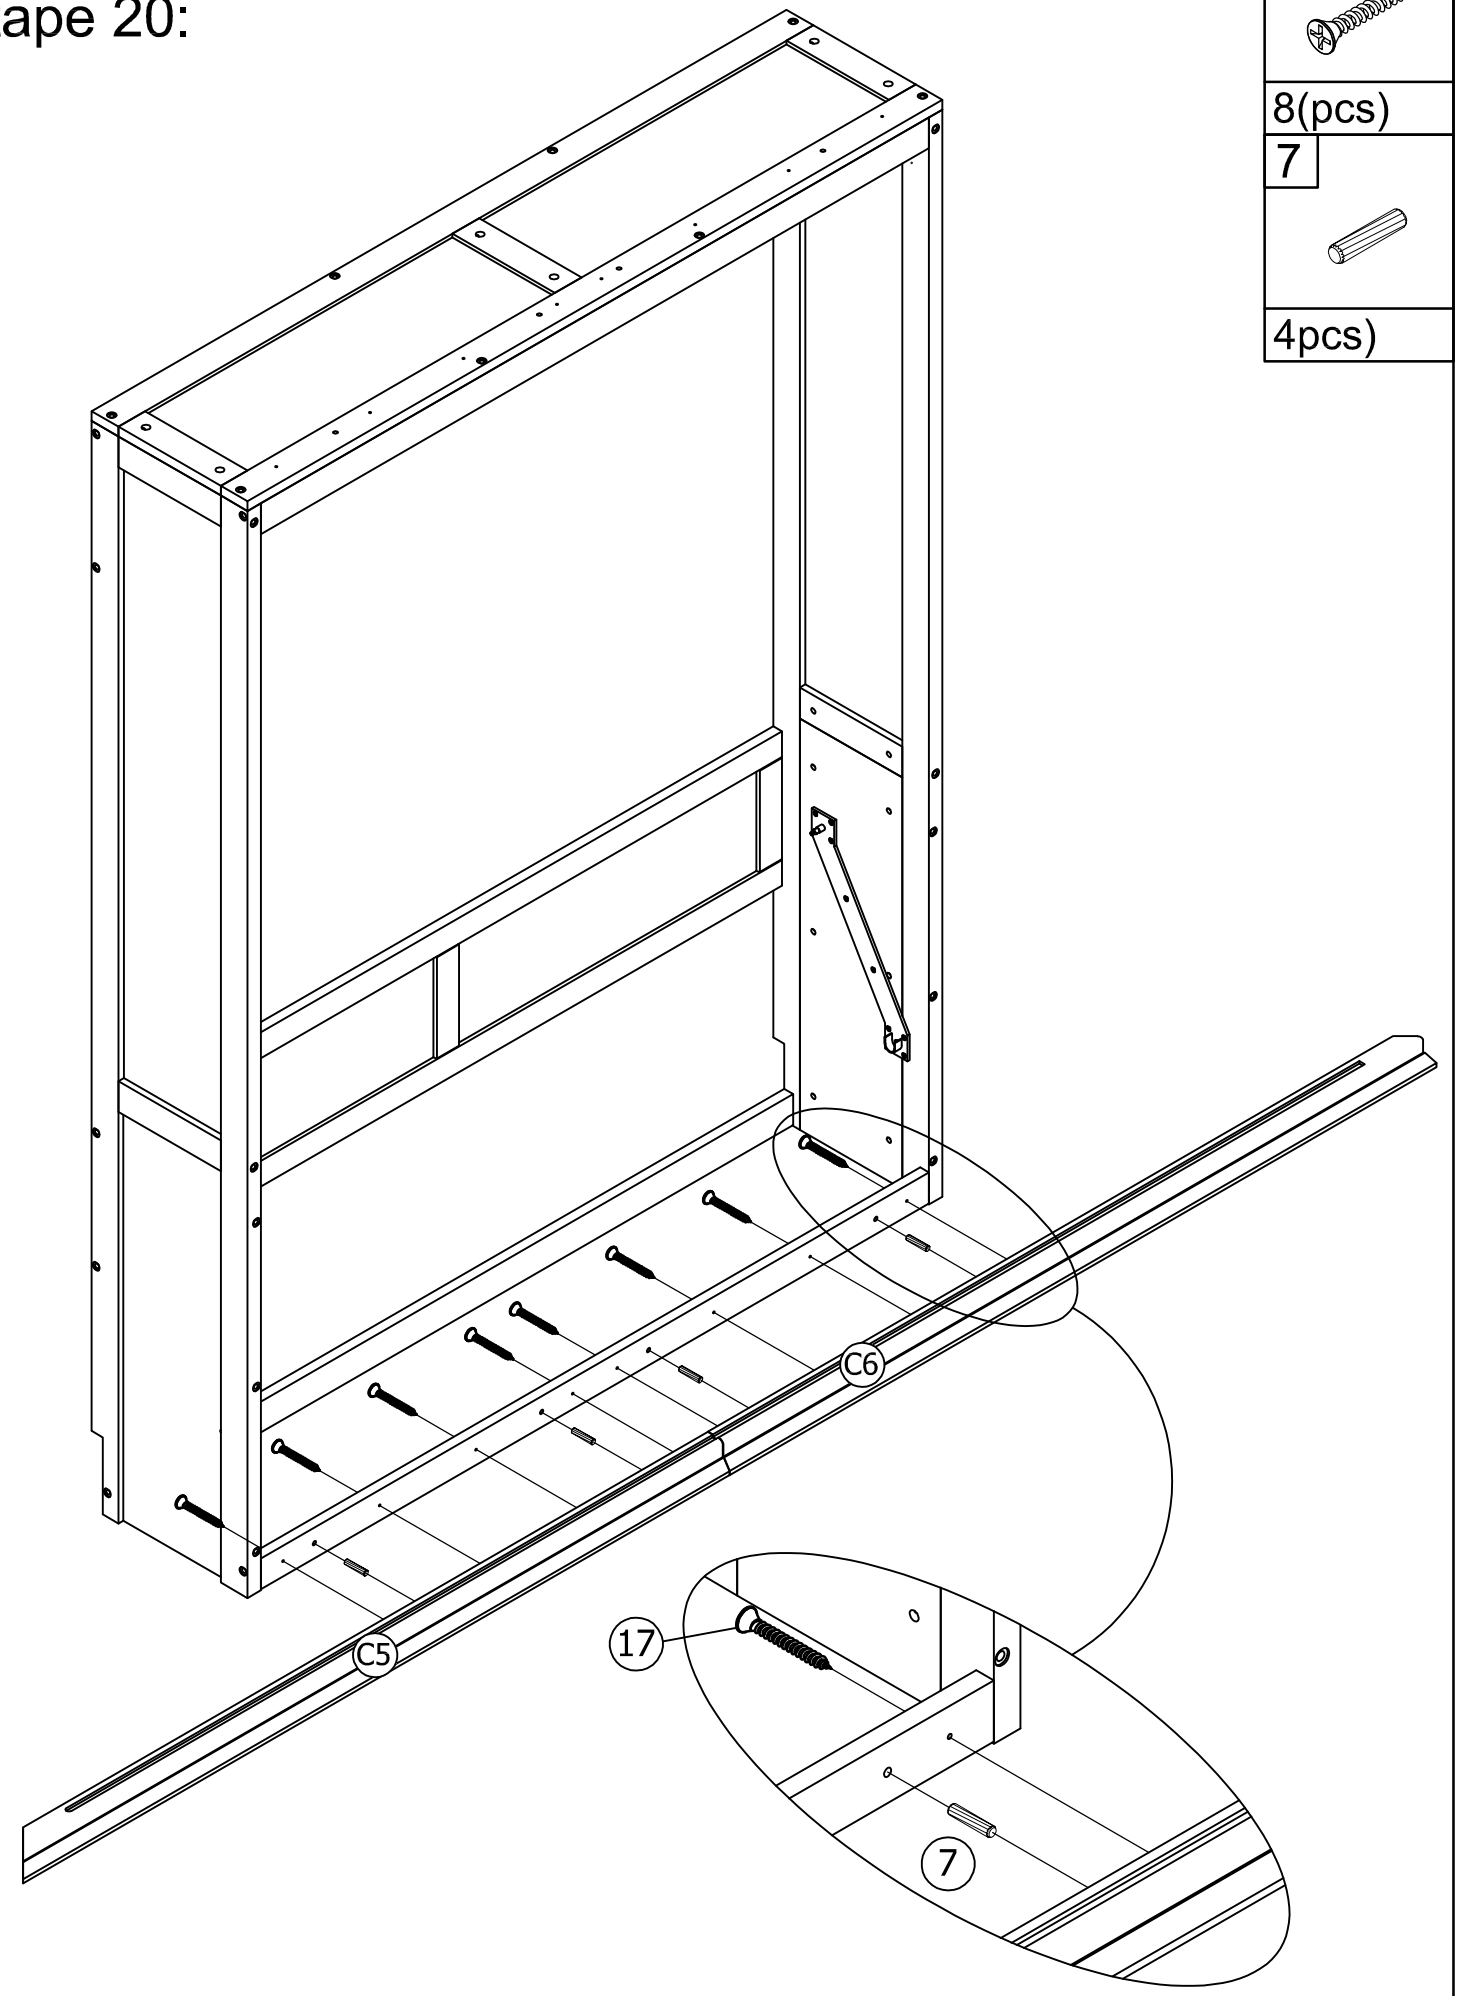Étape 20:



17


8(pcs)

7

4pcs)

STEP 21:

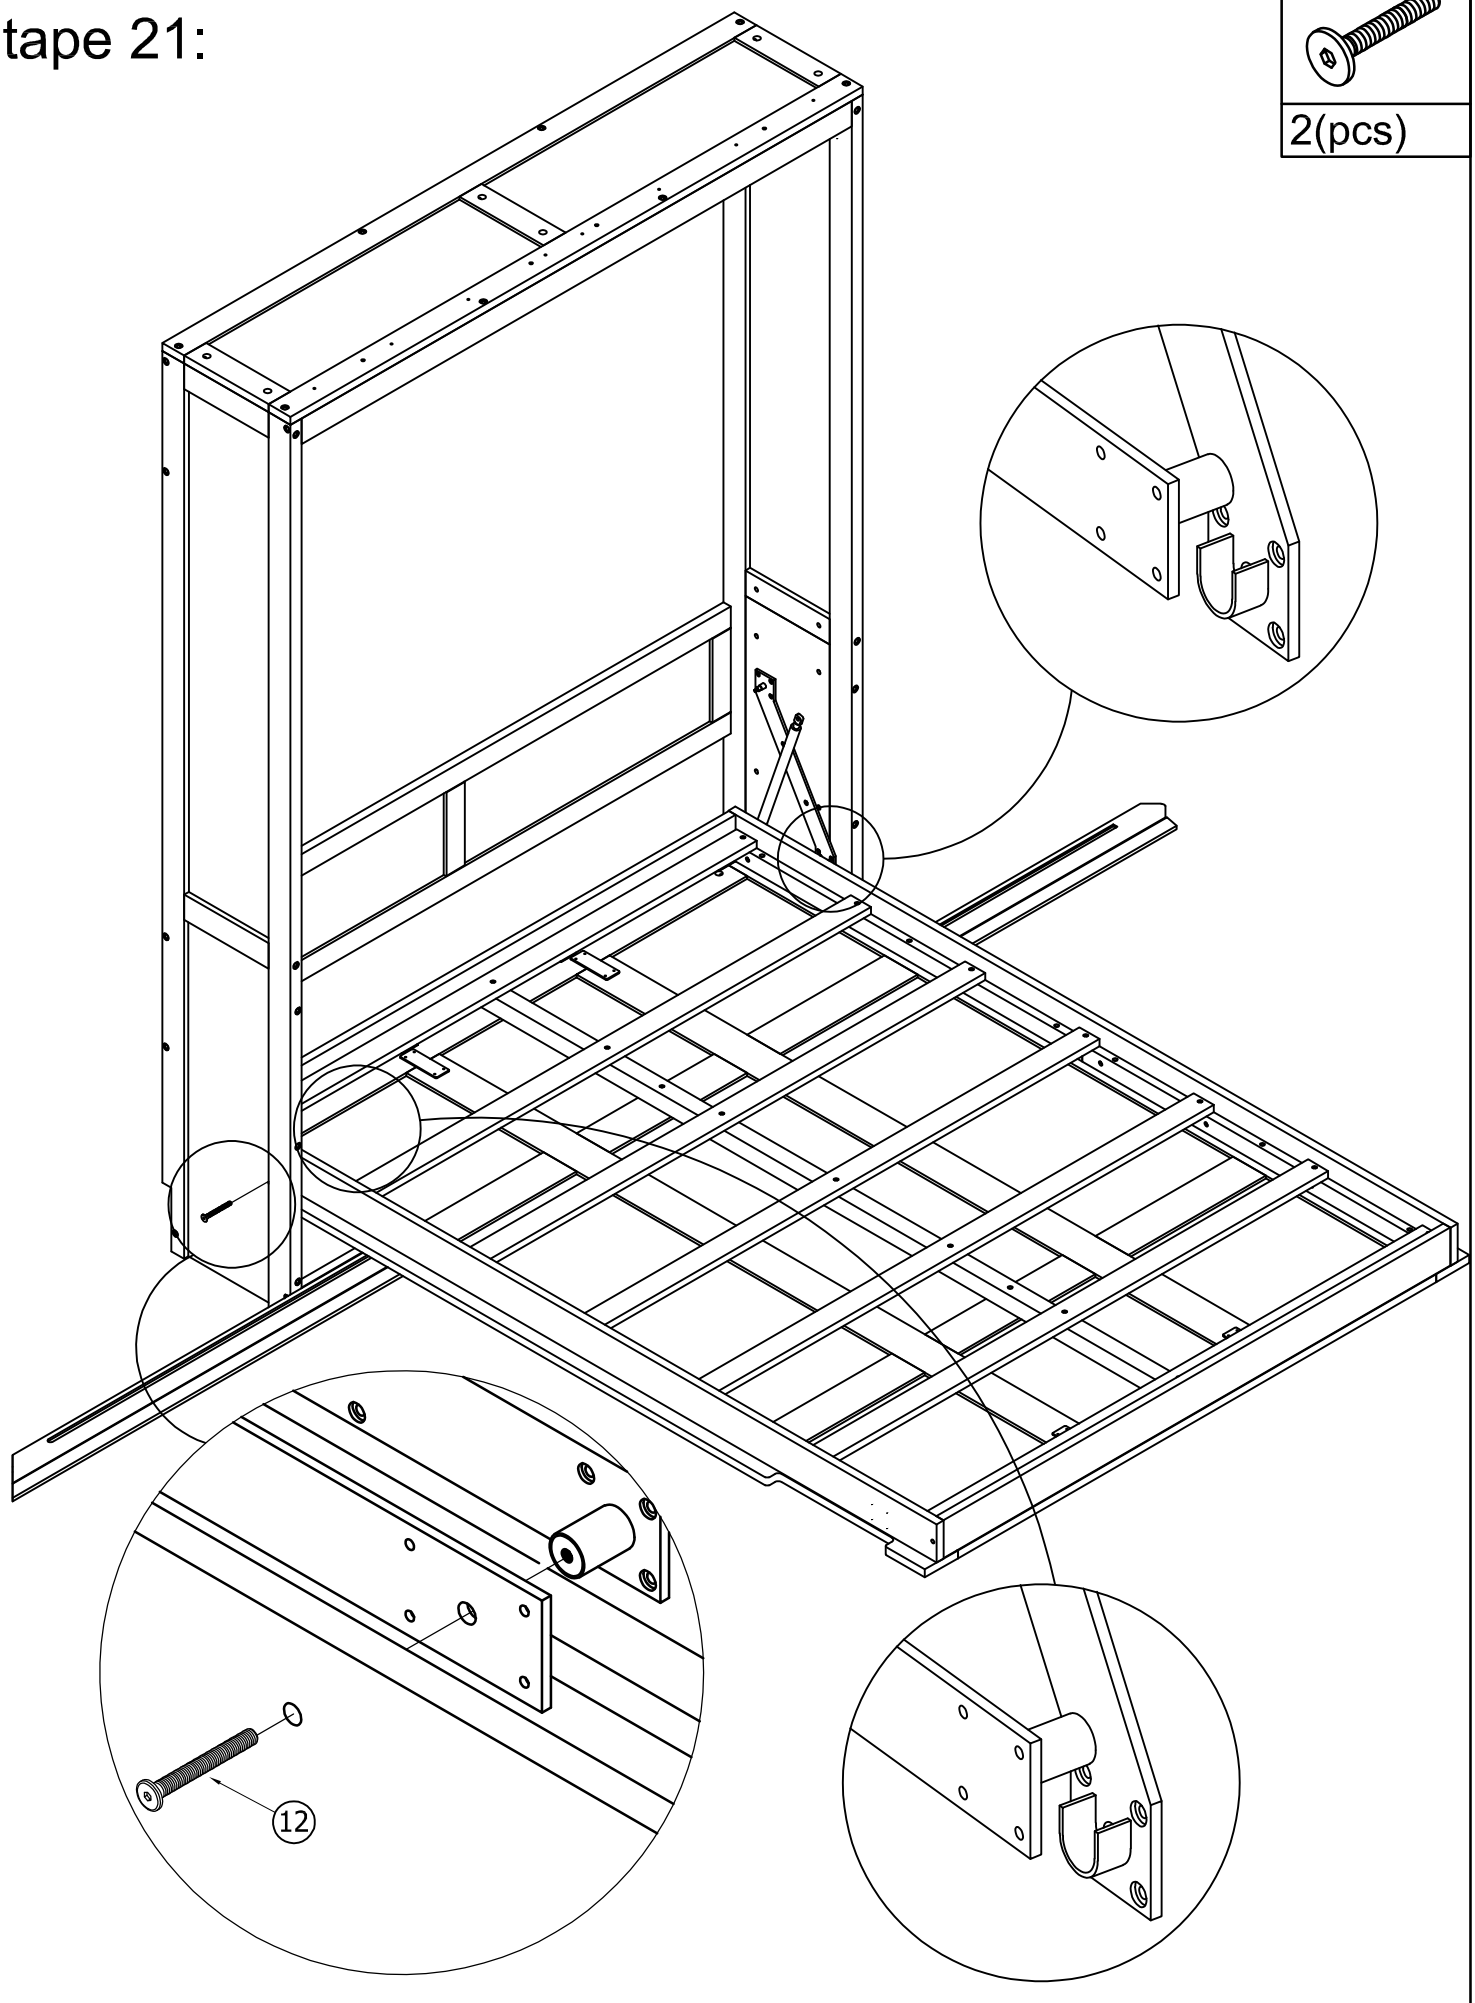Étape 21:




12

2(pcs)


STEP 22:

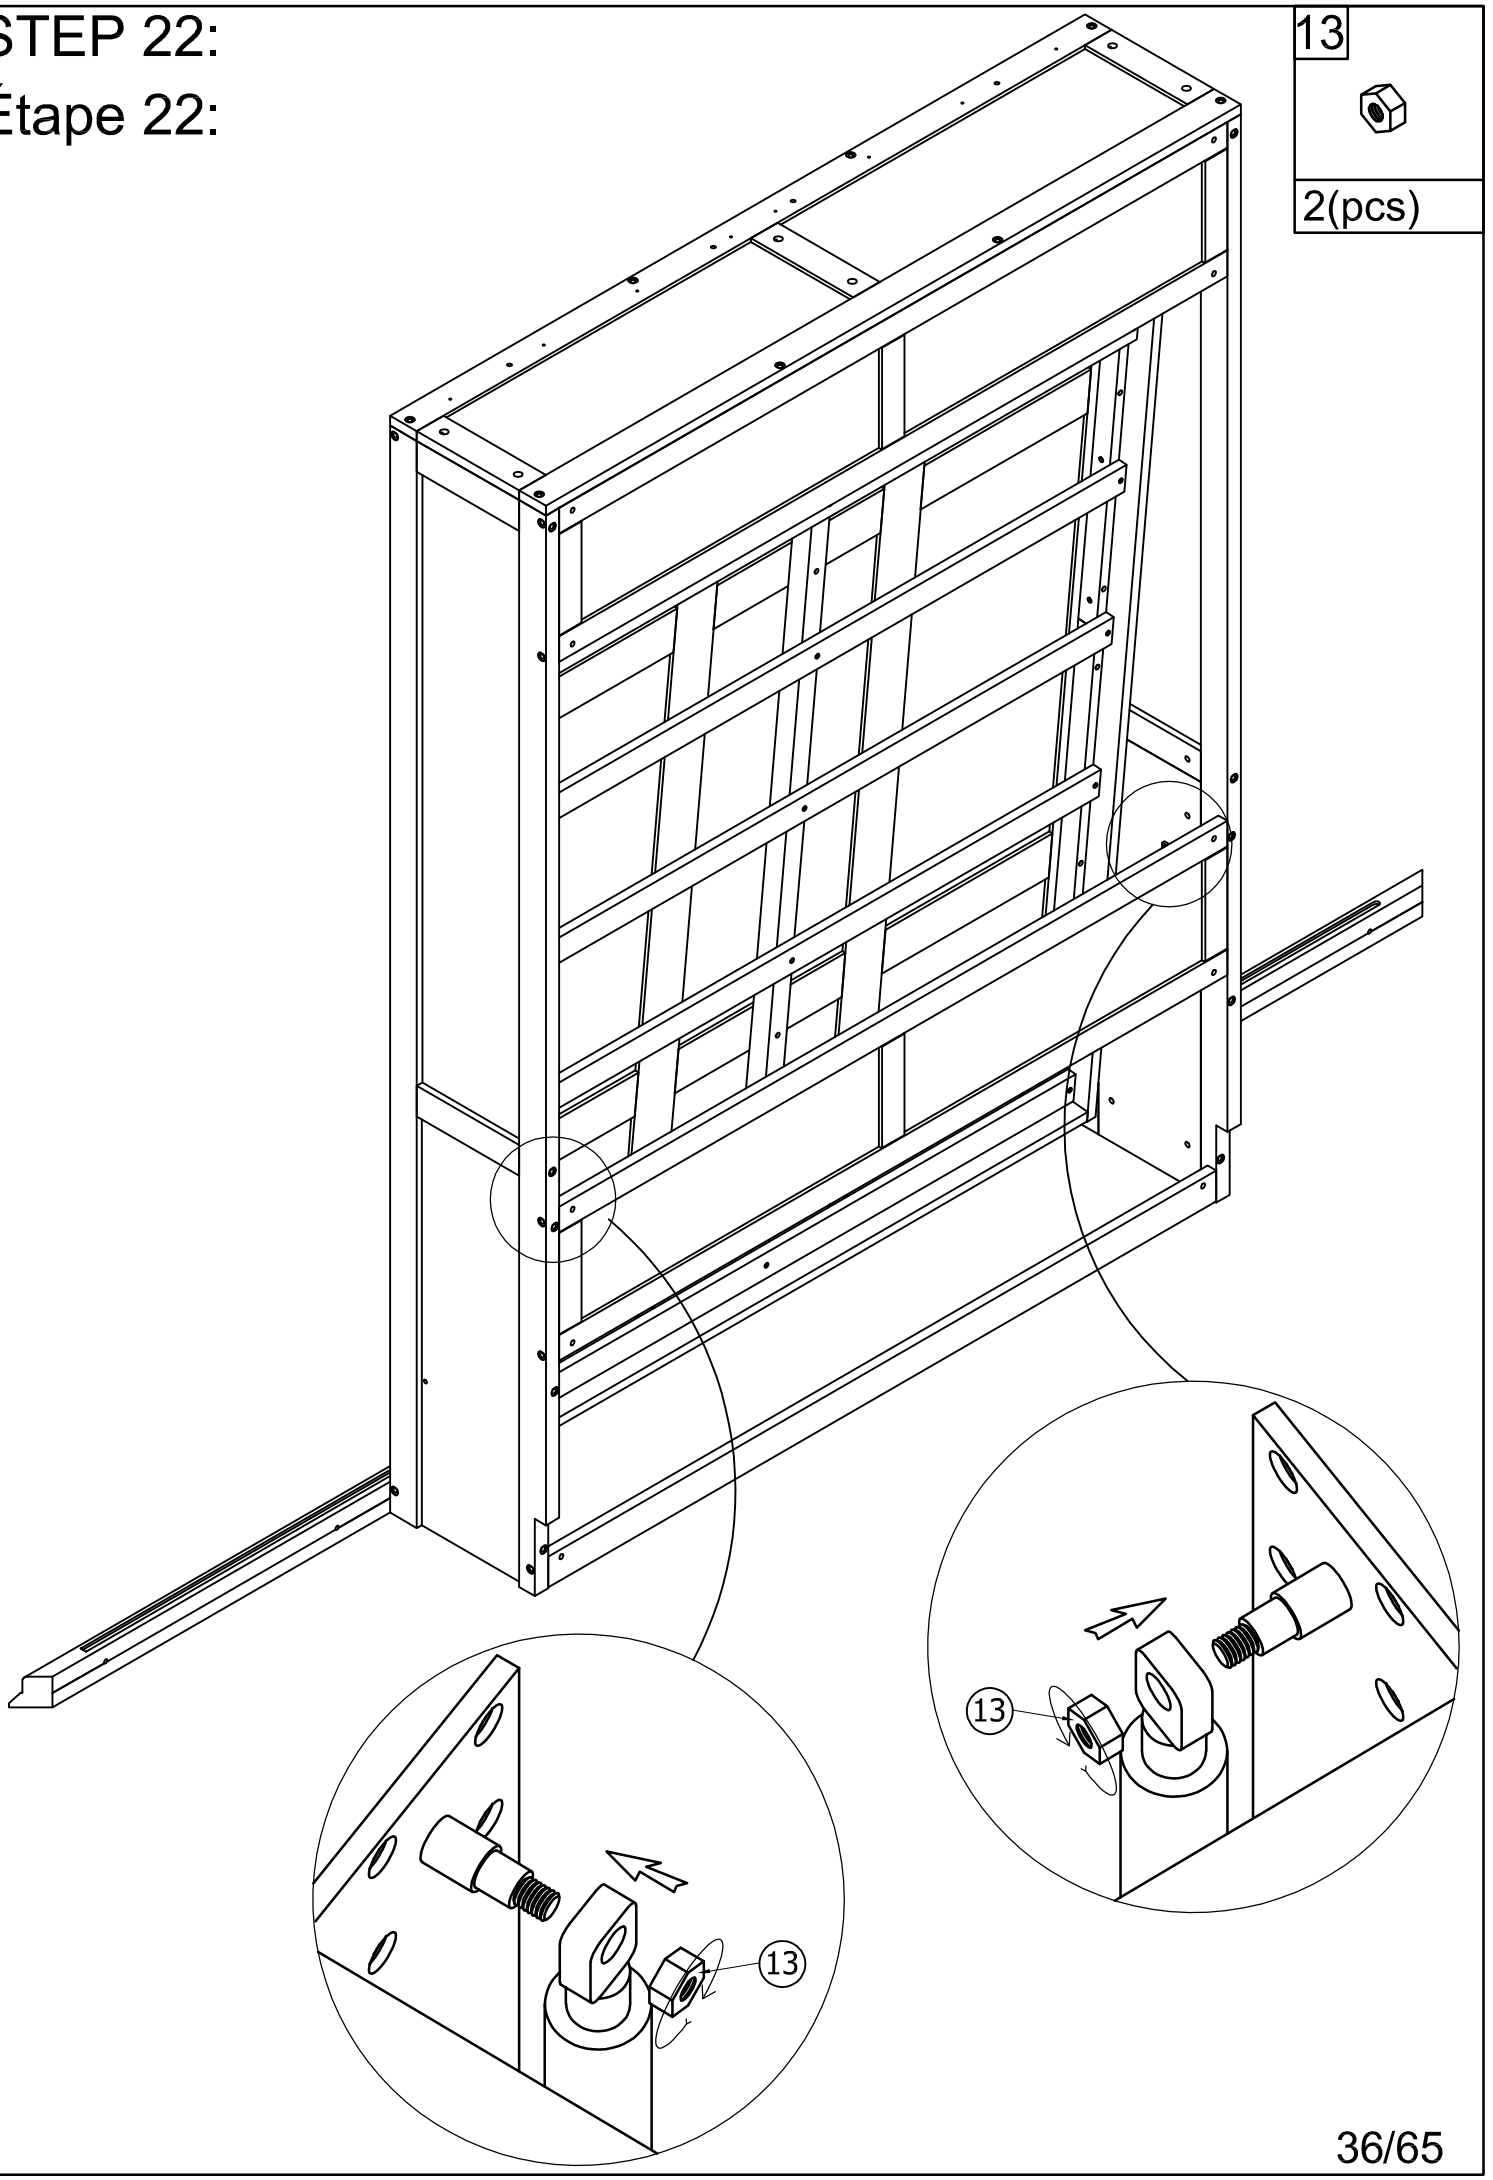Étape 22:



Raise the bed from its previously fixed position, press it against the wall and lower it (as shown).

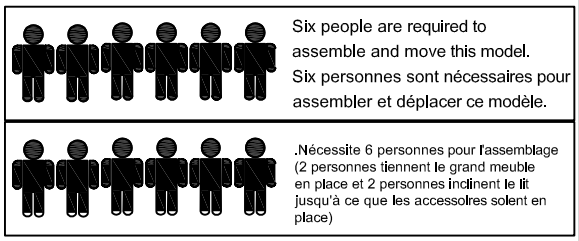
Soulevez le lit de sa position précédemment fixée, appuyez-le contre le mur et abaissez-le (comme indiqué).




STEP 23:

Étape 23:

15




8(pcs)

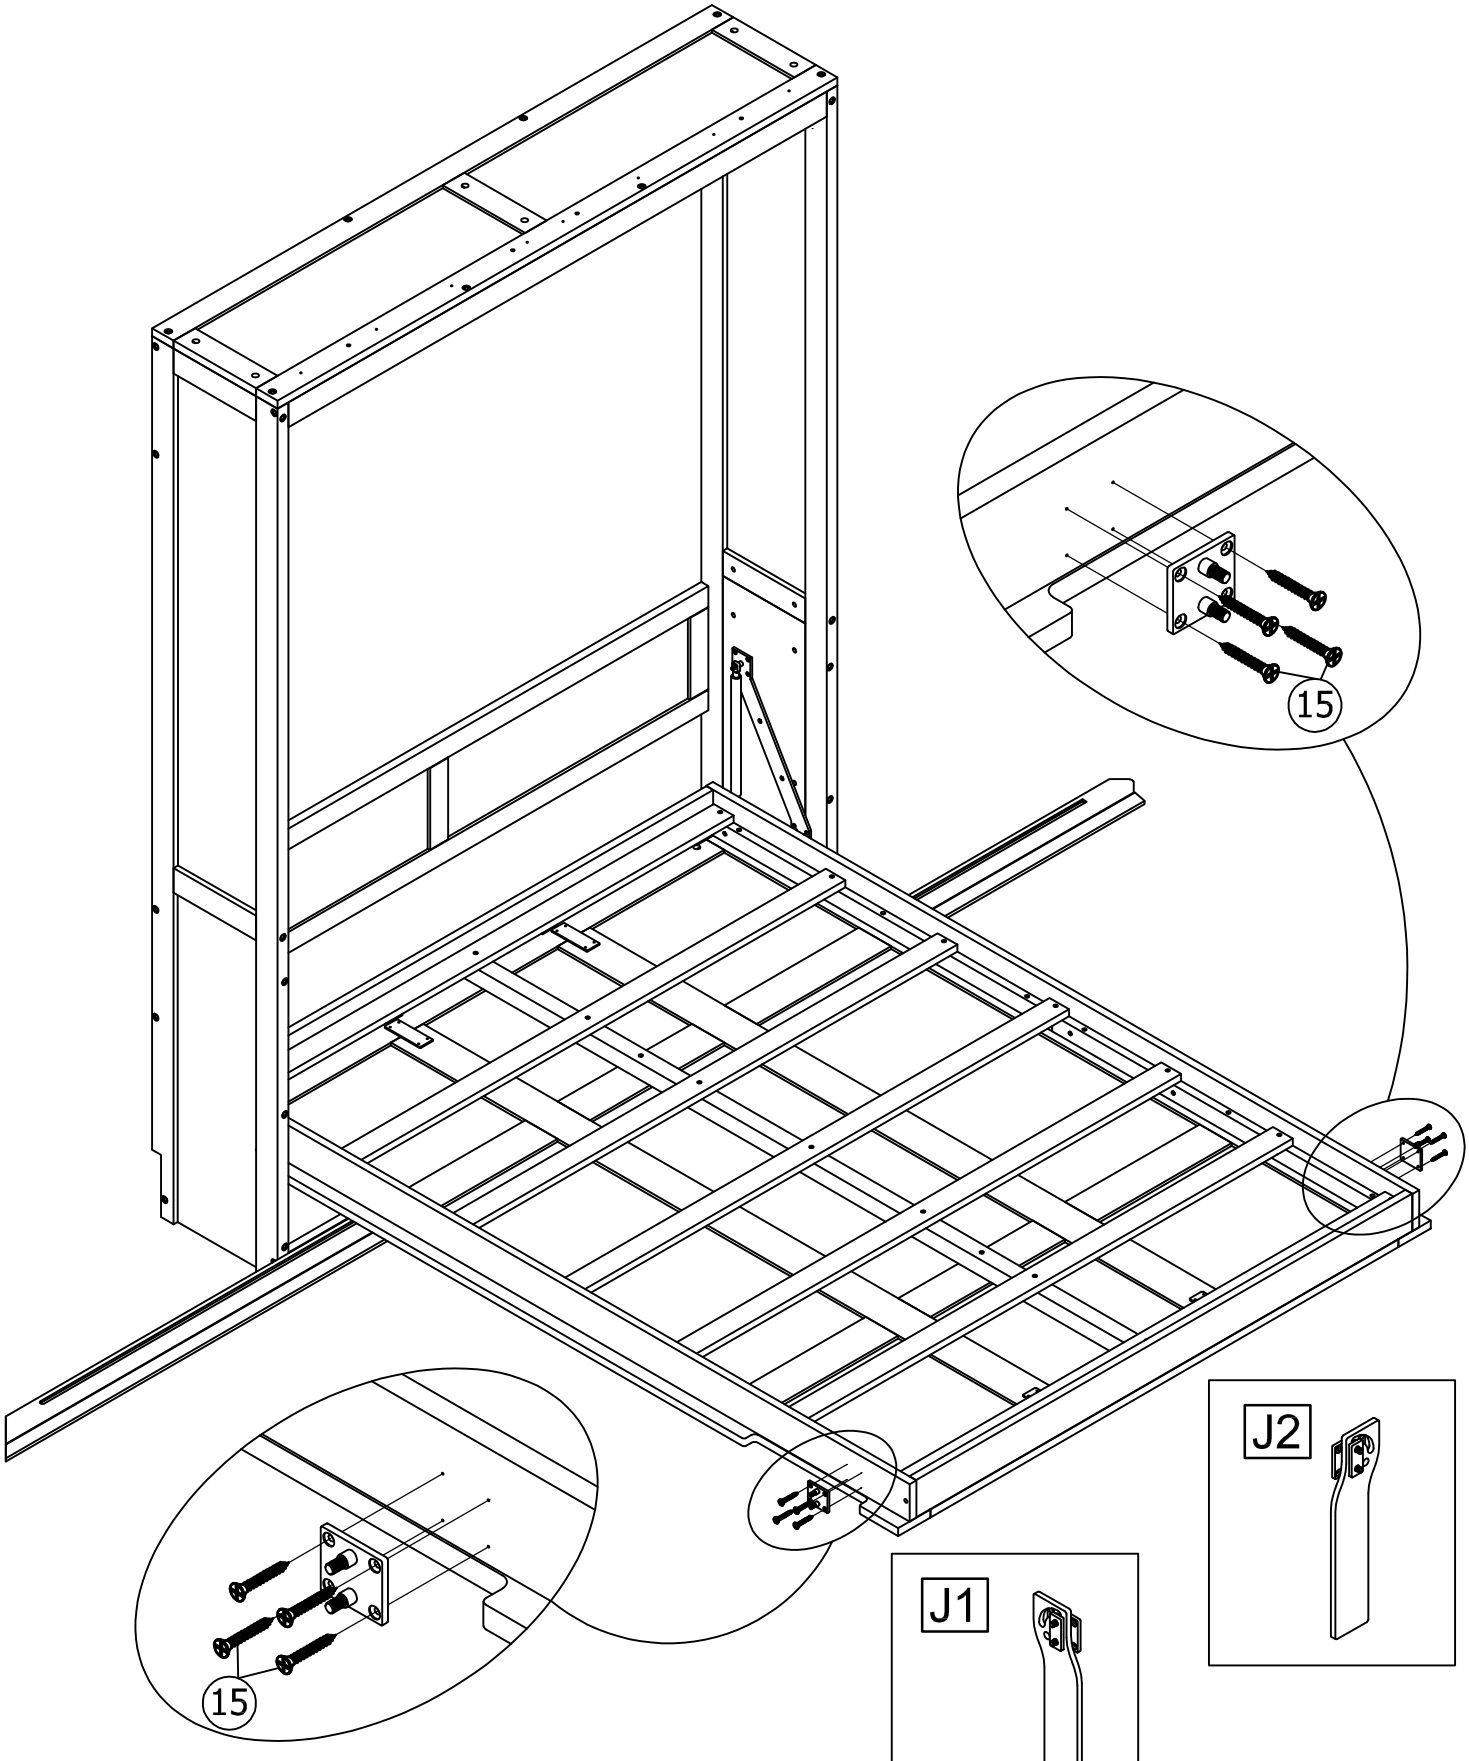

Six people are required to assemble and move this model.
Six personnes sont nécessaires pour assembler et déplacer ce modèle.

.Nécessite 6 personnes pour l'assemblage (2 personnes tiennent le grand meuble en place et 2 personnes Inclinent le lit jusqu'à ce que les accessoires soient en place)


15



3(pcs)

STEP 24:

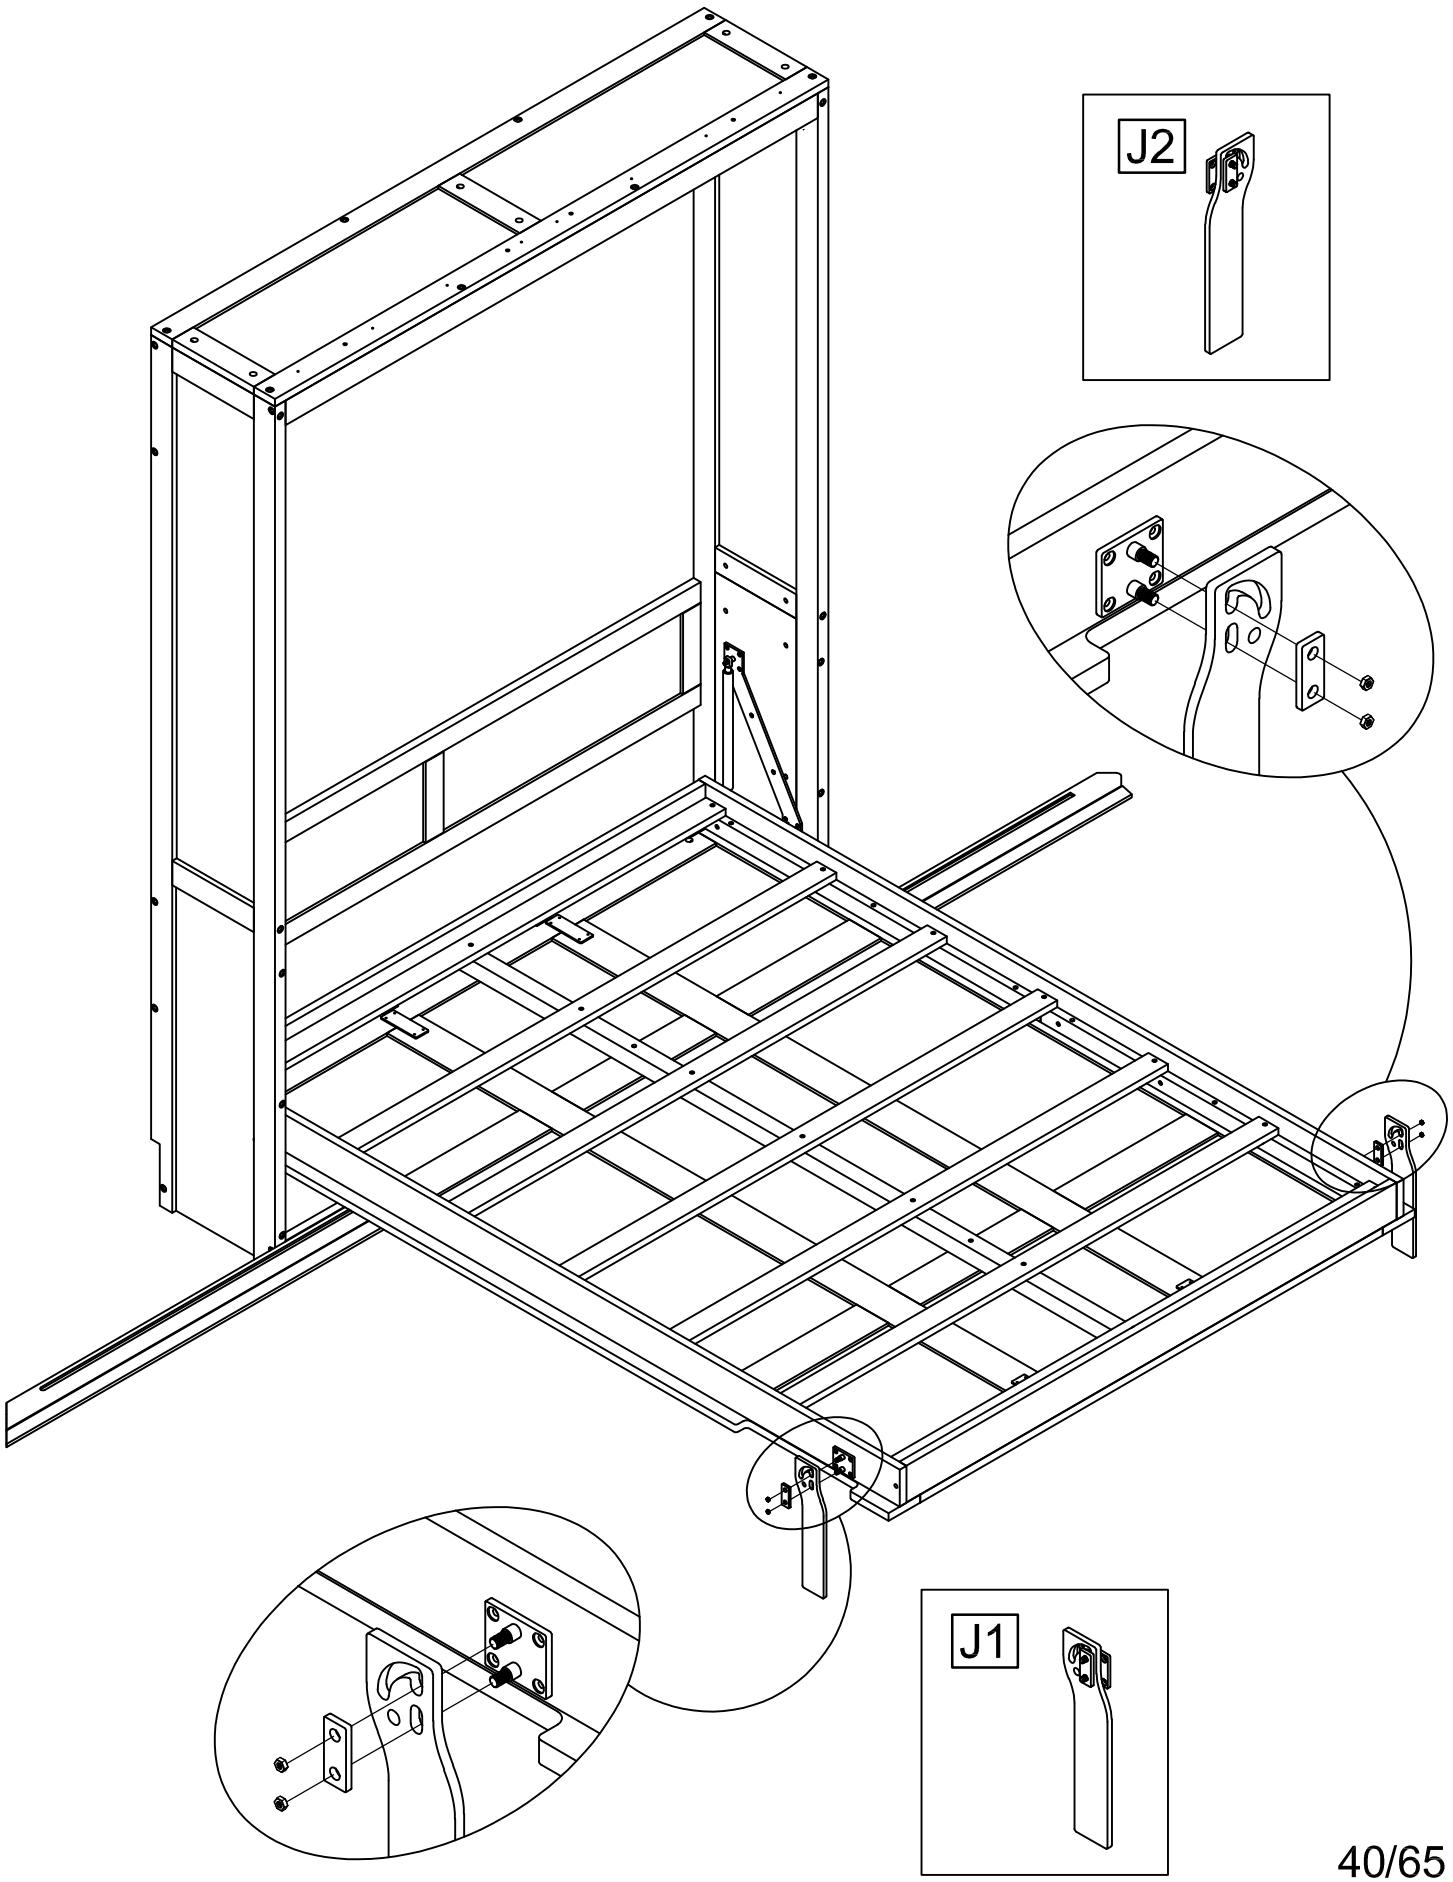
Étape 24:



STEP 25:


Étape 25:

24	15
2(pcs)	4(pcs)

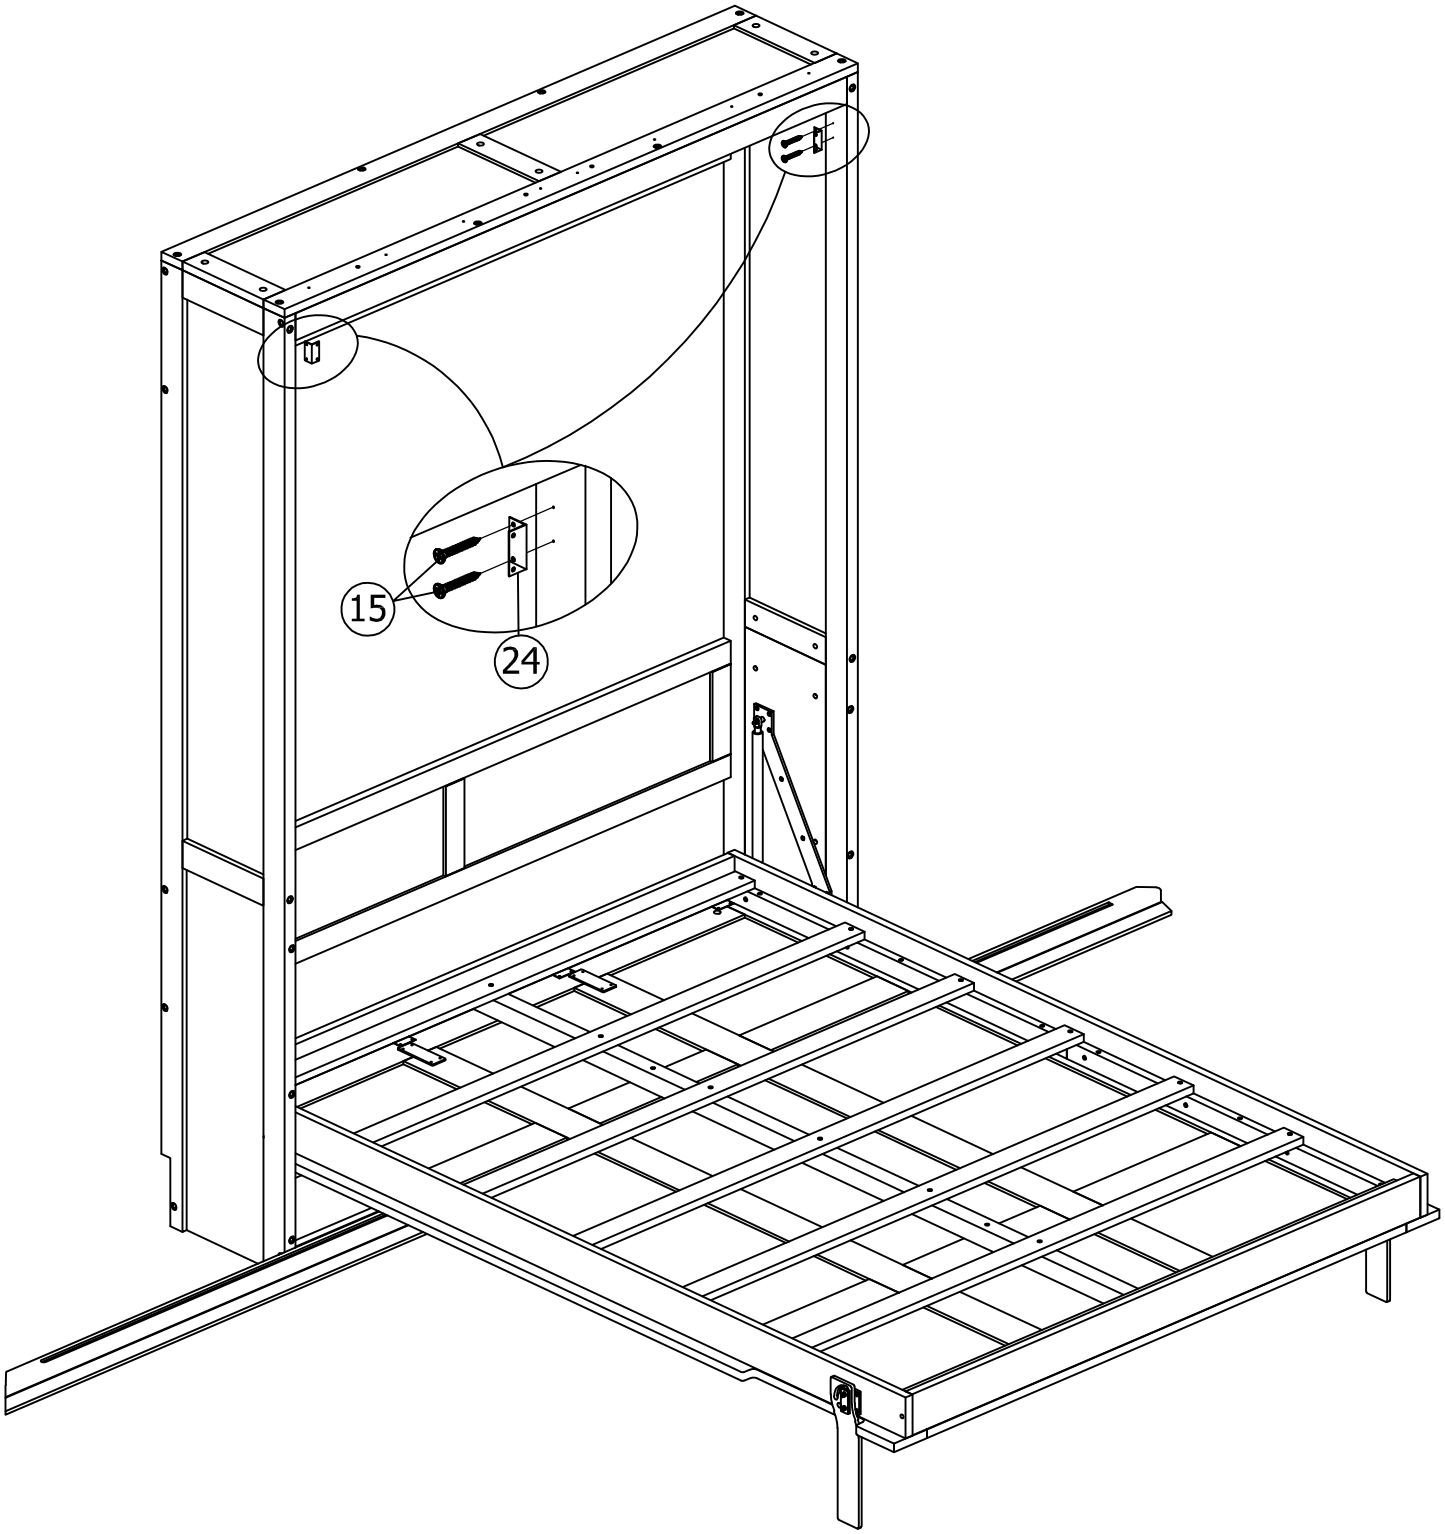

STEP 26:

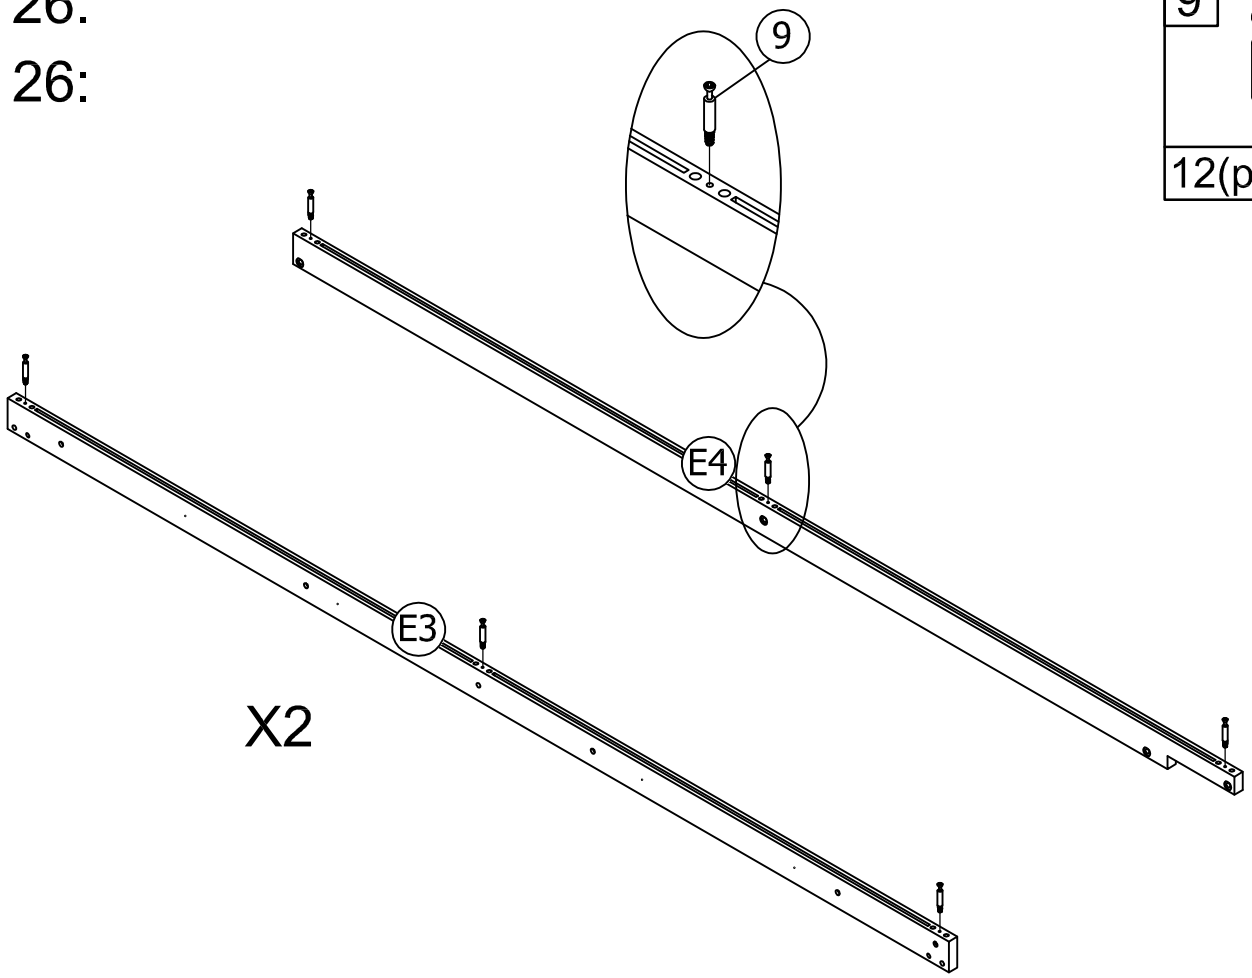
Étape 26:



9	
12(pcs)	

STEP 27:

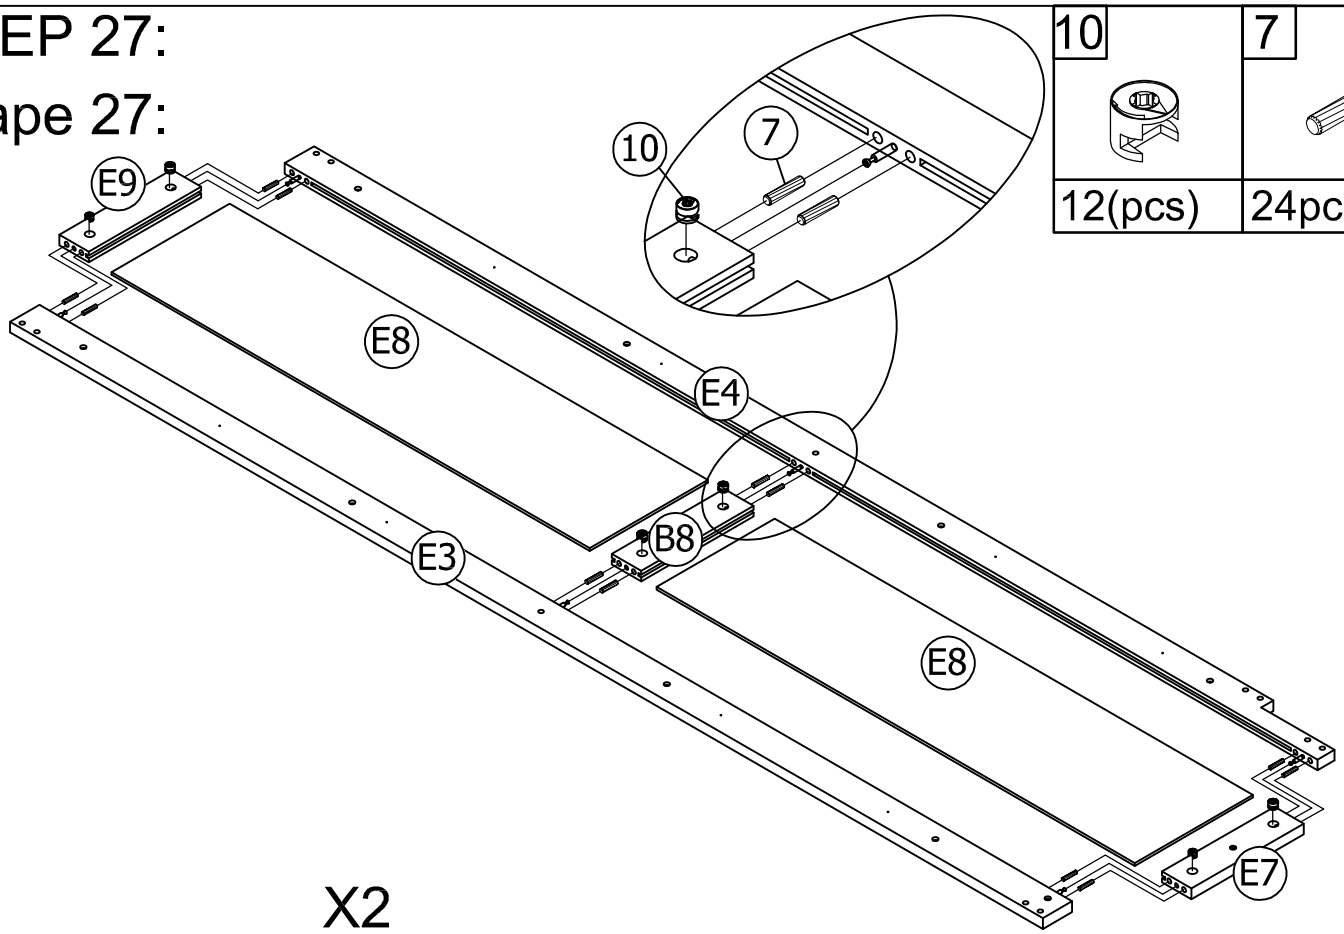Étape 27:




10	7
12(pcs)	24pcs)

STEP 28:

Étape 28:


9	
	12(pcs)

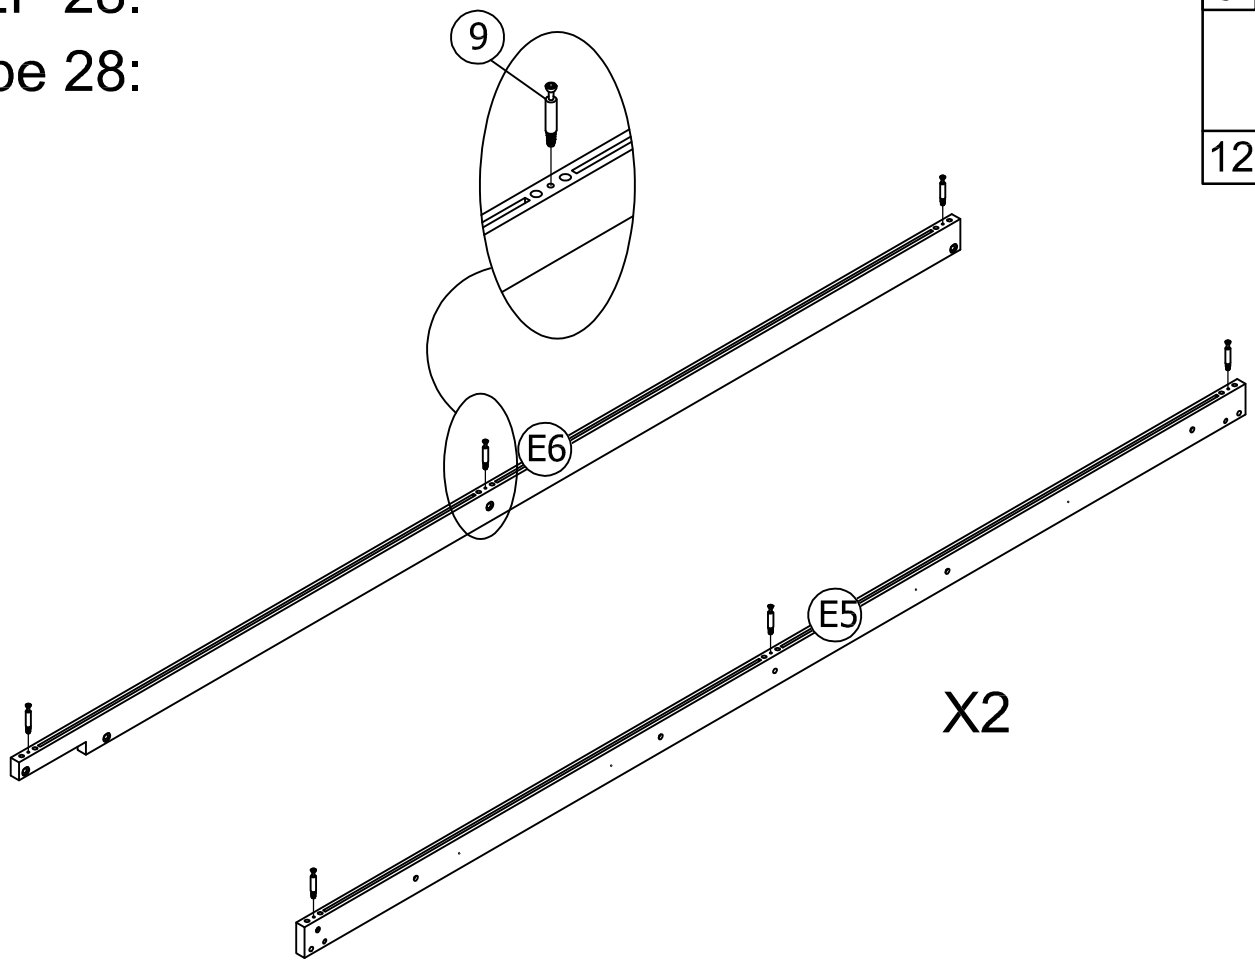

STEP 29:

Étape 29:

10	7
12(pcs)	24pcs)

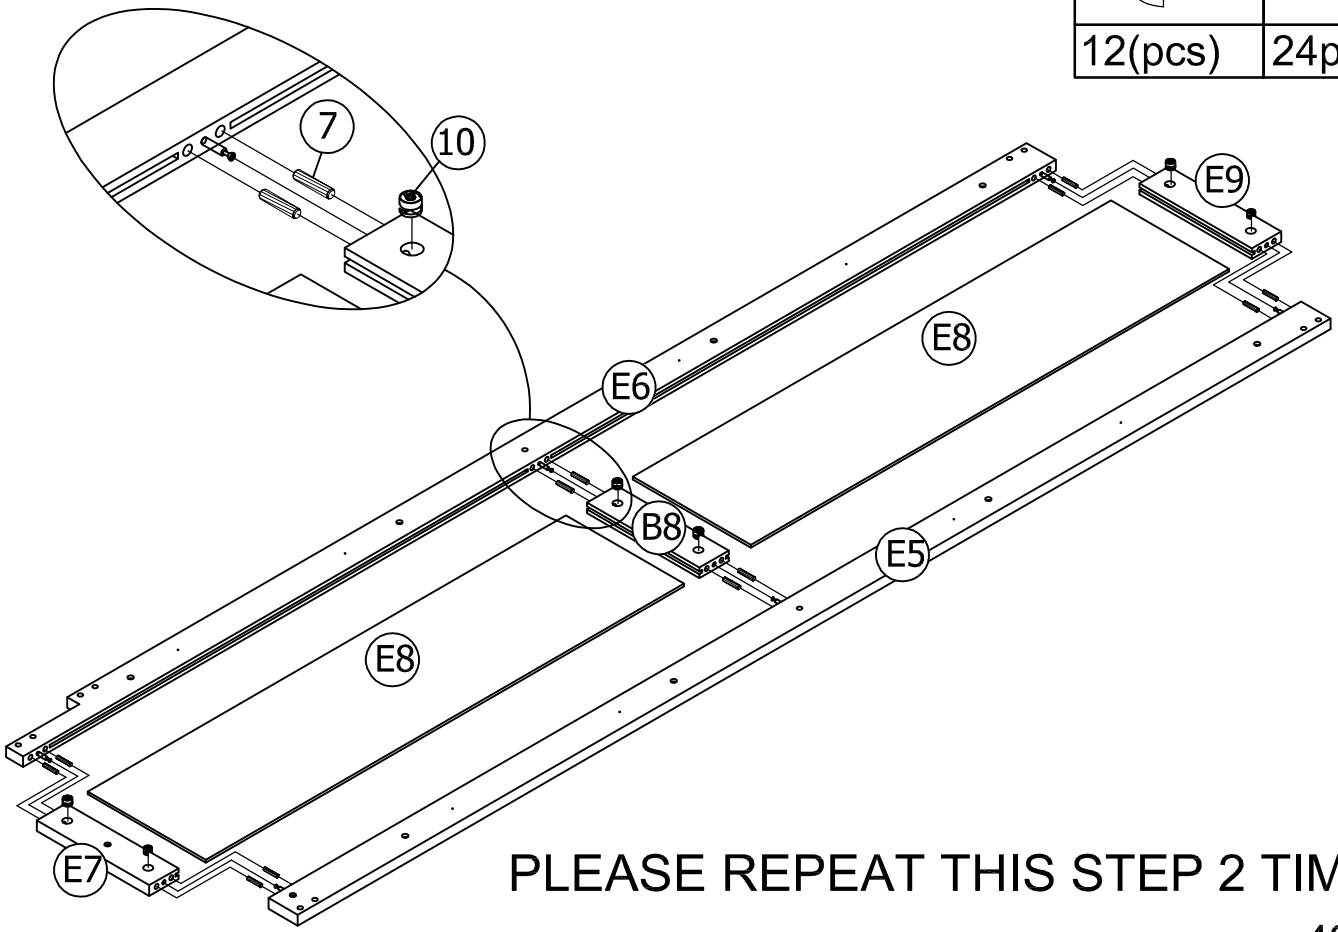


PLEASE REPEAT THIS STEP 2 TIMES.

STEP 30:

Étape 30:


8	7	4
20(pcs)	20(pcs)	20(pcs)

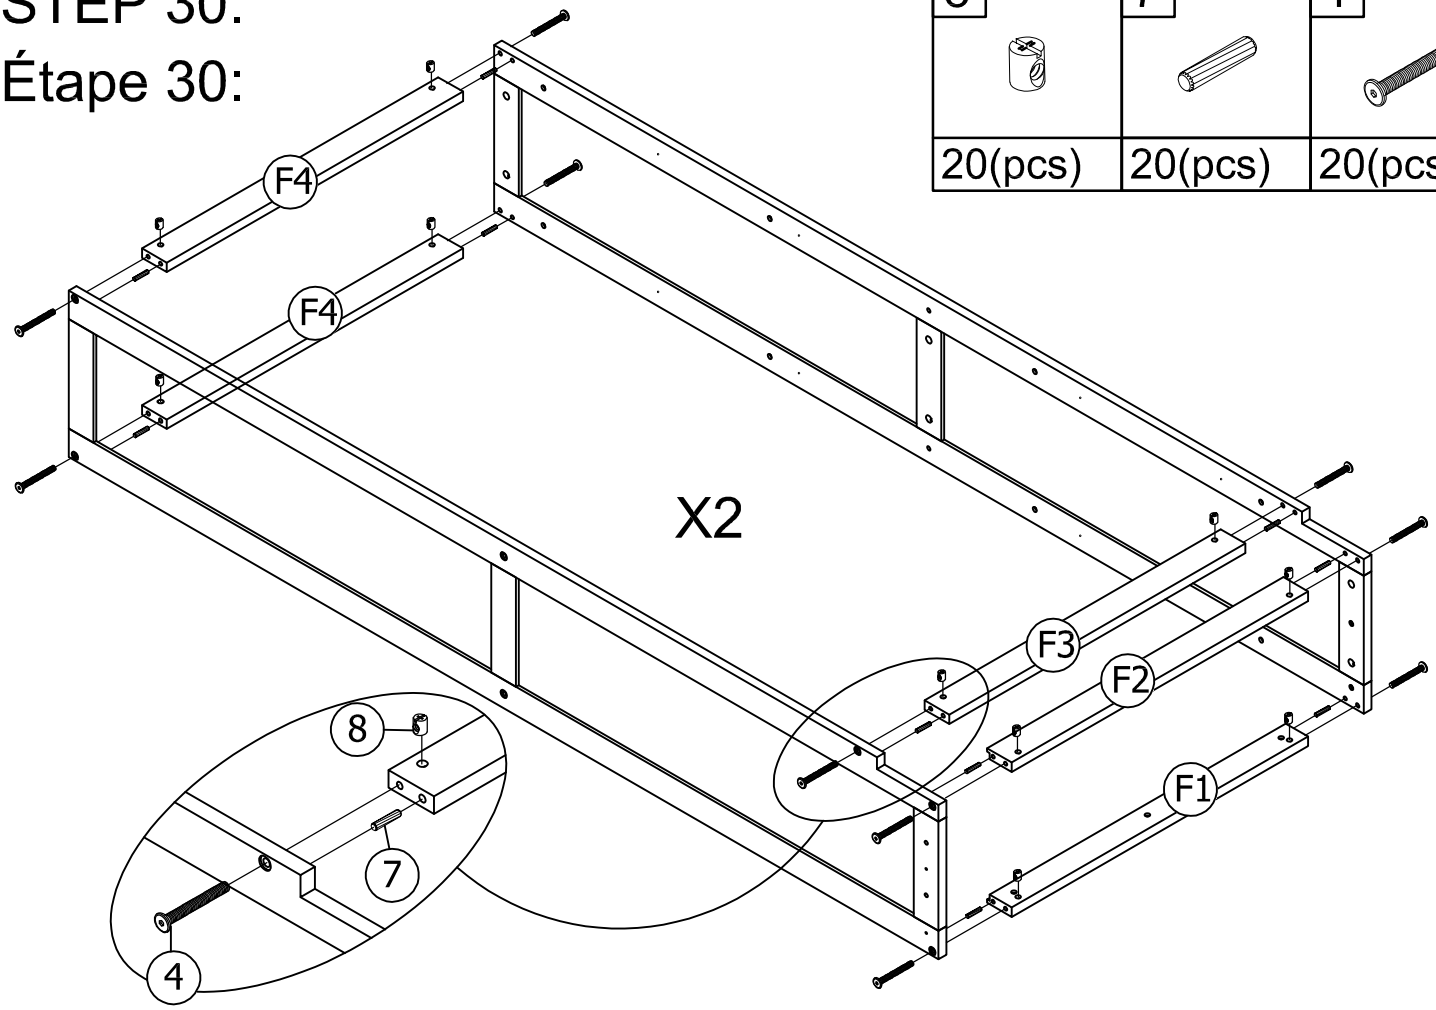

STEP 31:

Étape 31:


7	1
4(pcs)	12(pcs)

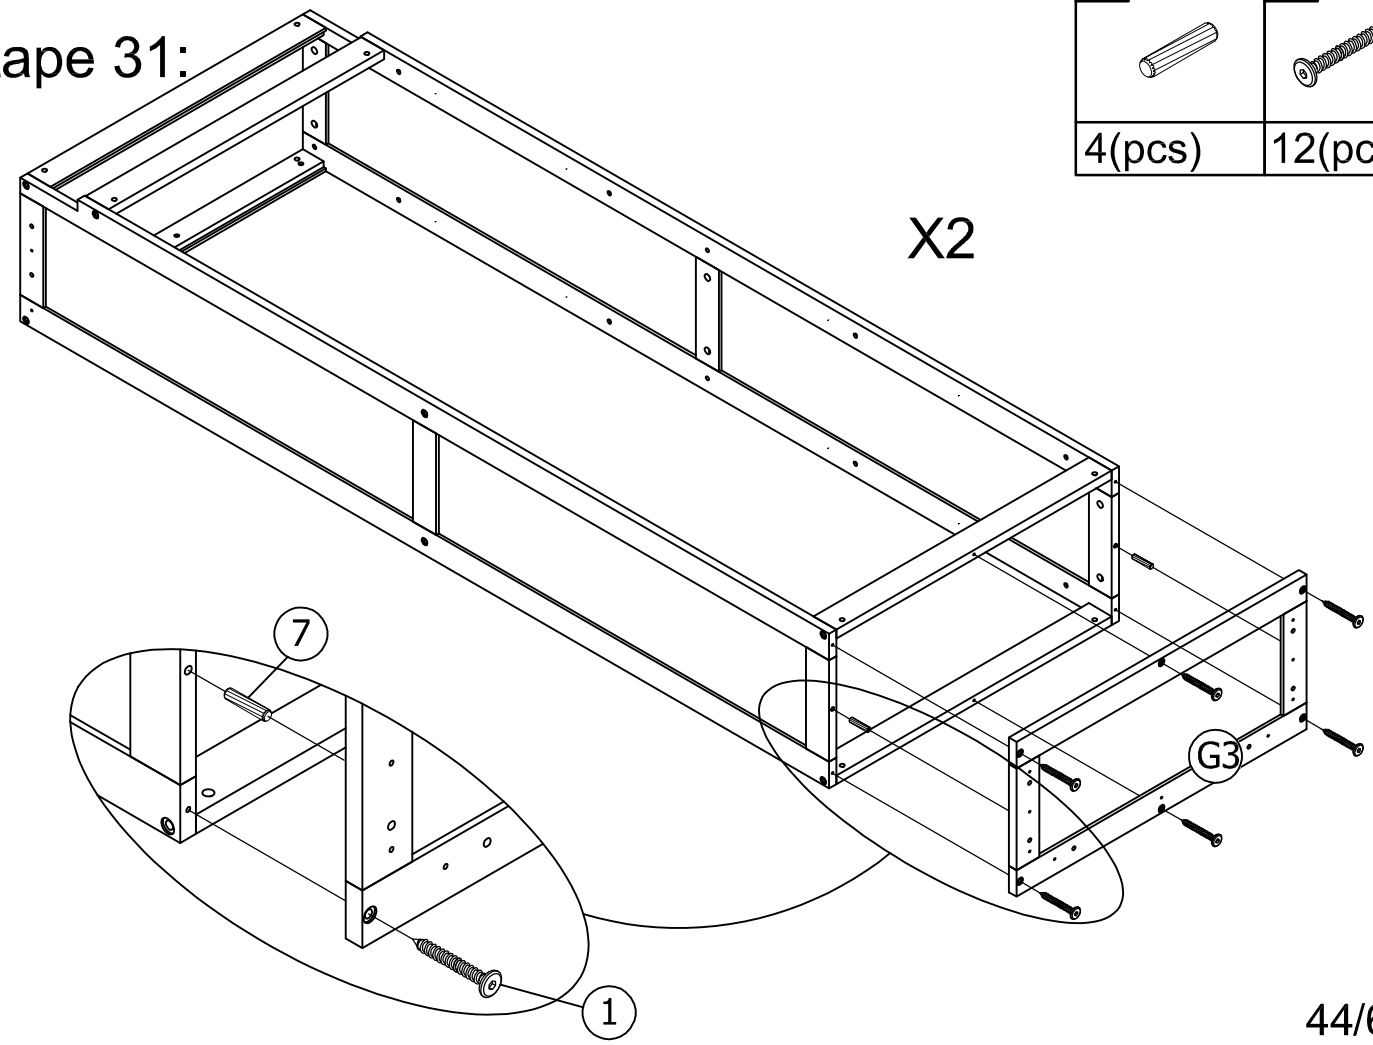

STEP 32:

Étape 32:


8	4
8(pcs)	8(pcs)

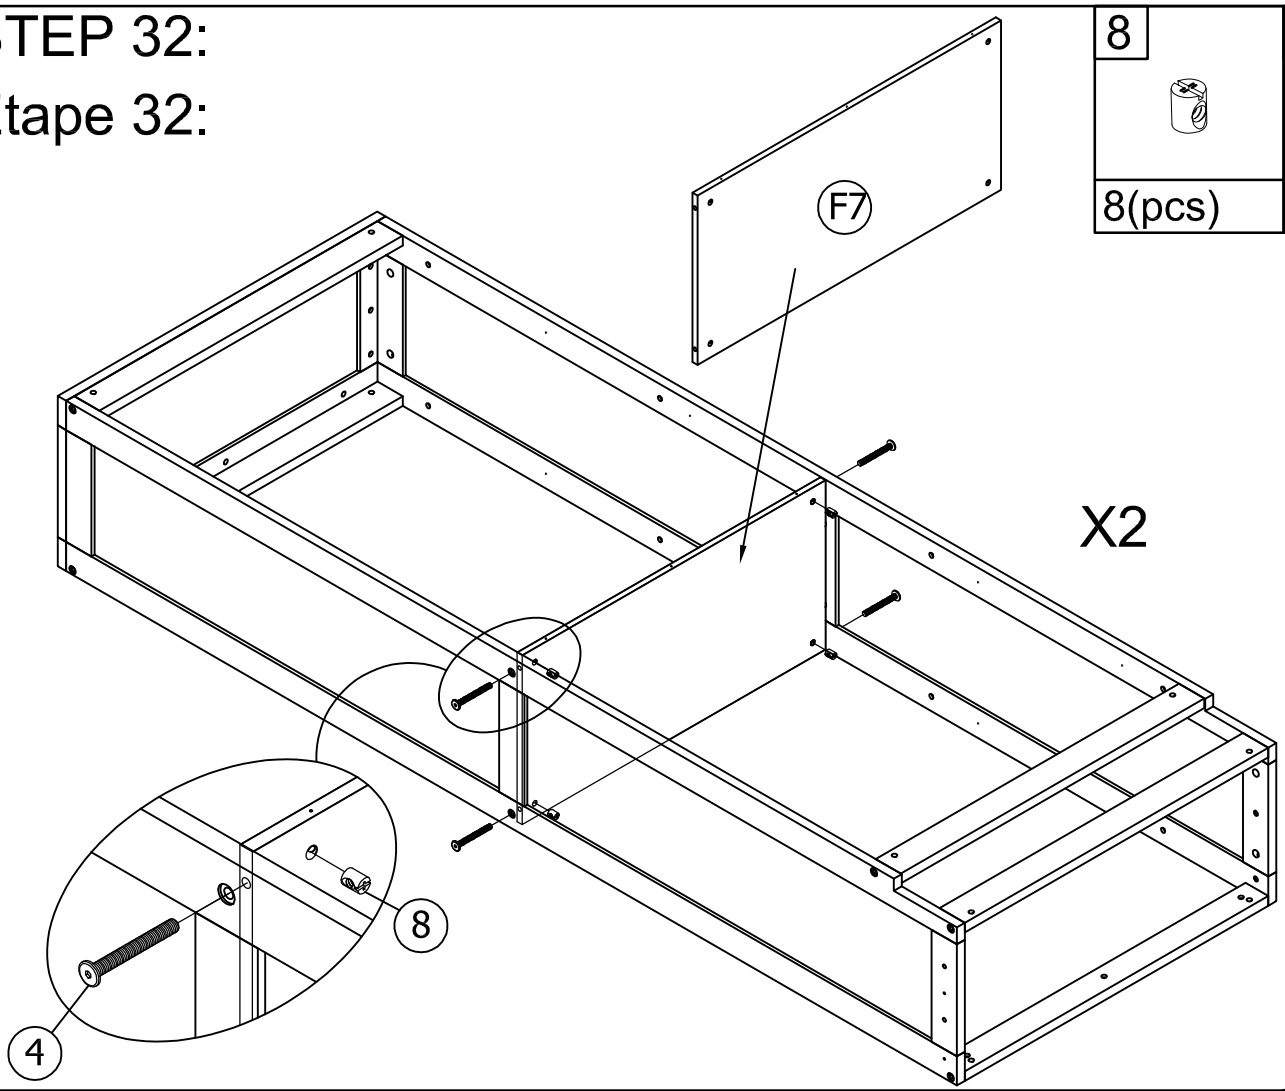

STEP 33:

Étape 33:

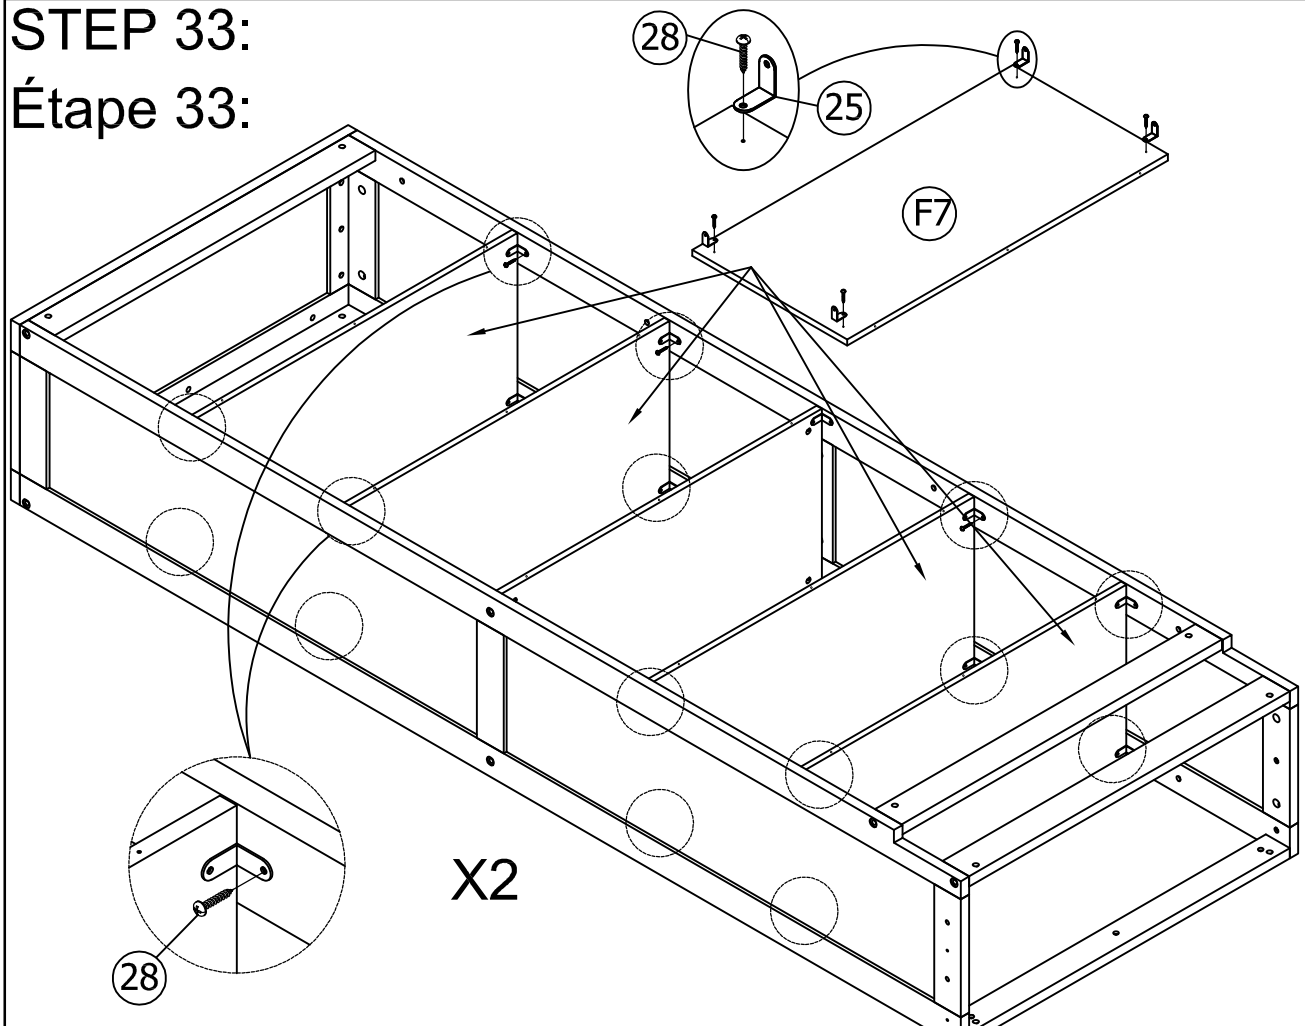28
80(pcs)
25
40(pcs)



STEP 34:


Étape 34:

18



98(pcs)

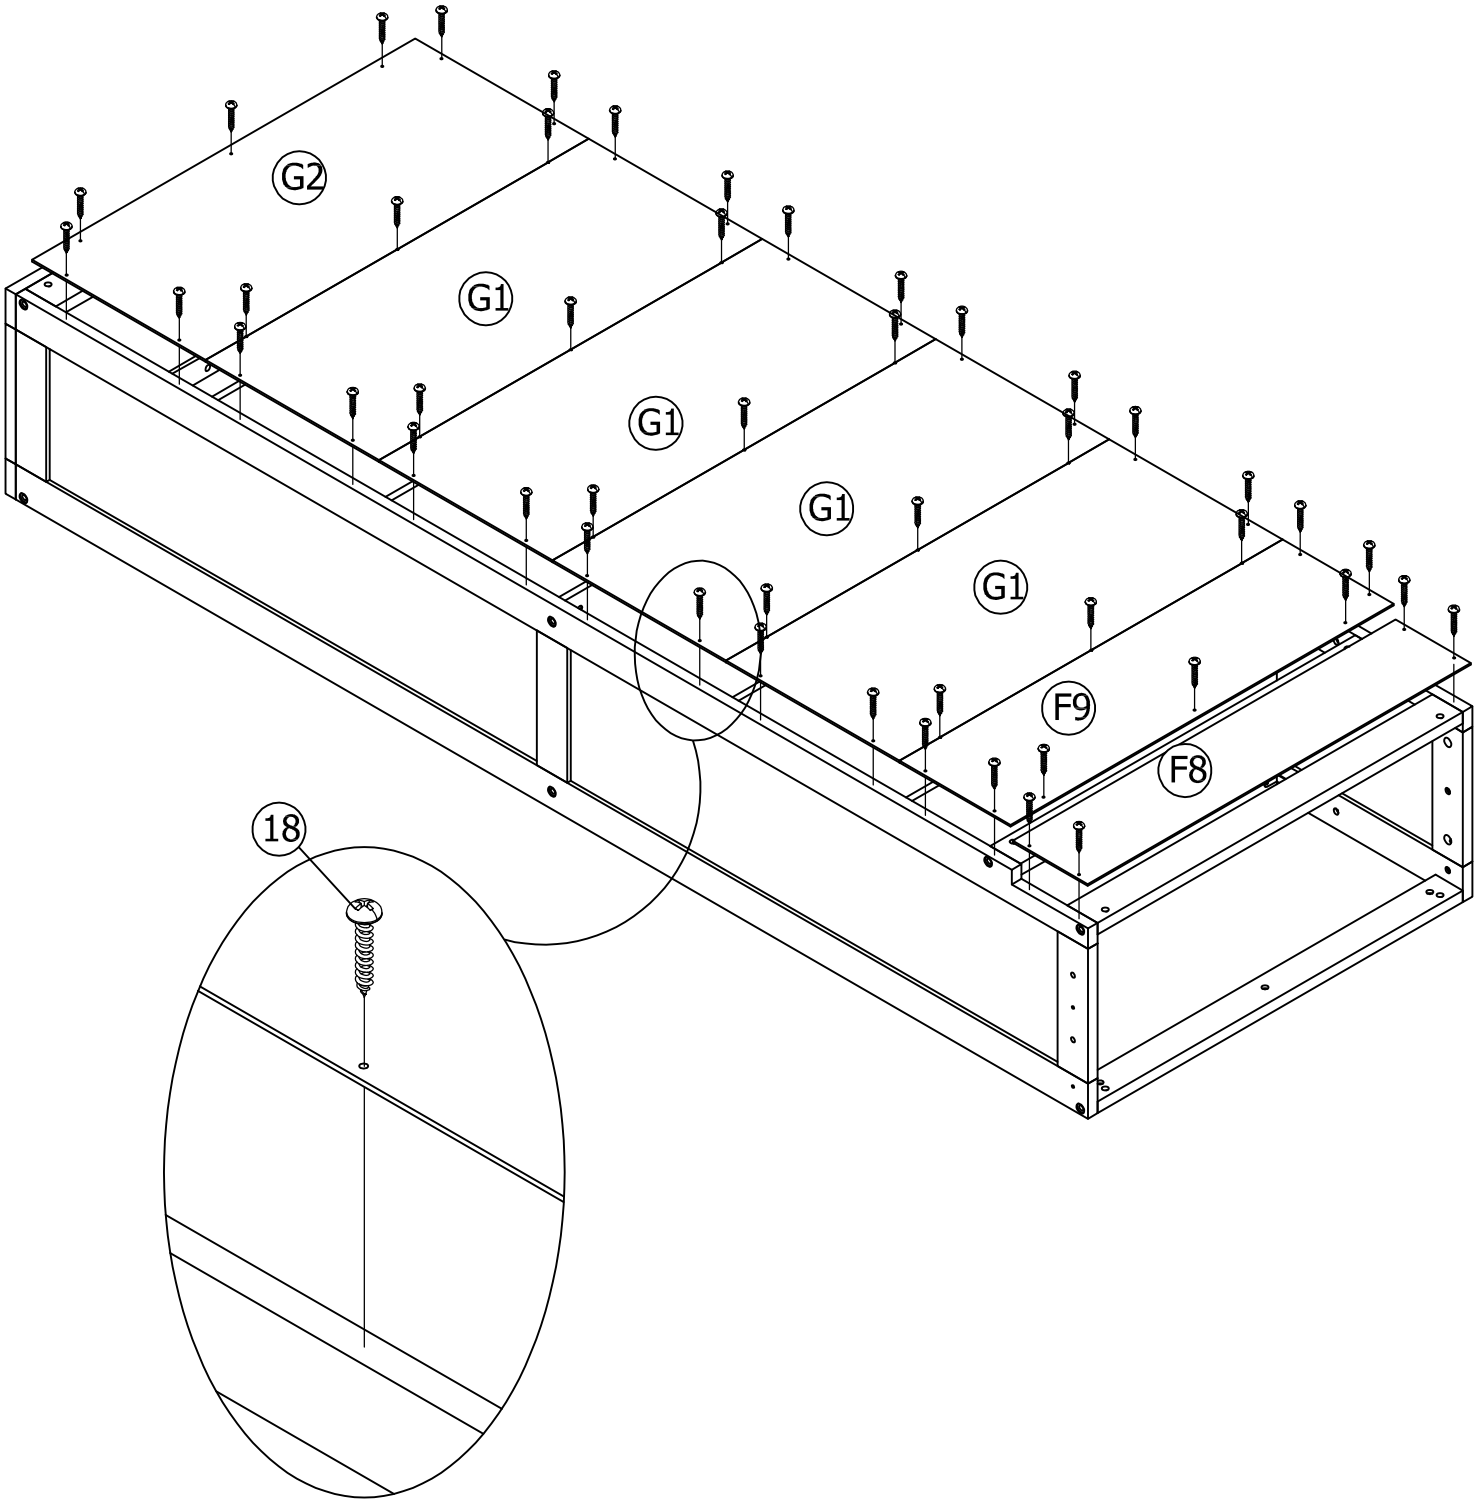
PLEASE REPEAT THIS STEP 2 TIMES.



STEP 35:

Étape 35:

17



20(pcs)

Left cabinet


17

Right cabinet

STEP 36:

Étape 36:

17



10(pcs)

7




8pcs)


STEP 37:

Étape 37:

15




12(pcs)

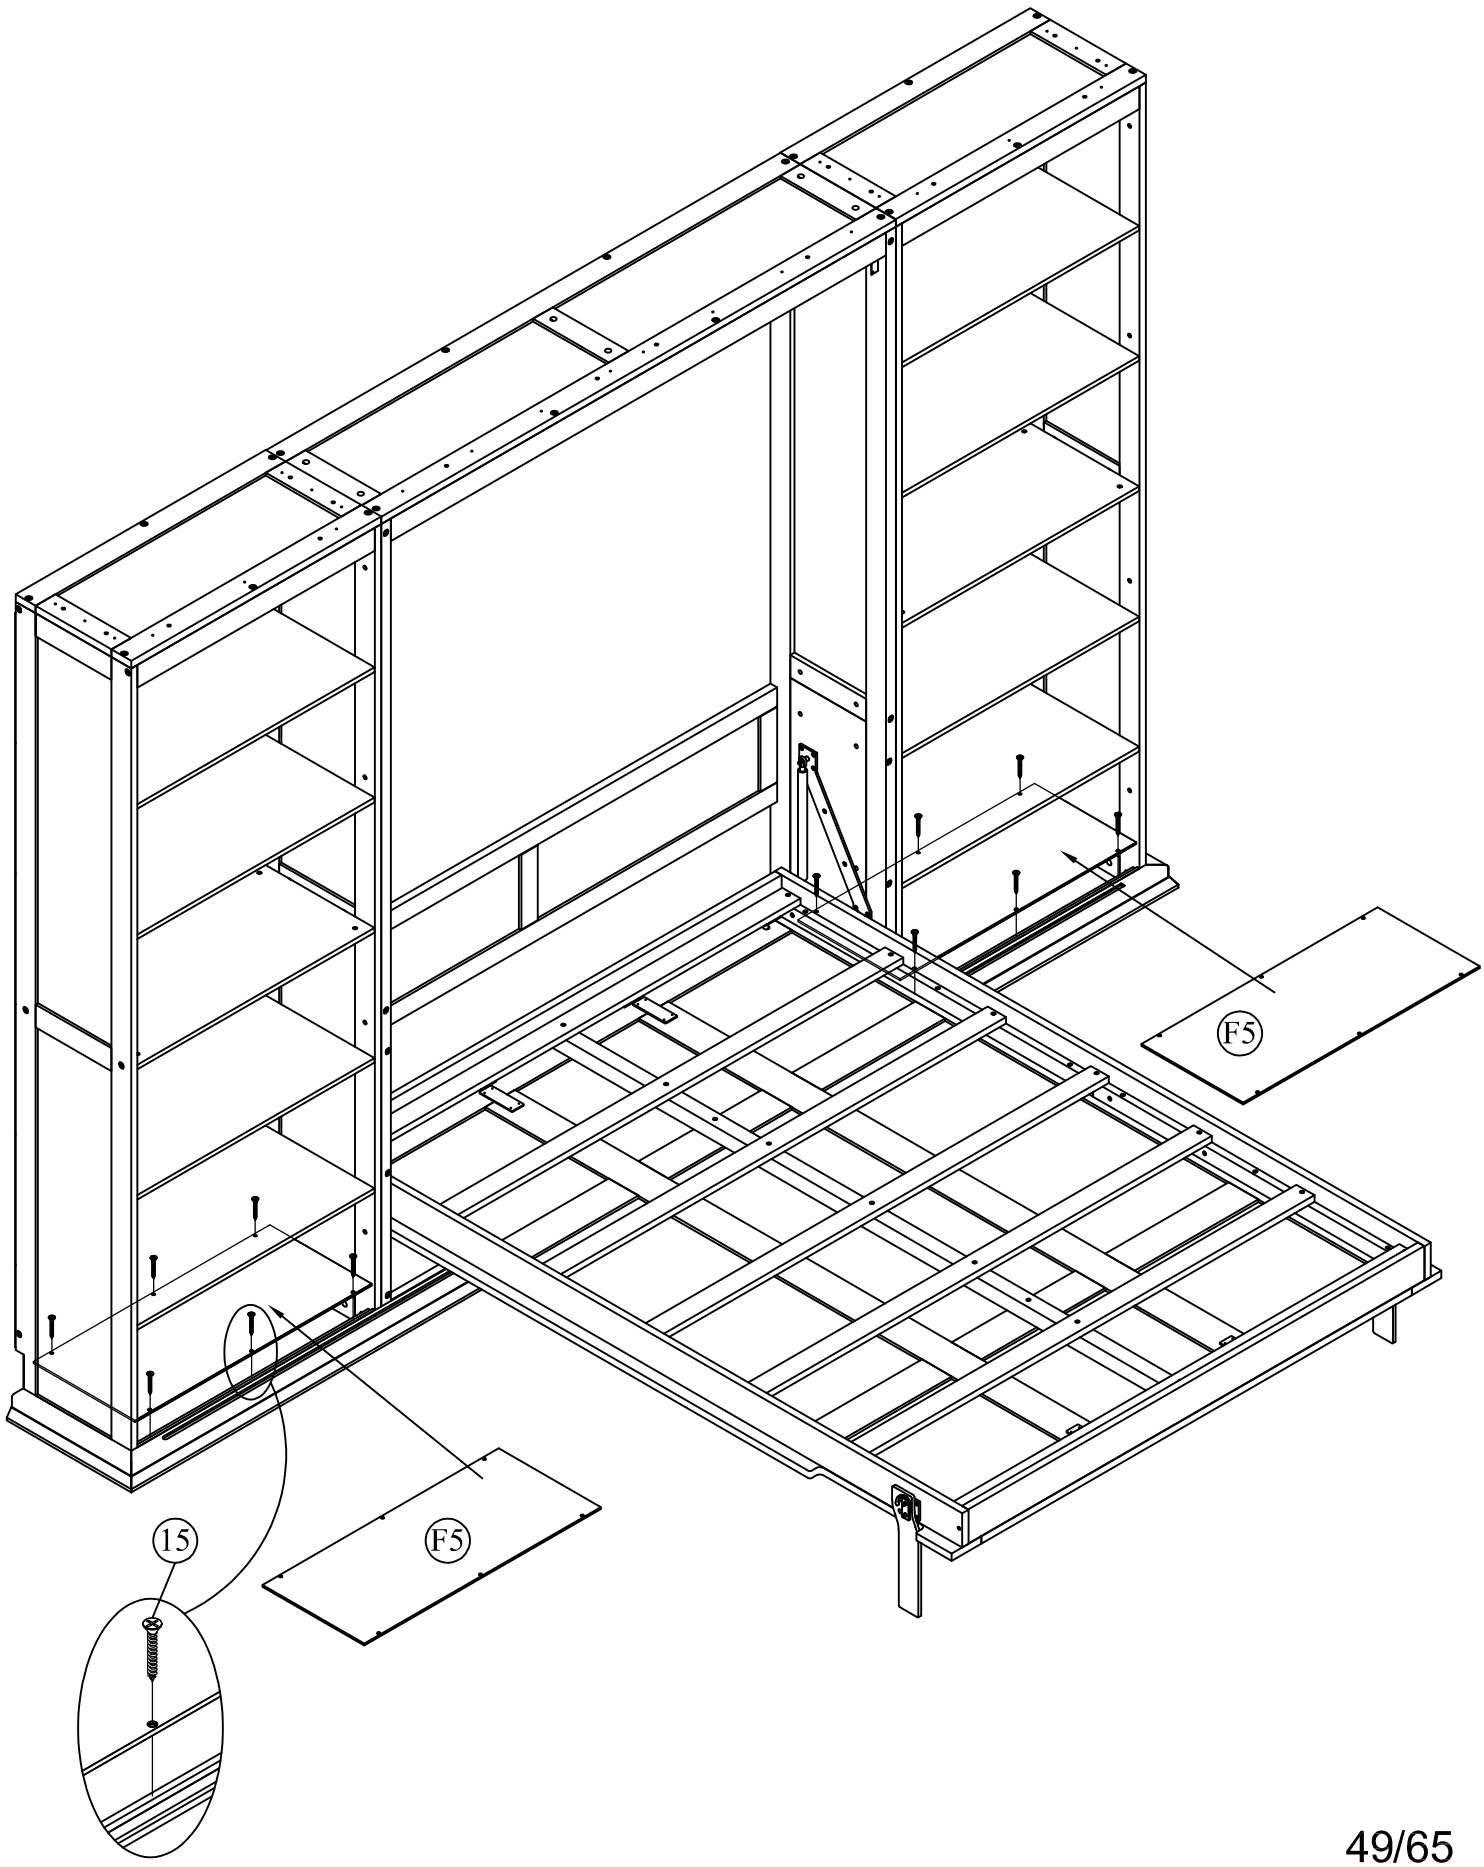

STEP 38:

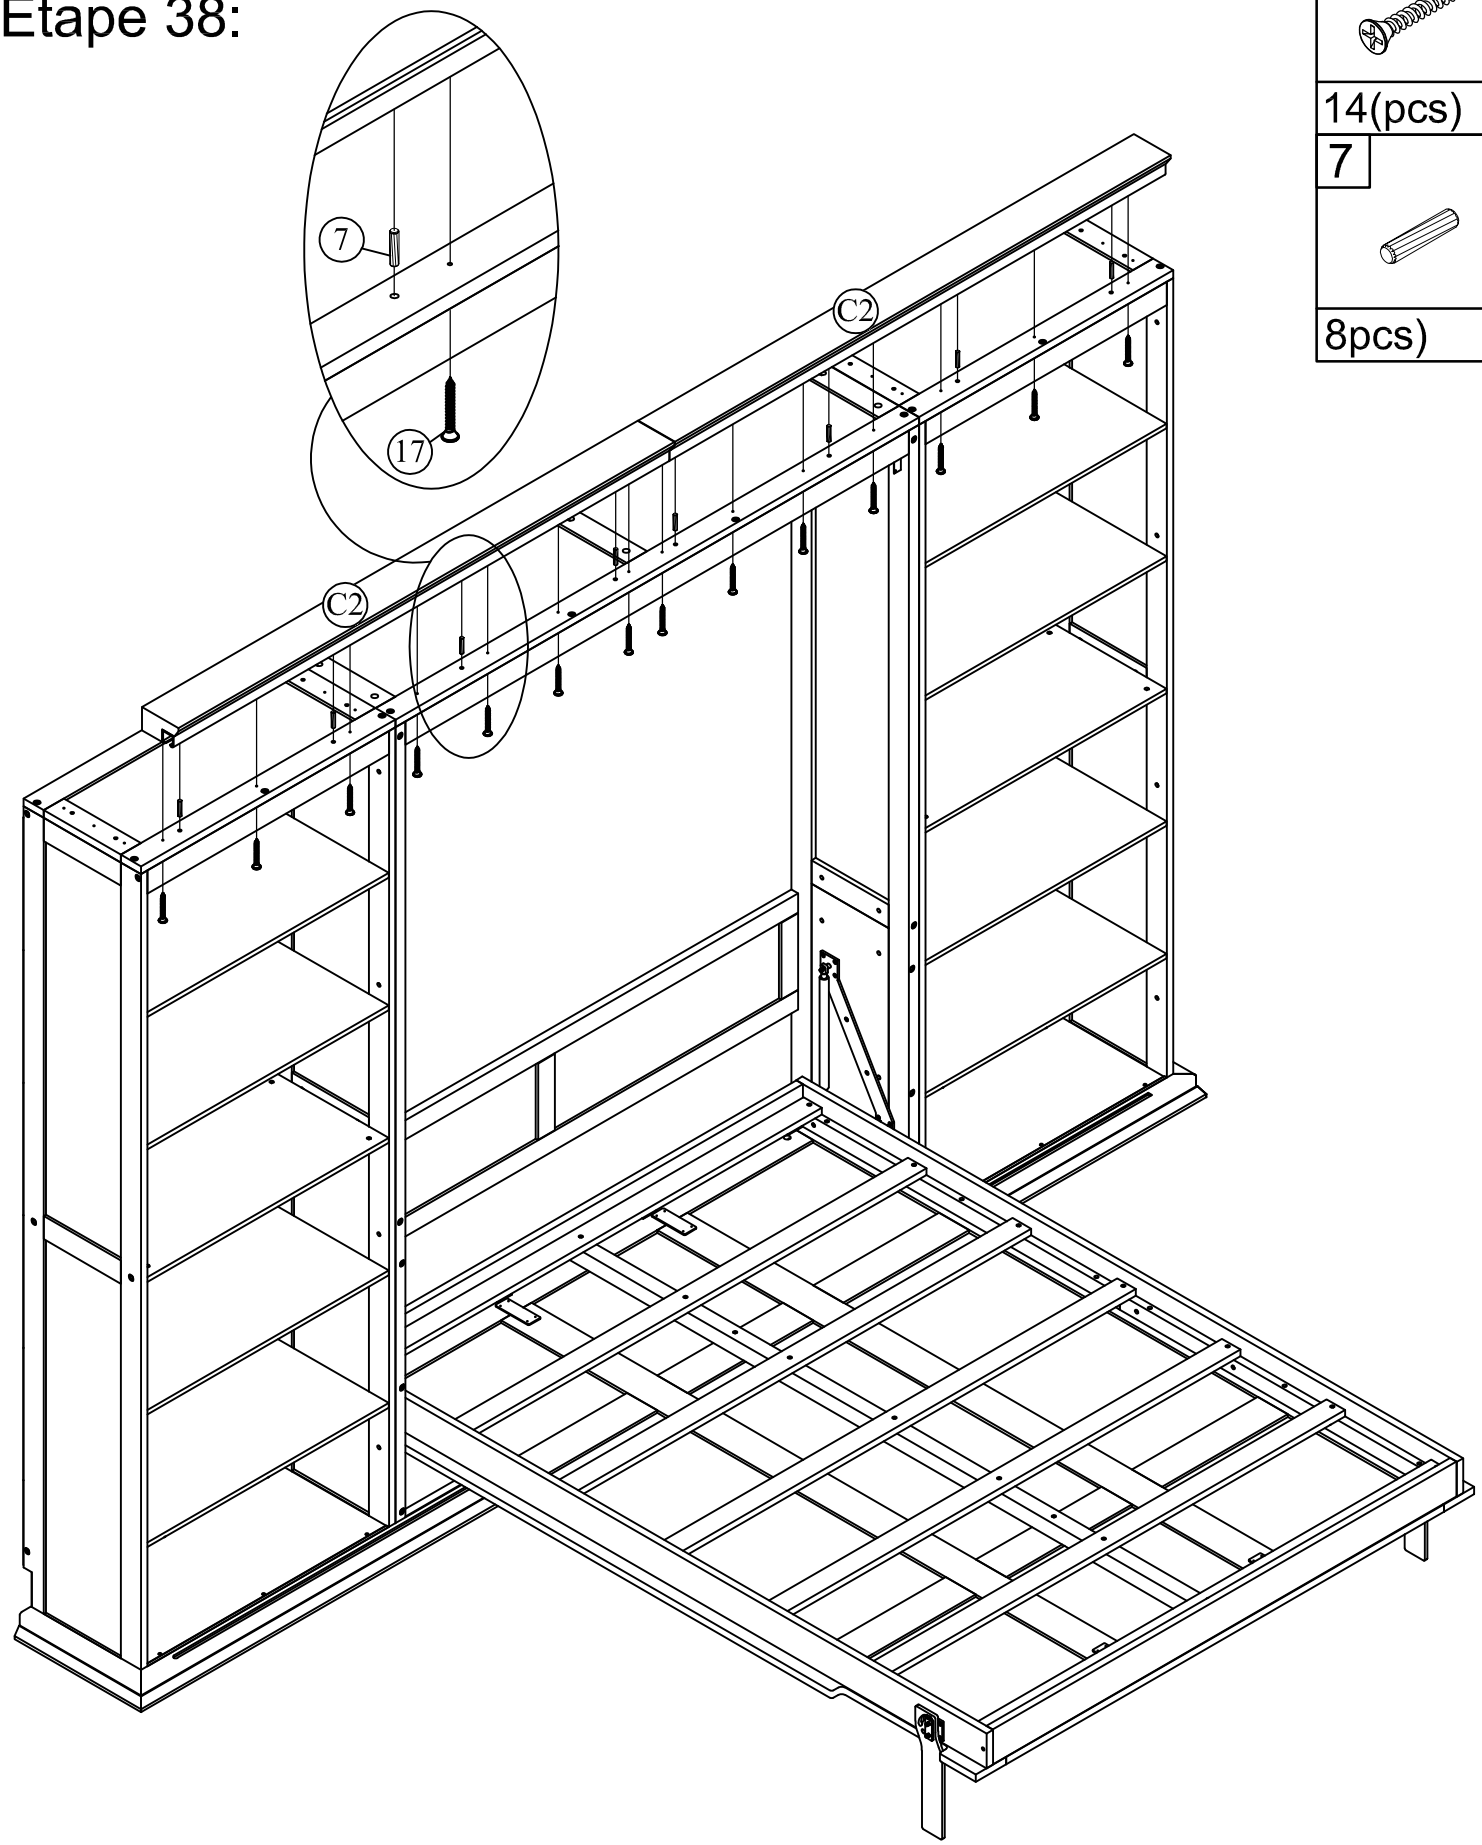Étape 38:



17

14(pcs)

7


8pcs)

STEP 39:

Étape 39:

16	8	7	4
4(pcs)	16(pcs)	16(pcs)	16(pcs)


26	18
4(pcs)	8(pcs)

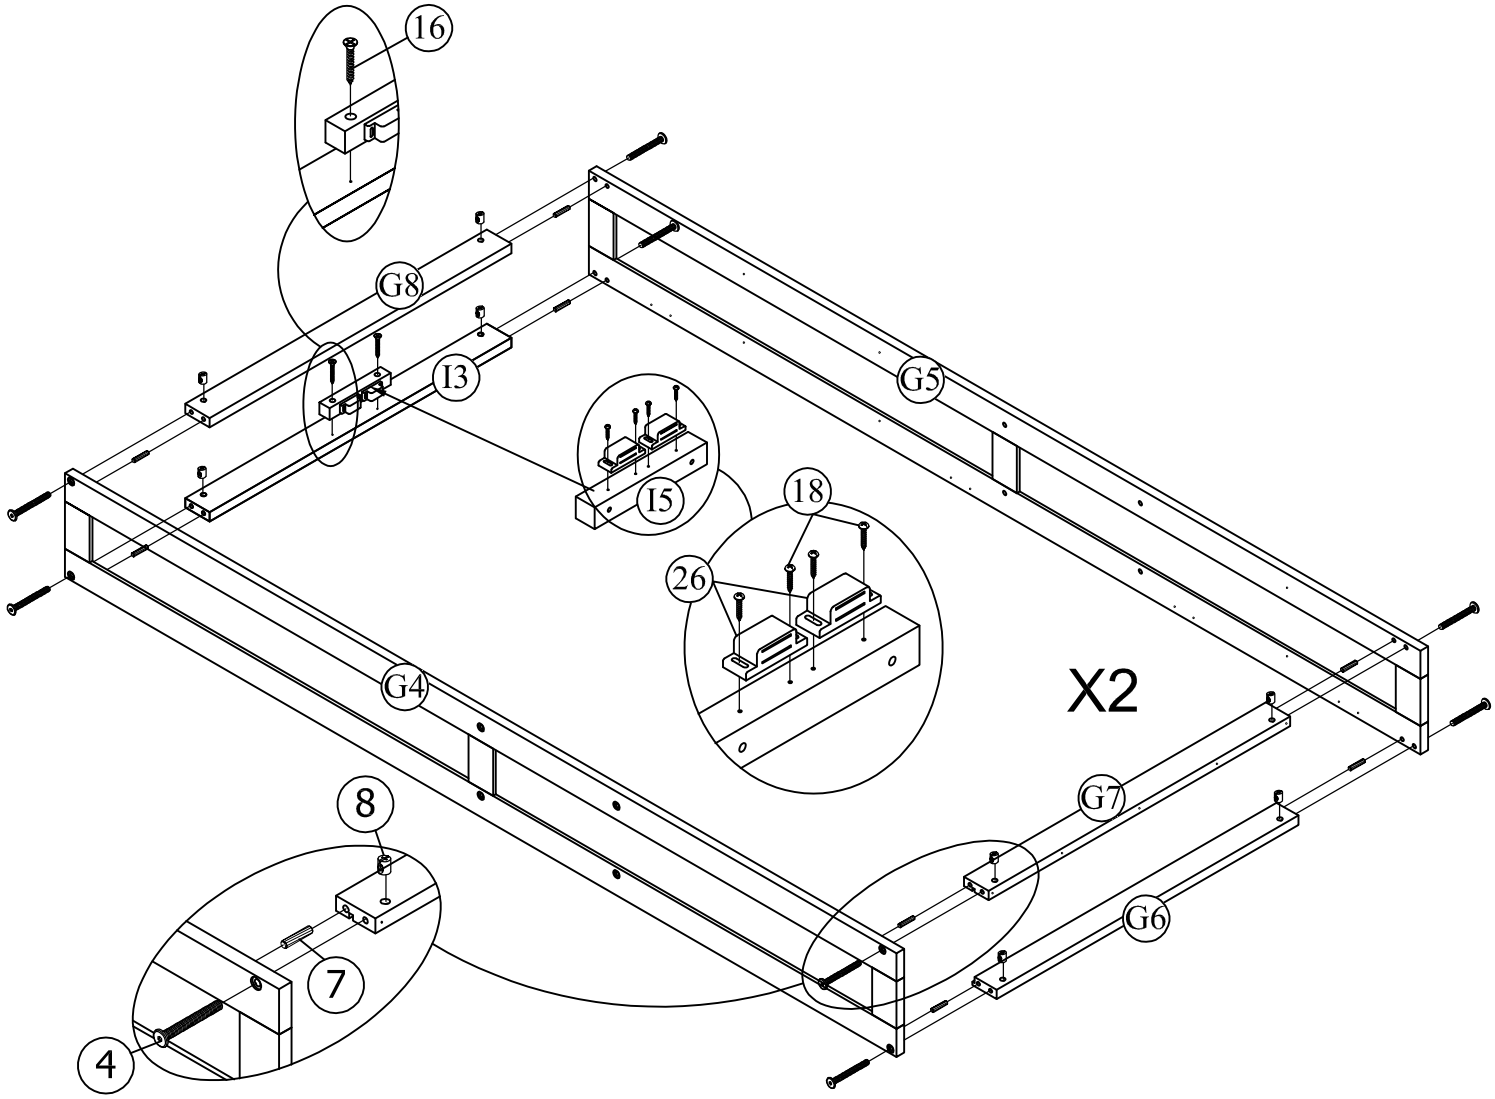


STEP 40:

Étape 40:

7	1
4(pcs)	12(pcs)

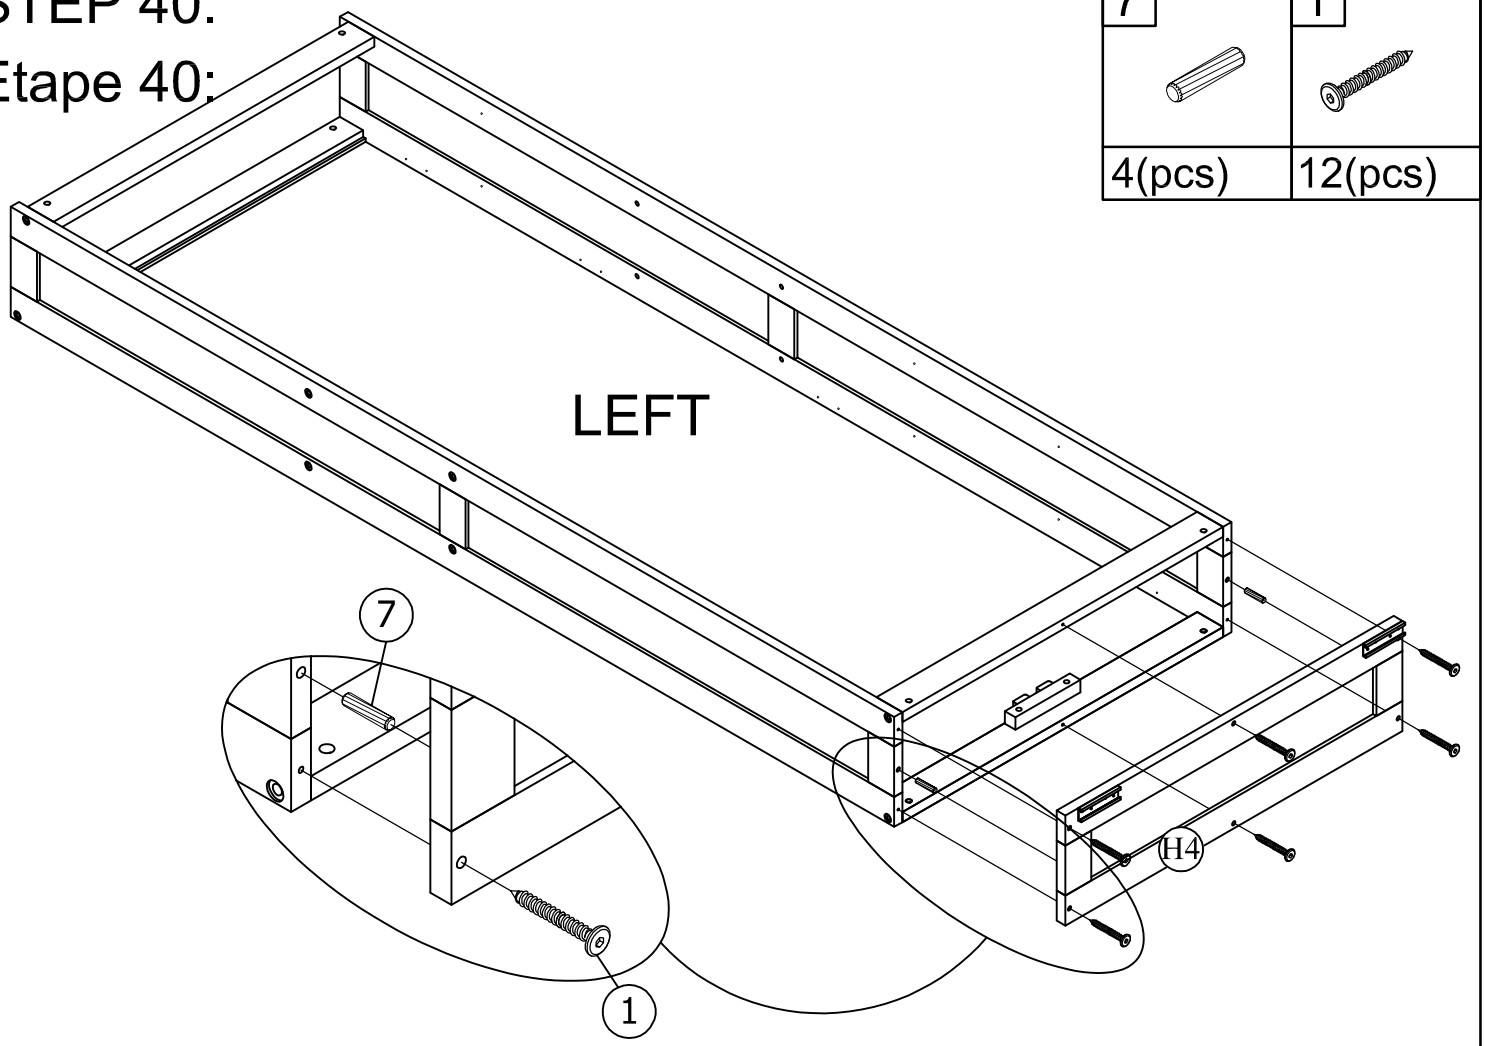


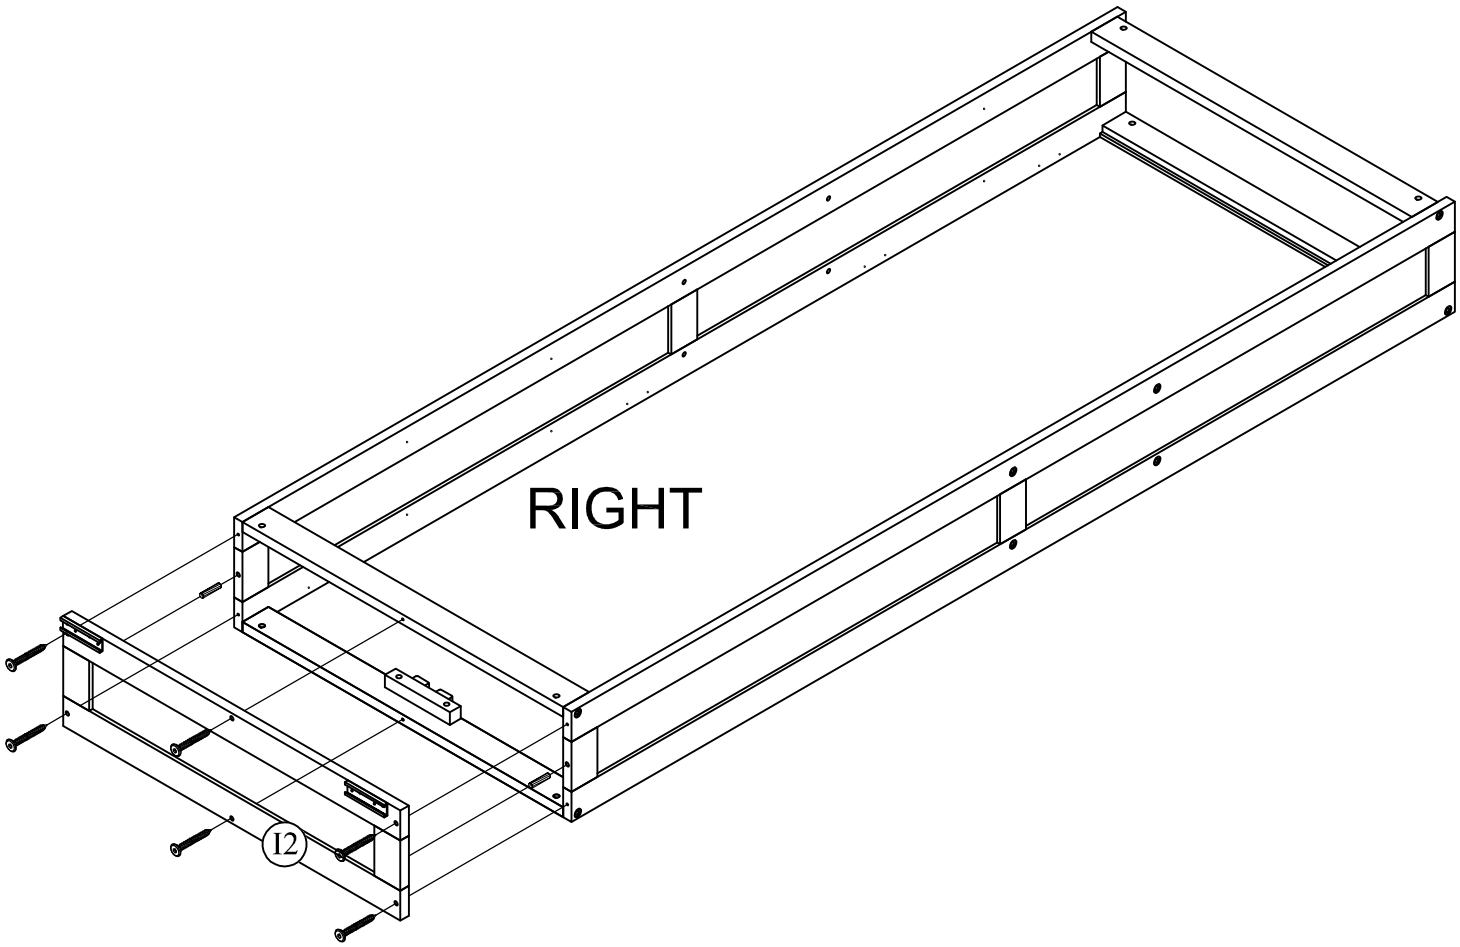

STEP 41:

Étape 41:


8	4
16(pcs)	16(pcs)

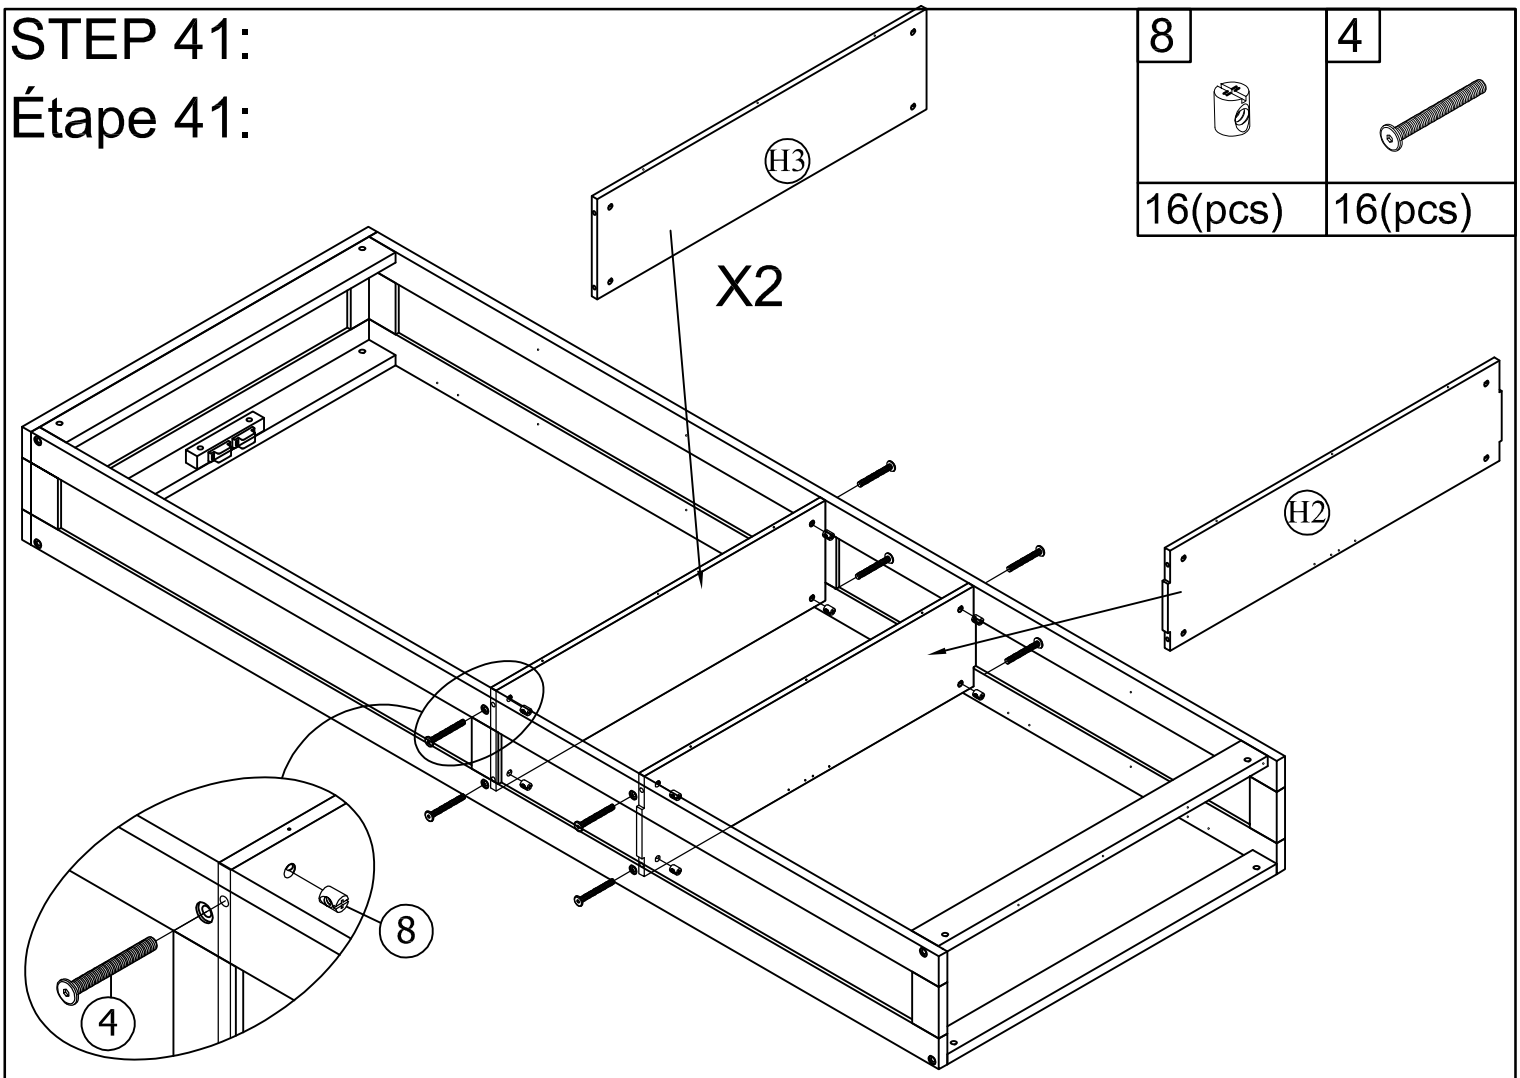

STEP 42:

Étape 42:

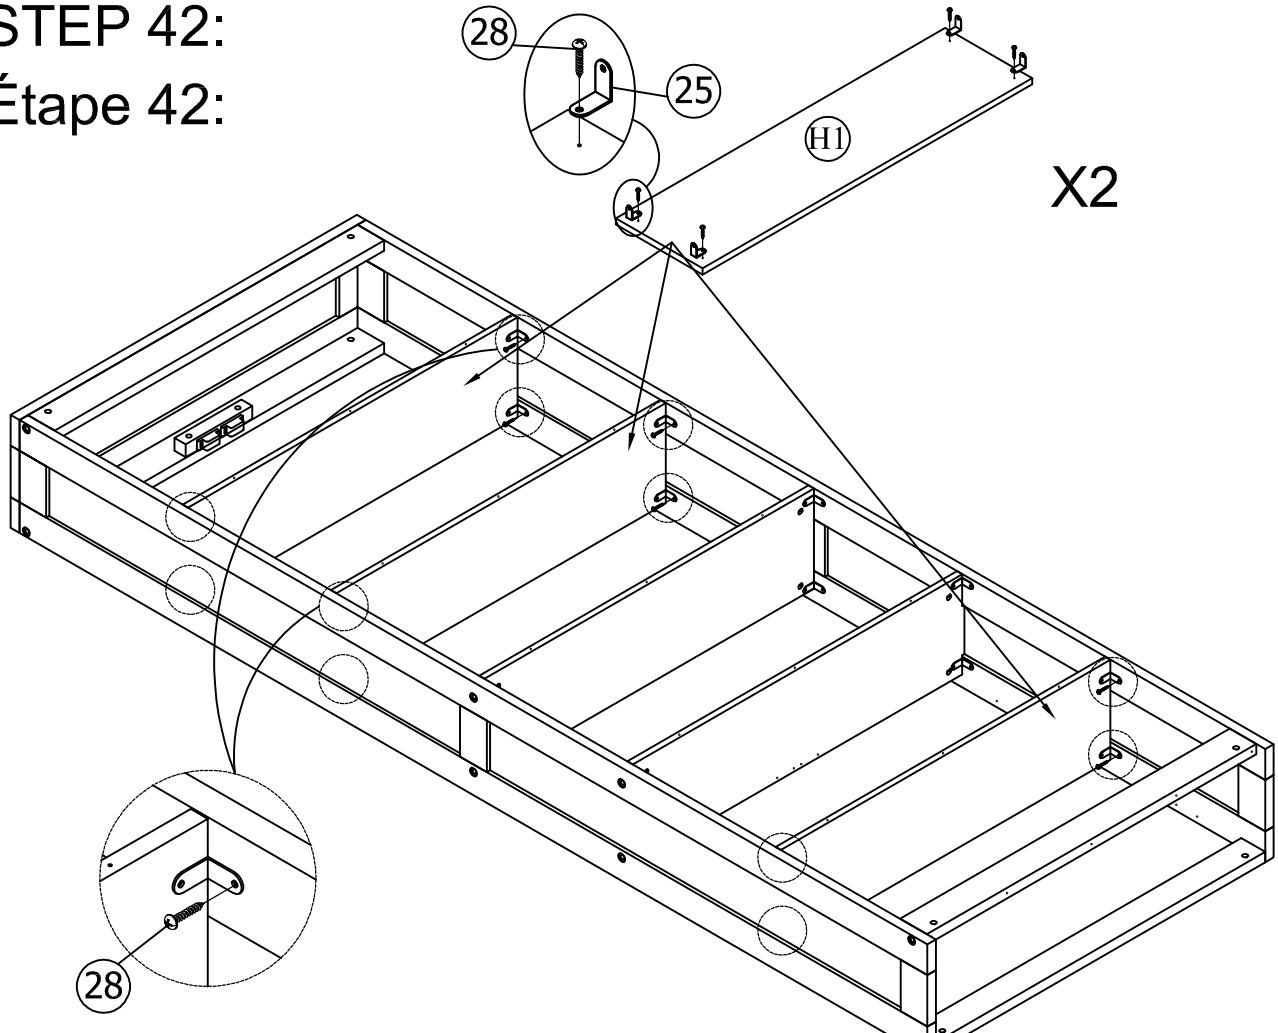28
80(pcs)
25
40(pcs)




STEP 43:

Étape 43:


18	
90(pcs)	

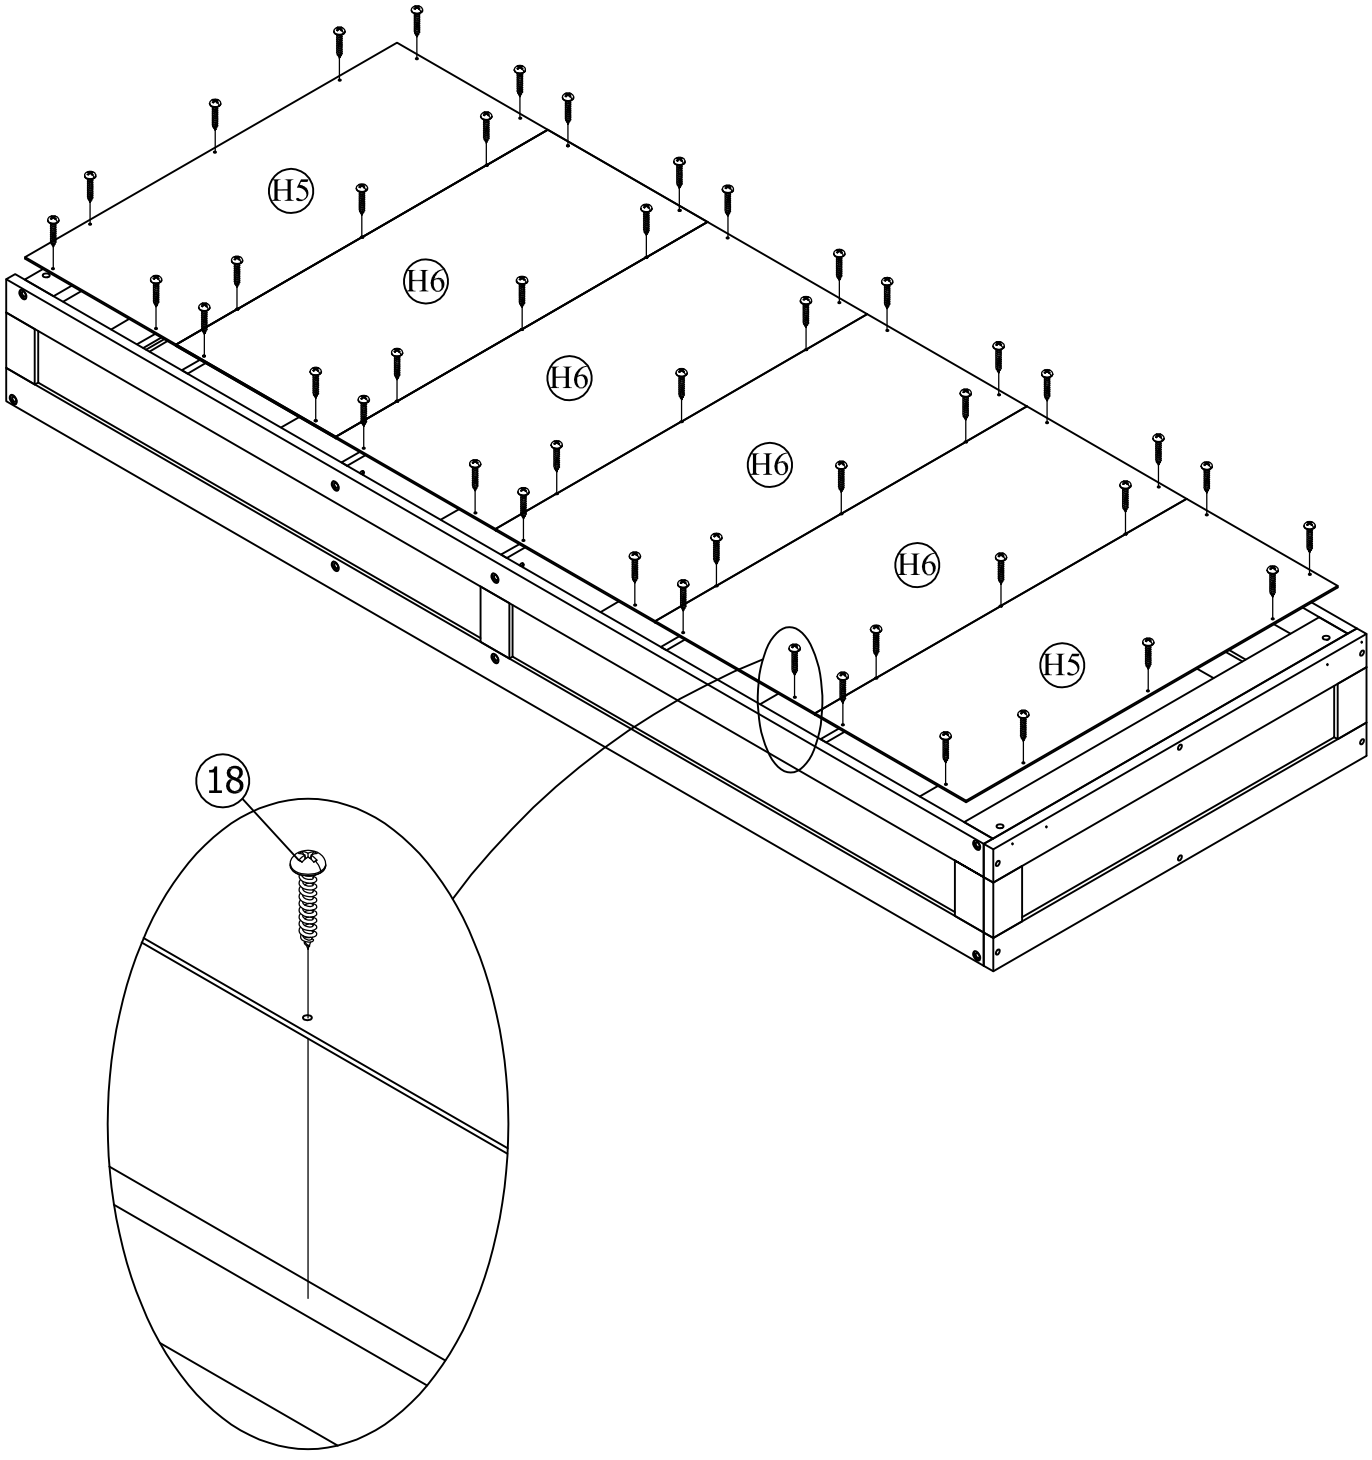X2




STEP 44:

Étape 44:



15

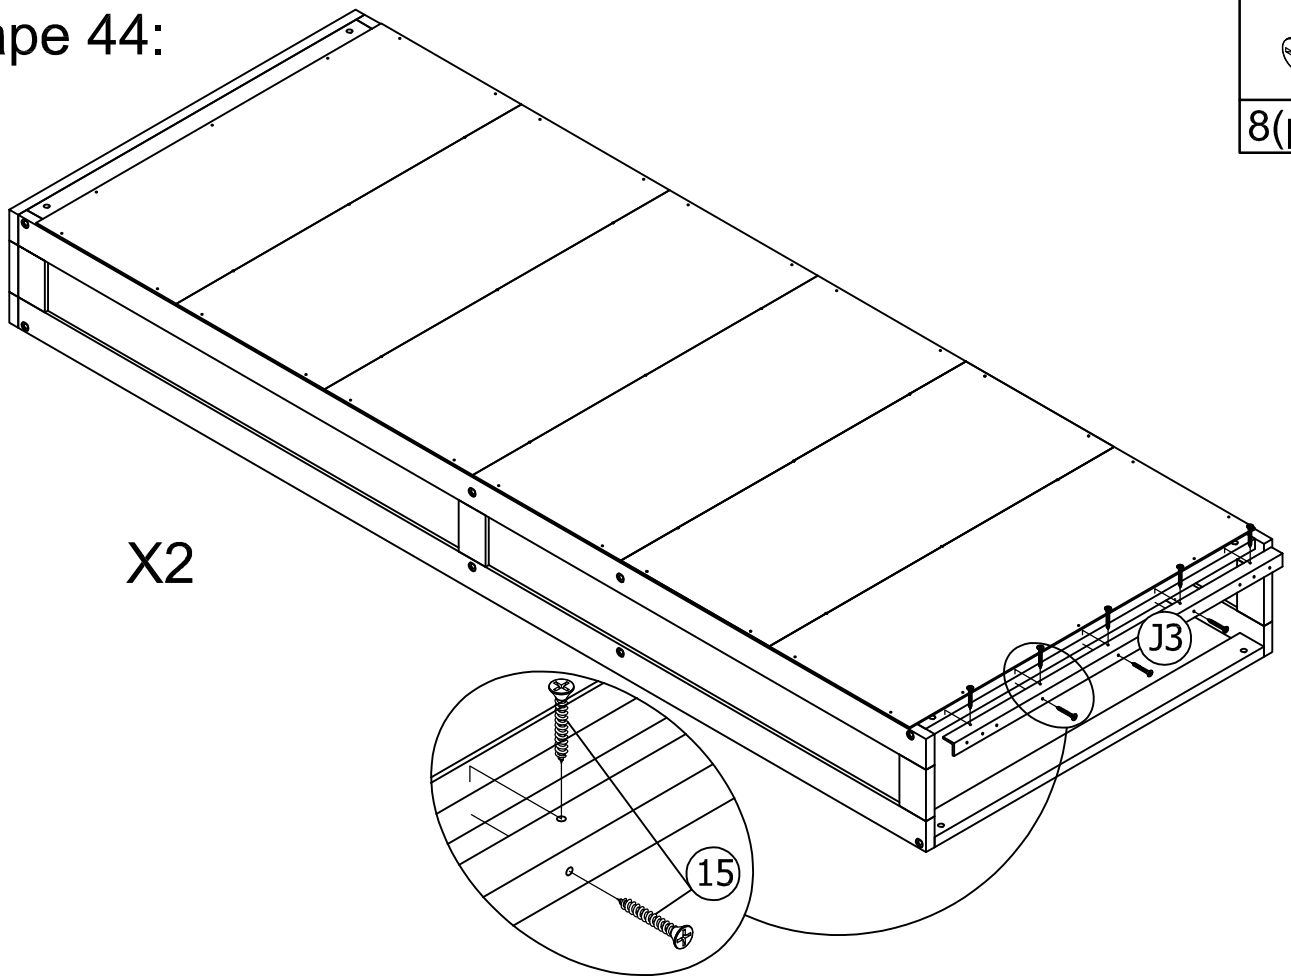8(pcs)

X2



STEP 45:



Étape 45:


15	3
	
8(pcs)	4(pcs)


X2


STEP 46:

Étape 46:

J5	J4
	
2(pcs)	2(pcs)

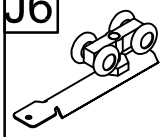J6

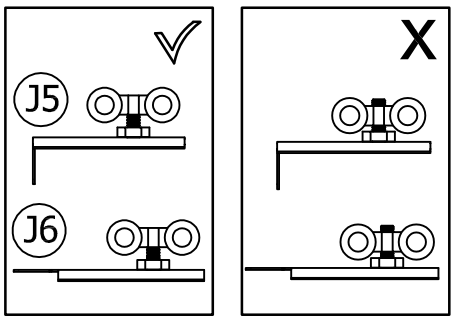2(pcs)

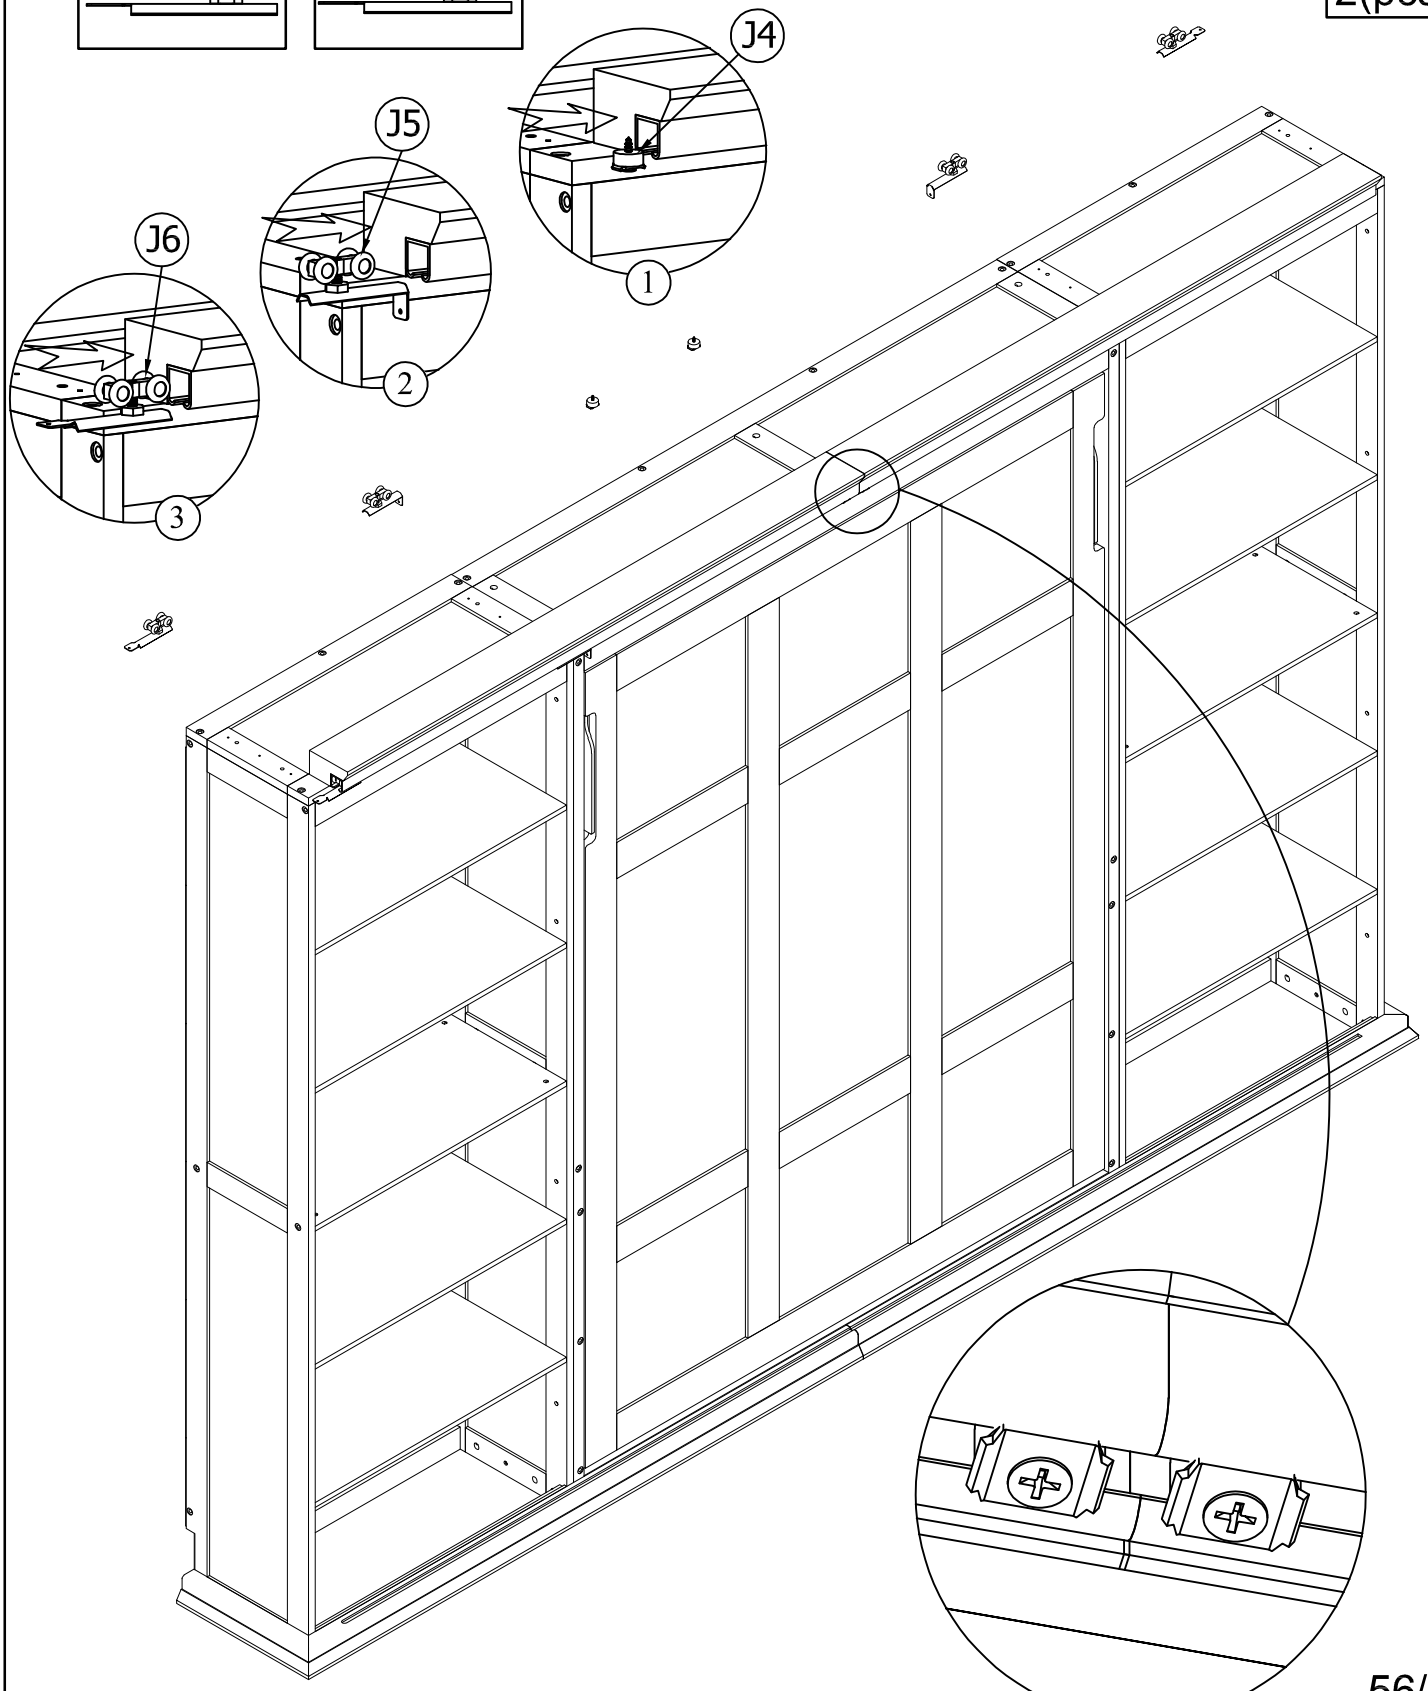





STEP 47:

Étape 47:

15





10(pcs)

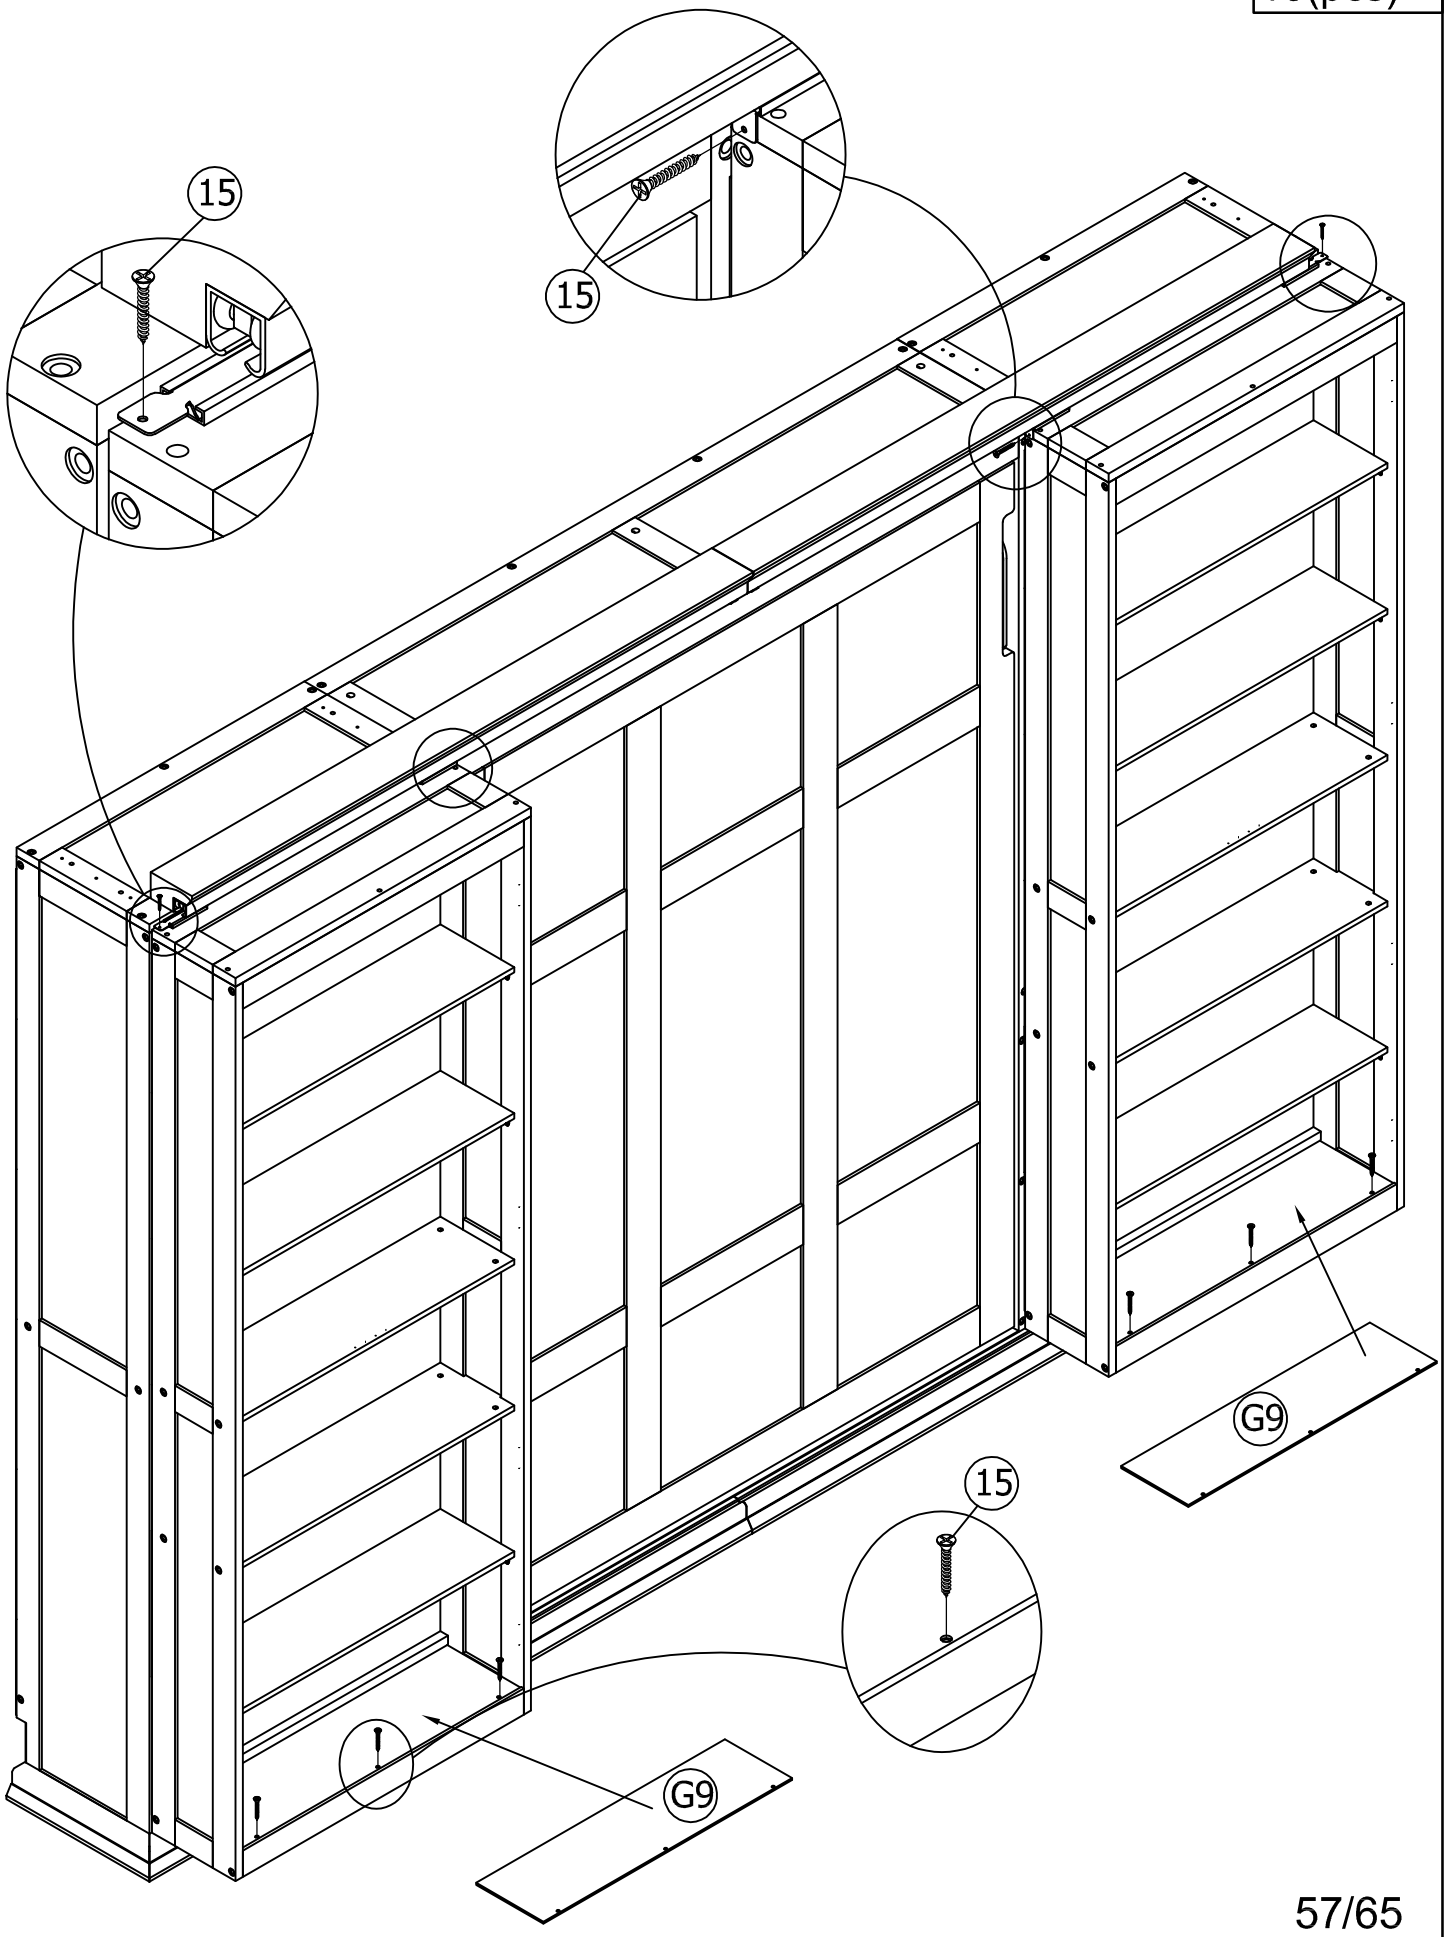

STEP 48:
Étape 48:

Scan the code above for detailed instructions
Scannen Sie den obigen Code für detaillierte Anweisungen


7	17
	
4pcs)	6(pcs)

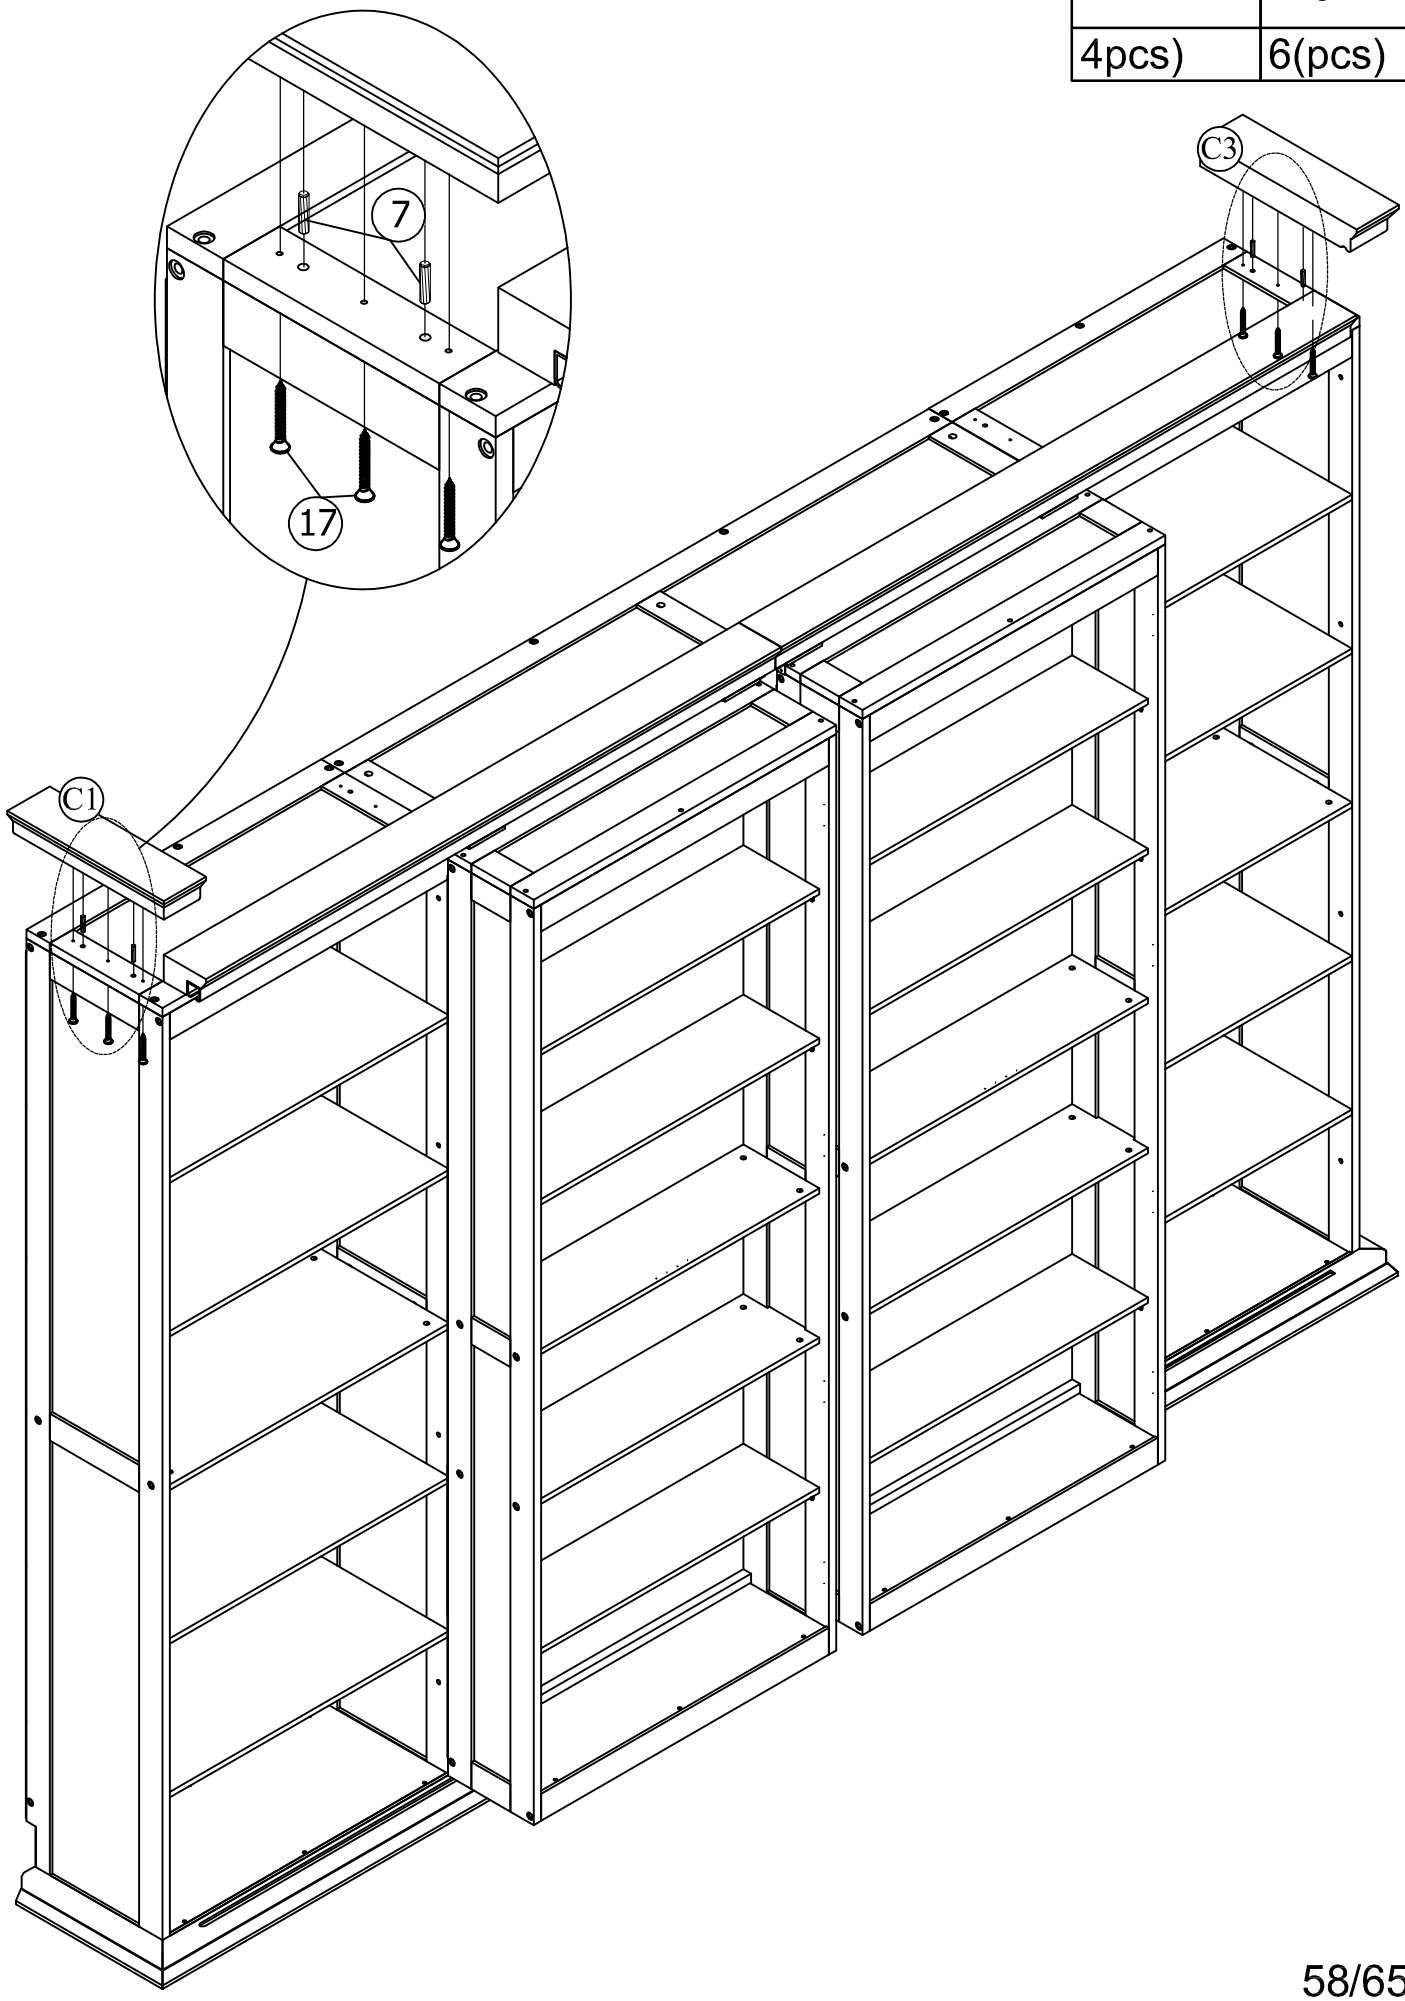

STEP 49:

Étape 49:


28	11	26	18
8(pcs)	4(pcs)	4(pcs)	8(pcs)

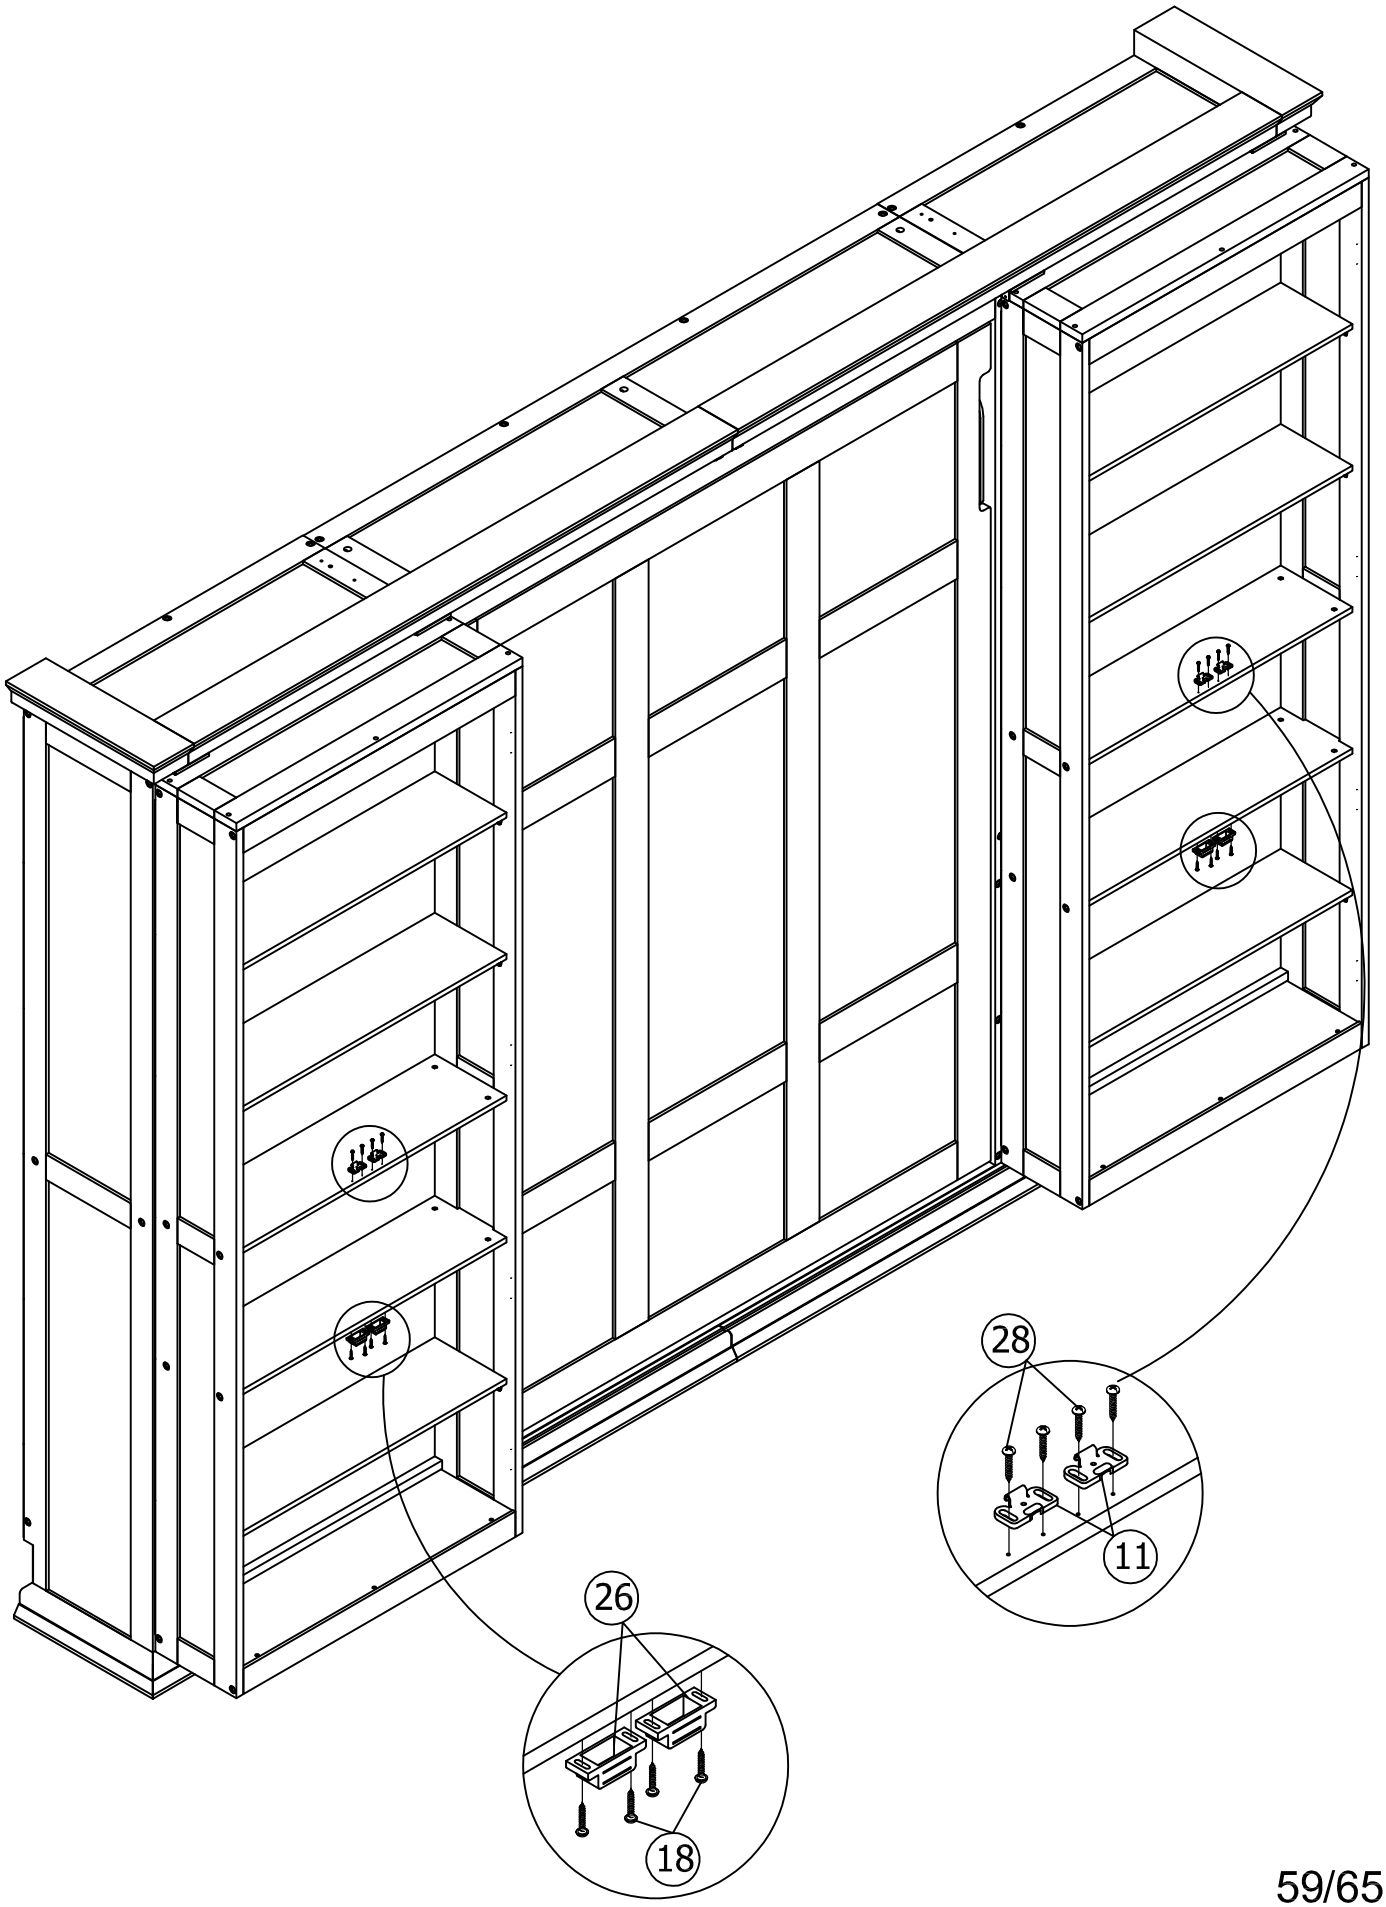

STEP 50:

Étape 50:

23	22
8(pcs)	16(pcs)
18	14
8(pcs)	4(pcs)

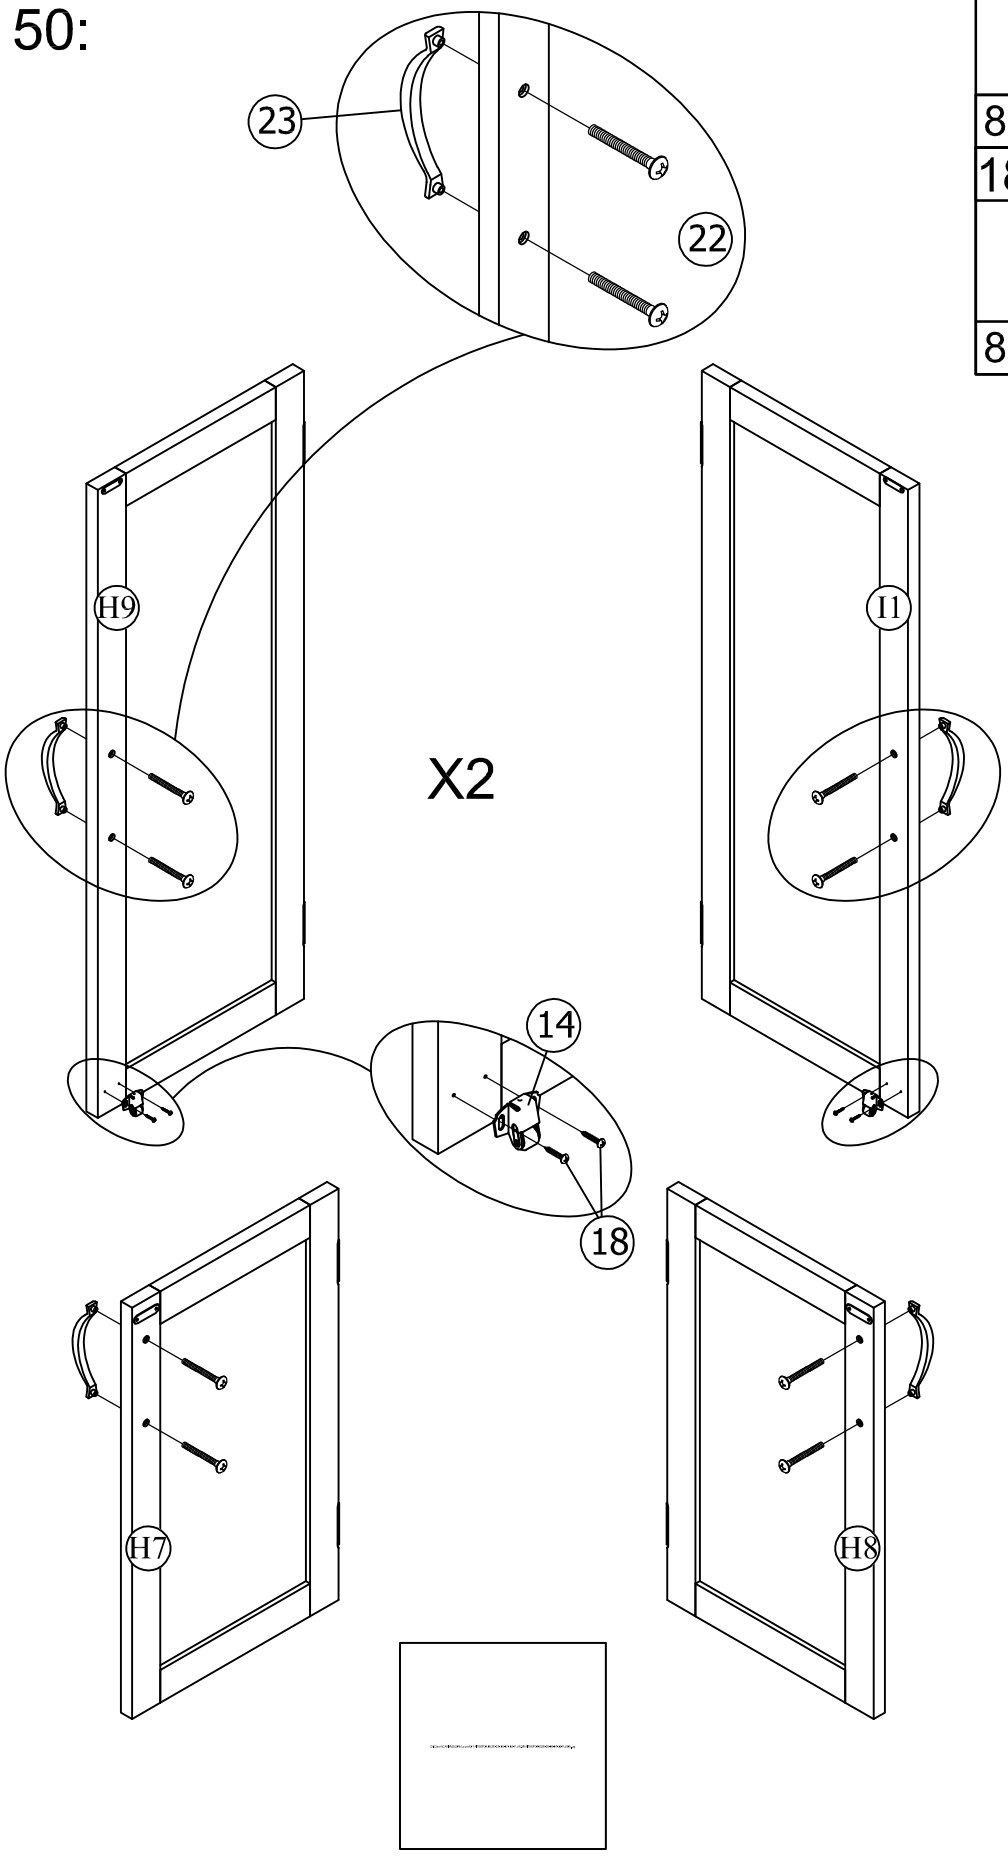


Scan the code above for detailed instructions
Scannen Sie den obigen Code für detaillierte Anweisungen

STEP 51:


Étape 51:

19	
	48(pcs)

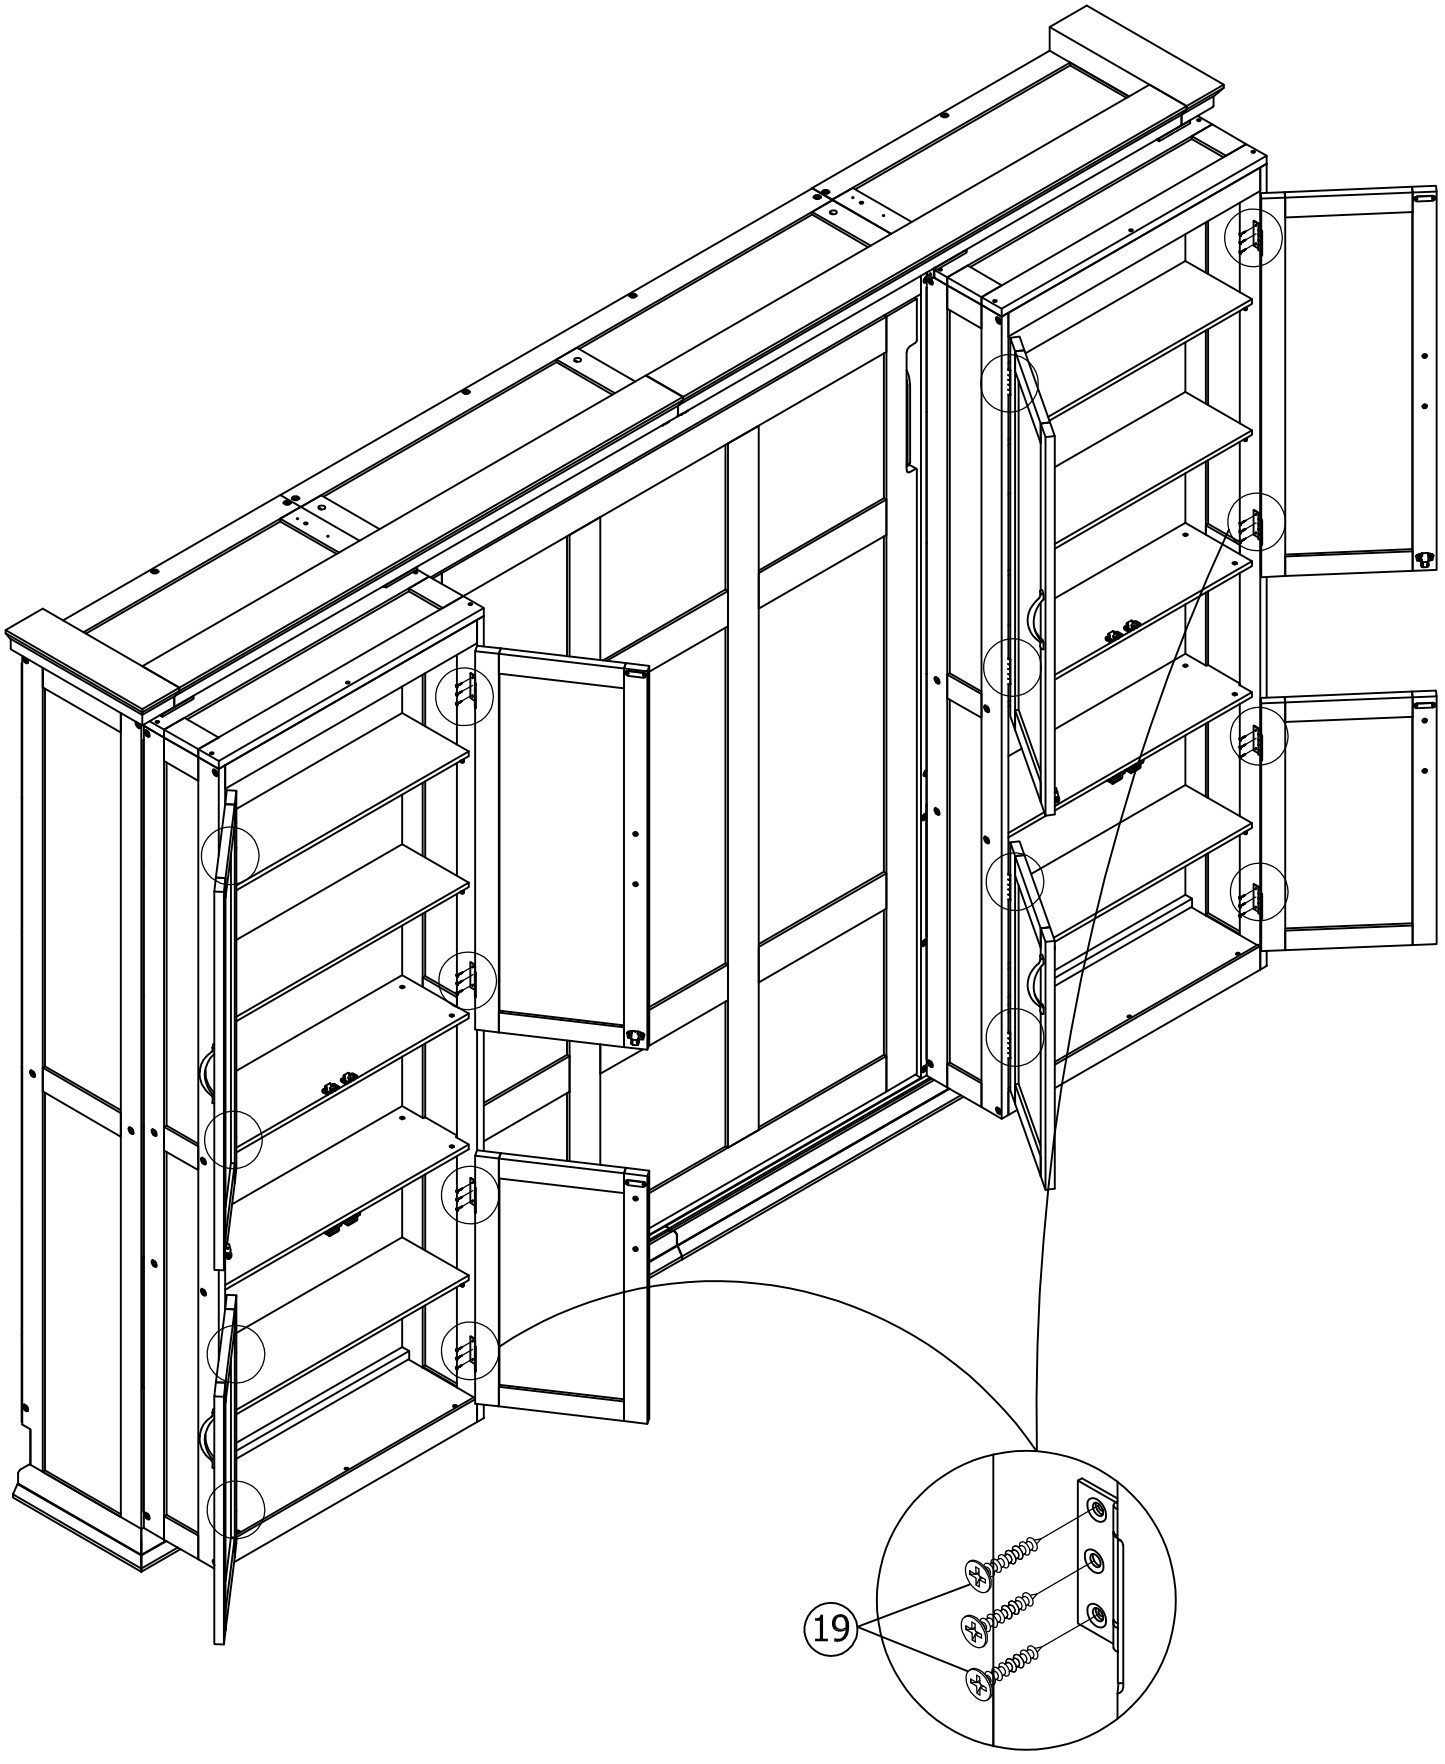


Style 2: Cabinets positioned to sides and with the murphy bed opened

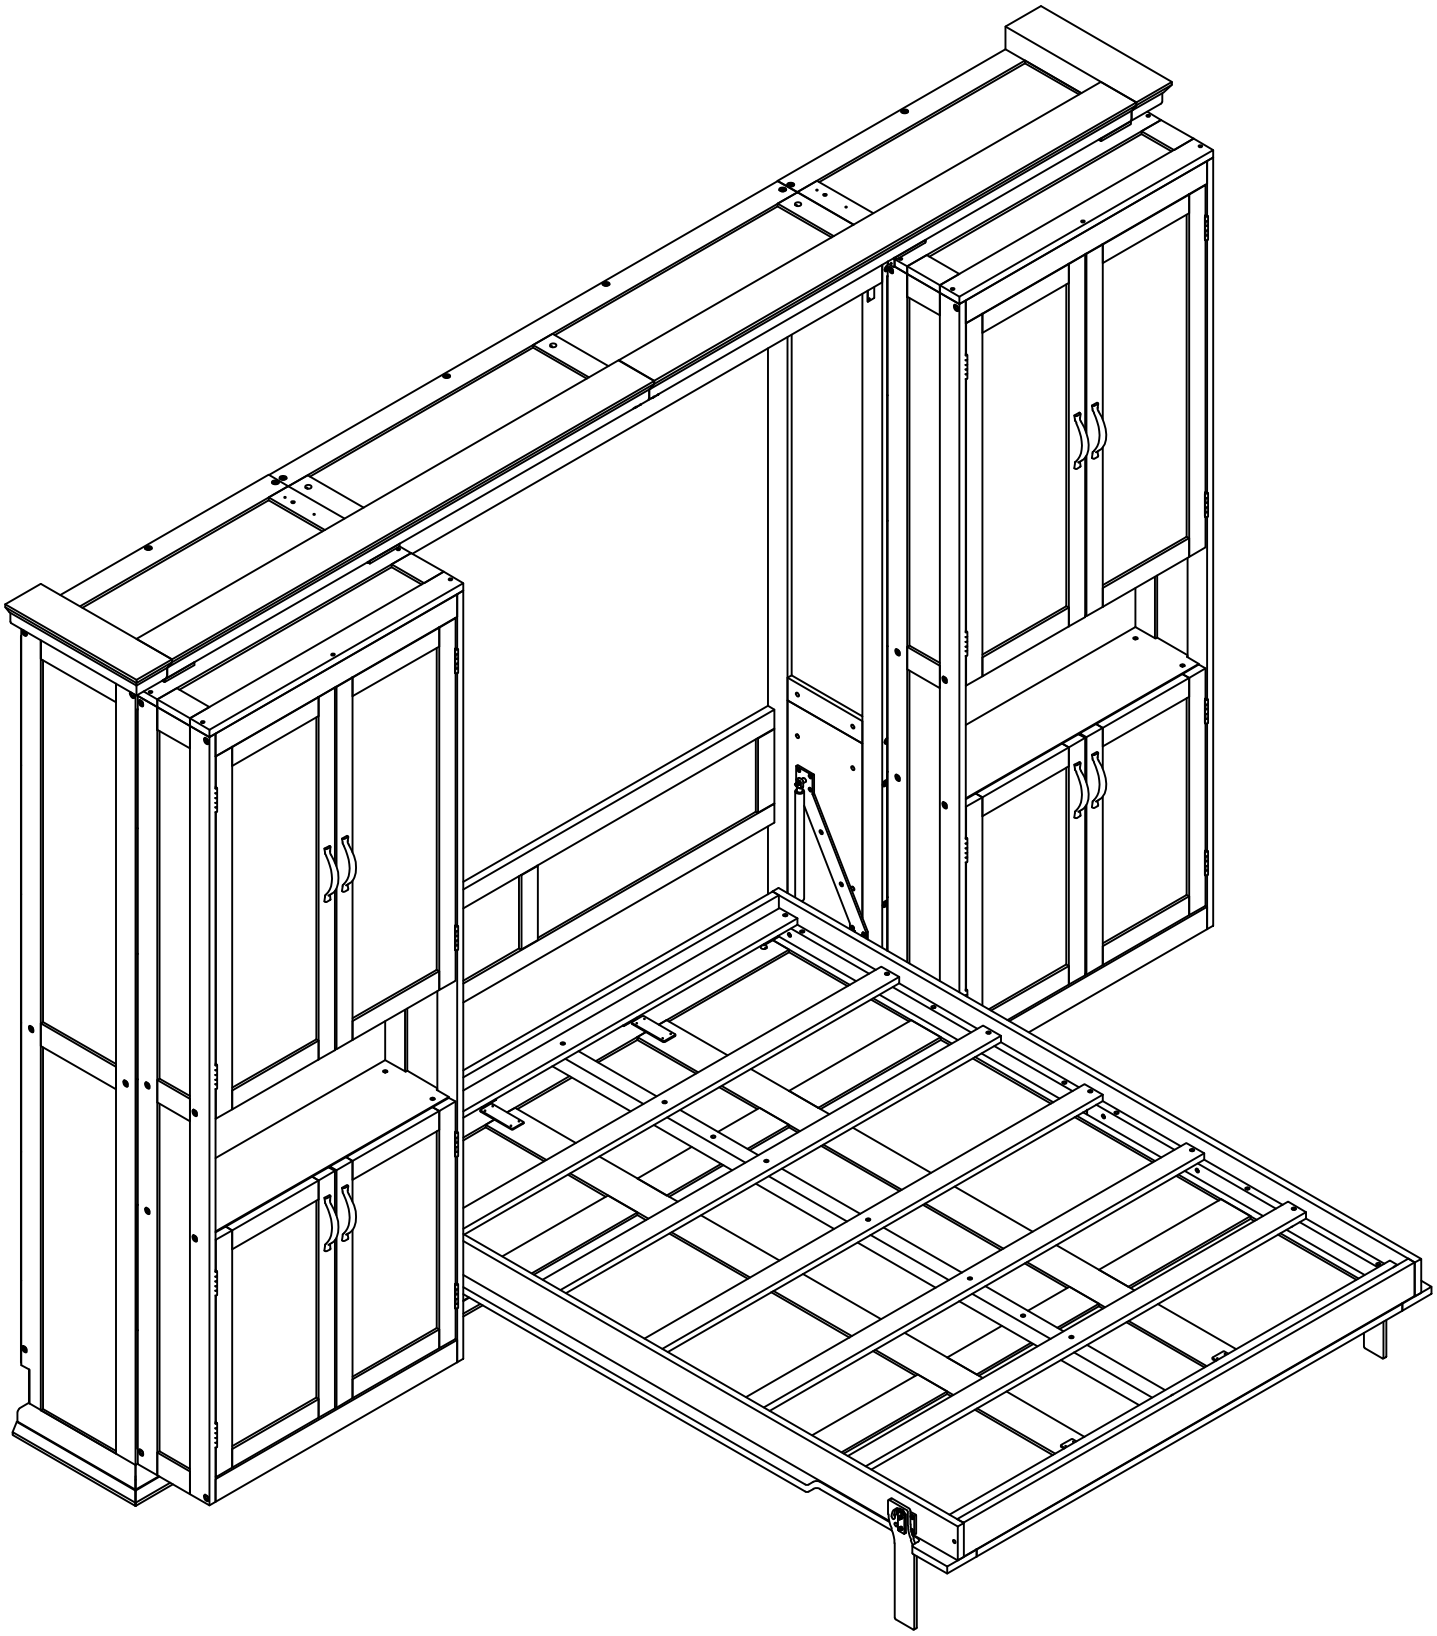Variante 2: Schränke seitlich angeordnet und das Klappbett geöffnet




STEP 1:

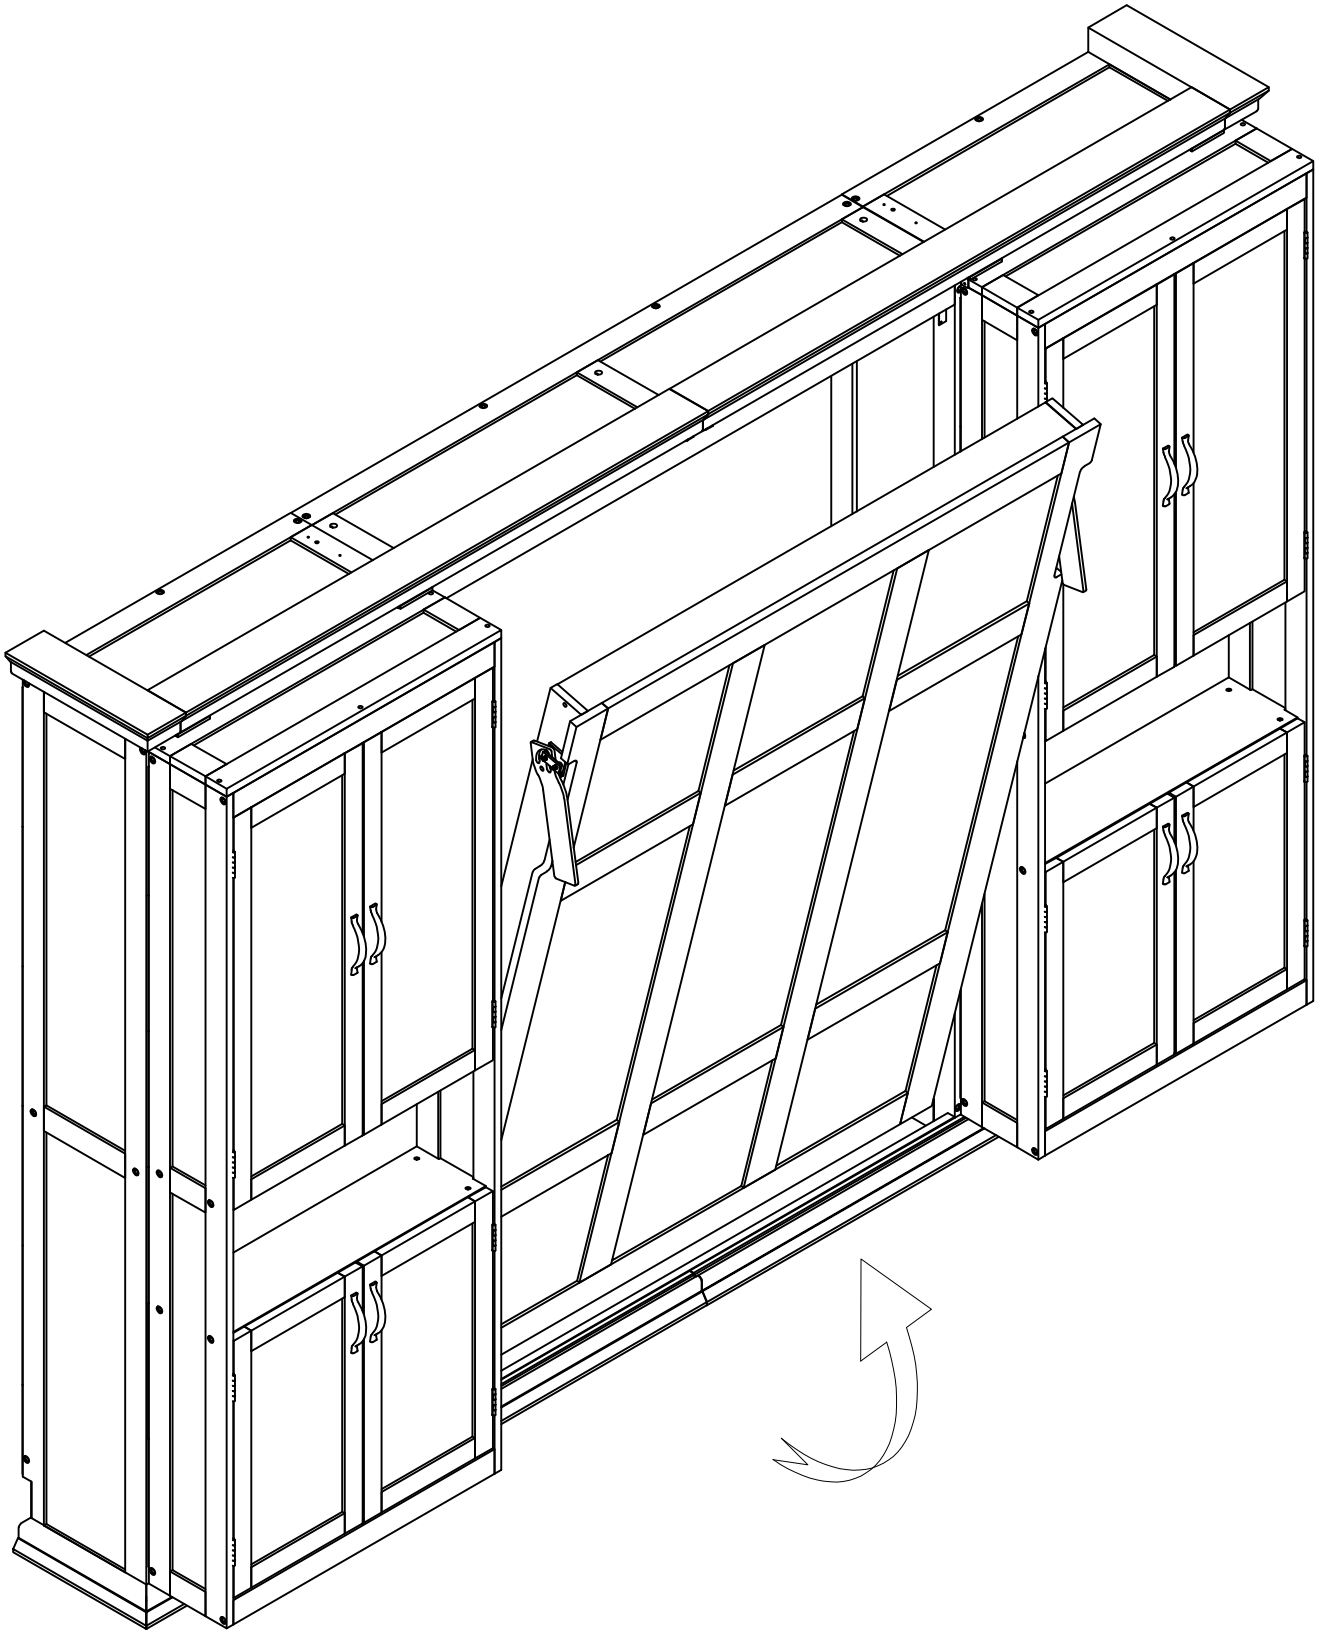Étape 1:





STEP 2:

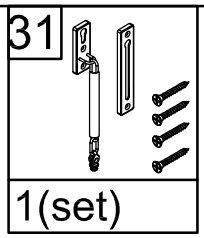
Étape 2:




1(set)

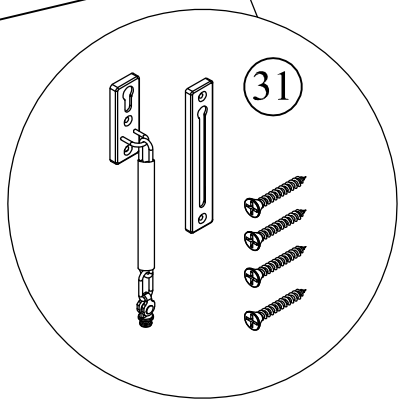

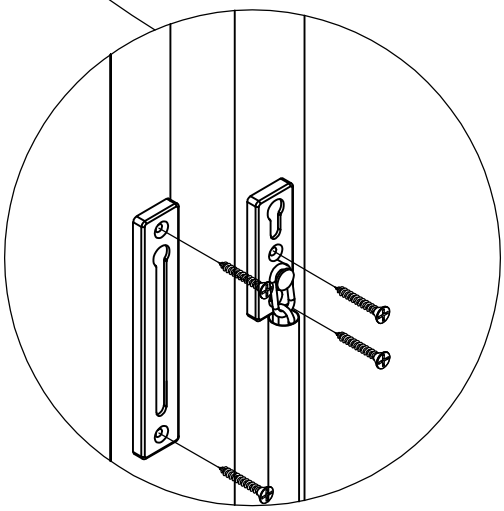


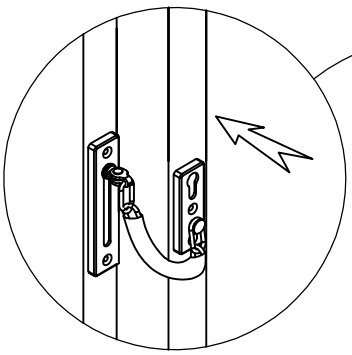

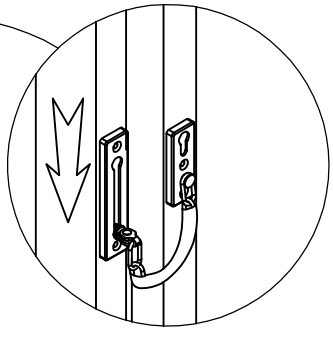

STEP 2:

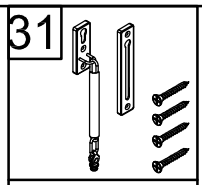Étape 2:



1(set)

AT ALL TIMES :

1. FROM Completion of Assembly Slide the FRONT Left and Right Cabinets TO THE MIDDLE and Chain up.
2. When NOT IN USE, keep the Left and Right Cabinets slid to the MIDDLE and Chain Up.