




NOTE: The finials shown is for illustration purpose only. It is not representative of finials included in the package.

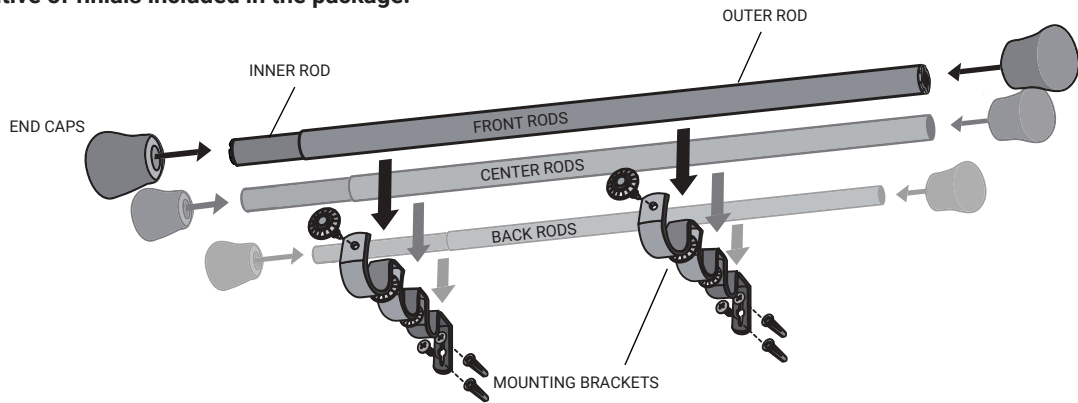


1 Place the brackets against the wall and mark the screw placements with a pencil. Make sure the marks are level.

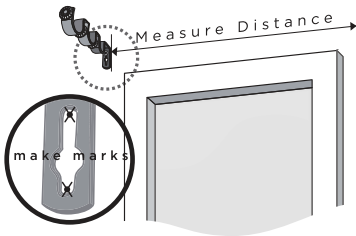


2 Drill pilot holes at the mark when securing bracket to wood frame or follow the instructions for dry wall anchors at the end of the instructions.

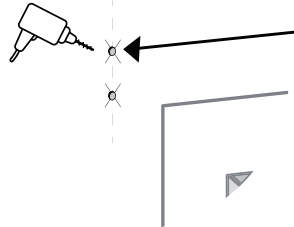

3 Assemble the rod by sliding the smaller diameter rod into the larger rod. Make sure the plastic inserts are facing out.

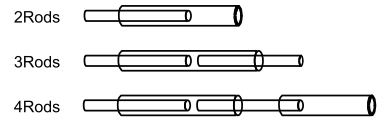


4 Slide the drapery onto the pole

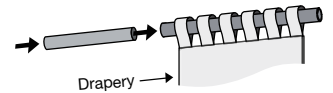


5 Change the Finials (Optional)


STEP A.
Remove the front rod's end caps

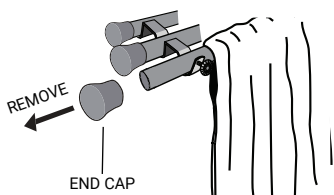


STEP B.
Skip this step if inserts are already inside the rod. For 2 or 4 piece rods there are two different size inserts; for 3 piece rods, there is only one size. Push the corresponding insert into each end of the rod with fin side going into the pole.

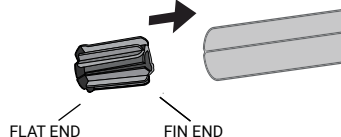


STEP C.
Push the post of the finials all the way into the plastic inserts. Rotate finials as necessary.

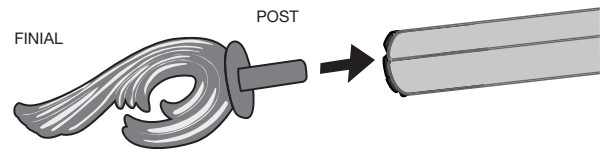


For hollow type finials (without a post), slide finials onto the ends. No plastic inserts required.

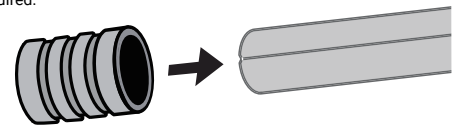

6 Extend rod to the desired length and put the rods with the drapery onto the brackets. Make sure all pieces of the rod are secured by a bracket to prevent the rod from shifting when drawing the drapery. Adjust the drapery as needed.

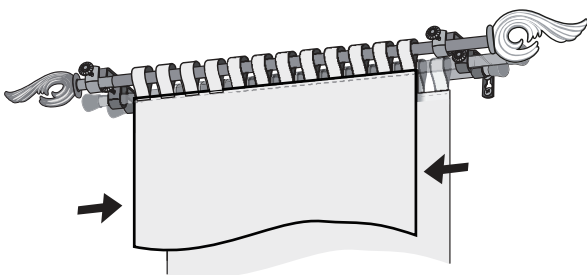

7 Secure the rod in place by tightening screw.

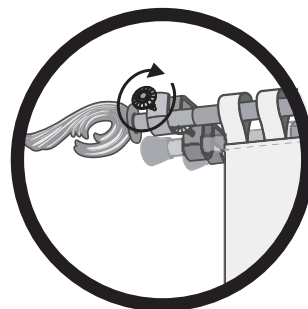

DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.