ABS14

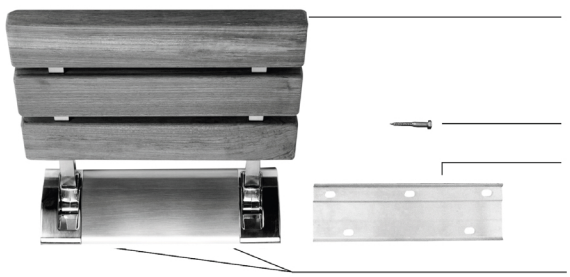
SHOWER SEAT INSTALLATION INSTRUCTIONS

Before installing, please read the instructions carefully in order to install and use this product safely.



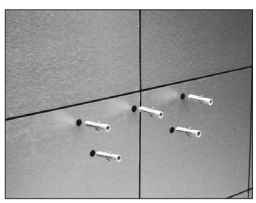
ABS14

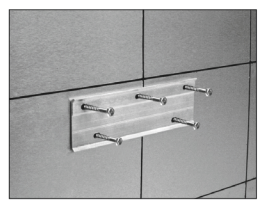
PARTS LIST:



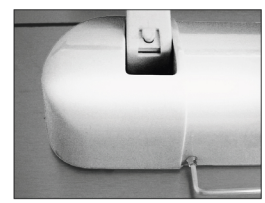
STEP BY STEP INSTALLATION:

A. Place flat side of Fixing Board flush and leveled with the wall (Note: The edge with 3 holes should be up). The recommended height from the bottom of the Fixing Board to the floor is 15 1/2" - 19 1/2 ". Mark the location of the screw holes on the wall and remove the Fixing Board so as to drill 5 holes with a depth of about 2 1/2". Insert anchors into holes. (Figure A)
B. Screw the Fixing Board into the wall and tighten. (Figure B)
C. Align the main body of the Shower Seat with the Fixing Board on the wall. (Figure C)
D. Use the supplied Allen key to tighten the 2 Allen screws already attached to the underside of the main body of the Shower Seat. (Figure D)


A


B


C


D







IMPORTANT:

When properly installed, the maximum safe loading weight on this seat is 330 lbs.