


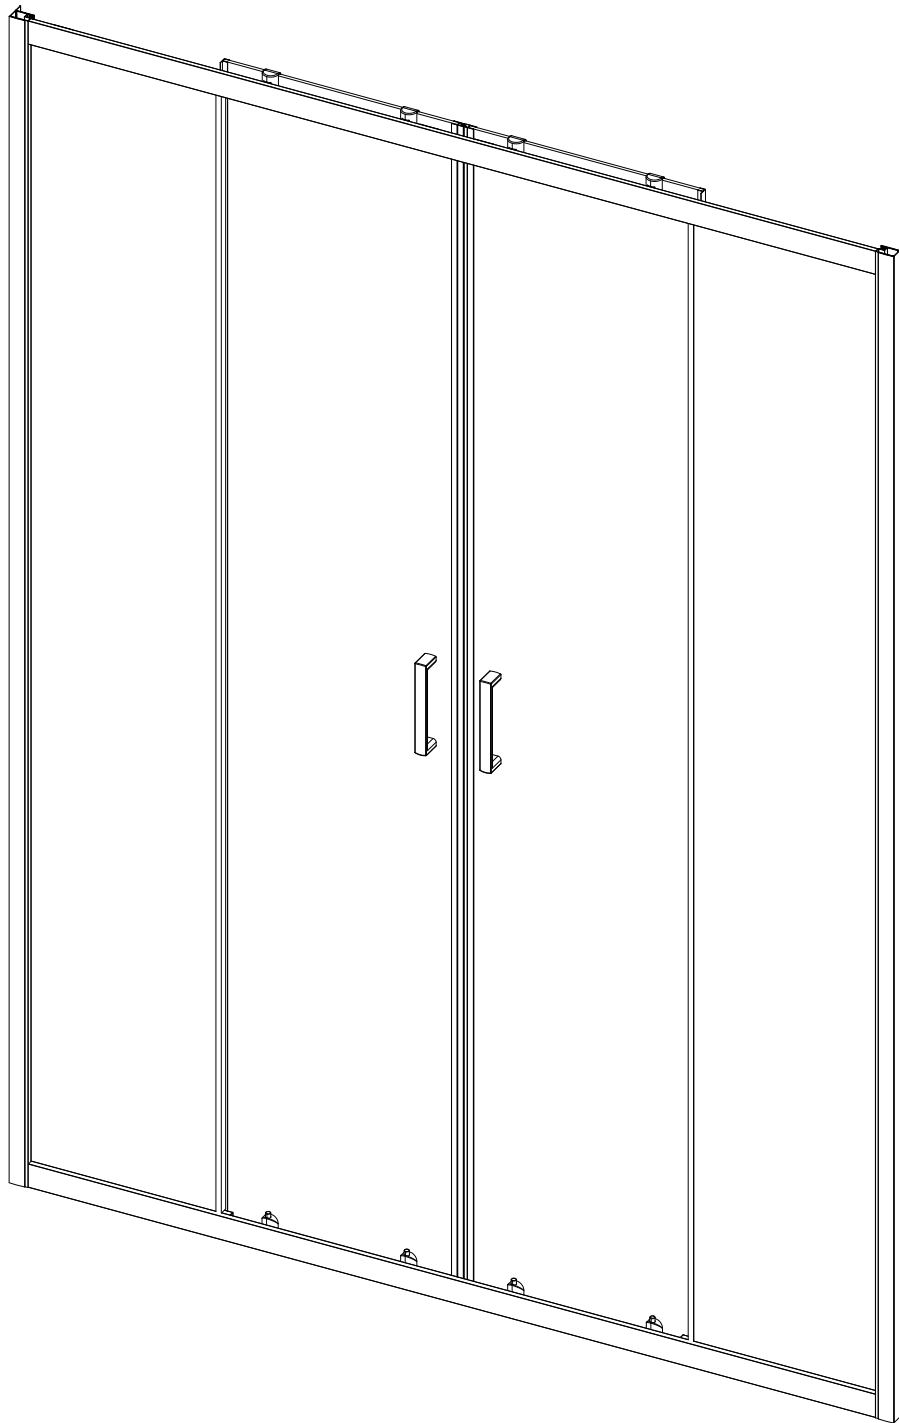
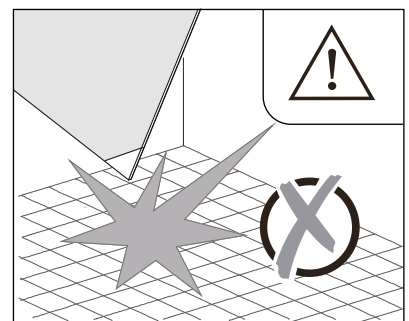
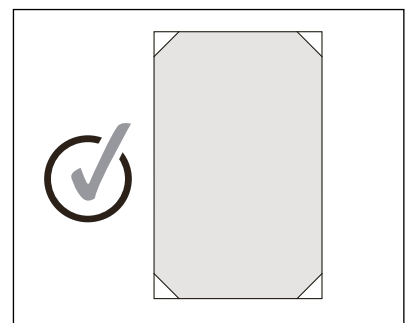
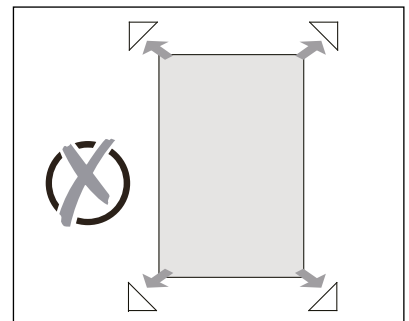
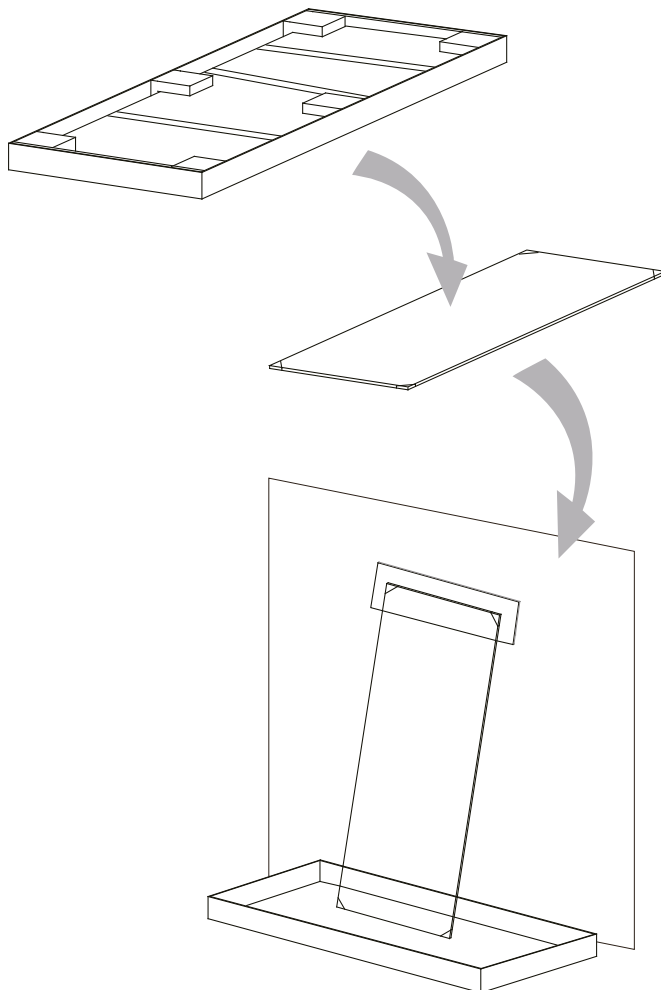
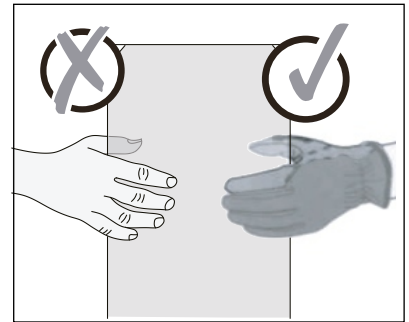
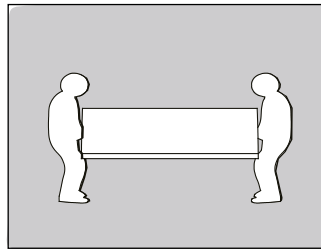
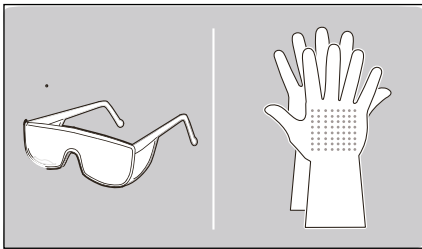
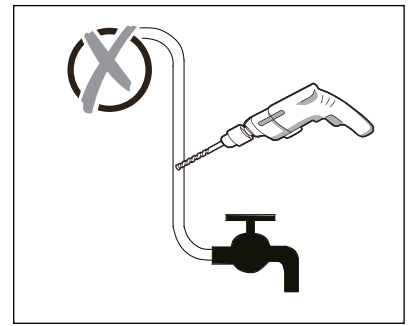
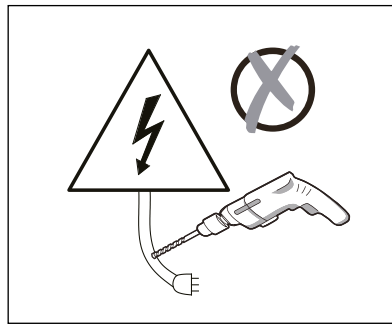
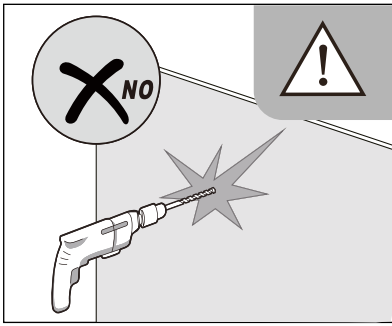
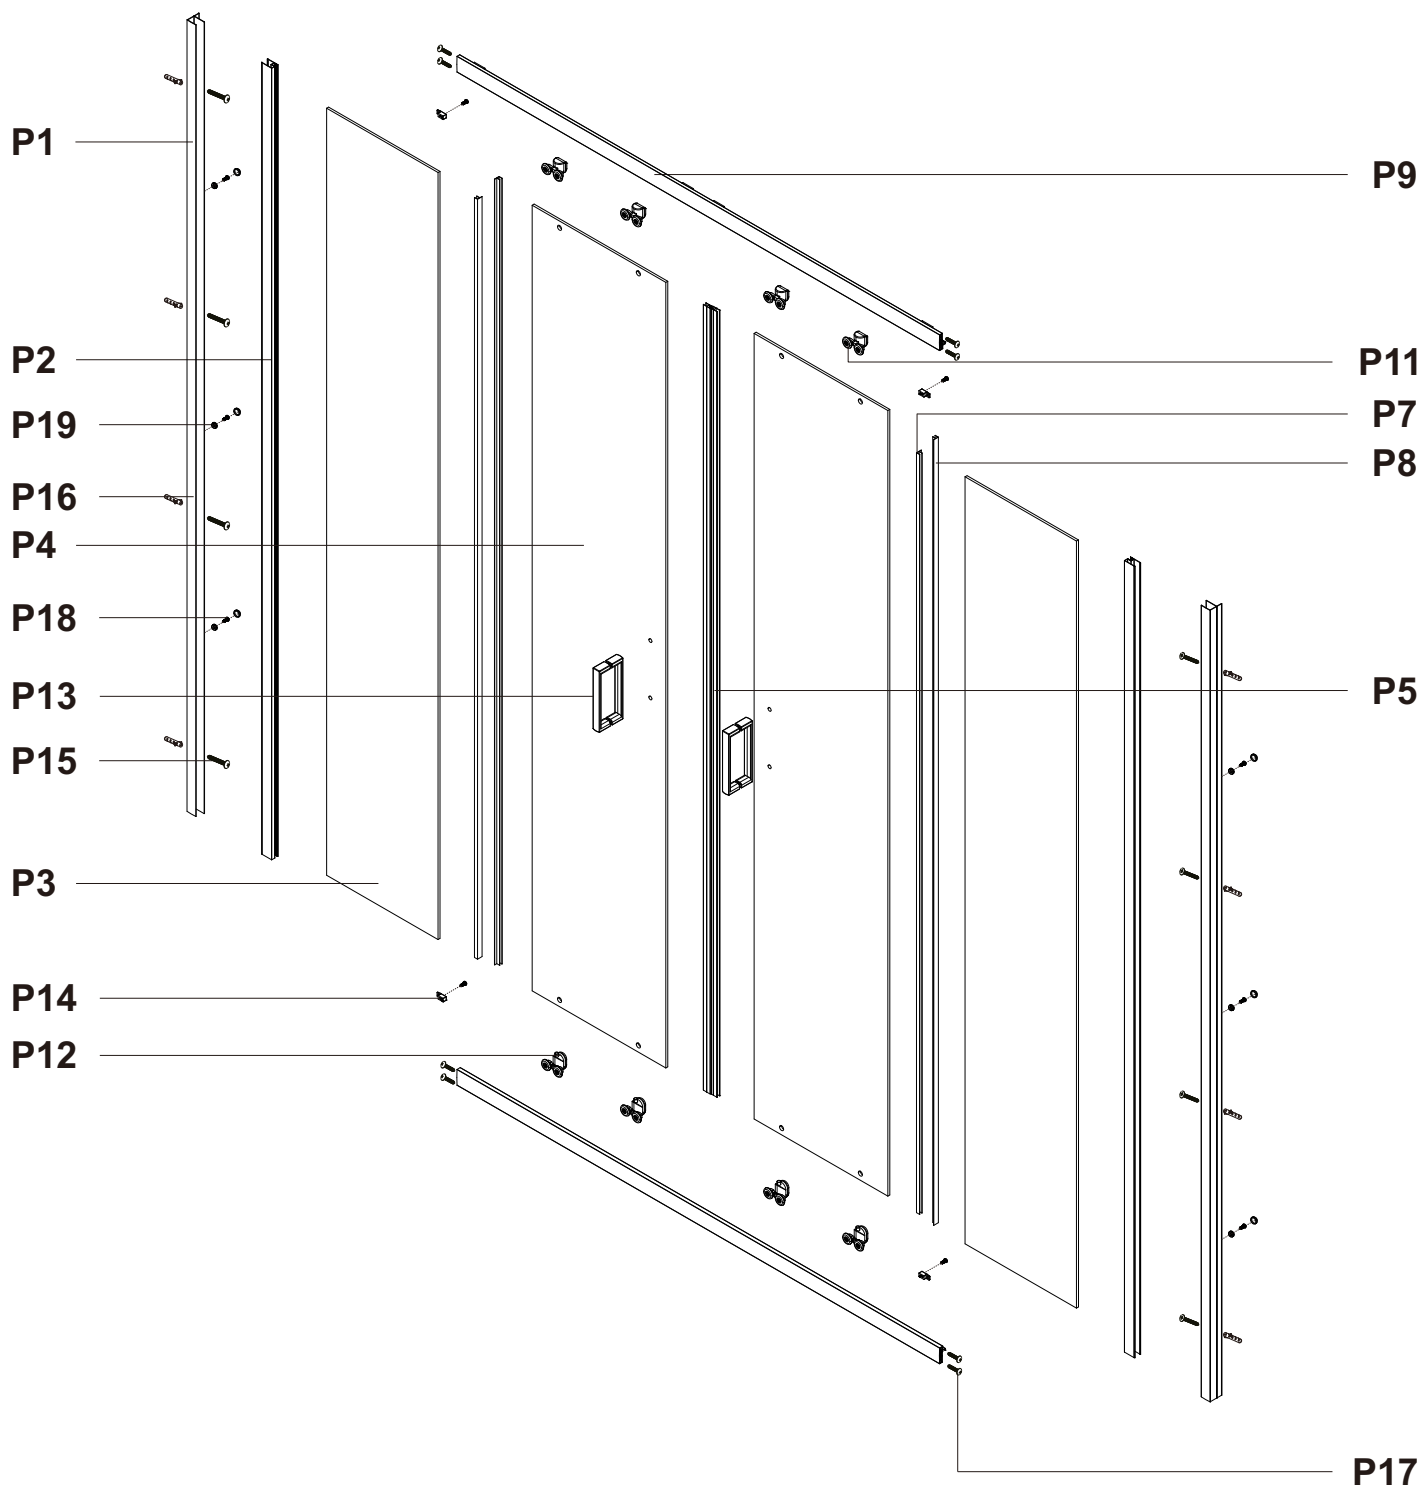
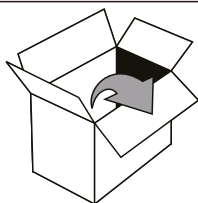






RDY36-2K2









			
P1  X2	P2  X2	P3  X2	P4  X2
P5  X1	P6  X1	P7  1750mm X2	P8  1813mm X2
P9  X2	P11  X4	P12  X4	P13  X2
P14  X4	P15 ST4x30MM  X8	P16  X8	P17 ST3.5x19MM  X8
P18 ST4x10MM  X10	P19  X10		

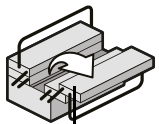	
	
 Ø 6mm	
	
 ⊕ PH2	
 Ø3mm	
 	



1

1.1

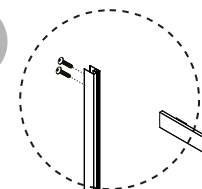

P2

P9




P17

1.3




P2


P9

1.4





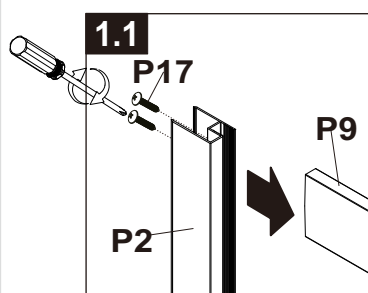
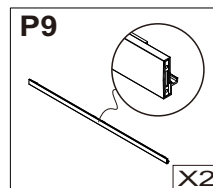
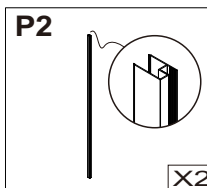


First, install the edge trim and track.

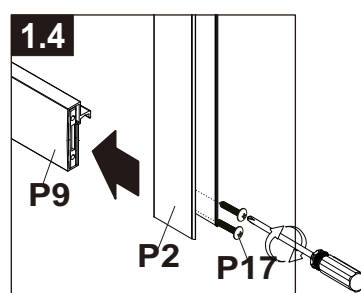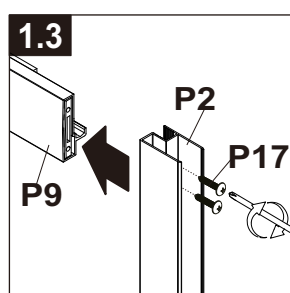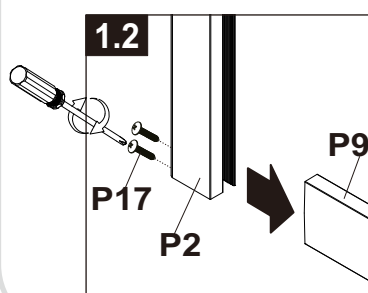


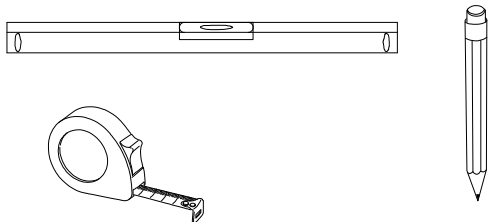


2

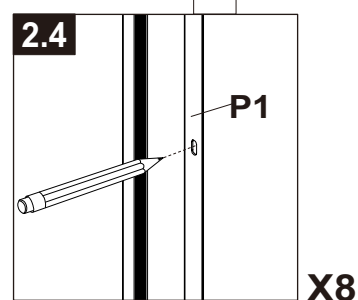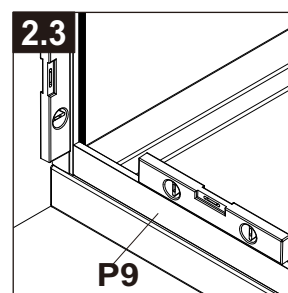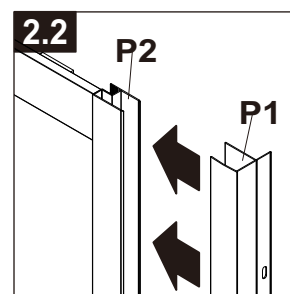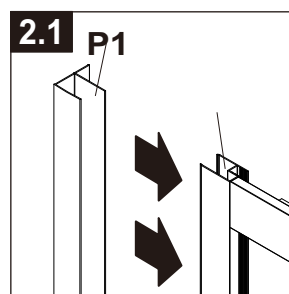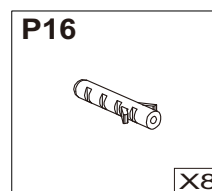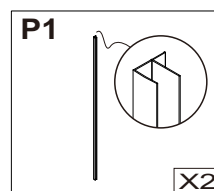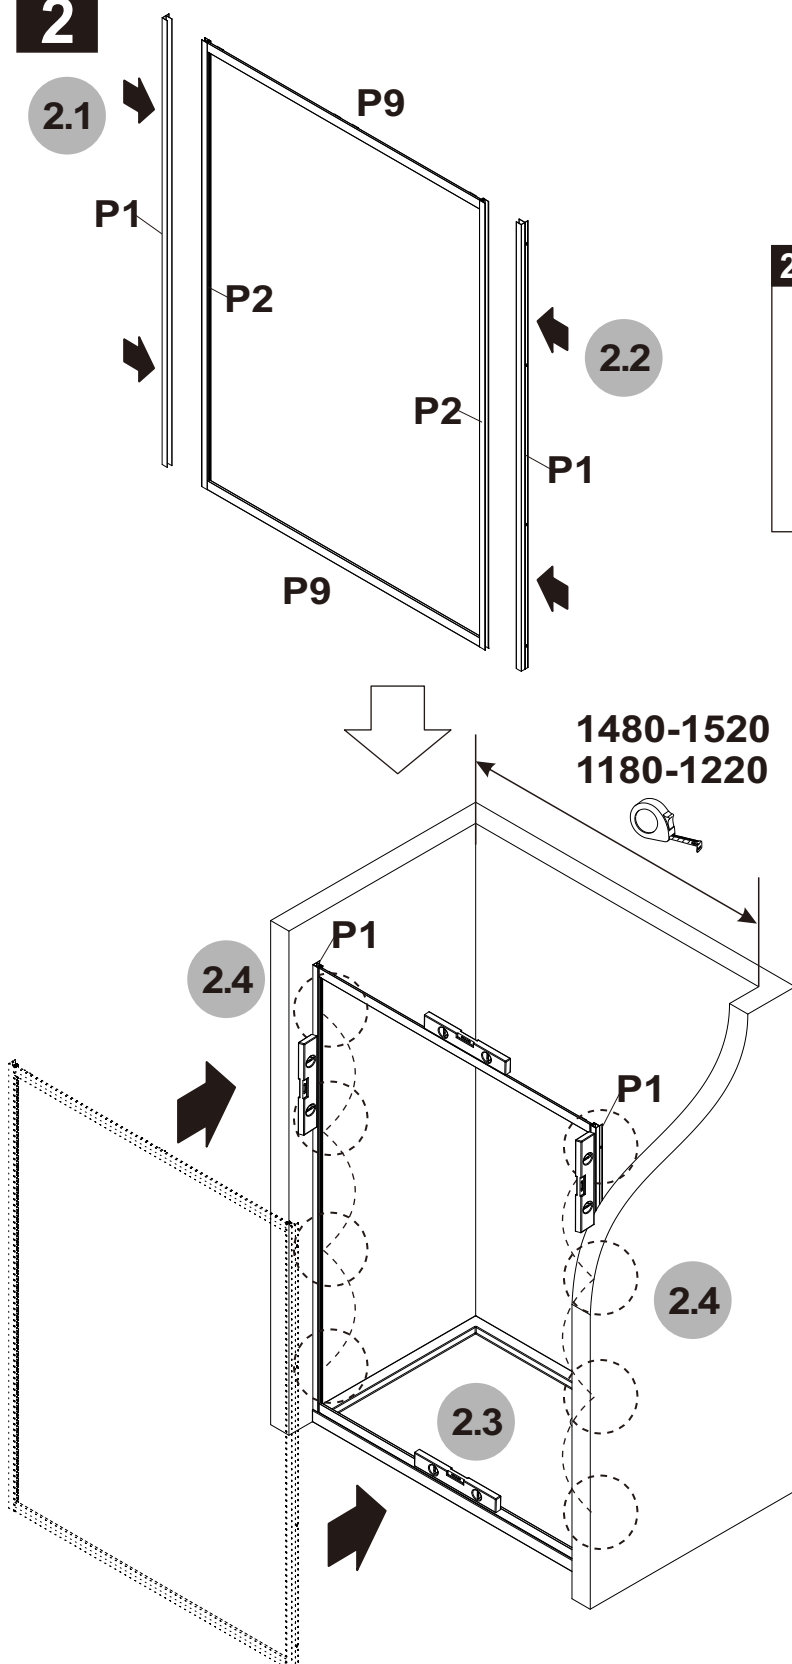


Assemble side strips to the frame without permanent installation. Verify positioning and mark drilling points prior to final mounting.



6mm



3

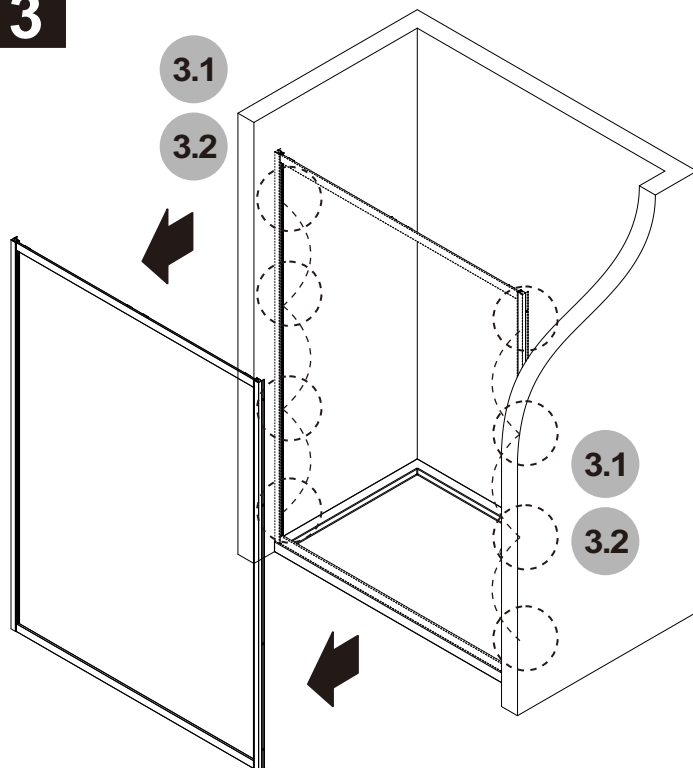

P15
ST4x30MM




X8

P16




X8

3.1

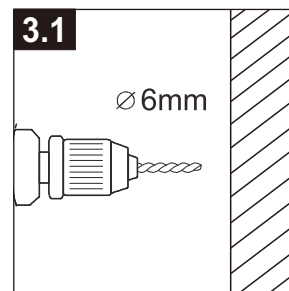


X8

3.2

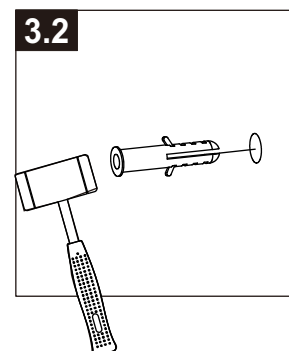


X8

Remove the assembly components and set them aside; then, use an electric drill to create holes at the marked positions; insert the expansion tubes into the drilled holes.

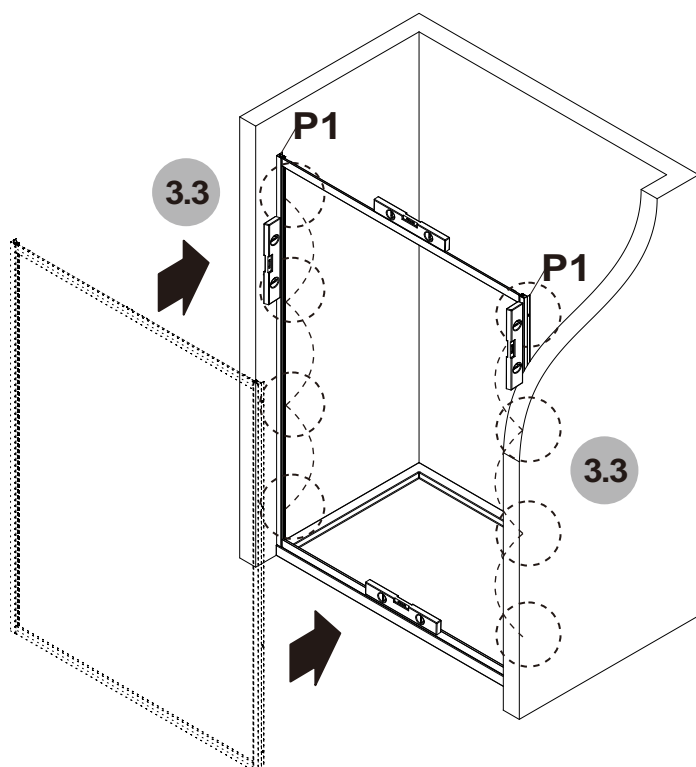


3.3








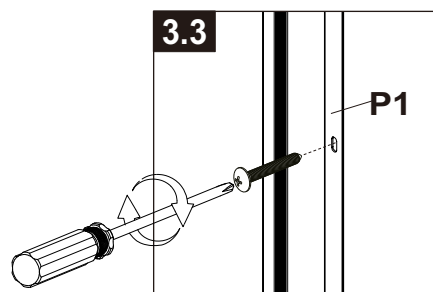


X8


Reposition the assembly components to the previously aligned location; secure them to the wall with screws.








4

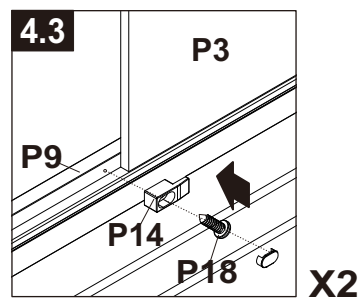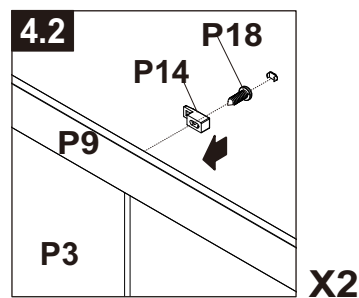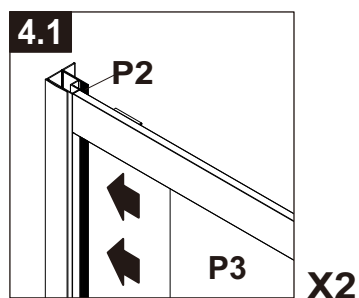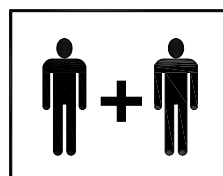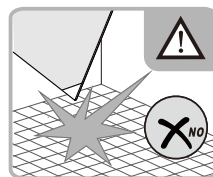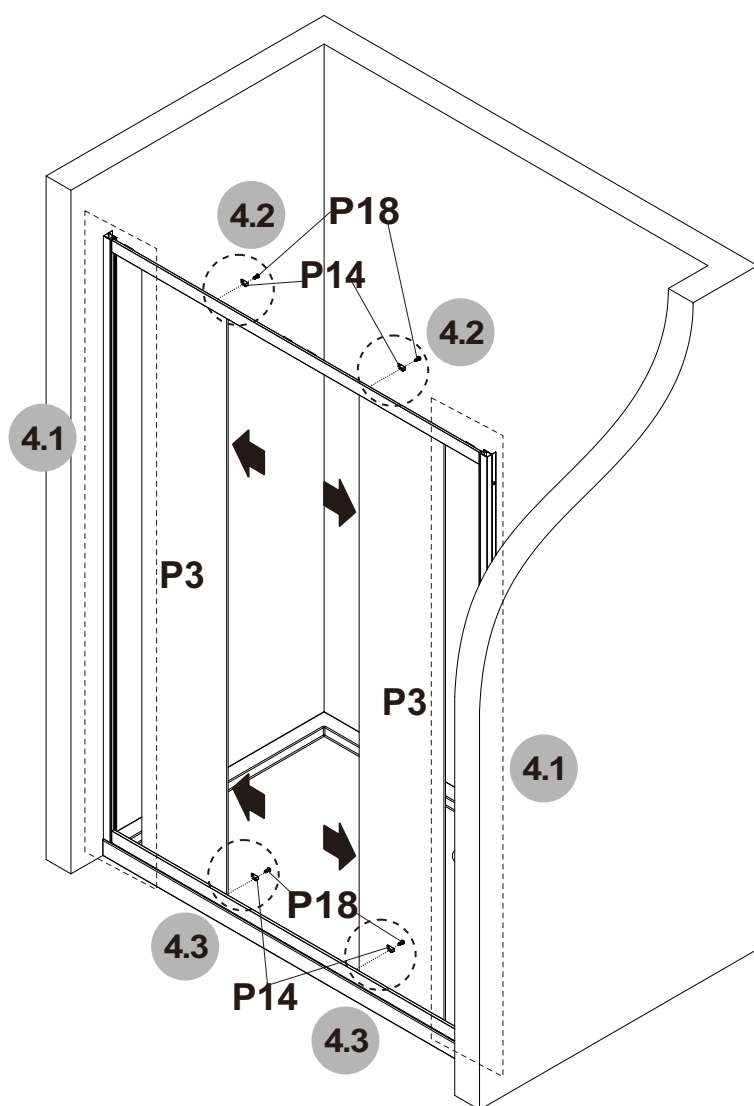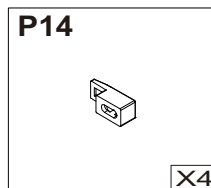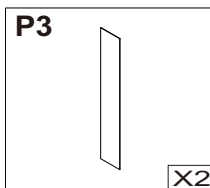




**Install the fixed glass panels;
secure them with 6mm retainer strips.**



5

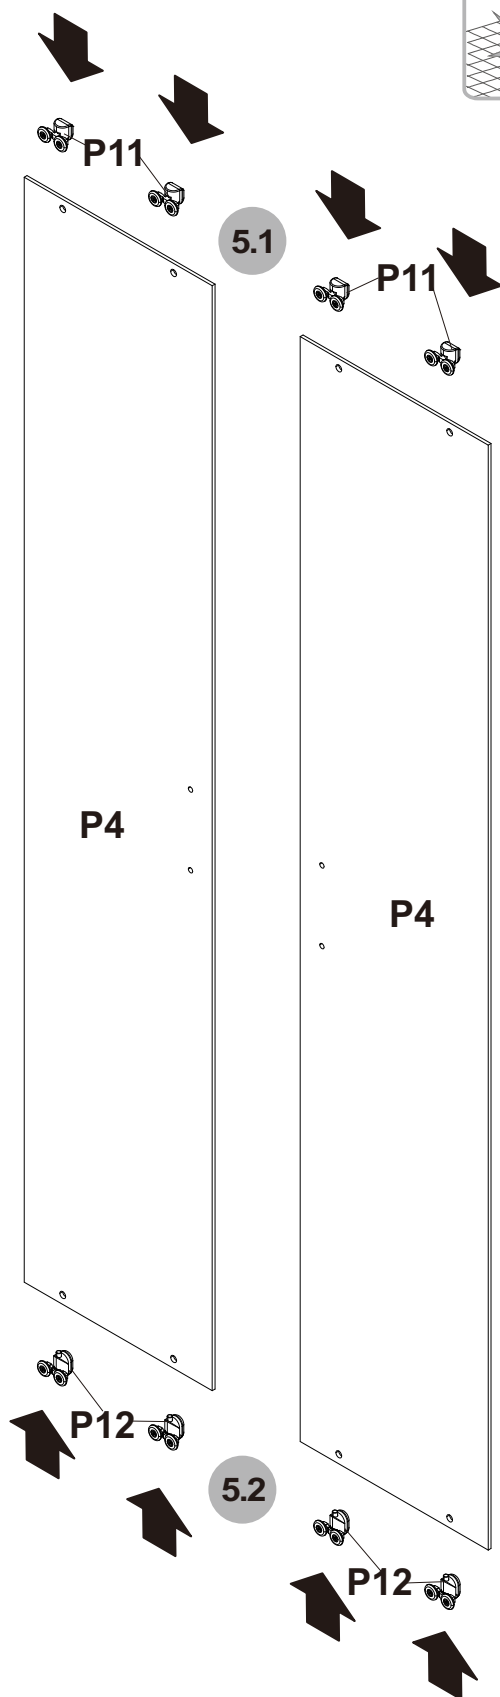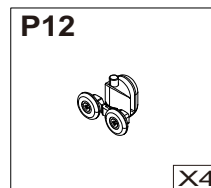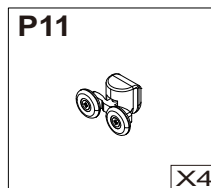
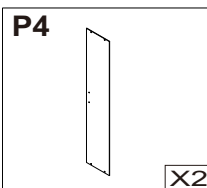
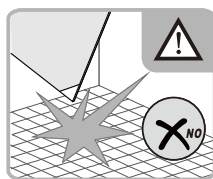


5.1

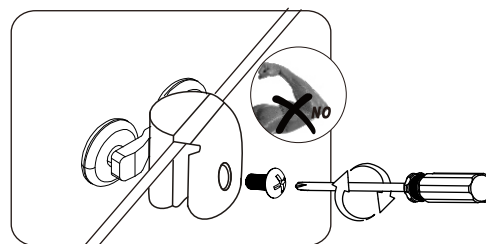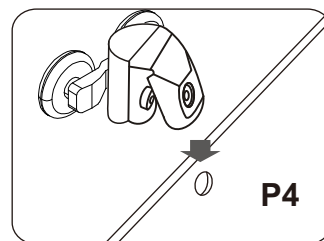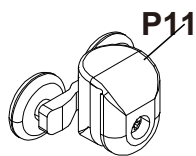

X4







5.2

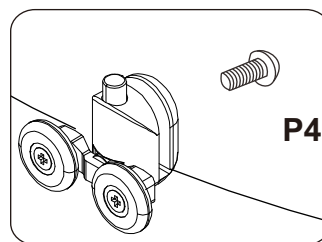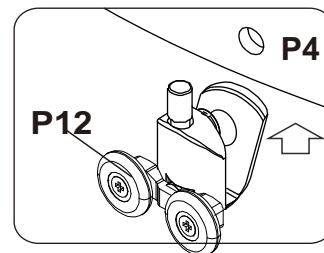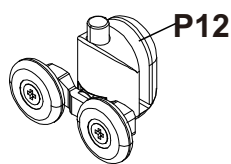




X4


**Install the upper and lower pulleys;
assemble with two movable glass panels.**

6




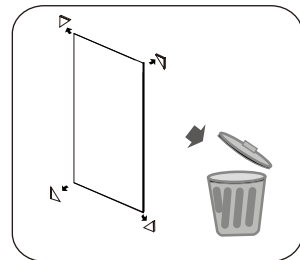
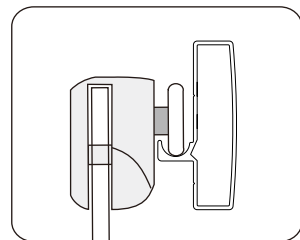
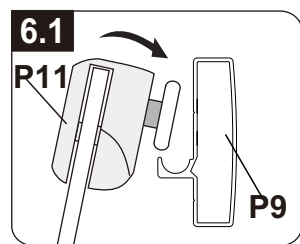
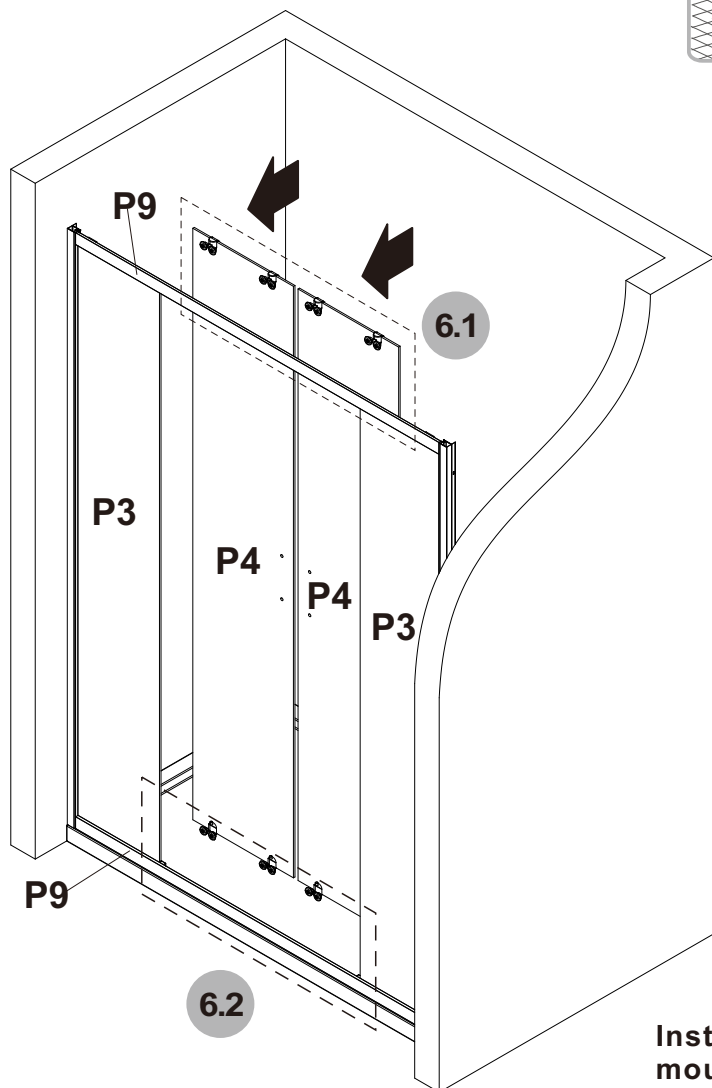
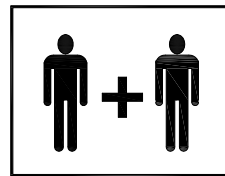
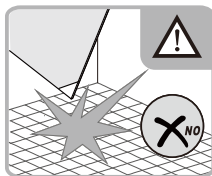


Install the movable glass panels;
mount the upper pulleys onto the upper track first;
then install the lower pulleys into the lower track
while pressing the pulley release buttons.

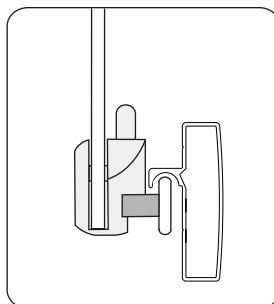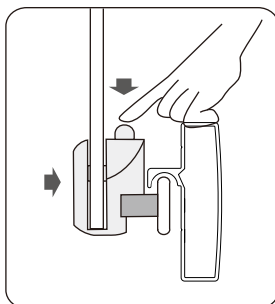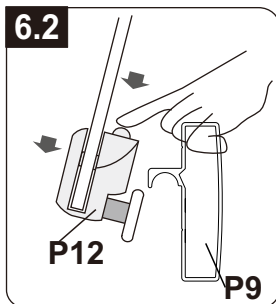




7

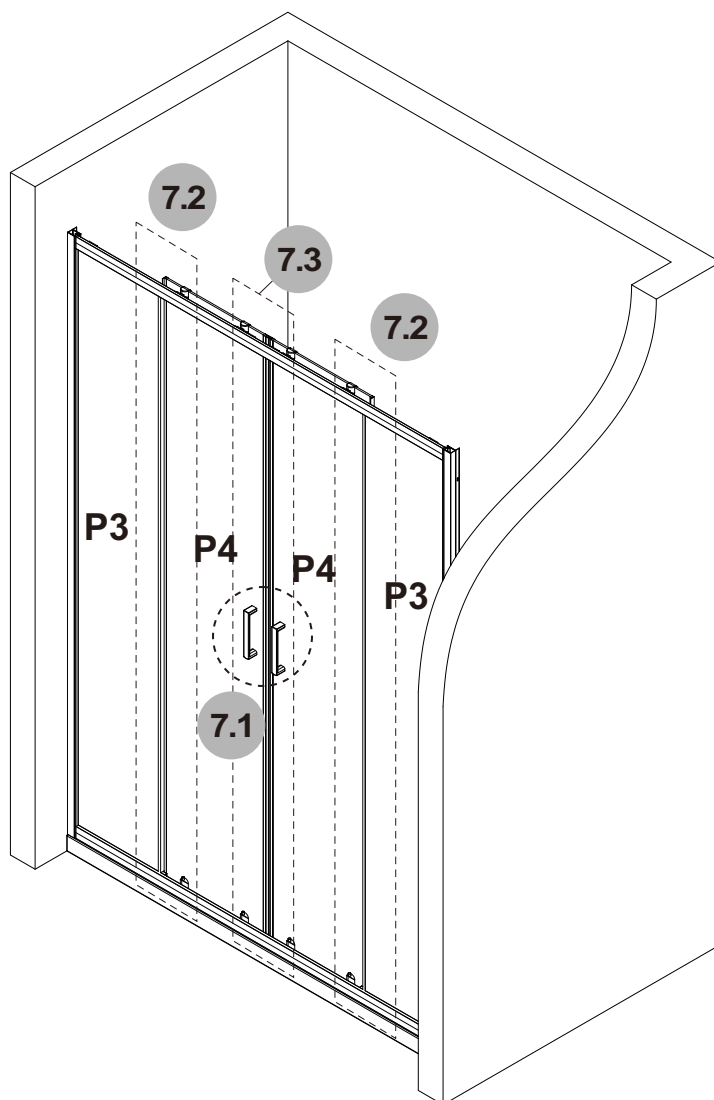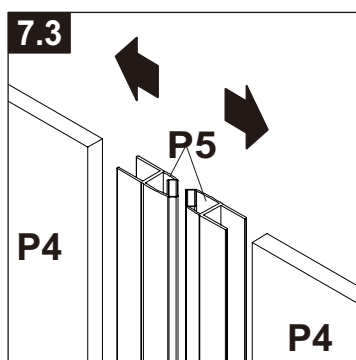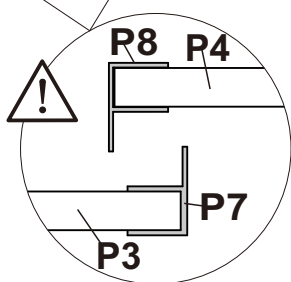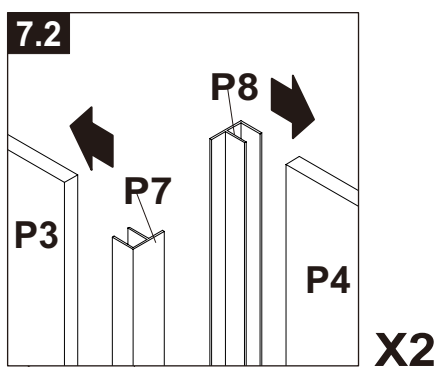
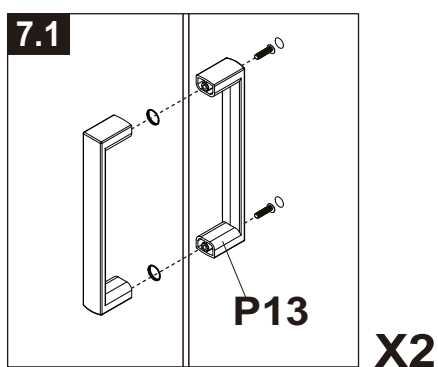
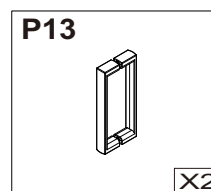
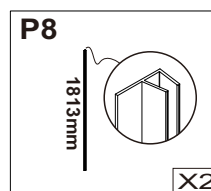
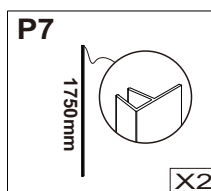
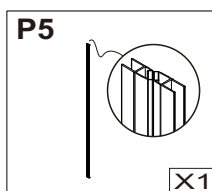


**Install the handle onto the movable glass;
assemble the waterstop strip according to product codes;
then mount both magnetic strips.**



8






8.1

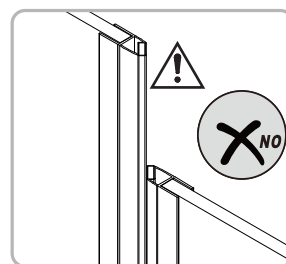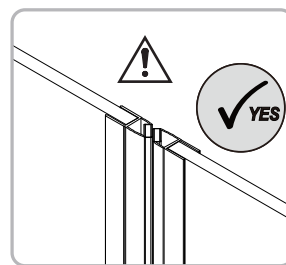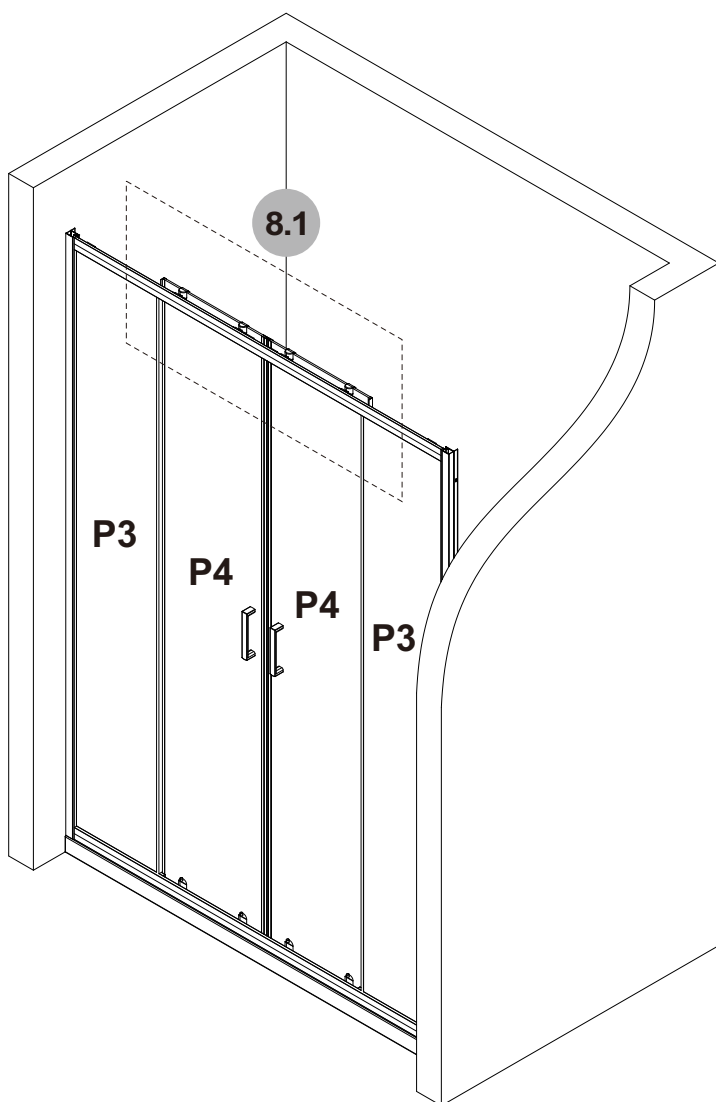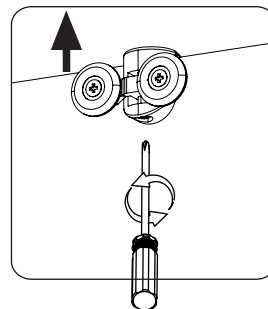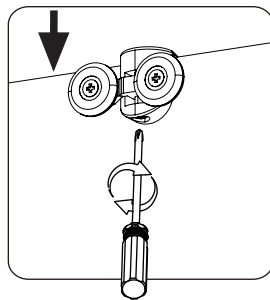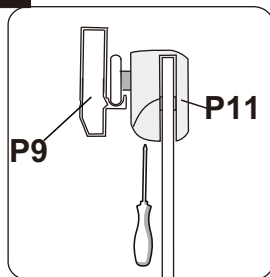


Adjust the screws on the upper pulleys with a screwdriver to fine-tune the position of the movable glass panels; align both sliding door panels.



9

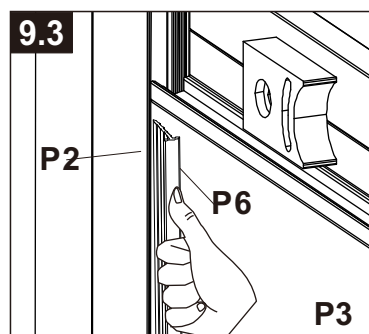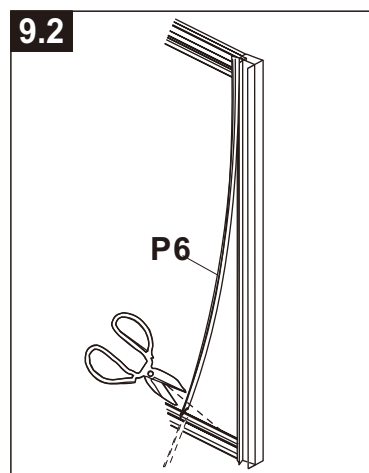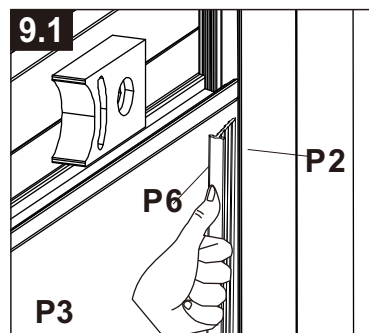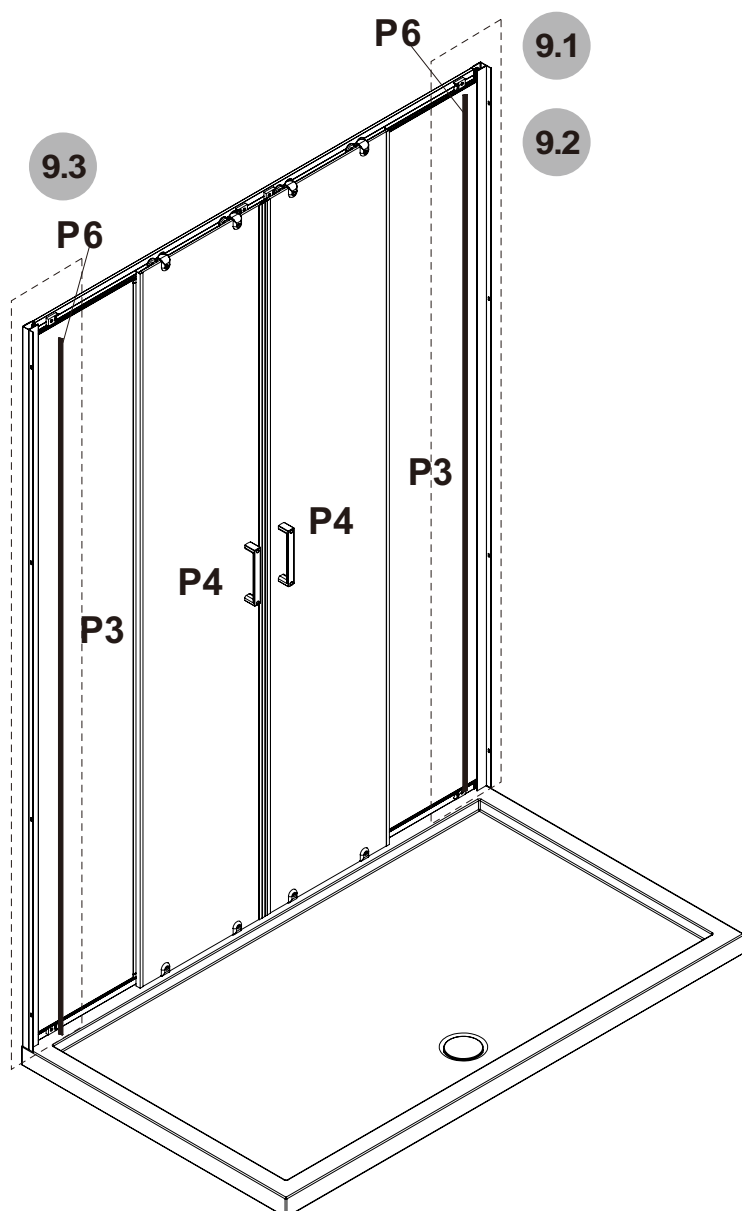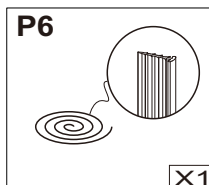

Insert the weatherstrip into the frame gap; trim the excess with scissors; insert into the opposite frame gap.

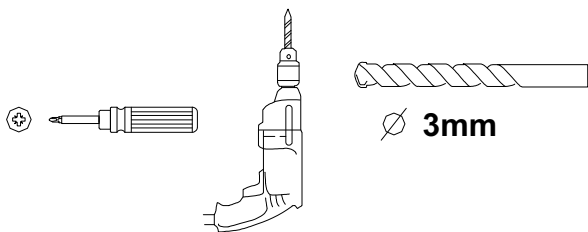

10

P18
ST4x10MM










X6

P19





X6

Position the frame strip and edge profile within their adjustable range; drill holes at designated points on the shower-side profile and strip to the specified depth; install screws with concealing caps.

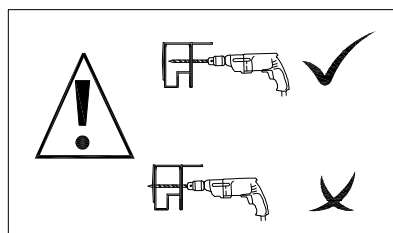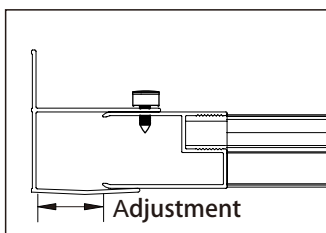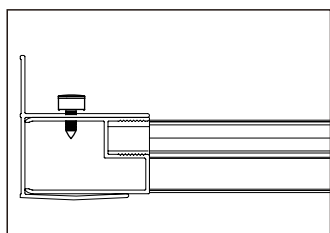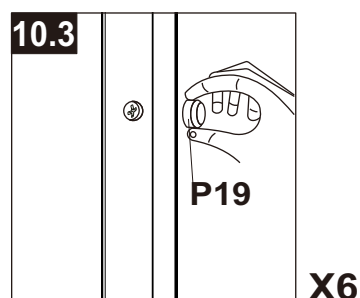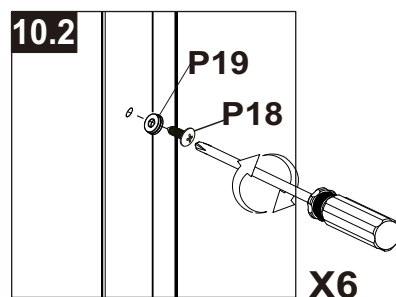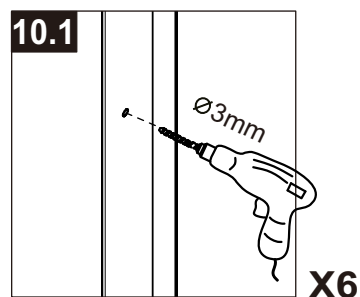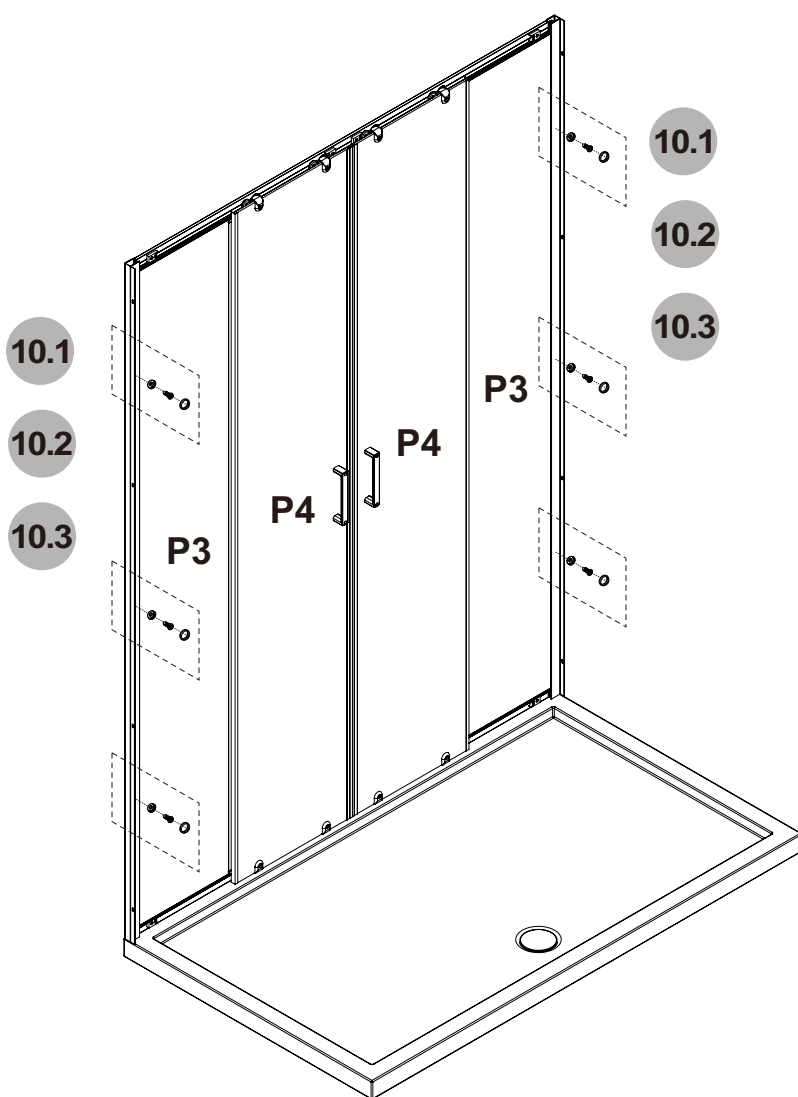



11

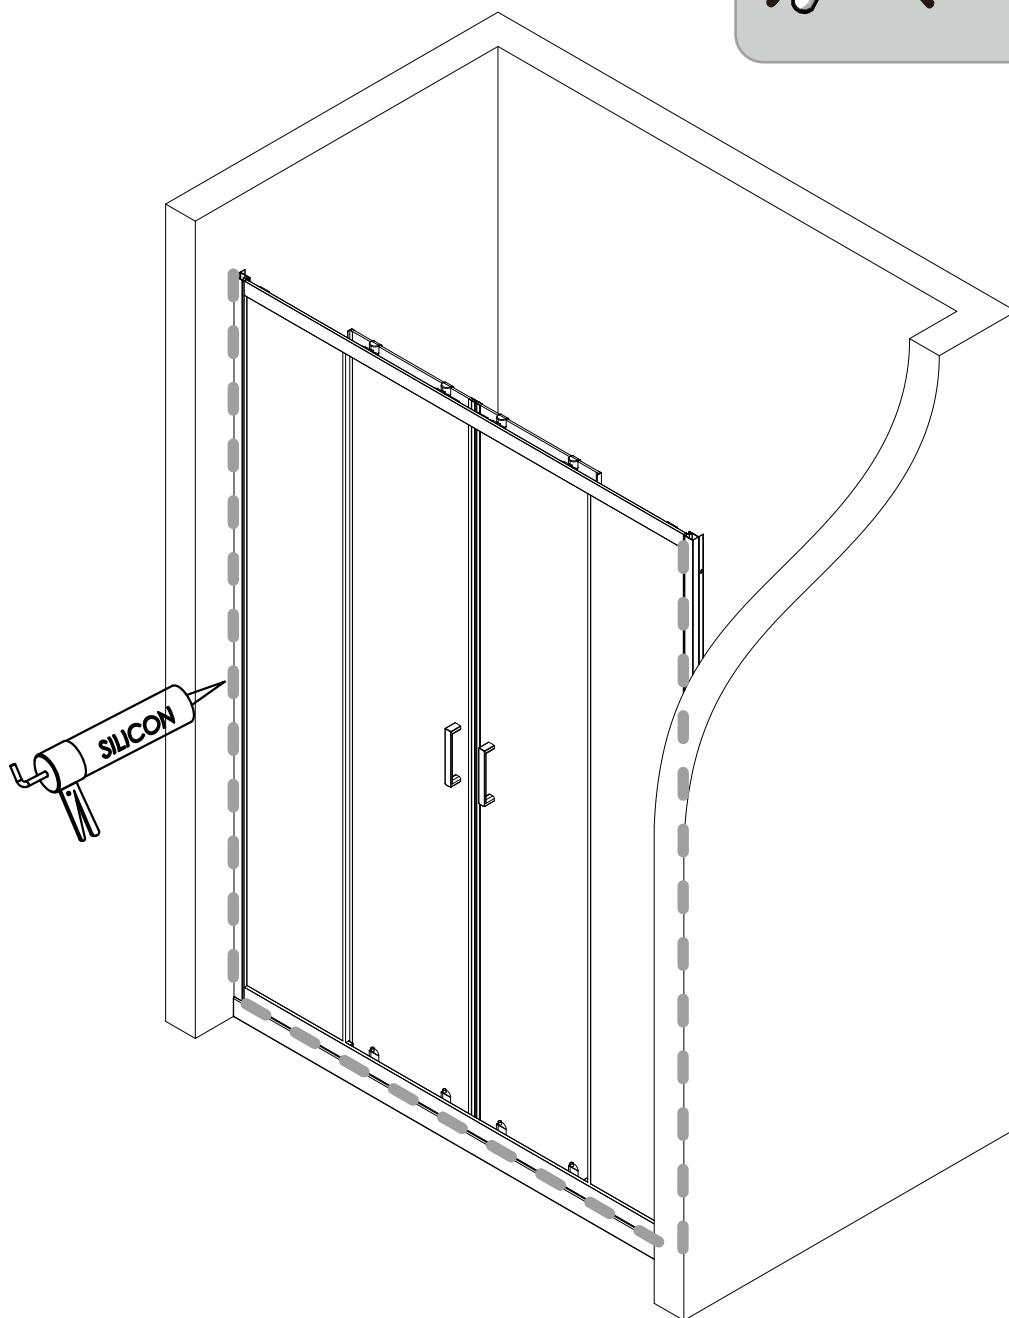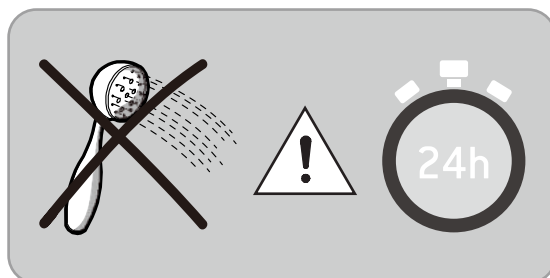

Apply silicone sealant to gaps between the outer frame, wall, and shower tray; allow 24 hours curing time before water exposure.