
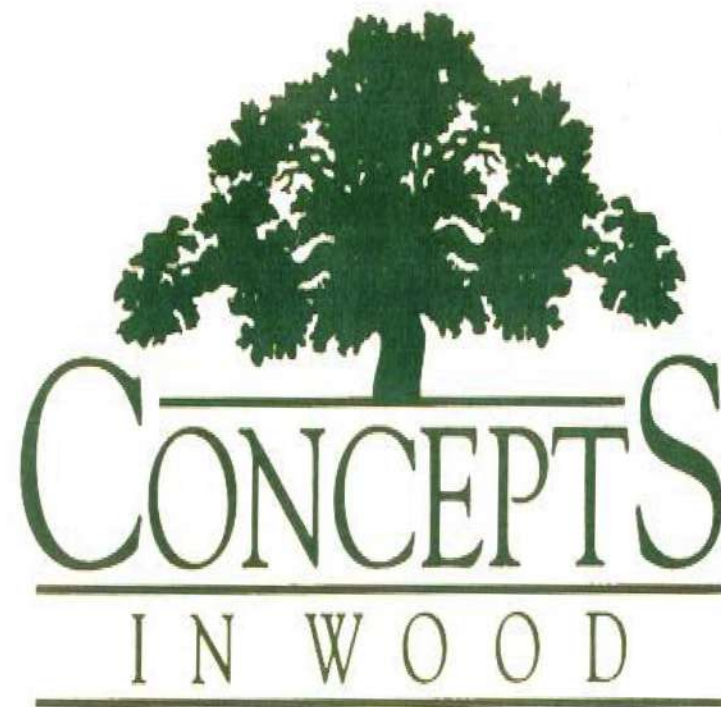


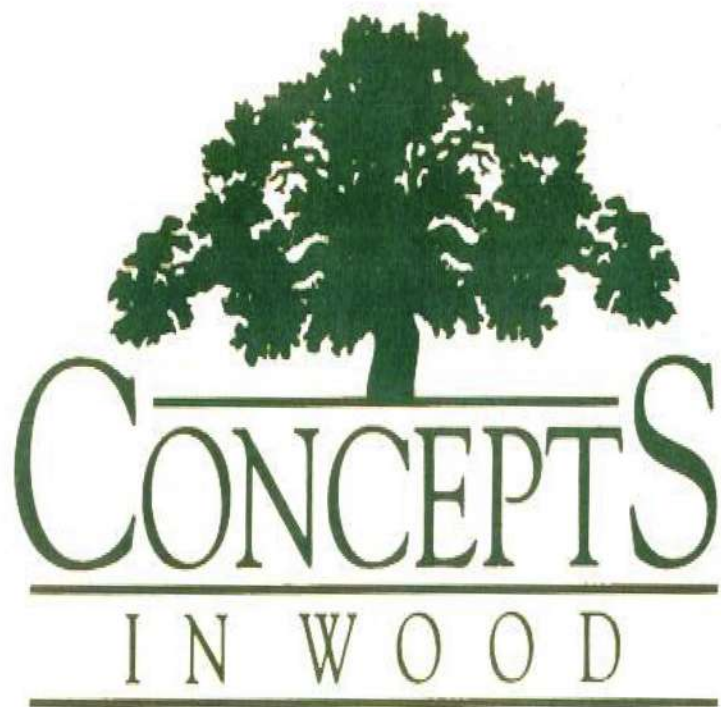

MI7272

KIT TO SECURE BOOKCASE TO THE WALL

If you need assistance DO NOT CALL THE STORE, call us. Our Customer Service Group is here to help you.
CALL MONDAY-FRIDAY between 8:00 A.M. and 3:00 P.M. PACIFIC TIME. Toll Free Telephone: 1-800-765-9035.

For questions and suggestions please write to the email: plycraft_customerservice@yahoo.com

KIT TO SECURE BOOKCASE TO THE WALL

If you need assistance DO NOT CALL THE STORE, call us. Our Customer Service Group is here to help you.
CALL MONDAY-FRIDAY between 8:00 A.M. and 3:00 P.M. PACIFIC TIME. Toll Free Telephone: 1-800-765-9035.

For questions and suggestions please write to the email: plycraft_customerservice@yahoo.com

Model No. MI7272

BOOKCASE 72"


To ensure that you have a speedy and pleasant time assembling your unit
PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE BEGINNING ASSEMBLY.
If you need assistance, DO NOT CALL THE STORE, call us. Our Customer Service Group is here to help you.
CALL MONDAY-FRIDAY, BETWEEN 8:00AM TO 3:00PM PACIFIC TIME.
Please be sure to follow the construction order in the Assembly Manual and complete each step before you proceed to the next step

Call: USA
Plycraft Industries Inc.
2100 E. Slauson Ave.
Huntington Park, CA 90255
E-mail: plycraft_customerservice@yahoo.com
Toll Free Telephone# 1-800-765-9035
Telephone# 1-323-587-8101

TOOLS REQUIRED:
Phillips Screwdriver (Not Included)
Rubber Mallet (Not Included)



CAUTION:
Must have 2 people

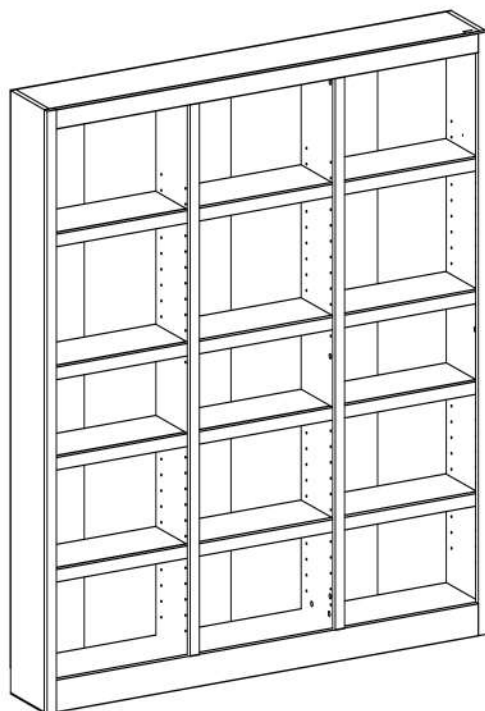

If you need assistance DO NOT CALL THE STORE, call us. Our Customer Service Group is here to help you.
CALL MONDAY-FRIDAY between 8 AM and 3 PM PACIFIC TIME. Toll Free Telephone: 1-800- 765-9035

PARTS



a) Top (1 pc.)



b) Bottom (1 pc.)



c) Fixed Shelf
(3 pcs.)




d) Adjustable
Shelves (9 pcs.)



e) Top Apron (1 pc.)




f) Bottom Apron (1 pc.)




g) Left Side
(1 pc.)



h) Right Side
(1 pc.)

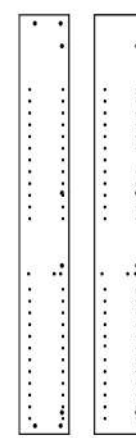

i) Divider (2 pcs.)

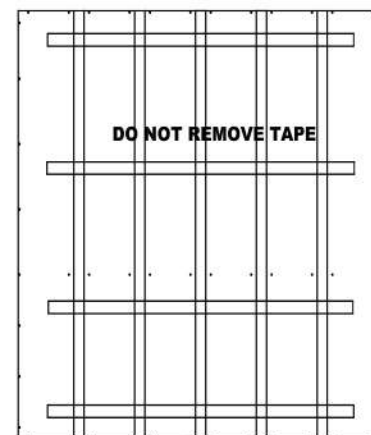

j) Back Panel (1 pc.)



y) Back Support (1 pc.)

HARDWARE



m) Wood Dowel 1 3/16" (30 pcs.)



q) Back Panel Washer (10 pcs.)



u) Corner Brace (4 pcs.)



n) Cam lock (16 pcs.)




r) Back Panel Screw 5/8" (62 pcs.)



o) Metal Fastener (16 pcs.)



s) Flat Head Screw 1 1/4" (20 pcs.)

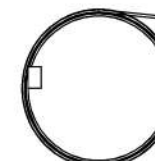

w) Nylon Restraint Strap (2 pc.)



p) Shelf Support (36 pcs.)




t) Wood Dowel 2" (6 pcs.)




x) Plastic Anchor (2 pc.)


Step 1

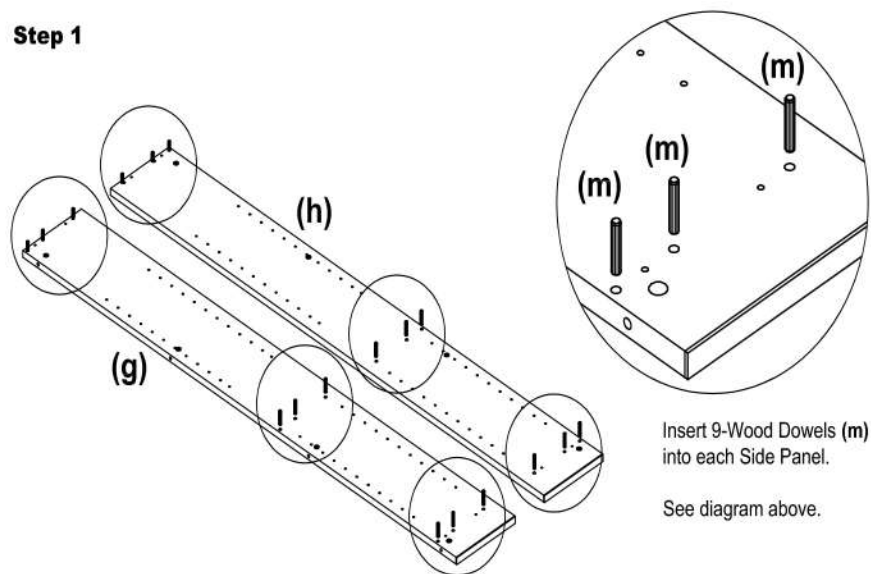


Step 2

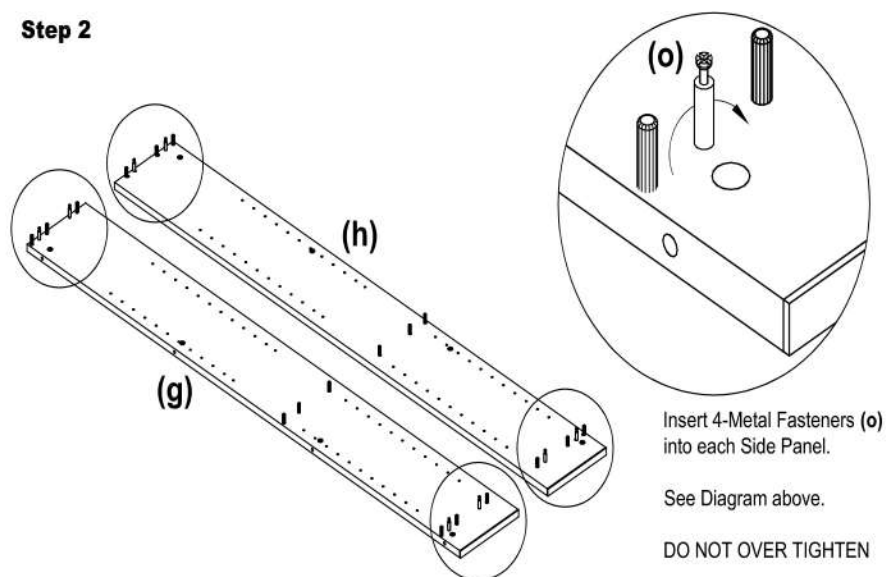


Step 3

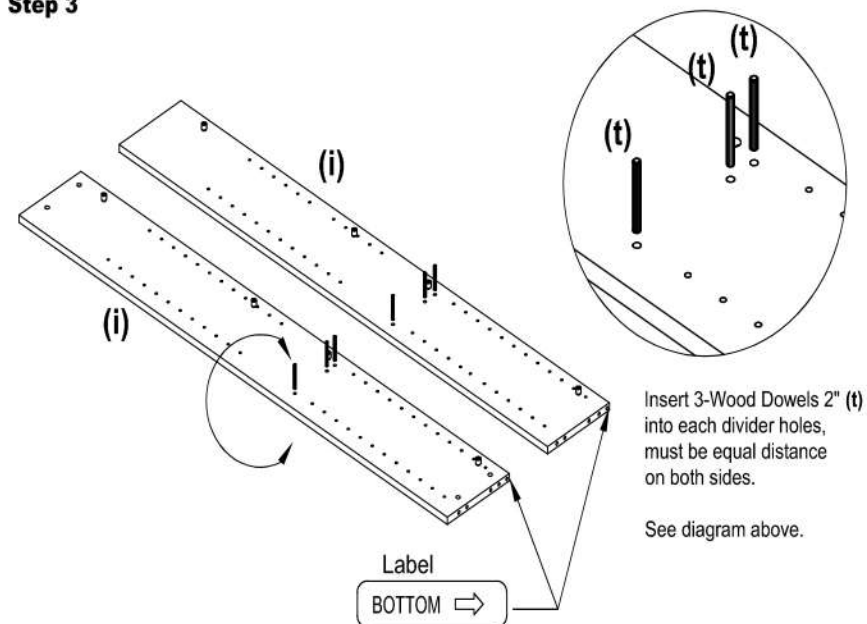

Step 4

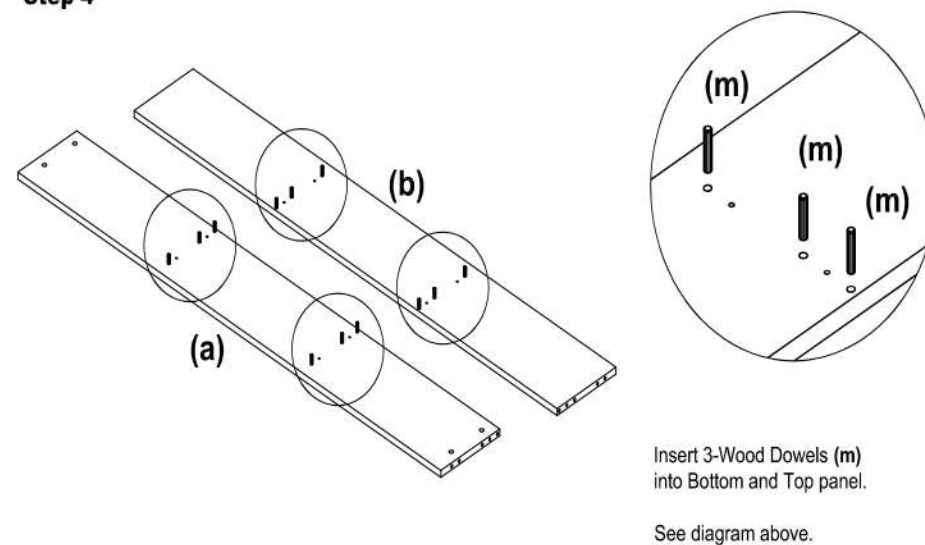

Step 5

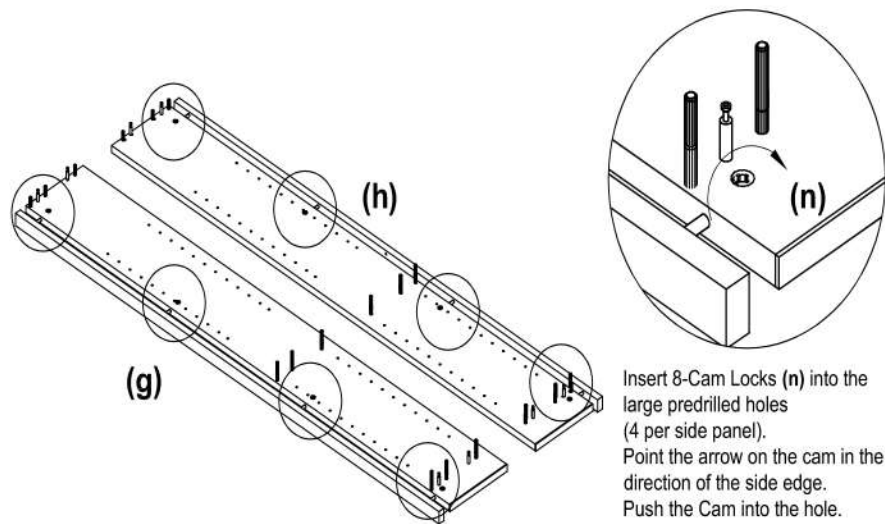


Insert 8-Cam Locks (n) into the large predrilled holes (4 per side panel). Point the arrow on the cam in the direction of the side edge. Push the Cam into the hole.

Then use a screwdriver, to turn each Cam approximately 1/2 turn in the direction of the arrow (clock-wise) to lock it in place.

See Diagram above.

Step 6

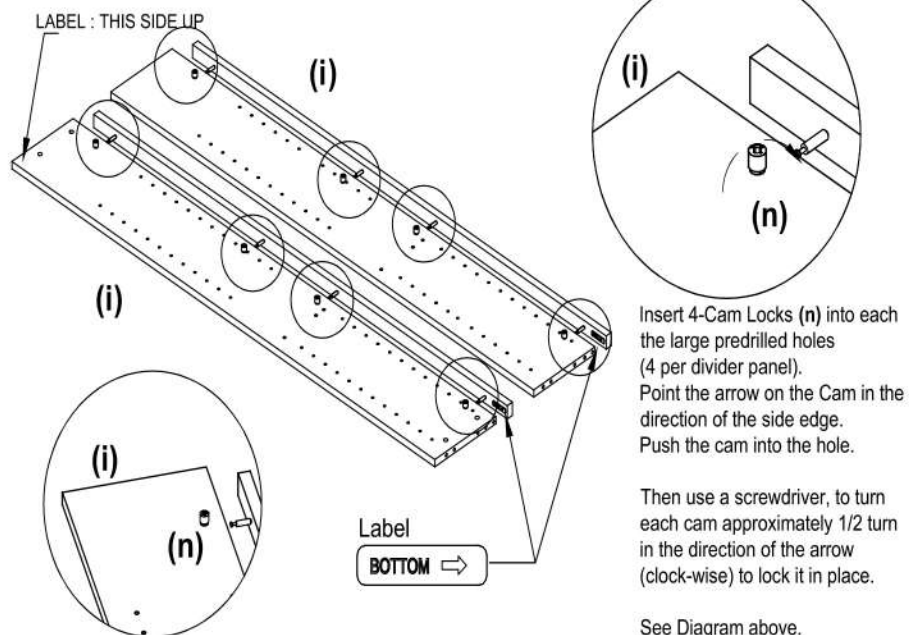


Insert 4-Cam Locks (n) into each the large predrilled holes (4 per divider panel). Point the arrow on the Cam in the direction of the side edge. Push the cam into the hole.

Then use a screwdriver, to turn each cam approximately 1/2 turn in the direction of the arrow (clock-wise) to lock it in place.

See Diagram above.

Step 7

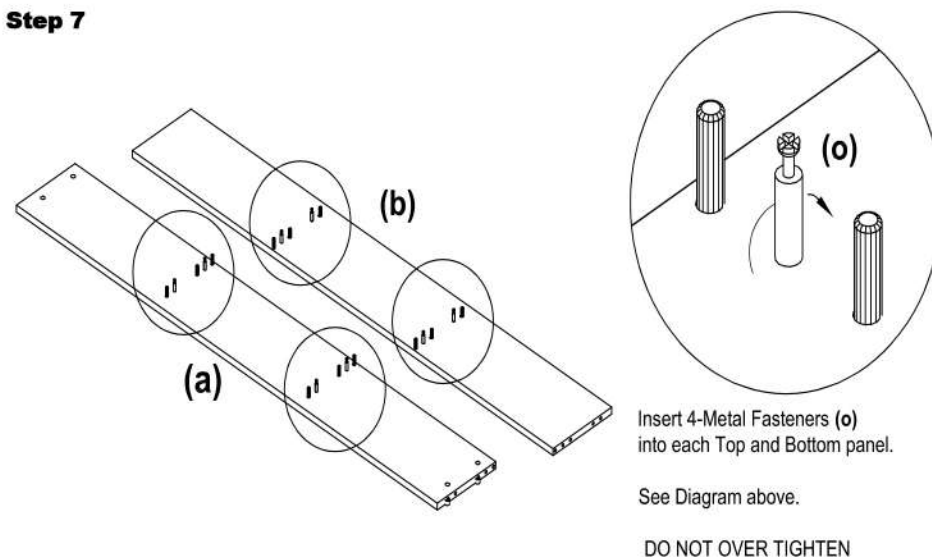


Insert 4-Metal Fasteners (o) into each Top and Bottom panel.

See Diagram above.

DO NOT OVER TIGHTEN

Step 8

Attach Top (a), Bottom (b) and Fixed Shelf (c) with Divider Panels face down as showing.

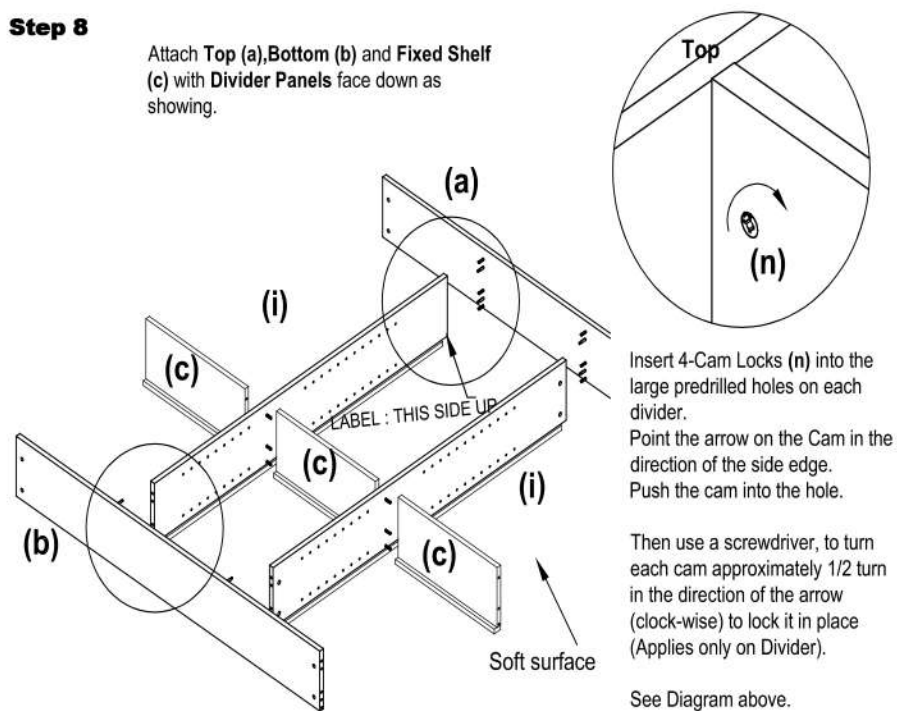


Insert 4-Cam Locks (n) into the large predrilled holes on each divider. Point the arrow on the Cam in the direction of the side edge. Push the cam into the hole.

Then use a screwdriver, to turn each cam approximately 1/2 turn in the direction of the arrow (clock-wise) to lock it in place (Applies only on Divider).

See Diagram above.


Step 9

Attach **Left Side (g)** and **Right Side (h)** to the previous subassembly as shown.

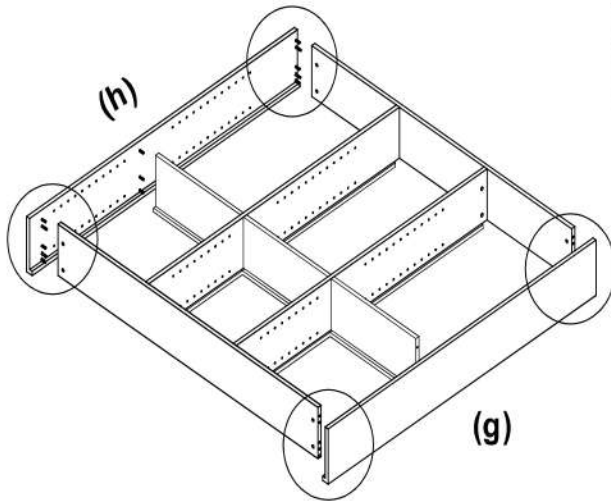

Important

Be sure all wood dowels and metal fasteners are located in the opposite holes **BEFORE** insert the cam locks.

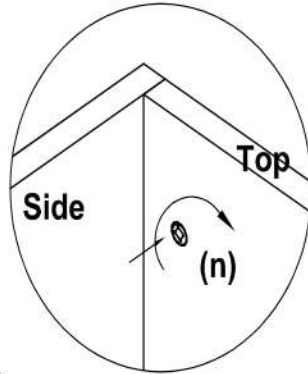


Insert 8-Cam Locks (n) into the large predrilled holes, point the arrow on the Cam in the direction of the side edge. Push the Cam into the hole.


Then use a screwdriver, to turn each Cam approximately 1/2 turn in the direction of the arrow (clock-wise) to lock it in place (Applies only on Top and Bottom).

See Diagram above.

Step 10

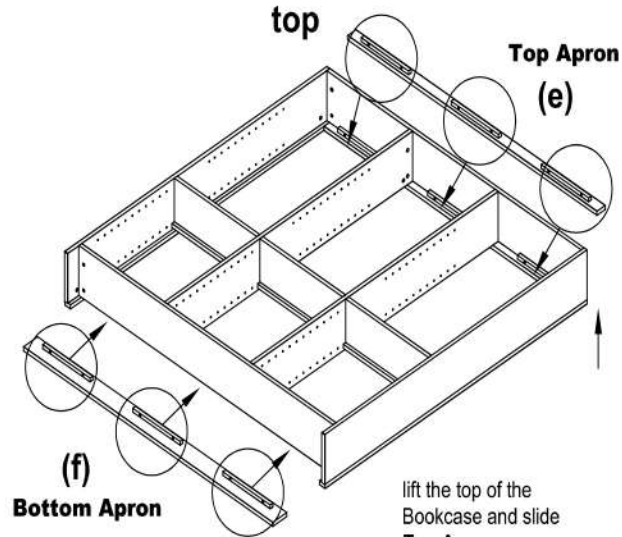

lift the top of the Bookcase and slide **Top Apron** underneath. Make sure the cleats are inside the top.

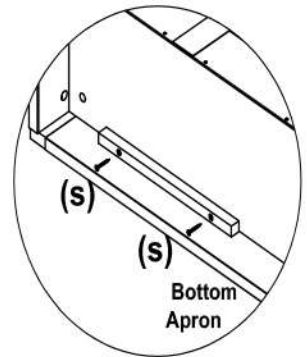


Install Top Apron (e) to the Top Panel and Bottom Apron (f) to the Bottom Panel with Flat screws (s). Press down firmly and carefully to close all gaps.

See Diagram above.


Step 11

IMPORTANT: Back Panel must be completely aligned with TOP and side edges as well, to ensure a square cabinet.

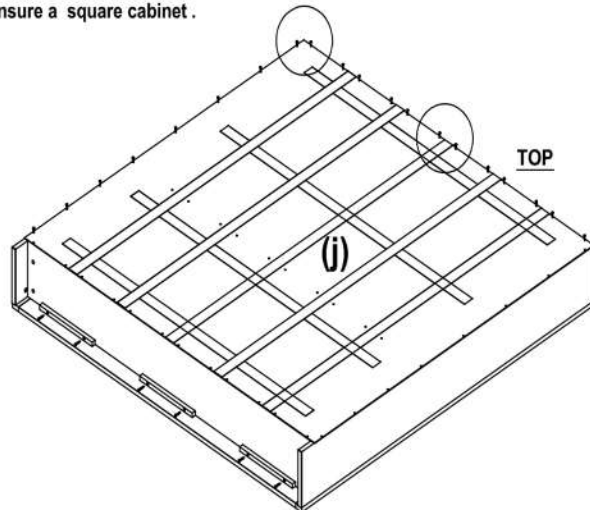

NOTE: DO NOT LIFT OR TILT ON SIDE OR EDGES .
DO NOT LIFT UP THE STORAGE CABINET UNTIL
BACK PANEL IS INSTALLED.

DO NOT REMOVE TAPE

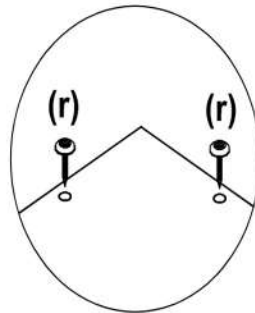

Lay the Back Panel (j) on the back edges of the bookcase as shown. Make sure the Back Panel unfinished side faces up.


Position the Back Panel (j) flush with the top edge, make sure the Back Panel (j) does not overlap at the top corners.

Insert and screw 12 Screws (r) along the top edge of the Back Panel, then screw 8 Screws (r) one side edge to square the cabinet.


When the cabinet is square, insert and screw into the rest of the empty pre-drilled holes.

See Diagram above.

Step 12

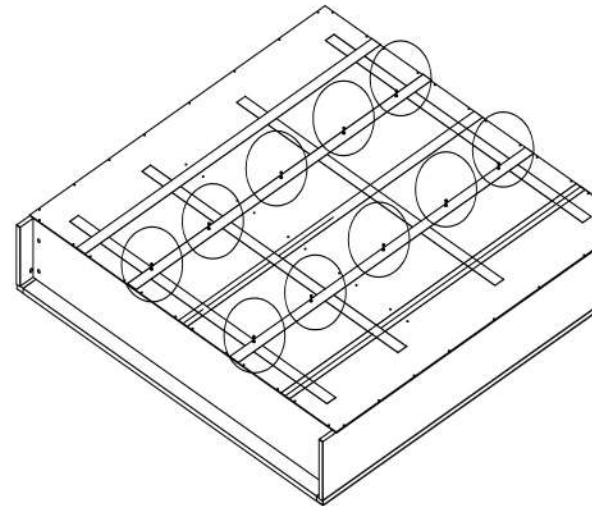


NOTE: DO NOT LIFT OR TILT ON SIDE OR EDGES .
DO NOT LIFT UP THE STORAGE CABINET UNTIL BACK PANEL IS
INSTALLED.

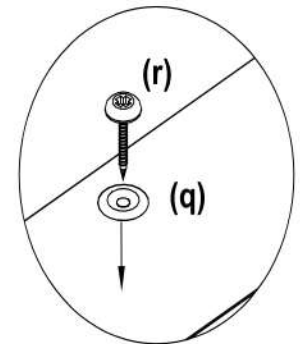


Finally screw 10 Screws (r) with washer (q) along the tape, as shown in step 14.

See the diagram above.


Step 13

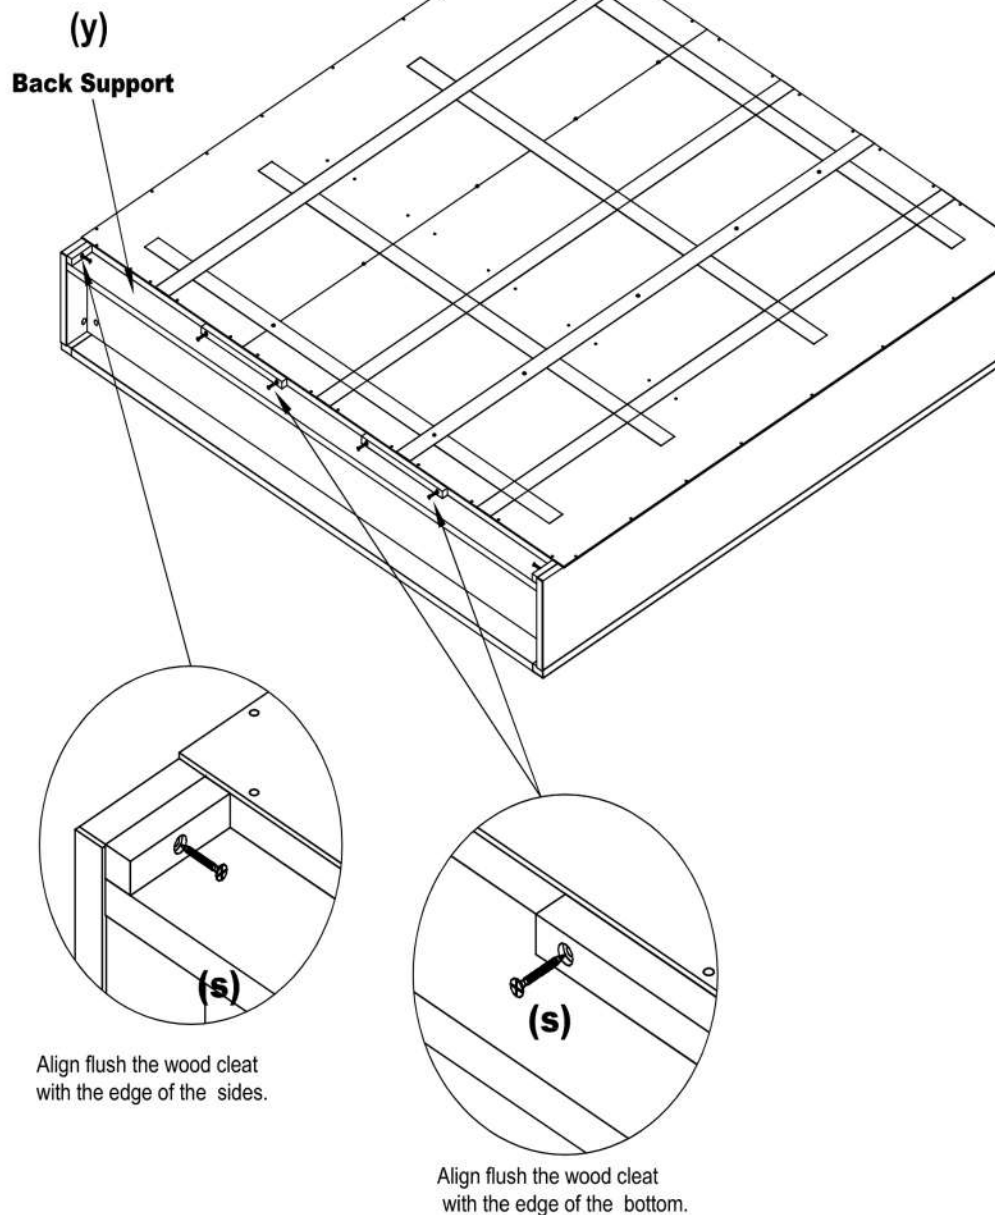

Step 14

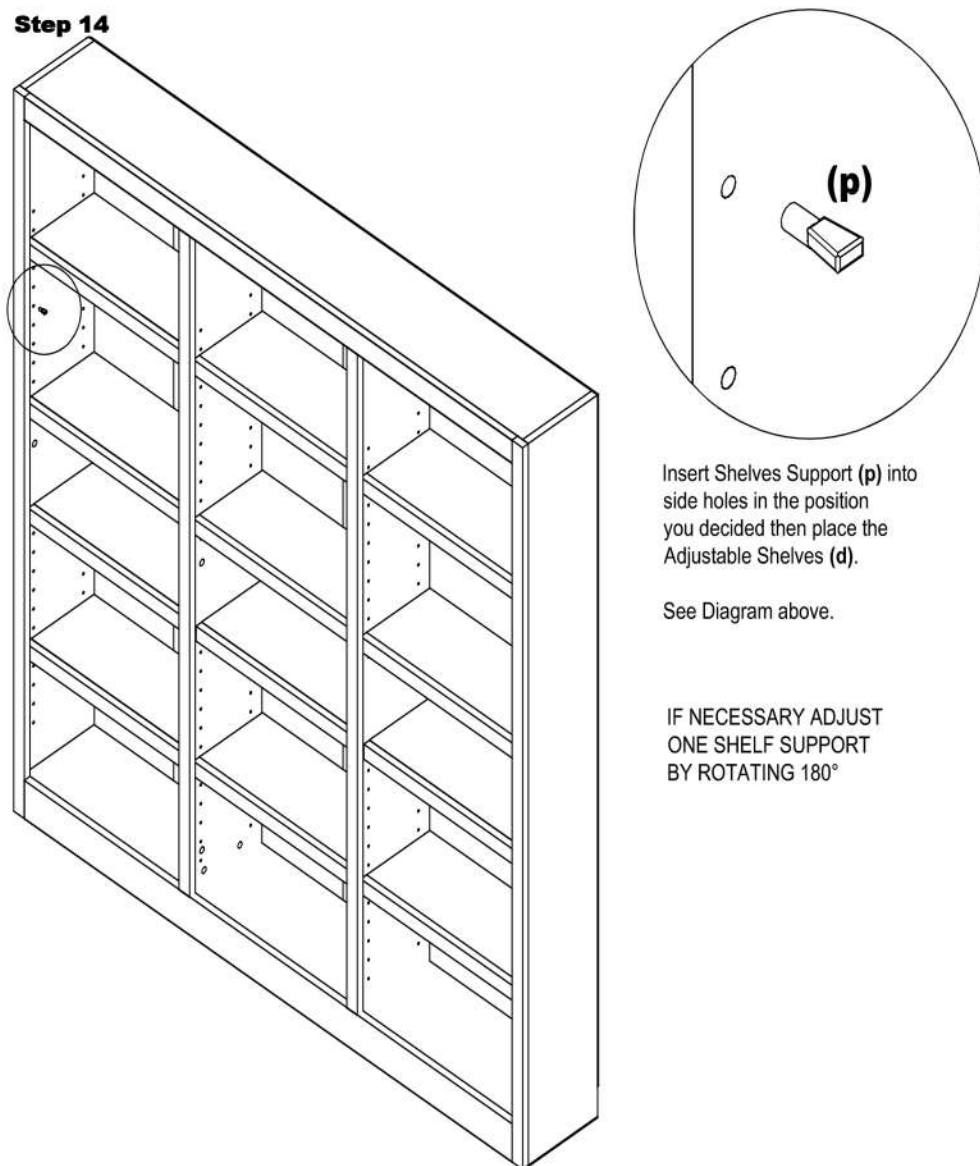

Step 15

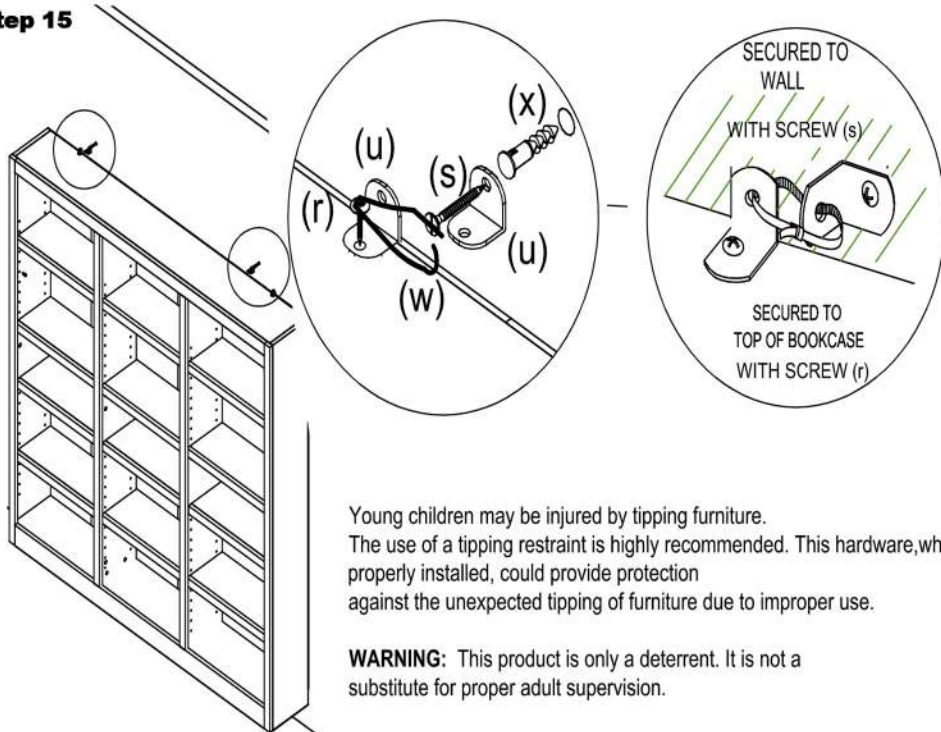

Installation Instructions:

1. Attach one of the corner braces (u) securely to the top back edge of the furniture. Use one of the SHORTER screws (r) to securely attach the corner brace (u) to the bookcase.
2. Determine where furniture is going to be placed and mark location on the wall for the corner brace (u) screw hole approximately 2" below the corner brace mounted to the edge of the furniture.
3. Drill a 3/16" hole in the wall. Press the plastic anchor (x) into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the brace (u) over the anchor and use one of the LONGER screws (s) to securely attach the brace (u) to wall.
5. Place the furniture so that the corner braces (u) on the back edge are aligned with the corner braces (u) on the wall.
6. Lace an end of the nylon restraint strap (w) down through each corner brace (u). Bring both ends together and slide the end of the strap through the slot in the other end until snug.

(Caution: The rough serrated edge must be to the inside of the loop or it will not lock into place.)

7. Check to make sure the strap is securely laced and locked to the braces.

KIT TO SECURE BOOKCASE TO THE WALL

*If you need assistance DO NOT CALL THE STORE, call us. Our Customer Service Group is here to help you.
CALL MONDAY-FRIDAY between 8 AM and 3 PM PACIFIC TIME. Toll Free Telephone: 1-800-765-9035*