


Assembly Instructions

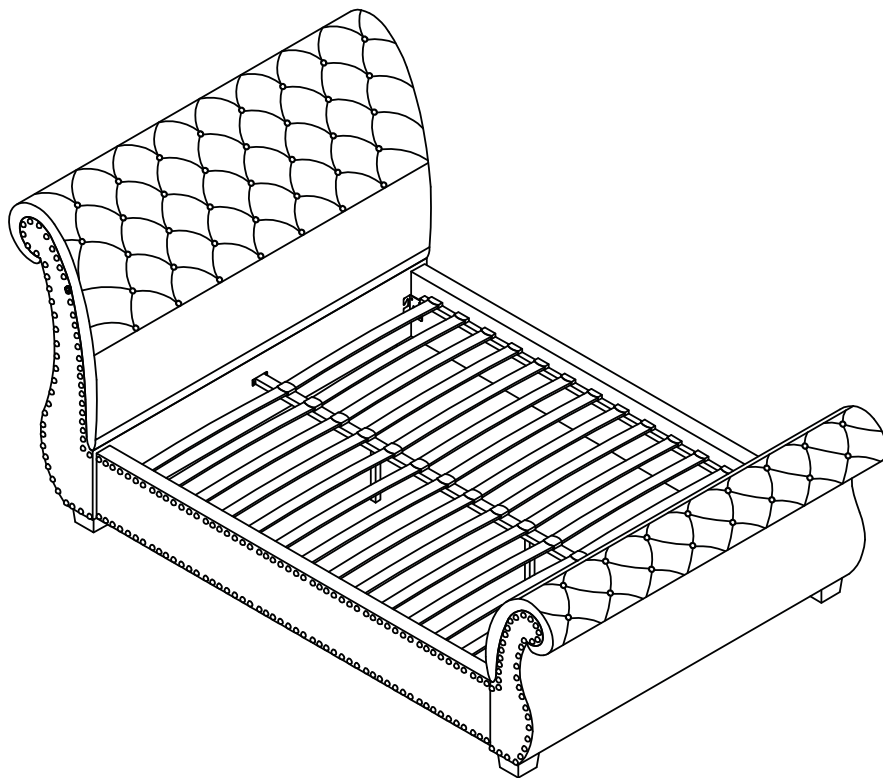

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench




(Included)

Wrench



(Included)

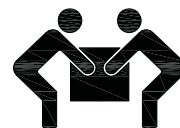


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

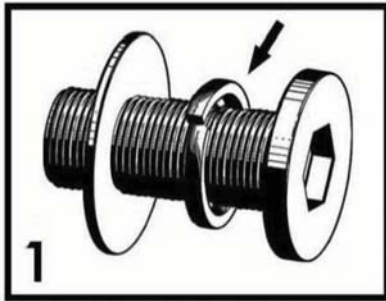


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

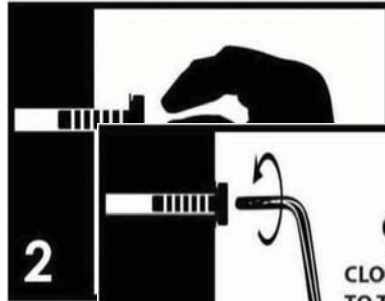

Position the screws or bolts in the holes by hand. Proper hand placement is completed or when instructed to do so.

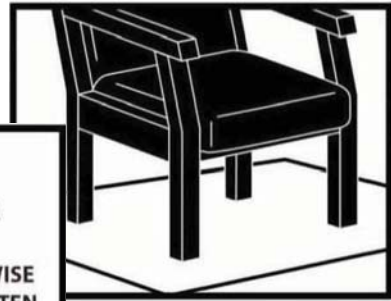


Place the furniture on a flat and level surface with each leg evenly touching the floor.

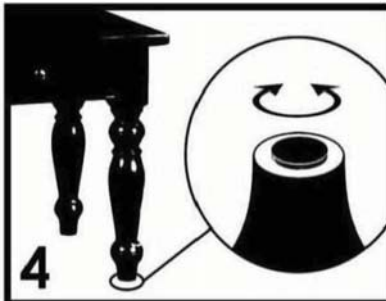

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.




Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

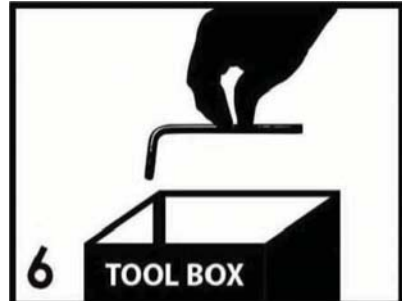

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

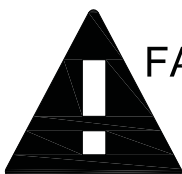

FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.





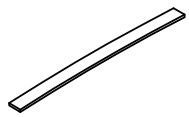


ALL RIGHTS RESERVED.









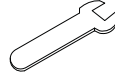


Before you begin, please read Page 2 of "Assembly and Care Advice".

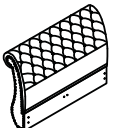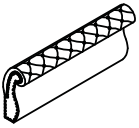And remember, do not tighten until each step is completed or instructed.

Parts List

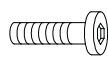	#1 x 1pc Headboard
	#2 x 1pc Footboard
	#3 x 2pcs Side Rail
	#4 x 2pcs Support Rail Leg
	#5 x 26pcs Slat
	#6 x 4pcs HB/FB Foot
	#7 x 1pc Support Rail

Hardware List

	#A x 16pcs Bolt 5/16"x1-1/2"
	#B x 4pcs Bolt 5/16"x 2-1/2"
	#C x 20pcs Lock Washer
	#D x 20pcs Flat Washer
	#E x 1pc Allen Wrench
	#F x 4pcs Nut
	#G x 1pc Wrench
	#H x 13pcs Centre Connector
	#I x 26pcs End Cap





#1

1. Prepare 4 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#B) then flat washer (#D) onto that same bolt (#B).

2. Align a foot (#6) to each hole along the bottom of the headboard (#1) and footboard (#2) then insert a bolt assembly into each and secure using the Allen wrench (#E).


#B x 4pcs
#C x 4pcs
#D x 4pcs

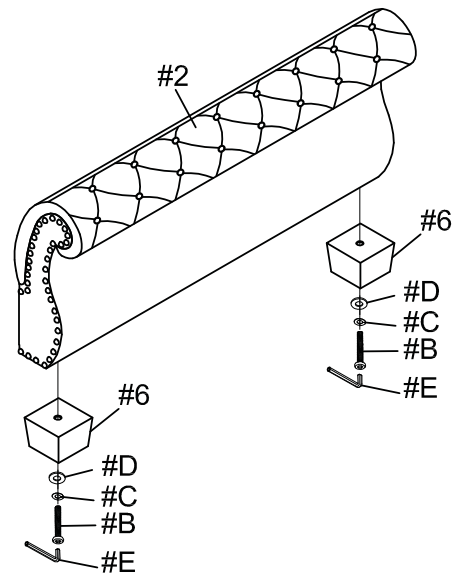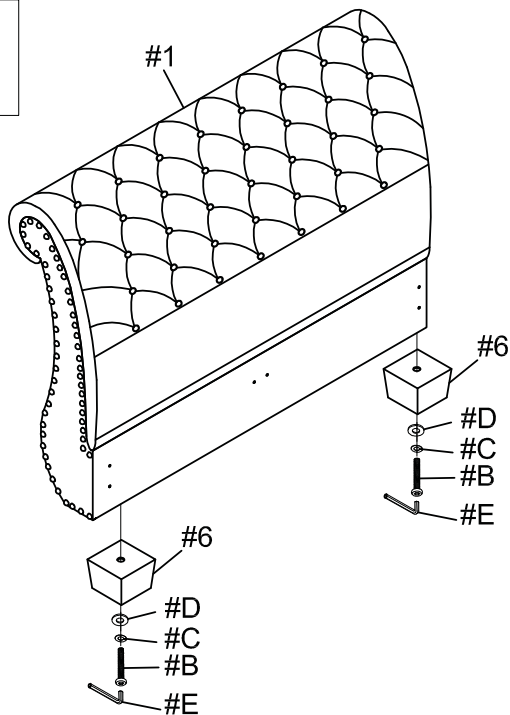

#2

1. Prepare 8 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then flat washer (#D) onto that same bolt (#A).

#A x 8pcs
#C x 8pcs
#D x 8pcs

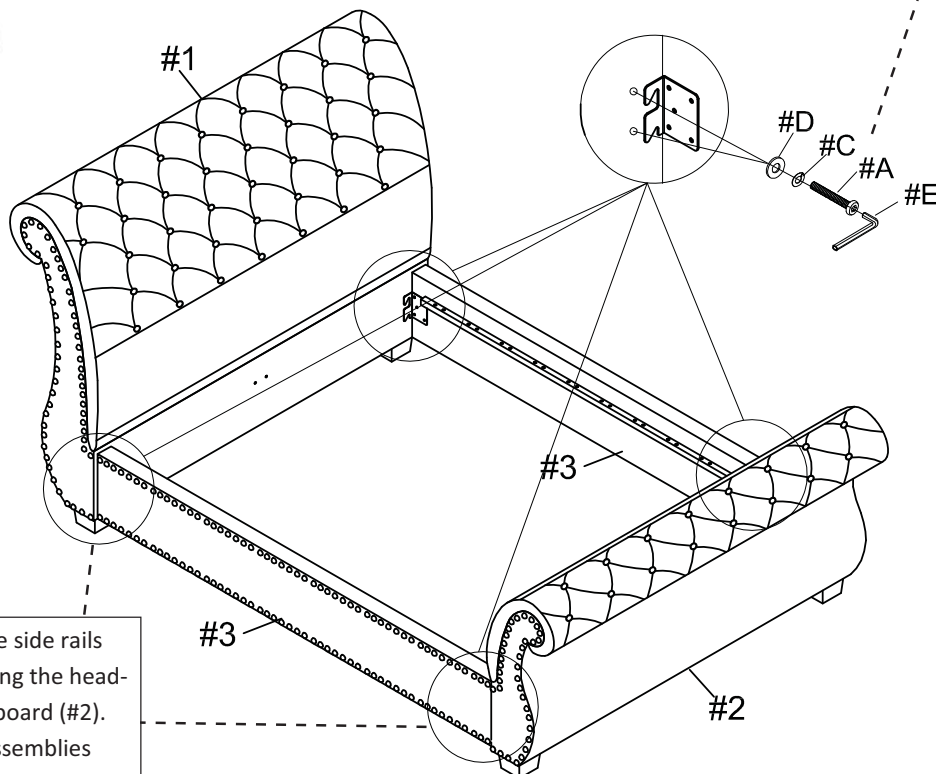


2. Align the ends of the side rails (#3) to the holes along the headboard (#1) and footboard (#2). Then insert 2 bolt assemblies into each end and secure using the Allen wrench (#E).



#A x 4pcs
#C x 4pcs
#D x 4pcs
#F x 4pcs

1. Prepare 4 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then flat washer (#D) onto that same bolt (#A).

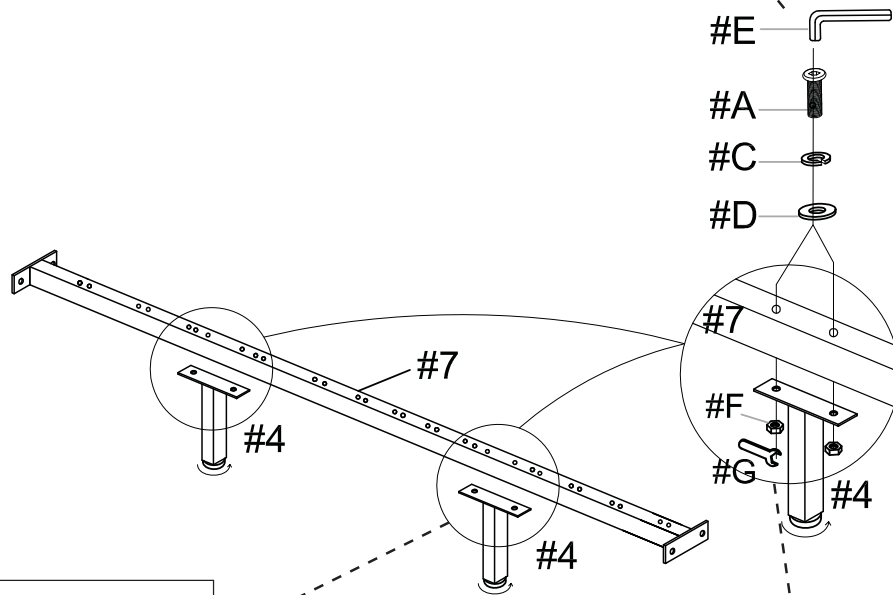


2. Align the support rail legs (#4) to the holes along the support rail (#7), then insert the bolt assemblies from about. Secure using the Allen wrench.

3. Insert a nut (#F) into each end of the bolts (#A) from below, secure using the wrench (#G).



#A x 4pcs
#C x 4pcs
#D x 4pcs

1. Prepare 4 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then flat washer (#D) onto that same bolt (#A).


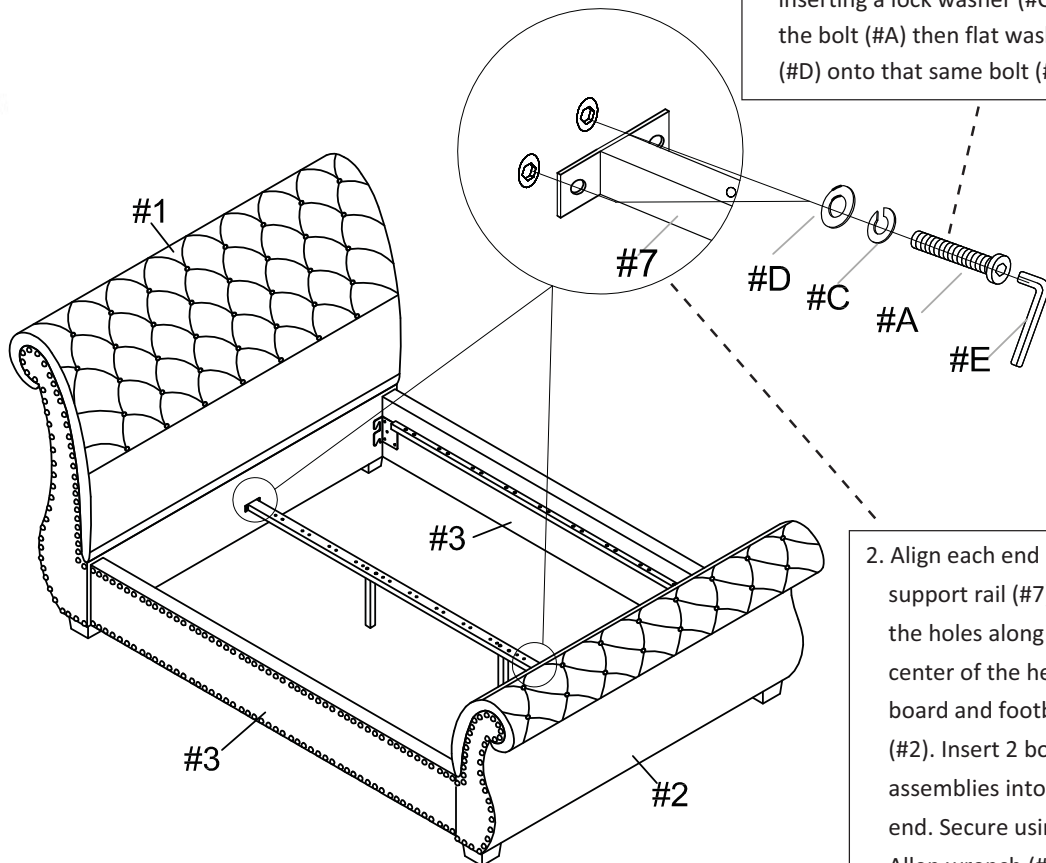


2. Align each end of the support rail (#7) to the holes along the center of the headboard and footboard (#2). Insert 2 bolt assemblies into each end. Secure using the Allen wrench (#E).



#H x 13pcs
#I x 26pcs


Prepare 13 complete slats by first applying an end cap (#I) onto a slat (#5) then a center connector (#H) another slat (#5) and lastly an end cap (#I), in that order. Refer to the image below.

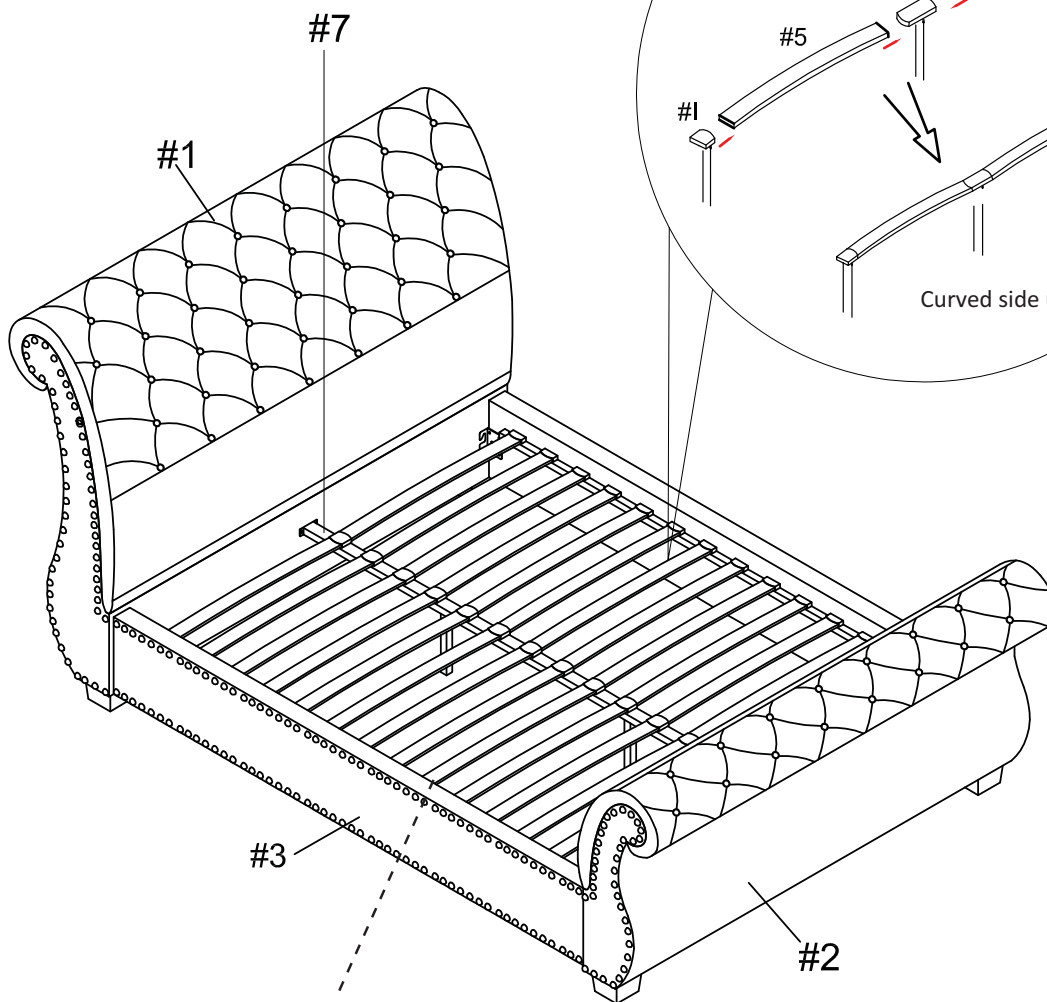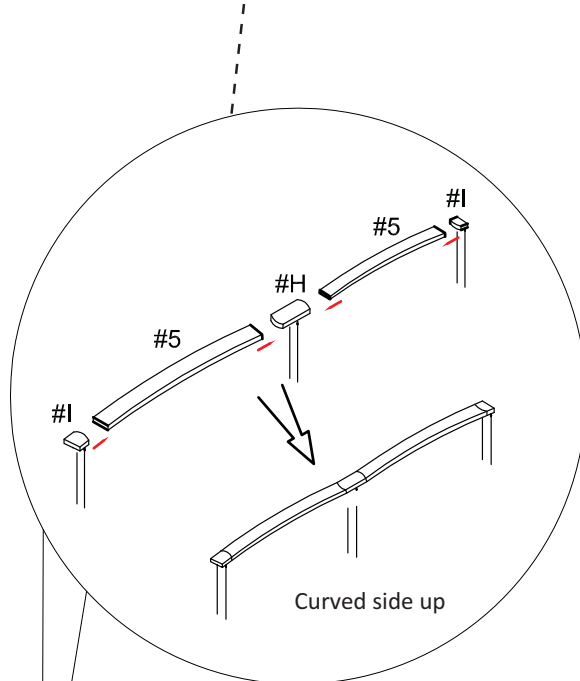

2. Carefully place the slats onto the side rails (#3).

ASSEMBLY IS COMPLETED

Assembly Instructions

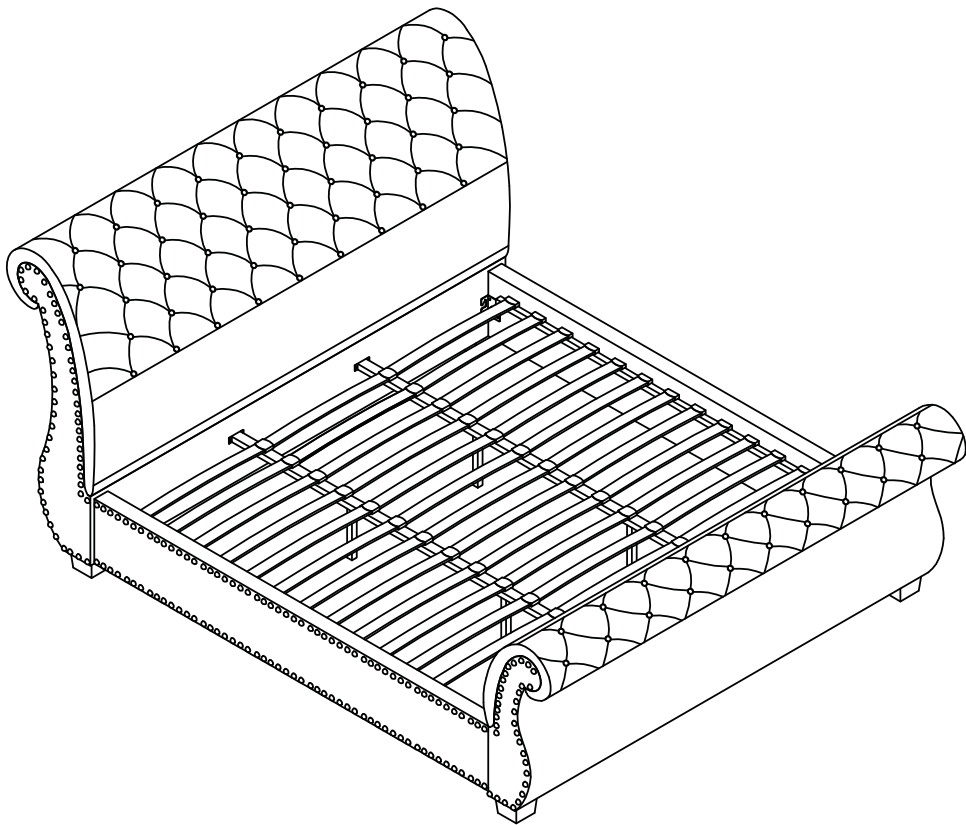


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



Wrench




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

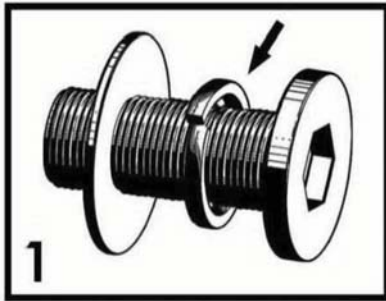


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

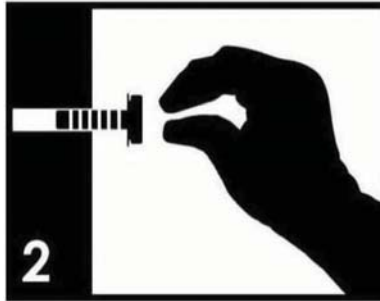


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

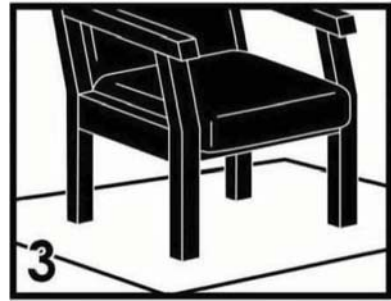


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

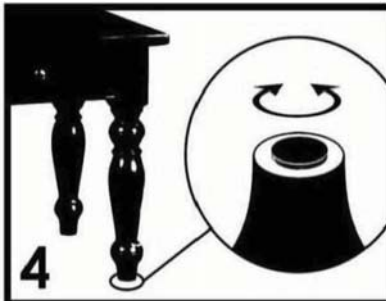

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

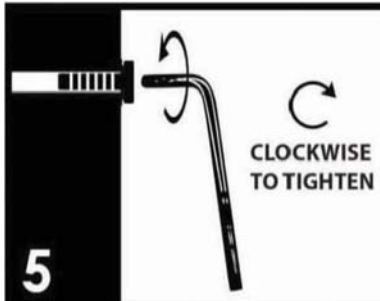


Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

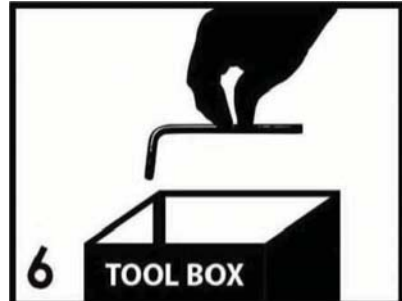

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

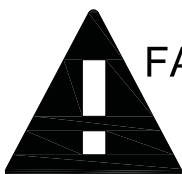

FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.





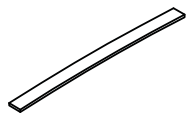


ALL RIGHTS RESERVED.









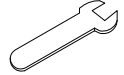


Before you begin, please read Page 2 of "Assembly and Care Advice".

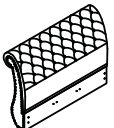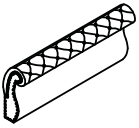And remember, do not tighten until each step is completed or instructed.

Parts List

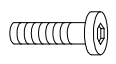	#1 x 1pc Headboard
	#2 x 1pc Footboard
	#3 x 2pcs Side Rail
	#4 x 4pcs Support Rail Leg
	#5 x 39pcs Slat
	#6 x 4pcs HB/FB Foot
	#7 x 2pcs Support Rail

Hardware List



	#A x 24pcs Bolt 5/16"x1-1/2"
	#B x 4pcs Bolt 5/16"x 2-1/2"
	#C x 28pcs Lock Washer
	#D x 28pcs Flat Washer
	#E x 1pc Allen Wrench
	#F x 8pcs Nut
	#G x 1pc Wrench
	#H x 26pcs Centre Connector
	#I x 26pcs End Cap



1. Prepare 4 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#B) then flat washer (#D) onto that same bolt (#B).


2. Align a foot (#6) to each hole along the bottom of the headboard (#1) and footboard (#2) then insert a bolt assembly into each and secure using the Allen wrench (#E).

#B x 4pcs
#C x 4pcs
#D x 4pcs

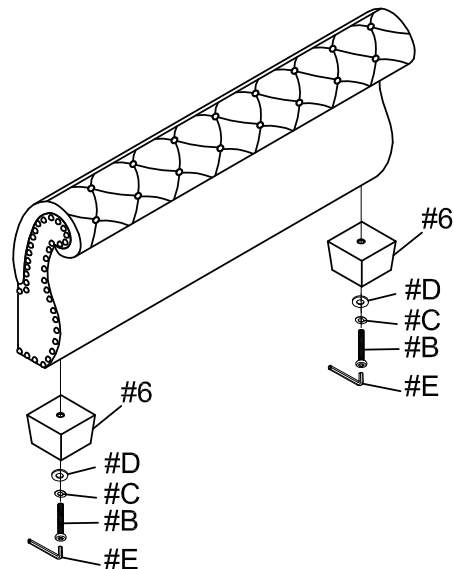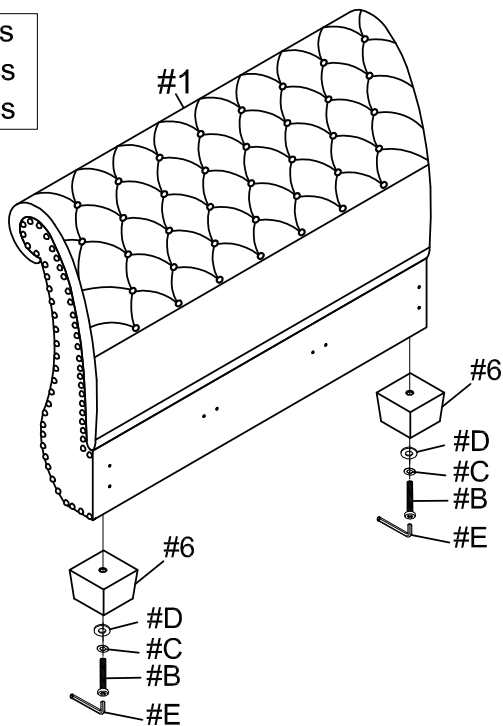

1. Prepare 8 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then flat washer (#D) onto that same bolt (#A).

#A x 8pcs
#C x 8pcs
#D x 8pcs

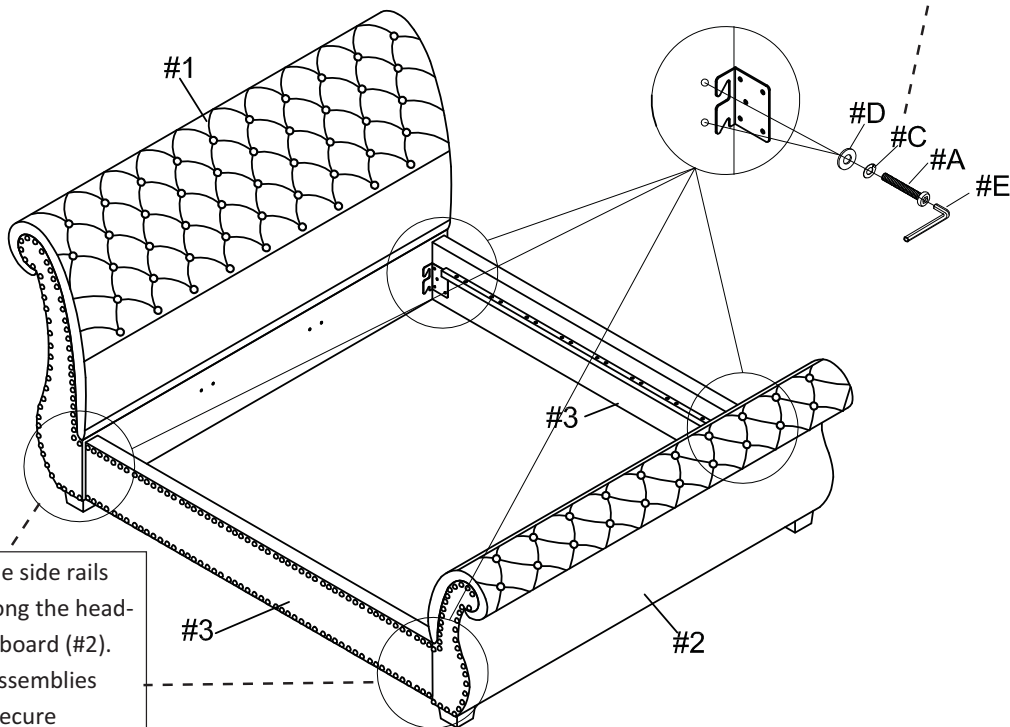


2. Align the ends of the side rails (#3) to the holes along the headboard (#1) and footboard (#2). Then insert 2 bolt assemblies into each end and secure using the Allen wrench (#E).



#A x 8pcs
#C x 8pcs
#D x 8pcs
#F x 8pcs

1. Prepare 8 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then flat washer (#D) onto that same bolt (#A).

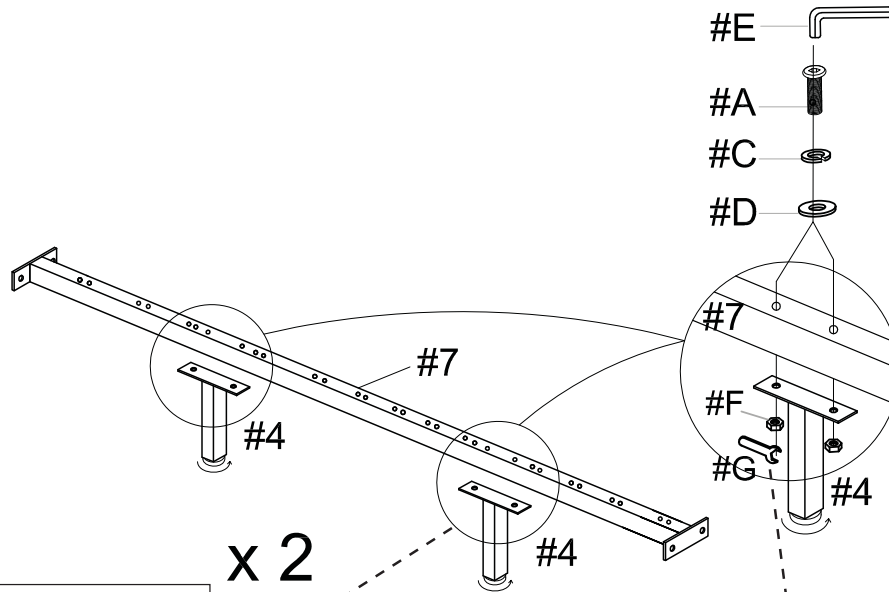


2. Align the support rail legs (#4) to the holes along the support rail (#7), then insert the bolt assemblies from about. Secure using the Allen wrench.

3. Insert a nut (#F) into each end of the bolts (#A) from below, secure using the wrench (#G).



#A x 8pcs
#C x 8pcs
#D x 8pcs

1. Prepare 8 bolt assemblies by first inserting a lock washer (#C) onto the bolt (#A) then flat washer (#D) onto that same bolt (#A).


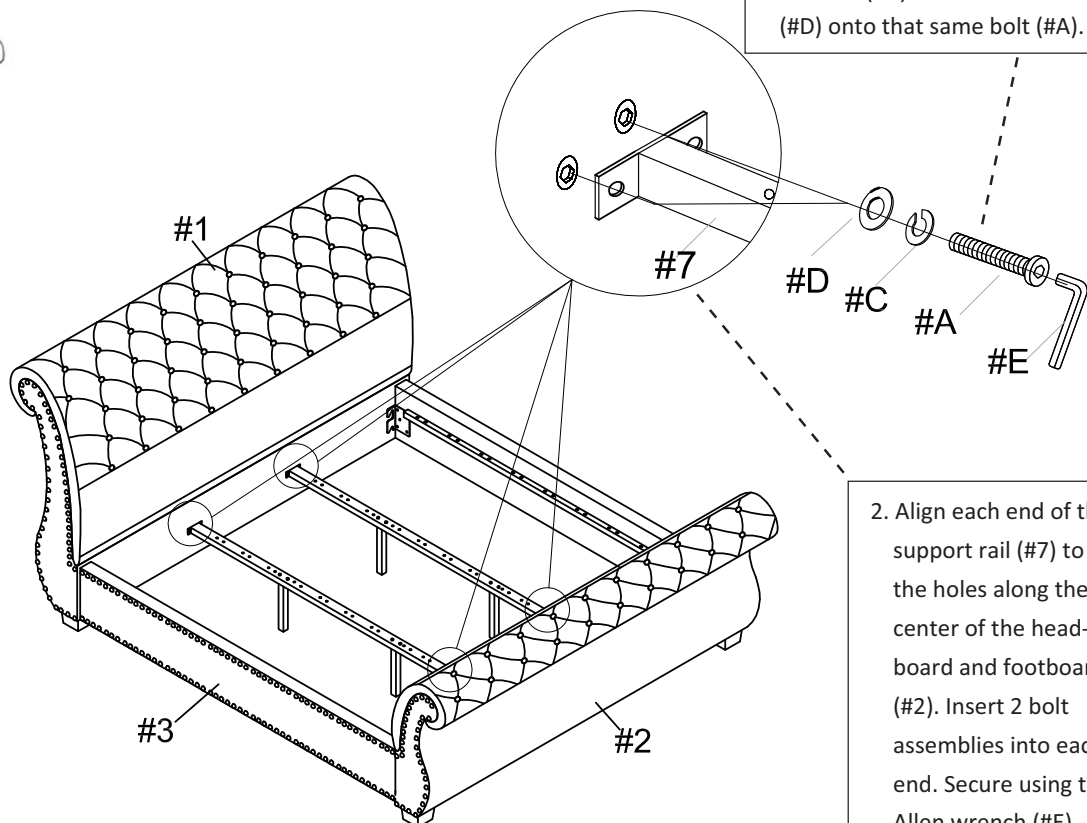


2. Align each end of the support rail (#7) to the holes along the center of the headboard and footboard (#2). Insert 2 bolt assemblies into each end. Secure using the Allen wrench (#E).



#H x 26pcs
#I x 26pcs

1. Prepare a complete slat by applying an end cap (#I) onto a slat (#5), then a center connector (#H), another slat (#5), a center connector (#H), a slat (#5), and lastly an end cap (#I). Refer to the image below.

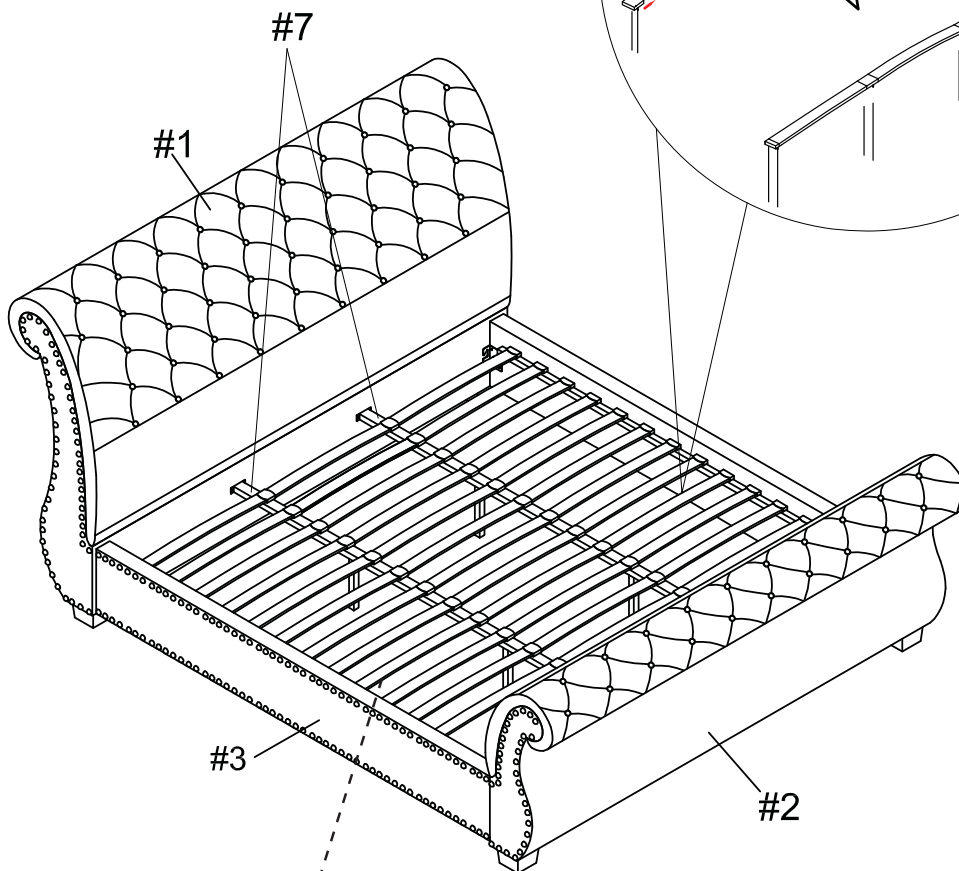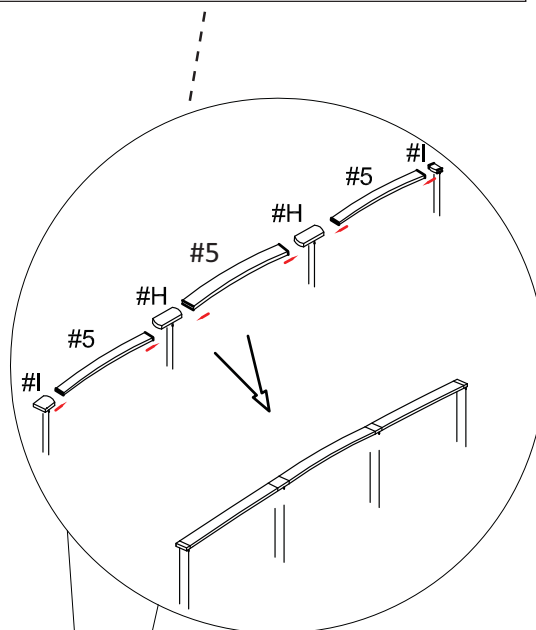

2. Place the completed slats onto the side rails (#3).

ASSEMBLY IS COMPLETED