

ASSEMBLY INSTRUCTIONS

MID-CENTURY UPHOLSTERED QUEEN BEDFRAME

ASSEMBLY
REQUIREMENTS


2-Person
Assembly

20 Minutes
Assembly Time

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware.

We appreciate your business!

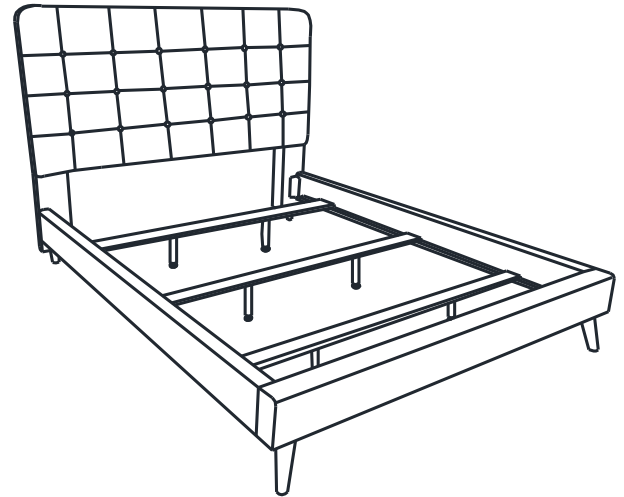

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE



















- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.


This product is for indoor and household use only - not for commercial use.

ASSEMBLY INSTRUCTIONS

MID-CENTURY UPHOLSTERED QUEEN BEDFRAME

PARTS AND HARDWARE LIST

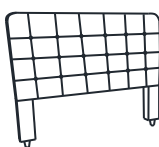A Footboard	B Side Rail	C Left Leg	D Right Leg	E Wooden Slat
				
1pc	2pcs	1pc	1pc	3pcs
F Screw	G L-Metal Plate	H Flat Washer Φ19mm x Φ6mm	I Spring Washer Φ6mm	J Flat Washer Φ20mm x Φ9mm
				
12pcs	4pcs	6pcs	6pcs	16pcs
K Lock Washer Φ9mm	L Bolt 1/4" x 30mm	M Bolt 5/16" x 30mm	N Bolt 1/4" x 50mm	O Support Leg
				
16pcs	4pcs	16pcs	6pcs	6pcs
P Allen Wrench used for 1/4	Q Allen Wrench used for 5/16	R Head board (in other carton)		
				
1pc	1pc	1pc		

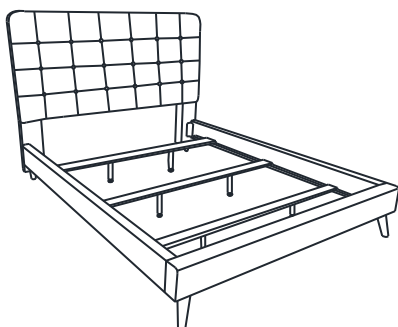

ASSEMBLY INSTRUCTIONS


MID-CENTURY UPHOLSTERED QUEEN BEDFRAME

STEP 1


Align bolt holes on leg bracket of Left Leg (C) to bolt holes at the bottom near the left edge of Footboard (A), and fasten (C) with Bolt (L). Use Allen Key (P) to tighten (L). Do not tighten (L) completely until both bolts are in place.

Use the above procedures to install Right Leg (D) on the right side of Footboard

Note: To illustrate parts assembly, the frames are shown standing vertically. It is easier to perform the procedures with the frames and panels place flat down.

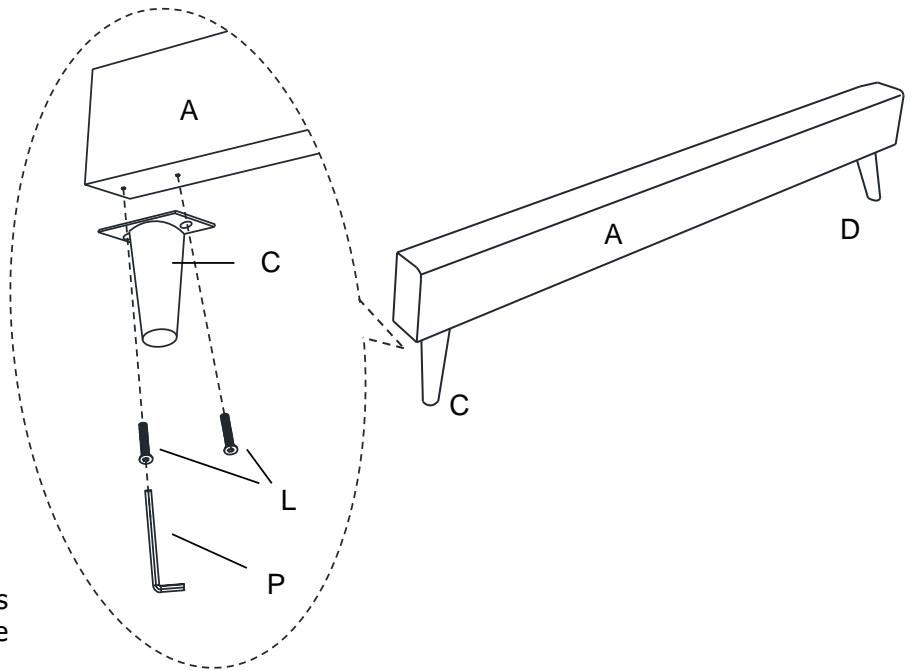

STEP 2

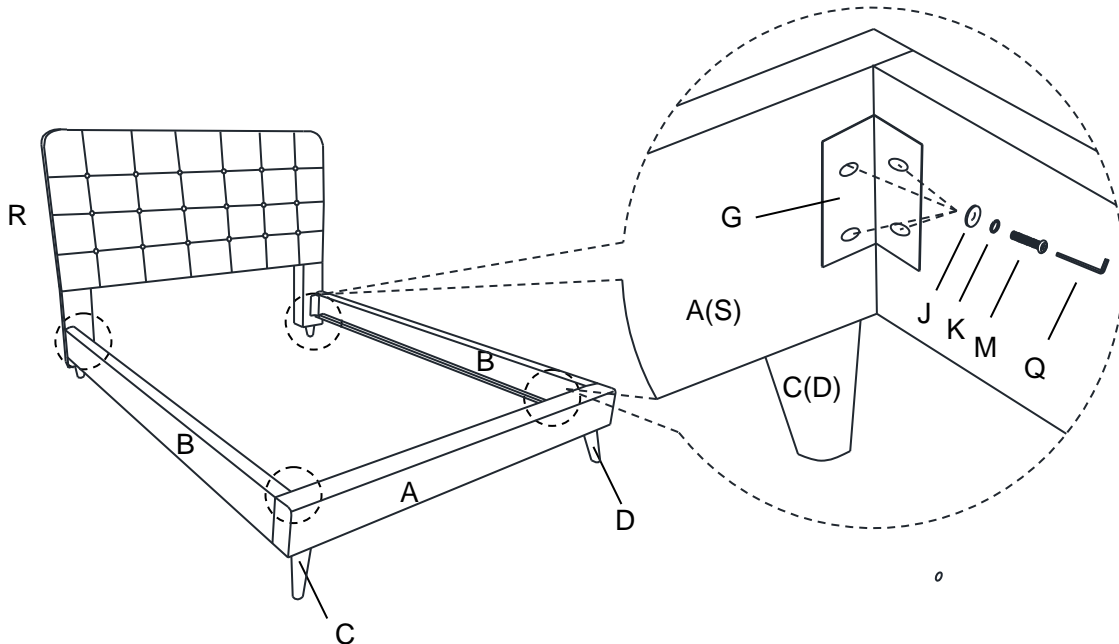


- Lay Side Rail (B) flat down with the inside-face (with bolt holes) facing up on a material that does not scratch or damage its surface.
- Align bolt holes on L-Metal Plate (G) to bolt holes on (B) on both end. Use Bolt (M) fitted with Spring Washer (K) and Flat Washer (J) to fasten (G) to (B). Use Allen Key (Q) to tighten (M). Do not tighten (M) completely until both bolts are in place. Use the same procedure to fit (G) to the second Side Rail.
- Locate the bolt holes on Footboard and Leg Post. Align the bolt holes on (G) -from Step b) - to the bolt holes on Leg Post and Footboard. Use Bolt (M) fitted with Spring Washer (K) and Flat Washer (J) to fasten (G) to Footboard and Leg Post. Do not tighten (M) completely until both bolts are in place.

ASSEMBLY INSTRUCTIONS

MID-CENTURY UPHOLSTERED QUEEN BEDFRAME

STEP 3

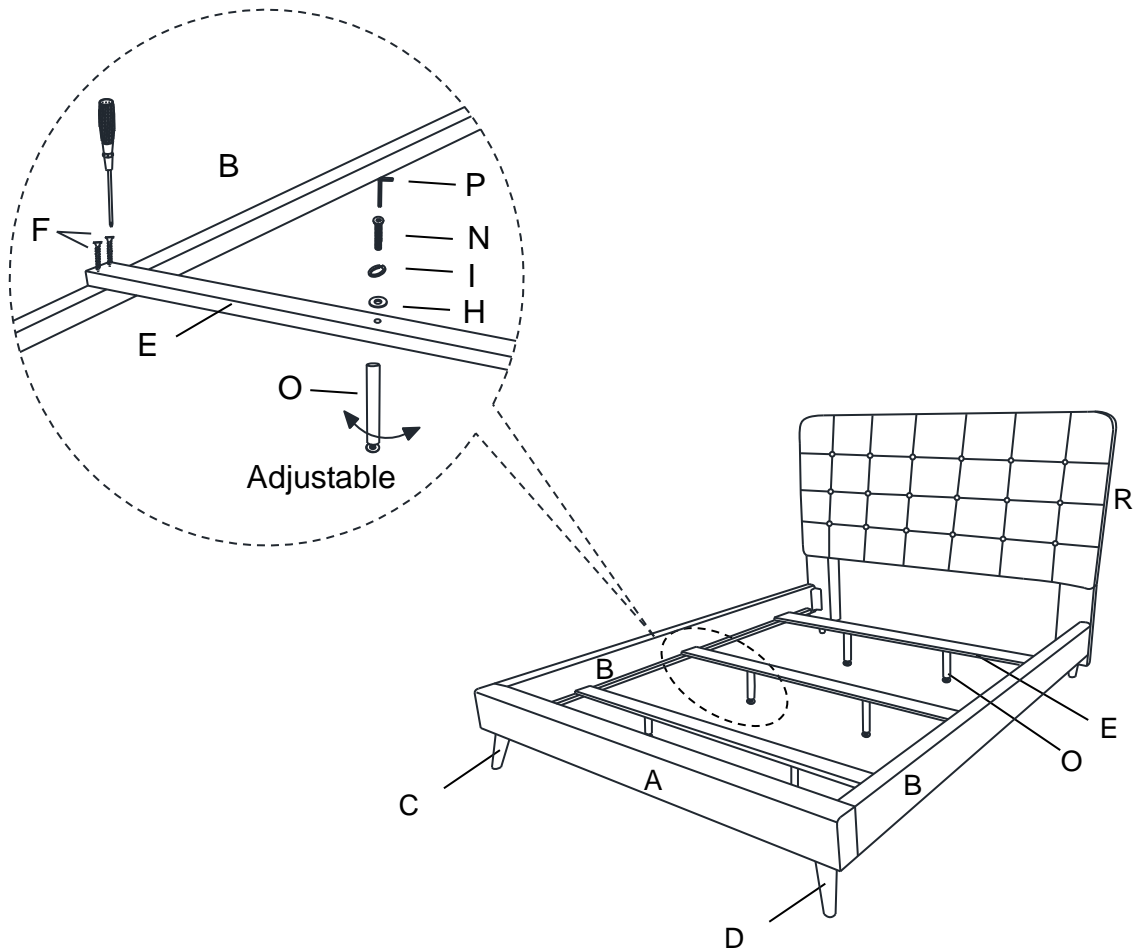


- Fasten Support Leg (O) to Wooden Slats (E) with Bolt (N) fitted with Spring Washer (I) and Flat Washer (H). Use Allen Key (P) to drive and tighten (N) completely.
- Locate pilot holes on Side Rail (B). Use Screw (F) to fasten Slat (E) to Side Rail as shown.

The assembly of the bed frame is complete.

Note:

- 1) Please be advised to have at least 2 persons to assemble this unit
- 2) Tools not included, but essential for assembling this unit:



Do not use power tool

- 3) Place a large cloth or blanket on the floor or flat surface to protect parts from scratching
- 4) Before assembling this unit, please check that all parts and hardware are present

Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware.

We appreciate your business!

ASSEMBLY INSTRUCTIONS

MID CENTURY UPHOLSTERED QUEEN HEADBOARD

ASSEMBLY
REQUIREMENTS


2-Person
Assembly

20 Minutes
Assembly Time

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware.

We appreciate your business!

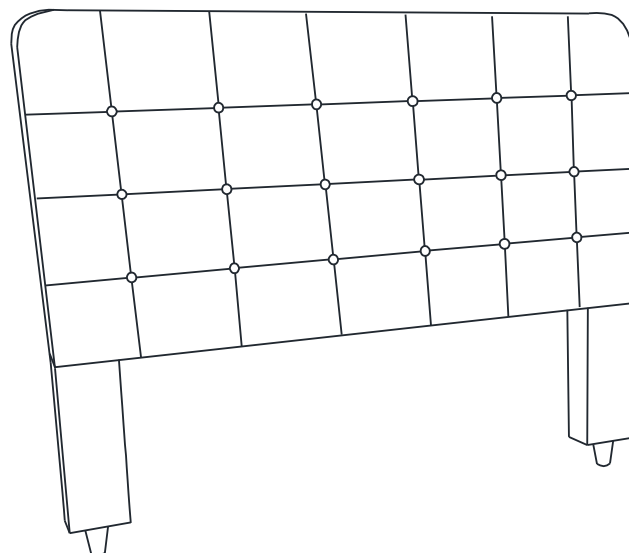

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
4. Identify all of the parts, hardware and quantities required for each step.
5. During assembly, do not over-tighten any fittings as this may cause damage.
6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
7. Always place the product on a flat surface.
8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE










- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


ASSEMBLY INSTRUCTIONS

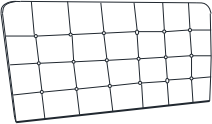MID CENTURY UPHOLSTERED QUEEN HEADBOARD

PARTS AND HARDWARE

A Headboard	B Left Wooden Post	C Right Wooden Post	D Wooden Foot	E Slat
				
1pc	1pc	1pc	2pcs	2pcs
F Bolt 1/4" x 50mm	G Flat Washer	H Spring Washer	I Allen Key	
				
10pcs	10pcs	10pcs	1pc	

STEP 1

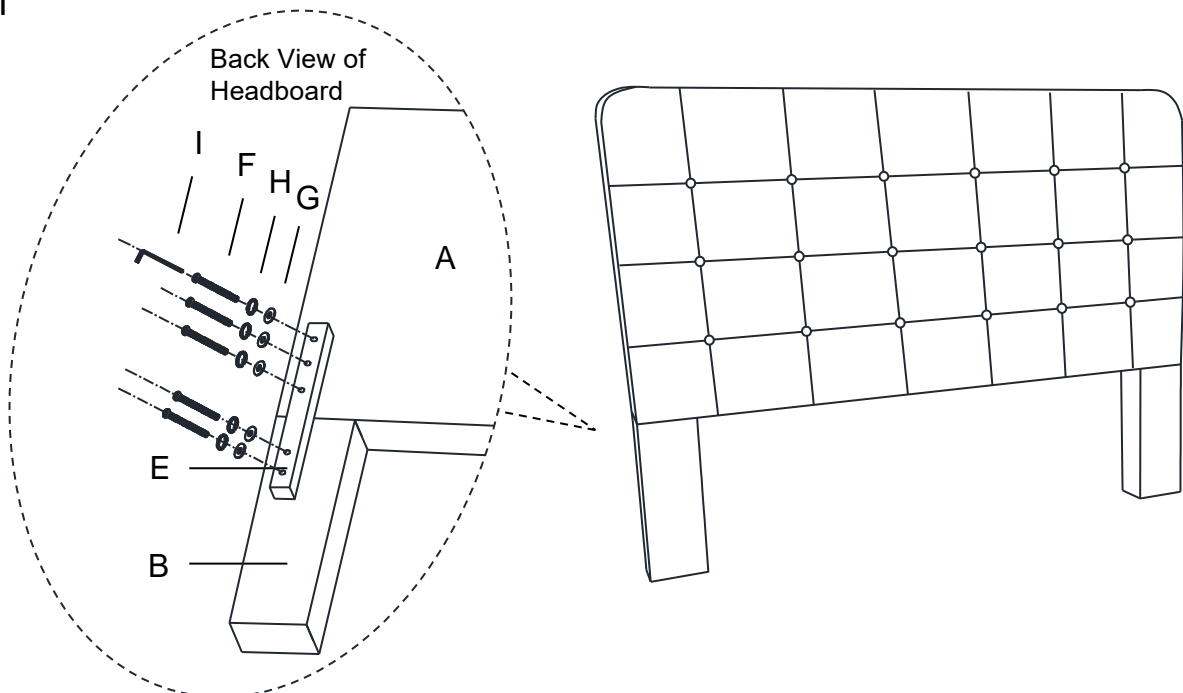


- Lay Headboard (A) with back-side facing up on a material that does not scratch its front surface.
- Place Slat (E) to align the top 3 bolt holes on (E) to the 3 holes on the bottom left corner of (A) and fasten with Bolt (F) fitted with Spring Washer (H) and Flat Washer (G). Use Allen Key (I) to drive (F). Do not tighten (F) until all 3 bolts are in place.
- Place Left Wooden Leg Post (B) below left bottom corner of A. Align the 2 bolt holes on (B) to bolt holes on Slat (J) and fasten with Bolt (F) fitted with Spring Washer (H) and Flat Washer (G). Use Allen Key (I) to drive (F). Do not tighten (F) until all 3 bolts are in place.
- Use the above steps b) & c) to install Right Wooden Leg Post (C) to right bottom corner of (A).

ASSEMBLY INSTRUCTIONS

MID CENTURY UPHOLSTERED QUEEN HEADBOARD

STEP 1

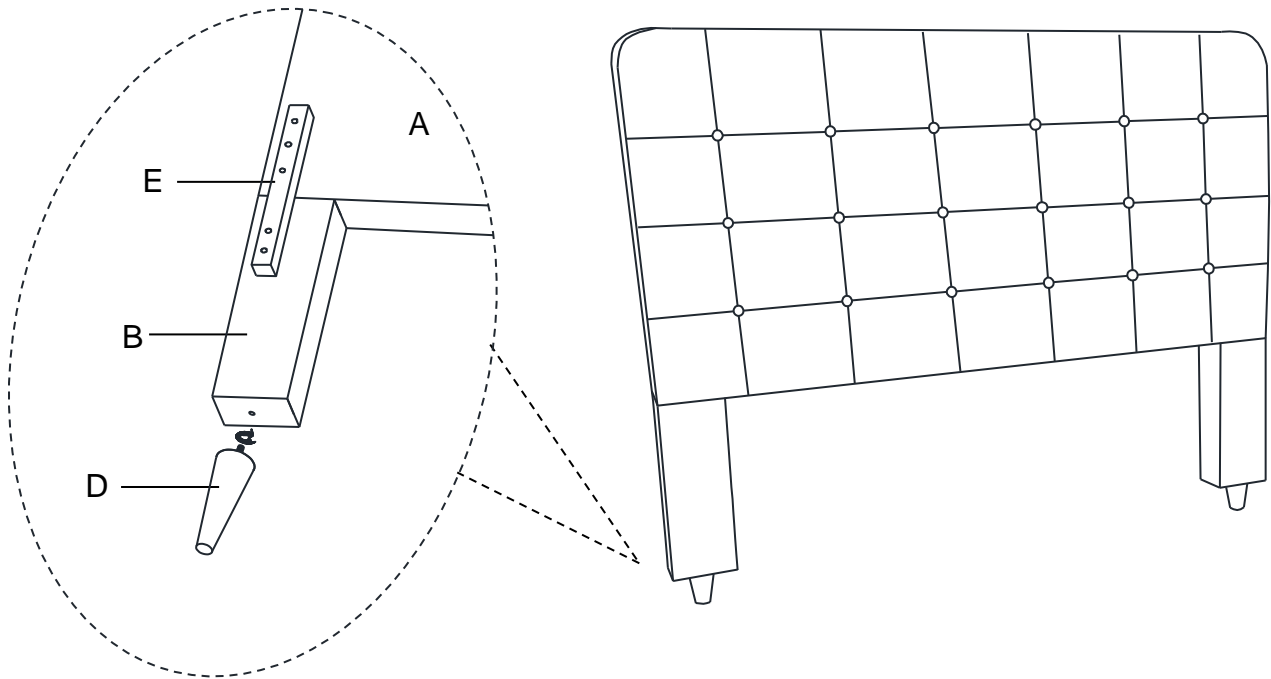


- Fit Wooden Foot (D) to Left Wooden Leg Post (B) by screwing the bolt on the edge of (D) into the bolt hole on the bottom of (B). Tighten (D) completely.
- Use the same procedure to fit (D) to Right Wooden Leg Post.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

Note:

- 1) Please be advised to have at least 2 persons to assemble this unit
- 2) Tools not included, but essential for assembling this unit:



Do not use power tool

- 3) Place a large cloth or blanket on the floor or flat surface to protect parts from scratching
- 4) Before assembling this unit, please check that all parts and hardware are present

Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware.

We appreciate your business!

