













Hardware List


A 	B 	C 	D 
Bolt (8pcs)	Allen wrench (1pc)	Anchor (1pc)	Eyelet screw (1pc)
E 	F 	G 	H 
Washer (8pcs)	Cable tie (1pc)	Short screw (2pcs)	Screw (2pcs)
I 	J 	K 	L
Knob (2pcs)	Polishing cloth(1pc)	Plastic bracket (1pc)	

Panel List

①Top Panel (1pc)

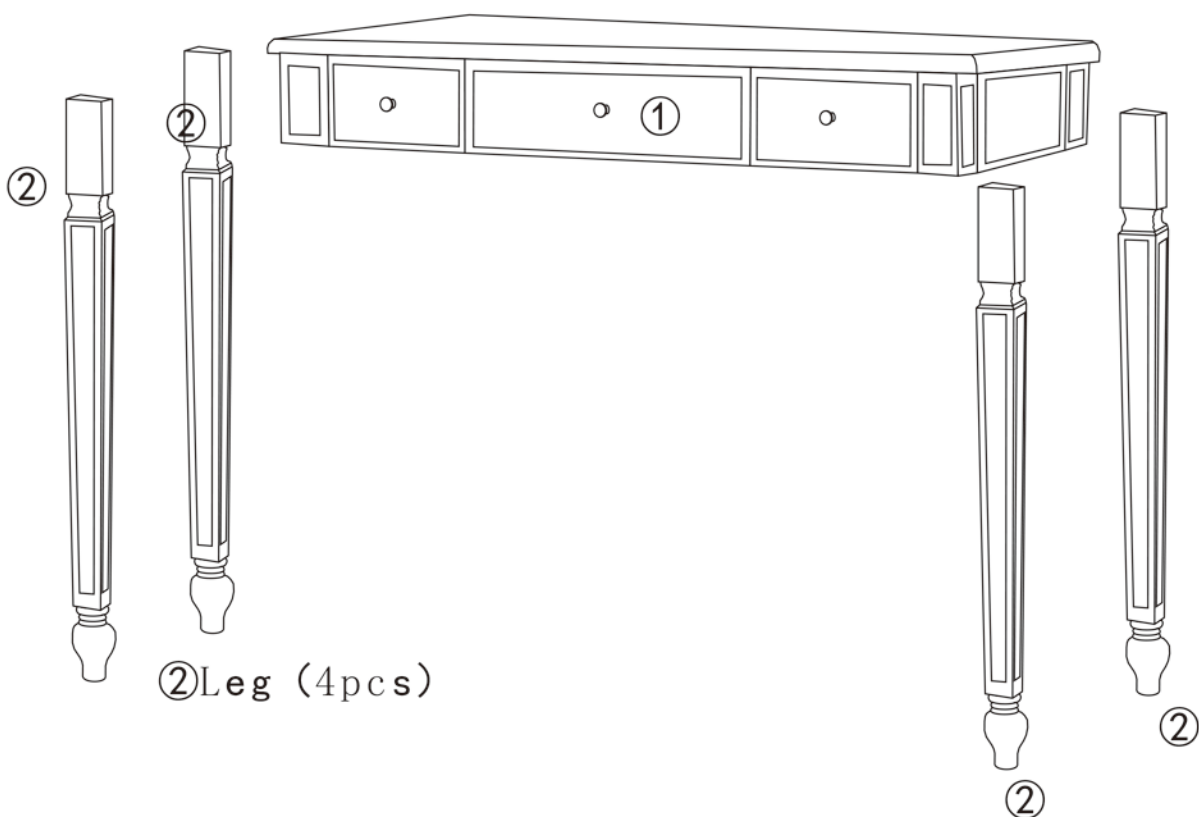

Step 1

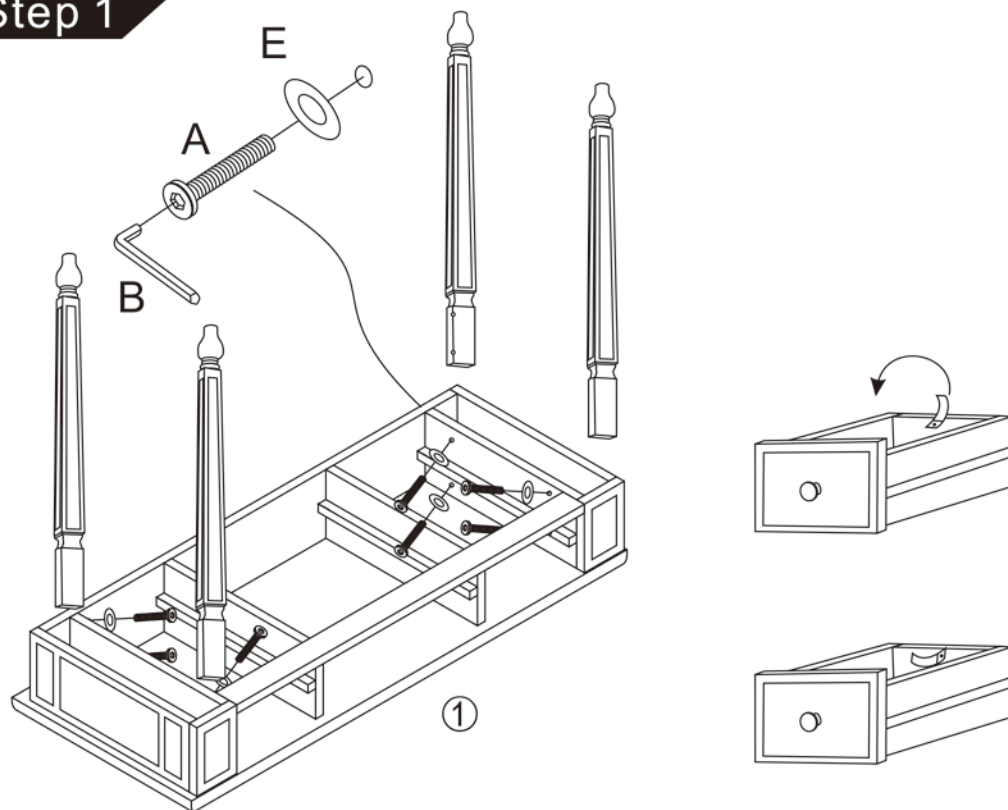

1.Remove drawers from top panel ①,Make sure to move drawer stop so that drawer can be removed.

2.Connect legs ②to top panel①as show using bolts(A),washers (E)and allen wrench(B)

A



Bolt (8pcs)

B




Allen wrench (1pc)

E



Washer (8pcs)

Step 2

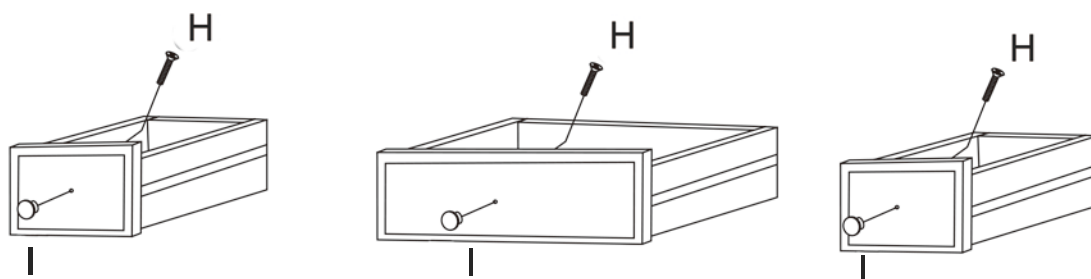

1.Remove knob(I)from inside of drawer to outside o drawer using a hand held screwdriver screw(H)goes on inside of drawer.

H




Screw (3pcs)

I




Knob (3pcs)

Step 3

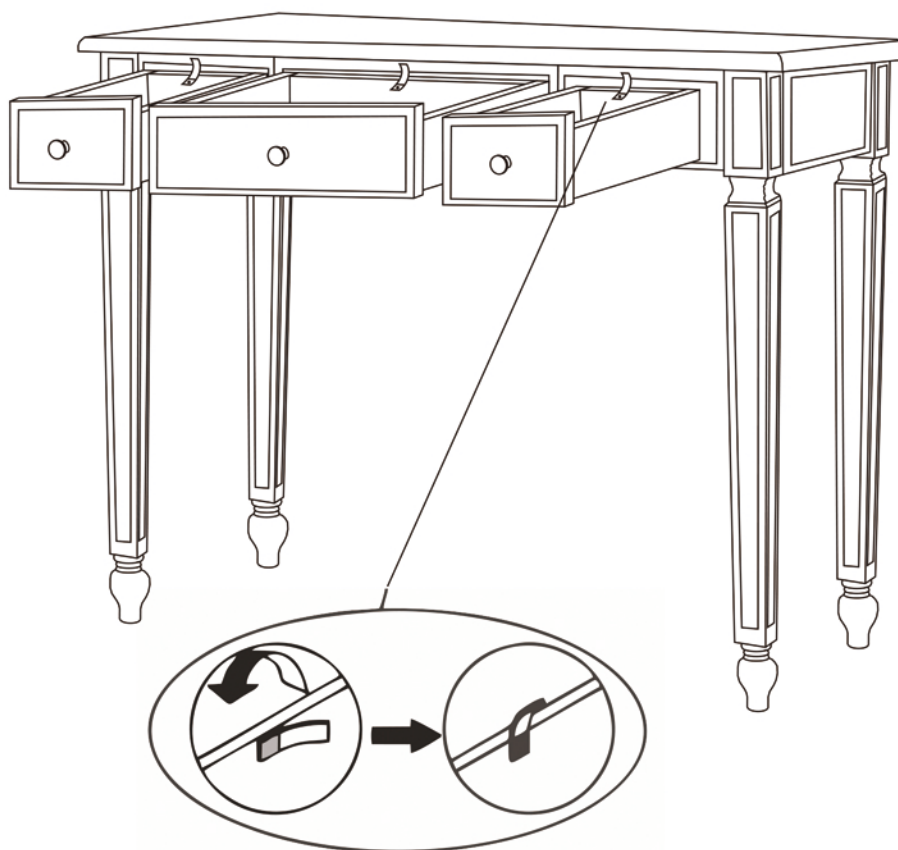

Step 4

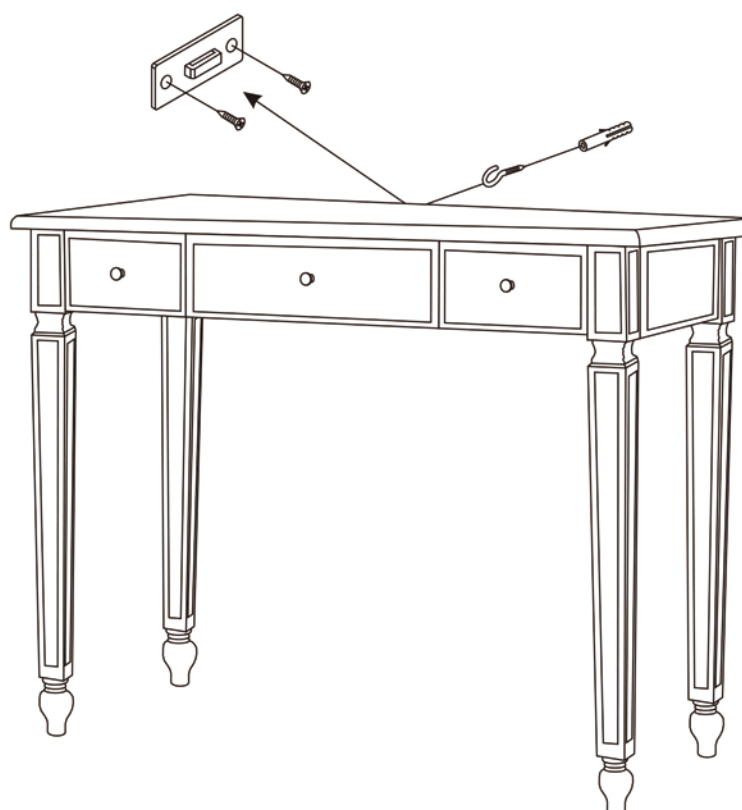

D



Eyelet screw (1pc)

C




Anchor (1pc)

G



Screw (2pcs)

K



Plastic bracket (1pc)

F



Cable tie (1pc)

1. Connect plastic bracket(K)to unit as show using short screws(G)
- 2.Insert cable tie(F)into plastic bracket(K)
- 3.Drill hole slightly smaller than anchor(C)into drywall and gently tap anchor into hole
- 4.Insert eyelet screw(D)into anchor and fasten unit to wall using cable tie(F)