
## ASSEMBLY INSTRUCTIONS MODEL: WF319351/ WF319352 **QUEEN BED**

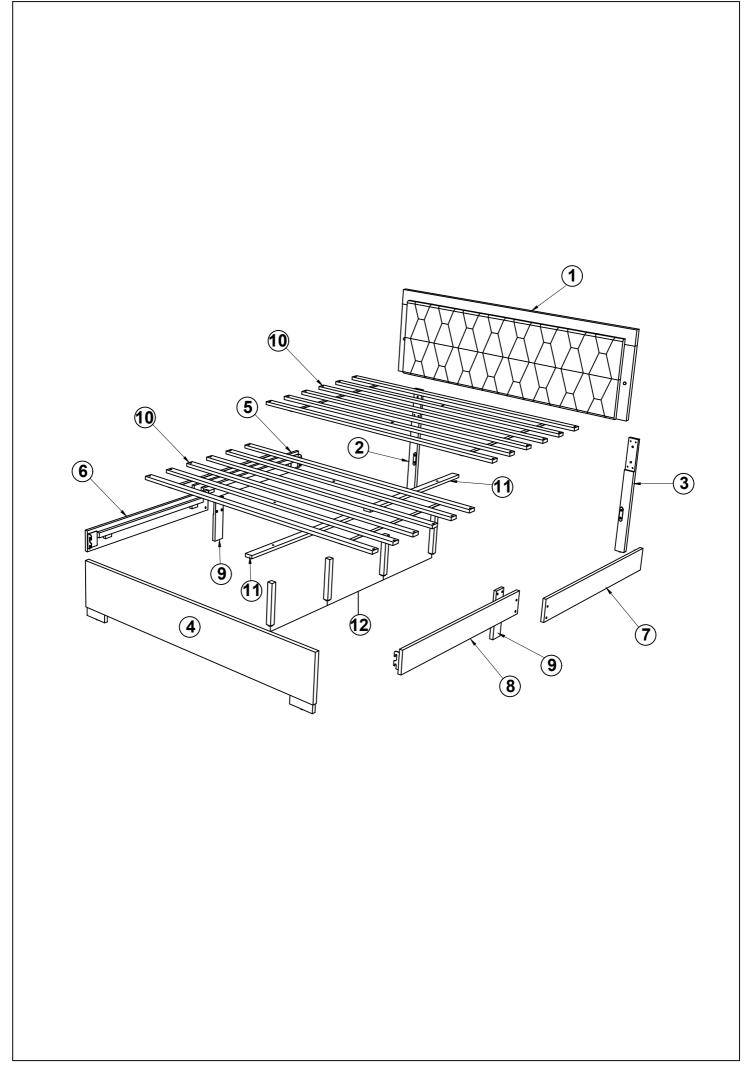

NO	PART LIST (WF319351)		QTY
1	Headboard Frame		1
2	Headboard Leg L		1
3	Headboard Leg R	Ø <u>**</u>	1
4	Footboard Panel		1
NO	PART LIST (WF319352)		QTY
5	Side Rail A Left		1
6	Side Rail B Left		1
7	Side Rail A Right		1
8	Side Rail B Right		1
9	Side Rail Leg		2
10	Bed Roll-Out Slats (6pcs)		2 Sets
11	Bed Center Slats		2
12	Bed Slats Support		4


NO	HARDWARE LIST (WF319351)	
А	JCBC Bolt M6 x 35mm Rbw	12+(1)
В	JCBC Bolt M6 x 80mm Rbw	4
С	Spring Washer 1/4" Rbw	12+(1)
D	Flat Washer 1/4" D x 13mm OD Rbw	12+(1)
E	Flat Head CB Screw M4 x 32mm Rbw	32+(3)
F	Barrel Nut M6 x 15mm Zn	4
G	Allen Key M4 x 65mm Blk(for Hb Leg)	1
Н	Allen Key M5 x 65mm Blk(for Side Rails)	1
1	Adapter	1

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture part on a clean and a flat surface, such as carpet or rug, to prevent from being scratched.


## CAUTION:


- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part of reach of children.




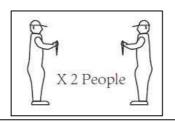




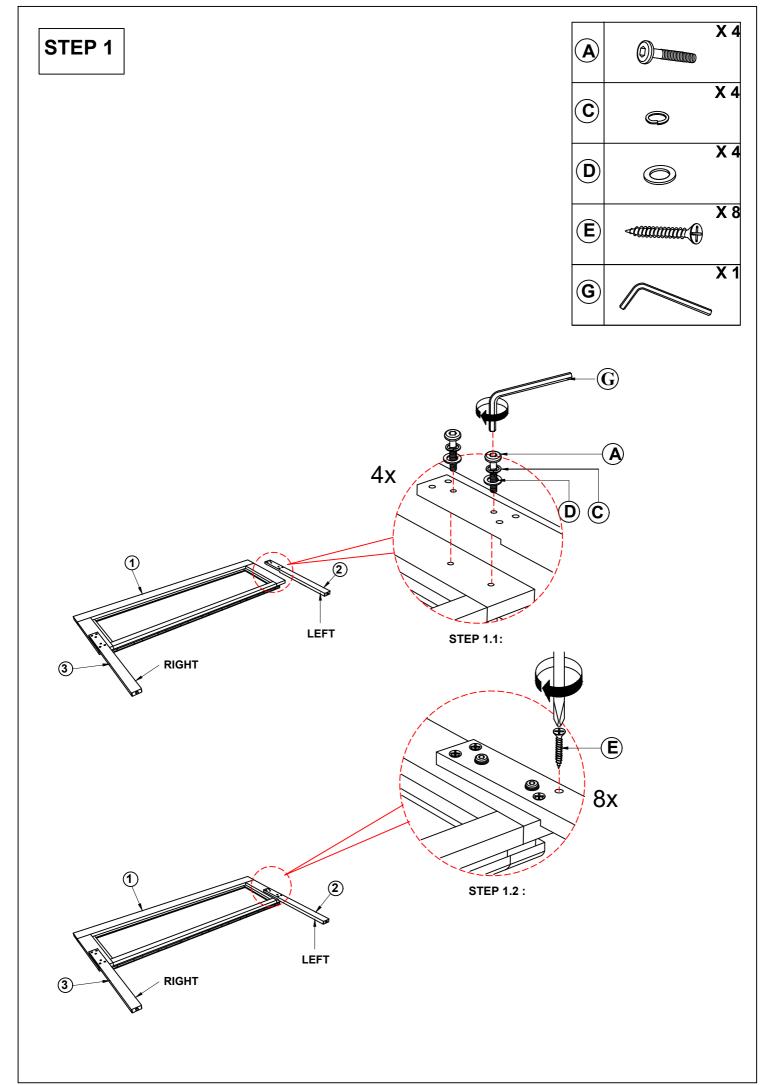


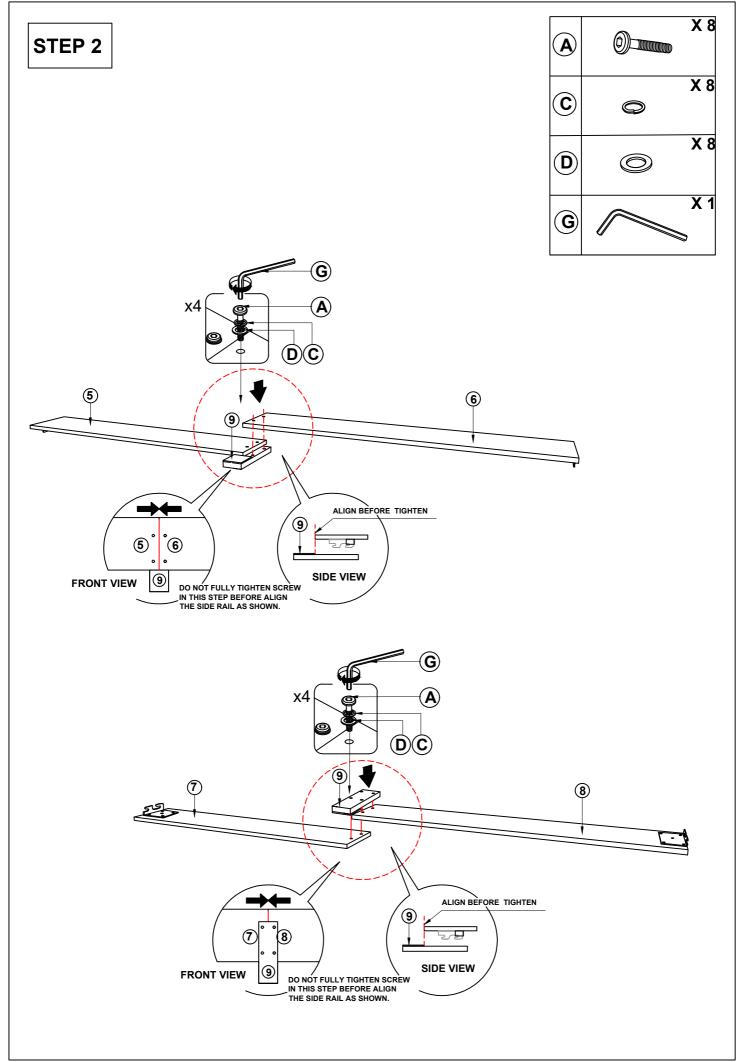

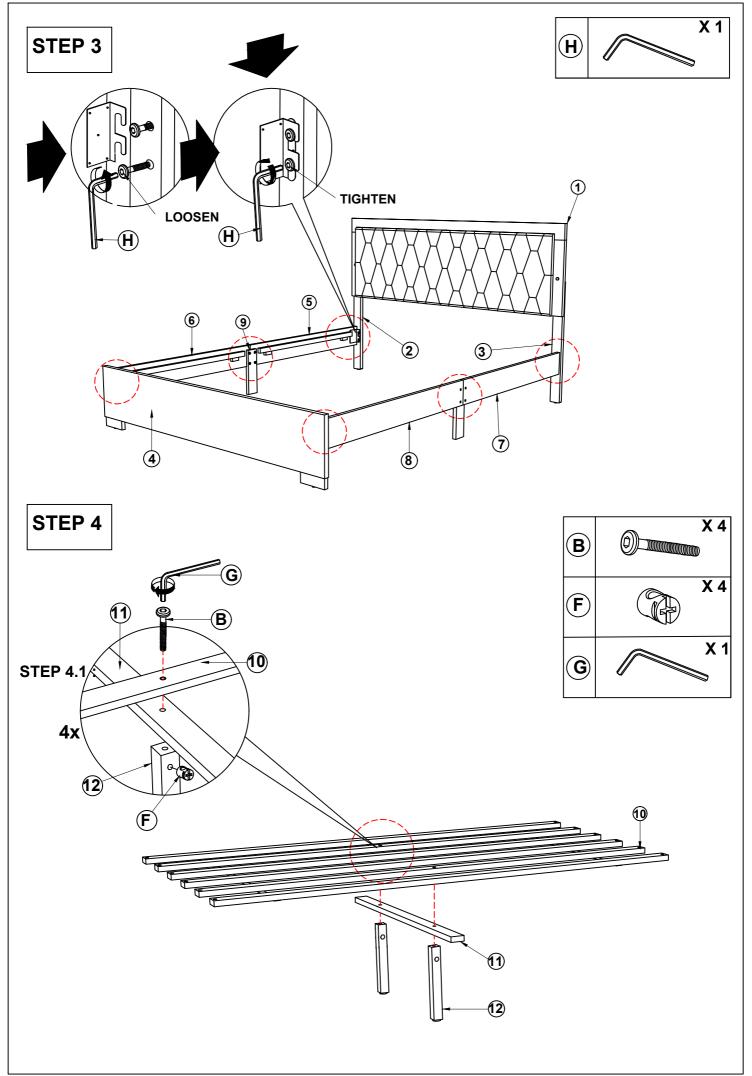

## STEP 5

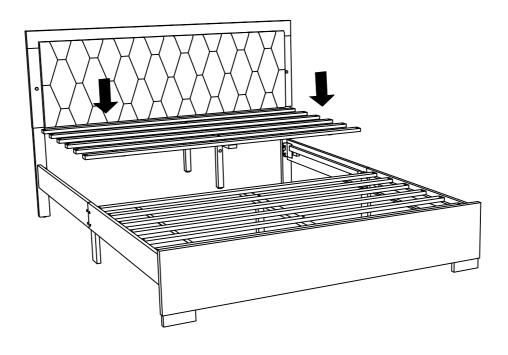

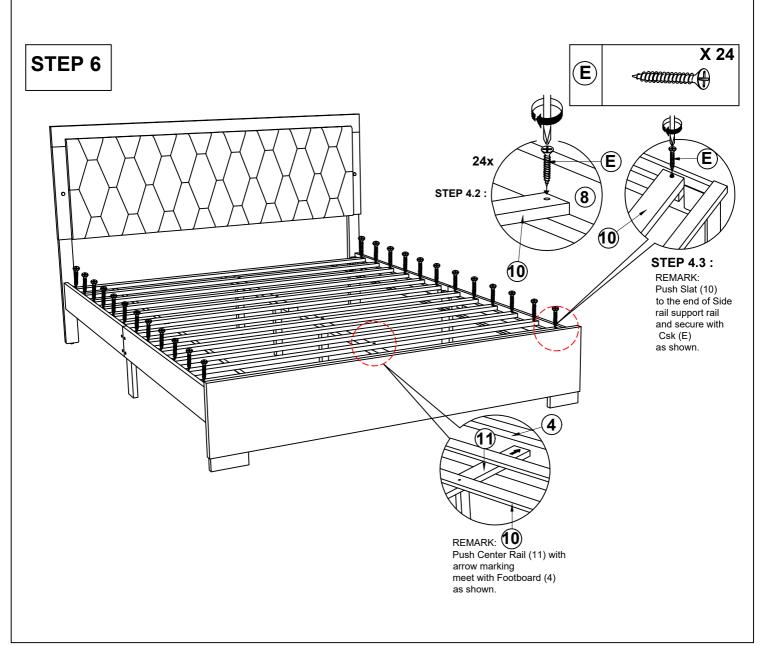

COMPLETE ASSEMBLY

X 1