




A (Left)*1 B (Right)*1

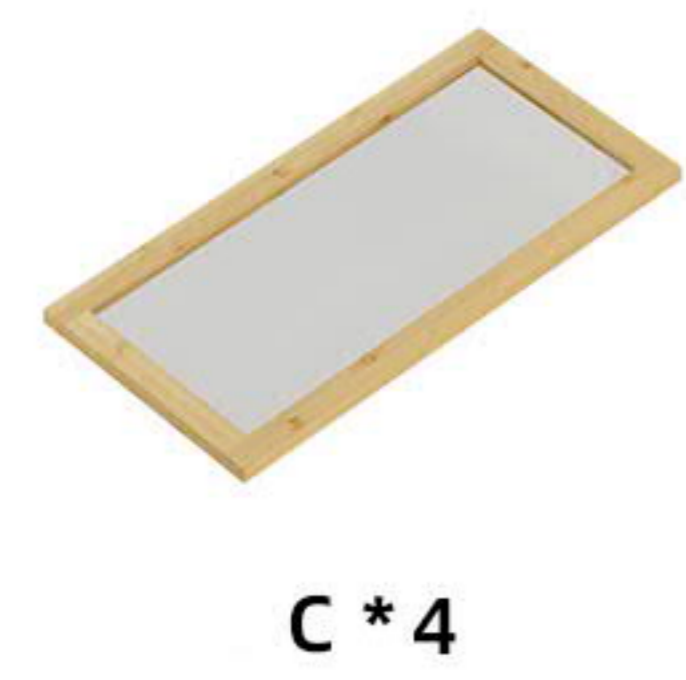

C *4



D *1



E *4




F *4






① *20




② *16

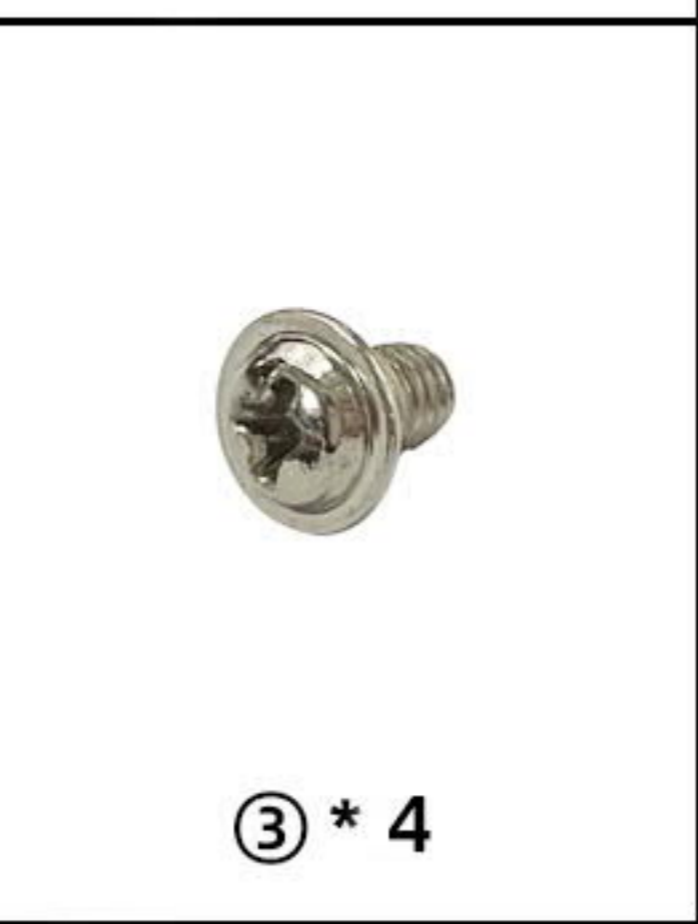

③ *4

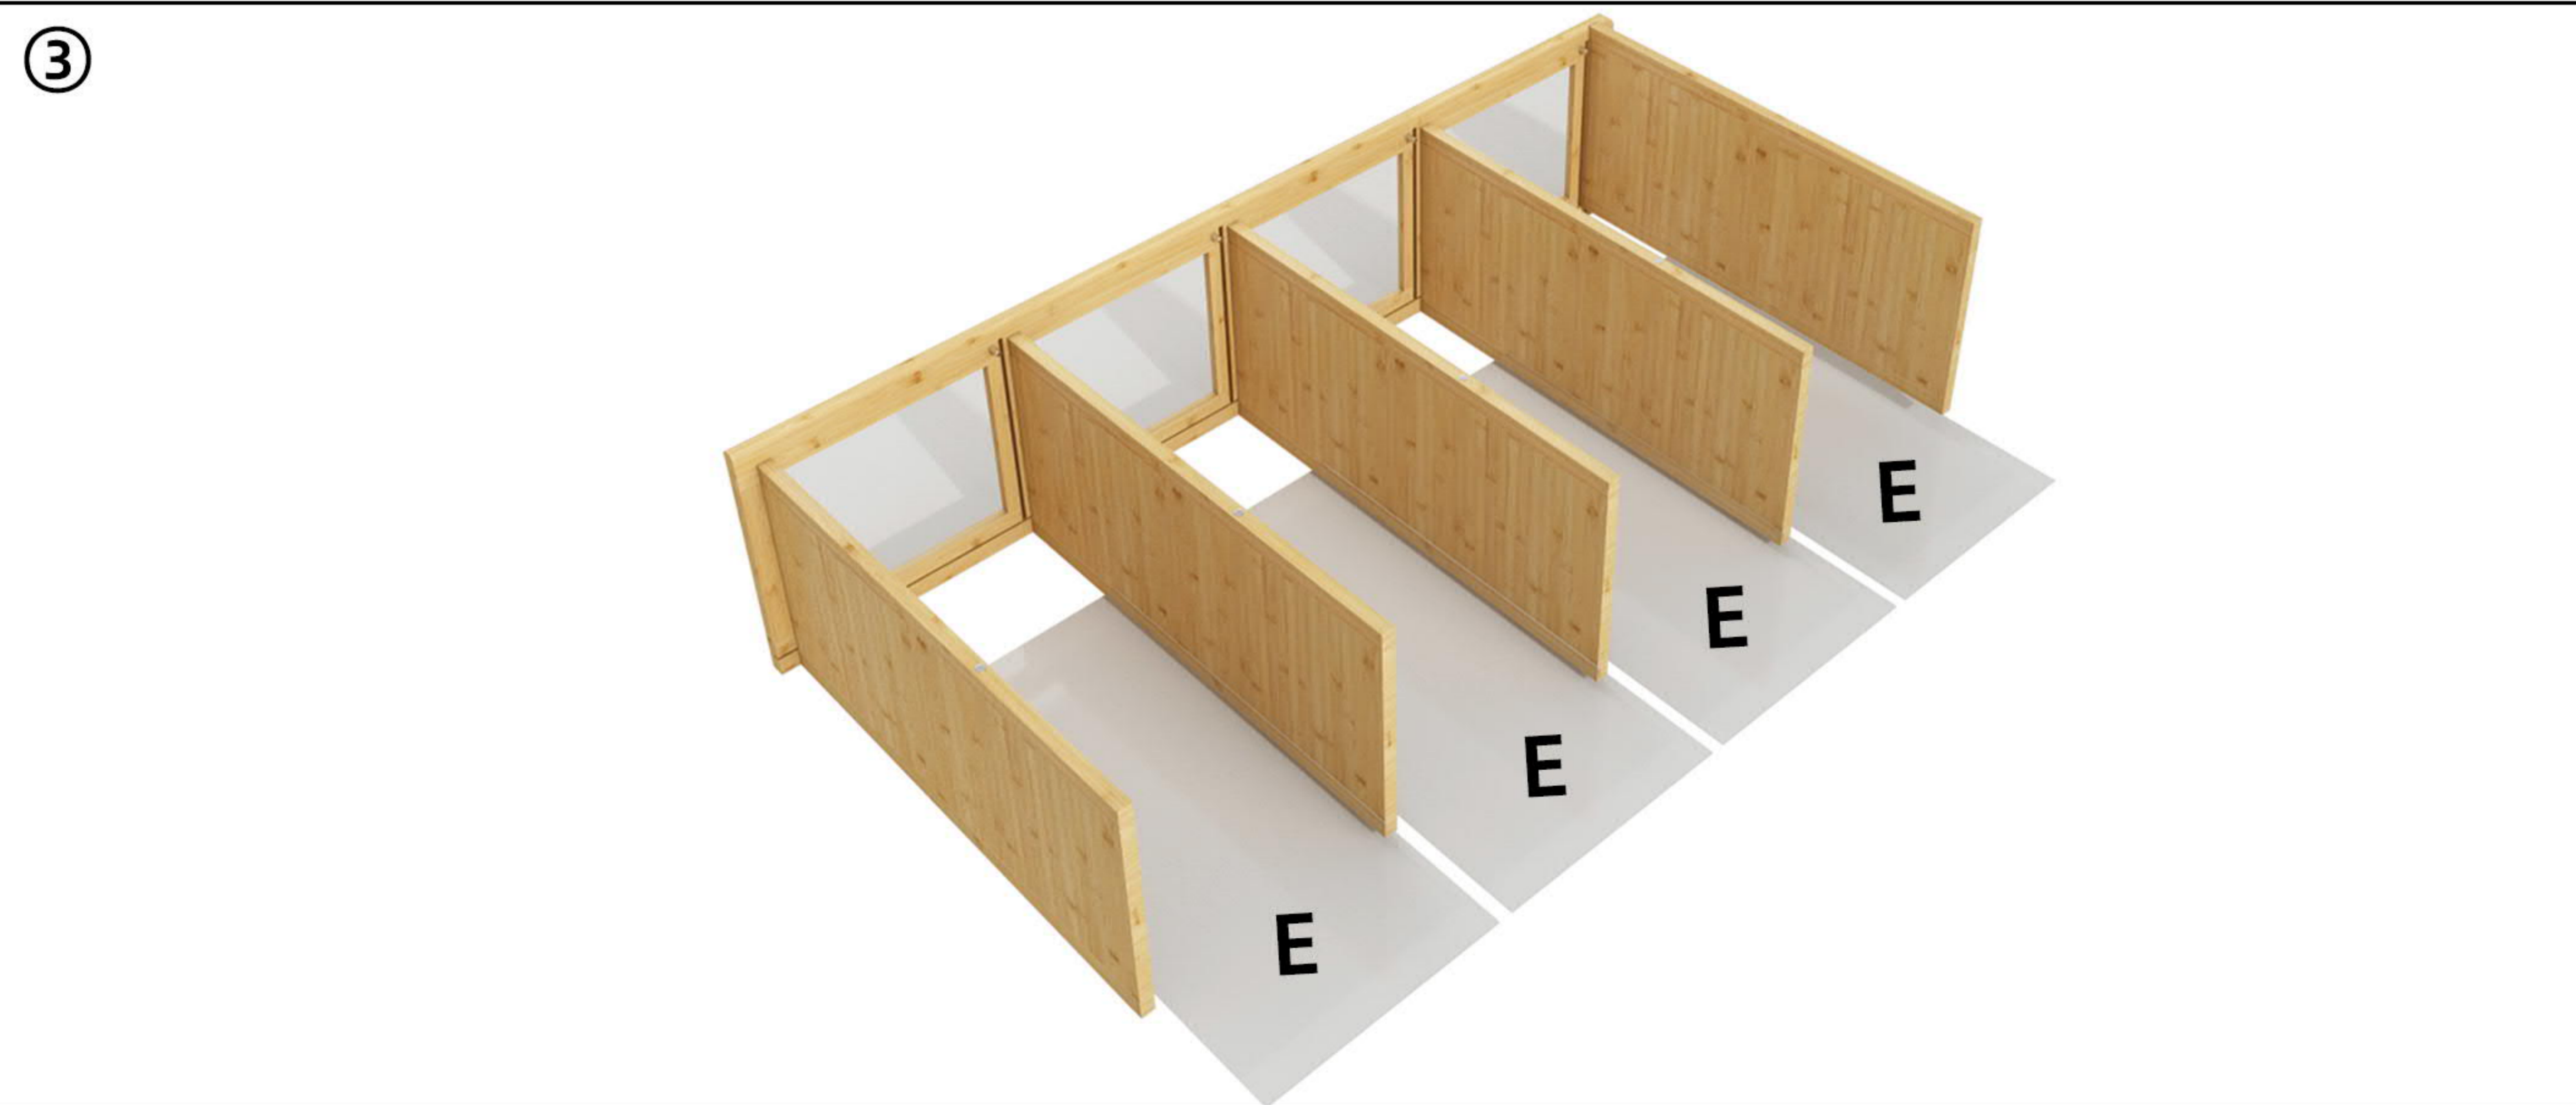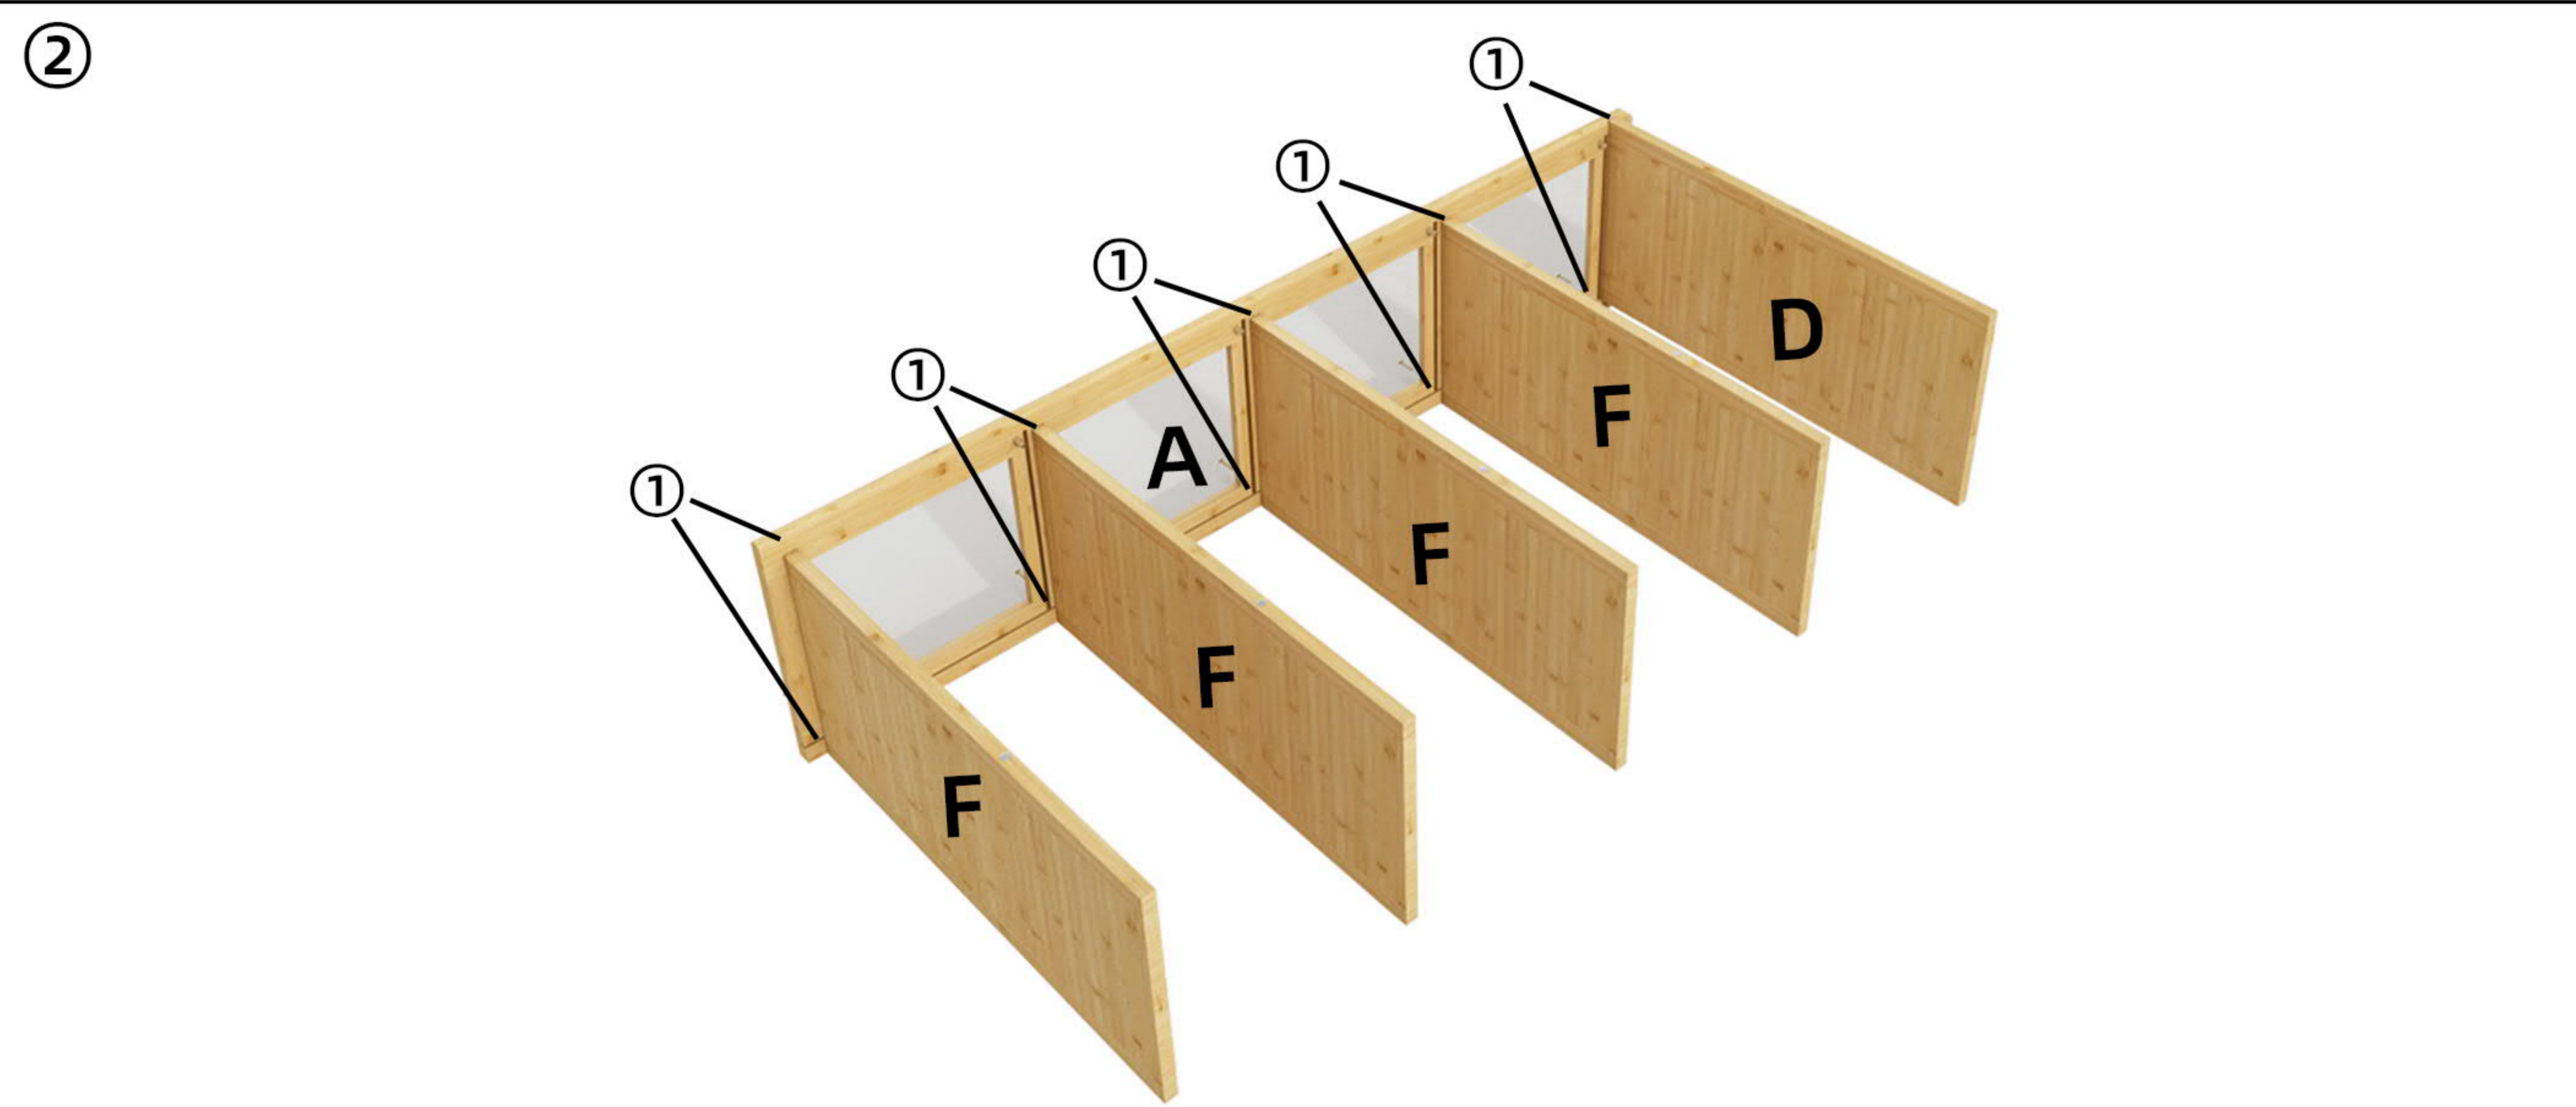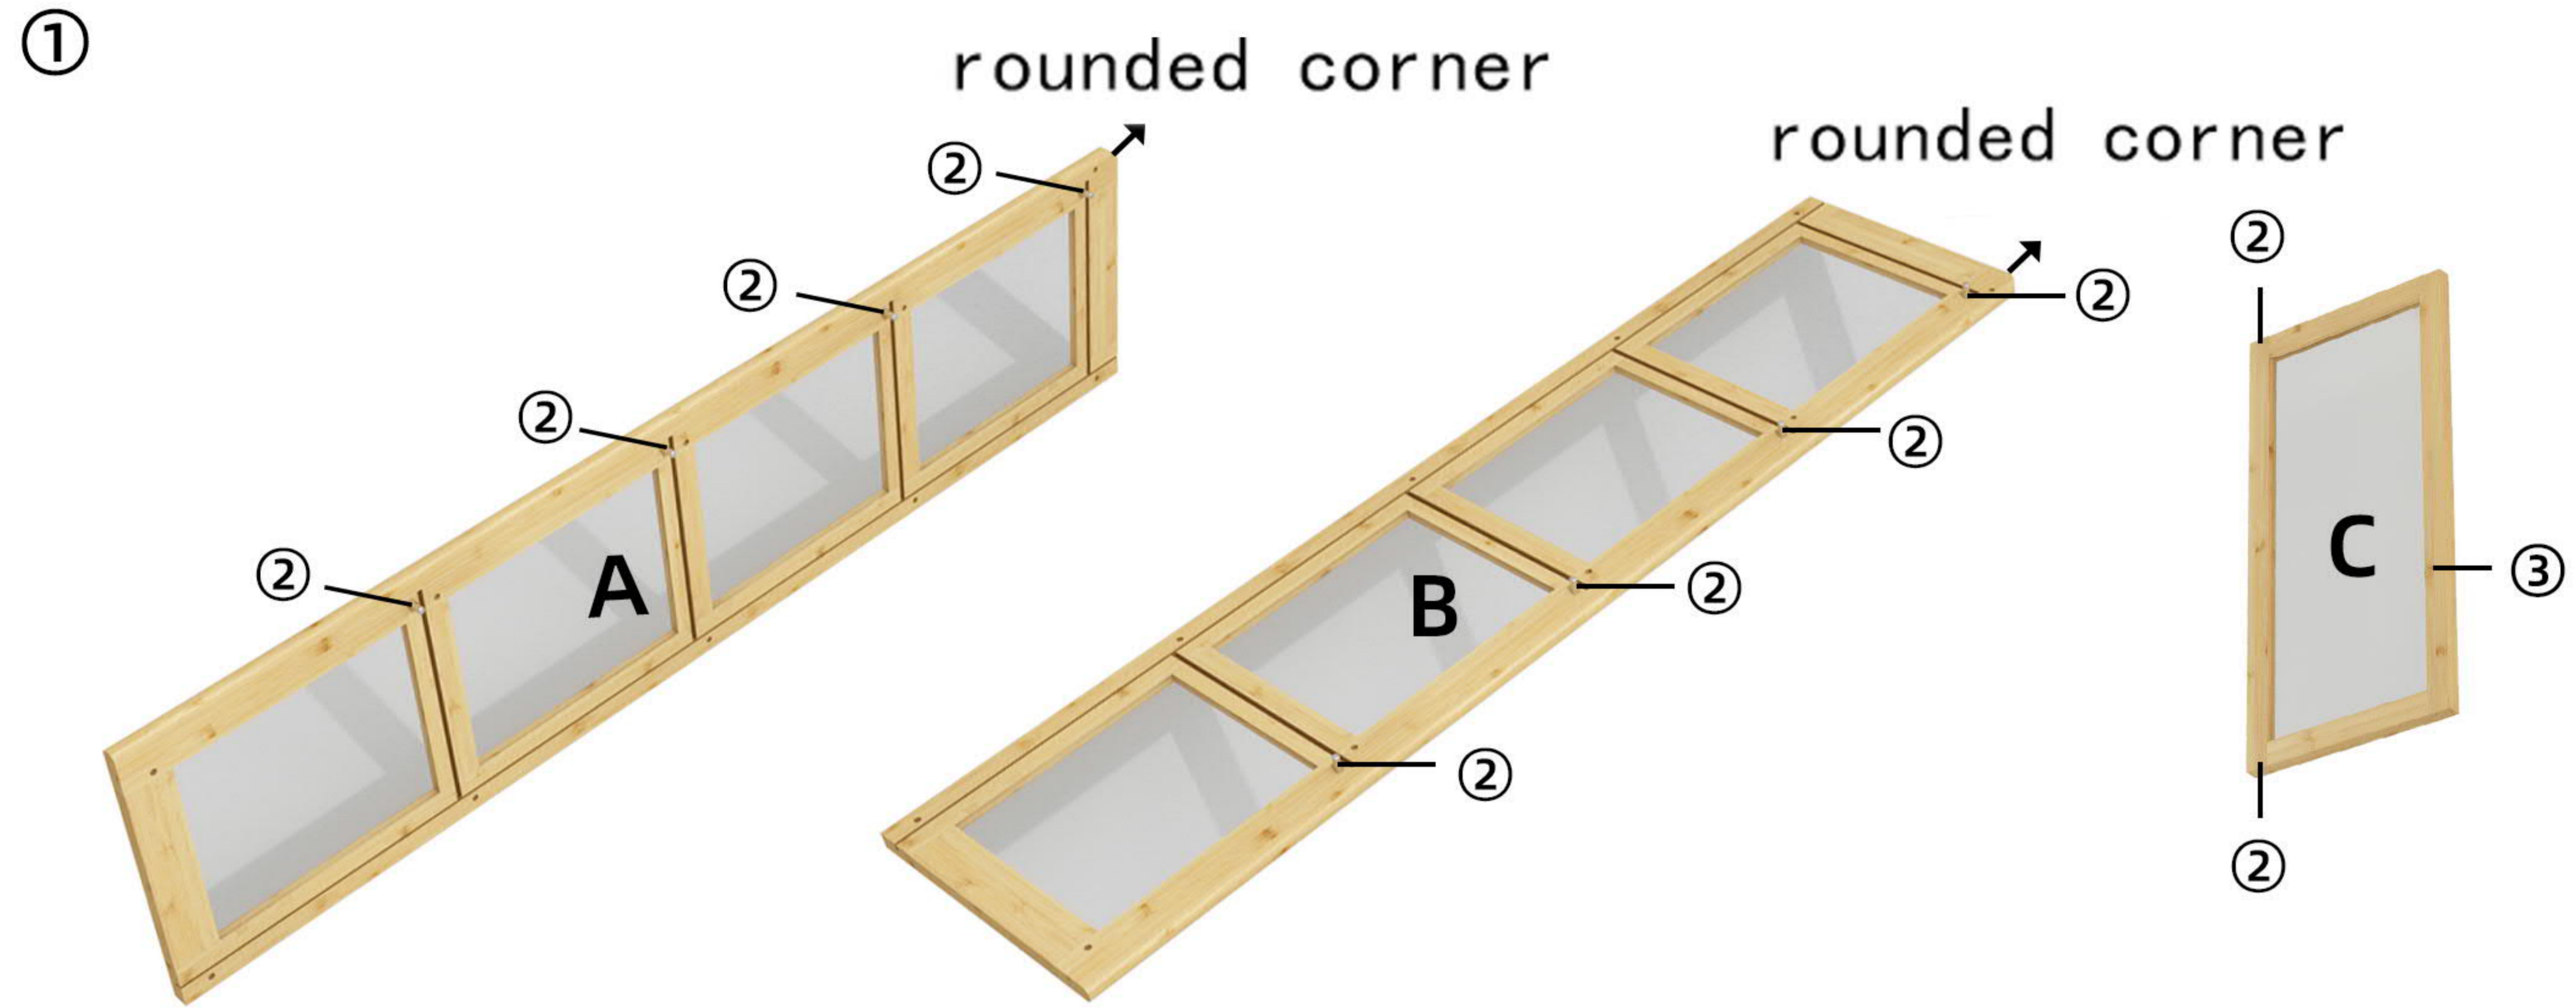

④

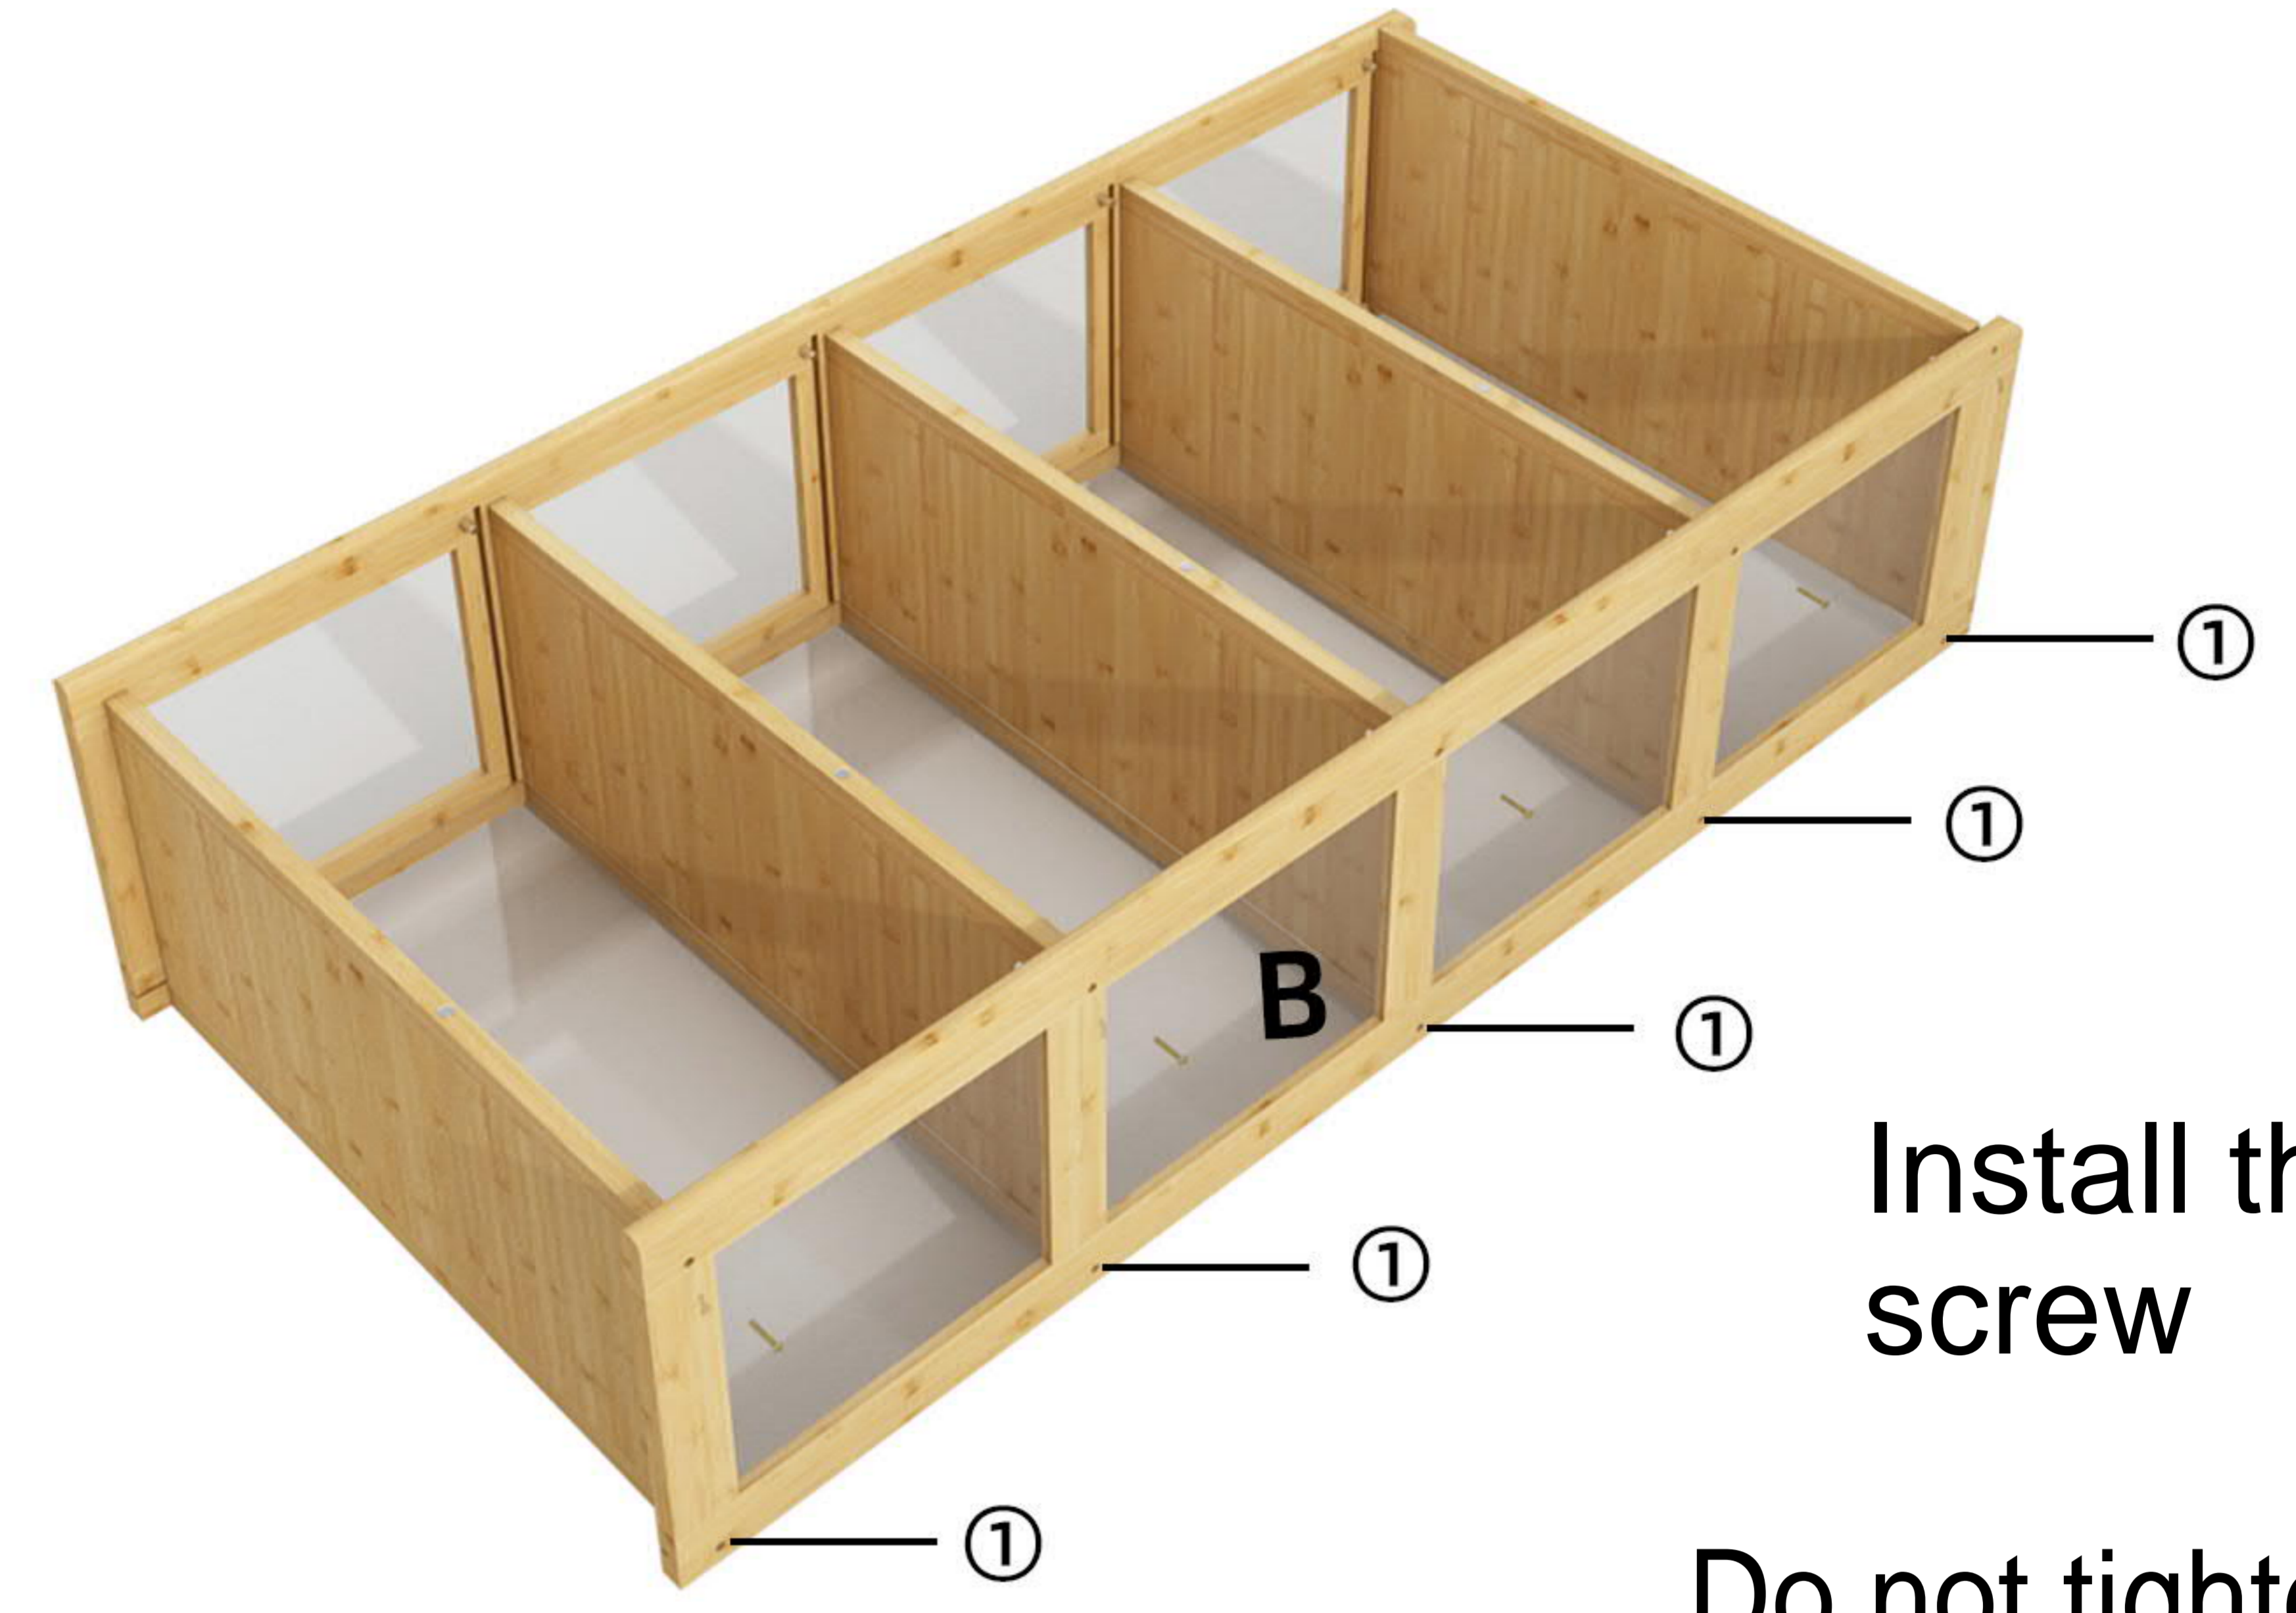

Install the right rear screw


Do not tighten the screws.

⑤



Break the right bracket out a little, then snap the door into the slot.

⑥

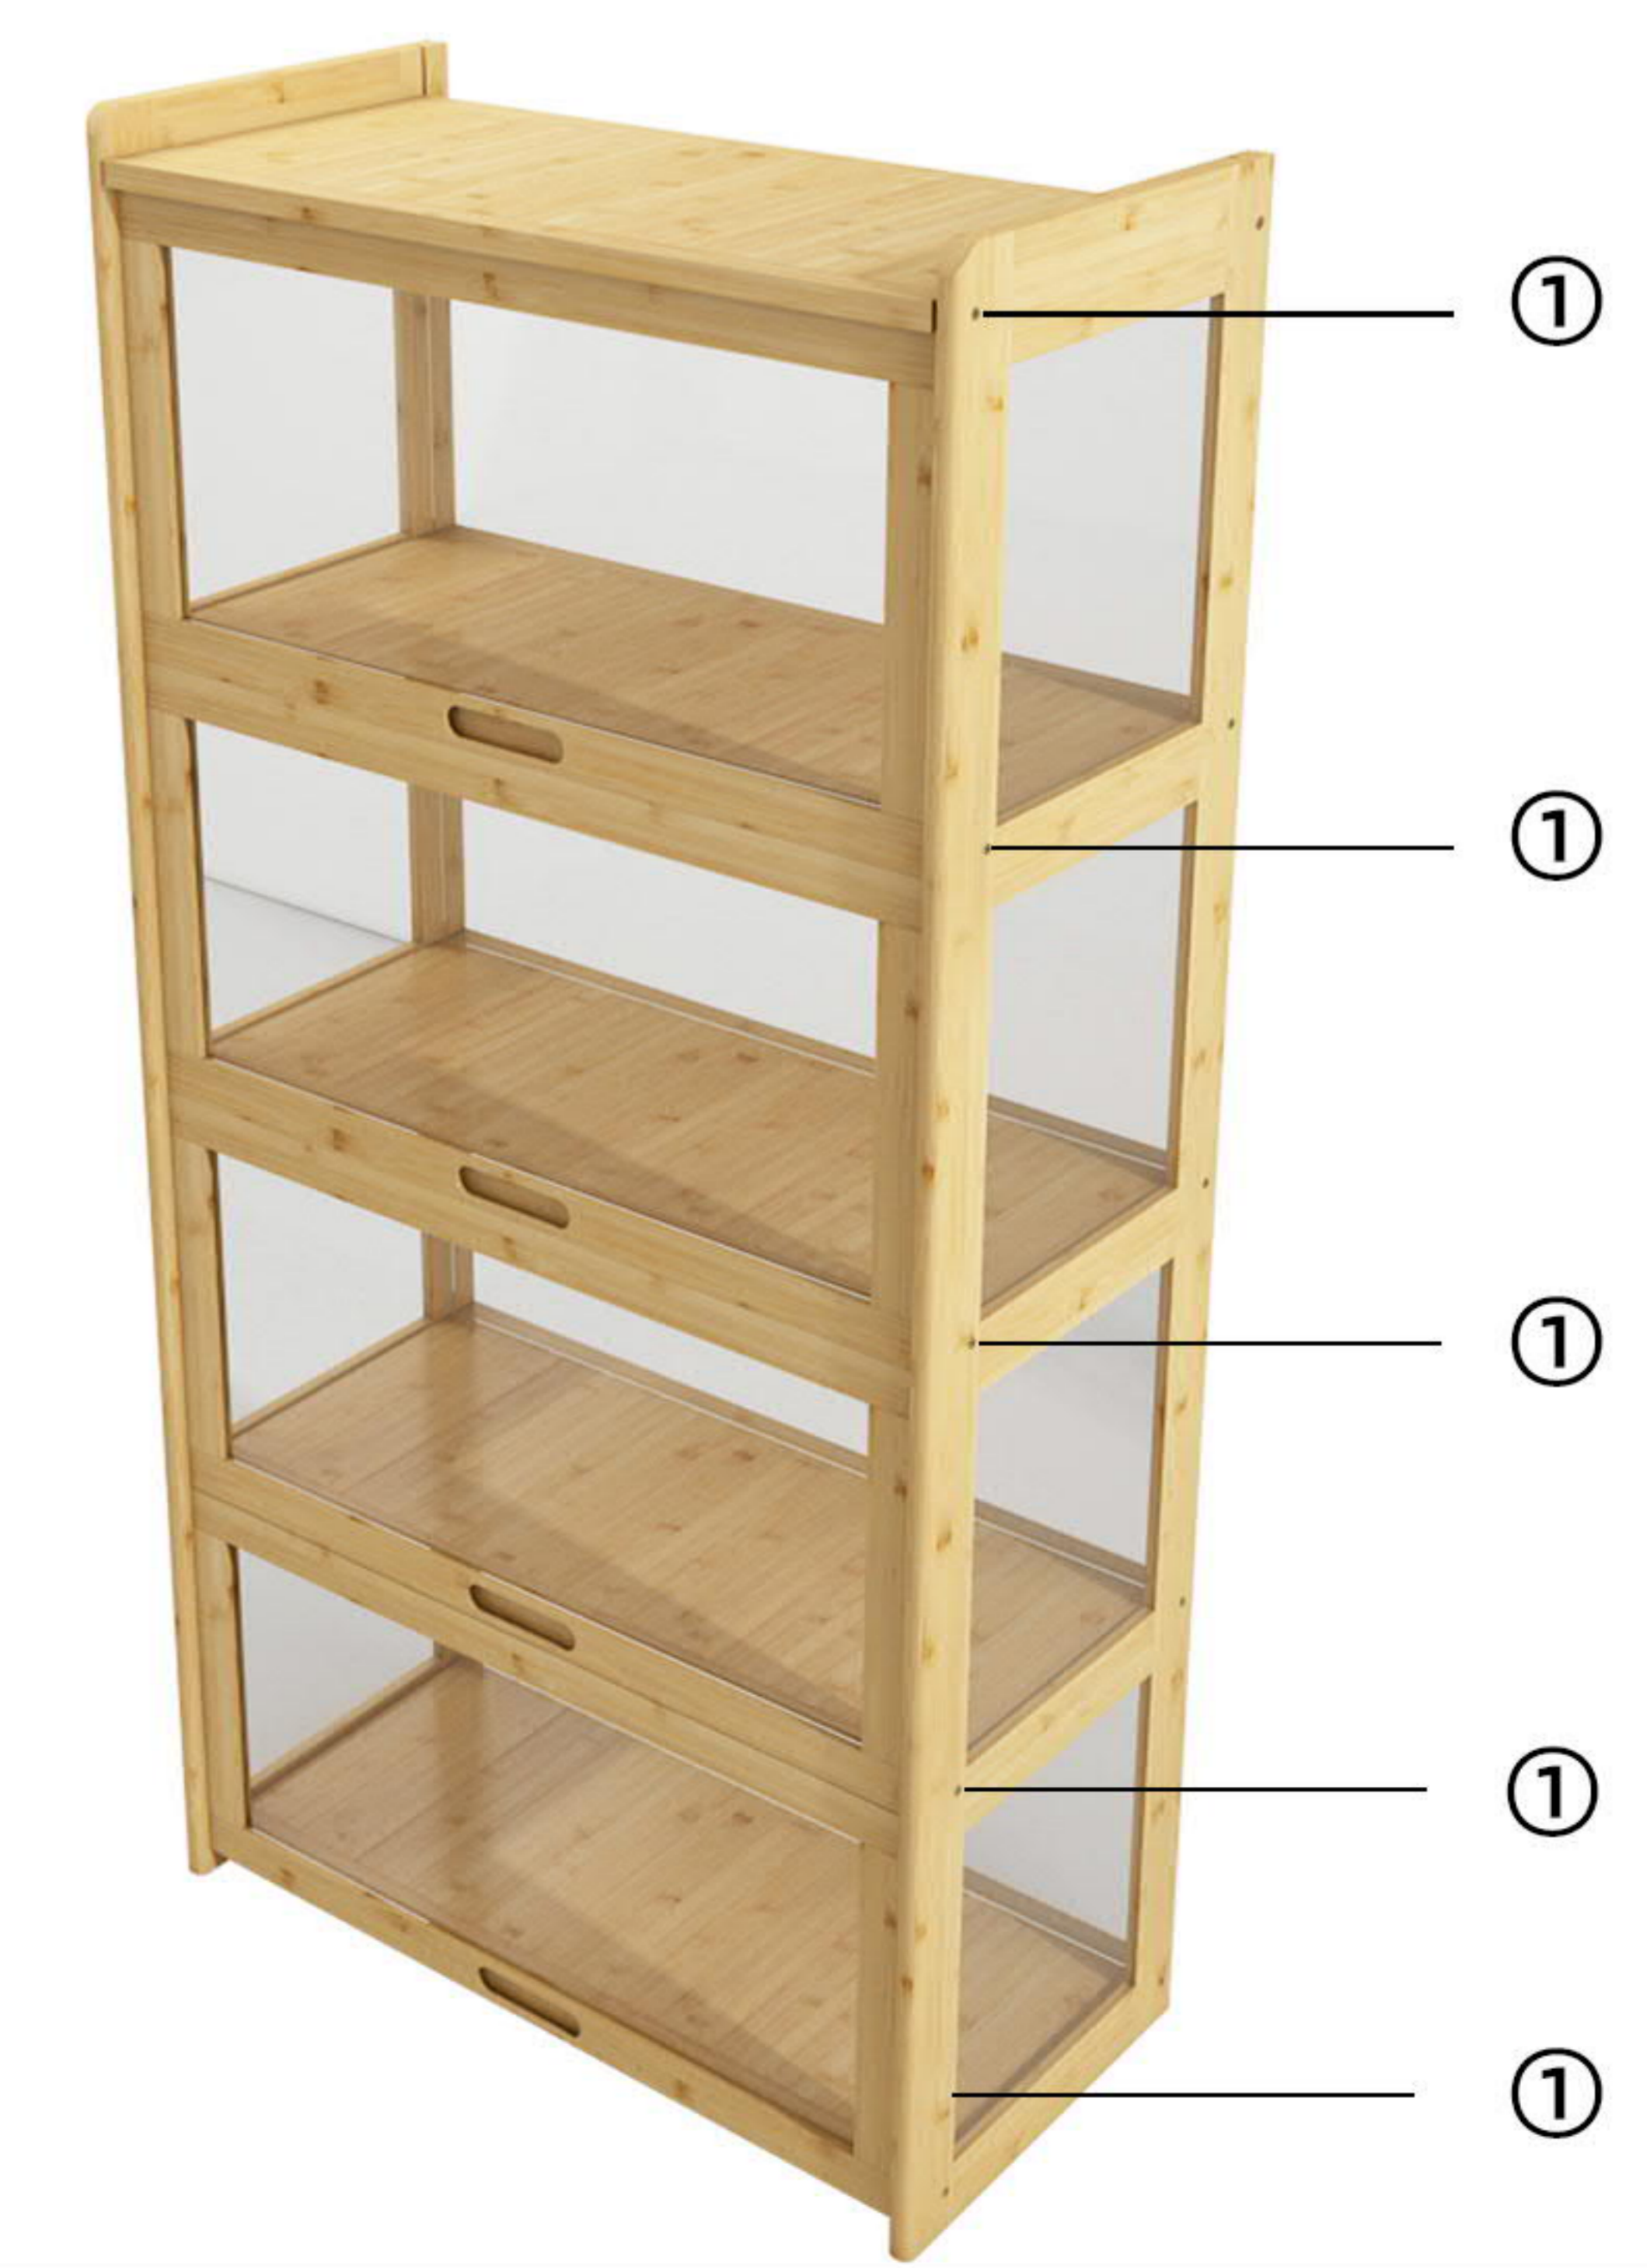

Install the right front screw