


ASSEMBLY INSTRUCTION

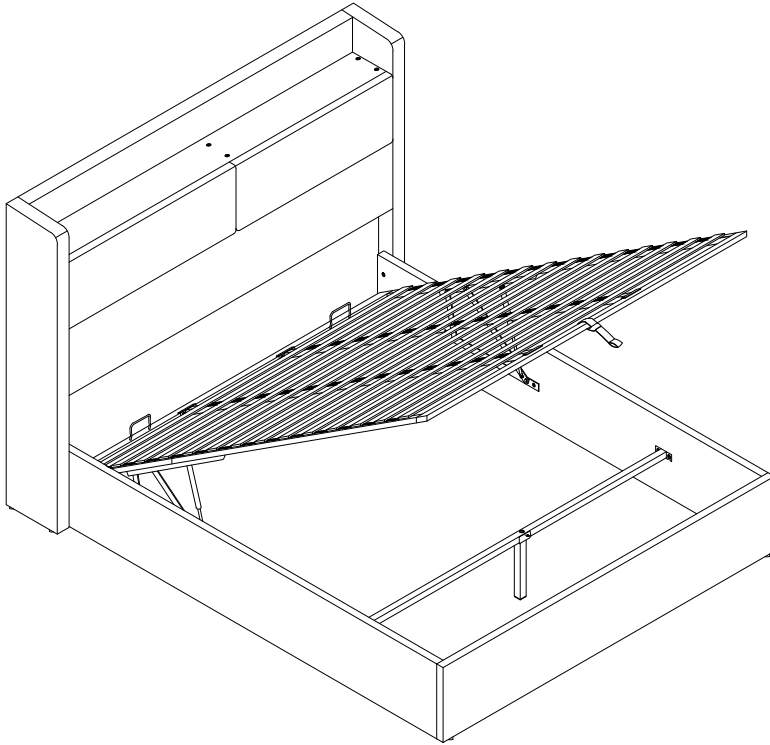


Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!


ITEM NUMBER:M147

IMPORTANT NOTE


1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. NEED PARTS OR ASSISTANCE? EMAIL US AT fuwubumen@outlook.com
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

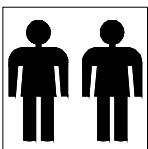

Minimum two
person assembly

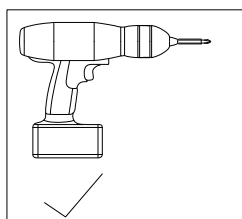


PART LIST

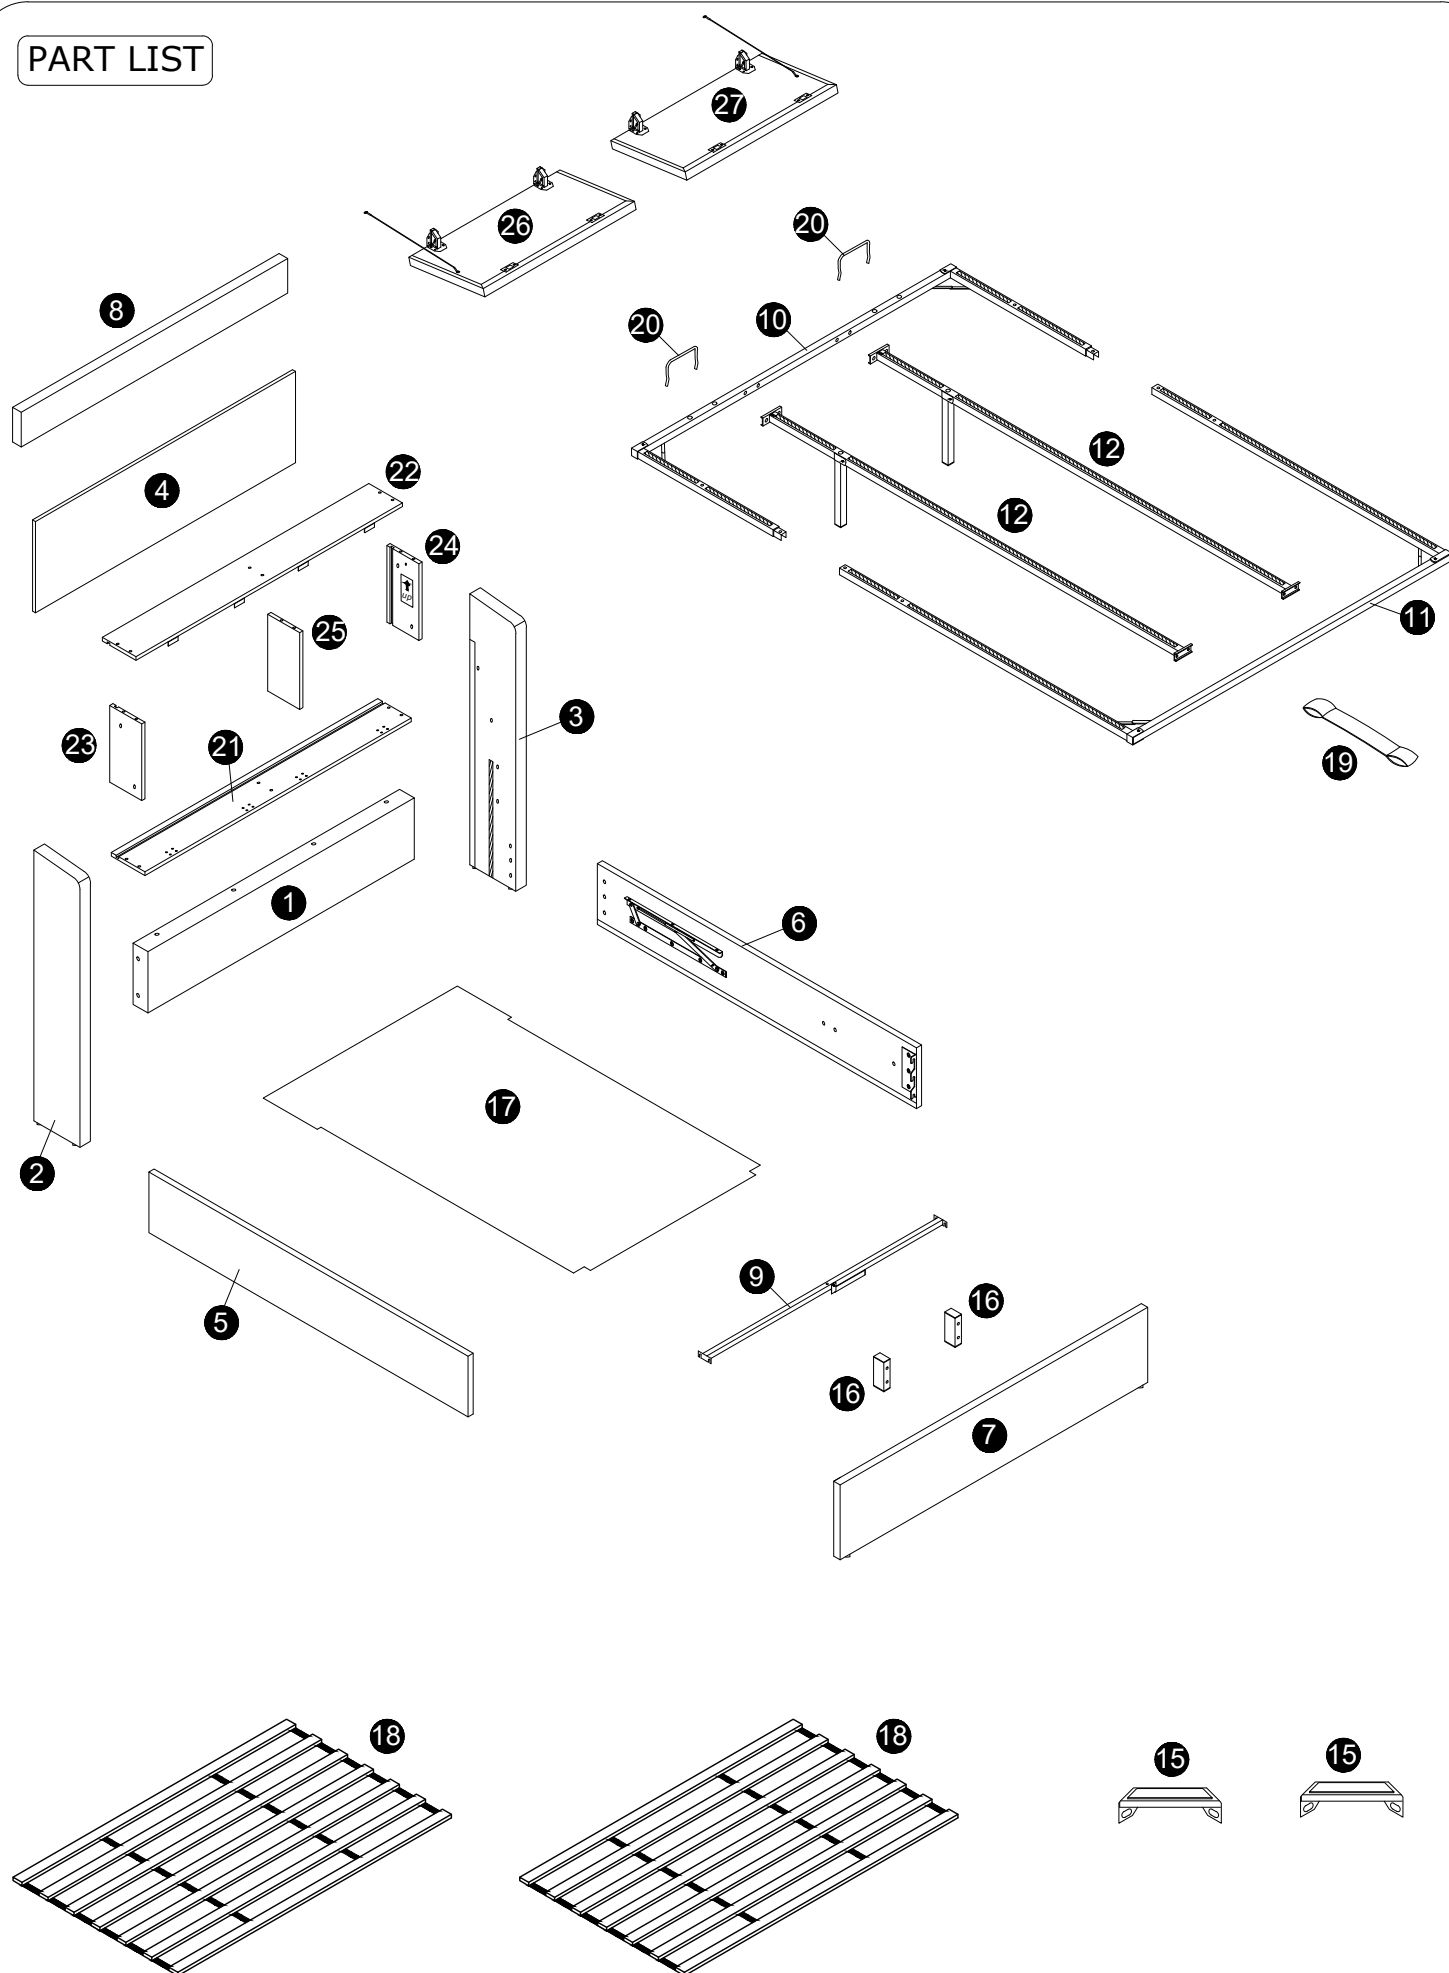


PART LIST


1 x 1pc

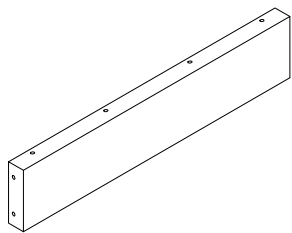


2 x 1pc




3 x 1pc




4

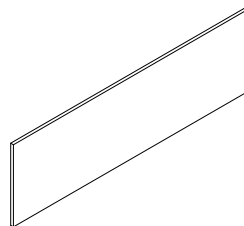


5 x 1pc

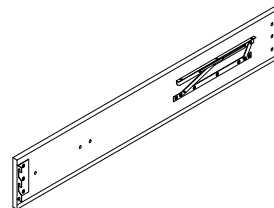


6 x 1pc

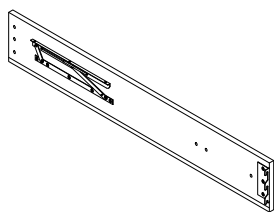


7 x 1pc

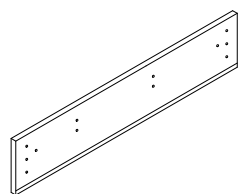


8 x 1pc

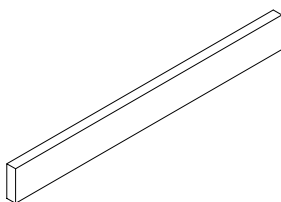


9 x 1pc

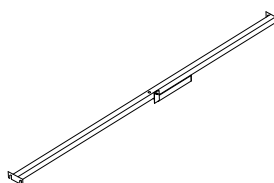


10 x 1pc

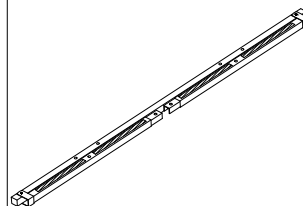


11 x 1pc

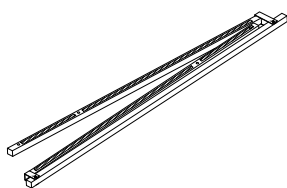


12 x 2pcs

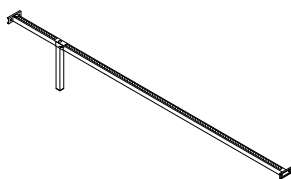


15 x 2pcs




16 x 2pcs




17 x 1pc

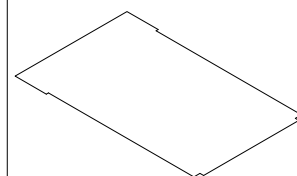

18 x 2pcs

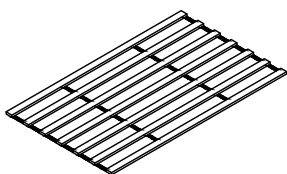


19 x 1pc




20 x 2pcs




21 x 1pc

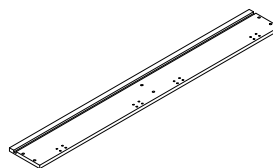


22 x 1pc

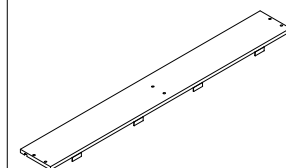


23 x 1pc




24 x 1pc




25 x 1pc




26 x 1pc

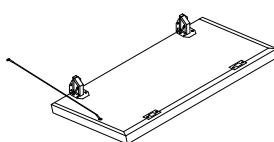


27 x 1pc

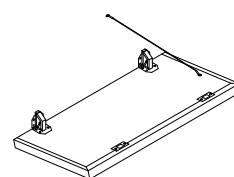


HARDWARE LIST

 H1 M5 x 1pc	 H2 M8x30mm x 26pcs	 H3 M8x38mm x 4pcs	 H4 M8x60mm x 4pcs
 H5 M8 x 39pcs	 H6 M8x17mm x 35pcs	 H7 M8 x 6pcs	 H8 M14 x 1pc
 H9 M8x50mm x 19pcs	 H10 M8x22mm x 14pcs	 H11 M4x16mm x 18pcs	 H12 M4 x 1pc
 H13 M6x35mm x 5pcs	 H14 M6x45mm x 12pcs		


1

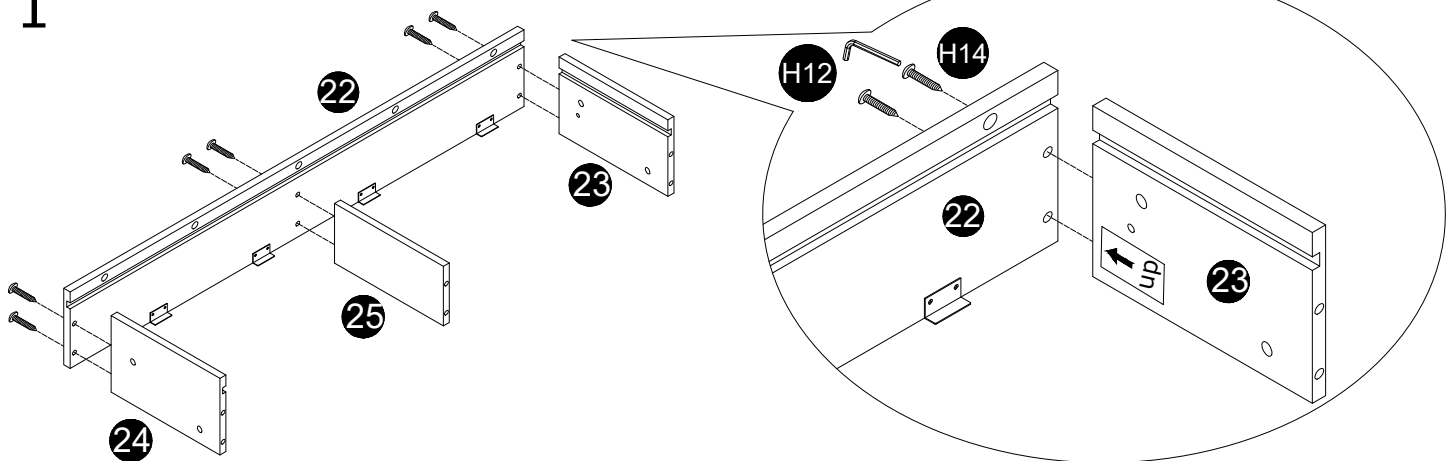



2

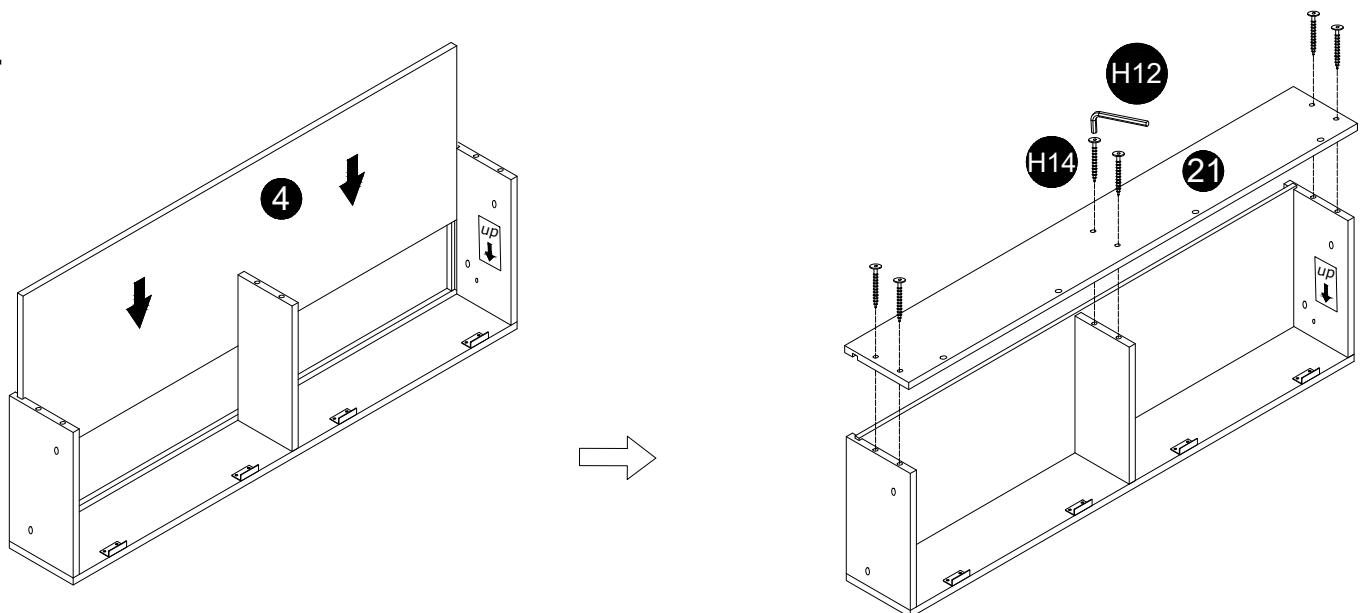

3

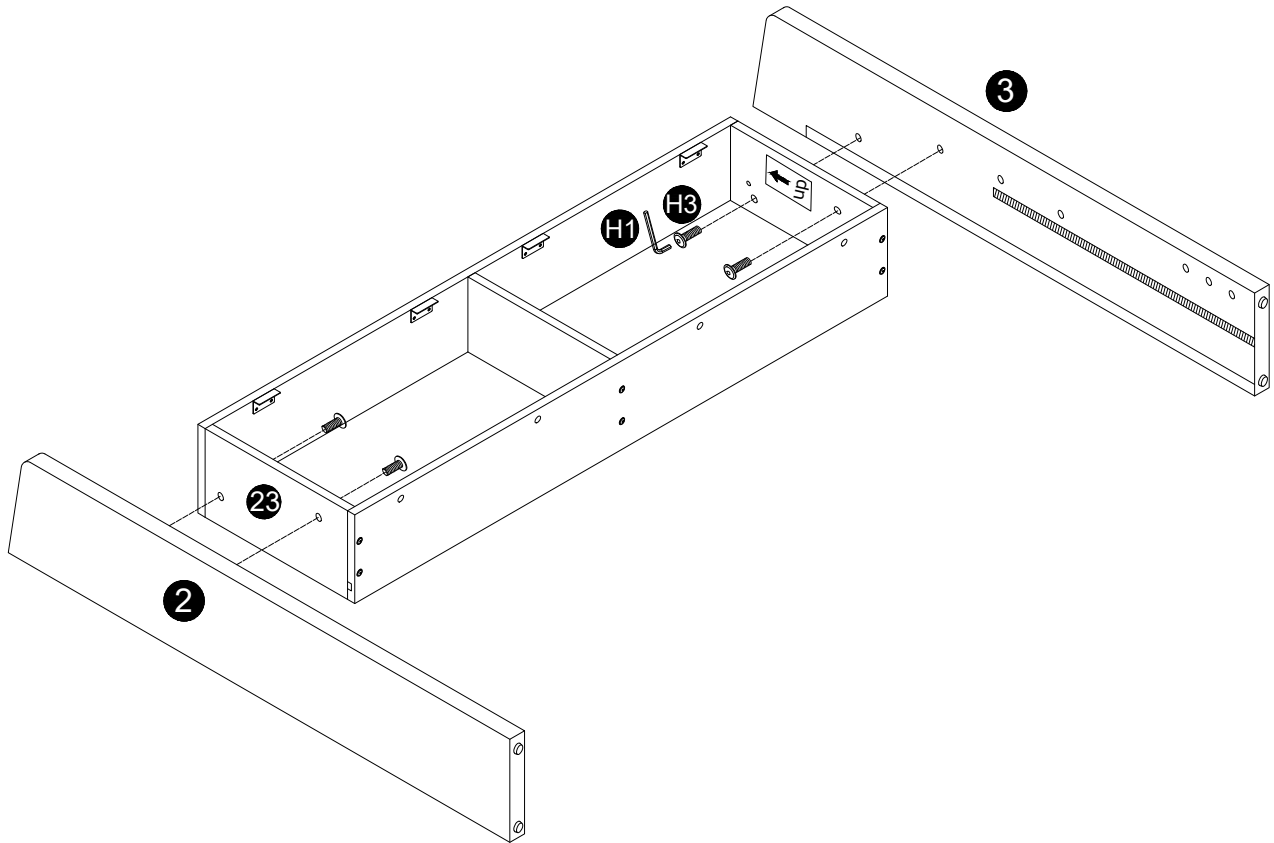


4

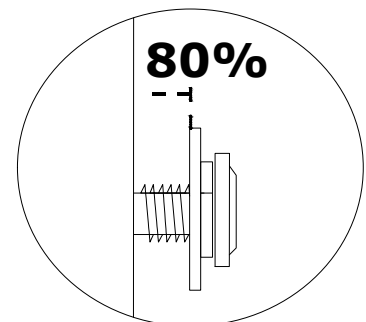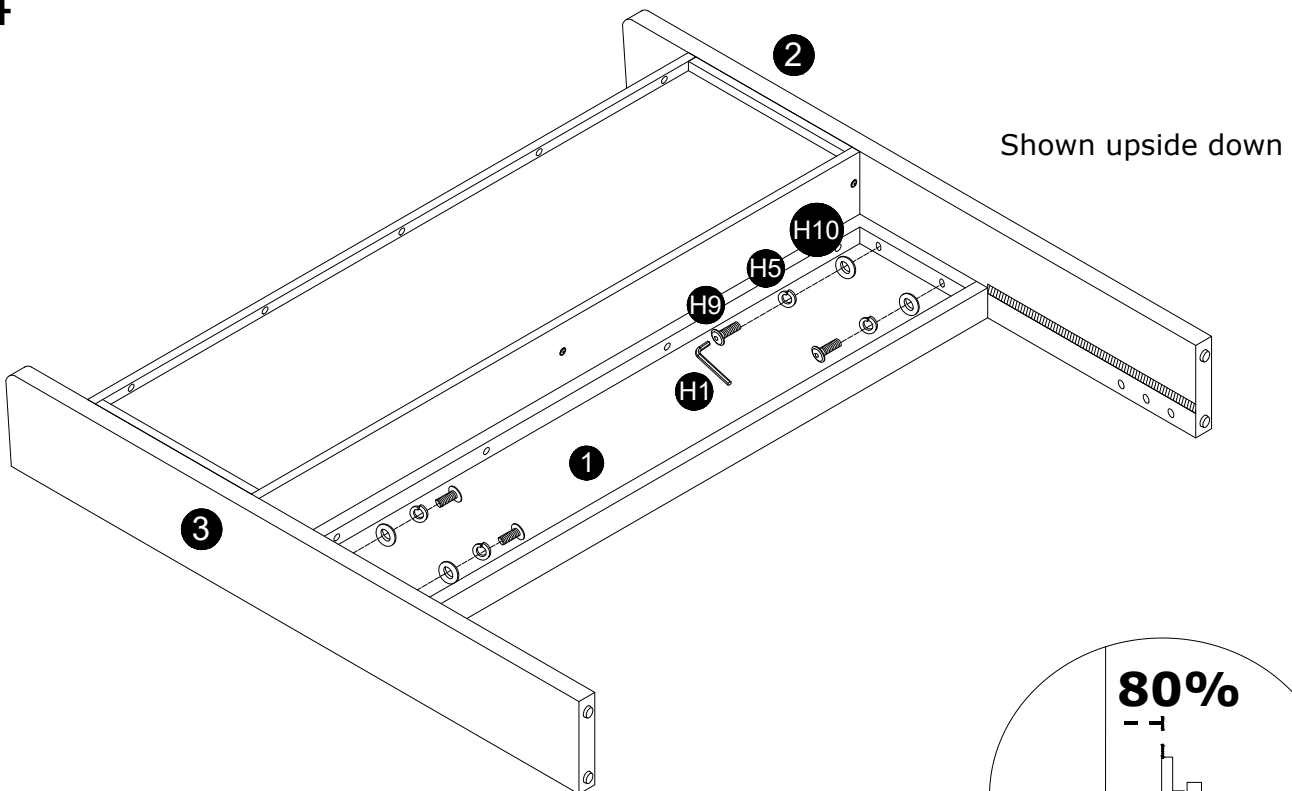


Do not fully tighten fixings!

5

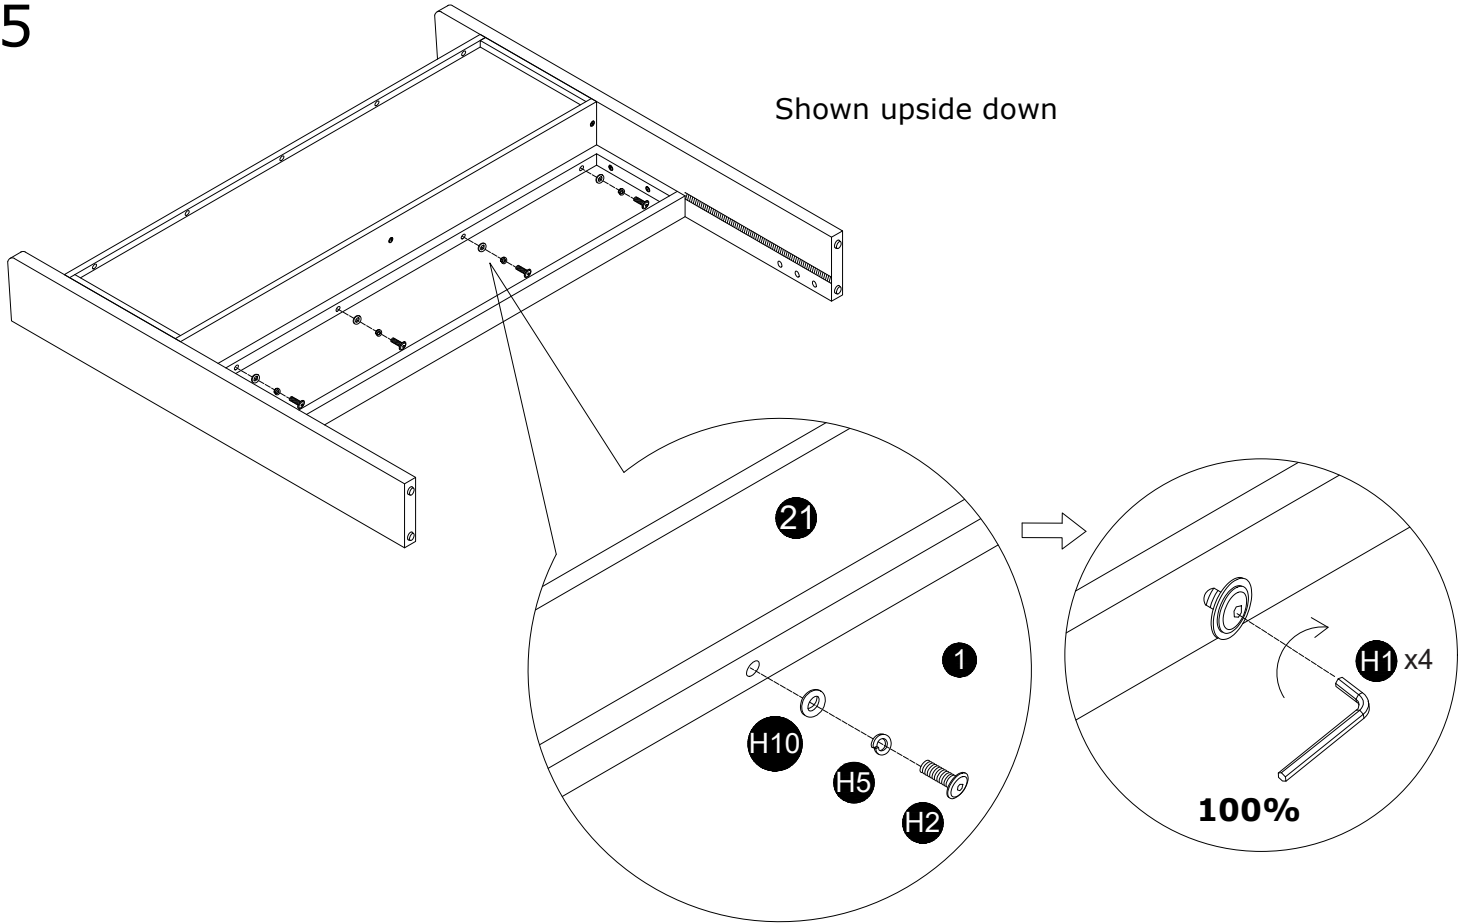


After assembly is complete, 100% the screw from step 4.


6

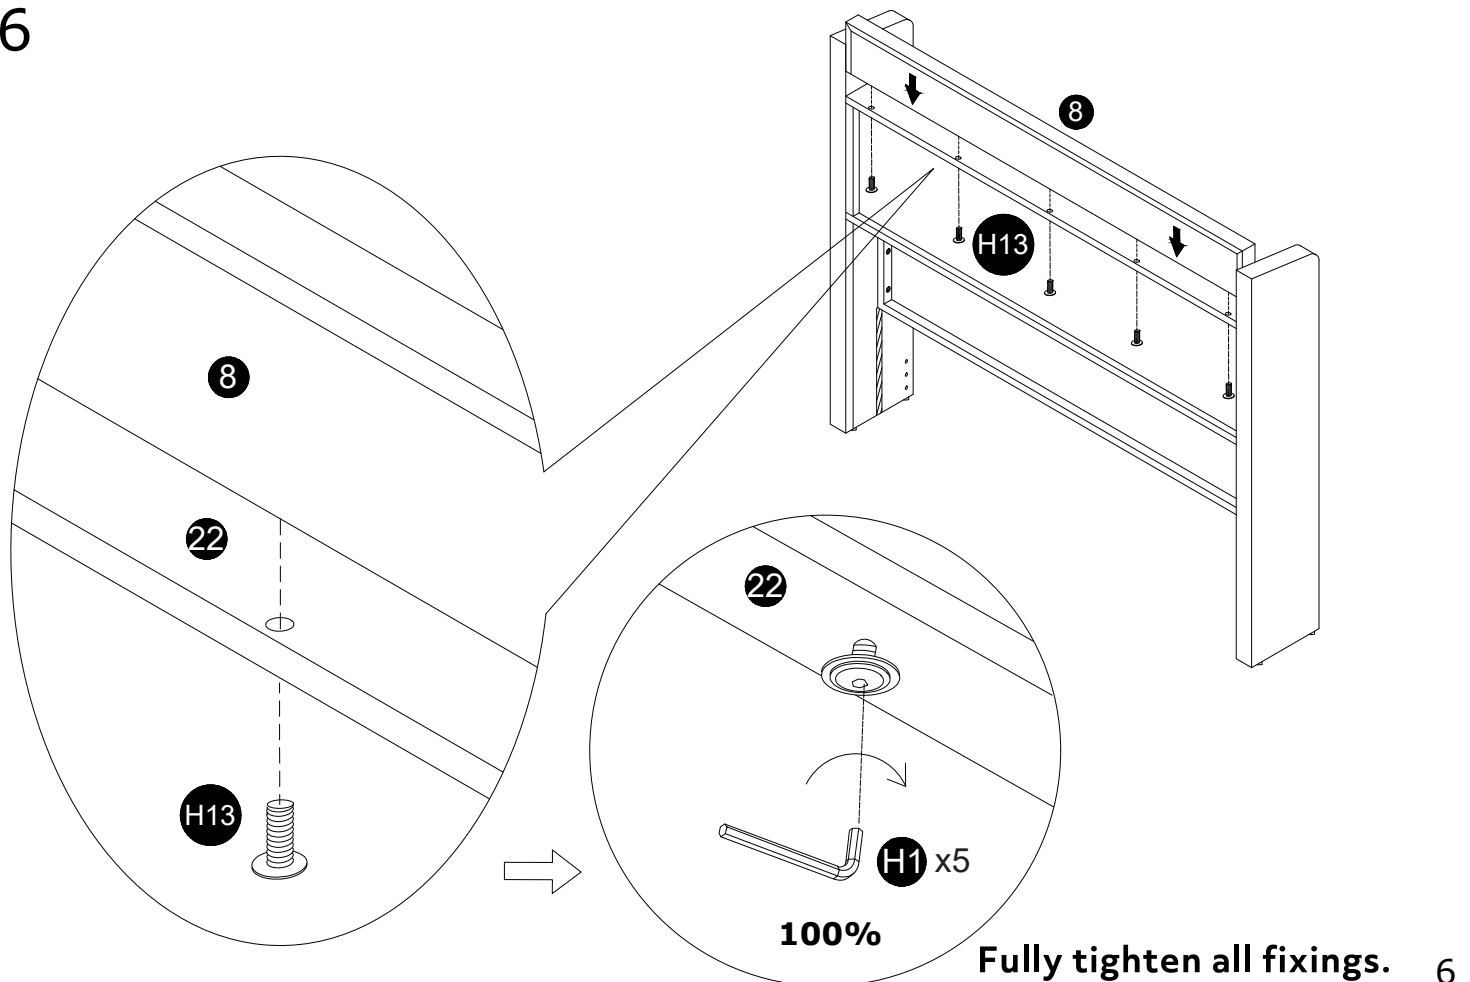


7

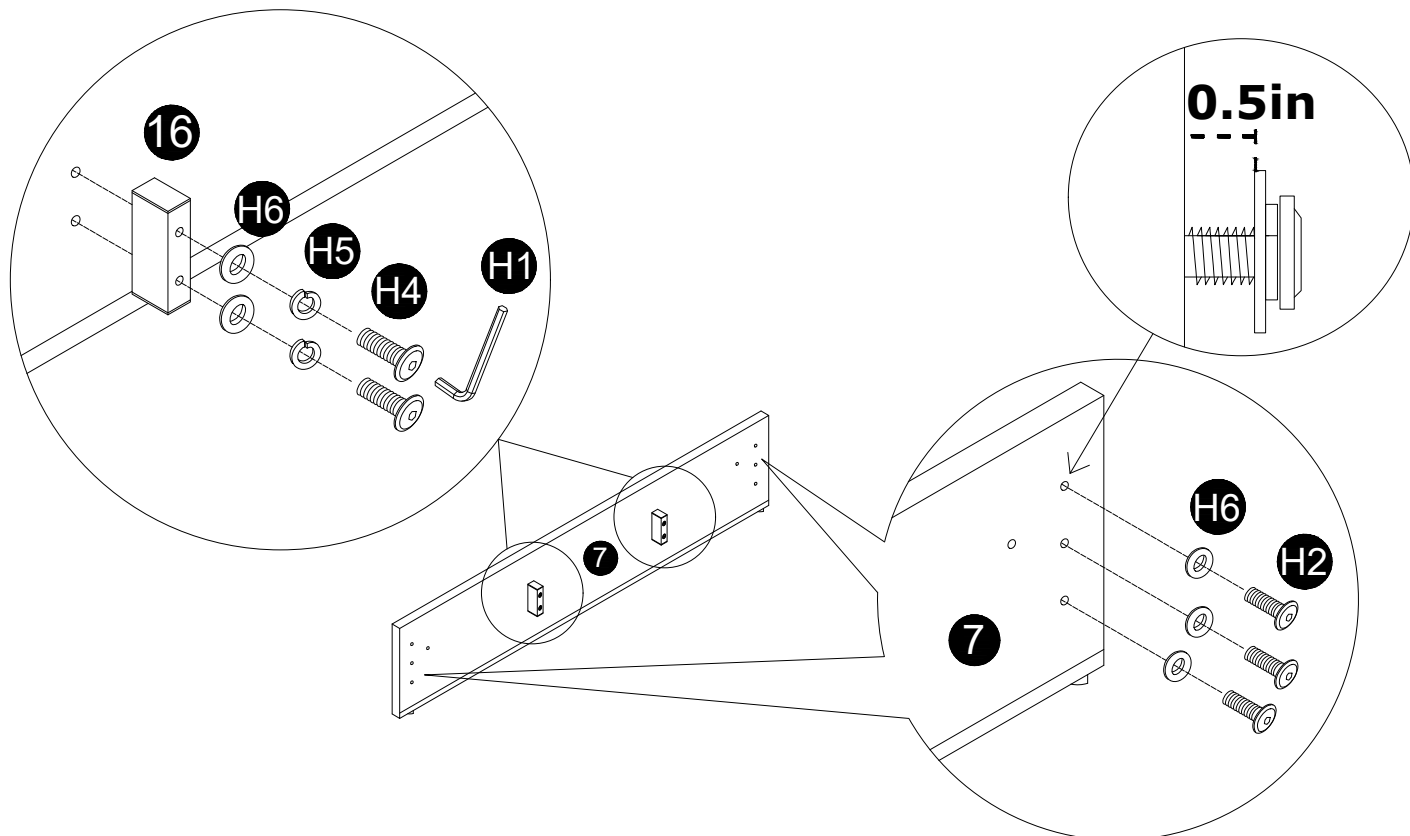

8

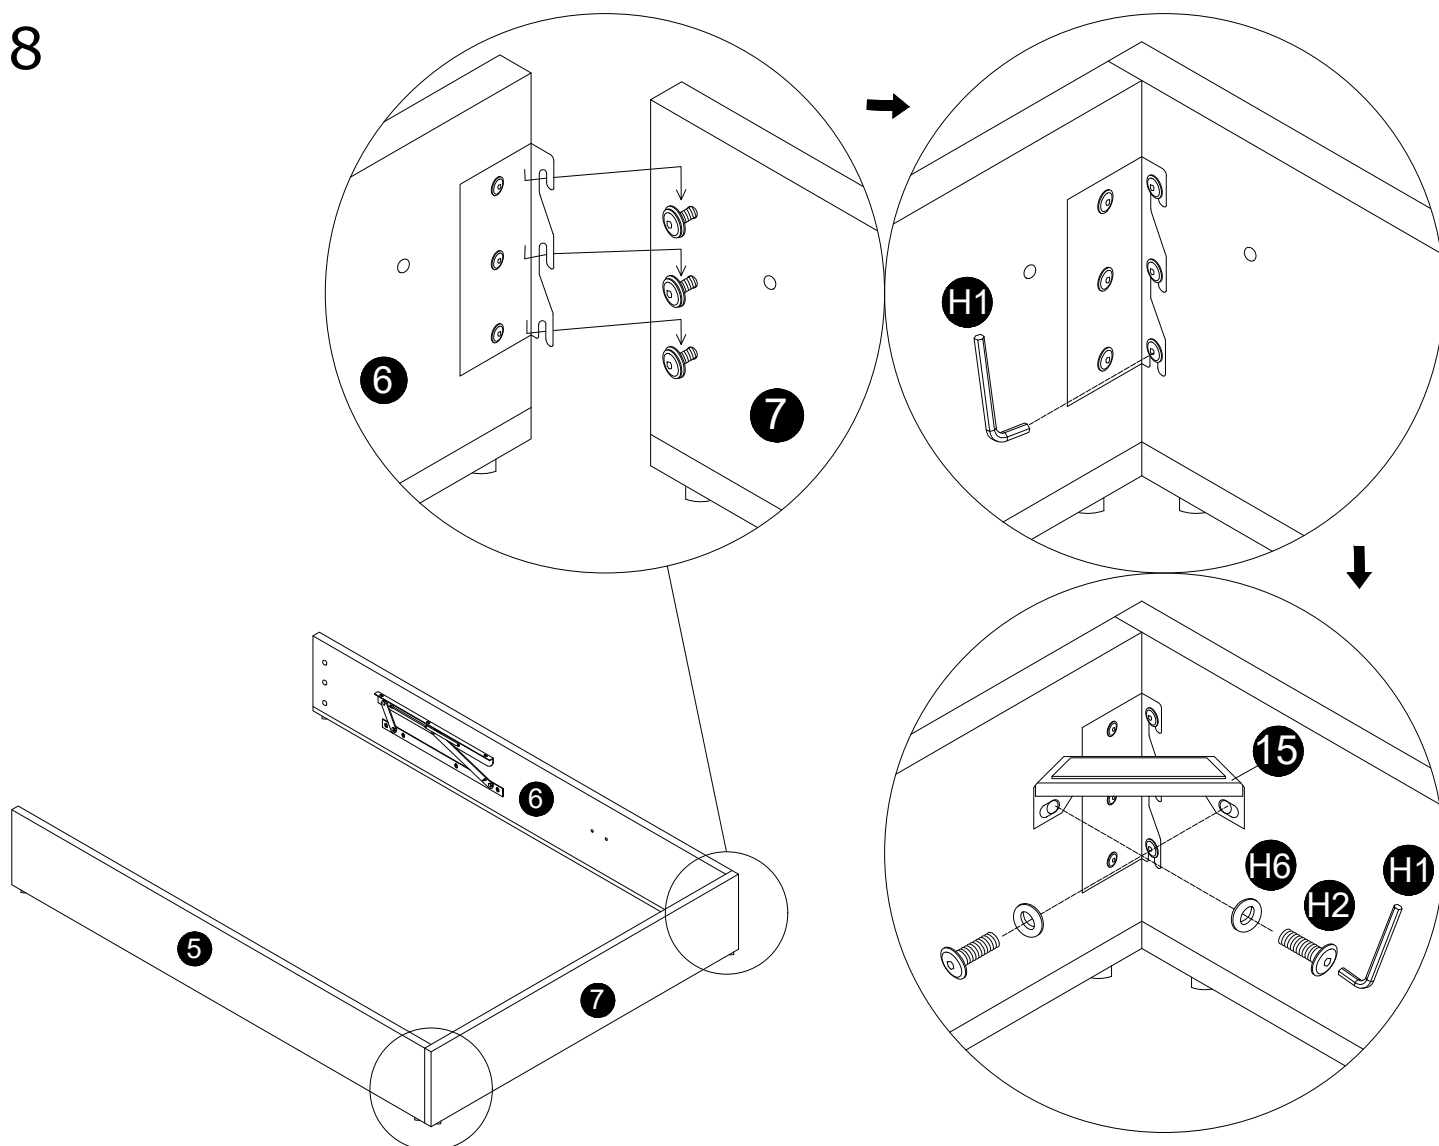

9

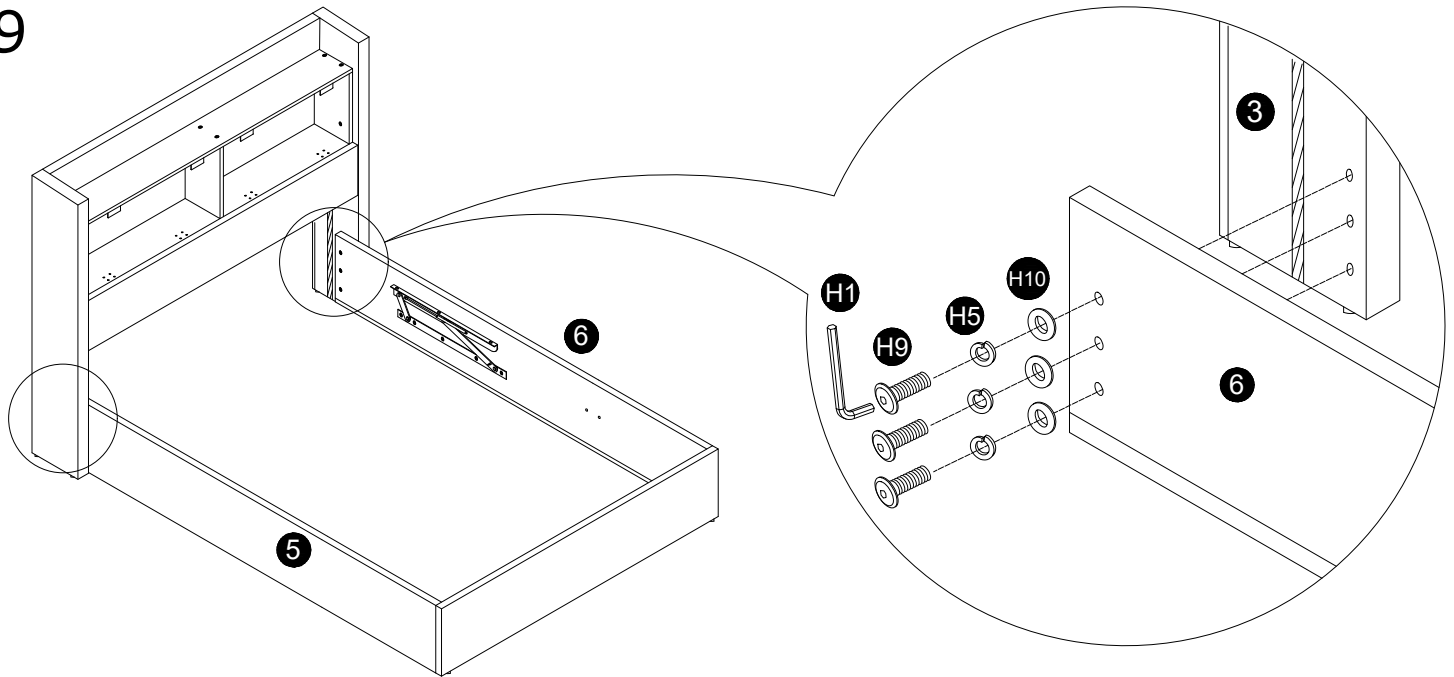

10

Beware of hand



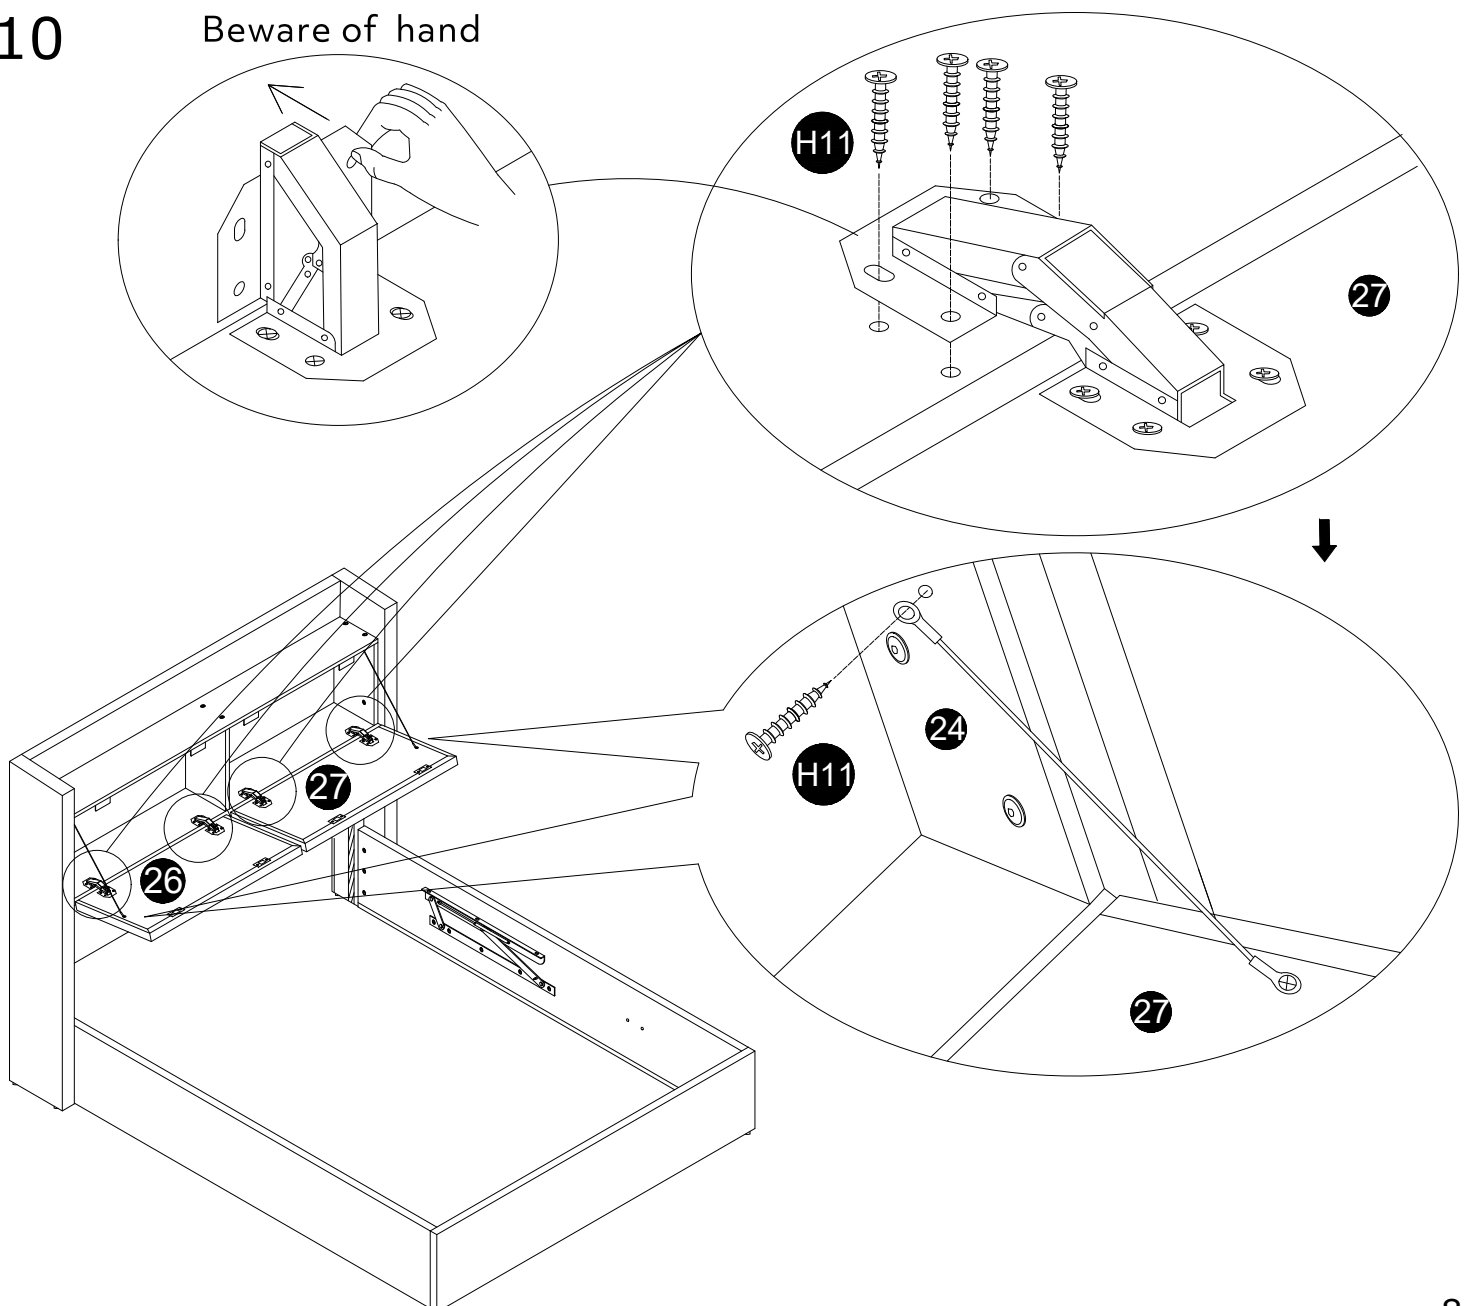


Diagram 11 shows the assembly of the bottom panel. The panel, labeled 17, is being attached to the bed frame. The frame consists of a headboard (5), a footboard (7), and side rails (6). The panel is shown being lowered into the frame, with arrows indicating the direction of movement. The panel is secured by screws into the side rails.

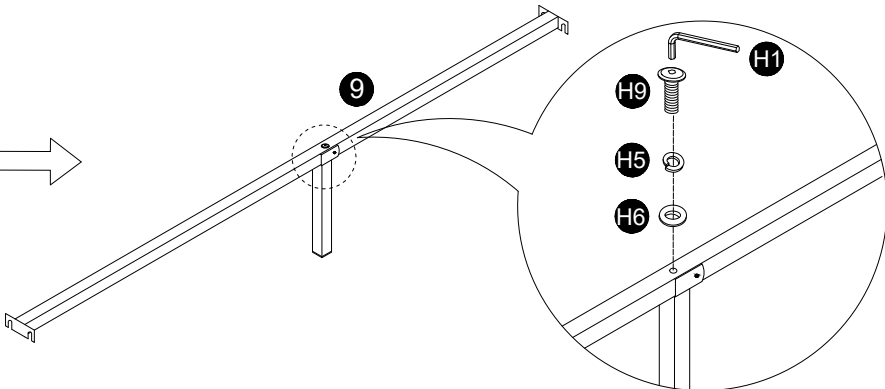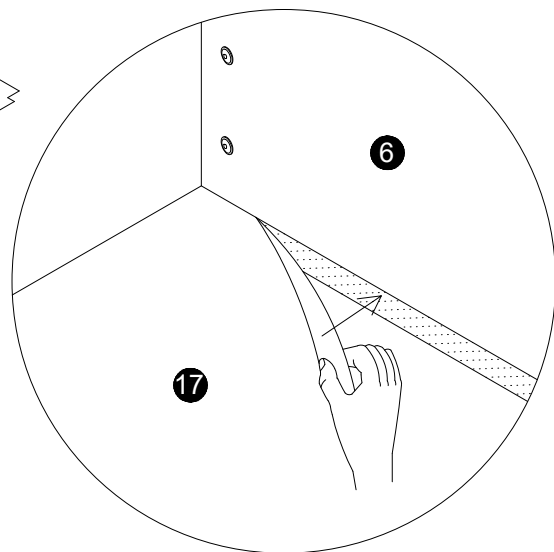

13

0.5 in





6

H6


H5

H2


9

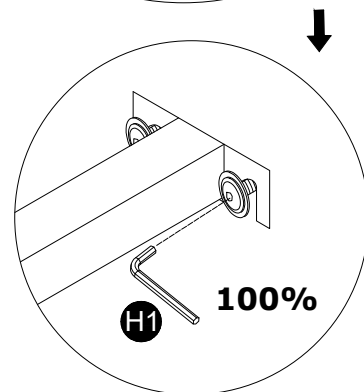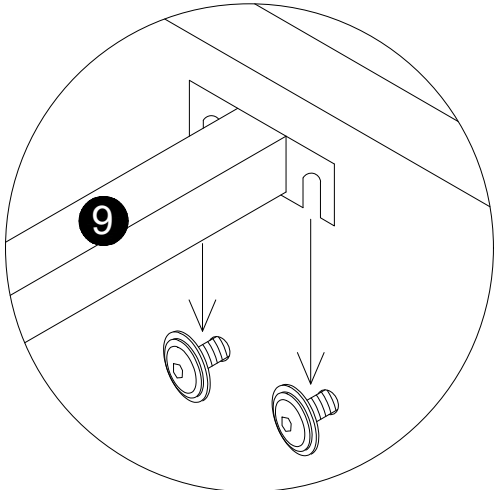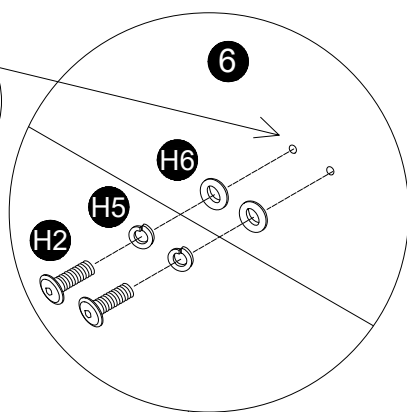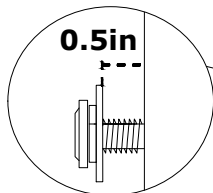


14

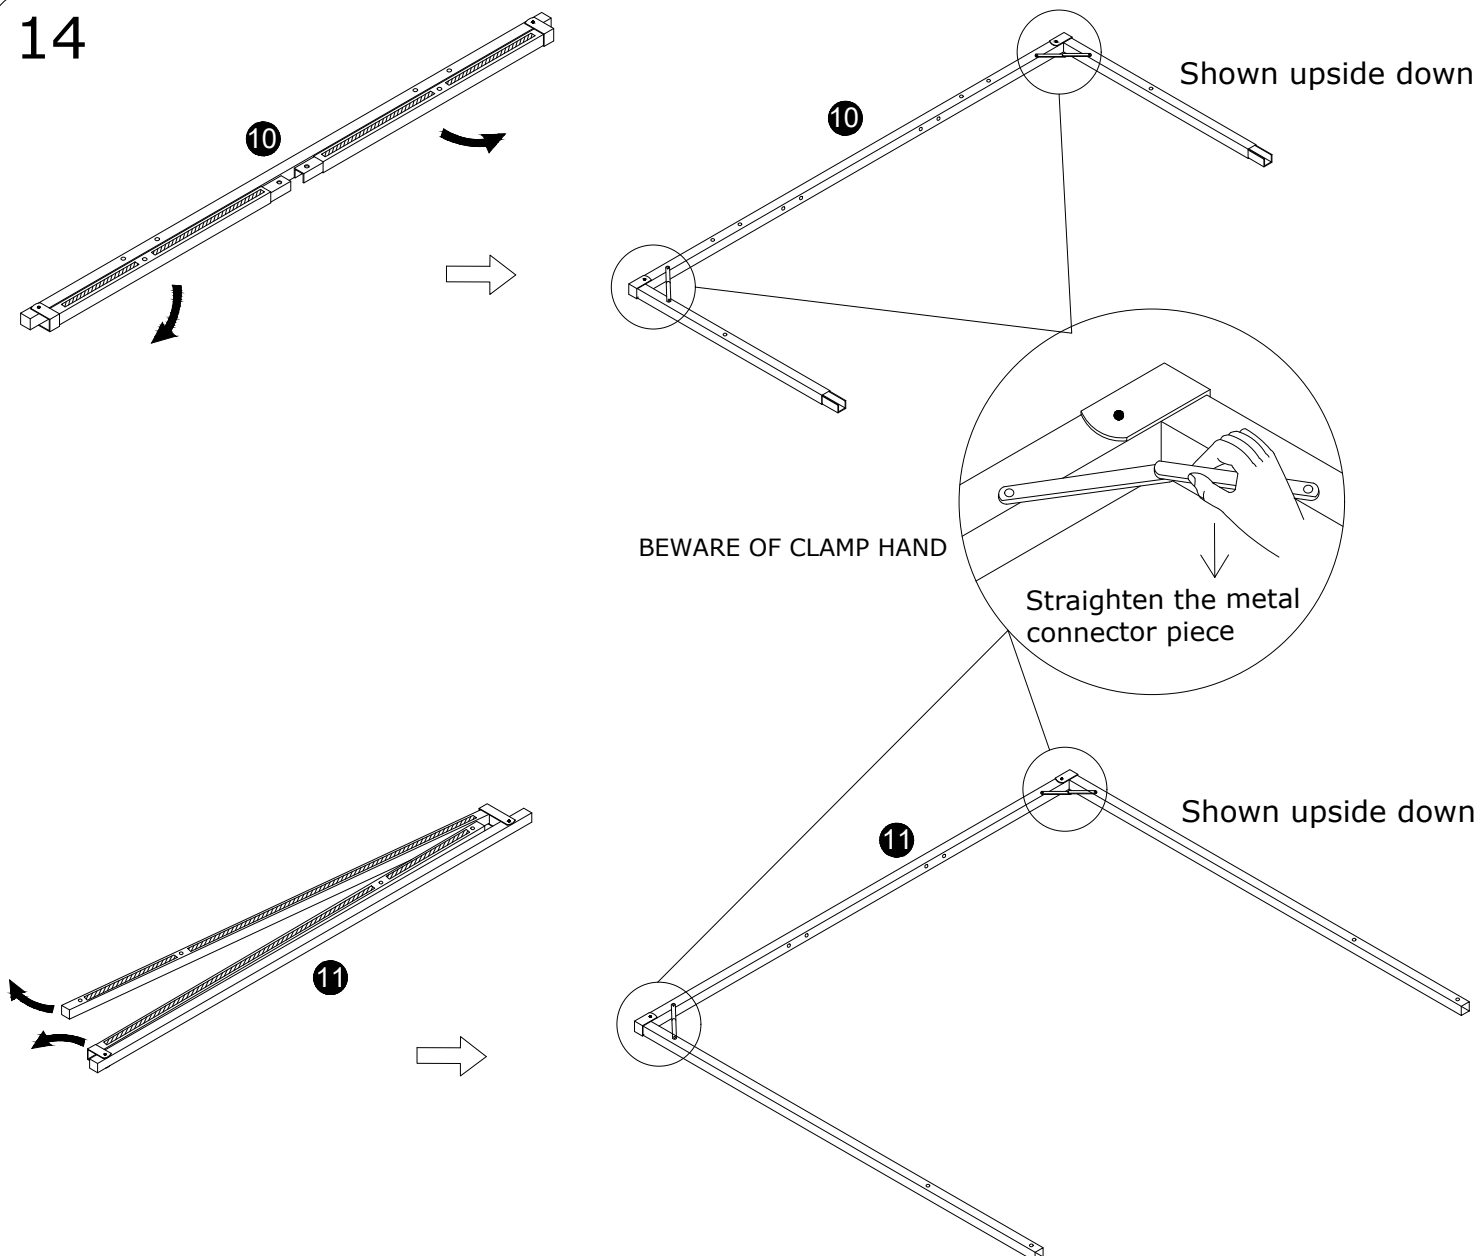


15

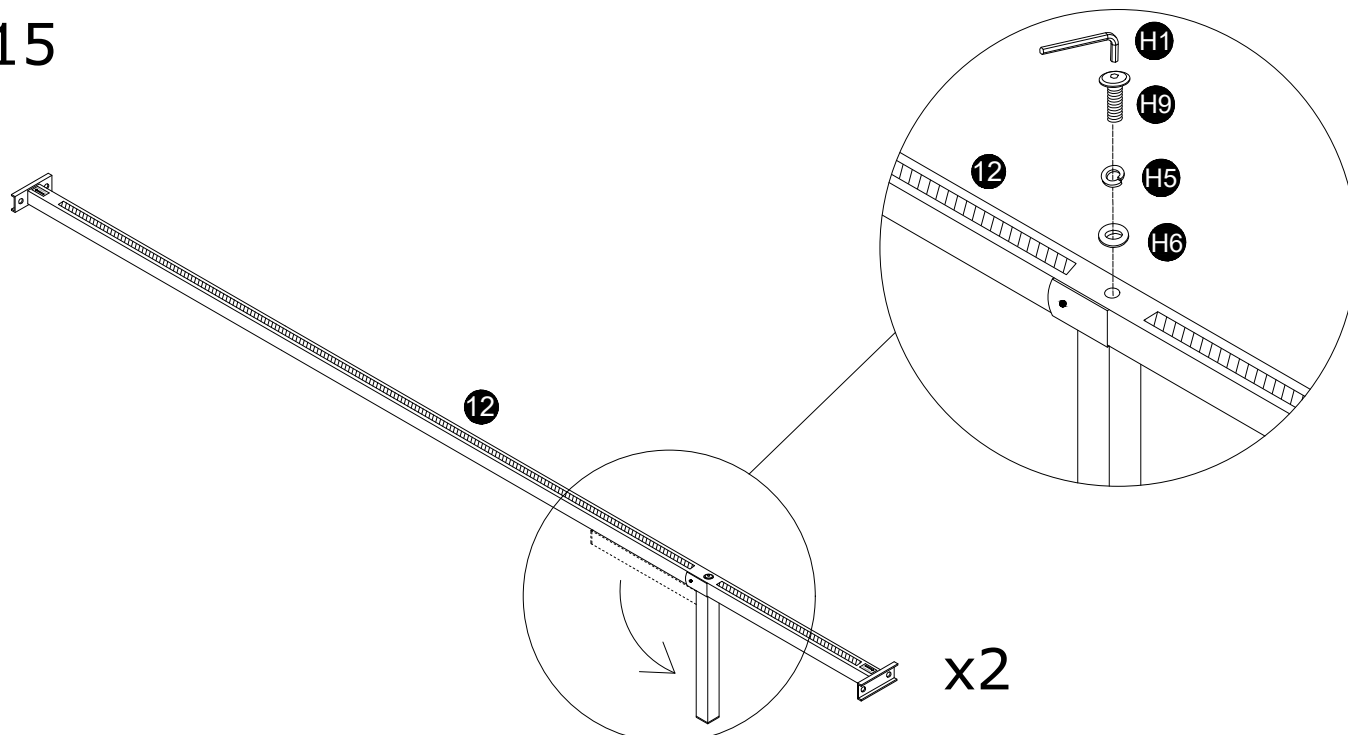

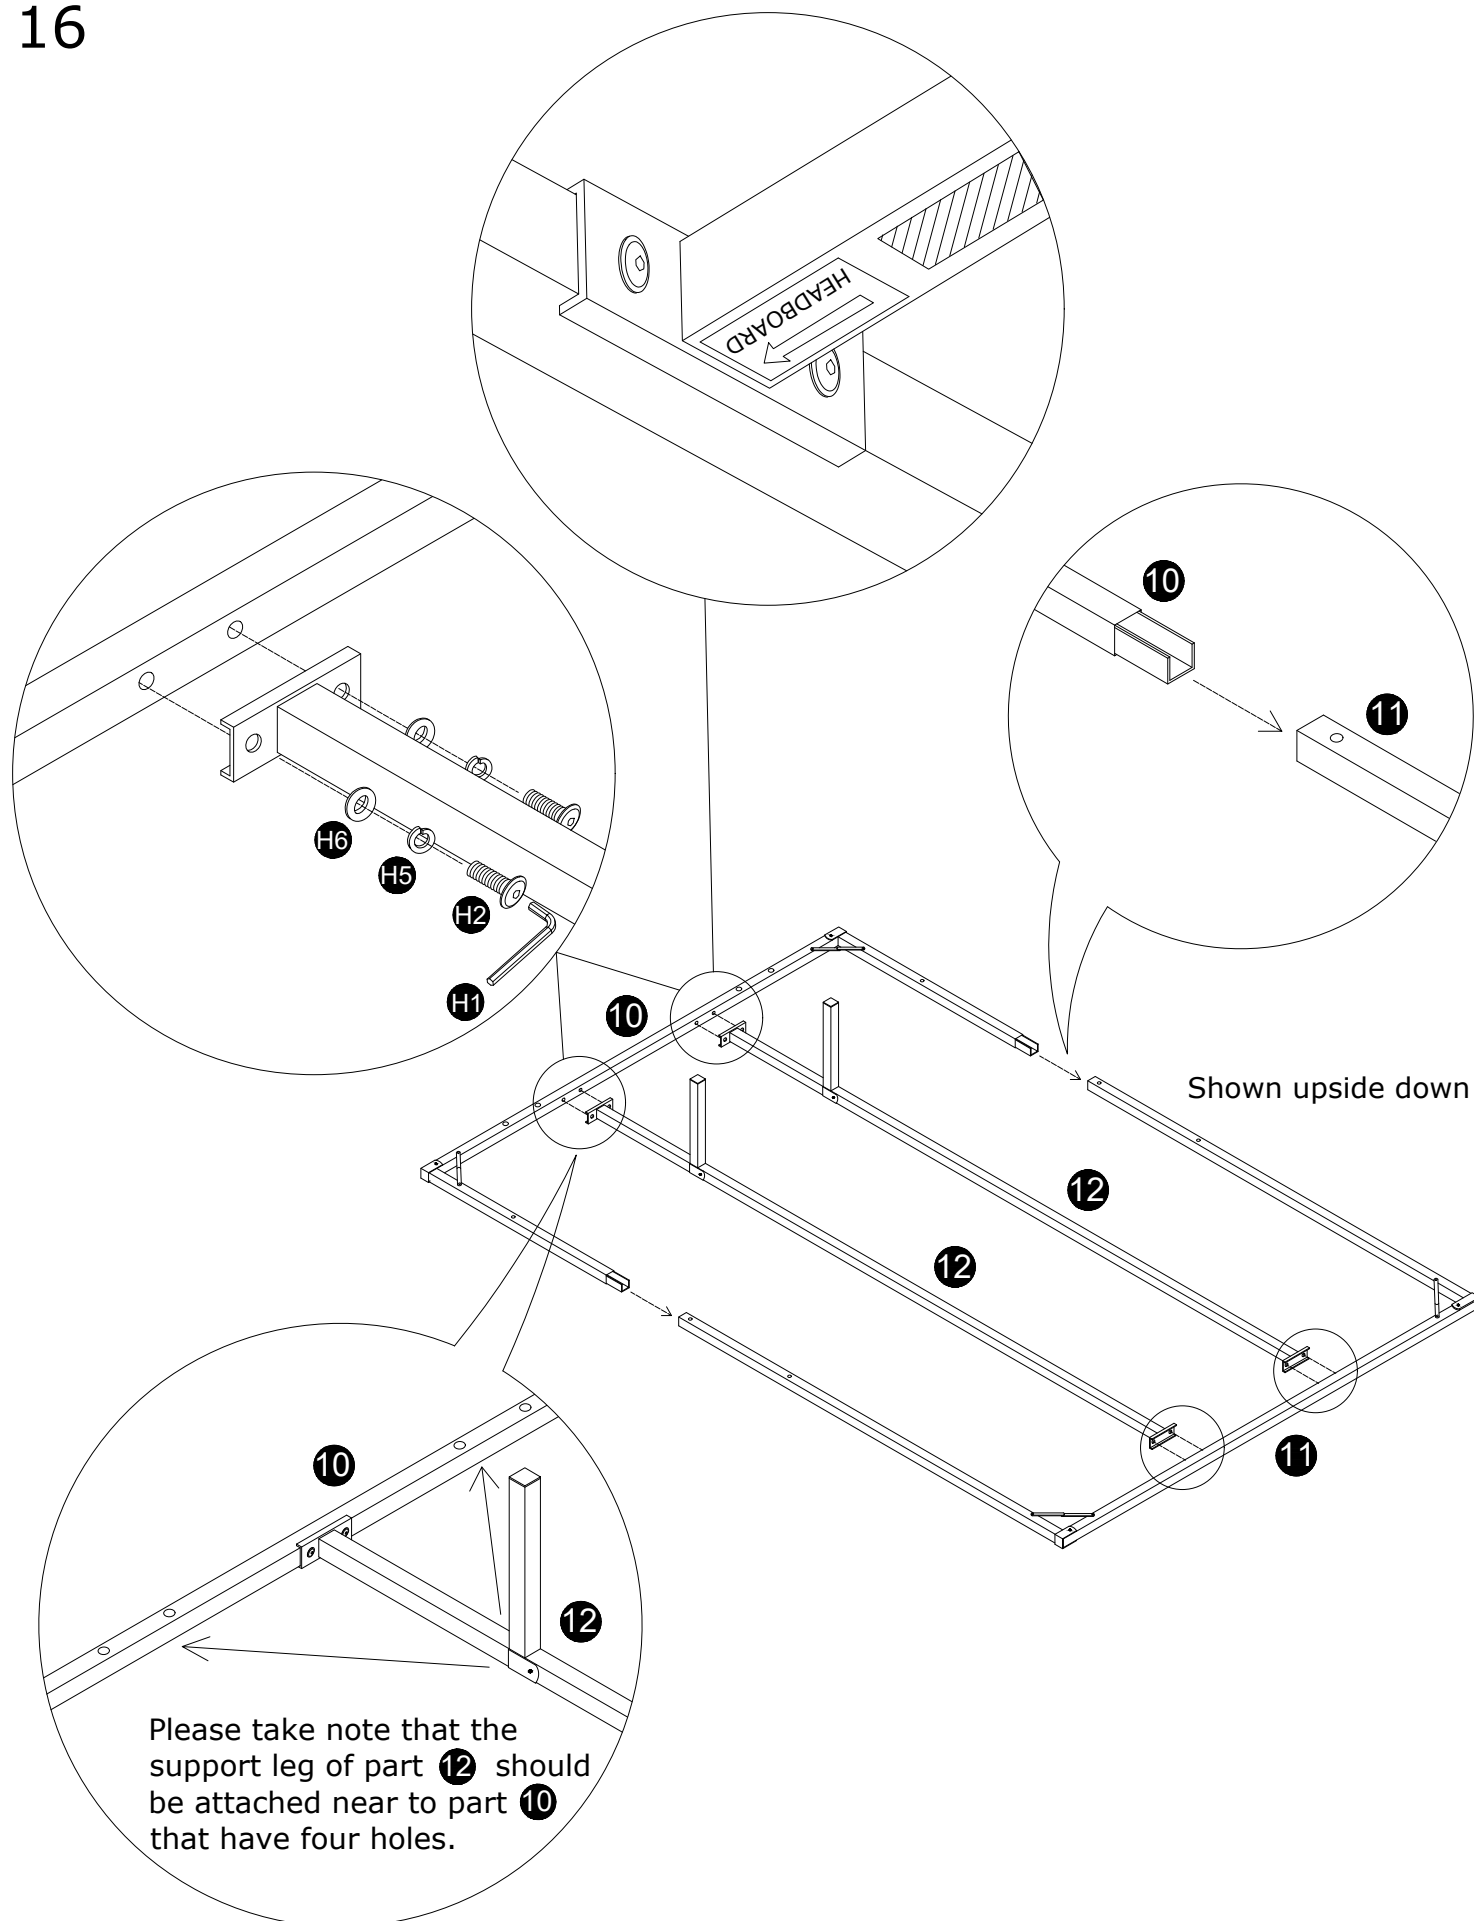


17

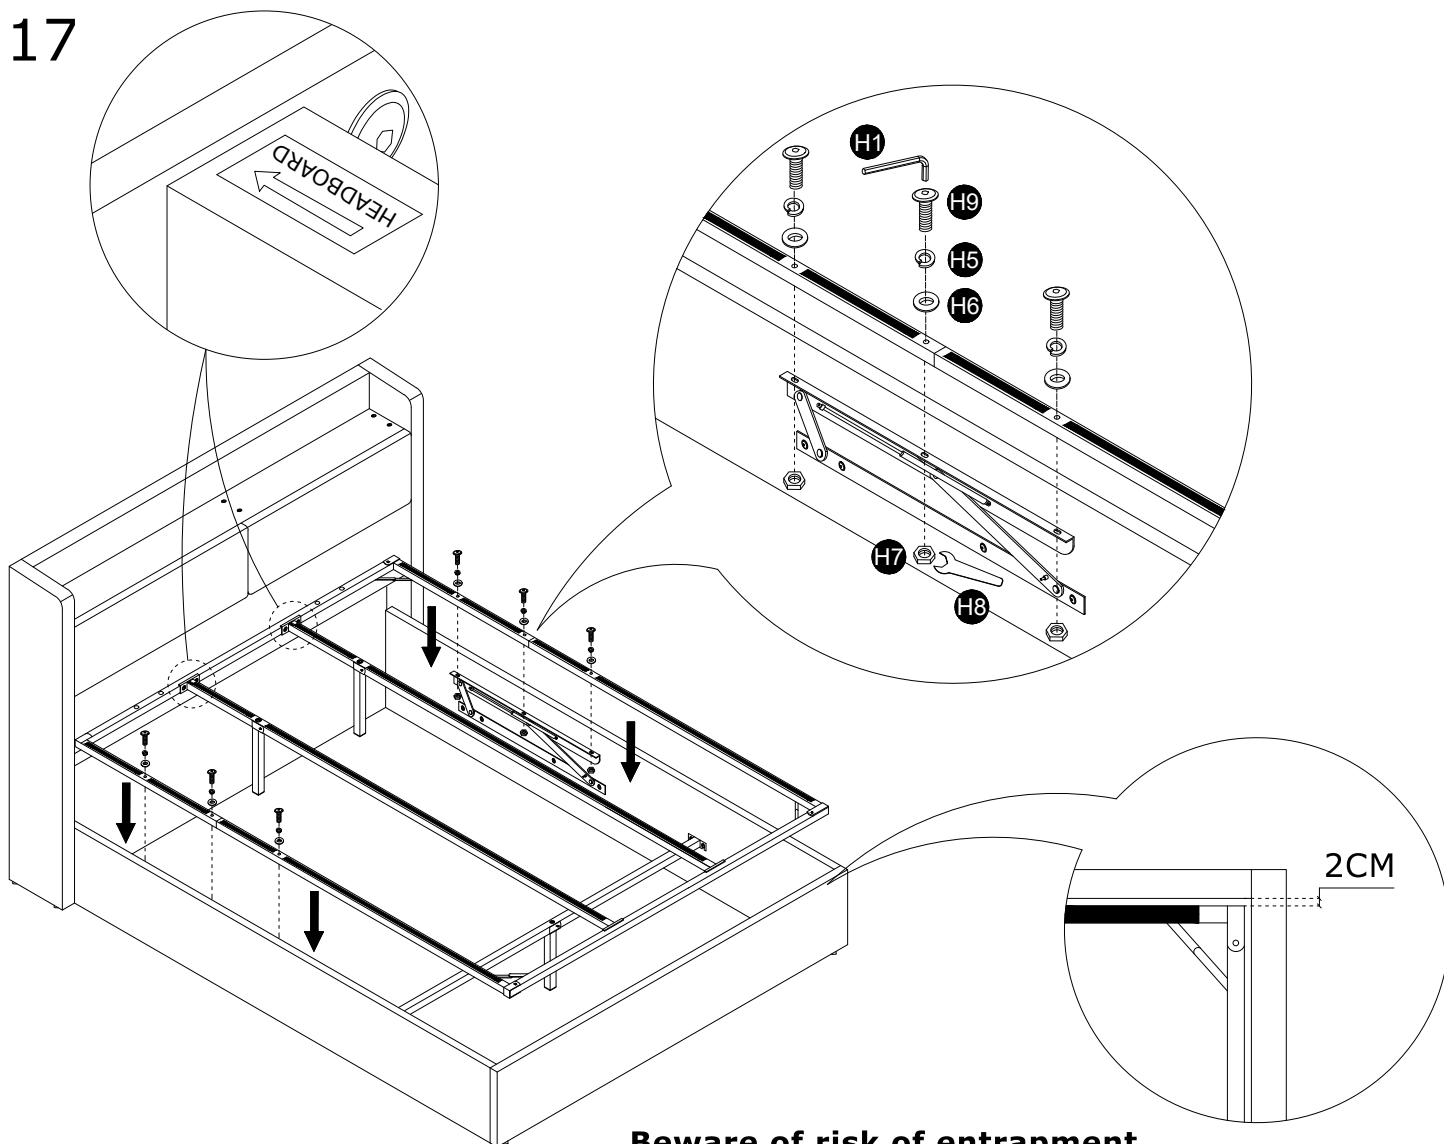


**Beware of risk of entrapment
from folding hinges!**


18

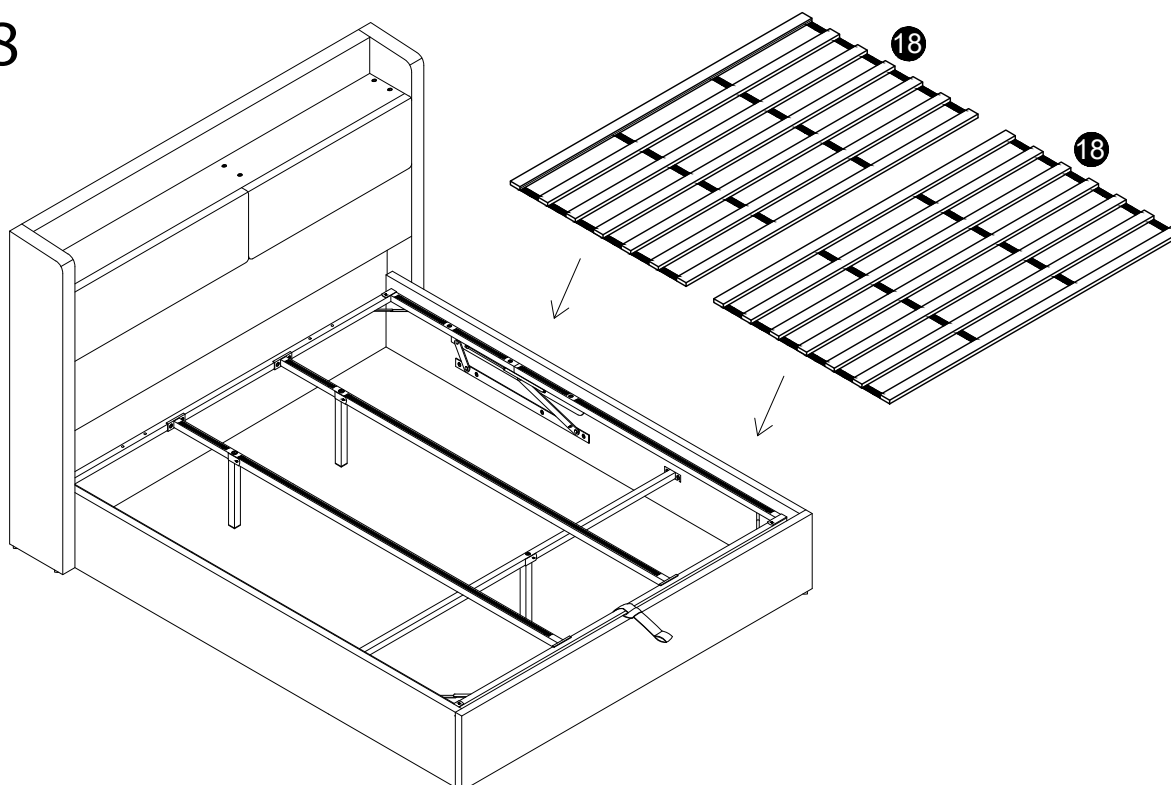


19

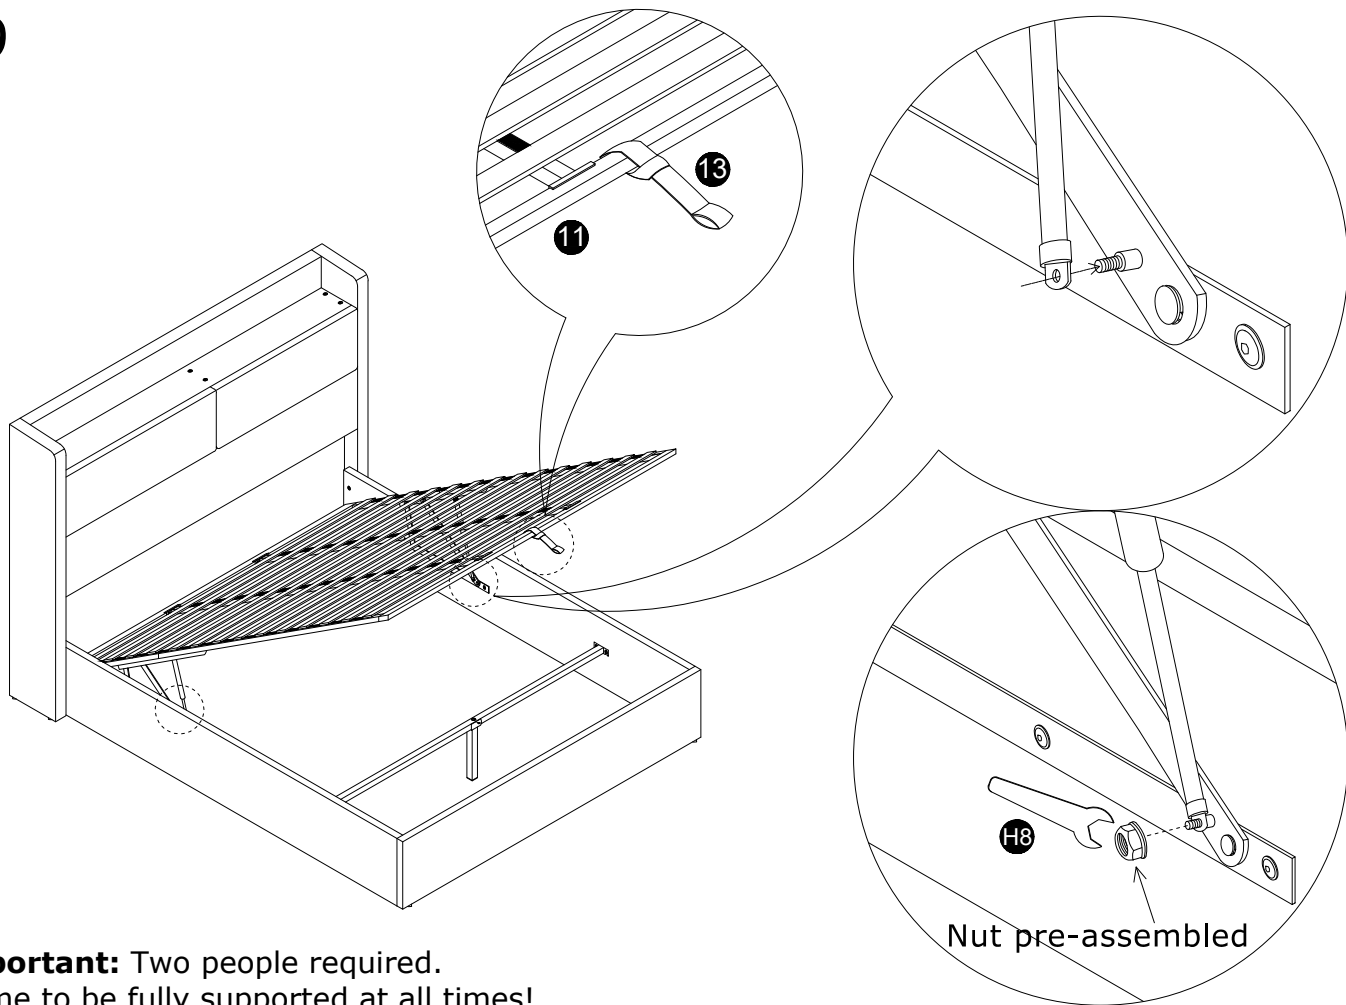

20

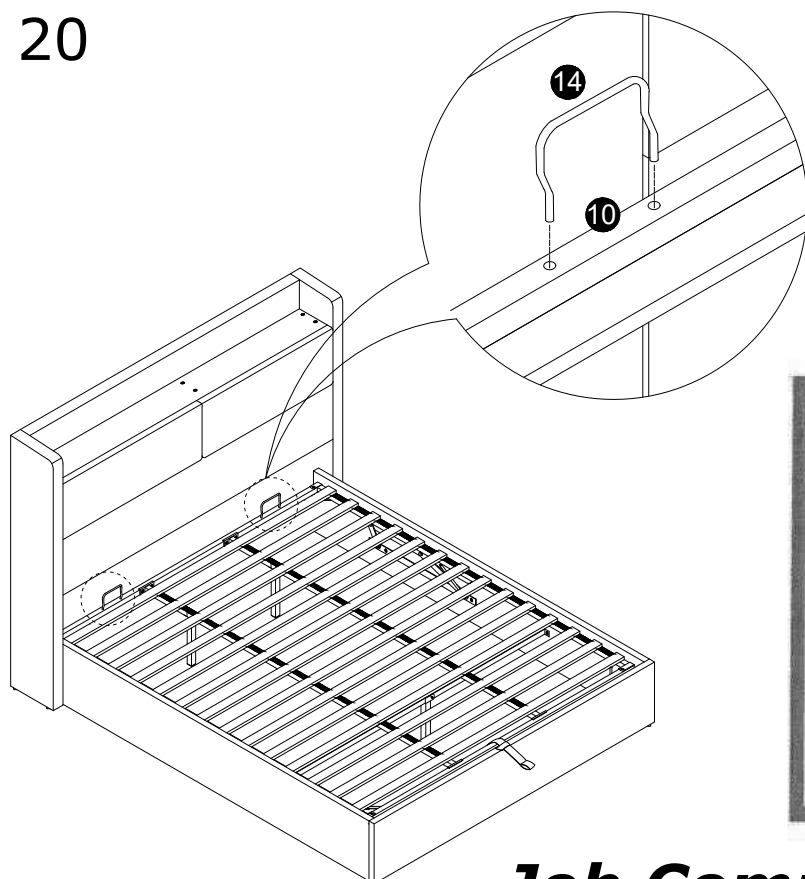

After placing the mattress on frame,
push down the frame with 30lbs force.

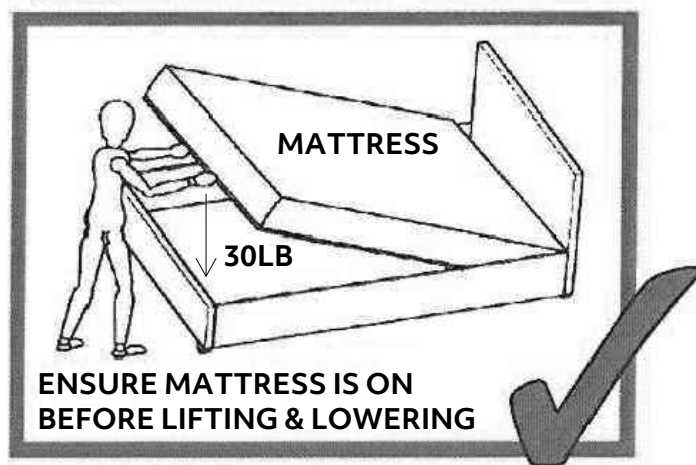

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.