




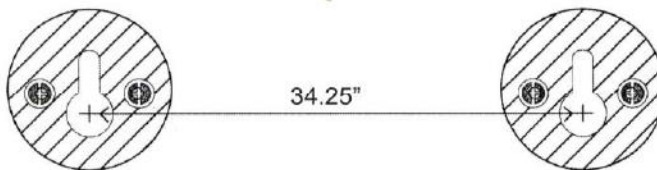
## MOUNTING INSTRUCTION

NO.	DRAWING	DESCRIPTION	QTY.
A		COAT HOOK	1
B		PLASTIC ANCHOR	2
C		SCREW	2

**NOTE:** If possible, we recommend that when mounting the coat hook that at least one screw is secured in to a stud.

### STEP 1

MEASURE THE DISTANCE BETWEEN THE TWO KEY HOLES ON BACK OF SHELF. MARK THE LOCATION ON THE WALL WHERE THE SHELF WILL BE HUNG.




### STEP 2

DRILL A 1/8" PILOT HOLE 3/4" DEEP. THIS WILL MARK THE LOCATION FOR THE SCREW THAT THE COAT HOOK WILL HANG FROM.

### STEP 3


IF HOLE LOCATION IS ALIGNED WITH A STUD IN WALL, SECURE SCREW (C) DIRECTLY IN TO THE STUD.

NOTE : DO NOT DRIVE SCREW ALL THE WAY IN, KEEP HEAD OF SCREW OUT ABOUT 3/8"

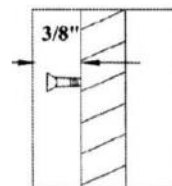

### STEP 4


IF HOLE LOCATION DOES NOT ALIGN WITH THE STUD IN WALL, INSTALL THE PLASTIC ANCHOR (B) BY TAPPING IT IN TO THE PREDRILLED PILOT HOLE IN THE DRYWALL.

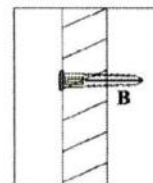

### STEP 5

SECURE SCREWS INTO PLASTIC ANCHOR

NOTE: DO NOT DRIVE SCREW ALL THE WAY IN, HAVE HEAD OF SCREW OUT ABOUT 3/8" .

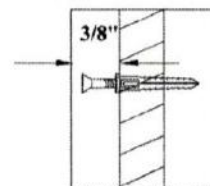

### STEP 6 HANG COAT HOOKS

