

# ASSEMBLY INSTRUCTIONS

**CAUTION:** PLEASE READ ALL INSTRUCTIONS BEFORE STARTING THE ASSEMBLY OF THIS PRODUCT. THESE PIECES ARE HEAVY. IN ORDER TO PREVENT PERSONAL INJURY AND ENSURE THAT THIS PRODUCT IS NOT DAMAGED DURING THE ASSEMBLY PROCESS, IT IS STRONGLY RECOMMENDED THAT YOU ENLIST THE ASSISTANCE OF ONE OR MORE PEOPLE.

**ATTENTION:** VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE COMMENCER L'ASSEMBLAGE DE CE PRODUIT, LES PIÈCES SONT LOURDES. POUR ÉVITER TOUTE BLESSURE ET POUR VOUS ASSURER QUE LE PRODUIT N'EST PAS ENDOMMAGÉ PENDANT L'ASSEMBLAGE, NOUS VOUS RECOMMANDONS DE FAIRE APPEL À UNE OU PLUSIEURS AUTRES PERSONNES.


**CUIDADO:** FAVOR DE LEER TODAS LAS INSTRUCCIONES ANTES DE ENSAMBLAR SU PRODUCTO. ESTAS PIEZAS SON PESADAS. PARA PREVENIR HERIDAS PERSONALES Y ASEGURAR QUE SU PRODUCTO NO SEA DAÑADO MIENTRAS ES ENSAMBLADO, SE RECOMIENDA LA ASISTENCIA DE UNA O MÁS PERSONAS.

**WARNING:**.....PROTECTIVE GLIDE IS PLACED UNDER LEGS OF FURNITURE TO RESIST SCRATCHES TO FLOOR SURFACE. SOME FLOOR SURFACES CAN BE EXTRA SENSITIVE TO MARKING. IF YOU ARE NOT SURE CONSULT WITH YOUR DEALER.

**AVERTISSEMENT** ...LES PIEDS DES MEUBLES SONT MUNIS DE PATINS DESTINÉS À PROTÉGER LE PLANCHER.

CERTAINS REVÊTEMENTS DE SOL PEUVENT ÊTRE TRÈS FRAGILES. EN CAS DE DOUTE, CONSULTER LE MARCHAND

**Important:** Tighten firm but do not over tighten

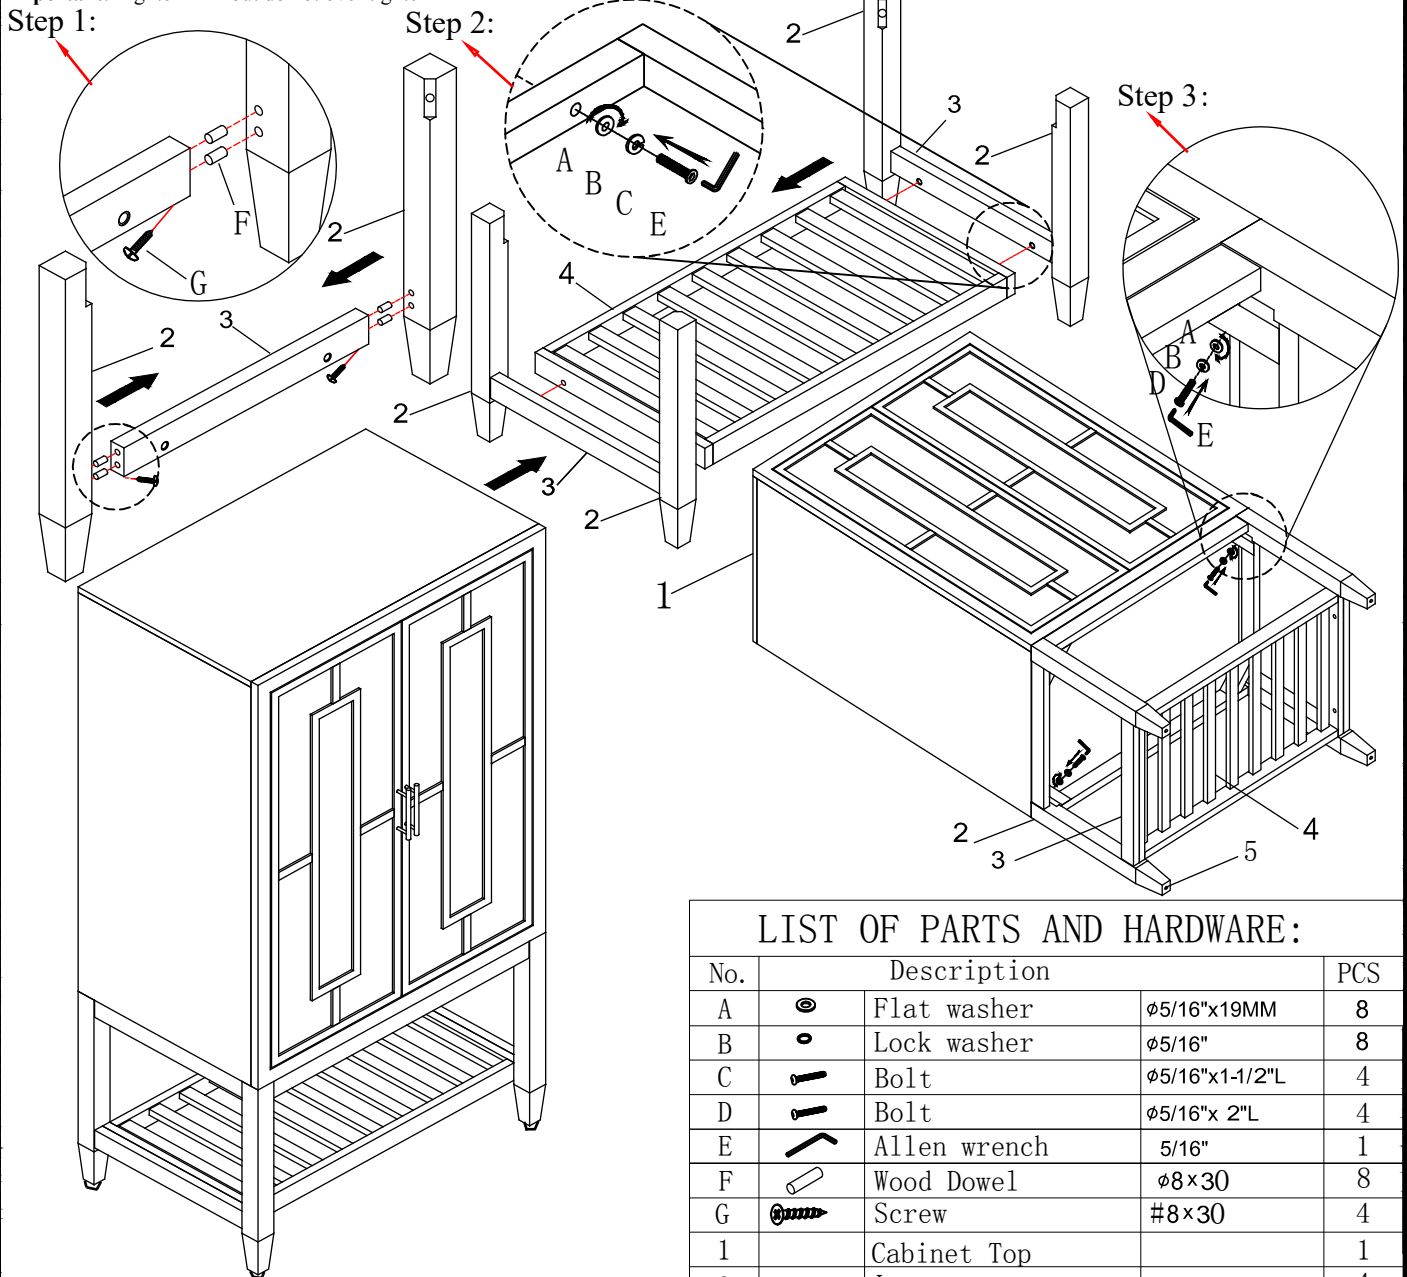

## LIST OF PARTS AND HARDWARE:

No.	Description	PCS
A	Flat washer φ5/16"x19MM	8
B	Lock washer φ5/16"	8
C	Bolt φ5/16"x1-1/2"L	4
D	Bolt φ5/16"x 2"L	4
E	Allen wrench 5/16"	1
F	Wood Dowel φ8x30	8
G	Screw #8x30	4
1	Cabinet Top	1
2	Legs	4
3	Stretcher	2
4	Bottom Shelf	1
5	Levelers	4
6	Door Pull	2

# ASSEMBLY INSTRUCTIONS

1. REMOVE ALL PARTS FROM CARTON AND SEPARATE THEM INTO PART NUMBER GROUPS AS INDICATED ON THE PARTS LIST. WHEN ORDERING ADDITIONAL PARTS, INDICATE MANUFACTURER'S REPLACEMENT PART NUMBER (MRP#) AS WELL AS PART NAME.
2. ASSEMBLE SIDE STRETCHERS (3) TO LEGS (2) AS *STEP 1* SHOWS USING WOOD DOWELS (F) AND SCREWS (G).
3. ASSEMBLE SIDE FRAMES(2&3) TO BOTTOM SHELF (4) AS *STEP 2* SHOWS USING BOLTS (C), FLAT WASHERS (A), LOCK WASHERS AND ALLEN WRENCH (E).
4. ATTACH THE ASSEMBLED SIDE FRAME AND BOTTOM SHELF TO THE CABINET TOP (1) USING BOLTS (D), FLAT WASHERS (A), LOCK WASHERS (B) AND ALLEN WRENCH (E).
5. FULLY TIGHTEN ALL BOLTS NOW.
6. SET THE CABINET UPRIGHT, LEVEL THE CABINET IF NECESSARY.

ASSEMBLY IS COMPLETE NOW.

***THANK YOU FOR YOUR PURCHASE!***