



INSTRUCTION

Upholstered Platform Bed

Caution: Read owner's manual completely before assembly and use.




Product code: U059-030-100/U059-050-100/U059-060-100/U059-030-200/U059-050-200/U059-060-200

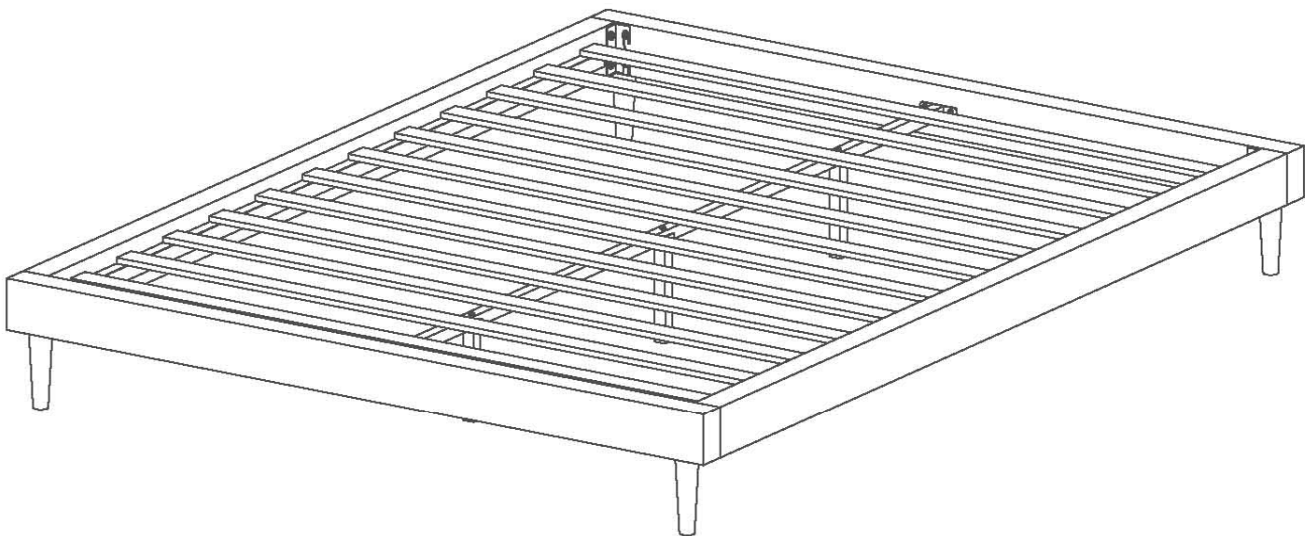

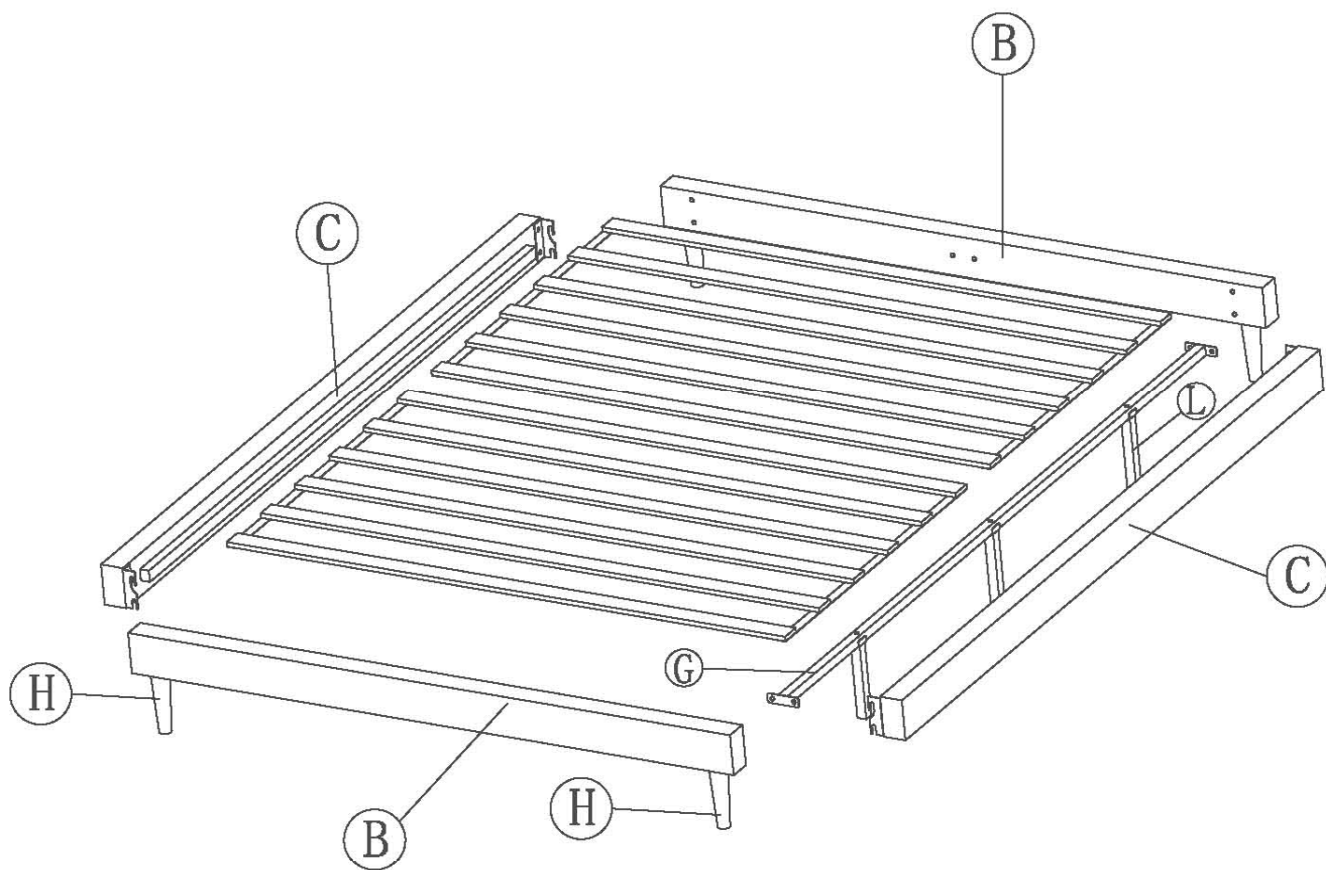

Parts list
Check all parts before assembly

Parts:

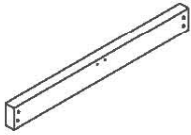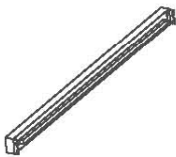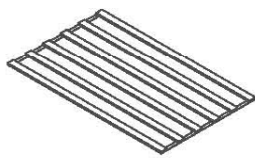
B: <u>Footboard</u>  X2	C: <u>Side Rail</u>  X2	E: <u>Slats</u>  X2	H: <u>Wood Leg</u>  X4
L: <u>Reinforcement metal Leg</u>  X3	G: <u>Middle metal Support</u>  X1		

Hardware :


1. <u>Bolt</u>  M8x25 X12	2. <u>Bolt</u>  M8x35 X3	3. <u>Allen Key</u>  35*70*M5 X1
---	--	---

Step1


NOTE: Please do not completely tighten the screws until the entire assembly is completed!

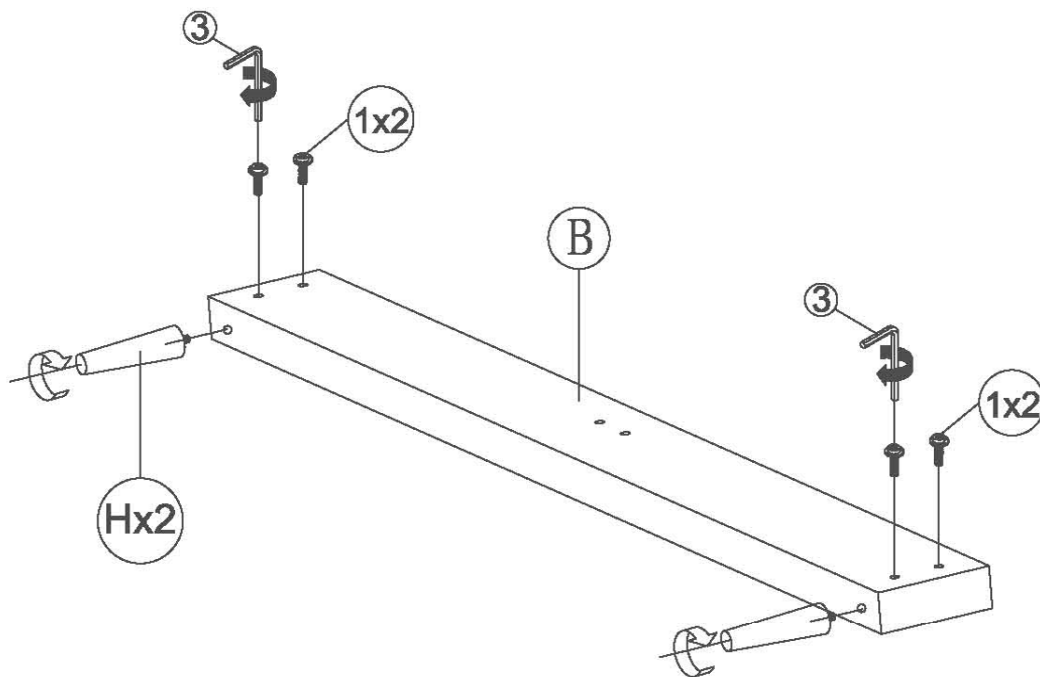


Step2

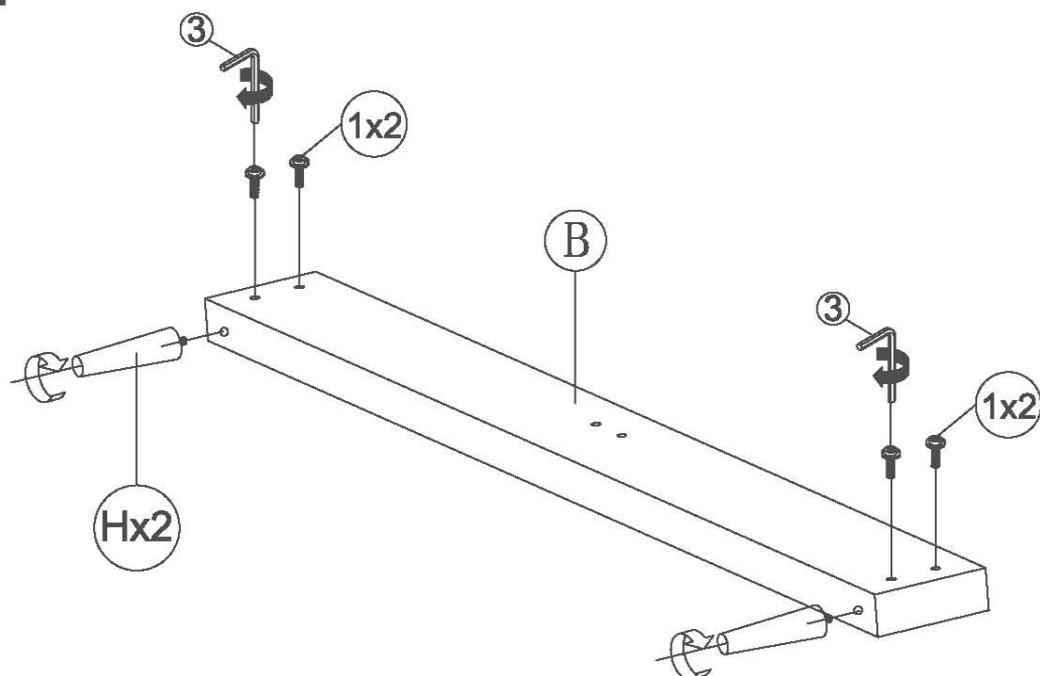


Step3

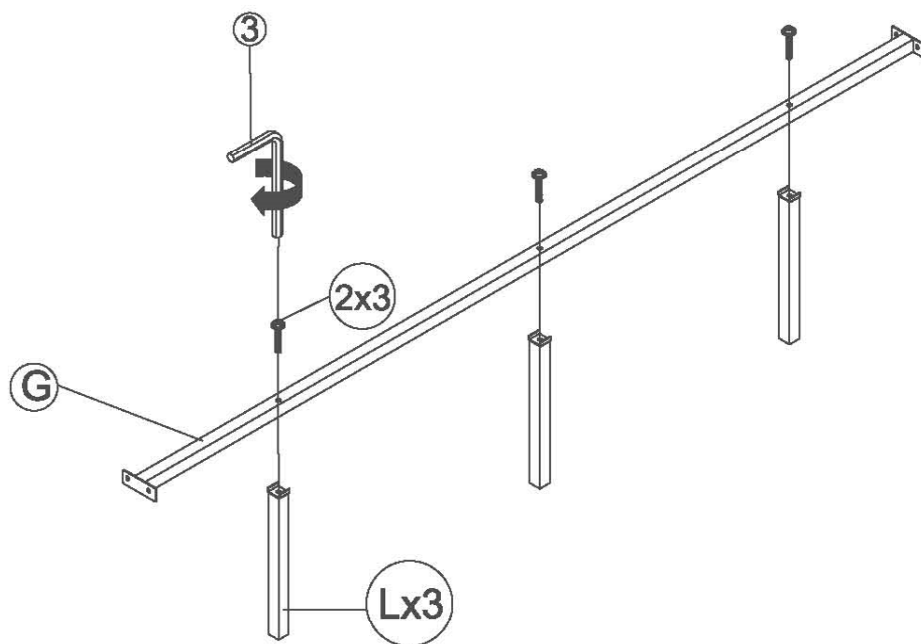


Step4

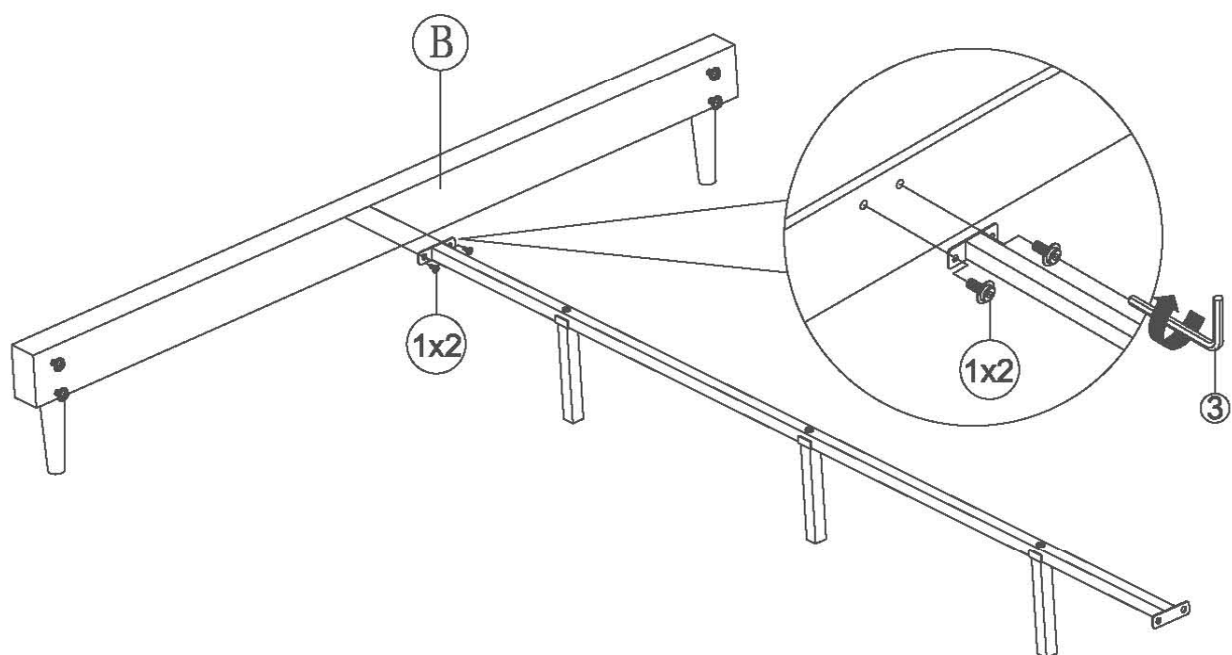

Step5

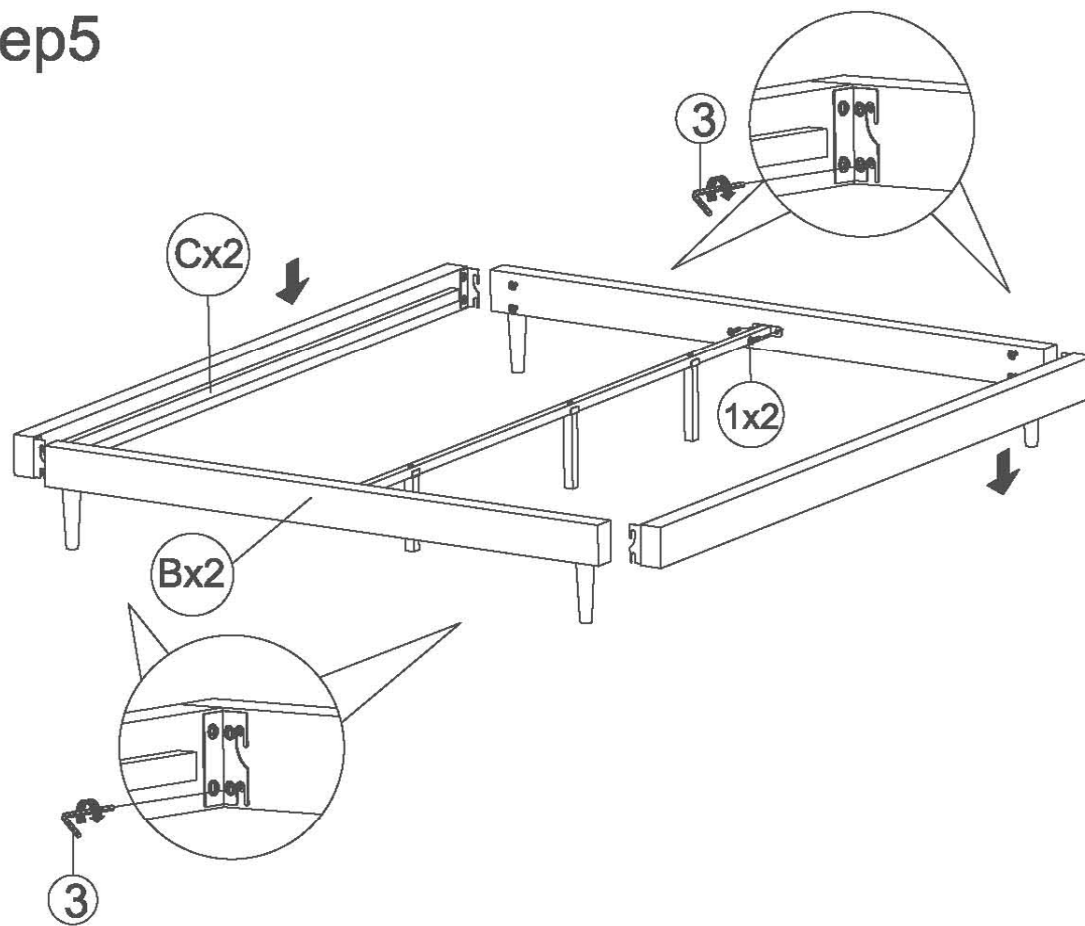

Step6

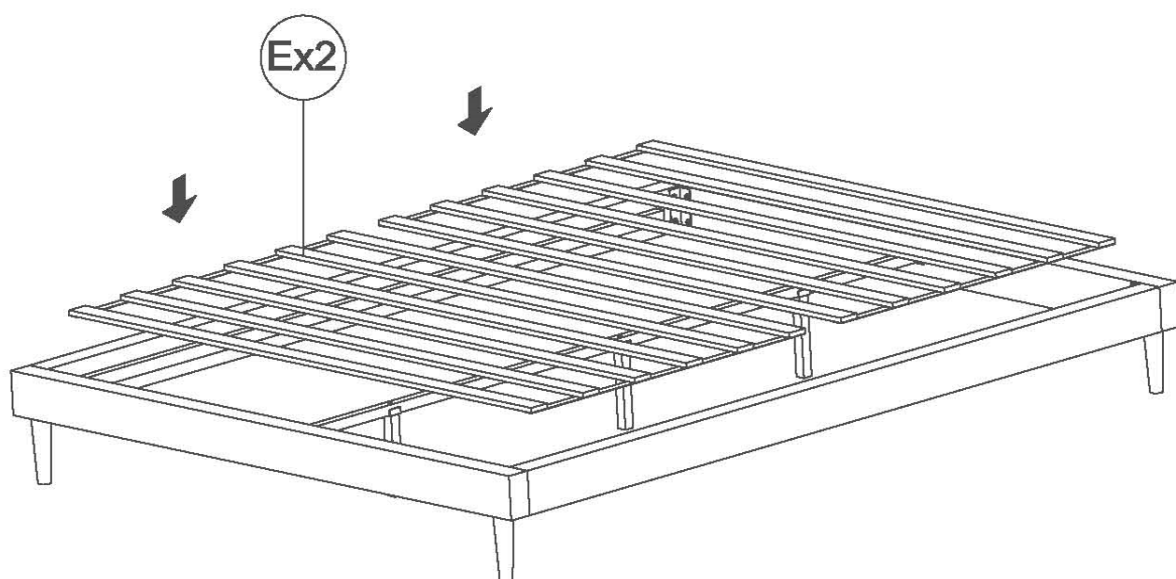

Assembly finished

Warning!

When the assembly bed needs to move, it can't be directly pushed and pulled. First of all, the foot of the bed should be lifted off the ground and then moved. Otherwise, the support rod in the middle of the bed can be crooked or broken.

