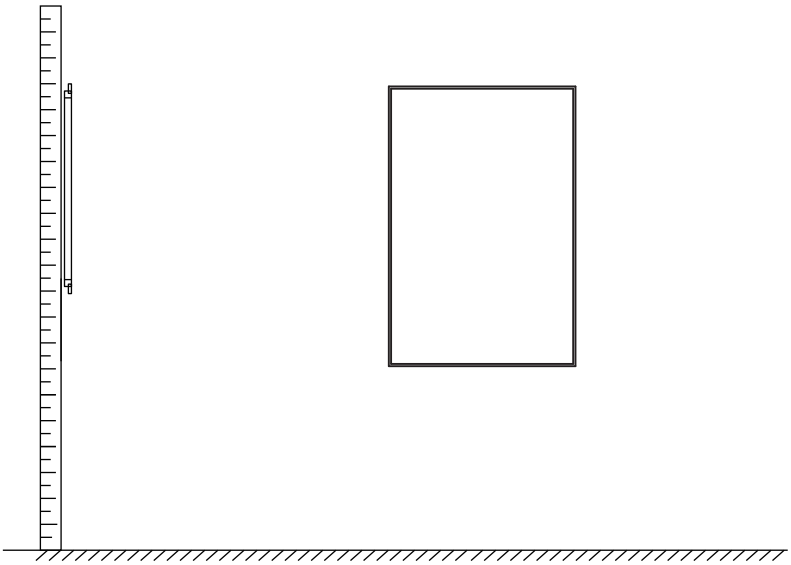
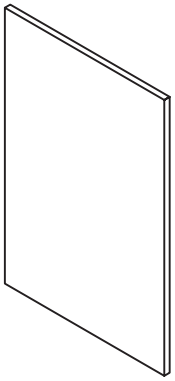
WYNDHAM
COLLECTION





- Prior to installation please check received items against the “Packing List”. Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

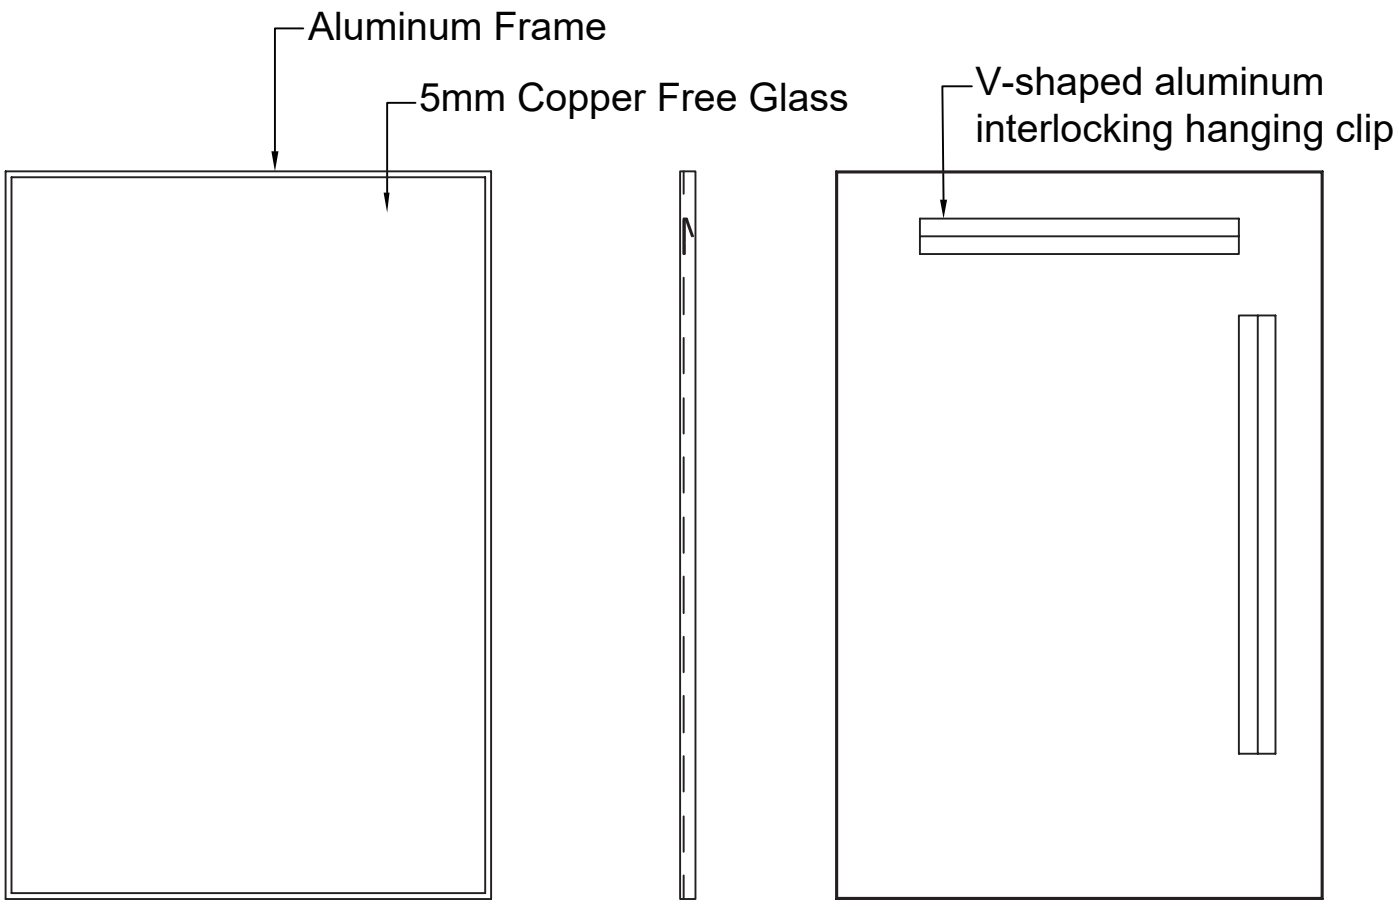
BEFORE YOU BEGIN INSTALLATION

Please review the instructions below carefully before starting the installation process. Keep this guide in a safe place for future reference.

- Inspect the package contents prior to installation and before discarding any packaging.
- Keep the plastic corner protectors in place until installation is fully complete.
- Do NOT strike the mirror glass with hard or pointed items.
- It is recommended to use a soft, dry, non-abrasive cloth to clean the mirror.
- Do NOT use cleaning agents or abrasive materials to clean the mirror.

WC-SQ01-M3436-MB
WC-SQ01-M3436-BG
WC-SQ01-M3436-BN
Installation Guide

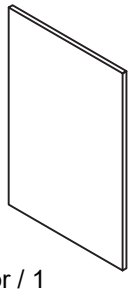
WYNDHAM
COLLECTION

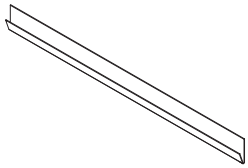



WC-SQ01-M3436-MB
WC-SQ01-M3436-BG
WC-SQ01-M3436-BN
Installation Guide

WYNDHAM
COLLECTION

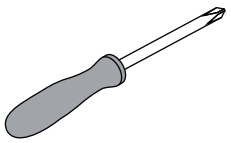
PACKING LIST
(Not all components may be included, depending on your purchase)

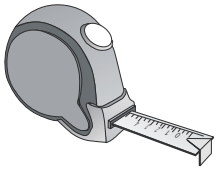

Mirror / 1

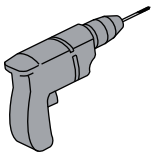

Aluminum hanging bracket / 1



Screws / 3

REQUIRED TOOLS NOT IN BOX


Phillips screwdriver


Tape measure

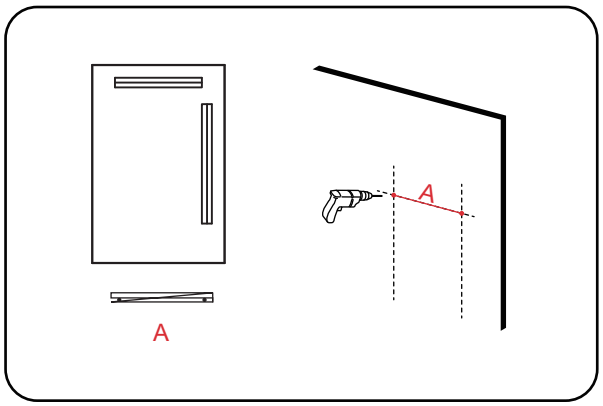

Electric drill


Hammer

WC-SQ01-M3436-MB
WC-SQ01-M3436-BG
WC-SQ01-M3436-BN
Installation Guide

WYNDHAM
COLLECTION

INSTALLATION INSTRUCTIONS



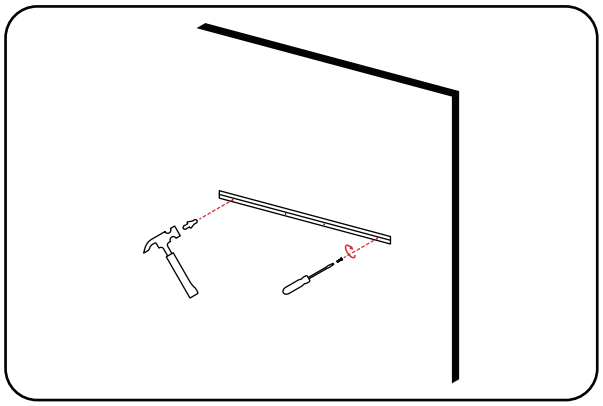
① **Select Mounting Location**

Choose a suitable location for the mirror.

The mounting bracket must be secured to a wall stud for proper support.

Measure distance "A" (as indicated in the diagram), and mark the positions for drilling.

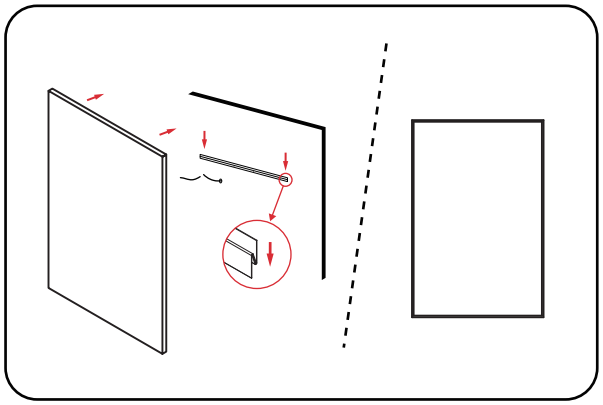
Drill holes at the marked points using an appropriate tool.



② **Step 2: Install Wall Plugs & Mounting Bracket**

Insert the supplied wall plugs into the drilled holes.

Fasten the mounting bracket securely to the wall using the provided screws.



③ **Step 4: Final Assembly**

Carefully hang the mirror on the mounted bracket.

Peel off the protective film from the mirror surface.

Clean the mirror using a soft, dry, non-abrasive cloth.

WC-SQ01-M3436-MB
WC-SQ01-M3436-BG
WC-SQ01-M3436-BN
Installation Guide