


Dune Floor Lamp

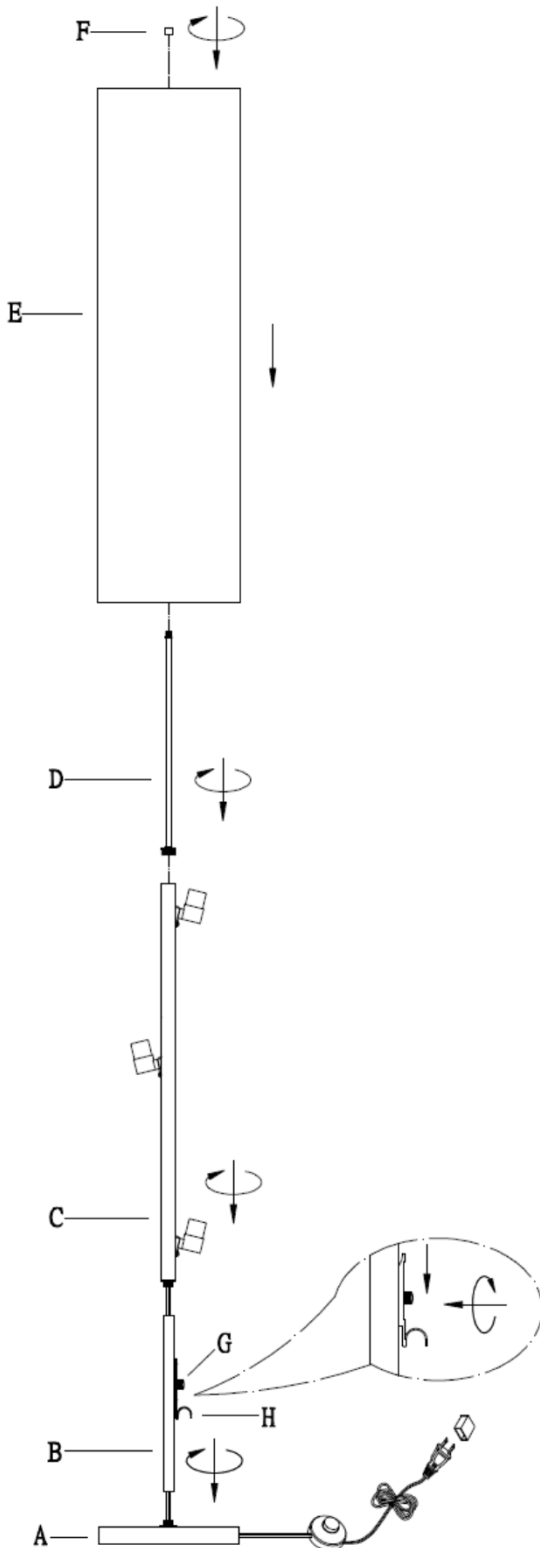

1. Screw the pole (B) onto base (A) clockwise until tight, and screw poles (B), (C), and (D) together. You may need to pull any excess cord gently through the poles so that these two parts fit.
2. Screw in light bulbs before applying shade(E).
3. Unscrew pre-assembled finial (F) from upper lamp pole (D).
4. Put shade (E) onto the upper lamp pole (D), screw on finial (F) until tight.
5. Tighten the metal buckle (H) onto pole(C) with screw (G). Use metal metal buckle (H) to secure the shade (F) to the pole.

GENERAL PRODUCT INFORMATION:

This product is suitable
for dry locations only.



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: Use only with maximum of 3*60 watt incandescent bulbs (bulbs not included).

PARTS DIAGRAM

- (1) * finial (F) 1* metal buckle (H)