

PICKENS

WALL-TO-FLOOR GRAB BAR

SKU: 920110

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures. Signature Hardware accepts no liability for any damage to the floor, walls or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the product for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- In order to support the maximum weight limit, grab bars must be anchored to solid wood blocking installed between wall studs. We recommend consulting a professional if you are unfamiliar with this type of installation.

TOOLS AND MATERIALS:



Stud Finder



Pencil



Level



Drill



Masking Tape



Screwdriver

For Warranty information, please visit: signaturehardware.com/services/warranty

REVISED 01/31/2020
CODES: 320413, 327001

PICKENS


WALL-TO-FLOOR GRAB BAR

SKU: 920110

INSTALLATION

1. Assemble grab bar, slide or unthread the decorative escutcheons to expose the wall and floor flange.

2. Determine the installation location and mark the location of the mounting holes using the wall and floor flanges as template. Use a level to verify that your grab bar is properly aligned.

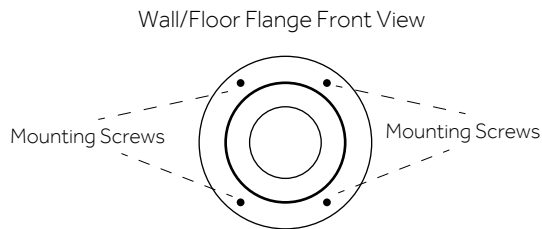


3. Drill mounting holes using the appropriate drill bit for the wall/floor surface or material.

Tip: Place masking tape in the installation location when marking the mounting holes to see the outline clearly and keep your drill from damaging the mounting surface.

4. Remove masking tape from the installation location if applicable.

5. Attach the grab bar to the wall with the mounting screws provided. Slide or thread the decorative escutcheon over the wall flange and press firmly in place to complete installation.

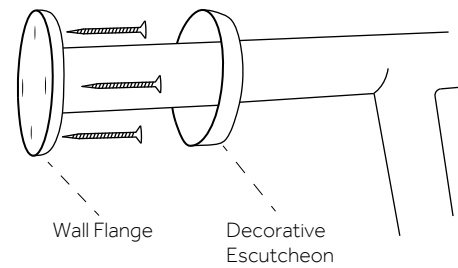

6. Attach the grab bar to the floor with the mounting screws provided. Slide or thread the decorative escutcheons over the floor flanges and press firmly in place to complete installation.

