
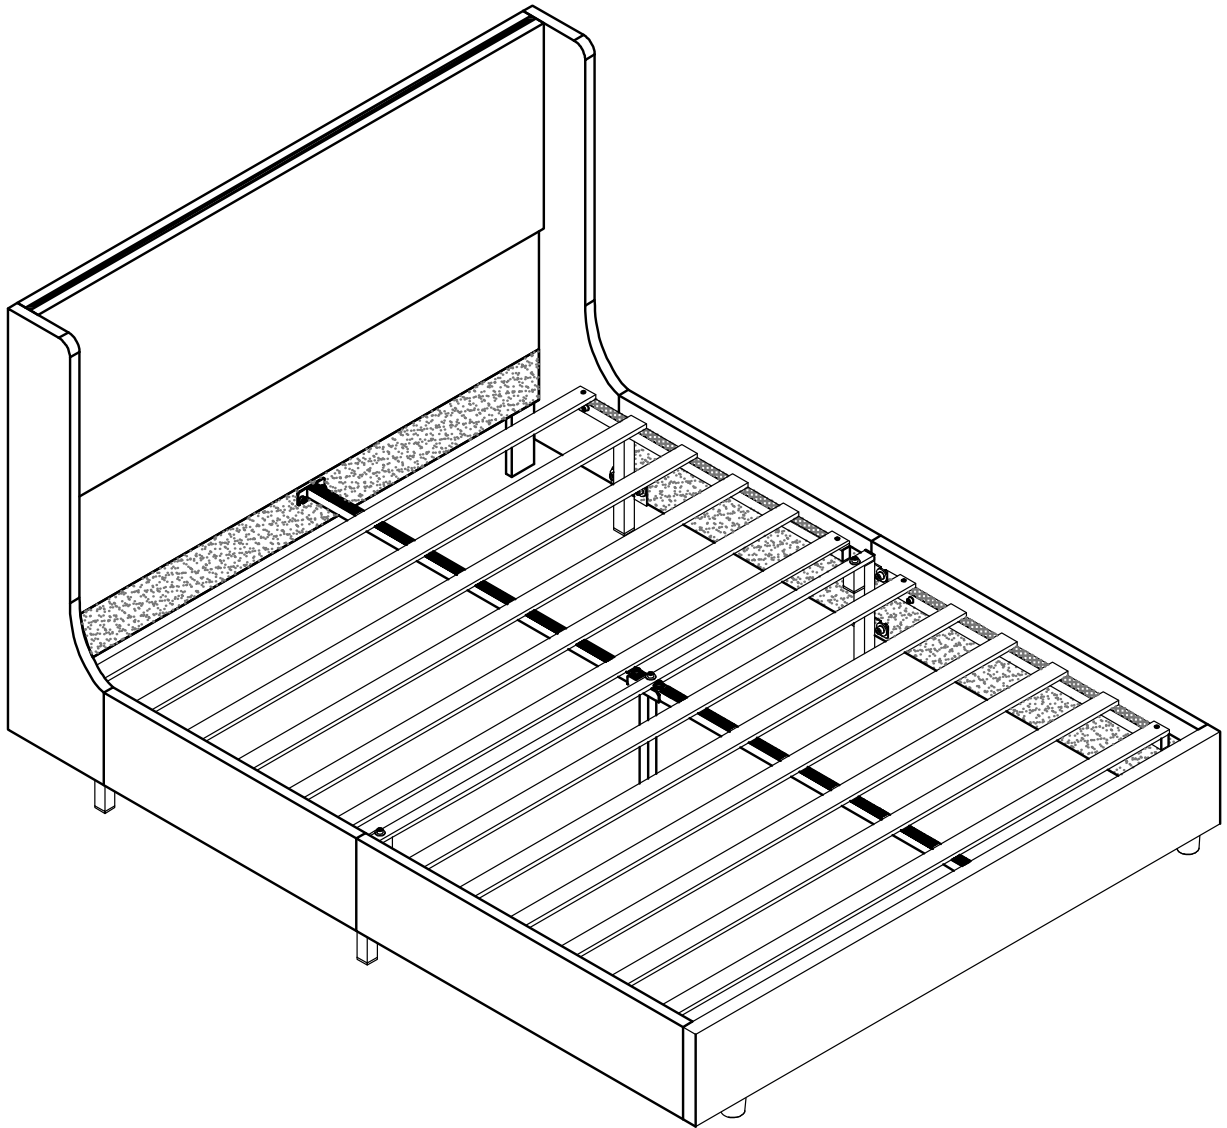
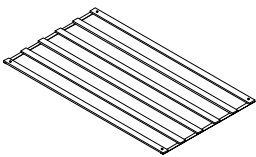
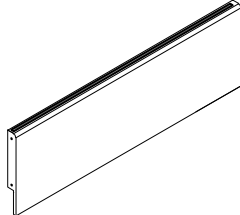
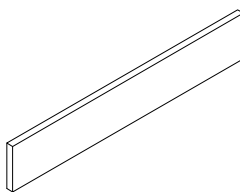
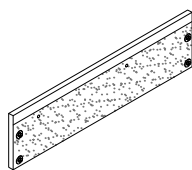
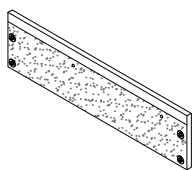
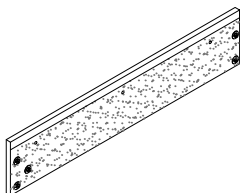
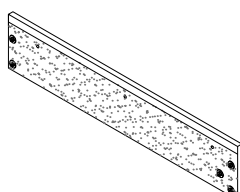
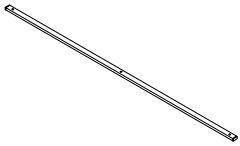
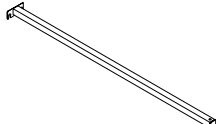

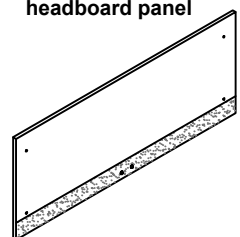








Team Assembly Recommended Bed Frame




Parts List(EN) / Teile Liste(DE)

B slat  2PCS	C headboard  1PC	D support leg  1PC	D1 support leg  1PC
E footboard  1PC	F1 side rail  1PC	F2 side rail  1PC	F3 side rail  1PC
F4 side rail  1PC	G The brace  1PC	H Back Middle cross beam  2PCS	R1 wing back  1PC
R2 wing back  1PC	Y Under-bed headboard panel  1PC	Z support wood  4PCS	

Parts List(EN) / Teile Liste(DE)


I  3PCS	J  1PCS	K  2PCS	K1  2PCS
M  2PCS	N  M8*38MM 29+1PCS	O  M3.5*25MM 8+1PCS	P  M8 Spanner 1PC
P1  Small 29+1PCS	W  2PCS	W1  WITHOUT BATTERY 1PC	X1  1PC

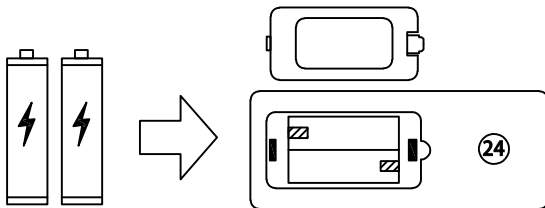


Before using the remote control, please install two AAA batteries (Not provided)

Assembly Steps(EN) / Montageschritte(DE)

STEP 1

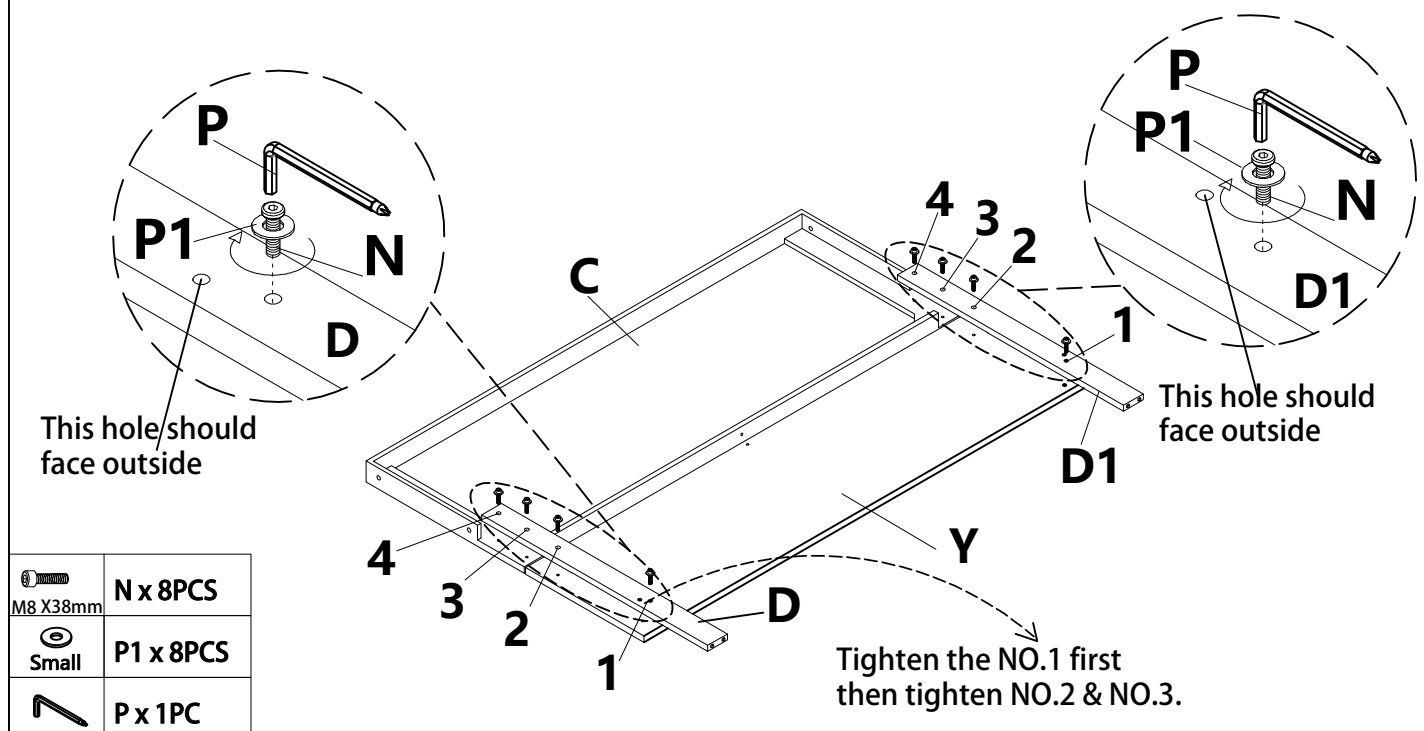


STEP 2

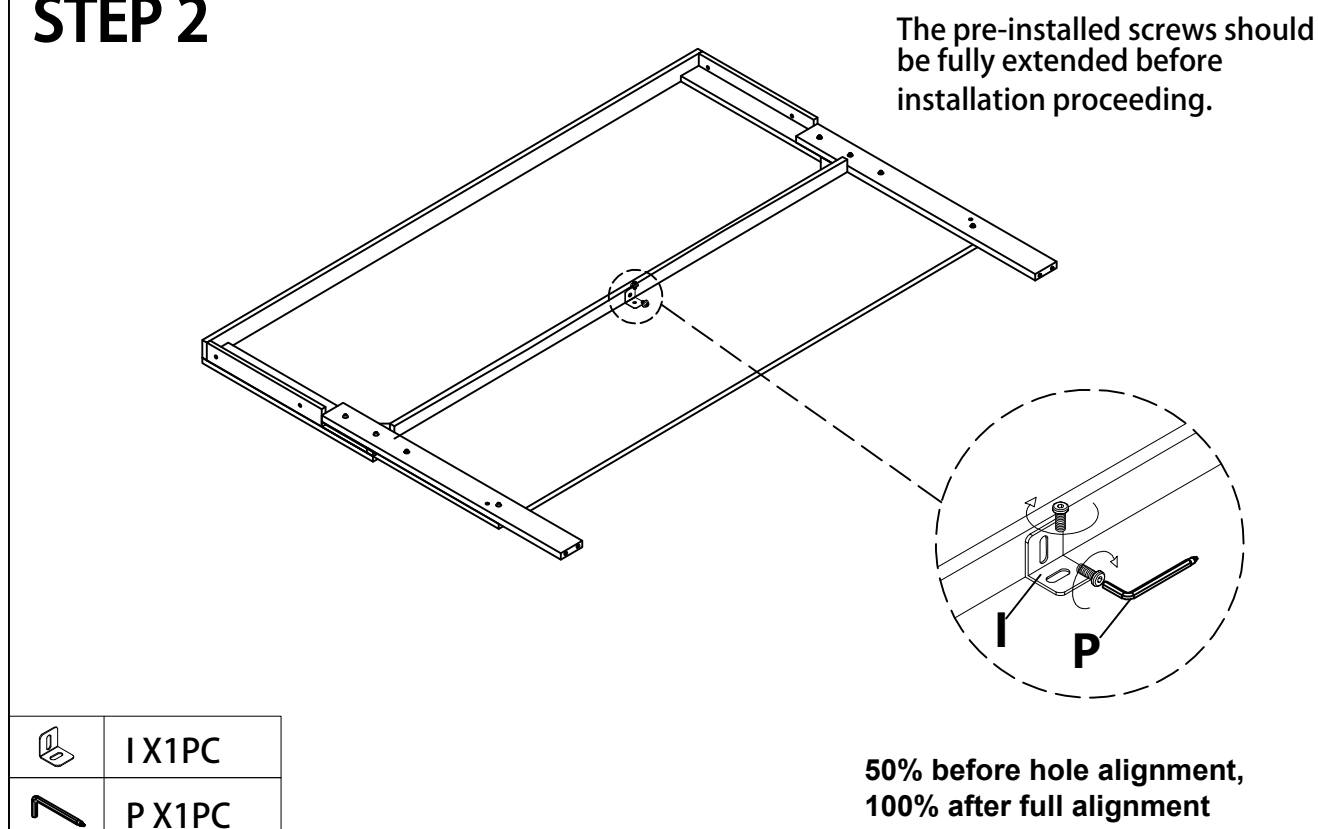


Assembly Steps(EN) / Montageschritte(DE)

STEP 3

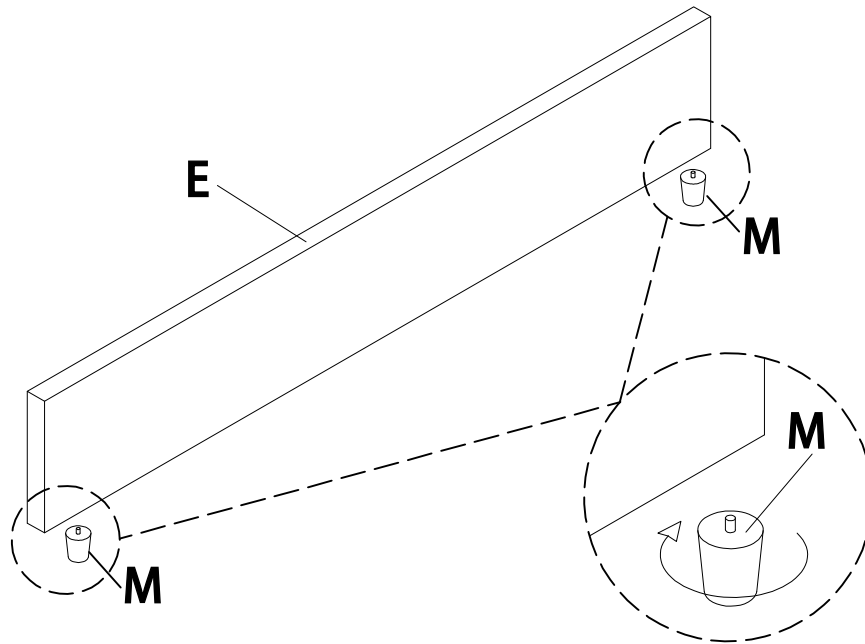

M x 2PCS

STEP 4

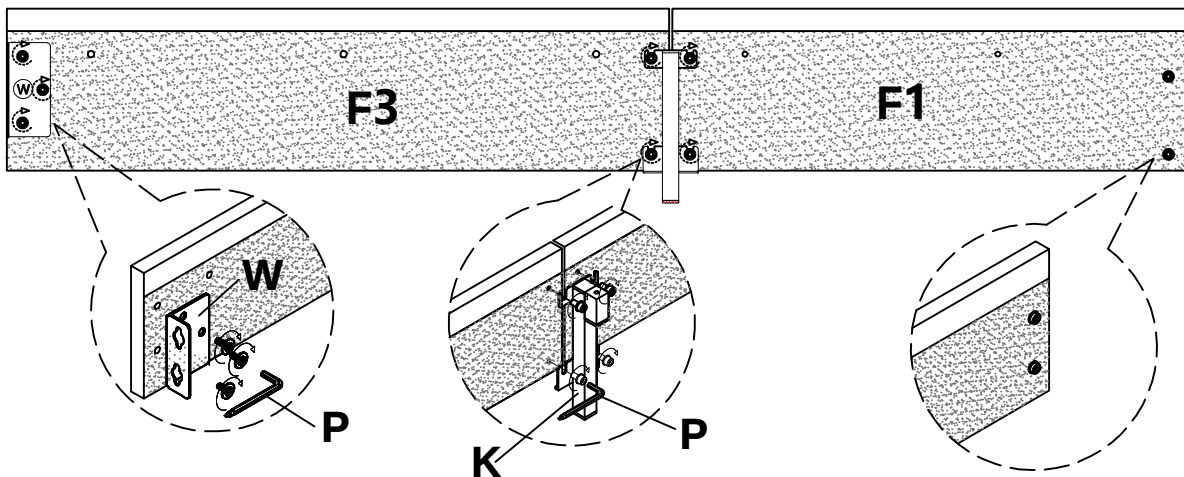

These holes connect wingback

First withdraw the pre-embedded screw rod by 50%, then assemble and tighten securely.



W x 1PC




K x 1PC



P x 1PC

Assembly Steps(EN) / Montageschritte(DE)

STEP 5

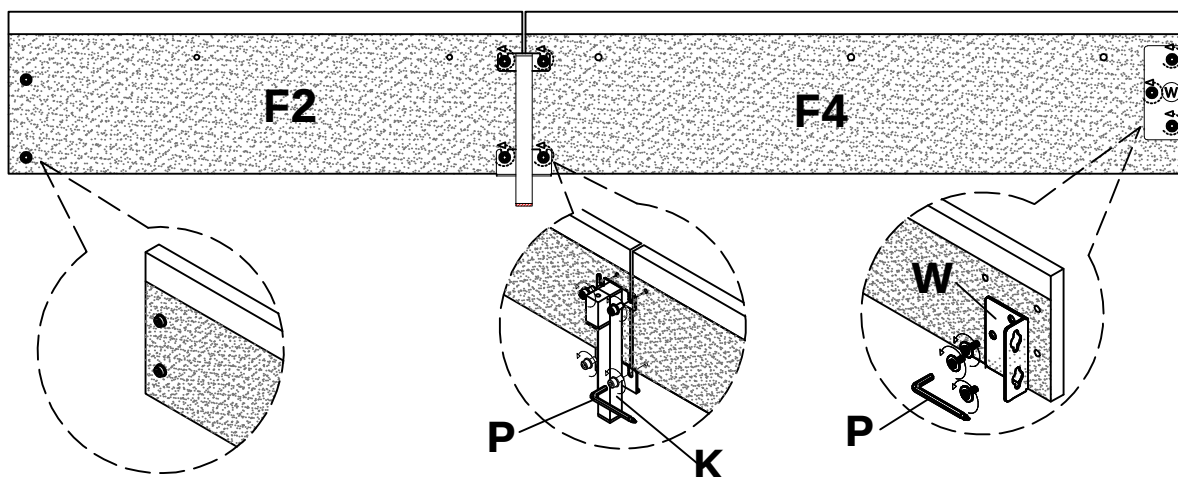


These holes connect wingback

First withdraw the pre-embedded screw rod by 50%, then assemble and tighten securely.

	W x 1PC
	K x 1PC
	P x 1PC

STEP 6

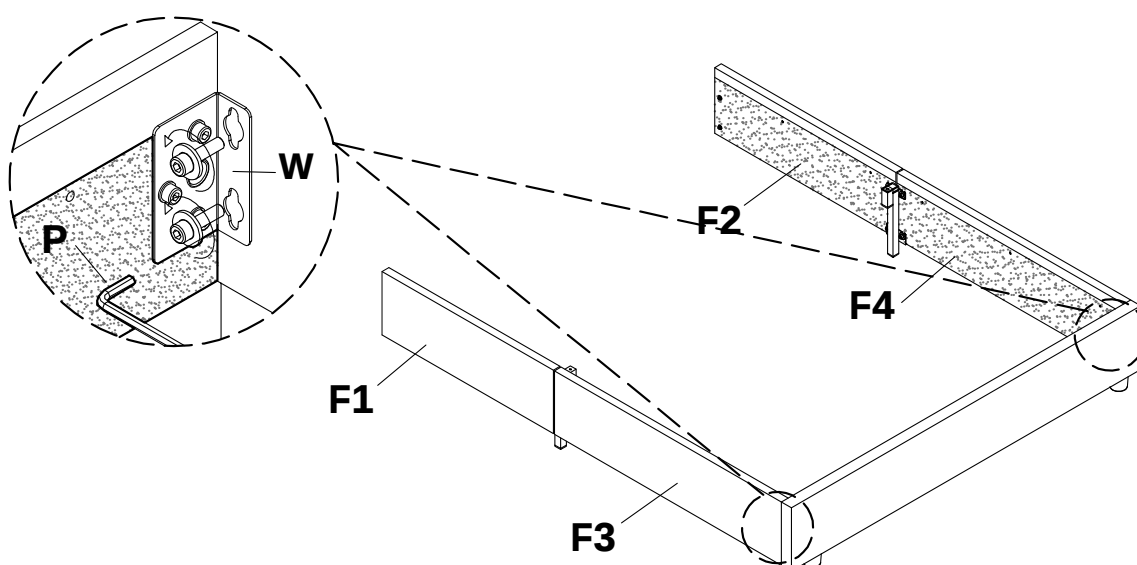


	P x 1PC
---	---------

Assembly Steps(EN) / Montageschritte(DE)

STEP 7


Loosen the screw of headboard side

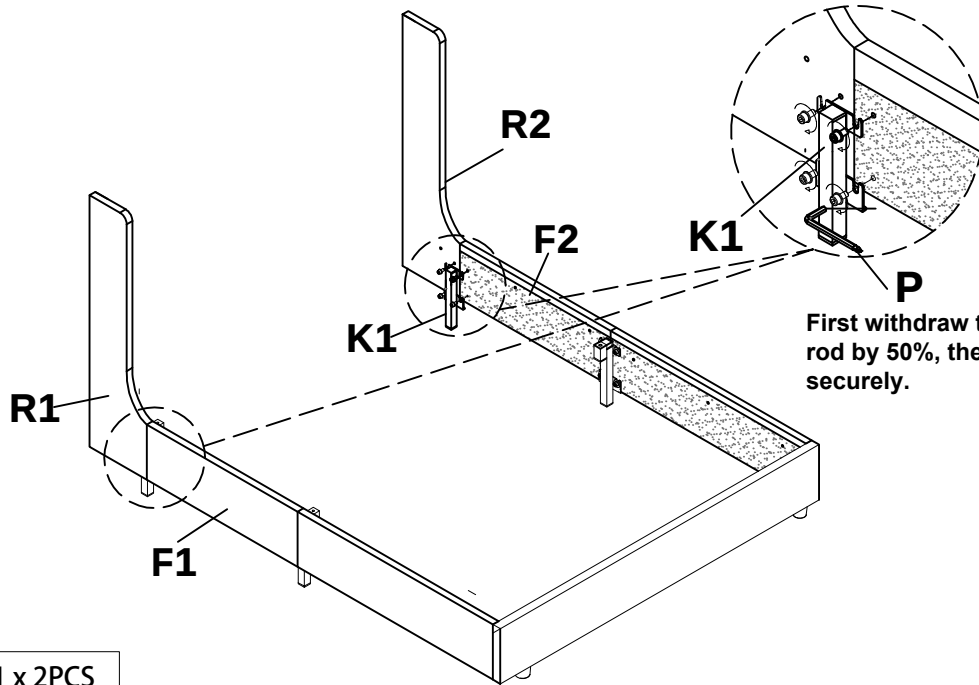

First withdraw the pre-embedded screw rod by 50%, then assemble and tighten securely.

	K1 x 2PCS
	P x 1PC

STEP 8

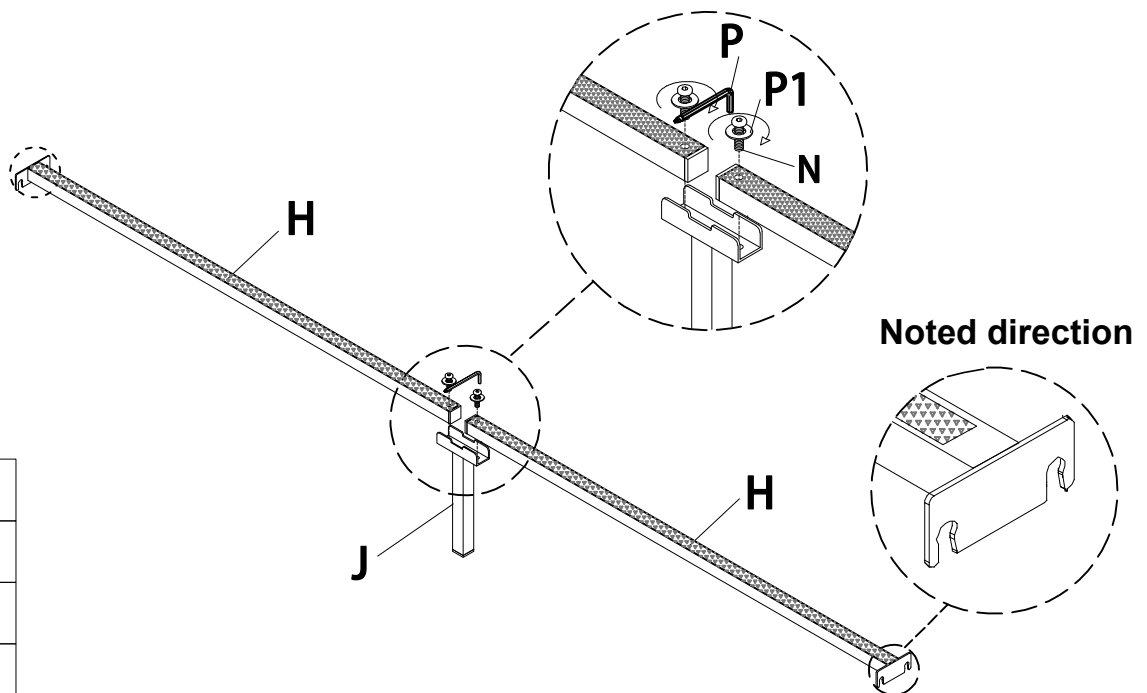


Noted direction

	J x 1PC
	H x 2PCS
 M8 X38mm	N x 2PCS
 Small	P1 x 2PCS
	P x 1PC

Assembly Steps(EN) / Montageschritte(DE)

STEP 9

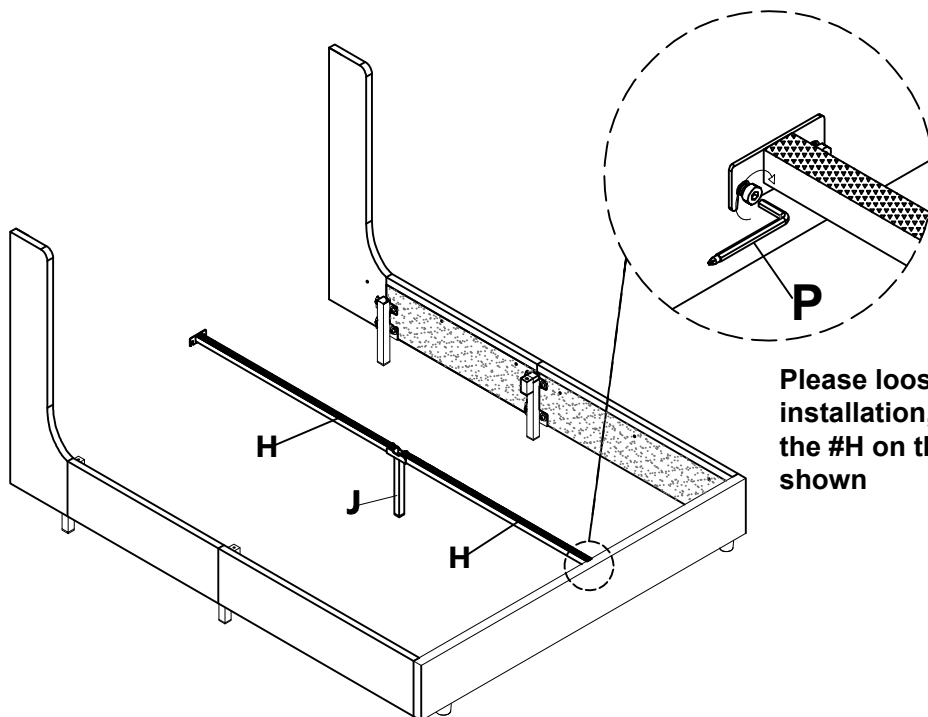


Please loose the screws first before installation, please tight the screws, after the #H on the right position as picture shown



P x 1PC

STEP 10

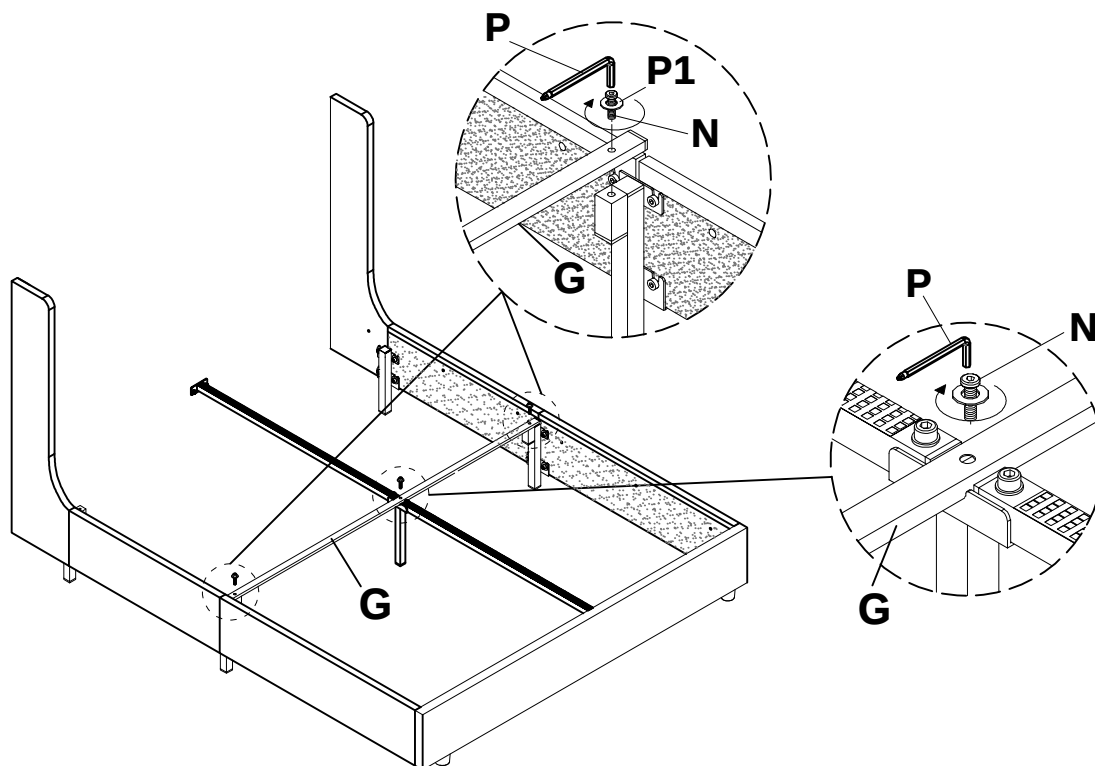

G x 1PC



M8 X38mm

N x 3PCS



Small


P1 x 3PCS



P x 1PC


Assembly Steps(EN) / Montageschritte(DE)

STEP 11

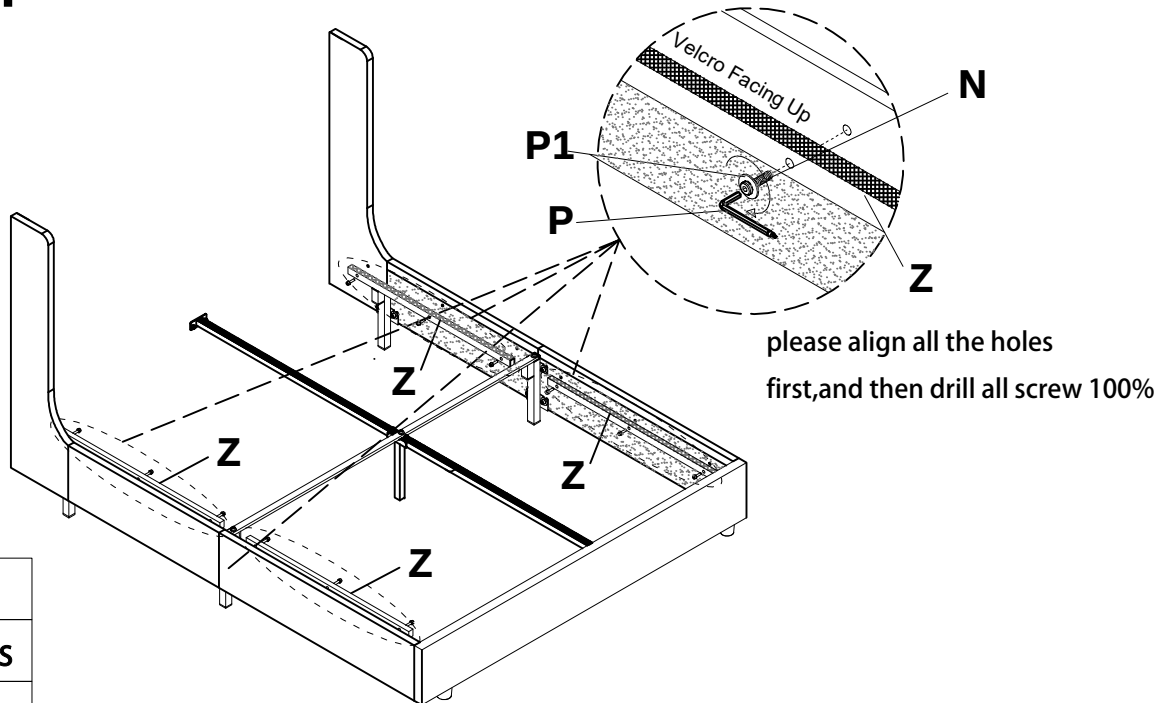


	Z x 4PCS
 M8 X38mm	N x 12PCS
 Small	P1 x 12PCS
	P x 1PC

STEP 12

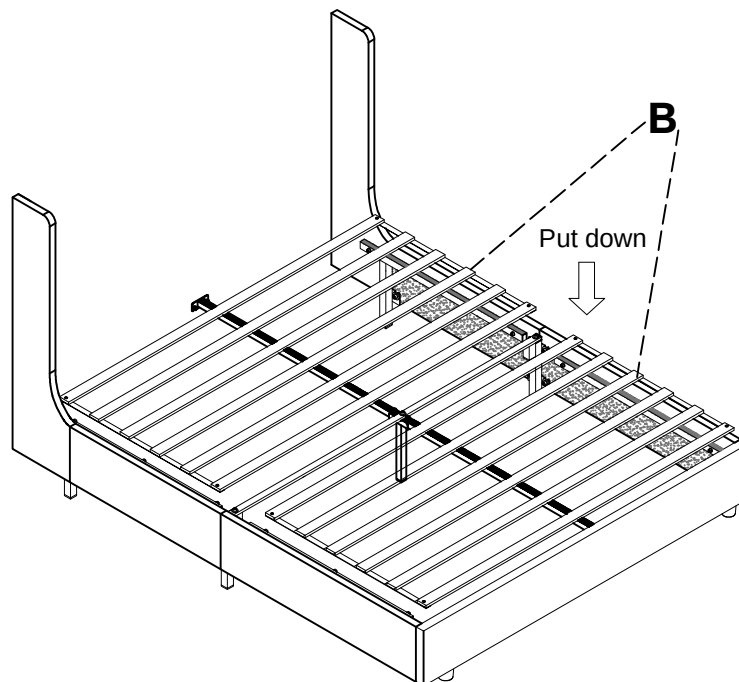


Assembly Steps(EN) / Montageschritte(DE)

STEP 13

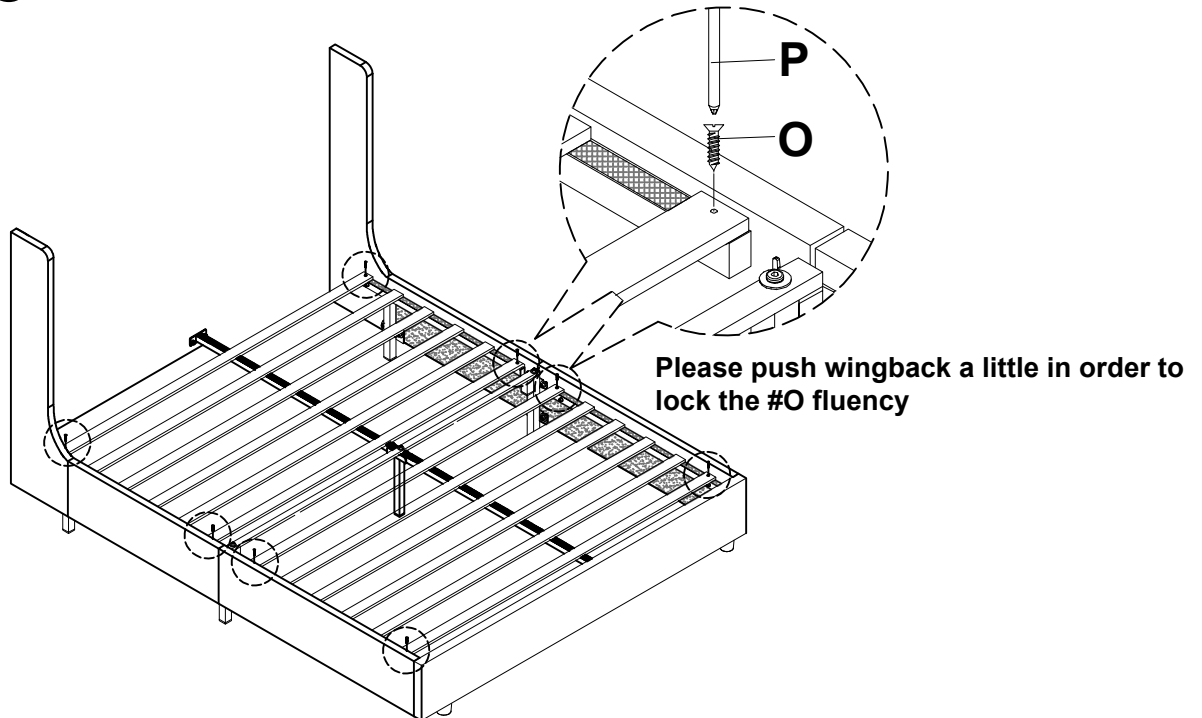

	Ox 8PCS
	P x 1PC


STEP 14

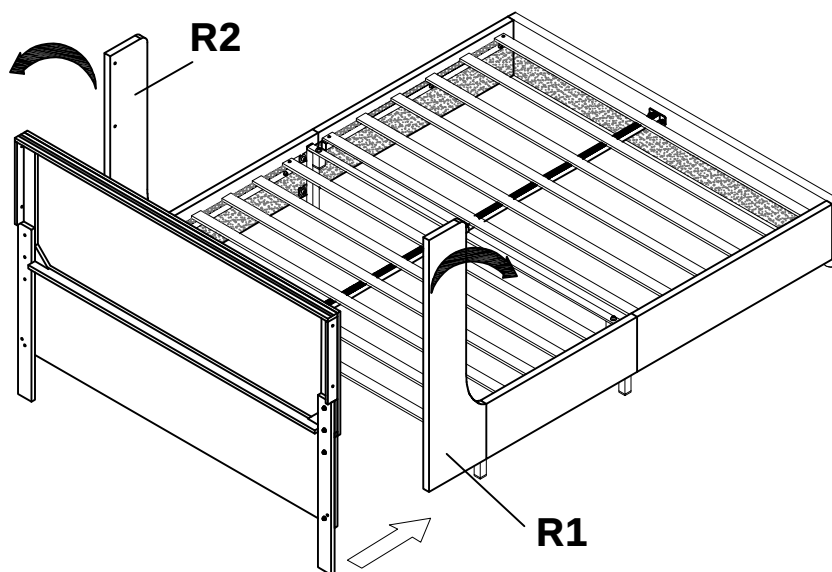

Please push the wingbacks (#R1&R2)outwards a little, and then push the headboard in between wingback. Please align all screws first, and then tight screws 100%

Assembly Steps(EN) / Montageschritte(DE)


STEP 15

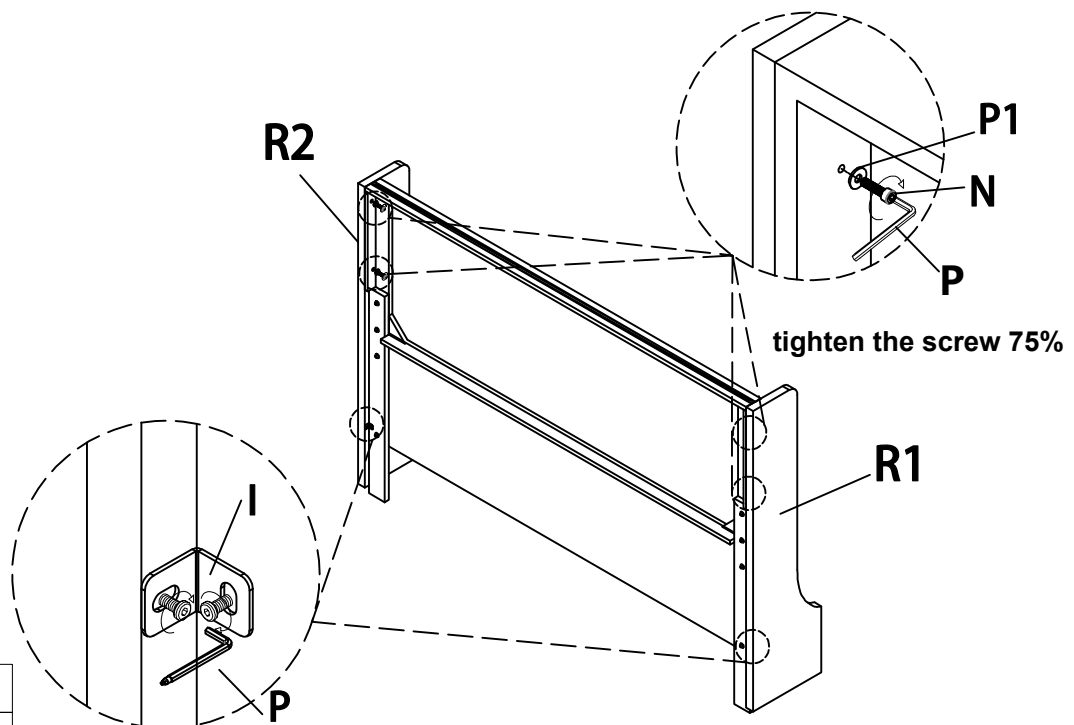

	I x 2PCS
 M8 X38mm	N x 4PCS
 Small	P1 x 4PCS
	P x 1PC

The embedded screw of Lock Part #I should be fully withdrawn before locking. Initially tighten to 50%, align the holes, and then secure to 100%.


STEP 16

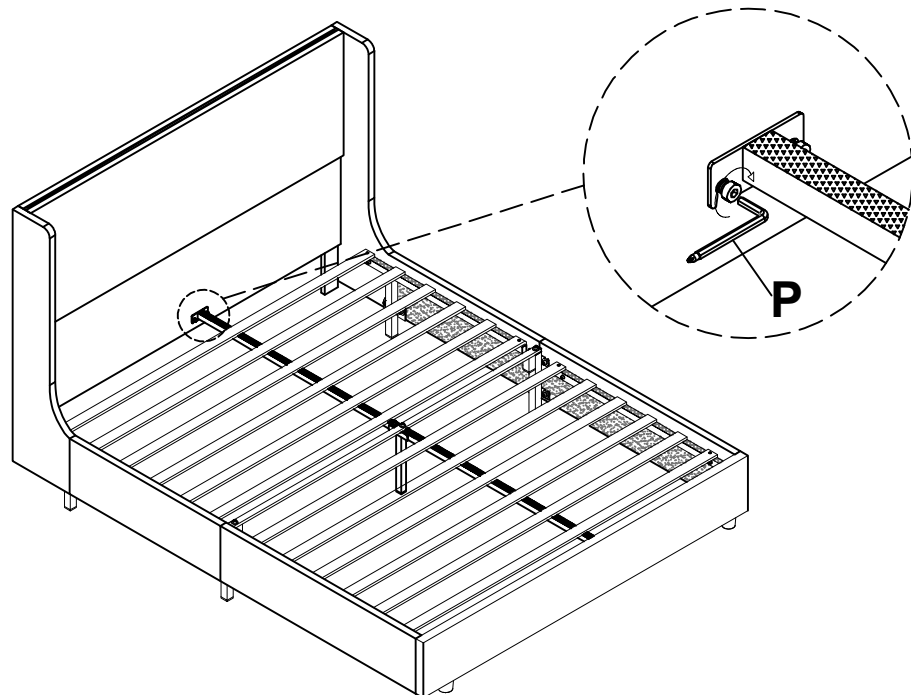

The embedded screw of Lock Part #I should be fully withdrawn before locking. Initially tighten to 50%, align the holes, and then secure to 100%.

Assembly Steps(EN) / Montageschritte(DE)


STEP 17

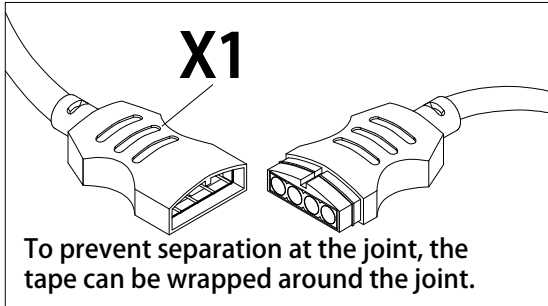

NOTE: The black part of the receiver (X1) needs to be exposed to air in order to better control the LED light.

 **WARNING**

- ★ Please use a 5V power plug for this LED Strip
- ★ Non-compliant voltage may cause device damage or safety hazards.

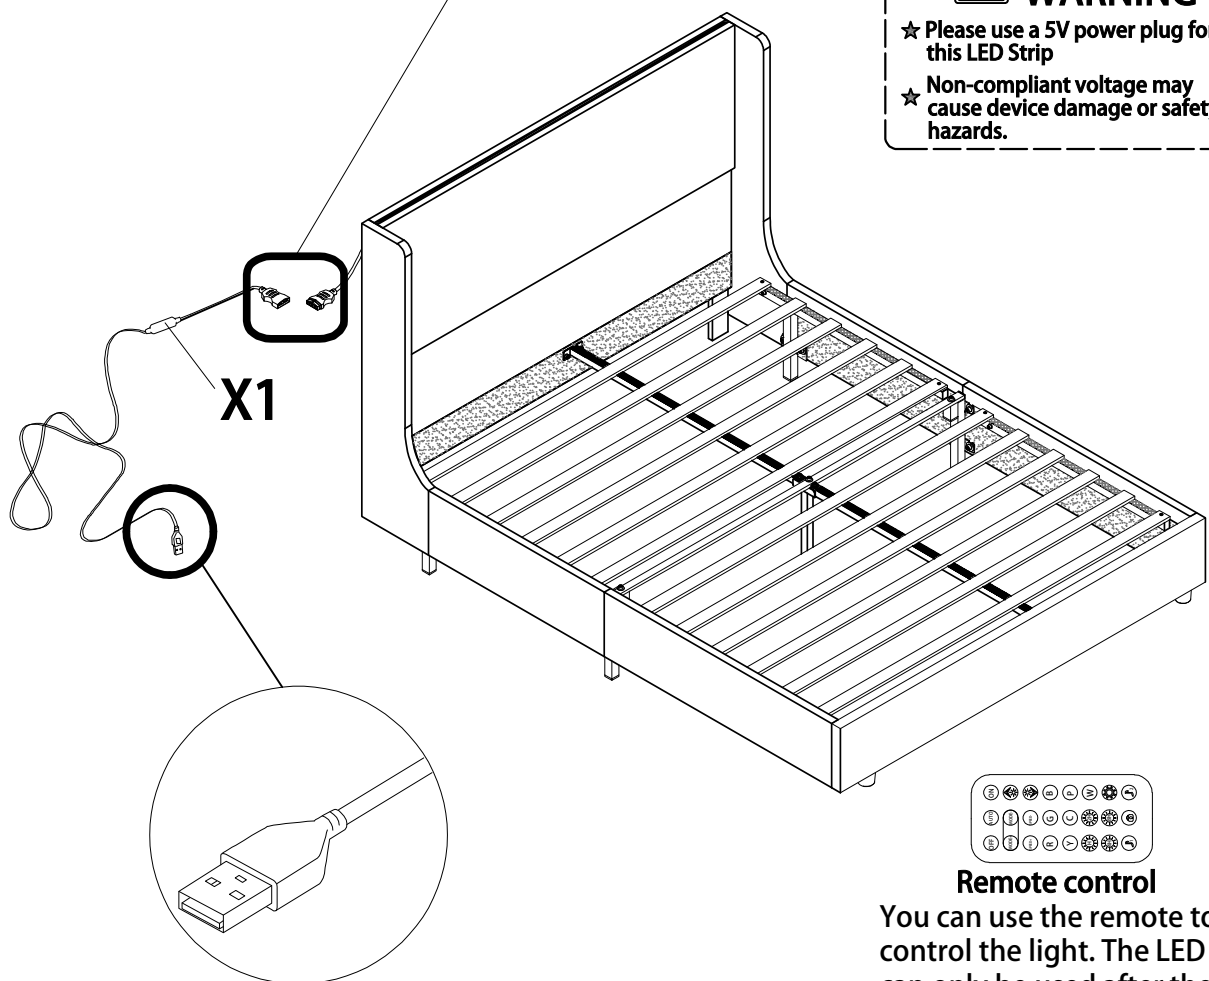

Remote control

You can use the remote to control the light. The LED lamp can only be used after the power supply is connected.

Please scan the QR code on the manual/controller and install the application.

Step1: Please make sure your phone has Bluetooth enabled.

Step2: The LED light will automatically connect to the APP.



X1 x 1PC