


# Standing Desk

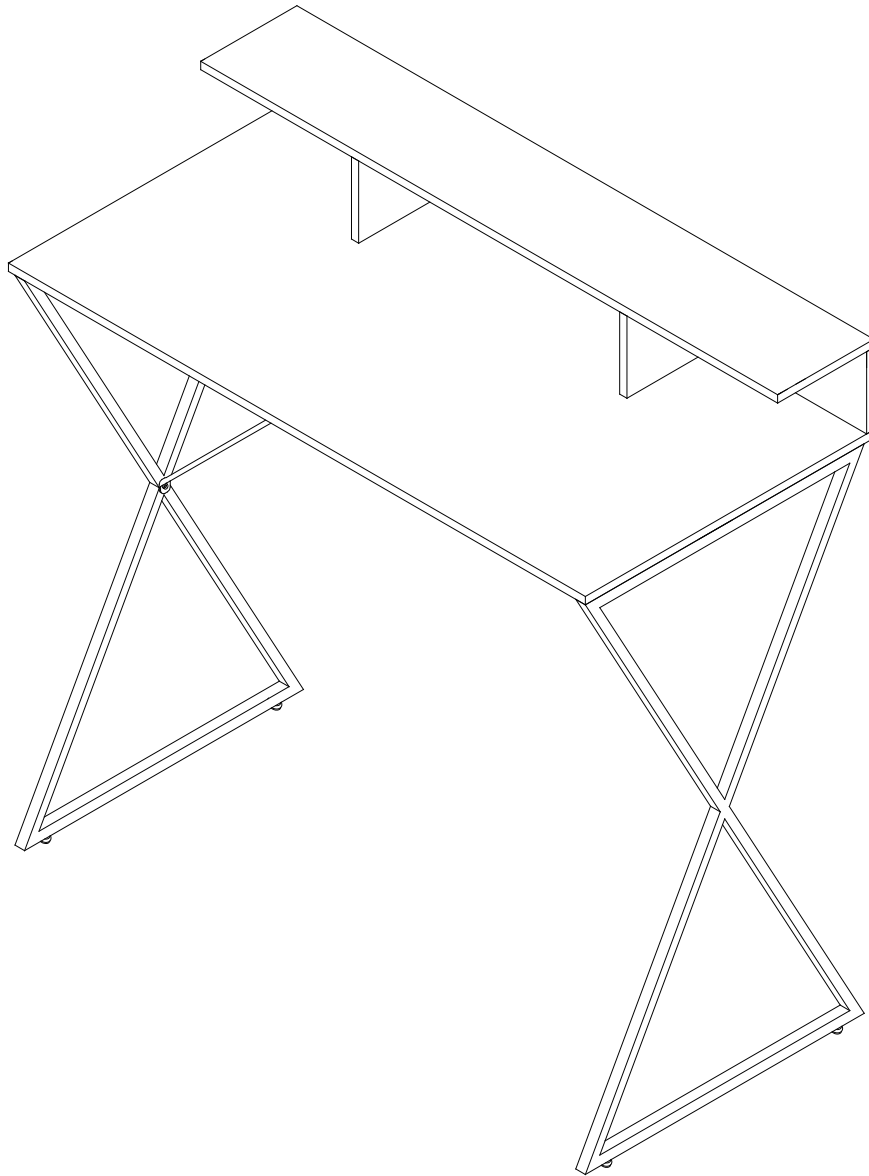

**Made in China**

# Assembly Instructions

\*\*\*DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED\*\*\*



Two-person assembly




30min




60lbs

Please review the list below to ensure you have all your parts. If you are missing anything, contact us.


## Components




A\*2

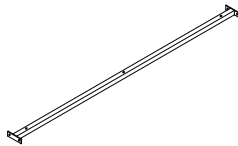


B\*1

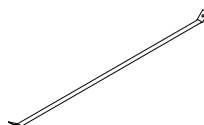


C\*2

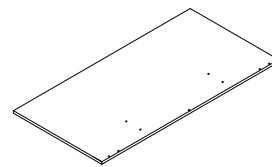


D\*1

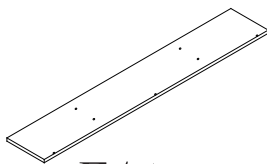


E\*1

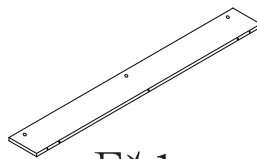

F\*1




G\*1




H\*1


## Hardware



a\*7



b\*7



c\*7



d\*8



e\*4



f\*7



g\*2



h\*1




i\*7

## Weight Capacity


60 lbs. Do not overload.

1 Screw on feet (e\*7).

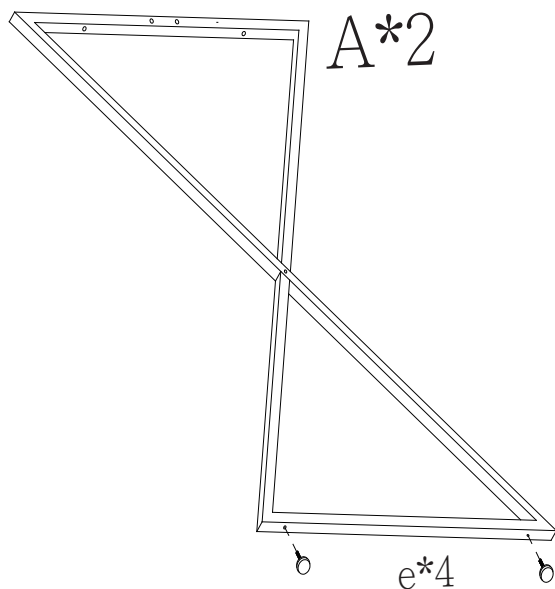


Note: feet go on side with only 2 holes

2 Attach support bars (B and C) to legs.

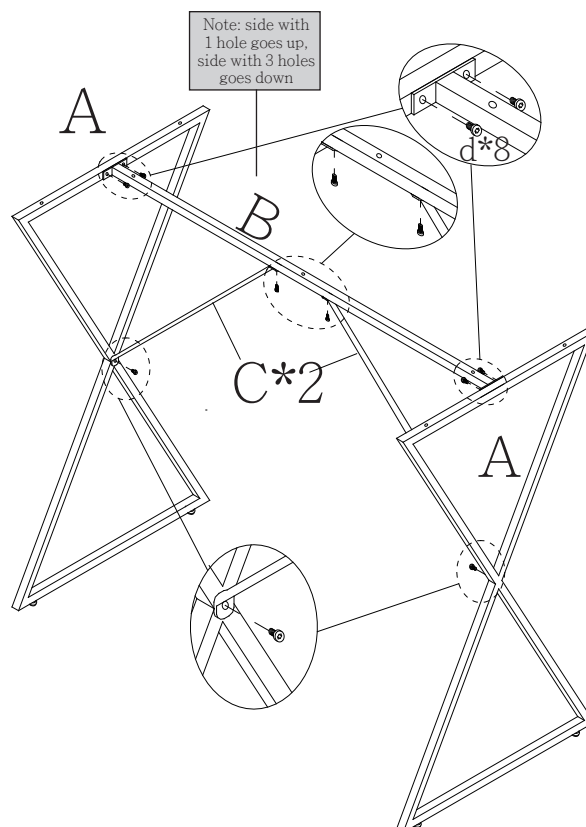


3

Turn desk frame and place on desk top (D).  
Secure using c\*7 screws and included hex key.

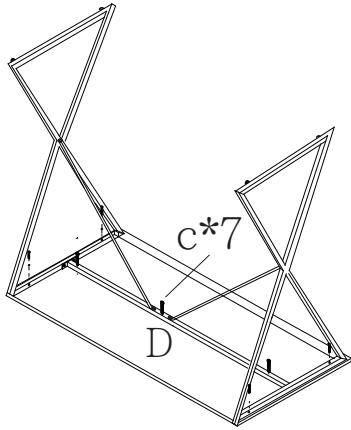


4

Flip desk upright.  
Attach shelf back (F) to desk using dowels (g\*2).

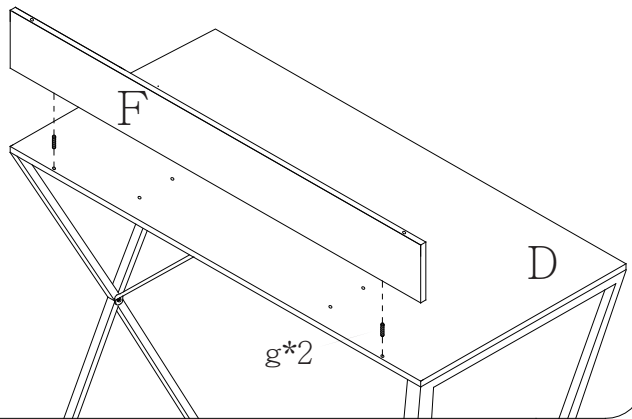


5

Screw b\*7 into holes on shelf top (E).  
Tighten using included screwdriver.

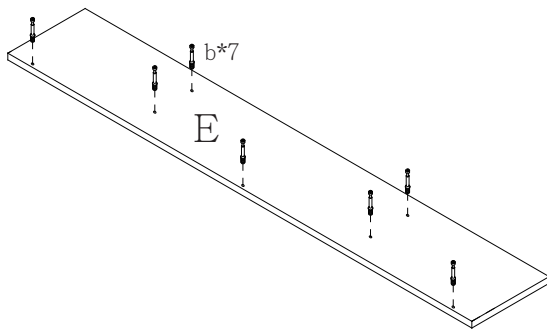


6

Attach side shelving (G and H) to shelf back (F).  
Attach shelf top (E) with screws facing down.  
Lock in place using cam screws (f\*7) and screwdriver.

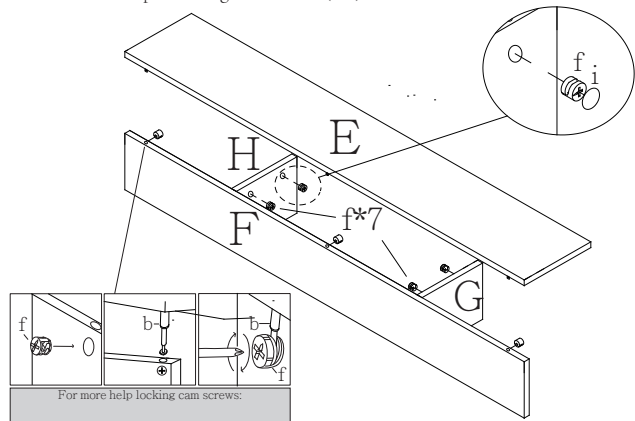

7

Screw shelving unit to desktop using screw a\*7.

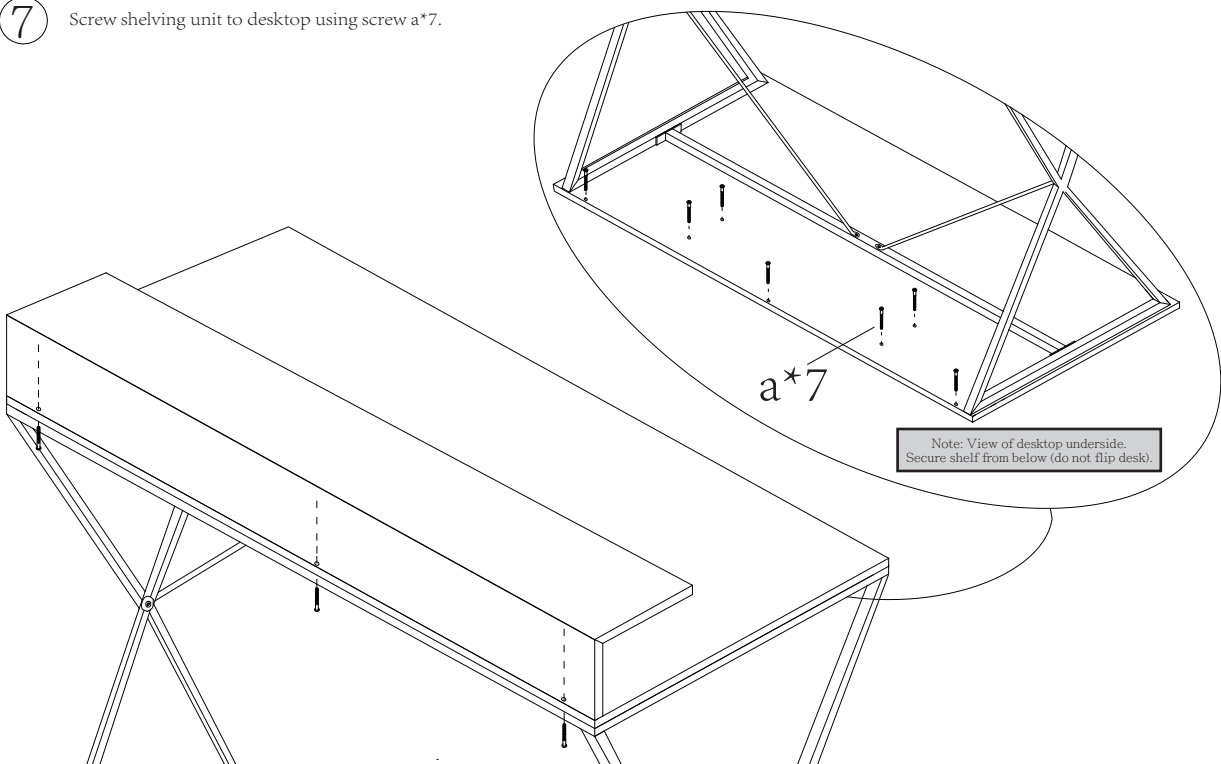

Note: View of desktop underside.  
Secure shelf from below (do not flip desk).