

Tools Recommended

**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**


**FR\_IMPORTANT: A LIRE ATTENTIVEMENT ET À CONSERVER POUR CONSULTATION ULTÉRIEURE.**

**ES\_IMPORTANTE, LEA Y GUARDE PARA FUTURAS REFERENCIAS.**


**PT\_IMPORTANTE, RETER PARA REFERÊNCIA FUTURA: LEIA ATENTAMENTE.**

**DE\_WICHTIG! SORGFÄLTIG LESEN UND FÜR SPÄTER NACHSCHLAGEN AUFBEWAHREN.**


**IT\_IMPORTANTE! CONSERVARE IL PRESENTE MANUALE PER FUTURO RIFERIMENTO E LEGGERLO ATTENTAMENTE.**

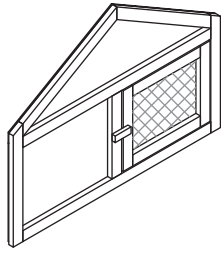


① x01

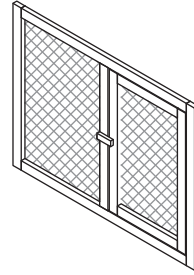


⑧ x01

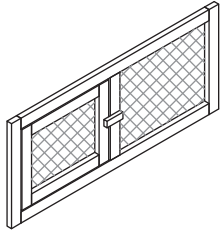


② x01

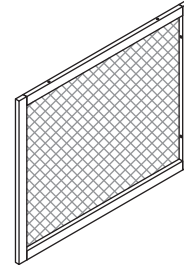


⑨ x01

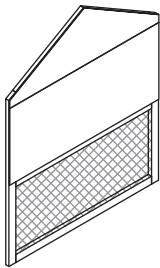


③ x01

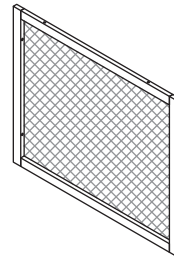


⑩ x01




④ x01

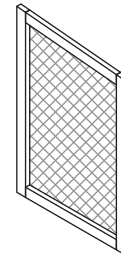


⑪ x01

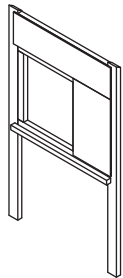


⑤ x01

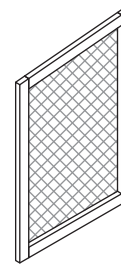


⑫ x01

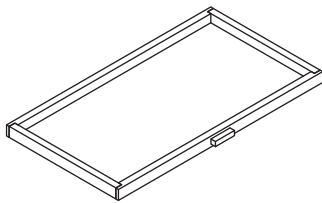


⑥ x01

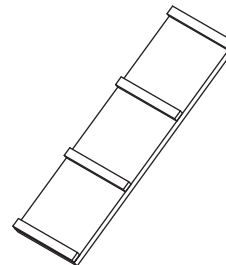

⑬ x02

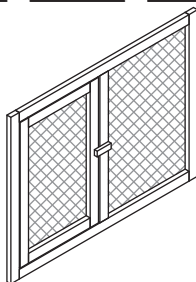


⑦ x01

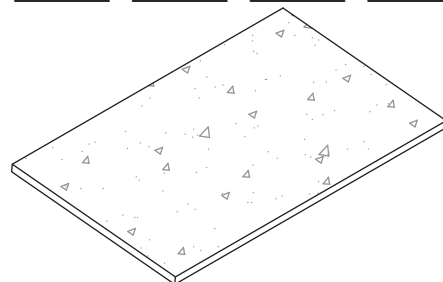


⑭ x02

④⑤ x02






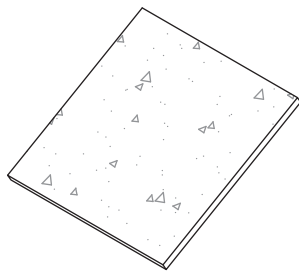


④⑥ x01




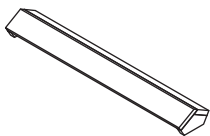










B

C

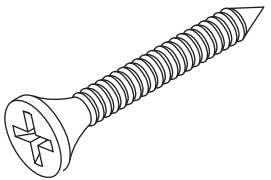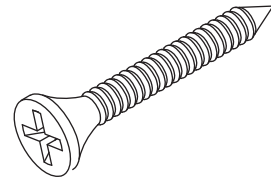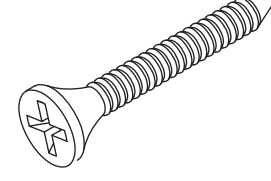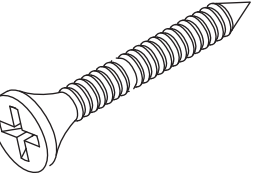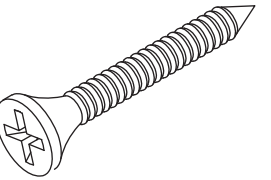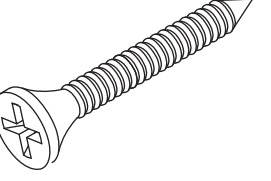
M3*16	 <p><b>A x04+1(spare)</b></p>	
M3*25	 <p><b>B x04+1(spare)</b></p>	
M3.5*30	 <p><b>C x24+2(spare)</b></p>	
M3.5*32	 <p><b>D x08+1(spare)</b></p>	
M3.5*45	 <p><b>E x08+1(spare)</b></p>	
M3.5*50	 <p><b>F x08+1(spare)</b></p>	

**EN** Do not confuse similar screws.  
**FR** Ne pas confondre des vis similaires.  
**ES** No confunda tornillos similares.  
**PT** Não confundir parafusos semelhantes.  
**DE** Verwechseln Sie ähnliche Schrauben nicht.  
**IT** Non confondere le viti simili.

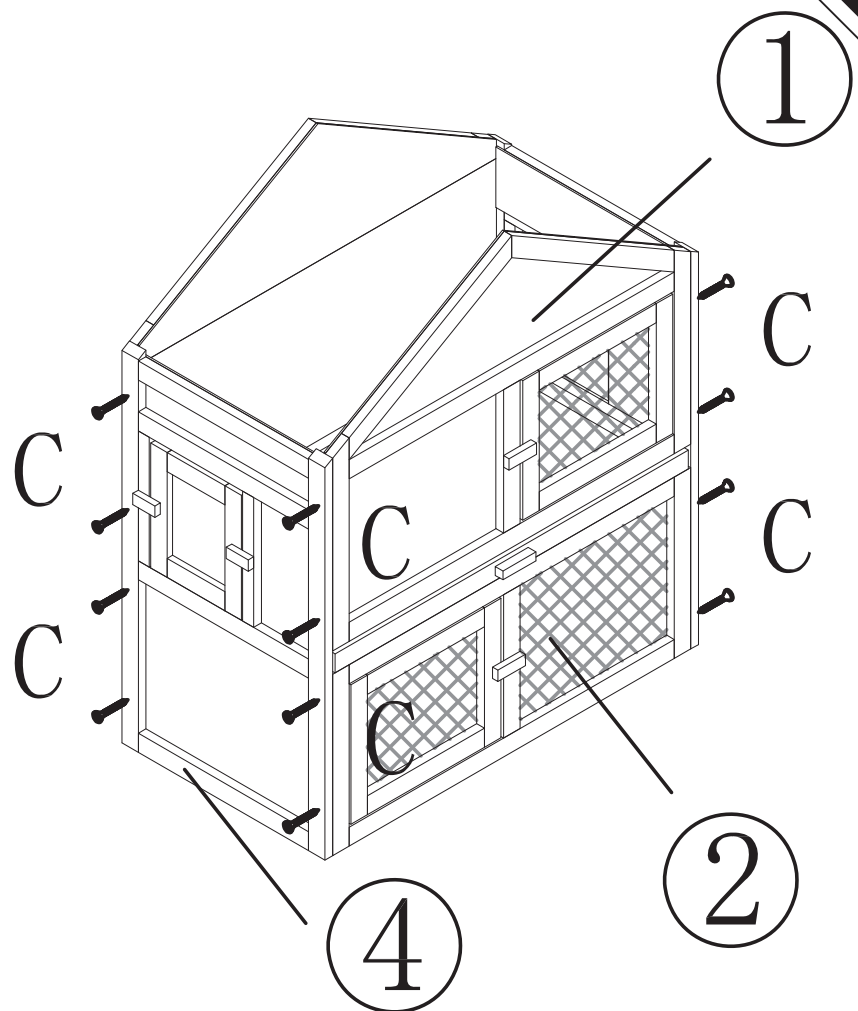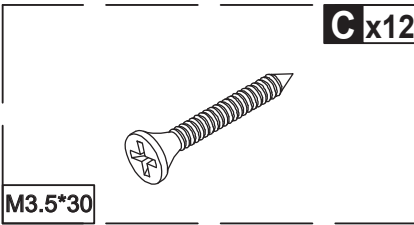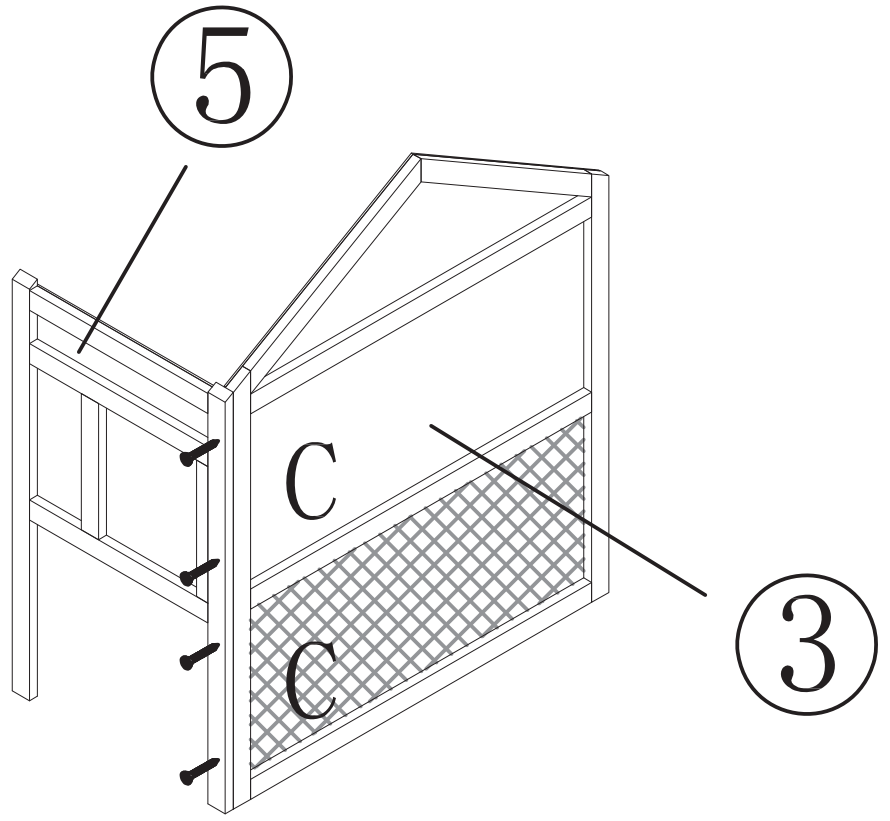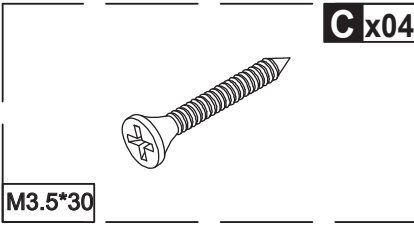

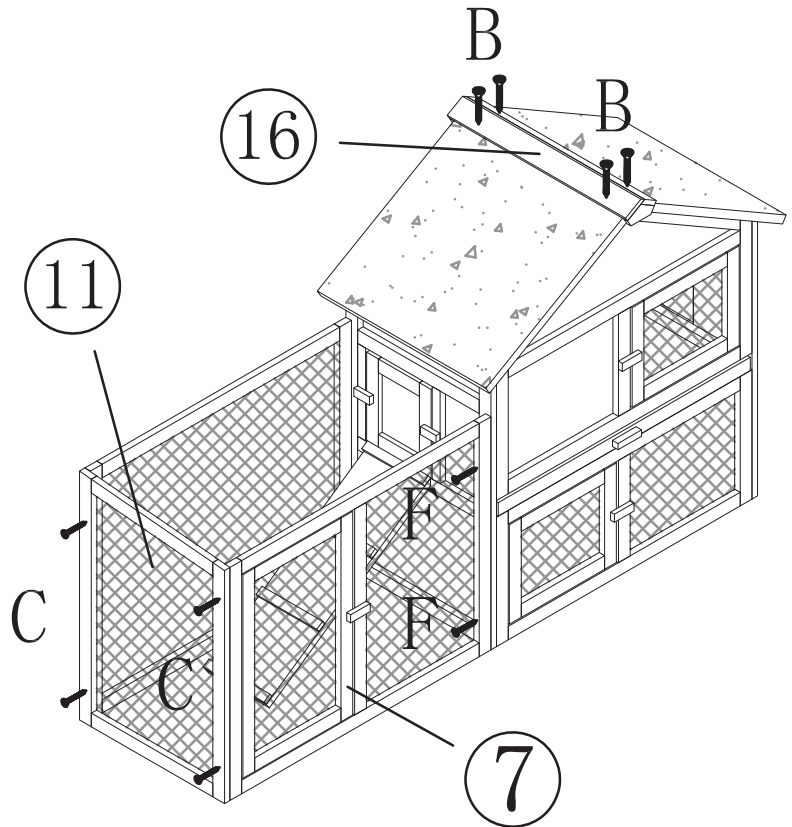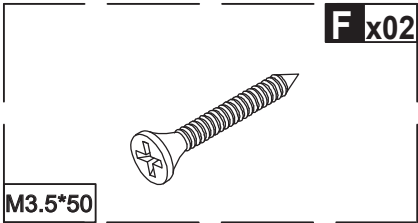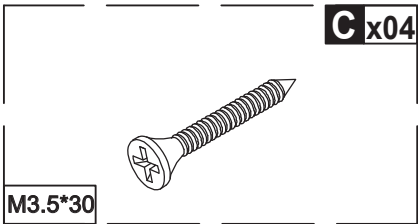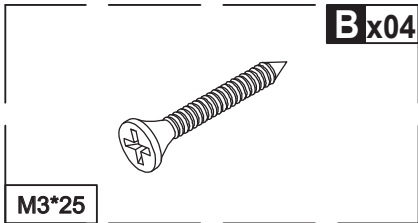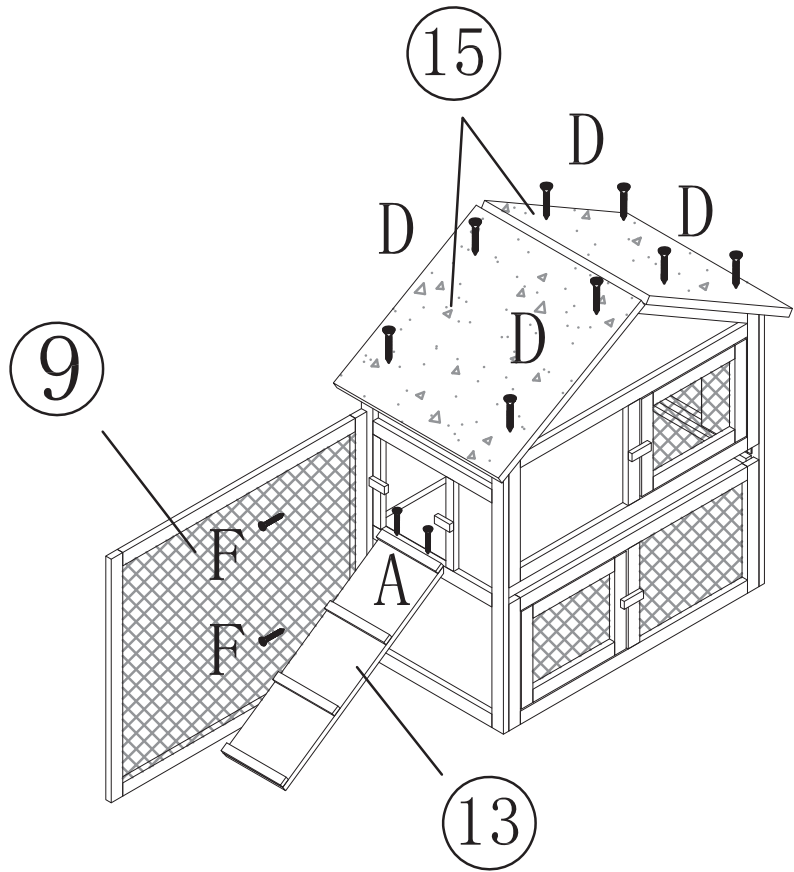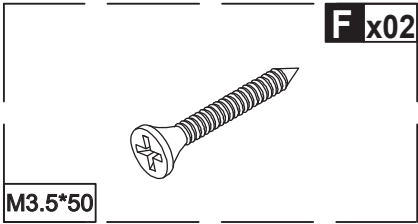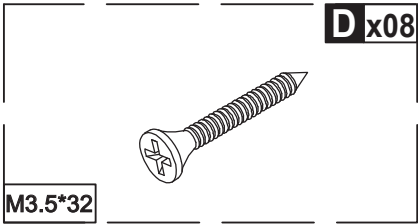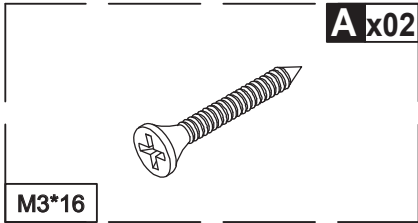


**A** x02

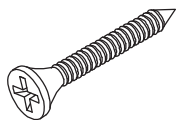


M3\*16


**F** x02

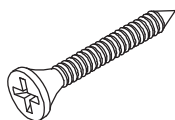

M3.5\*50

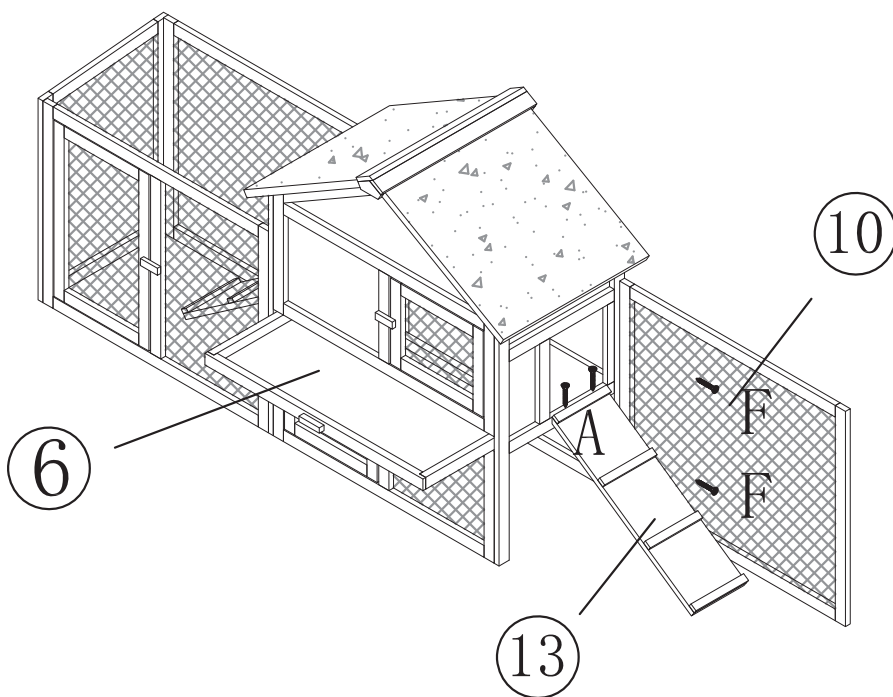


**C** x04

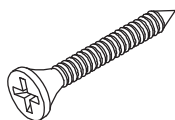



M3.5\*30

**F** x02

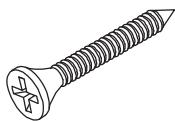



M3.5\*50

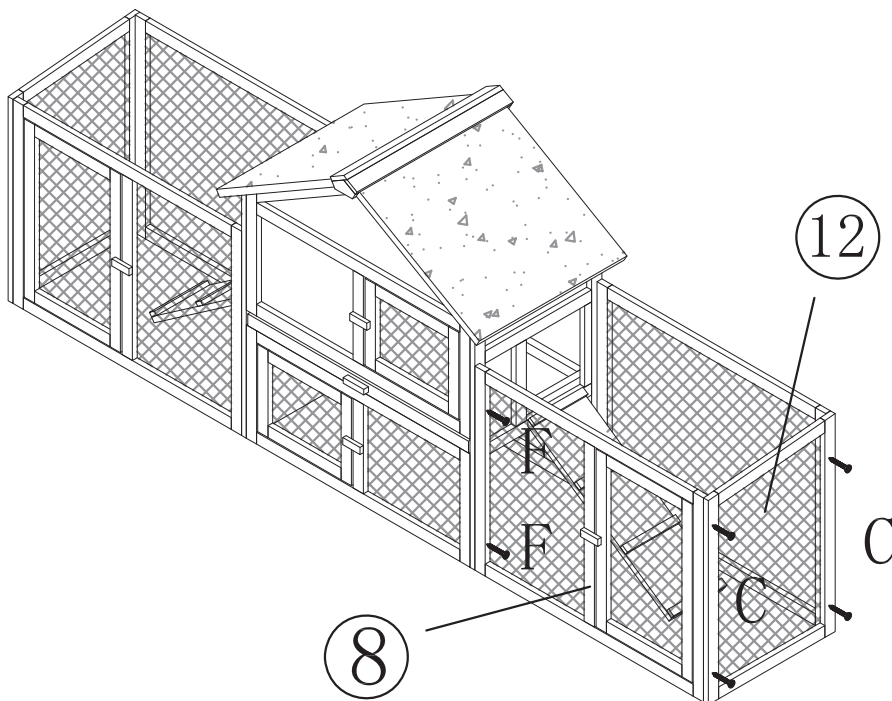

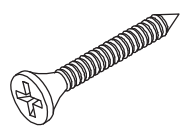

**E**x04

M3.5\*45

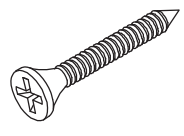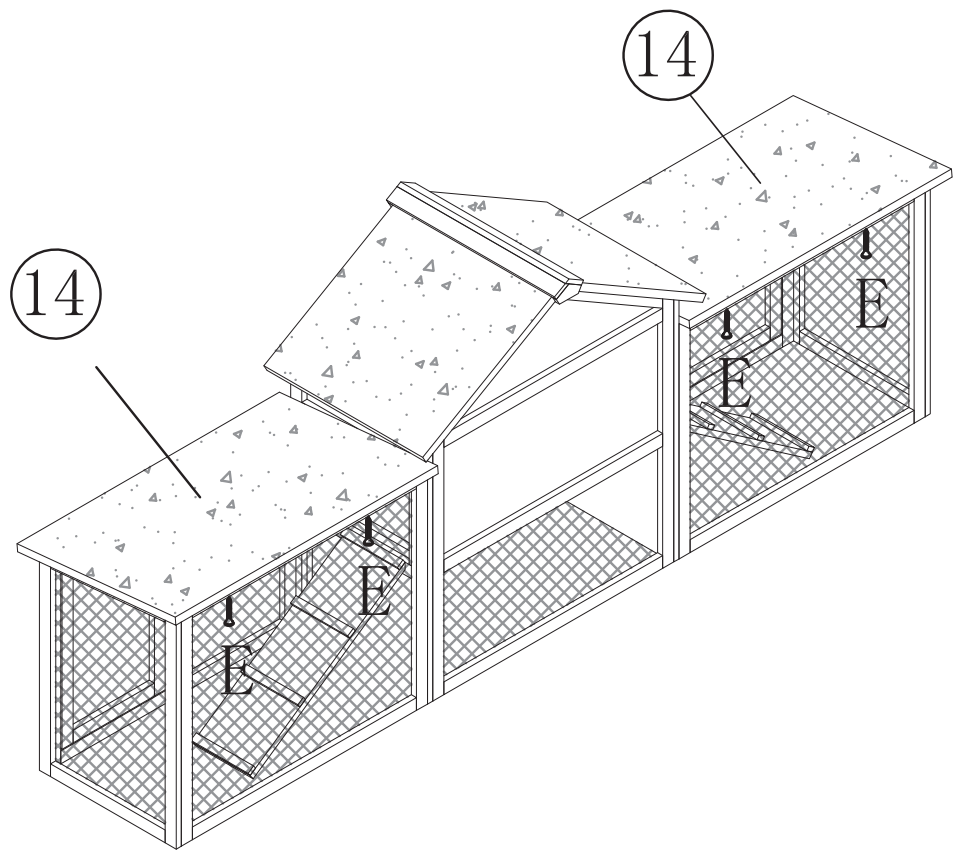

**E**x04

M3.5\*45

