
TV STAND

Assembly Instructions-Please keep for future reference

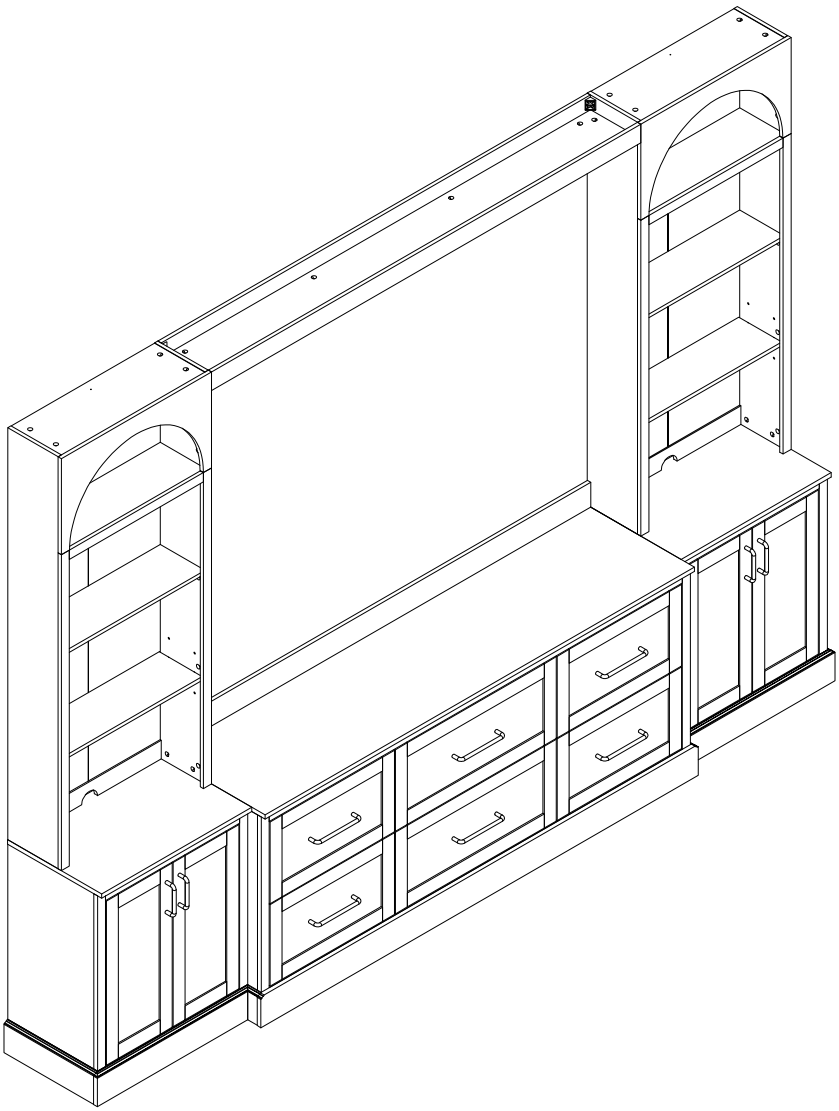

Dimensions

Width-107.08inch

Depth-15.74inch

Height-78.74inch

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the malecamlock as diected inthe assembly instructionsusing a scewdriver.

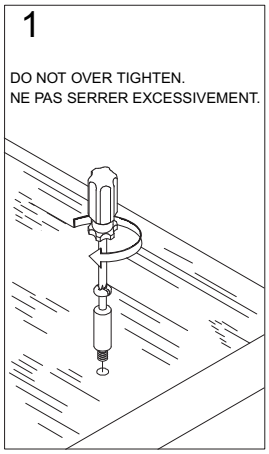

Step 2


Push the male camlock into the entry hole.

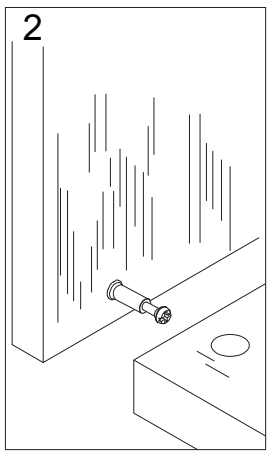

Step 3

Insert the femalecamlock as shown in theinstruction.

Note：ensure that thearrow on the top of thecamlock points towardsthe entry hole for themale camlock.

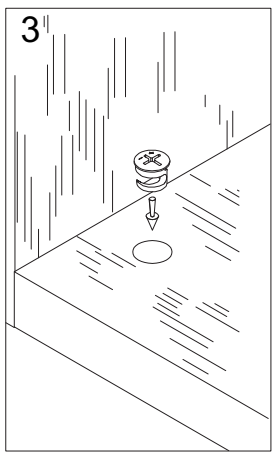


Step 4


Turn the female camlock clockwise with ascrewdrive.r

You should feel a click when the camlock is locked in place.

The joint is now secure.

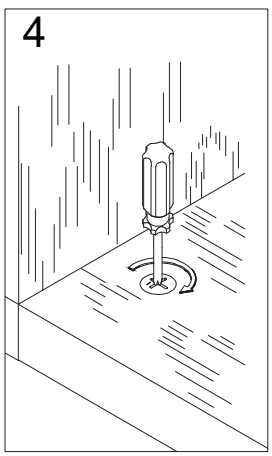












Assembly Instructions

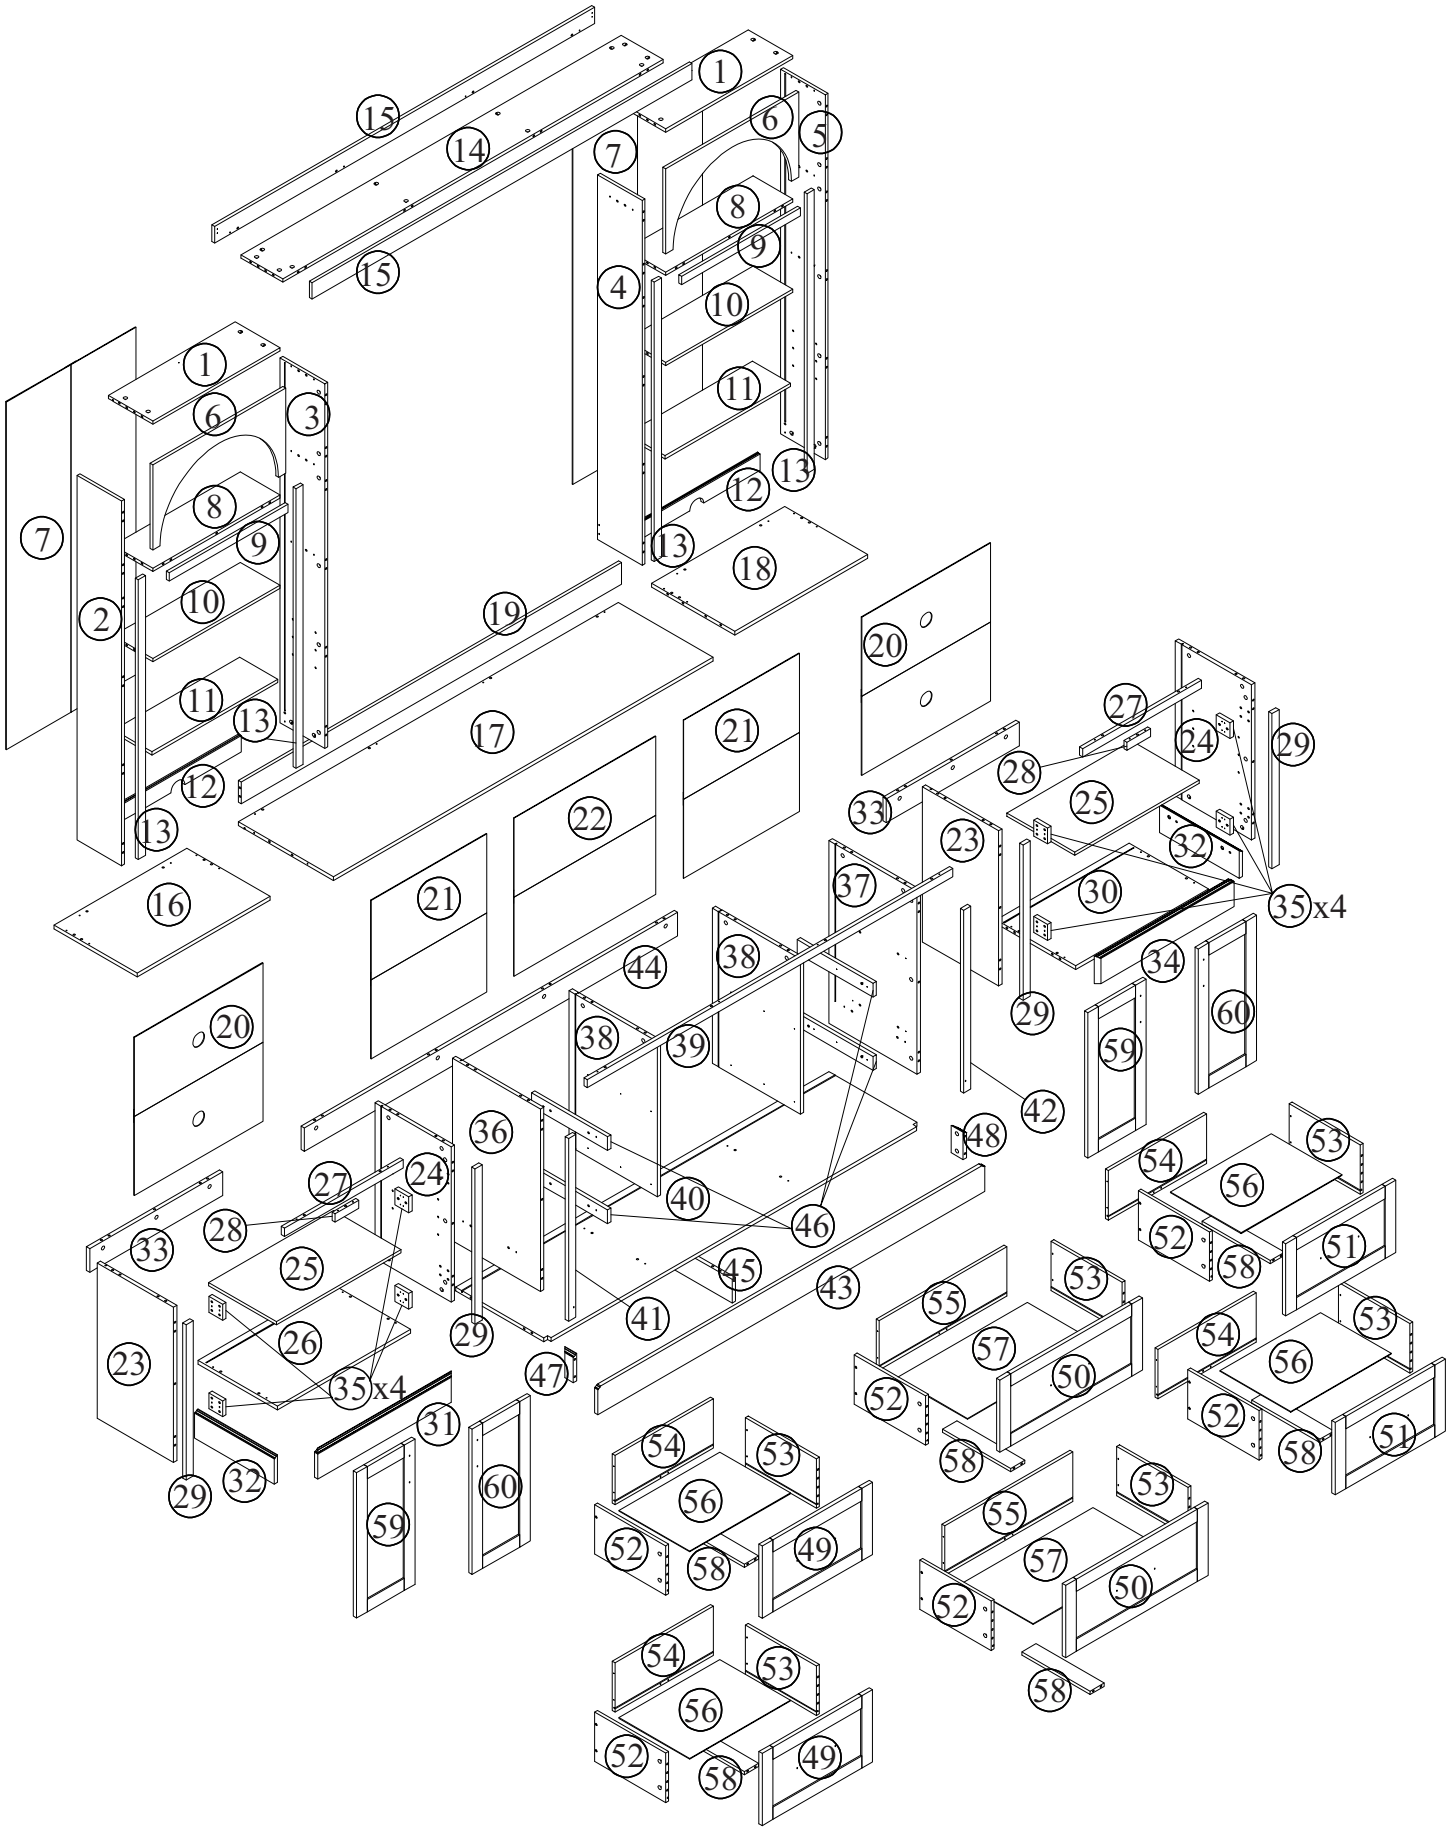

Assembly Instructions

There are 3 boxes of this product



BOX-1

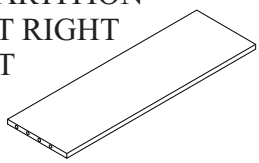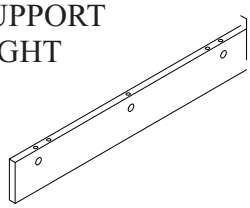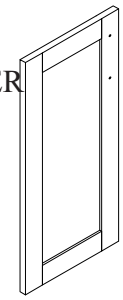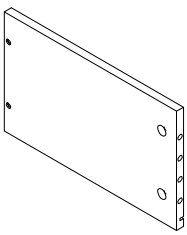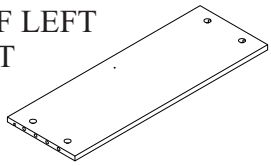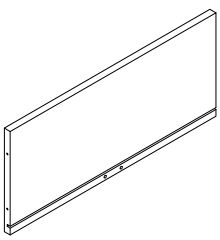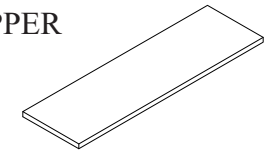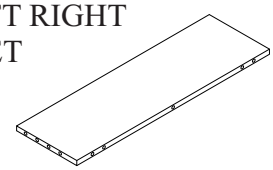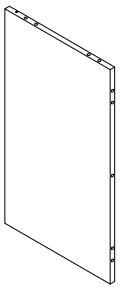7	BACK PANEL OF LEFT UPPER CABINET 1268 x 546 x 2.5mm		1PC	10	HORIZONTAL PARTITION BOARD OF LEFT RIGHT UPPER CABINET 535 x 167 x 12mm		2PCS
2	LEFT SIDEPANEL OF LEFT UPPER CABINET 1330 x 188 x 12mm		1PC	33	BASE BOARD SUPPORT BAR OF LEFT RIGHT CABINET 560 x 86 x 14mm		2PCS
5	RIGHT SIDEPANEL OF RIGHT UPPER CABINET 1330 x 188 x 12mm		1PC	59	LEFT DOOR OF LOWER CABINET 530 x 245.5 x 14mm		2PCS
52	LEFT SIDEPANEL OF DRAWERS 300 x 180 x 12mm		6PCS	1	ROOF PANEL OF LEFT RIGHT CABINET 535 x 188 x 12mm		2PCS
54	BACKPANEL OF LEFT RIGHT DRAWERS 413.5 x 180 x 12mm		2PCS	11	REMOVABLE SHELF OF LEFT RIGHT UPPER CABINET 529 x 160 x 12mm		2PCS
8	HORIZONTAL PARTITION BOARD OF LEFT RIGHT UPPER CABINET 535 x 167 x 12mm		2PCS	23	LEFT SIDEPANEL OF LEFT RIGHT LOWER CABINET 566 x 321 x 14mm		2PCS

Assembly Instructions

There are 3 boxes of this product











BOX-1

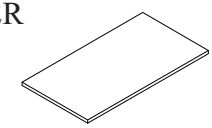㉔	RIGHT SIDEPANEL OF LEFT RIGHT LOWER CABINET  566 x 321 x 14mm	2PCS
㉕	REMOVABLE SHELT OF LEFT RIGHT LOWER CABINET  525 x 285 x 12mm	2PCS
	HARDWARE KIT	1PC

Assembly Instructions

There are 3 boxes of this product









BOX-2

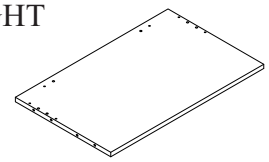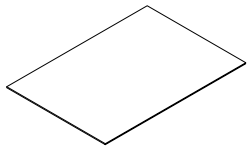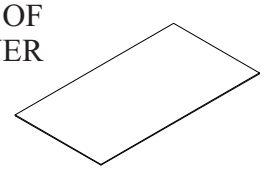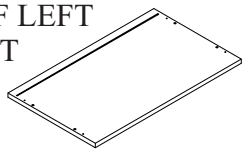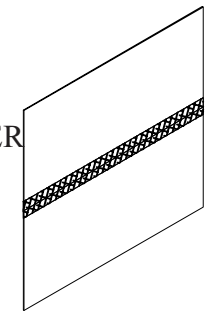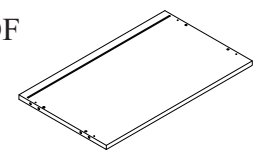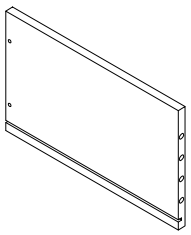⑦	BACK PANEL OF RIGHT UPPER CABINET 1268 x 546 x 2.5mm 	1PC	⑱	MIDDLE PLATE BOARD OF RIGHT CABINET 560 x 350 x 14mm 	1PC
③	RIGHT SIDEPANEL OF LEFT UPPER CABINET 1330 x 188 x 12mm 	1PC	⑯	BASE BOARDS OF LEFT RIGHT DRAWER 424.5 x 298 x 2.5mm 	4PCS
④	LEFT SIDEPANEL OF RIGHT UPPER CABINET 1330 x 188 x 12mm 	1PC	⑰	BASE BOARDS OF CENTER DRAWER 550 x 298 x 2.5mm 	2PCS
㉖	BASE BOARD OF LEFT LOWER CABINET 560 x 335 x 14mm 	1PC	㉒	MIDDLE BACK BOARD OF CENTER LOWER CABINET 597 x 577 x 2.5mm 	1PC
㉚	BASE BOARD OF RIGHT LOWER CABINET 560 x 335 x 14mm 	1PC	㊸	RIGHT SIDEPANEL OF DRAWERS 300 x 180 x 12mm 	6PCS

Assembly Instructions

There are 3 boxes of this product












BOX-2

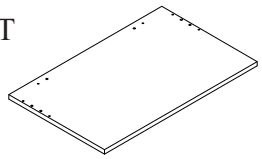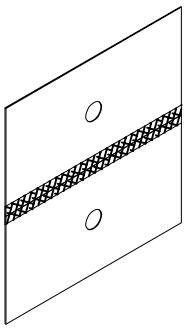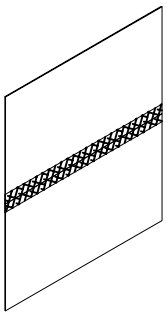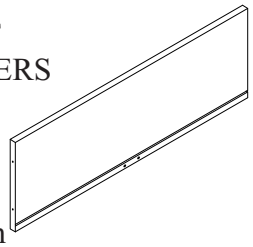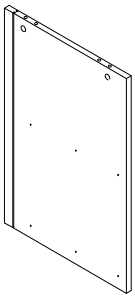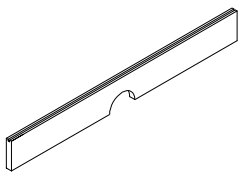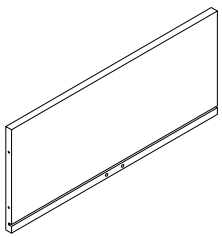⑯	MIDDLE PLATE BOARD OF LEFT CABINET 560 x 350 x 14mm 	1PC	⑳	BACK BOARD OF LEFT RIGHT LOWER CABINET 542 x 577 x 2.5mm 	2PCS
㉑	BACK BOARDS OF CENTER LOWER CABINET 487 x 577 x 2.5mm 	2PCS	㊺	BACKPANEL OF CENTER DRAWERS 539 x 180 x 12mm 	2PCS
㊳	VERTICAL PARTITION BOARDS OF CENTER LOWER CABINET 566 x 371 x 14mm 	2PCS	⑫	REAR SUPPORT BAR OF LEFT RIGHT CABINET 535 x 60 x 12mm 	2PCS
㊹	BACKPANEL OF LEFT RIGHT DRAWERS 413.5 x 180 x 12mm 	2PCS	⑥⓪	RIGHT DOOR OF LOWER CABINET 530 x 245.5 x 14mm 	2PCS

Assembly Instructions

There are 3 boxes of this product











BOX-3

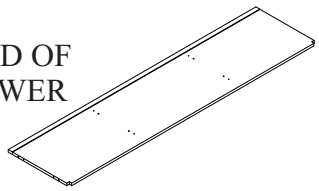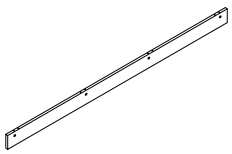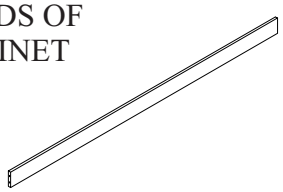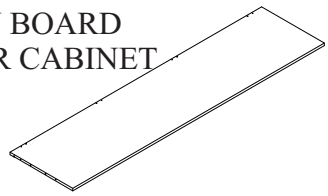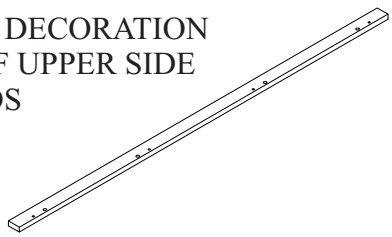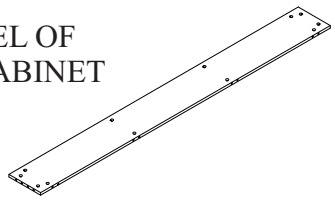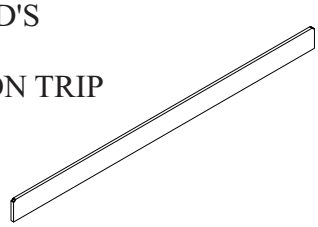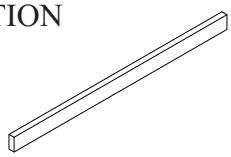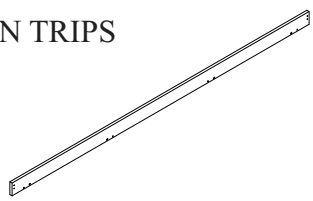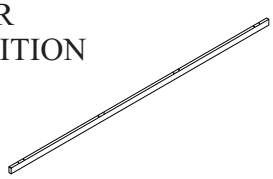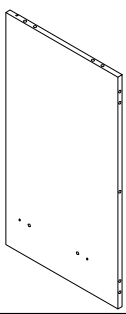㊵	BASE BOARD OF CENTER LOWER CABINET 1572 x 385 x 14mm 	1PC	㊹	BASEBOARD REAR SUPPORT BAR OF CENTER LOWER CABINET 1572 x 86 x 14mm 	1PC
⑲	REAR TIE RODS OF CENTER CABINET 1601 x 80 x 12mm 	1PC	⑰	MIDDLE HORIZOL PARTITION BOARD OF CENTER CABINET 1600 x 400 x 14mm 	1PC
⑬	FRONT DECORATION TRIP OF UPPER SIDE BOARDS 1020 x 30 x 12mm 	4PCS	⑭	ROOF PANEL OF CENTER CABINET 1601 x 176 x 12mm 	1PC
㉙	FRONT DECORATION TRIP OF UPPER SIDE BOARDS 566 x 30 x 14mm 	4PCS	㊸	BASEBOARD'S FRONT DECORATION TRIP OF CENTER CABINET 1630 x 100 x 14mm 	1PC
⑨	FRONT DECORATION TRIP OF UPPER HORIZOL PARTITION BOARD 500 x 30 x 12mm 	2PCS	⑮	ROOF'S DECORATION TRIPS OF CENTER CABINET 1600 x 60 x 12mm 	2PCS
㊴	FRONT DECORATION TRIP OF LOWER HORIZOL PARTITION BOARD 1540 x 30 x 14mm 	1PC	㊱	LEFT SIDE BOARD OF CENTER CABINET 666 x 371 x 14mm 	1PC

Assembly Instructions

There are 3 boxes of this product







BOX-3

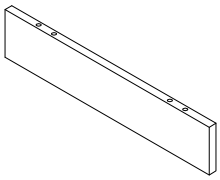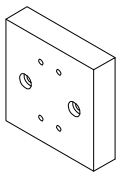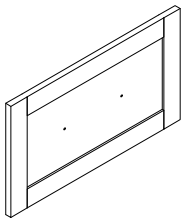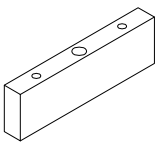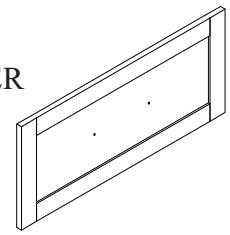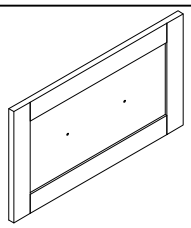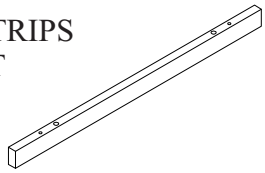37	RIGHT SIDE BOARD OF CENTER CABINET 666 x 371 x 14mm 	1PC	45	BASE BOARD'S CENTER SUPPORT BAR OF CENTER CABINET 370 x 86 x 14mm 	1PC
41	LEFT SIDEBOARD'S FRONT DECORATION TRIP OF CENTER CABINET 666 x 30 x 14mm 	1PC	35	HINGE CONNECTION BAR 60 x 60 x 14mm 	8PCS
42	RIGHT SIDEBOARD'S FRONT DECORATION TRIP OF CENTER CABINET 666 x 30 x 14mm 	1PC	49	LEFT DRAWER FRONT 464 x 263.5 x 14mm 	2PCS
28	DOOR STOPPER BAR 100 x 30 x 12mm 	2PCS	50	CENTER DRAWER FRONT 600 x 263.5 x 14mm 	2PCS
47	BASE BOARD'S LEFT DECORATION TRIP OF CENTER CABINET 100 x 50 x 14mm 	1PC	51	RIGHT DRAWER FRONT 464 x 263.5 x 14mm 	2PCS
48	BASE BOARD'S RIGHT DECORATION TRIP OF CENTER CABINET 100 x 50 x 14mm 	1PC	27	FRONT DECORATION TRIPS OF LEFT RIGHT CABINET 500 x 30 x 14mm 	2PCS

Assembly Instructions

There are 3 boxes of this product










BOX-3

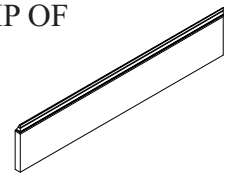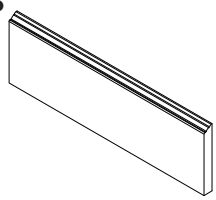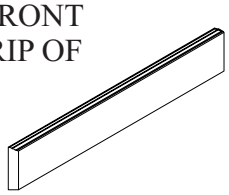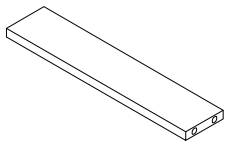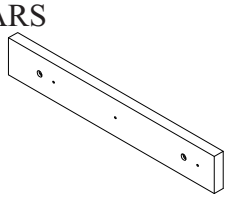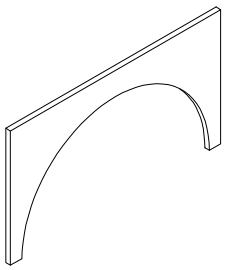31	BASEBOARD'S FRONT DECORATION TRIP OF LEFT CABINET  575 X 100 X 14mm	1PC	32	BASEBOARD'S SIDE DECORATION TRIP OF LEFT RIGHT CABINET  335 x 100 x 14mm	2PCS
34	BASEBOARD'S FRONT DECORATION TRIP OF RIGHT CABINET  575 x 100 x 14mm	1PC	58	SUPPORT BAR OF DRAWERS  287 x 60 x 12mm	6PCS
46	SLIDE RAIL CONNECTION BARS  320 x 50 x 14mm	4PCS	6	TOP FRONT DECORATION BOARD OF LEFT RIGHT CABINET  560 x 310 x 12mm	2PCS

HARDWARE LIST/LISTE DU MATÉRIEL

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly.In some cases more fittings may be supplied than are required.

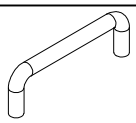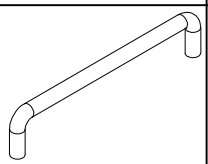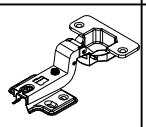A	Ø5*35 mm 	208+4(PCS)	N	Ø3.9*22 mm 	38+3(PCS)
B	Ø15*10 mm 	208+4(PCS)	O	Ø3.9*30 mm 	28+2(PCS)
C	Ø8*30 mm 	72+4(PCS)	P	Ø2.9*12 mm 	76+4(PCS)
D	Ø8*20 mm 	40+2(PCS)	Q	32*19*19 mm 	6(PCS)
E	Ø6*30 mm 	108+4(PCS)	R	58*29*29 mm 	12(PCS)
F	107 mm 	4(PCS)	S	38*13*6 mm 	4(PCS)
G	168 mm 	6(PCS)	T	Ø1/4*12 mm mm 	24+1(PCS)
H	Ø5/32*17 mm 	8(PCS)	U	Back panel locking strap 	40+2(PCS)
I	Ø5/32*8 mm 	12(PCS)	V	Ø2.9*18 mm 	40+2(PCS)
J	15*19*16 mm 	16(PCS)	W		2(PCS)
K	Ø3.5*12 mm 	16+1(PCS)	X	Ø20*0.2 mm	208(PCS)
L	Ø26 mm 	8(PCS)	Y	Y-DL  Y-CL 	6(PCS)
M	Ø3.5*12 mm 	72+4(PCS)		Y-CR  Y-DR	6(PCS)

POINTS TO NOTE IN THE HARDWARE LIST

C	Ø8*30 mm 	72+4(PCS)
D	Ø8*20 mm 	40+2(PCS)
E	Ø6*30 mm 	108+4(PCS)

Please note that dowels C, D, and E have the same shape.
Please distinguish them according to the installation instructions and length.


K	Ø3*12 mm 	16+1(PCS)
M	Ø3.5*12 mm 	72+4(PCS)
P	Ø2.9*12 mm 	76+4(PCS)

Please note that screws K, M, and P have similar shapes.
Please install according to the instructions and distinguish them.

N	Ø3.9*22 mm 	38+3(PCS)
O	Ø3.9*30 mm 	28+2(PCS)


Please note that screws N and O have the same shape.
Please distinguish them according to the installation instructions and length.

Step/Étape 1

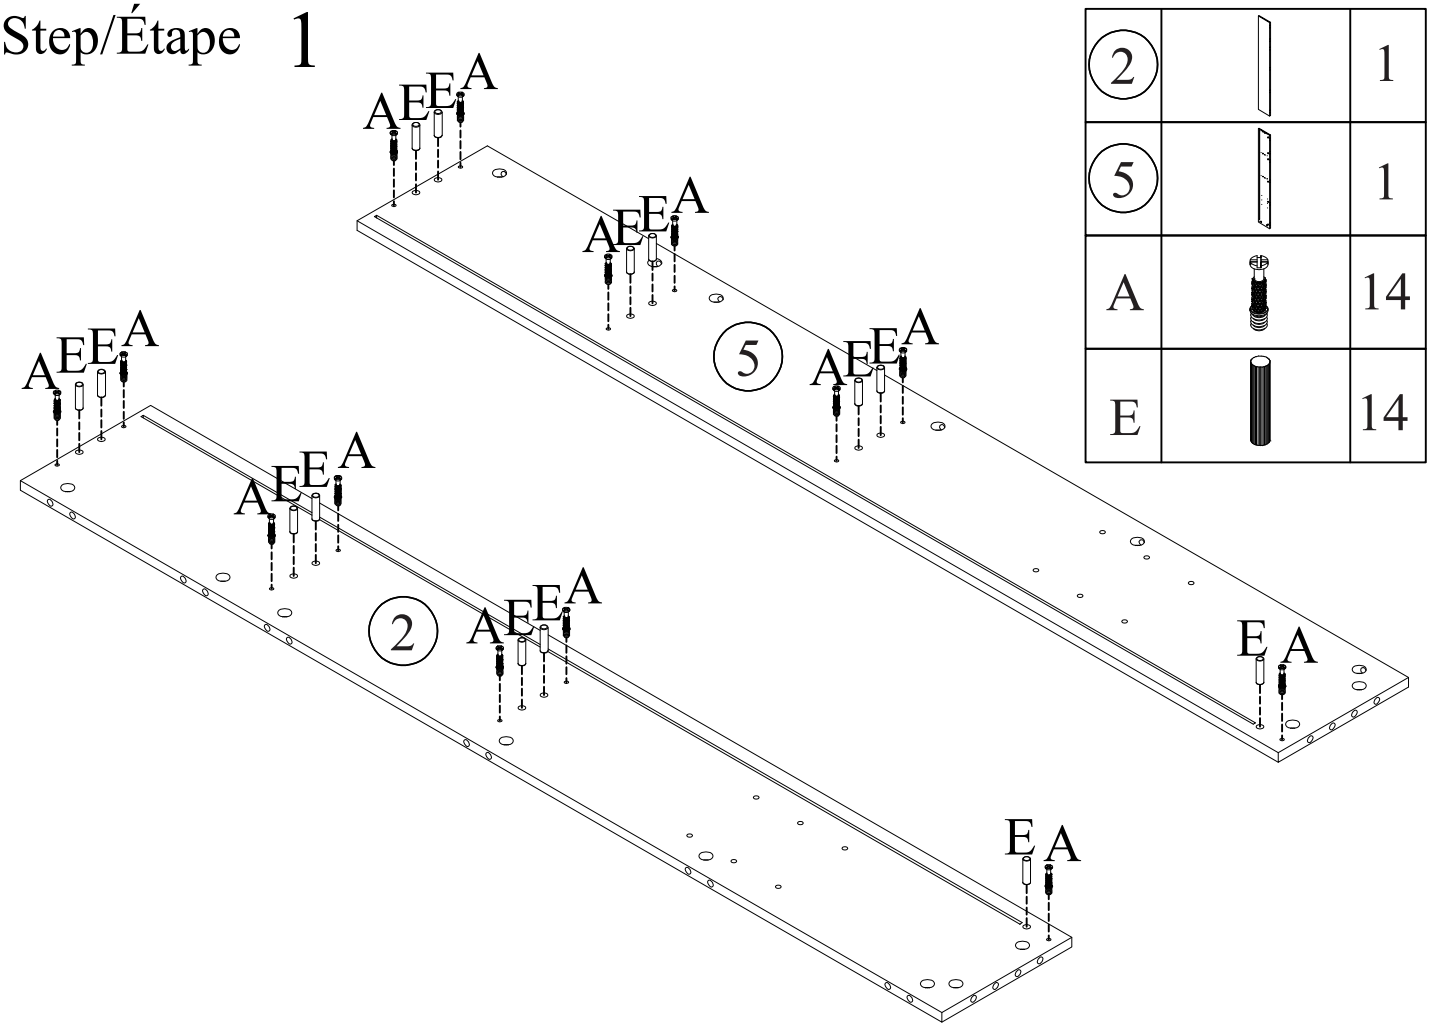



2		1
5		1
A		14
E		14

Step/Étape 2

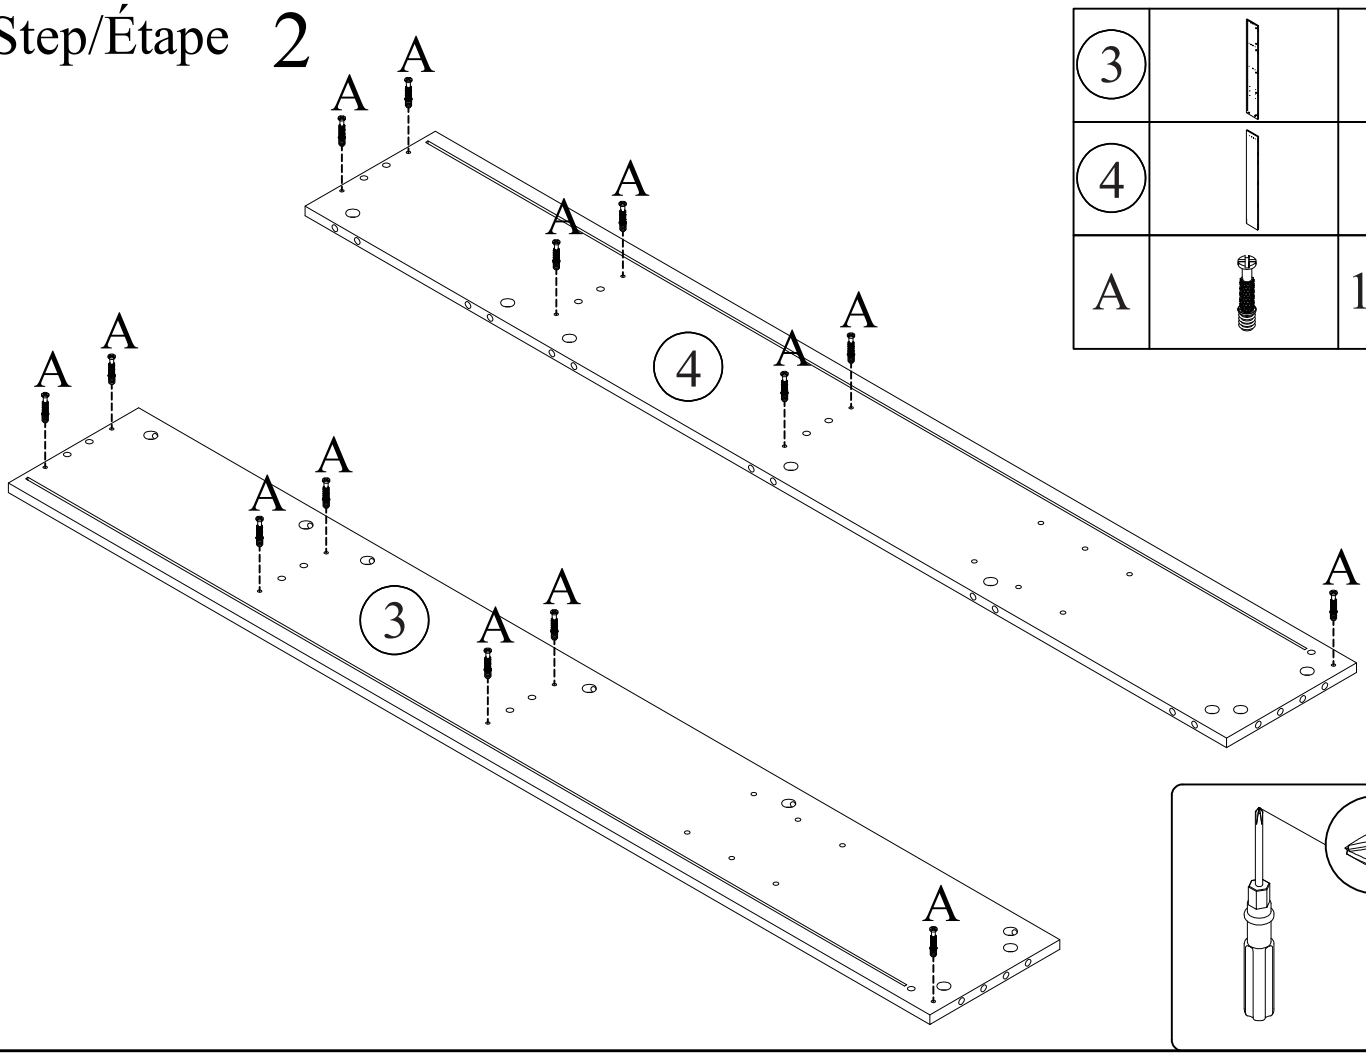


3		1
4		1
A		14

Step/Étape 3


8		2
9		2
A		6
B		6
E		4


X2

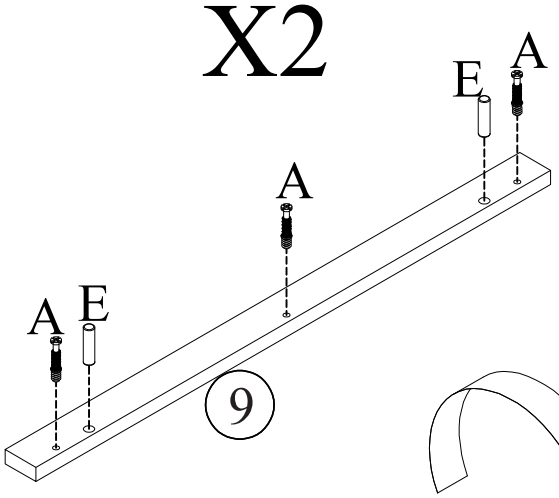


90°

X2

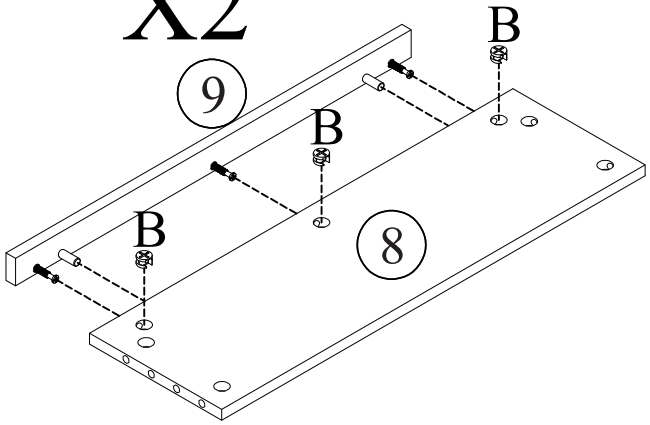


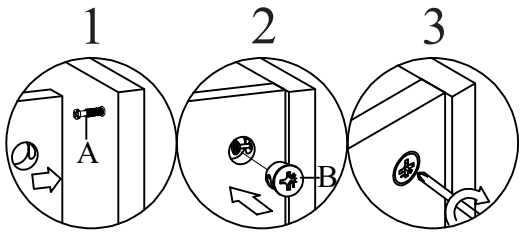

Step/Étape 4


13		4
A		16
E		16

X4

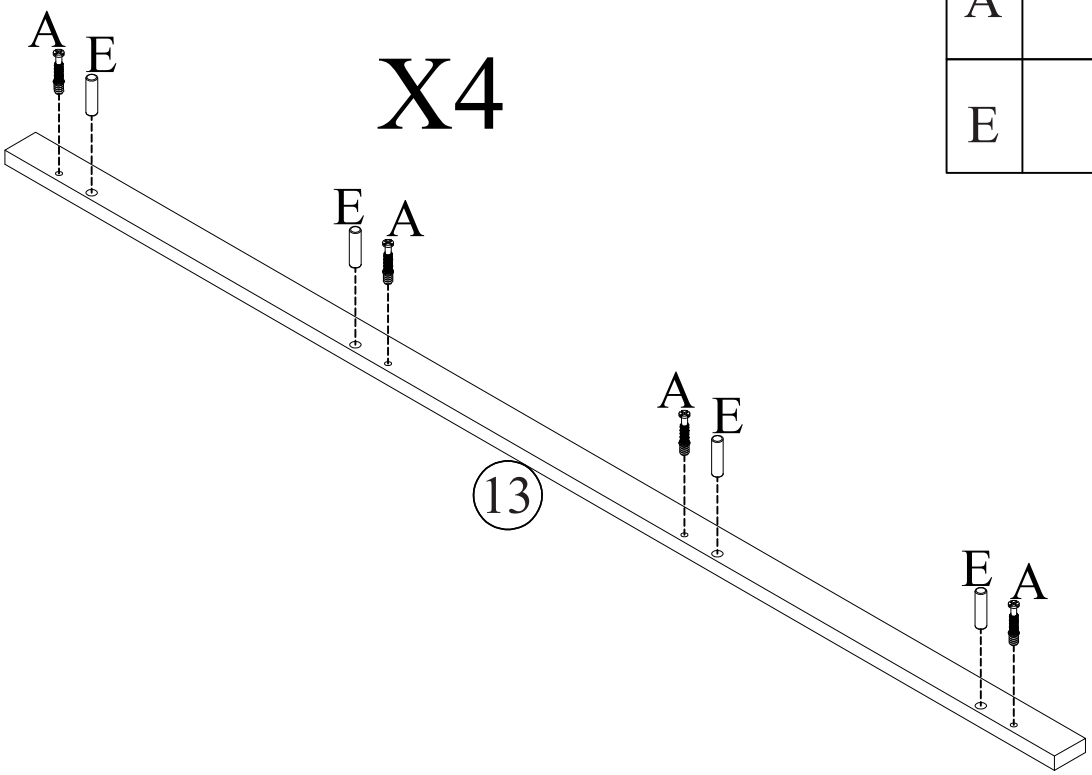


Step/Étape 5


B		4

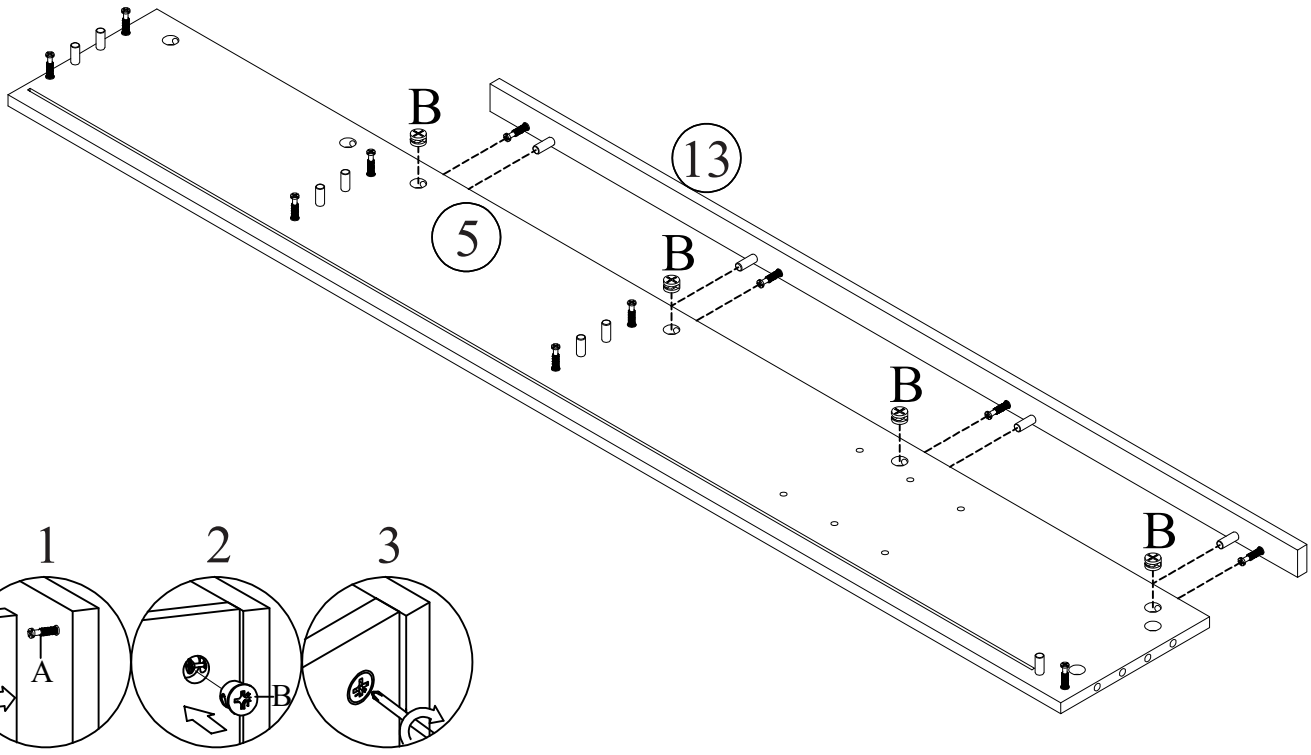

Step/Étape 6


B		4

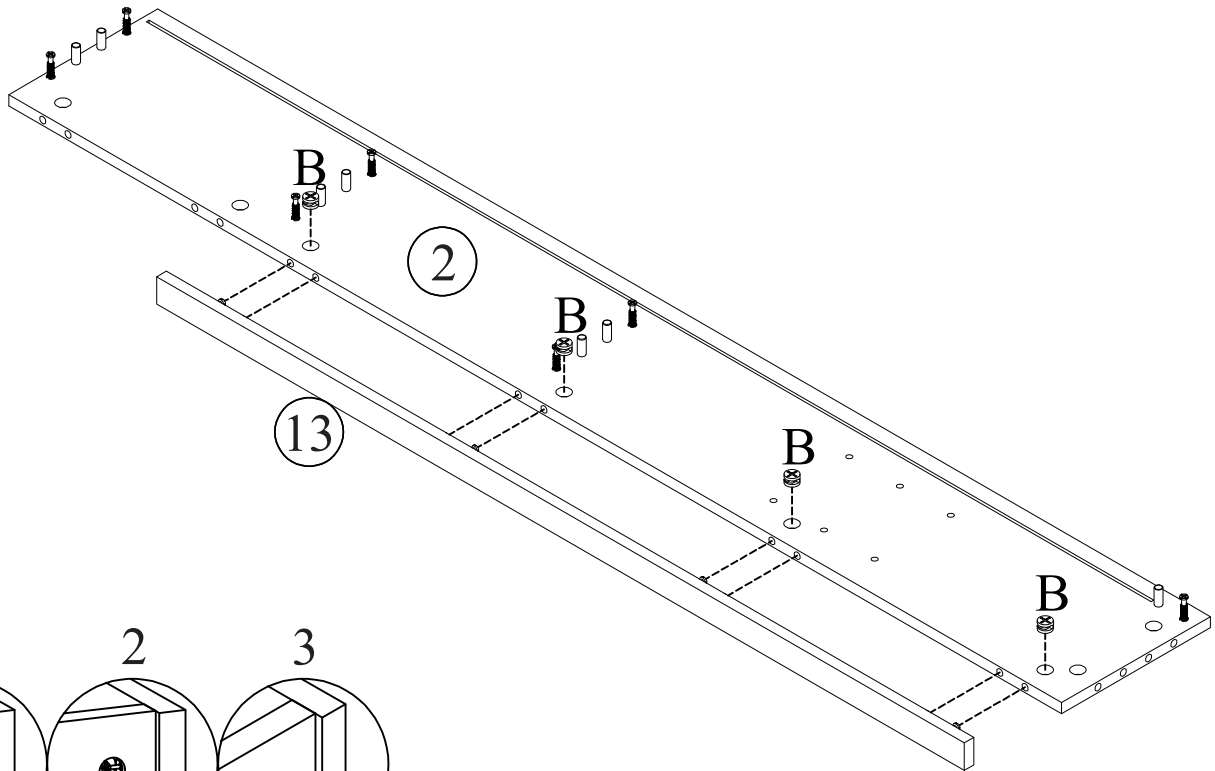

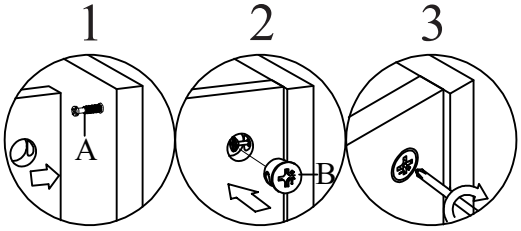


Step/Étape 7

B		4

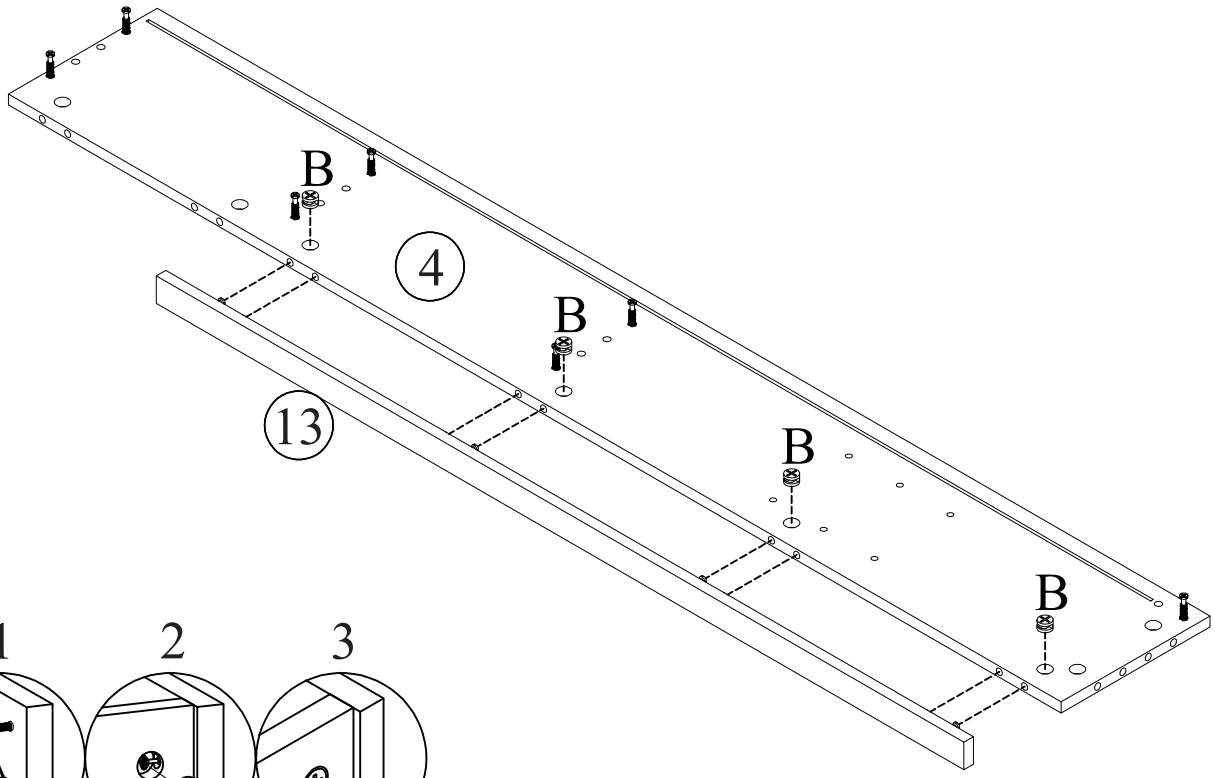




Step/Étape 8


B		4

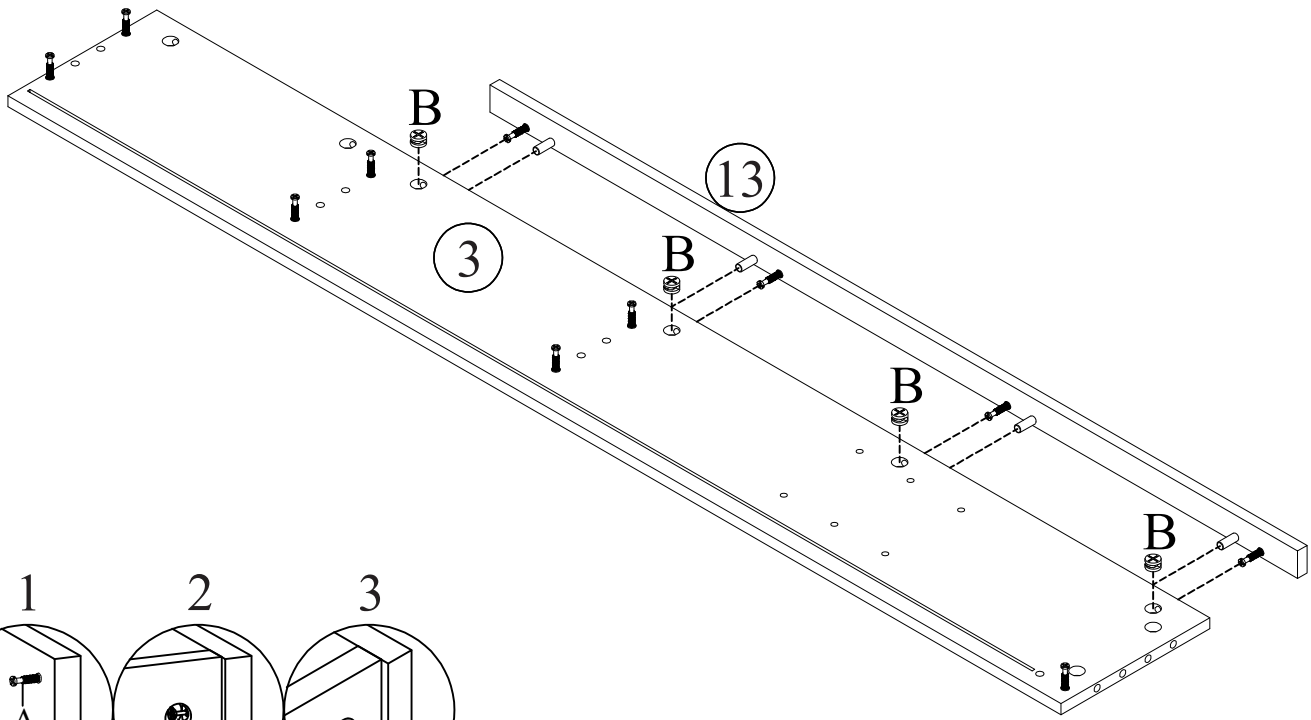


Step/Étape 9


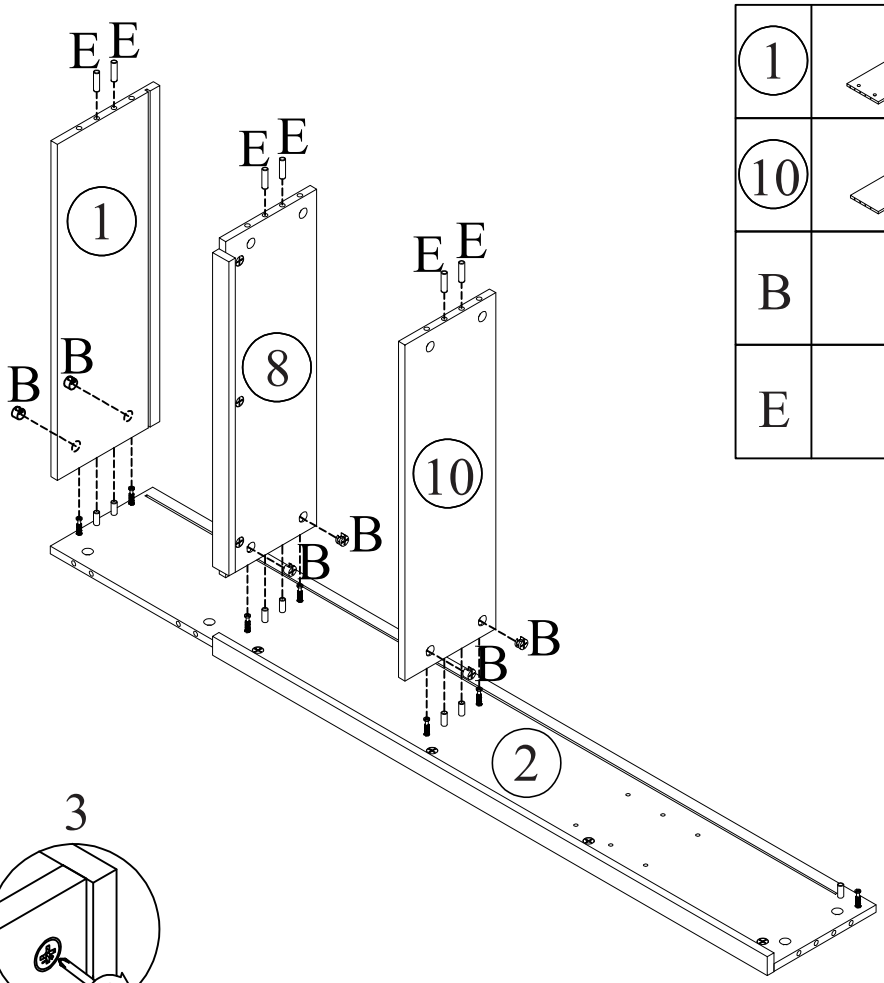



1		1
10		1
B		6
E		6

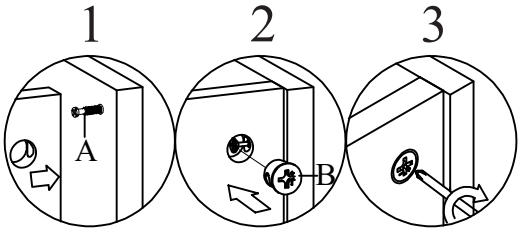


Step/Étape 10

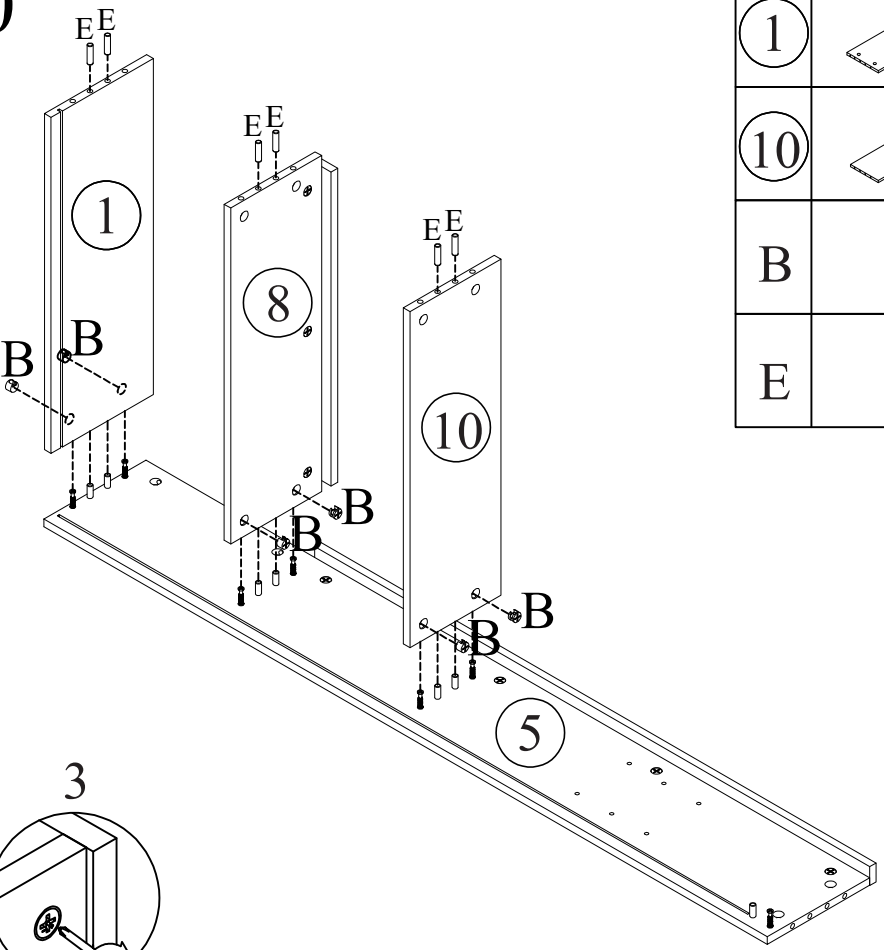


1		1
10		1
B		6
E		6

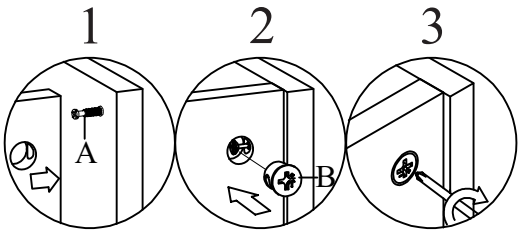



Step/Étape 11

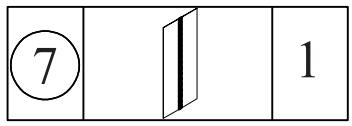

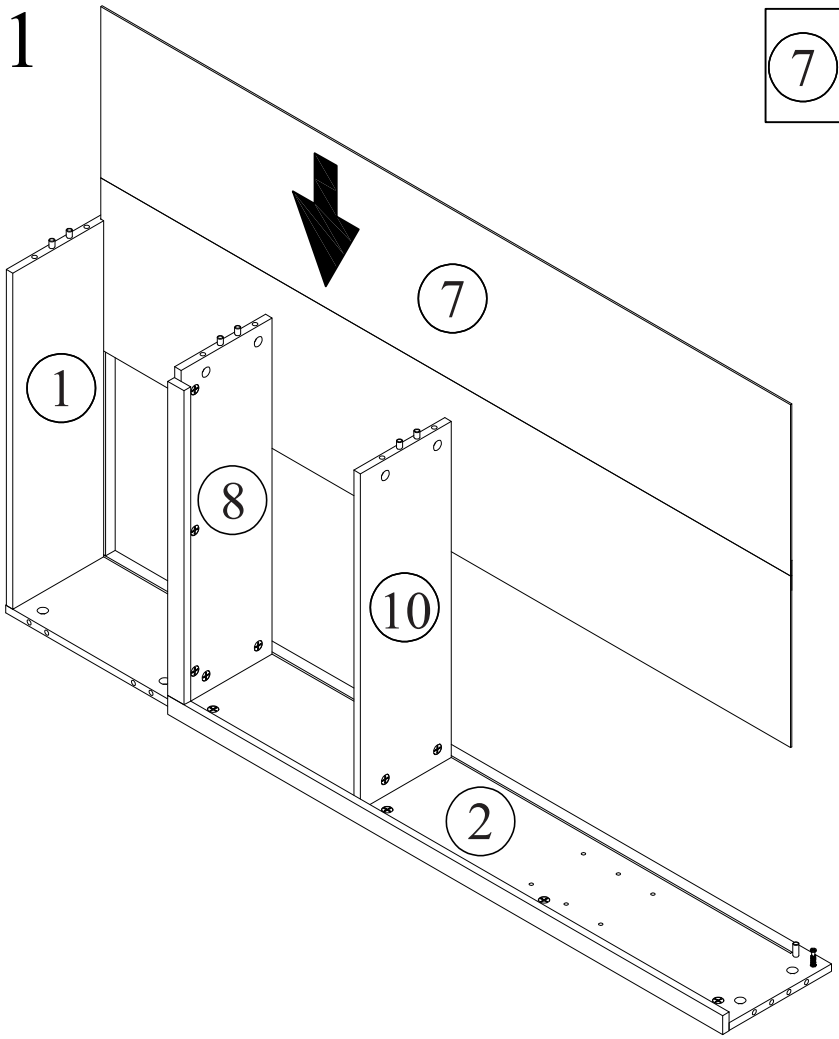



Step/Étape 12

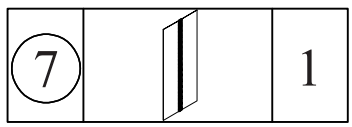


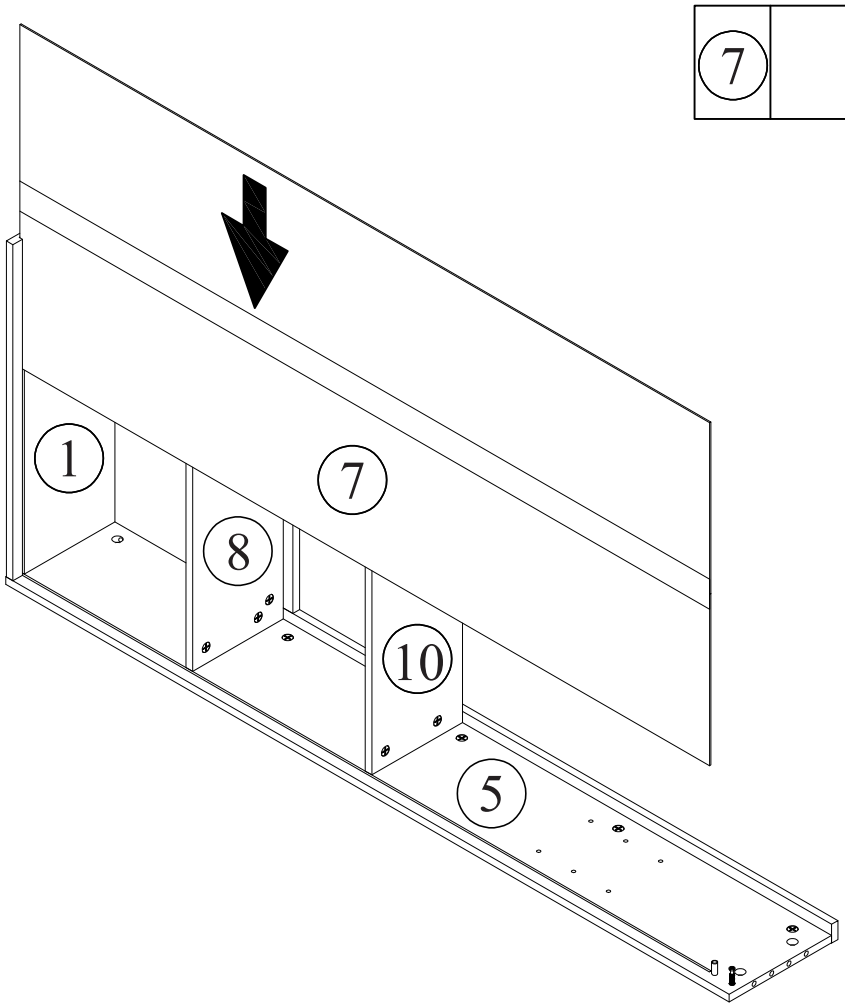

Step/Étape 13


12		1
B		1
E		1

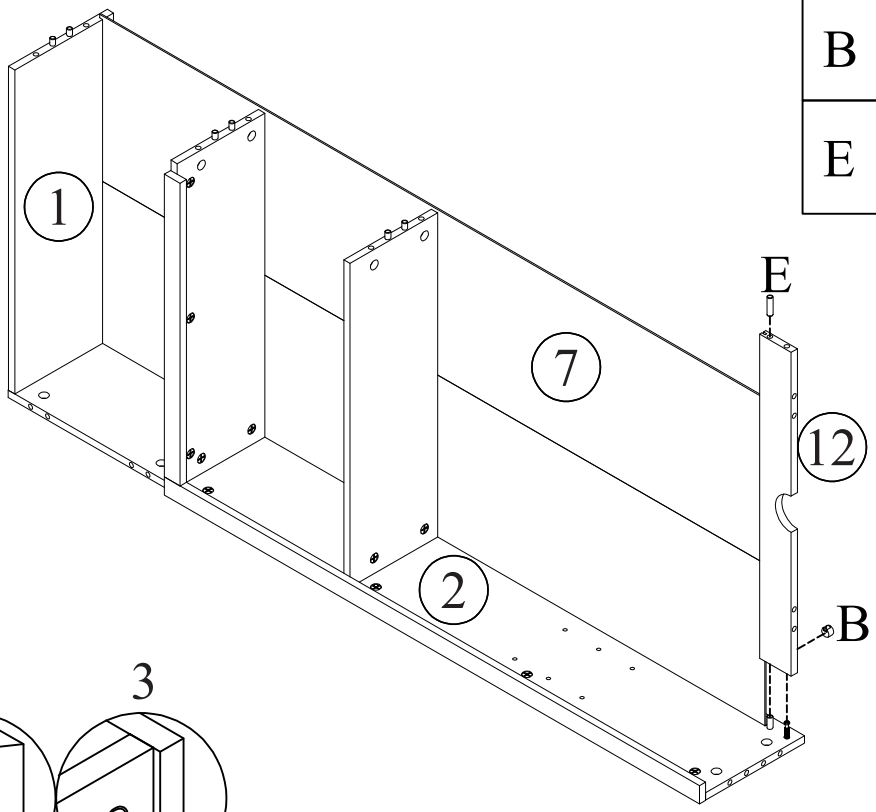


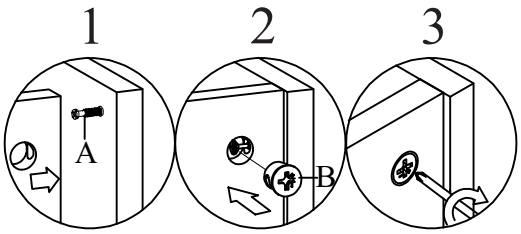

Step/Étape 14


12		1
B		1
E		1

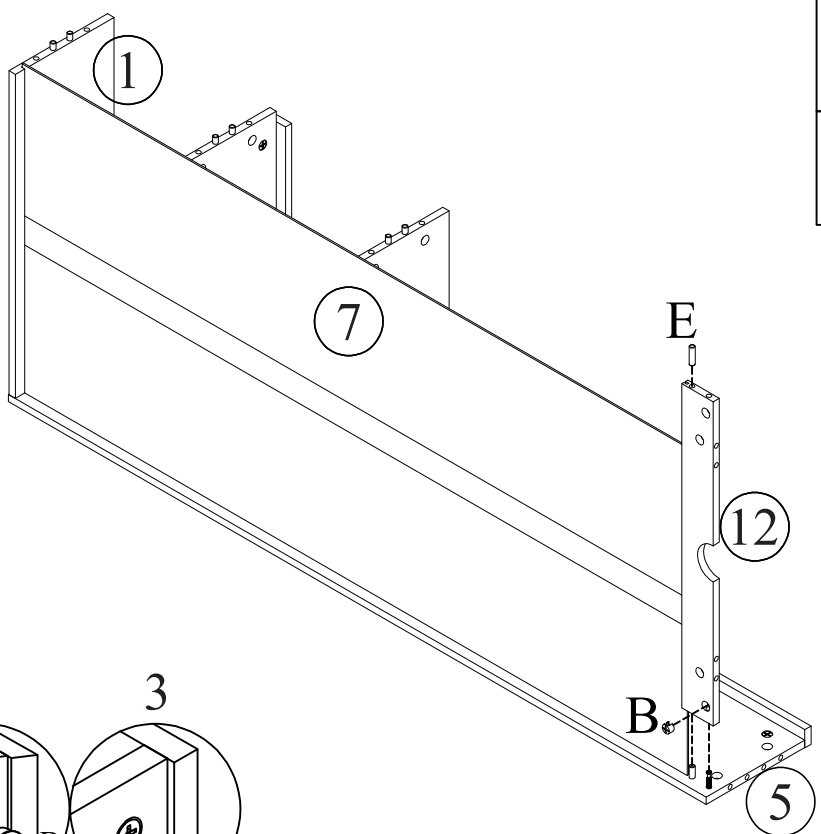


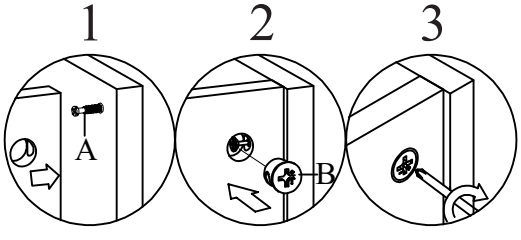

Step/Étape 15


B		7

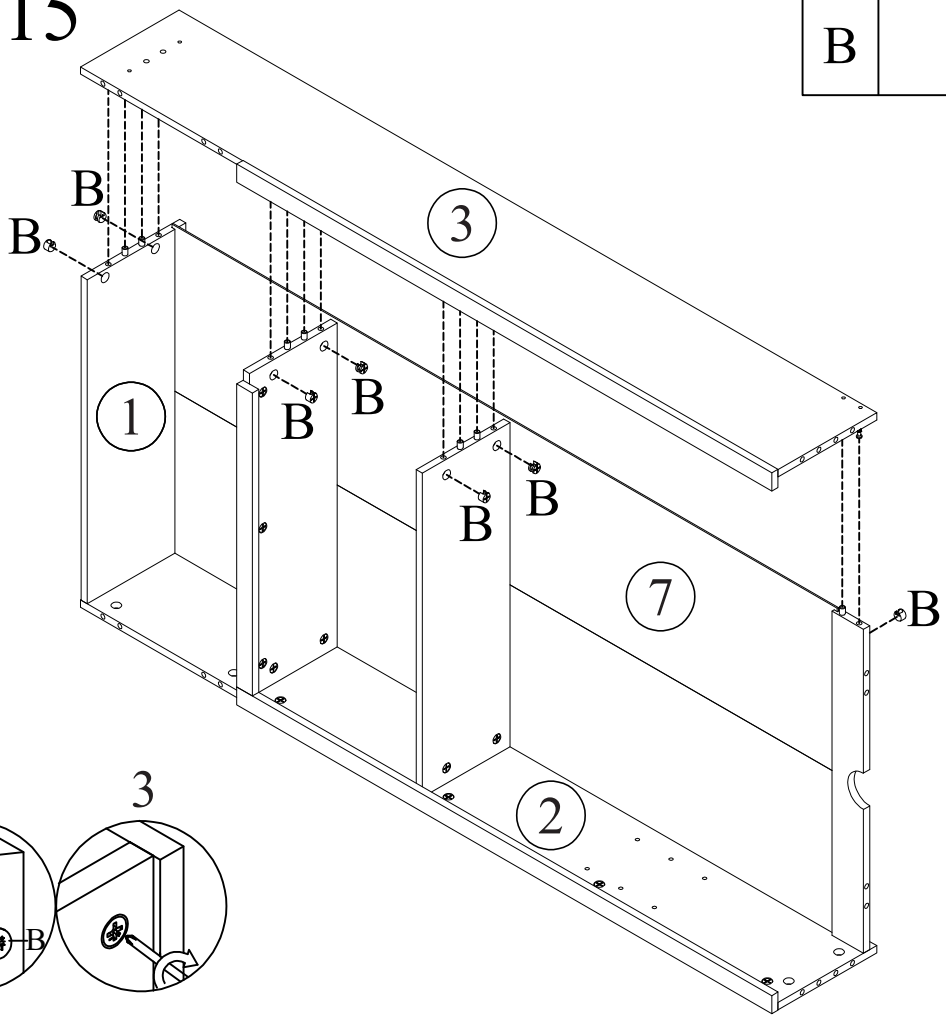


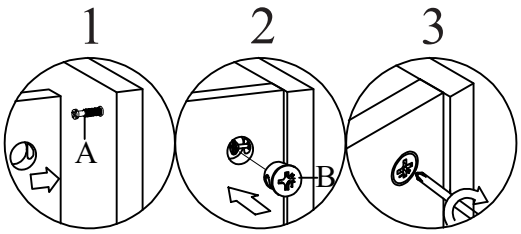

Step/Étape 16


B		7

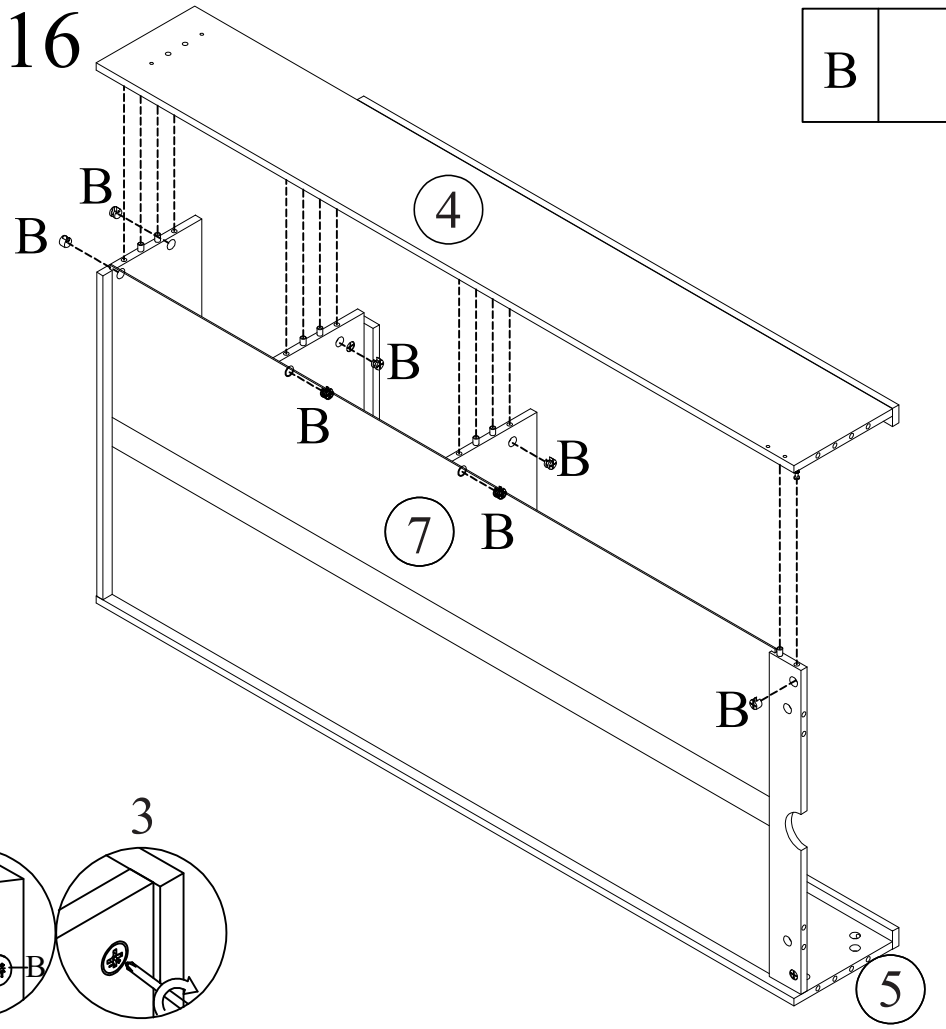

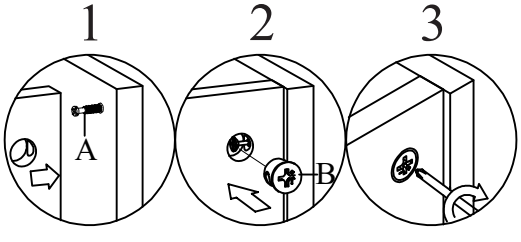


Step/Étape 17

A		4

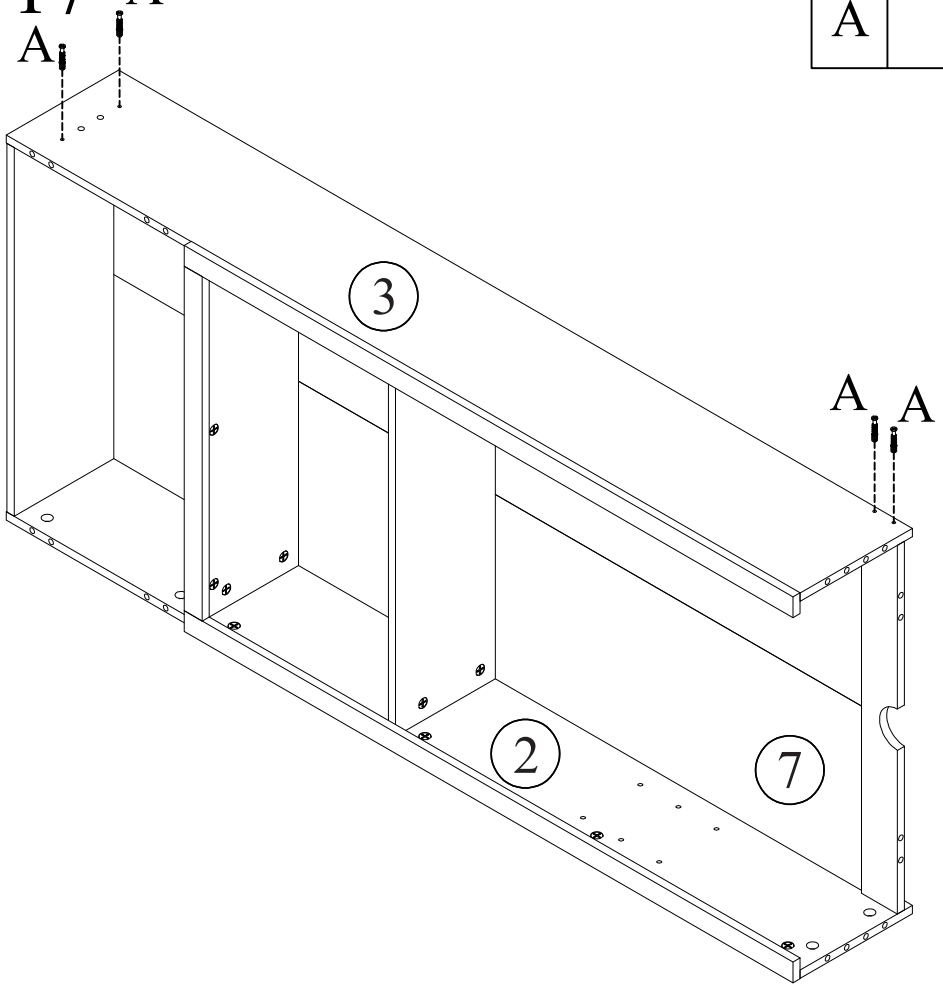


Step/Étape 18


A		4

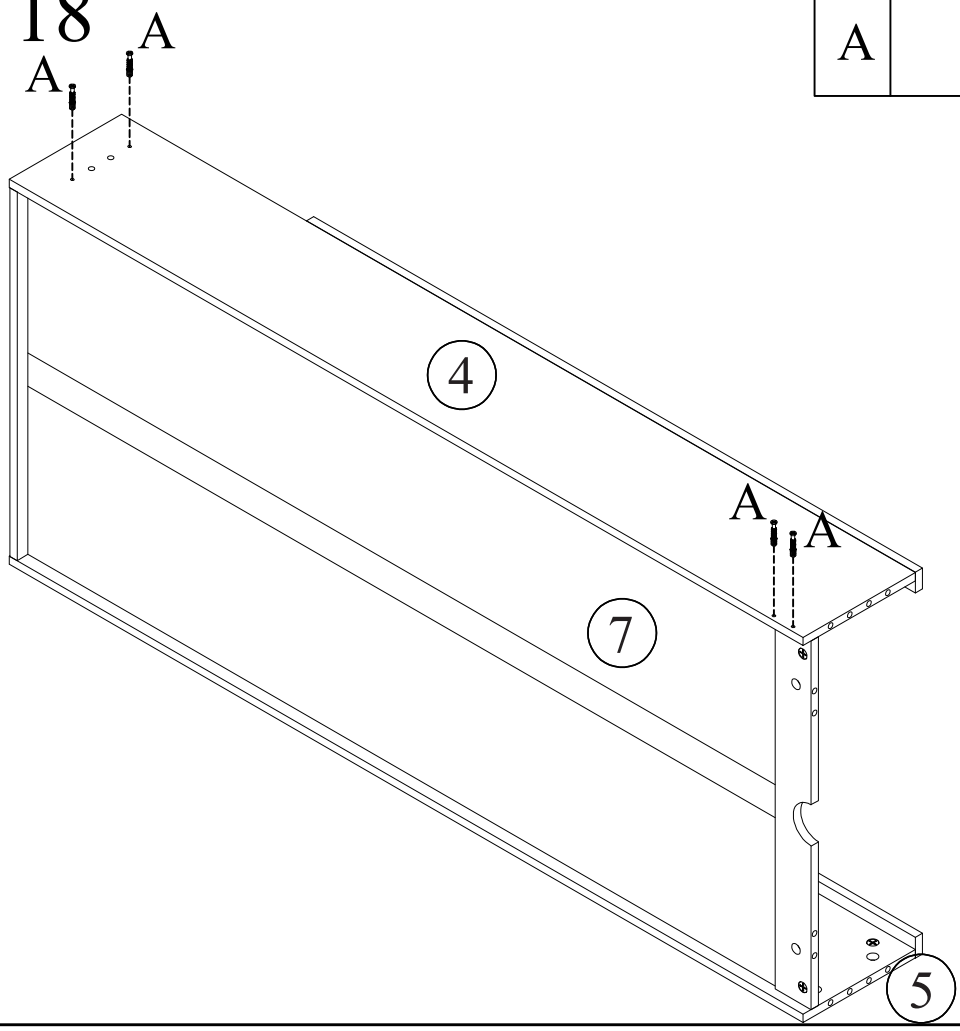


Step/Étape 19

6		2
A		8

X2

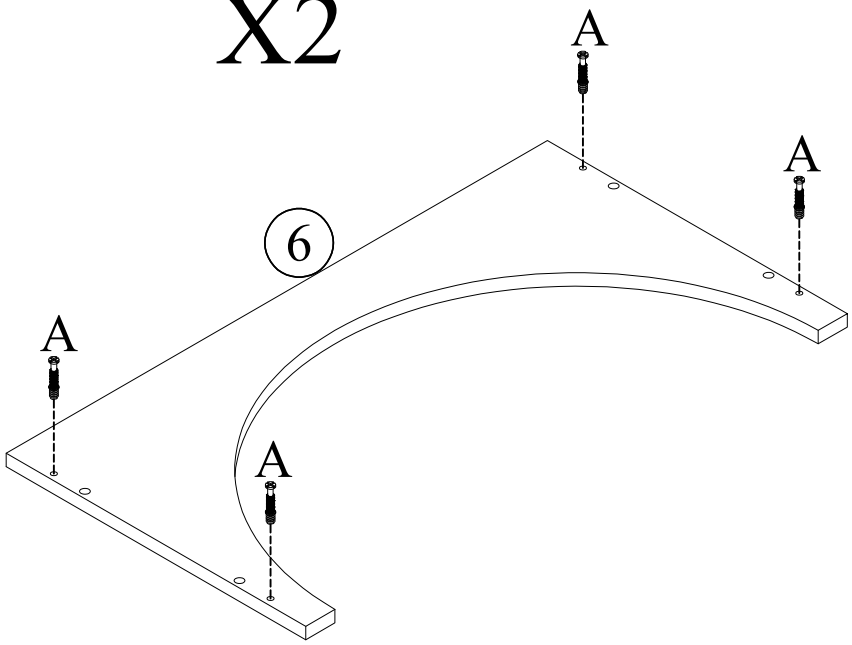

Step/Étape 20

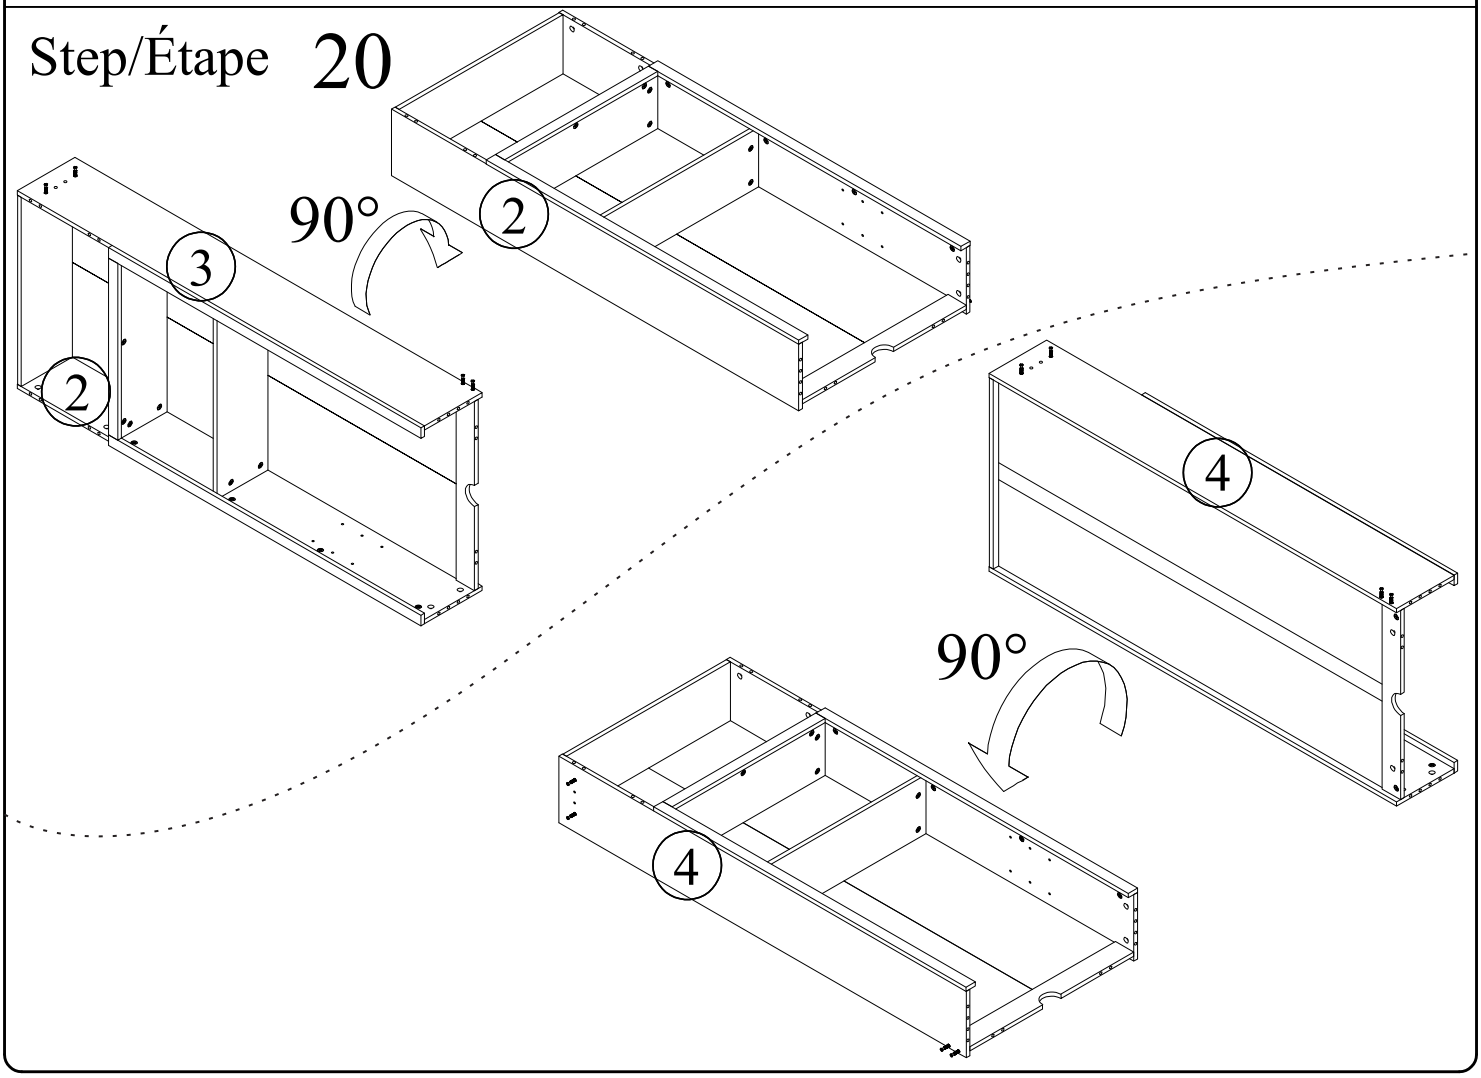

Step/Étape 21

B		4
E		4


Step/Étape 22

B		4
E		4


Step/Étape 23


15		2
A		8
Q		4
M		8


Step/Étape 24

14		1
B		8
E		8

Step/Étape 25


19		1
B		4
E		4

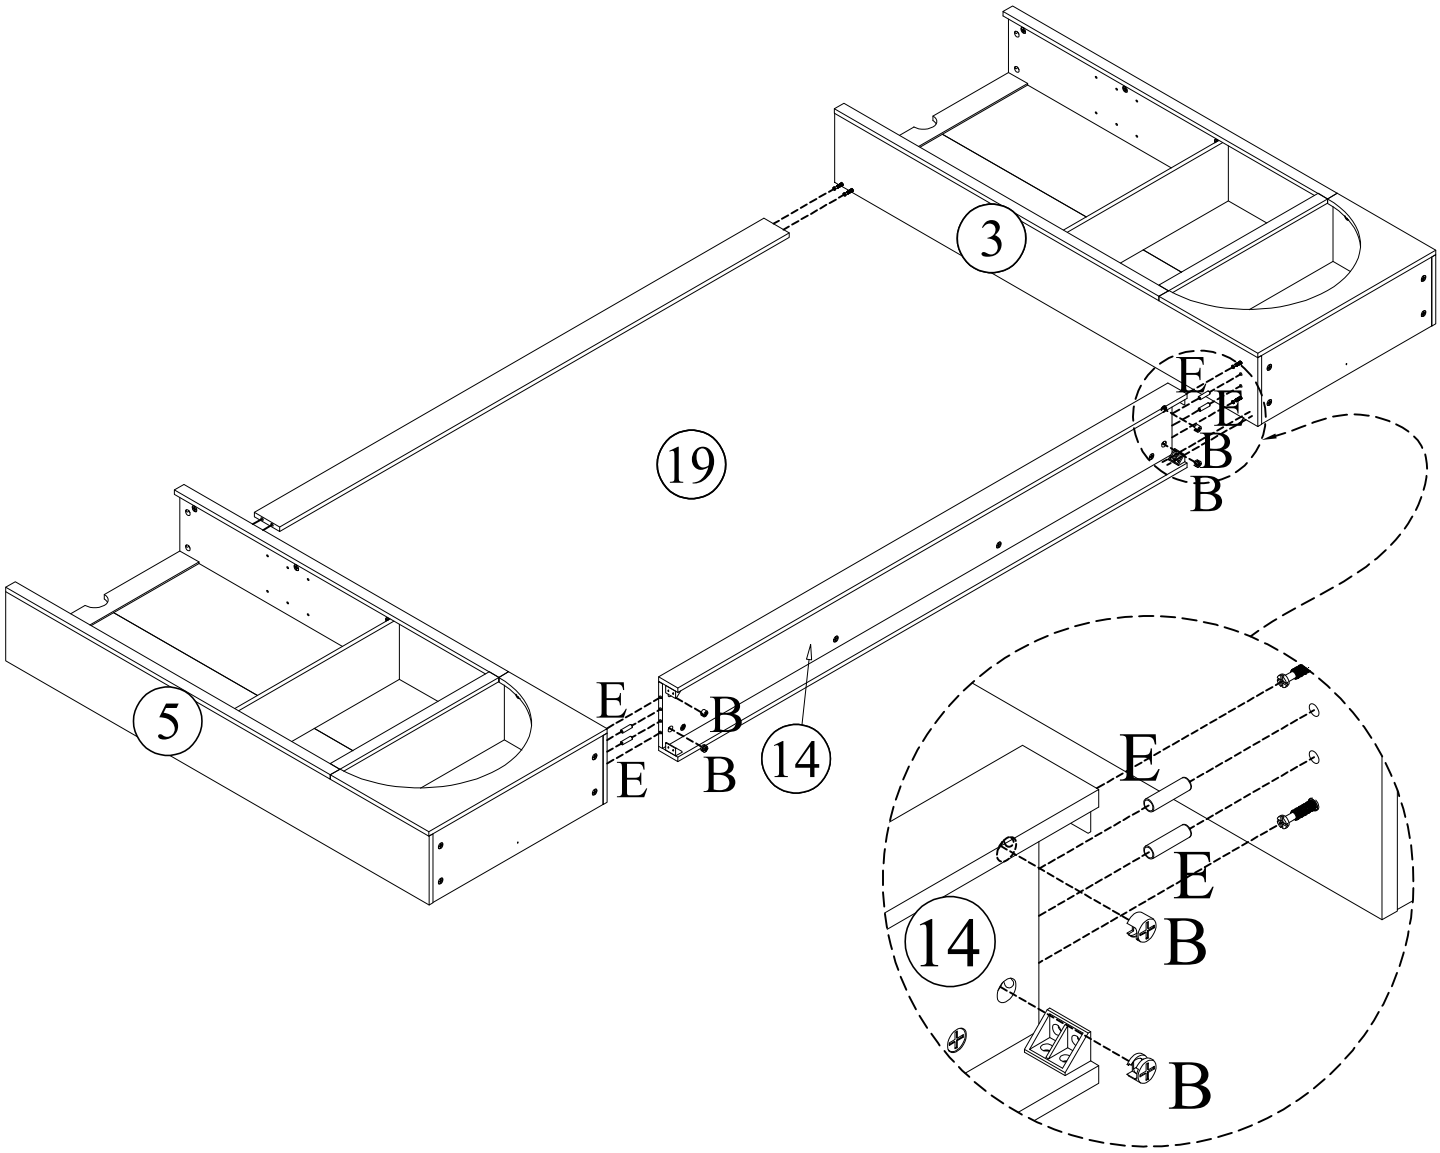


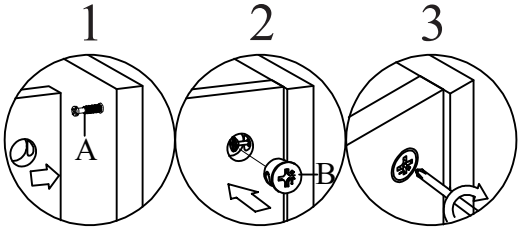


Step/Étape 26


B		4
M		8

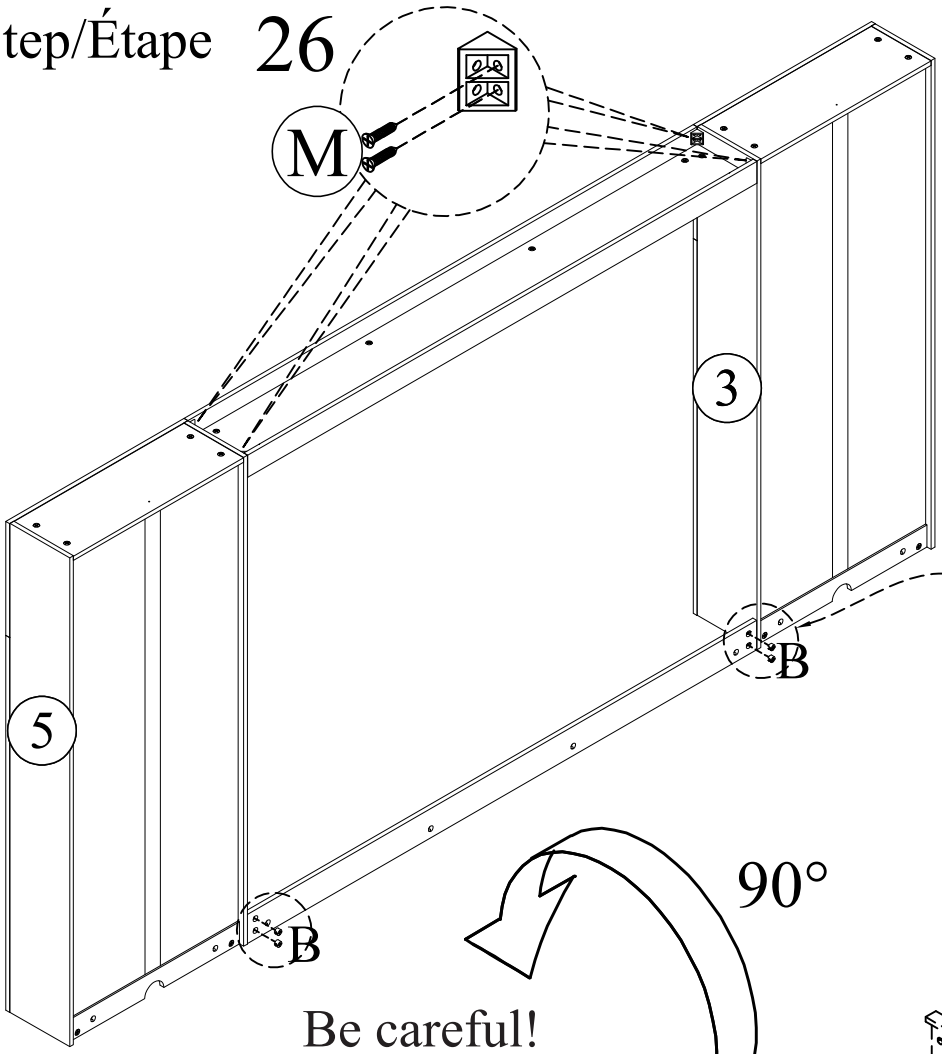


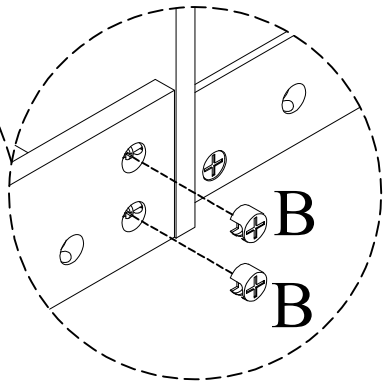



Be careful!
At least 2 people
are required.

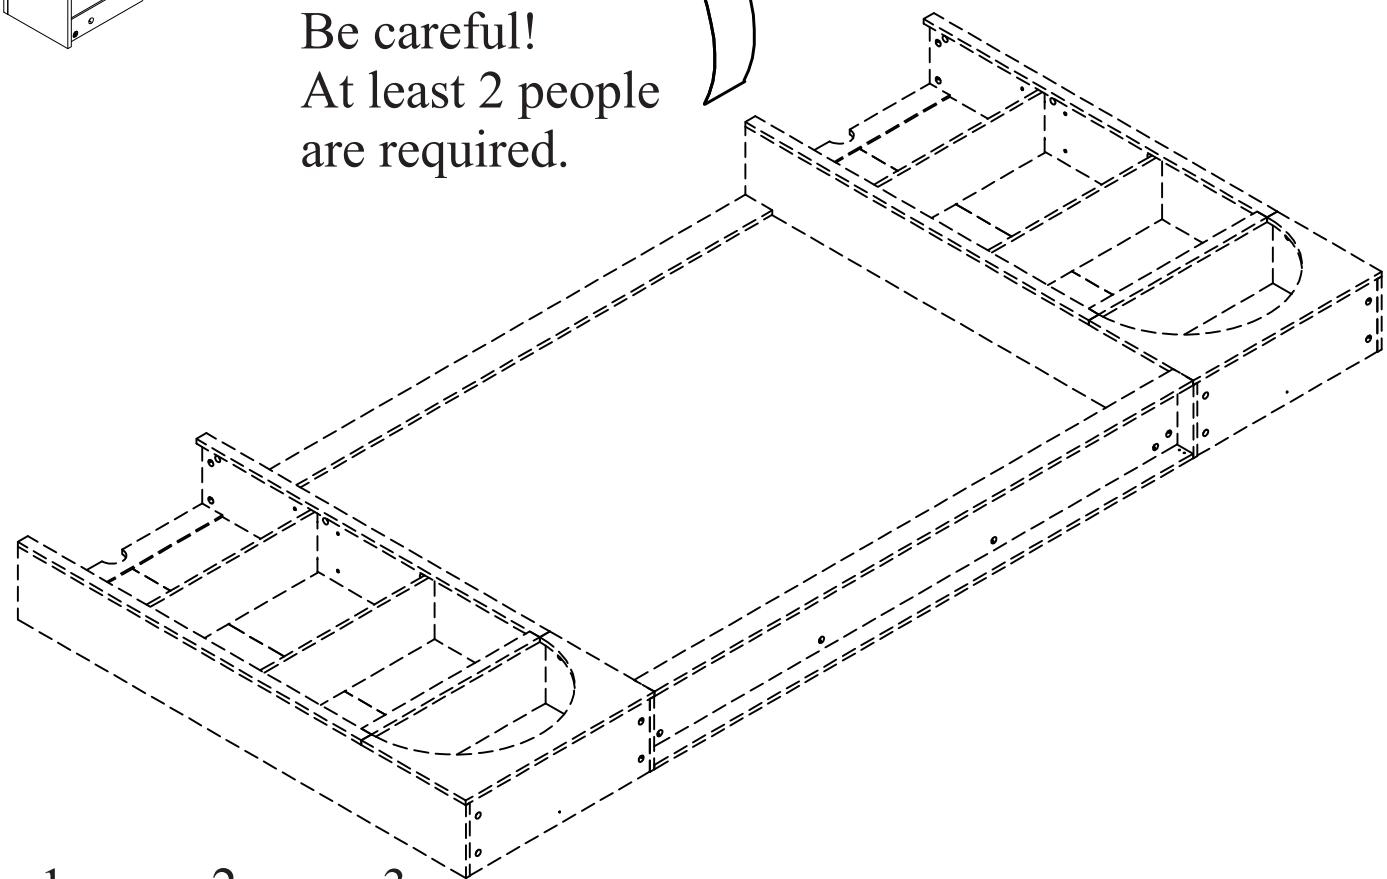


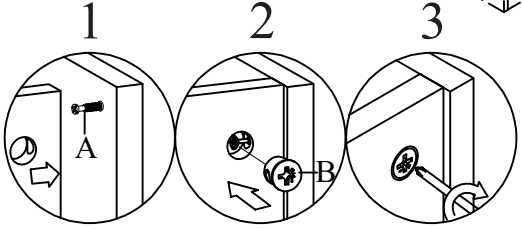



Step/Étape 27

26		1
A		3
C		2

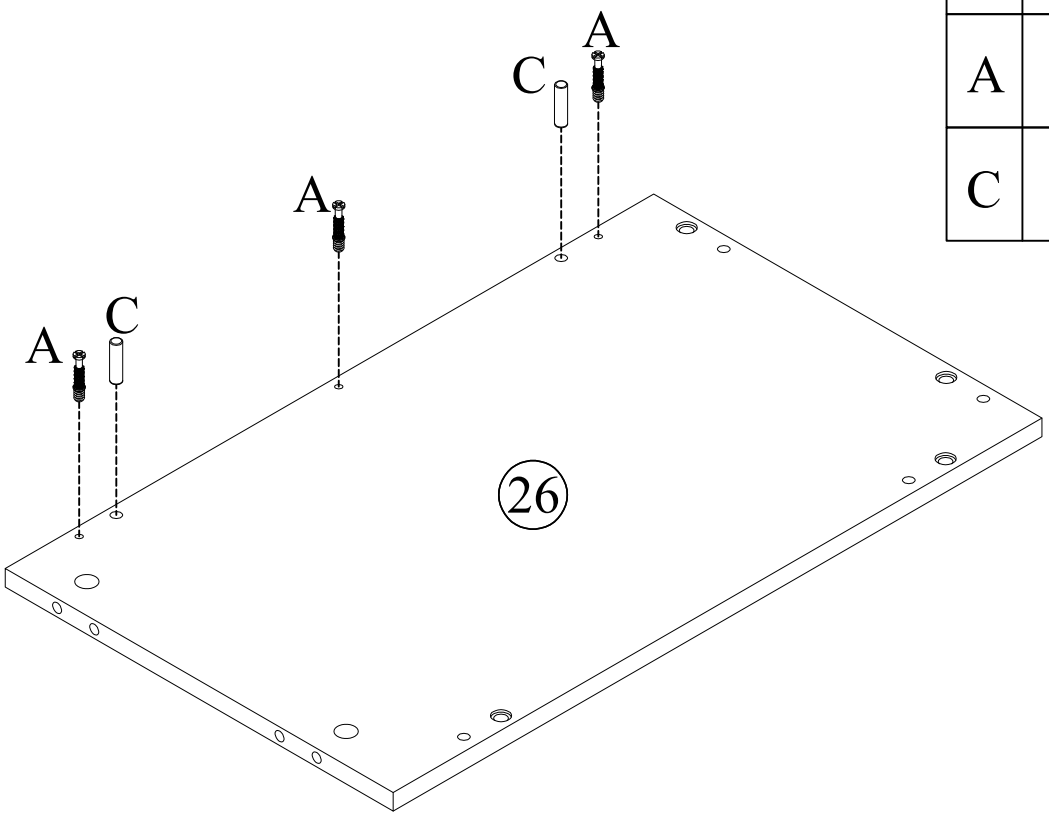



Step/Étape 28


30		1
A		3
C		2

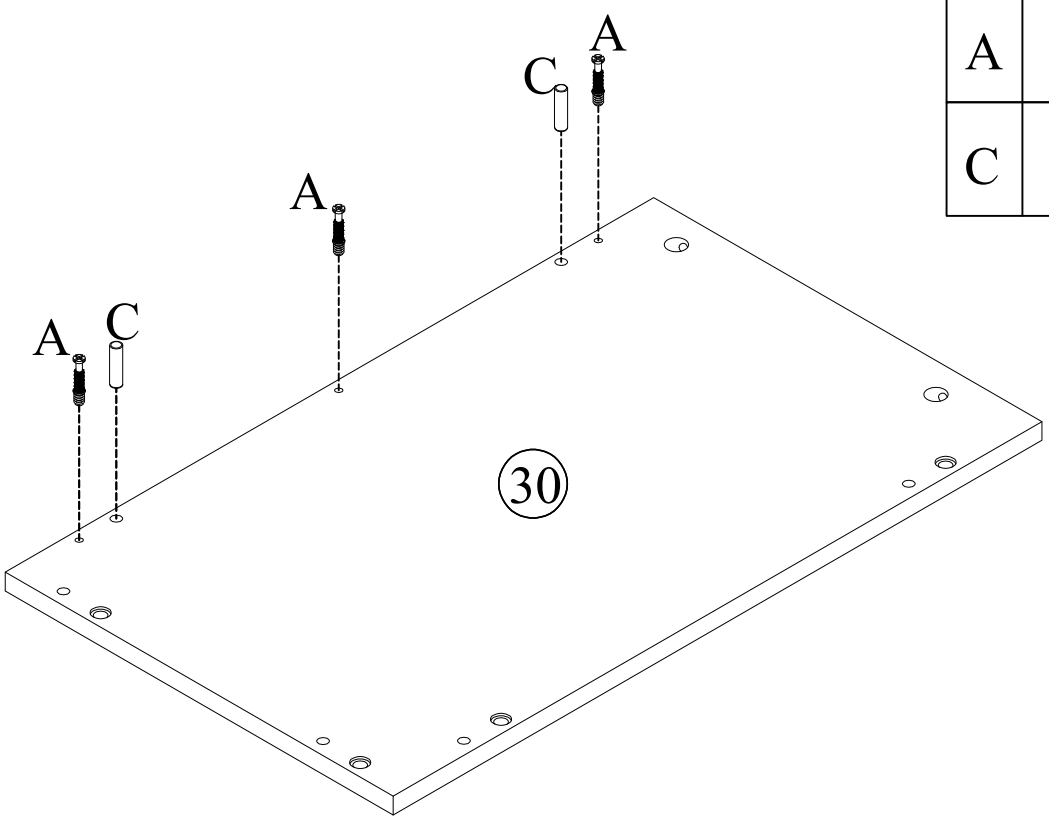


Step/Étape 29


33		1
B		3

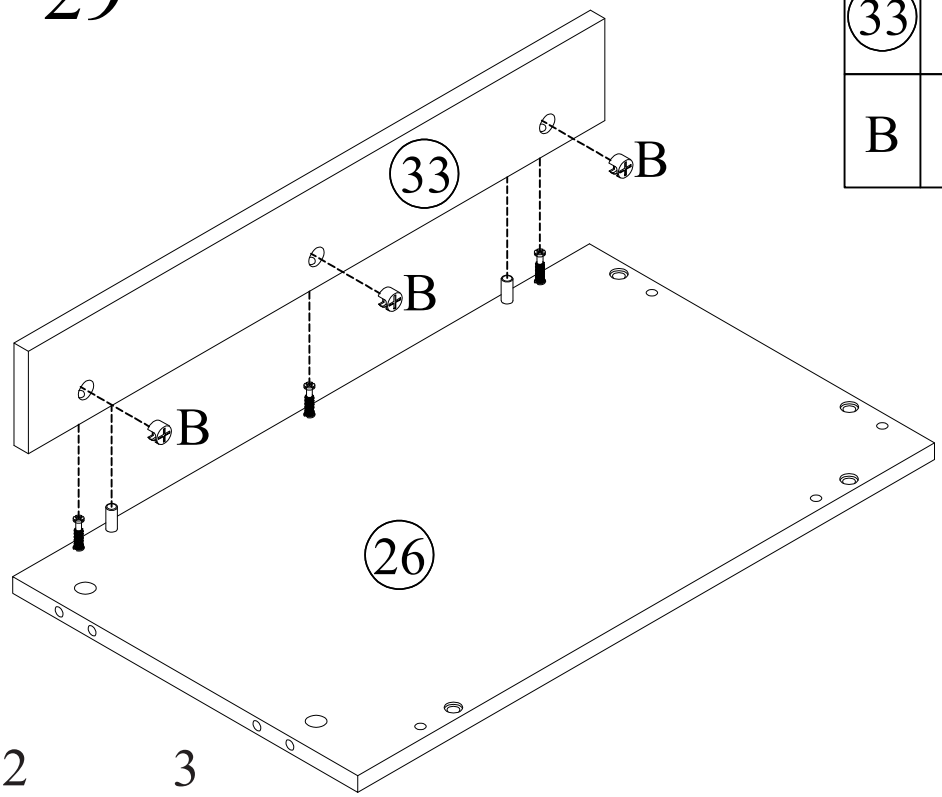


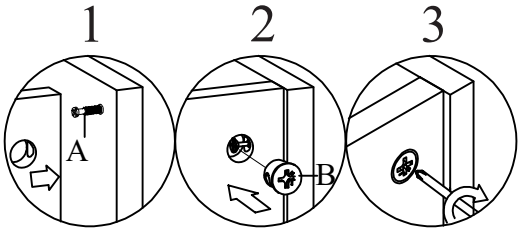


Step/Étape 30

33		1
B		3

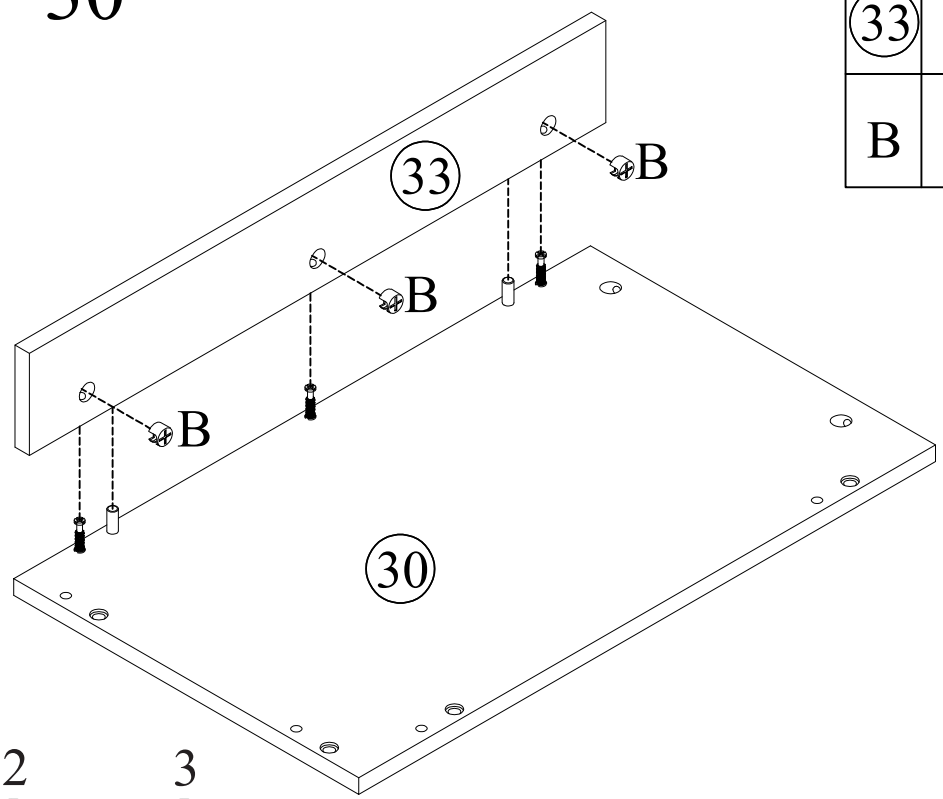

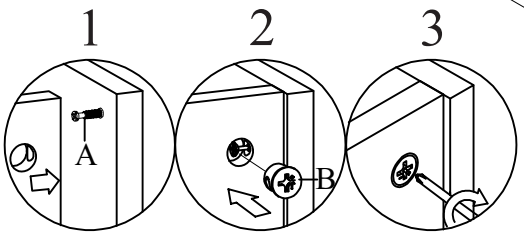


Step/Étape 31

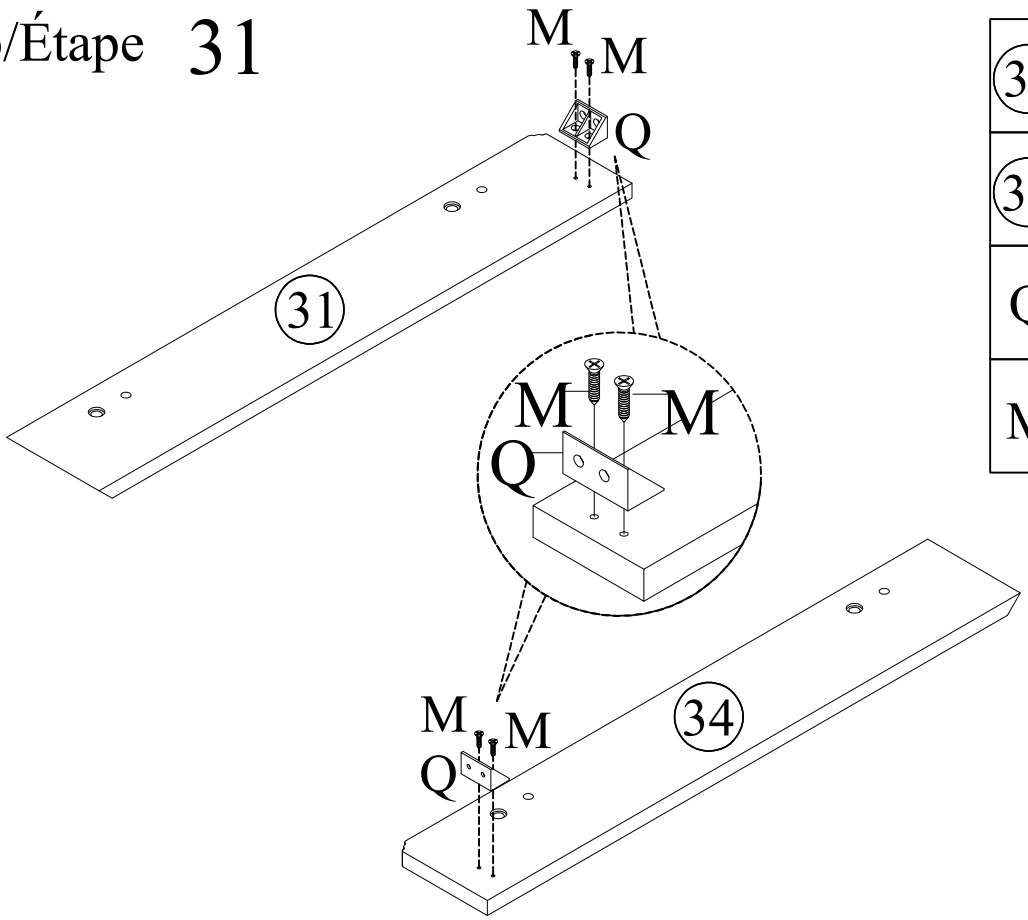

31		1
34		1
Q		2
M		4


Step/Étape 32

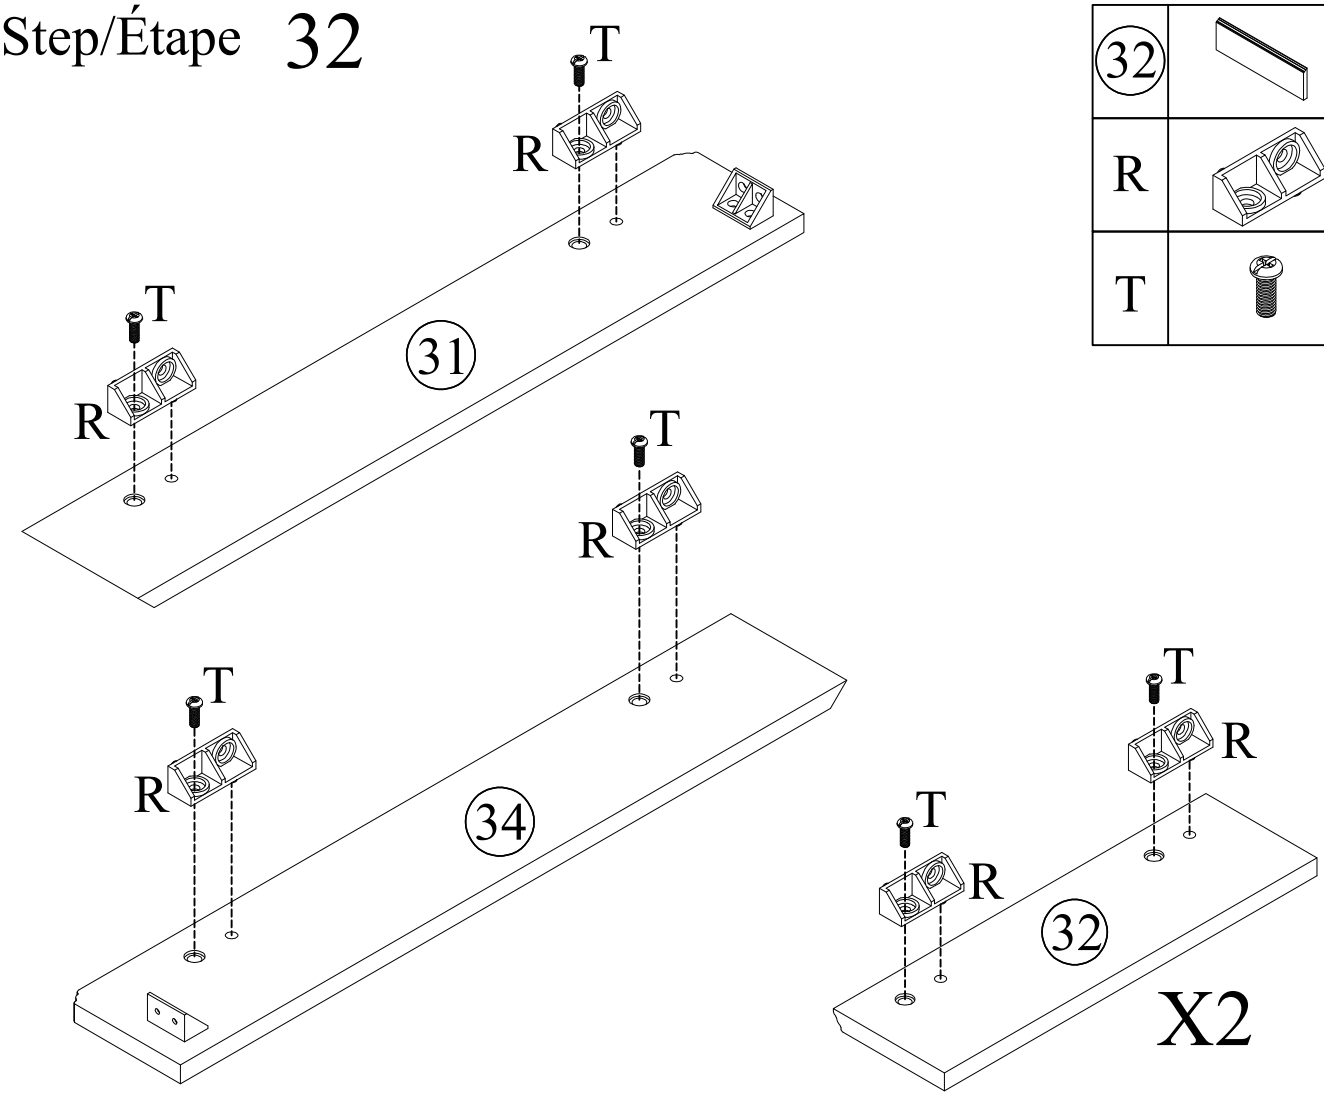

32		2
R		8
T		8


Step/Étape 33

T		2

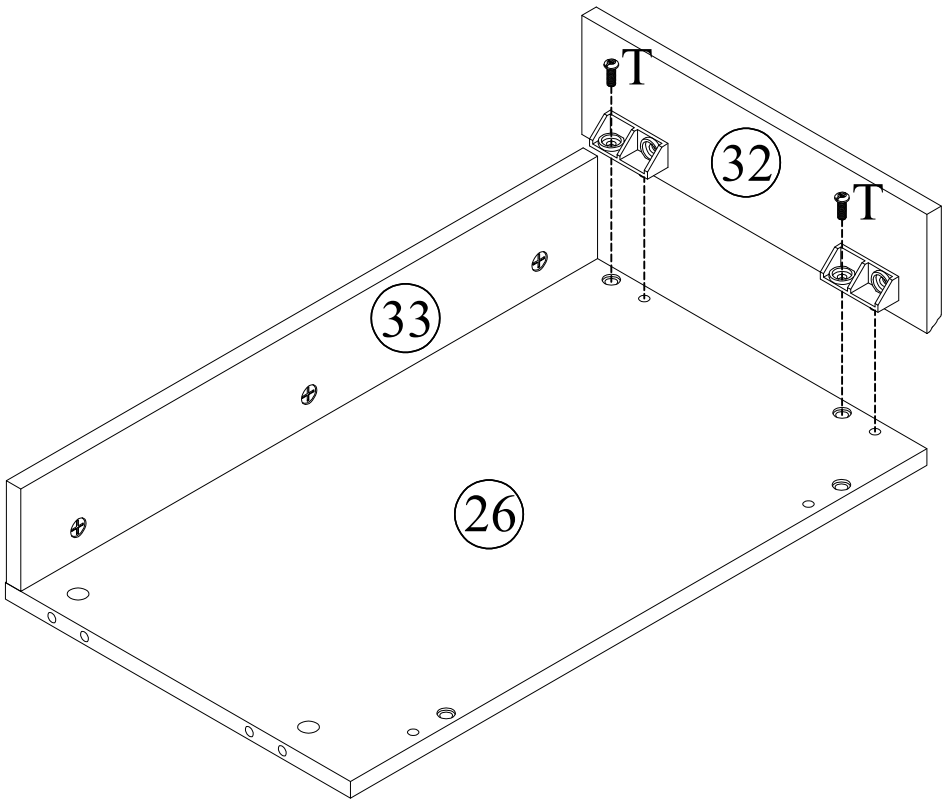


Step/Étape 34

T		2

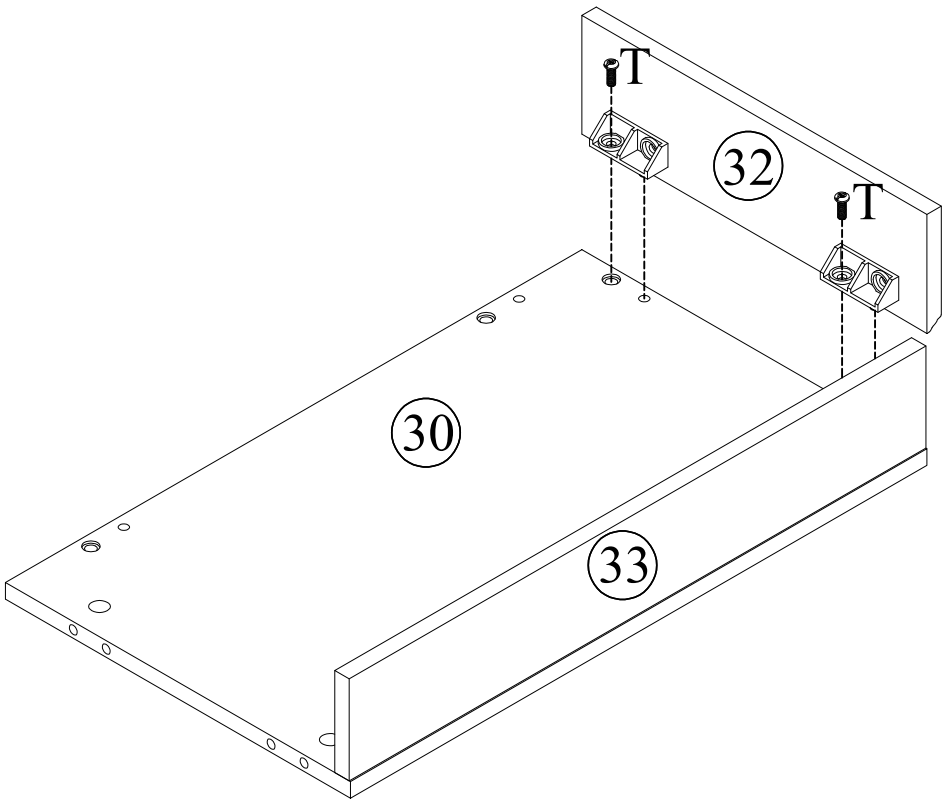


Step/Étape 35

T		2

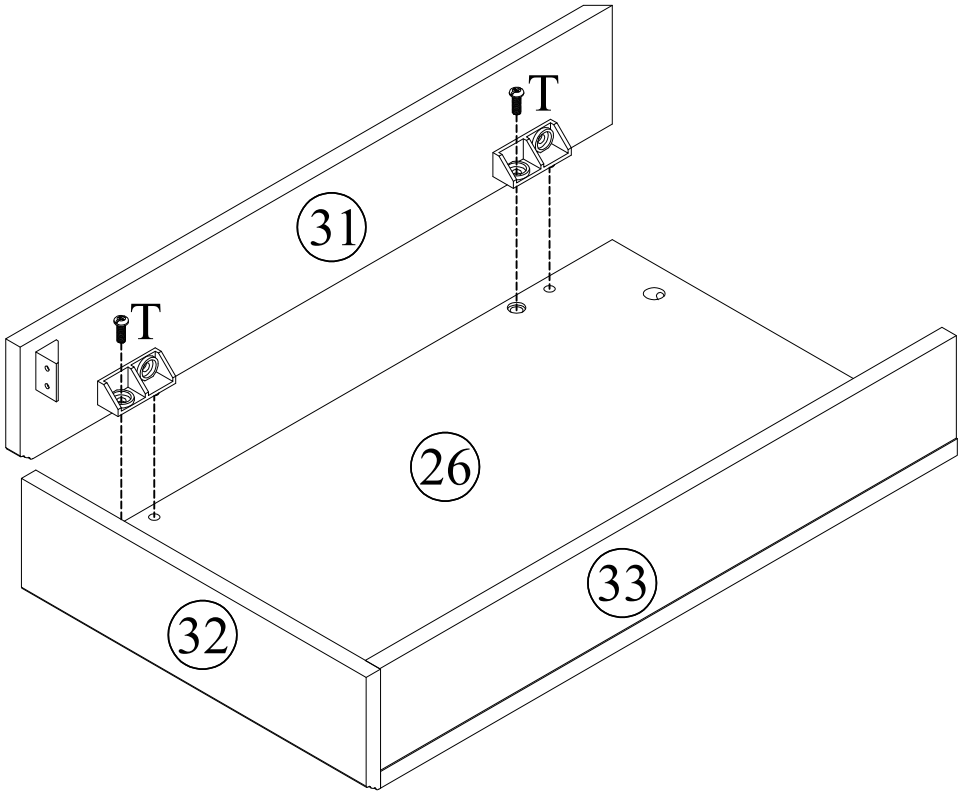


Step/Étape 36

T		2

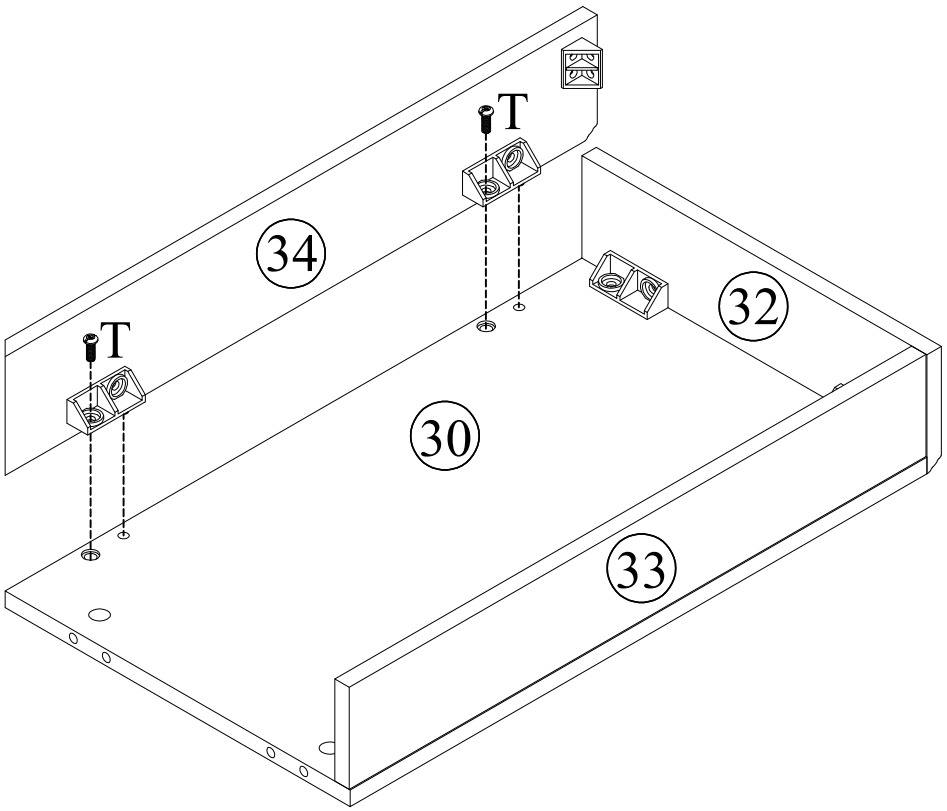


Step/Étape 37

M		2

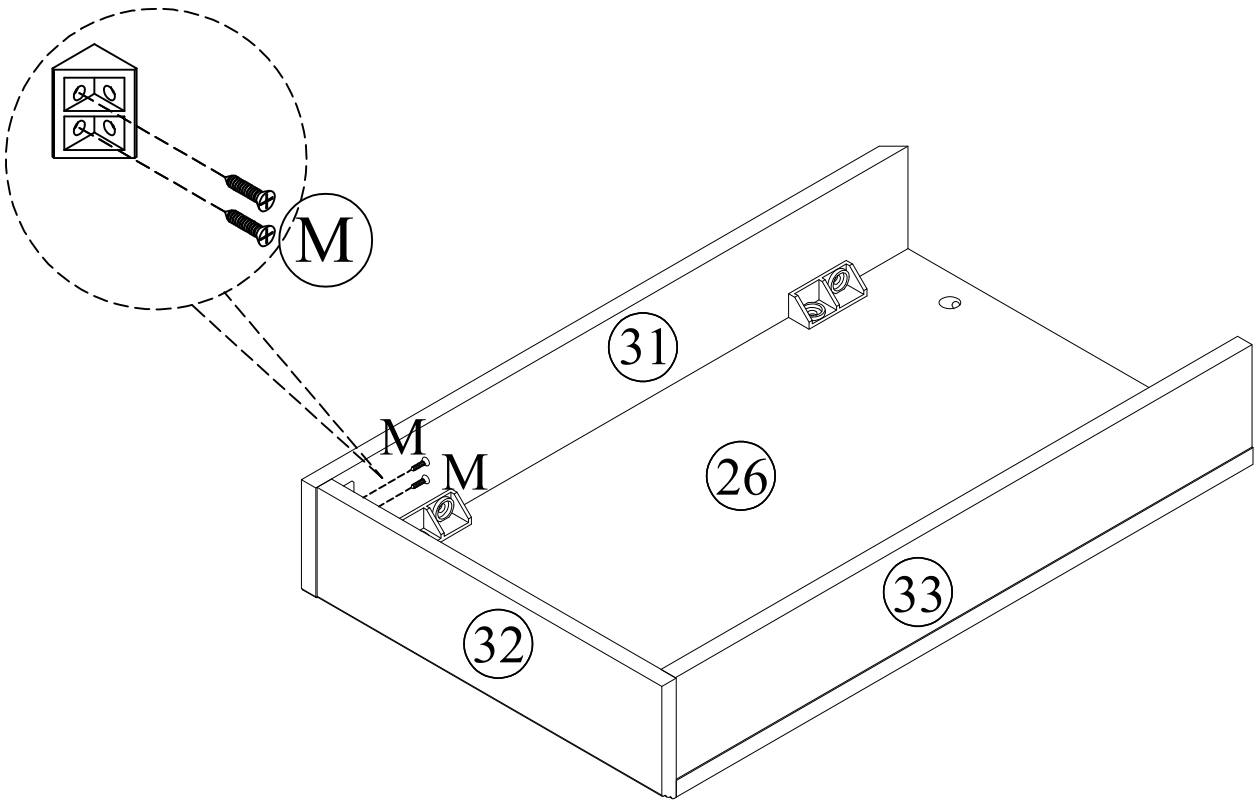


Step/Étape 38


M		2

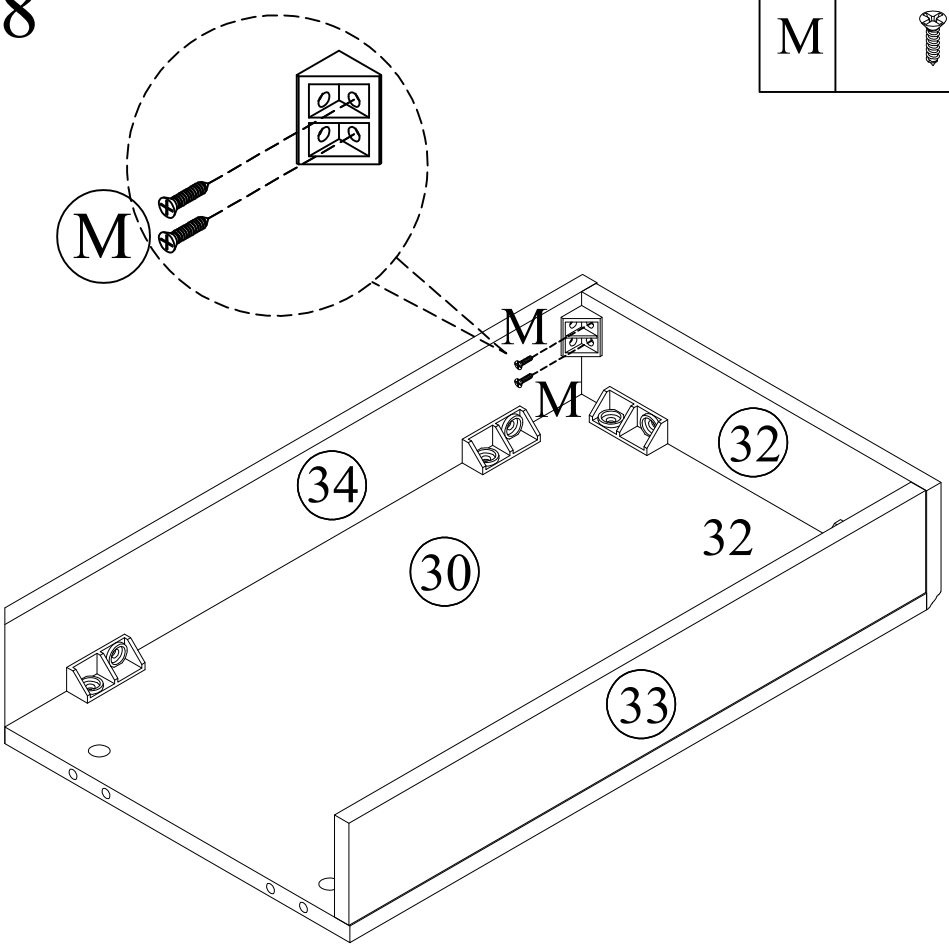


Step/Étape 39

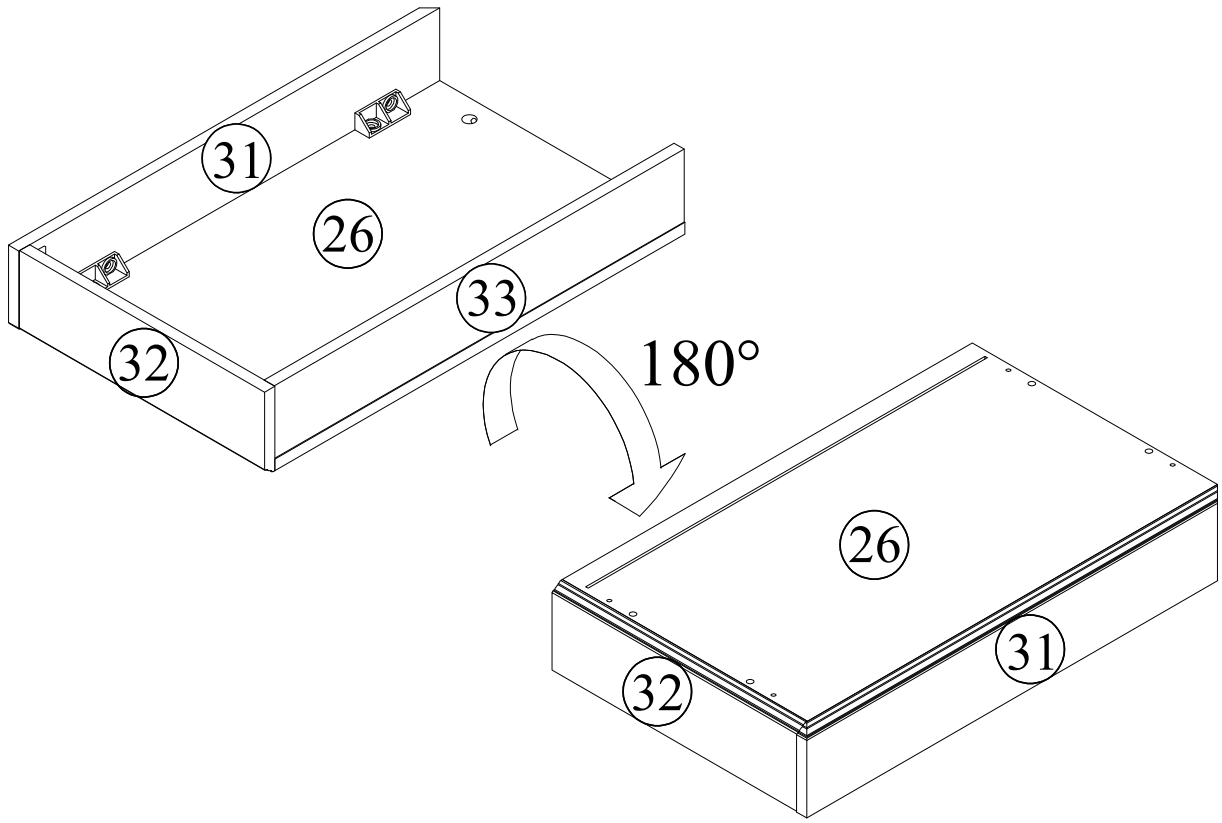


Step/Étape 40

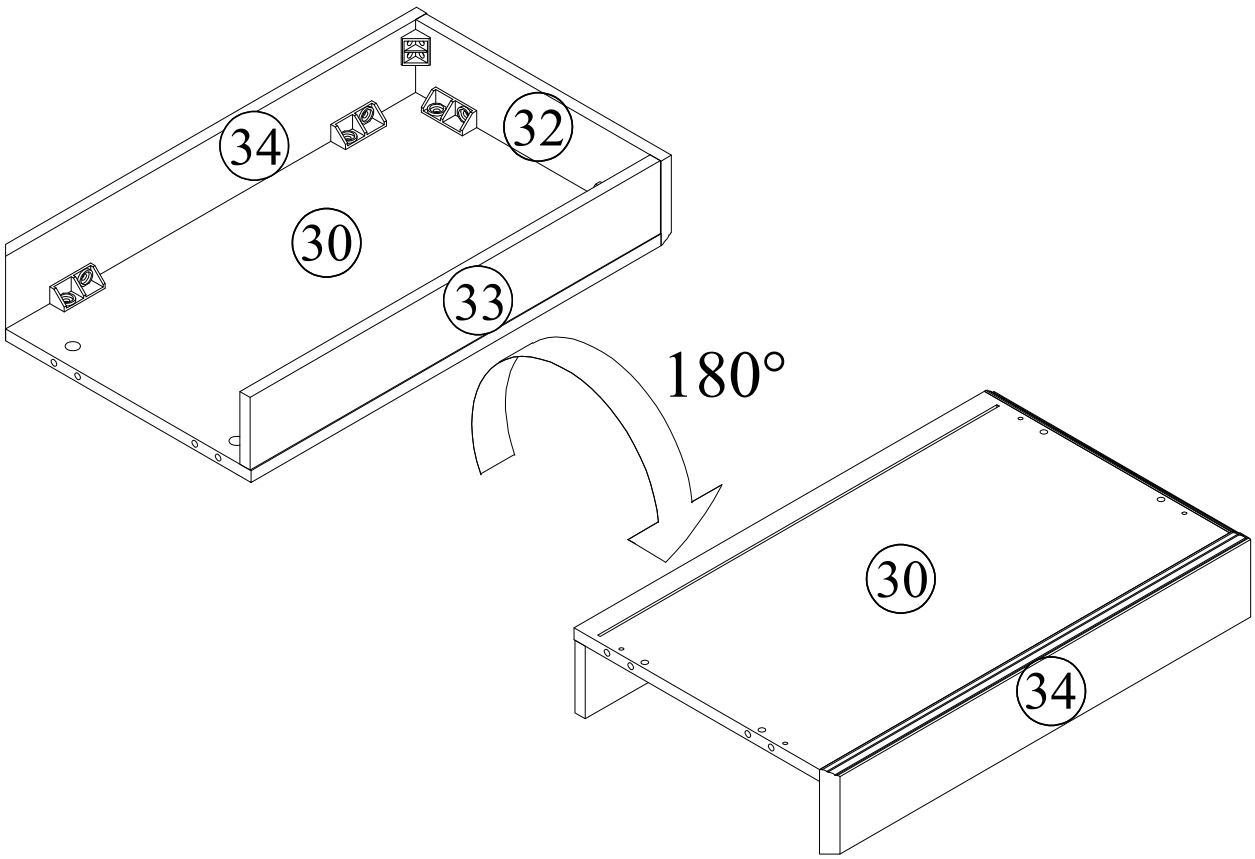



Step/Étape 41

A		4
C		4

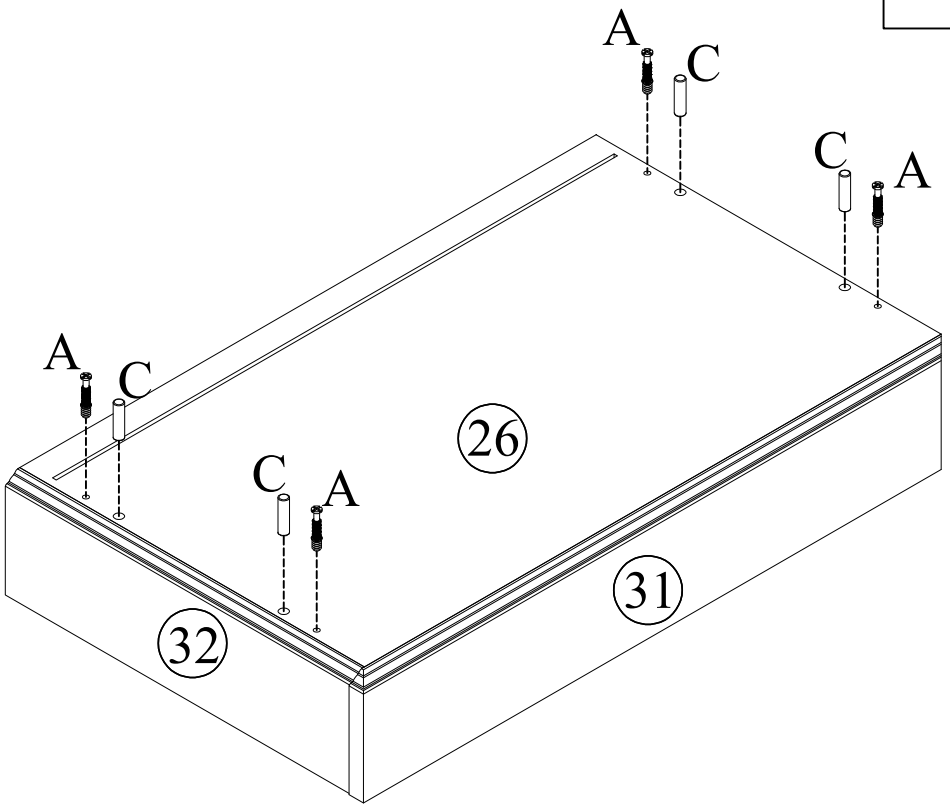


Step/Étape 42


A		4
C		4

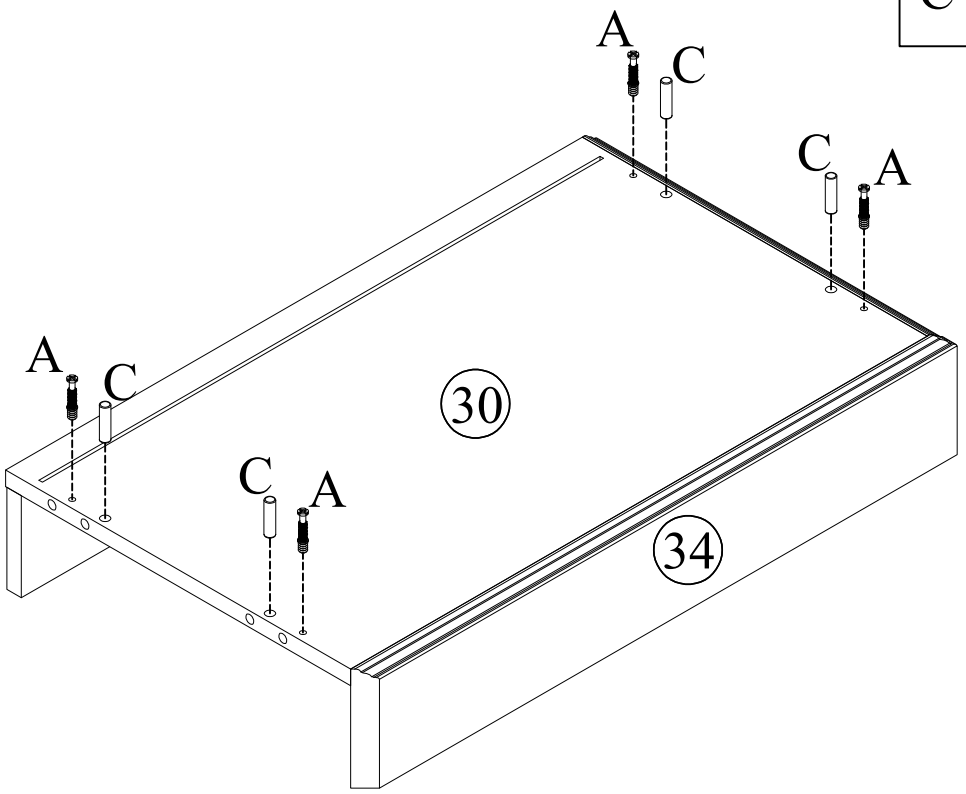



Step/Étape 43

23		2	A		6
29		2	B		6
			C		4


X2

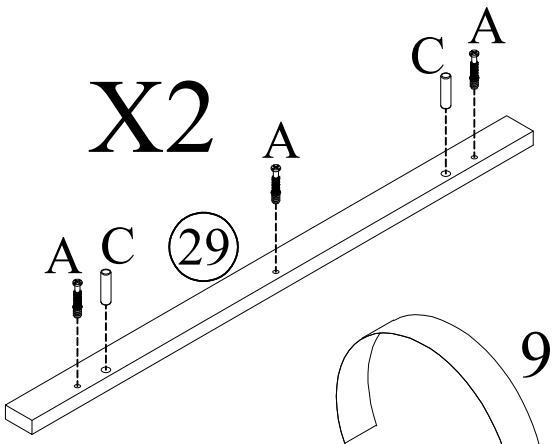


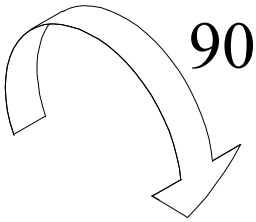


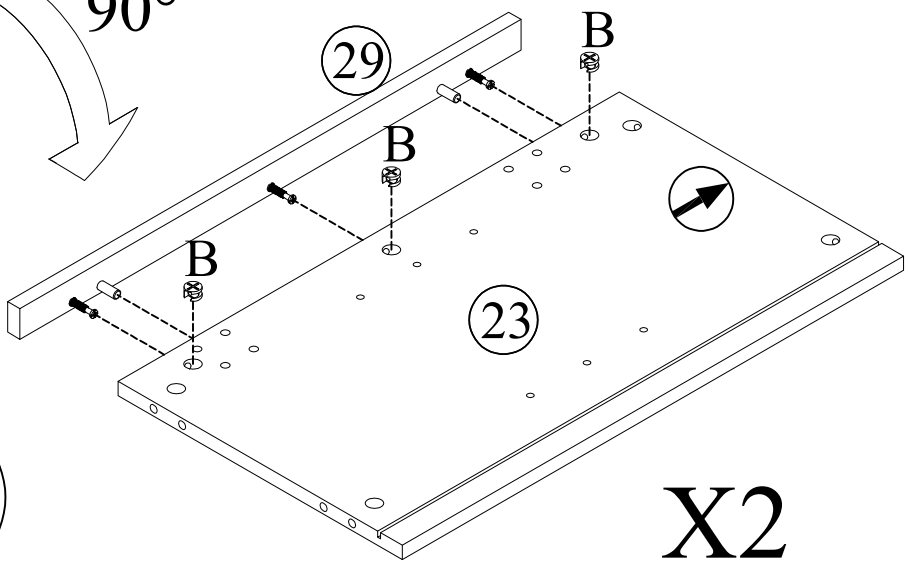


X2

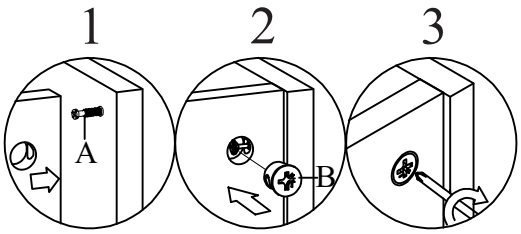



Step/Étape 44

24		2	A		6
29		2	B		6
			C		4


X2

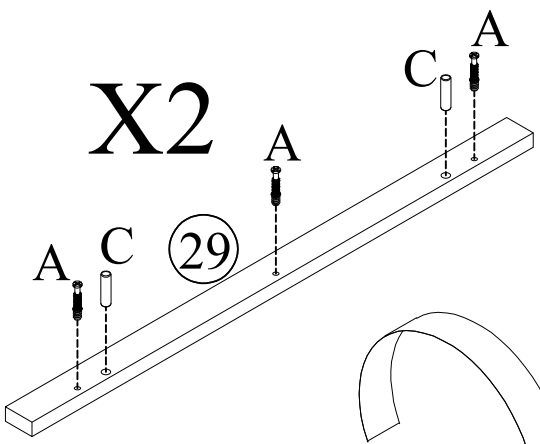

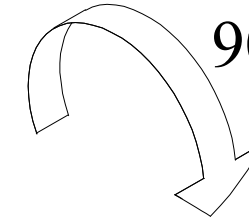

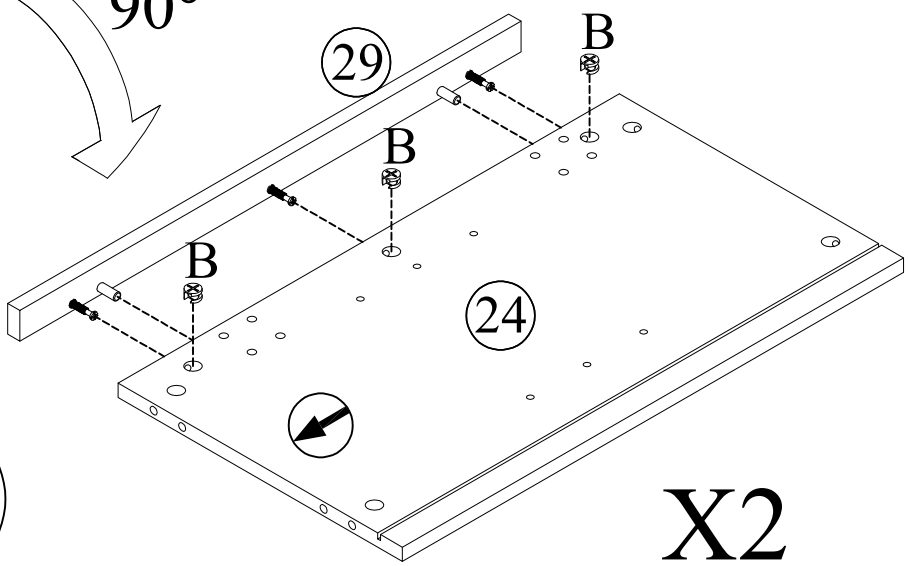


X2

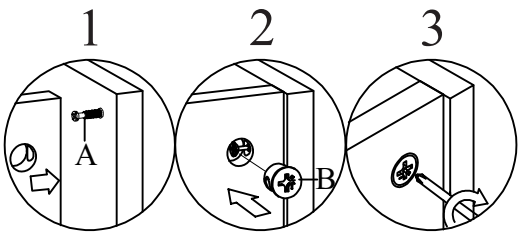

Step/Étape 45

X2


35		4
D		16
N		8

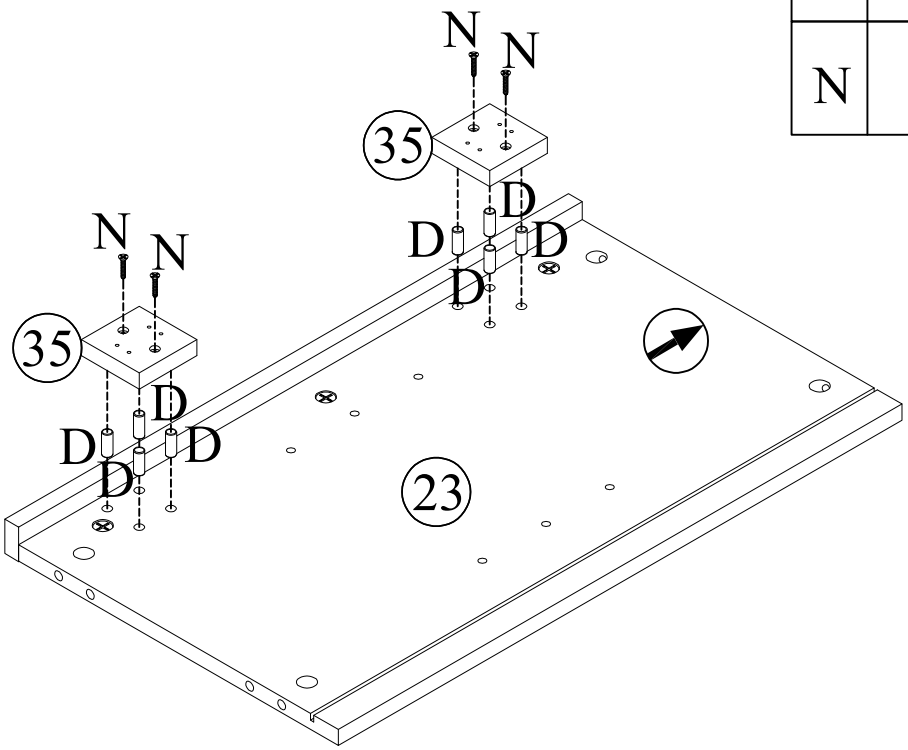

Step/Étape 46


X2


35		4
D		16
N		8

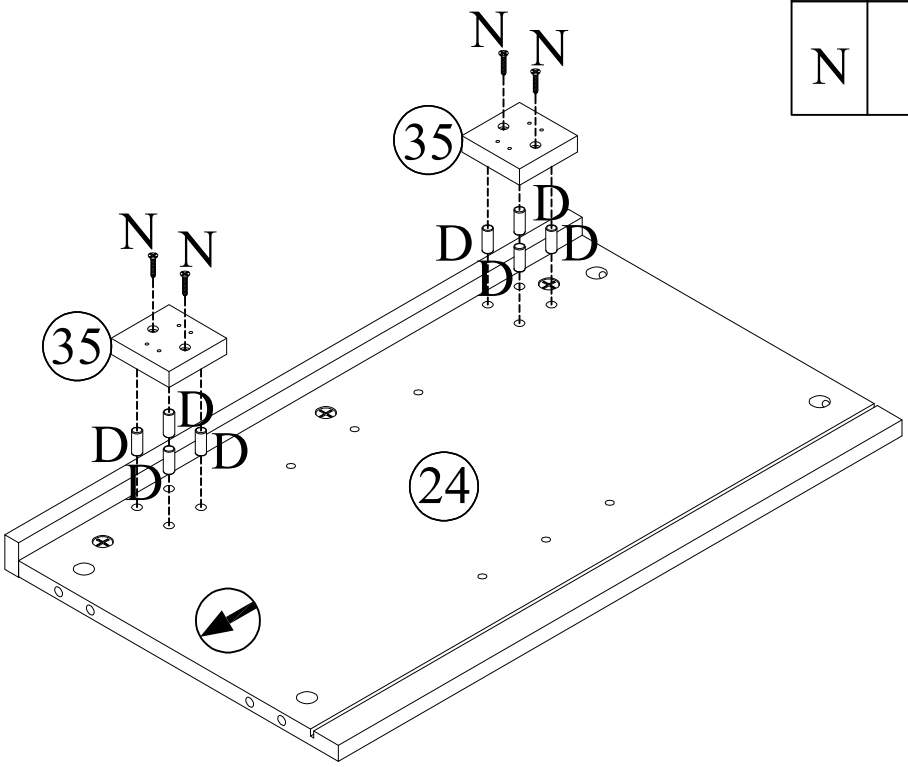



Step/Étape 47

B		4

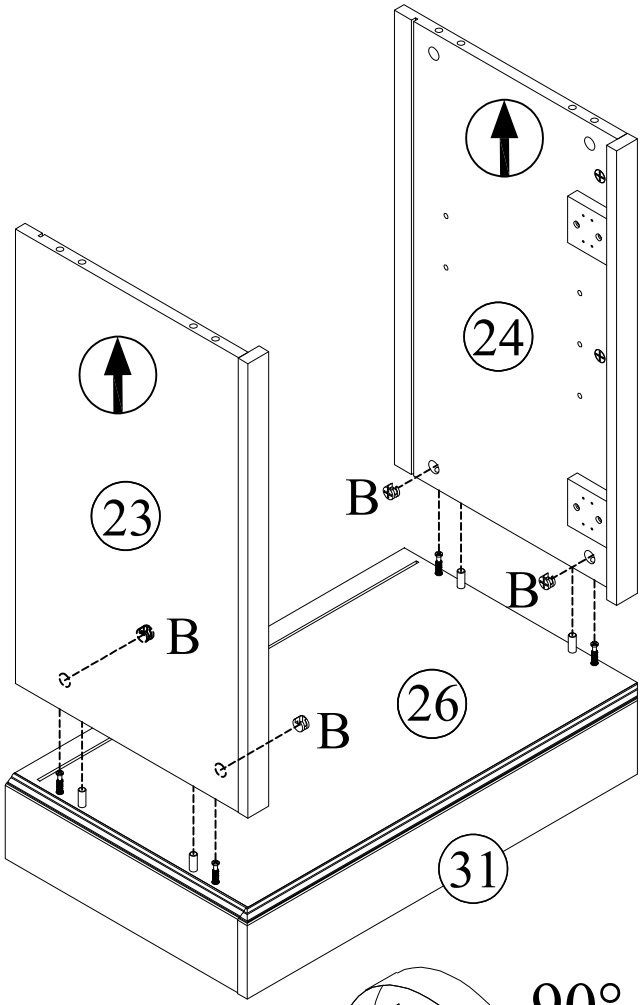

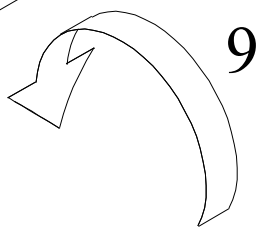


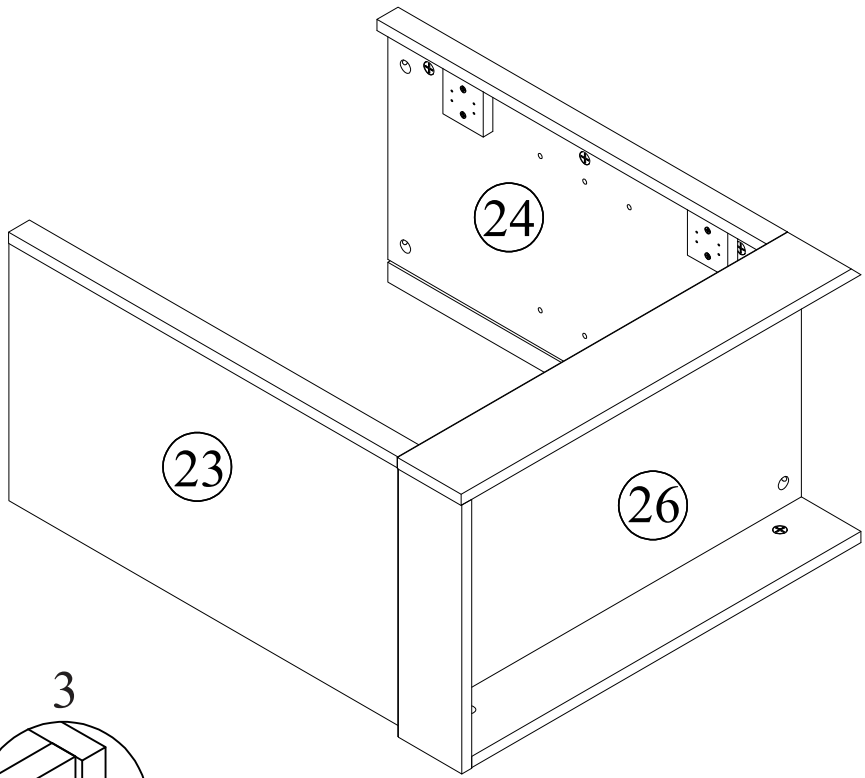


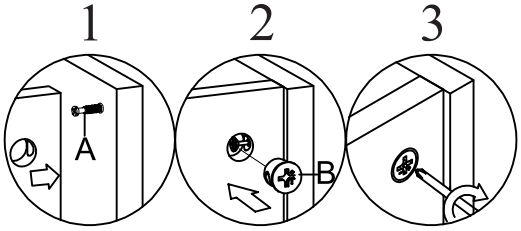



Step/Étape 48

B		4



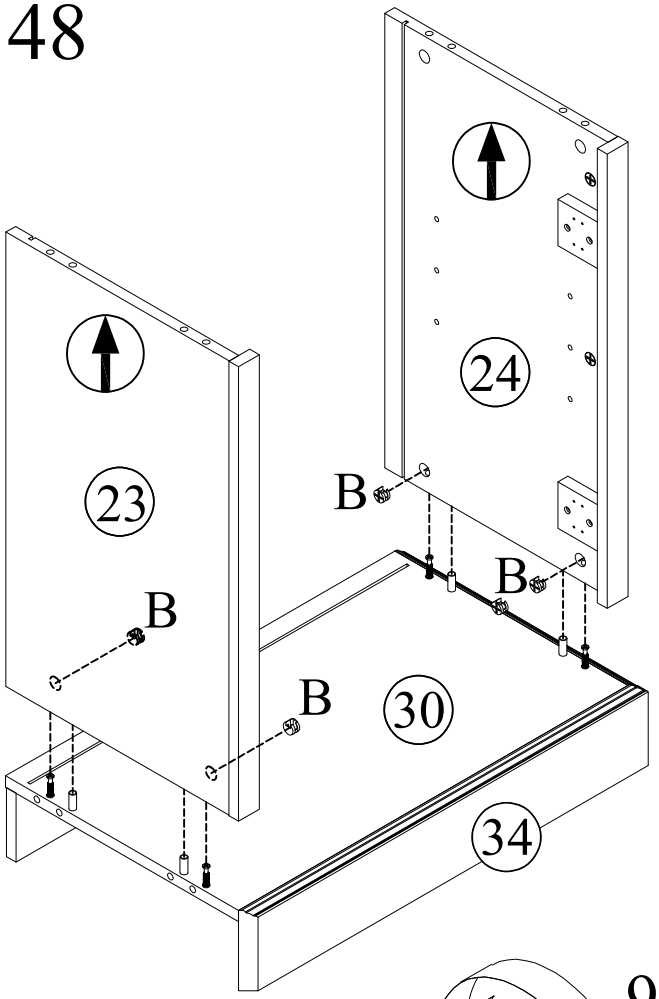


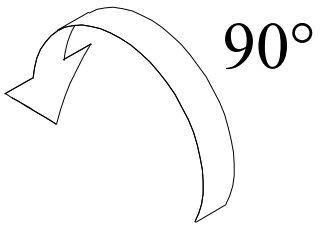


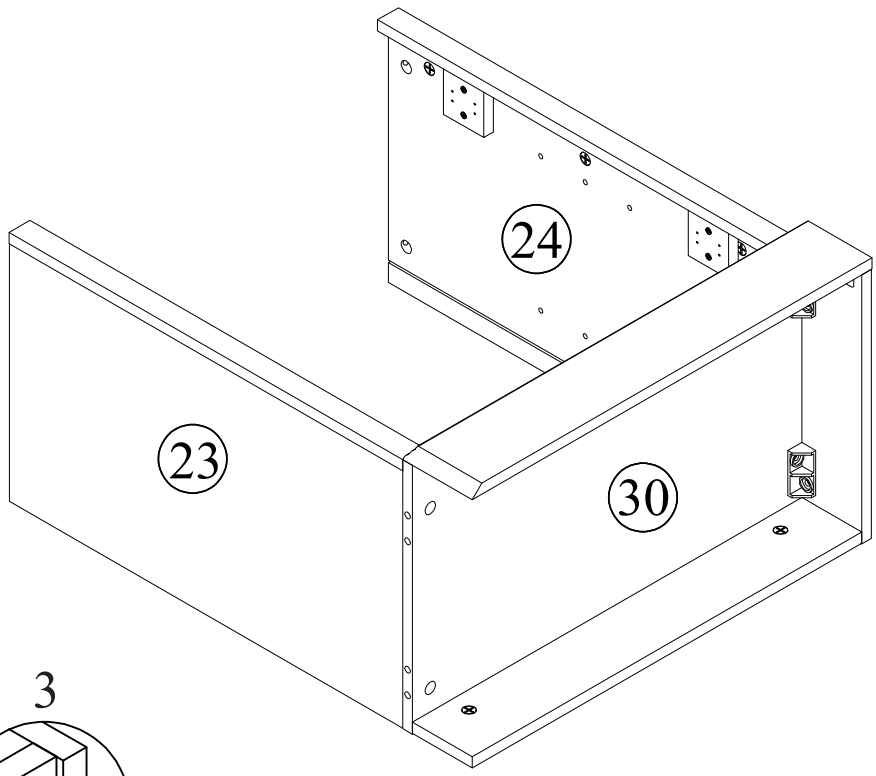

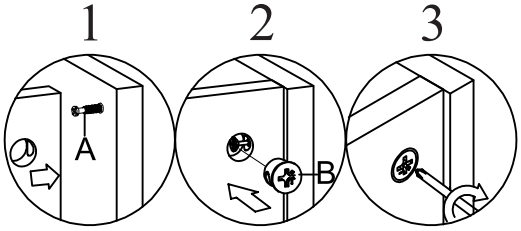



Step/Étape 49


40		1	C		6
A		6	R		4
			T		4

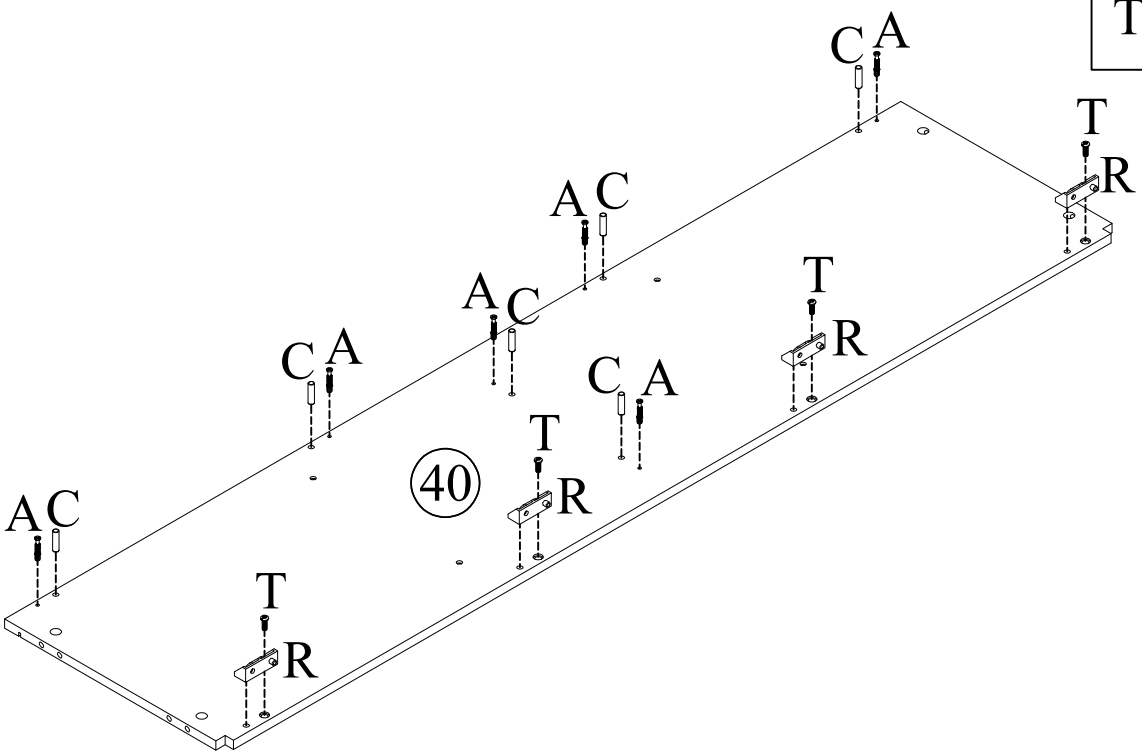


Step/Étape 50


44		1
B		4

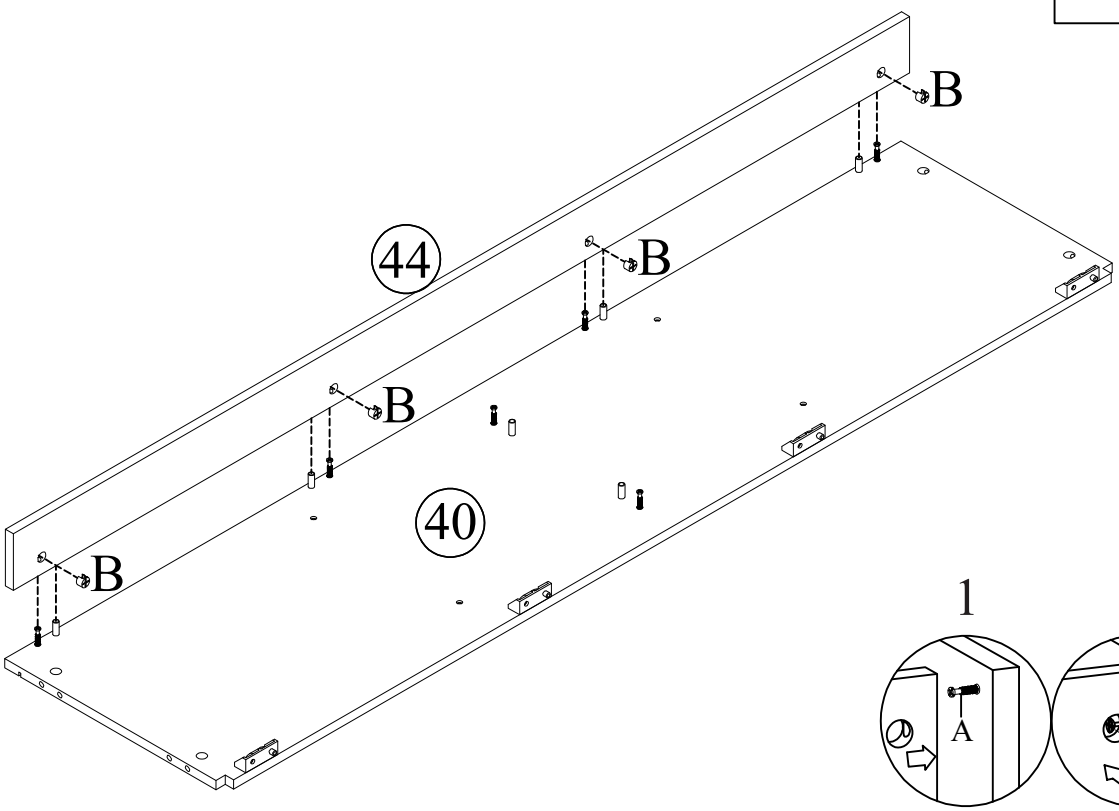


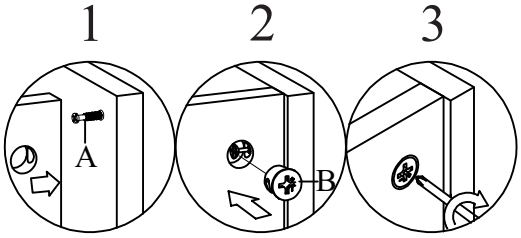

Step/Étape 51

45		1
B		2

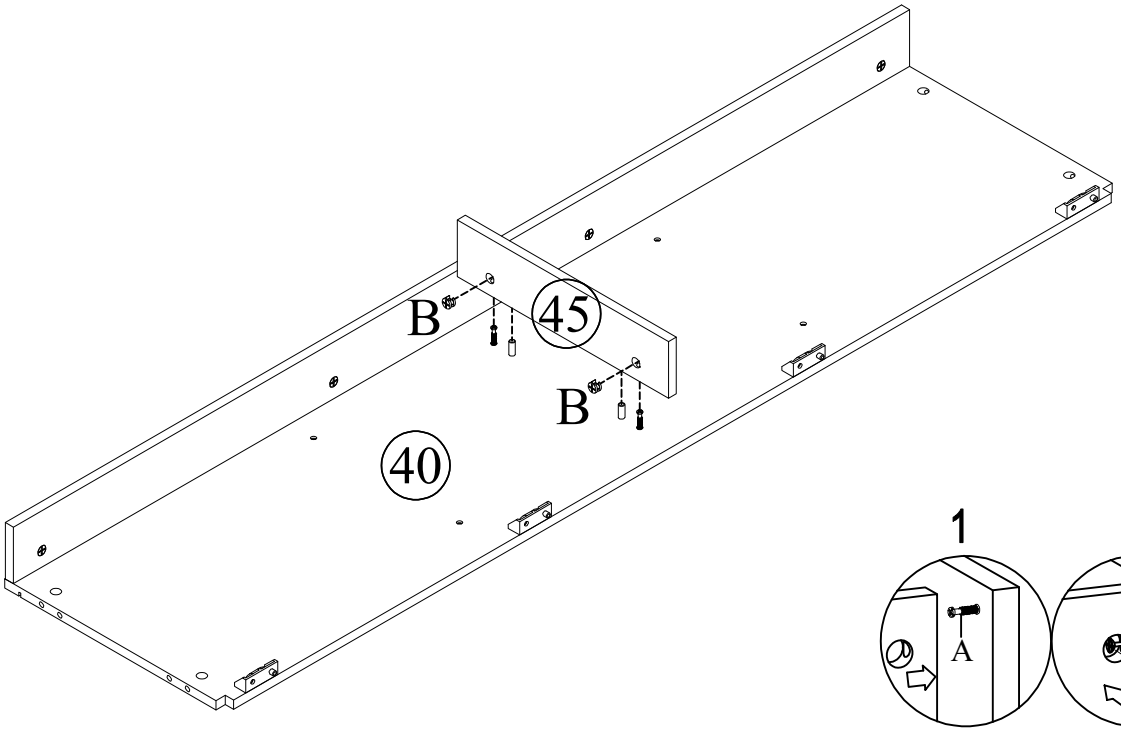

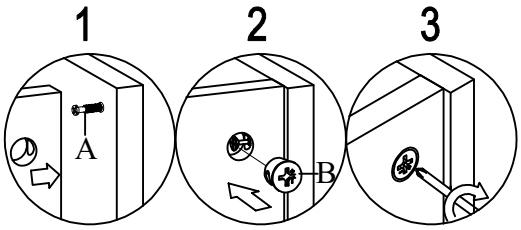



Step/Étape 52


C		4

Step/Étape 53


36		1	A		3
41		1	B		3
			C		2

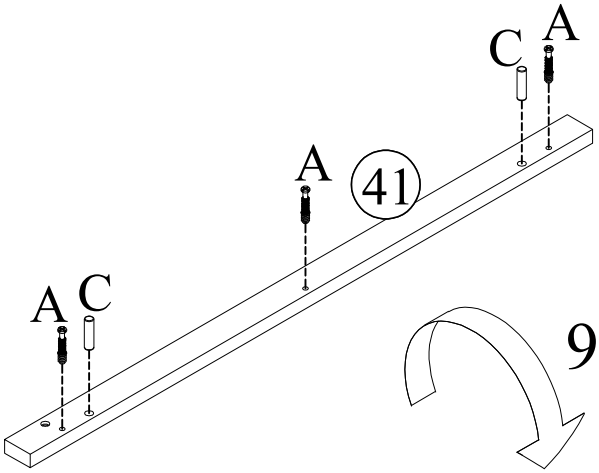


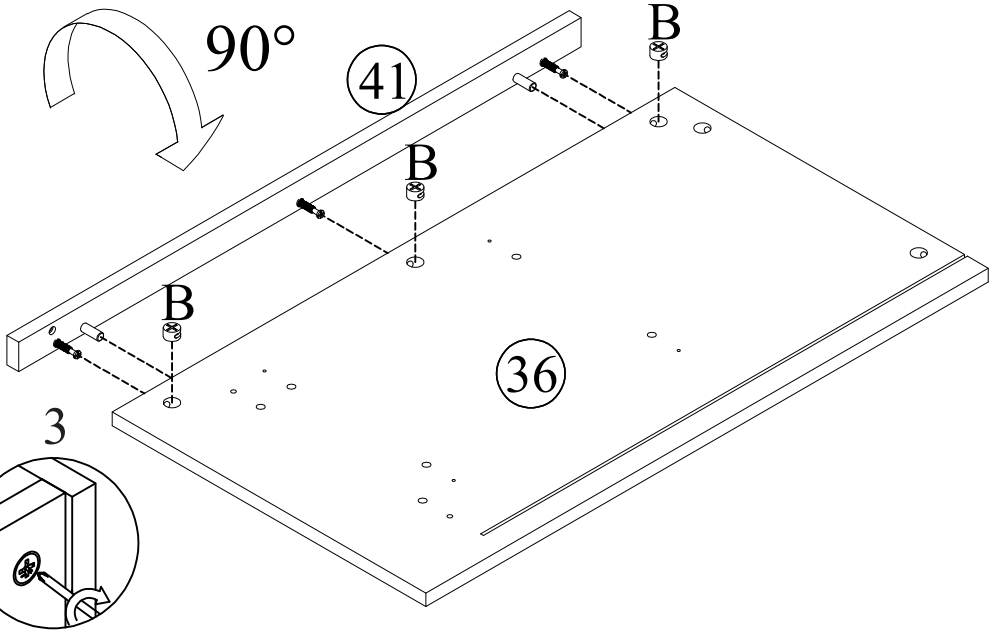


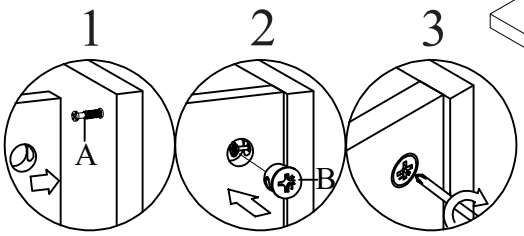

Step/Étape 54


37		1	A		3
42		1	B		3
			C		2

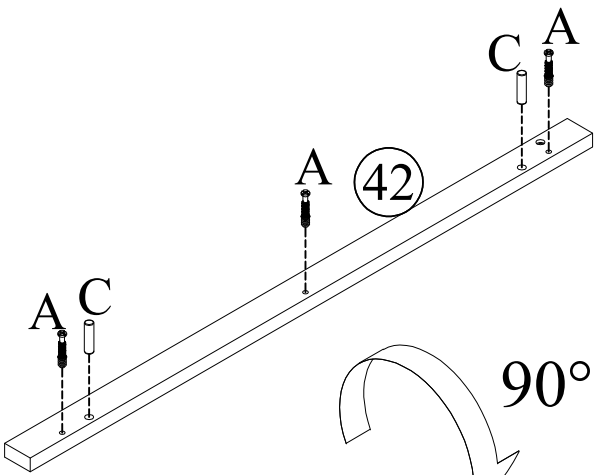

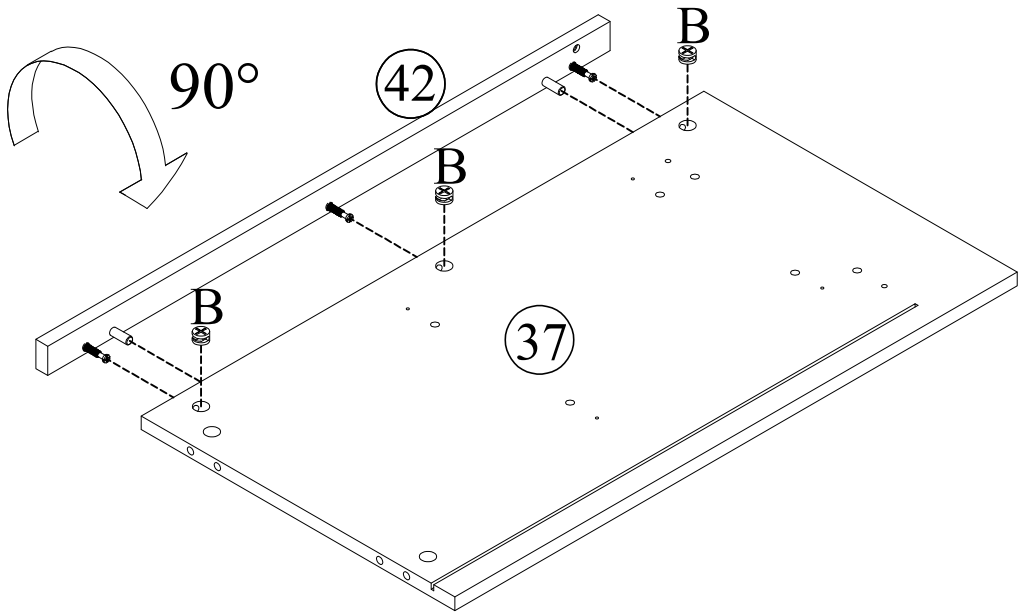


Step/Étape 55

A		2

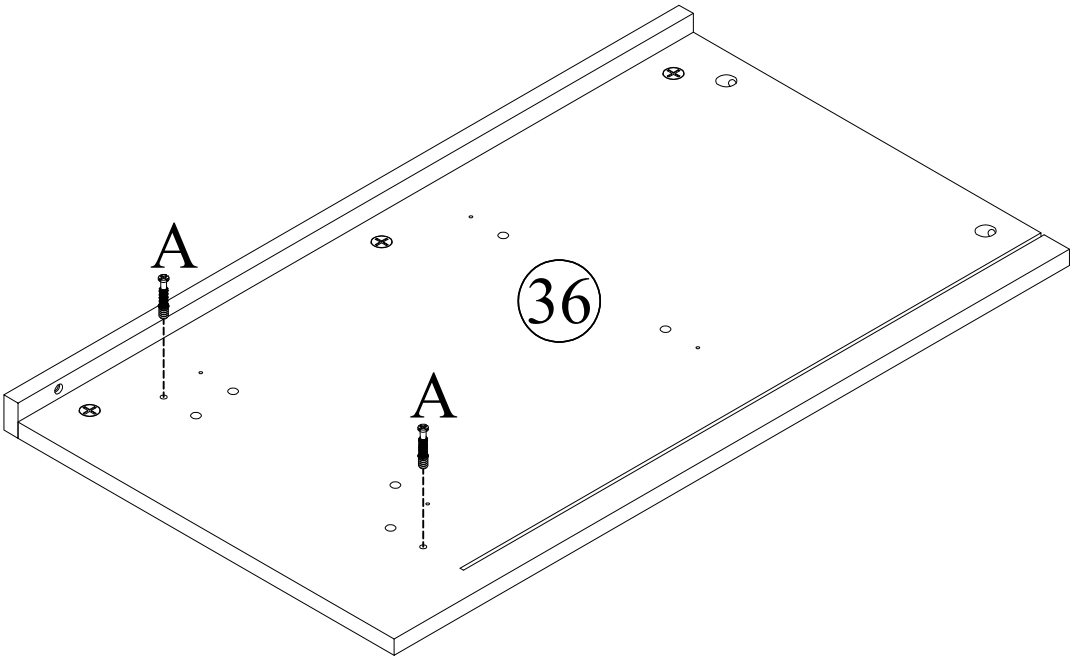



Step/Étape 56

A		2

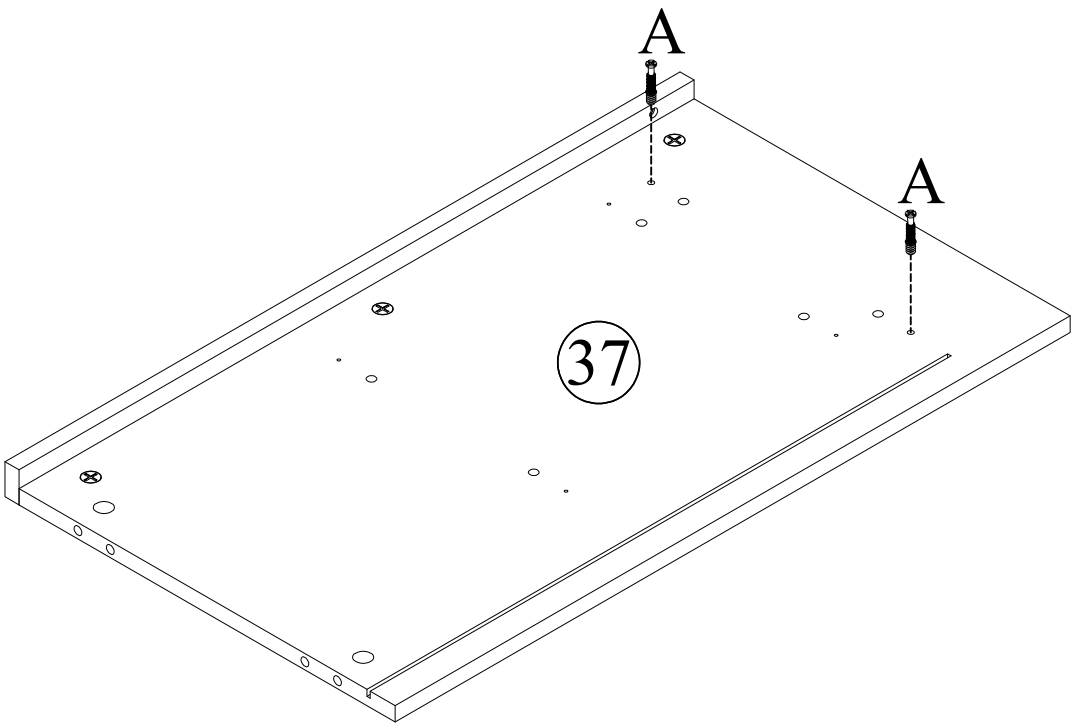



Step/Étape 57

46		2
D		4
N		4


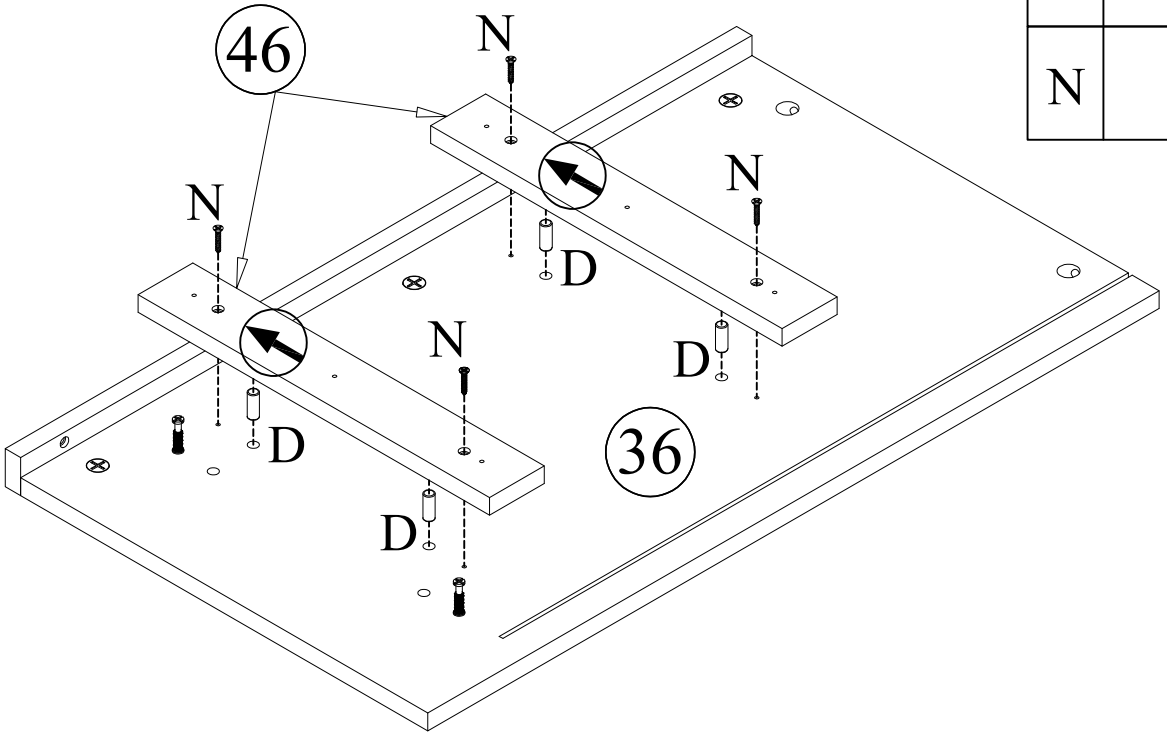



Step/Étape 58

46		2
D		4
N		4

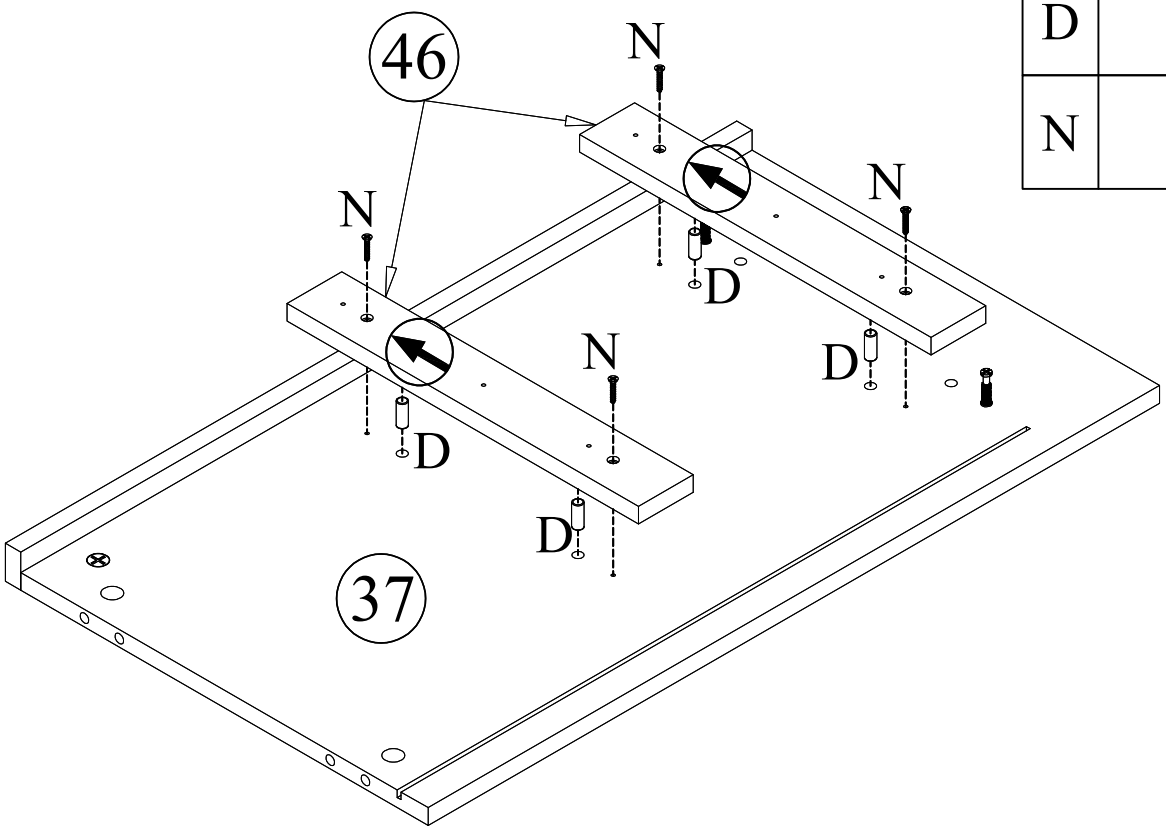


Step/Étape 59


P		12
Y	CL 	2
Y	CR 	2

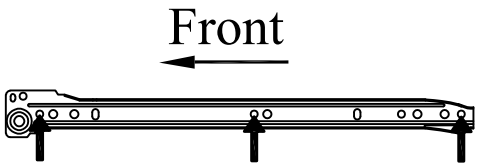



Y-CL

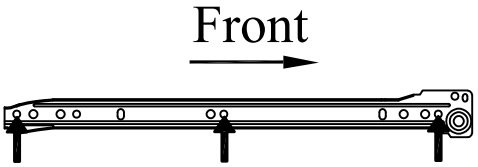



Y-CR

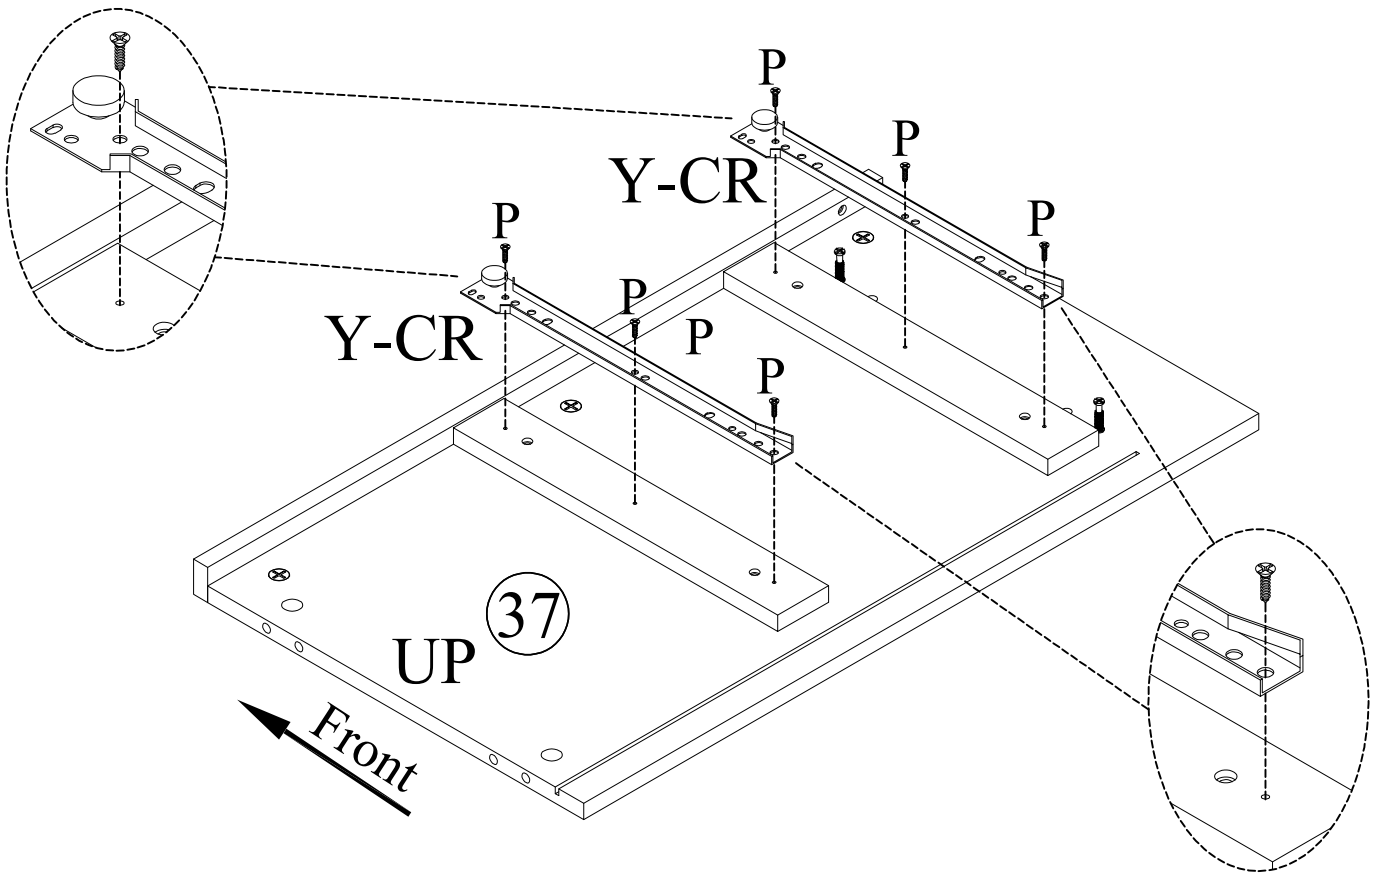

Step/Étape 60

38		2
P		20
Y	CL 	4
Y	CR 	4

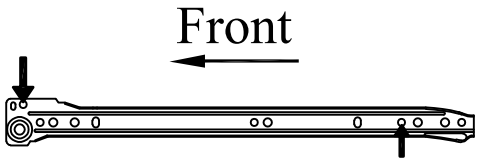

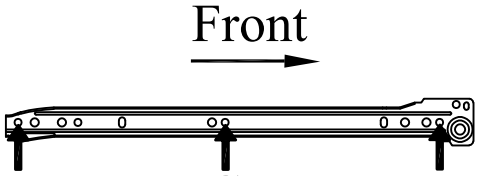



X2

Step/Étape 61

B		4

Step/Étape 62

C		4
O		4

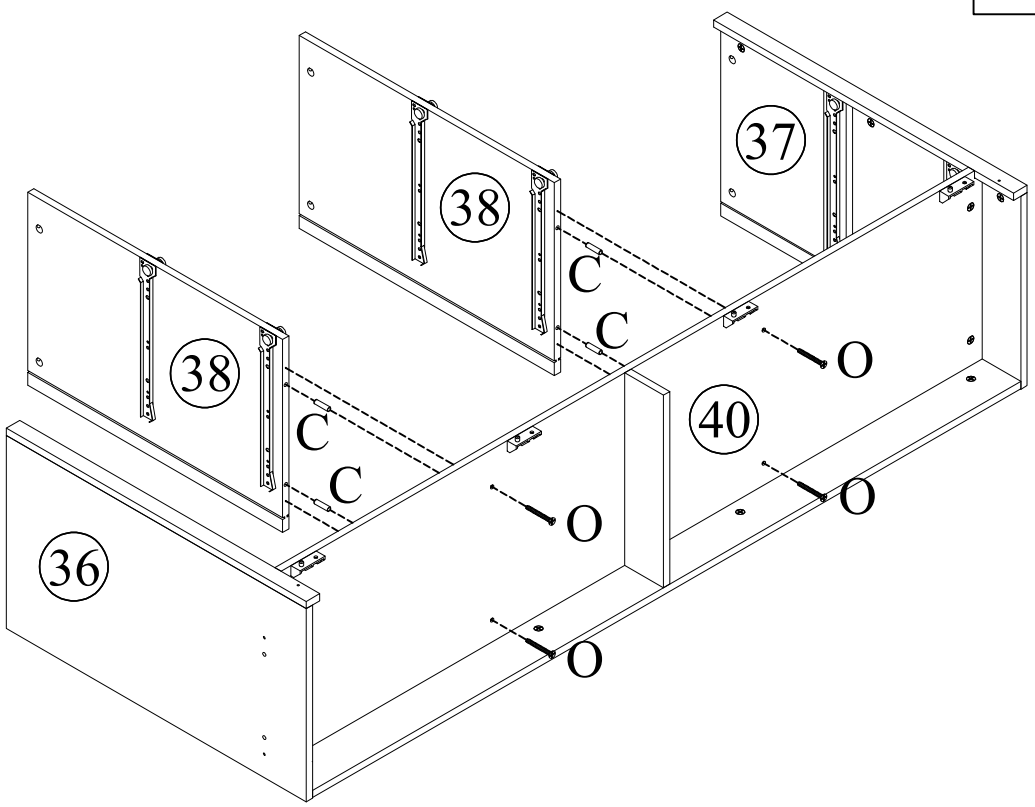


Step/Étape 63

A		4

Step/Étape 64

B		4
C		4

Step/Étape 65

43		1
A		4




Step/Étape 66

47		1
48		1
B		4


Step/Étape 67


N		2
T		4

Step/Étape 68


20		2
21		2
22		1


Step/Étape 69

16		1
A		4
C		3

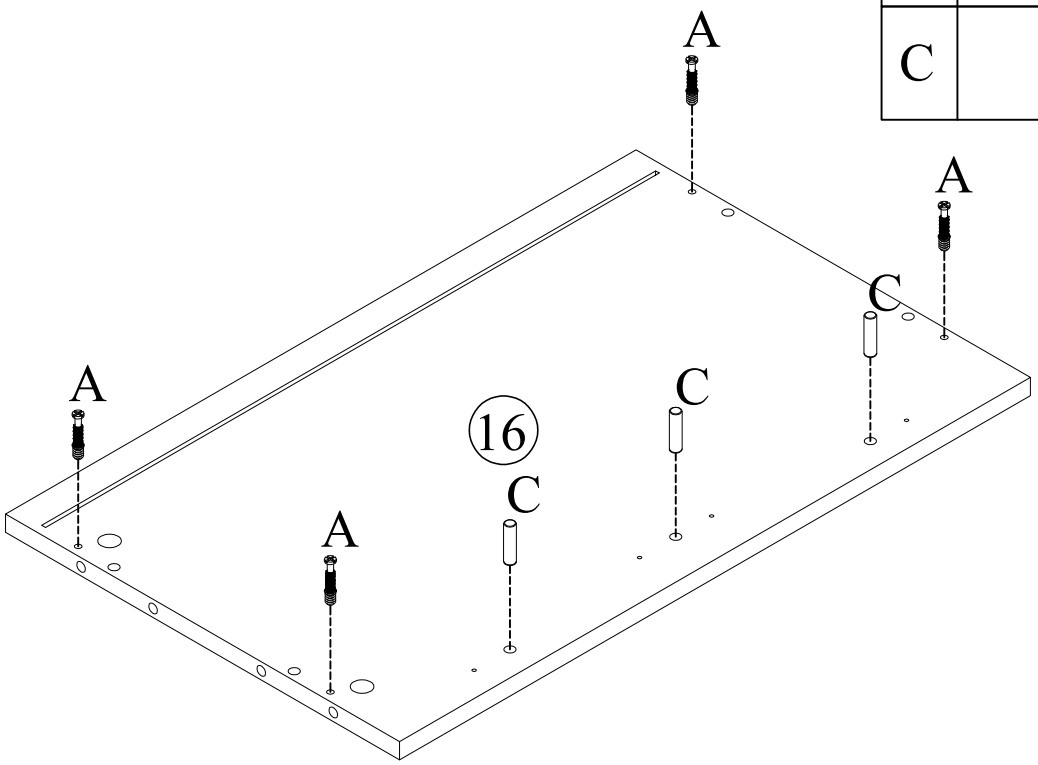


Step/Étape 70

18		1
A		4
C		3

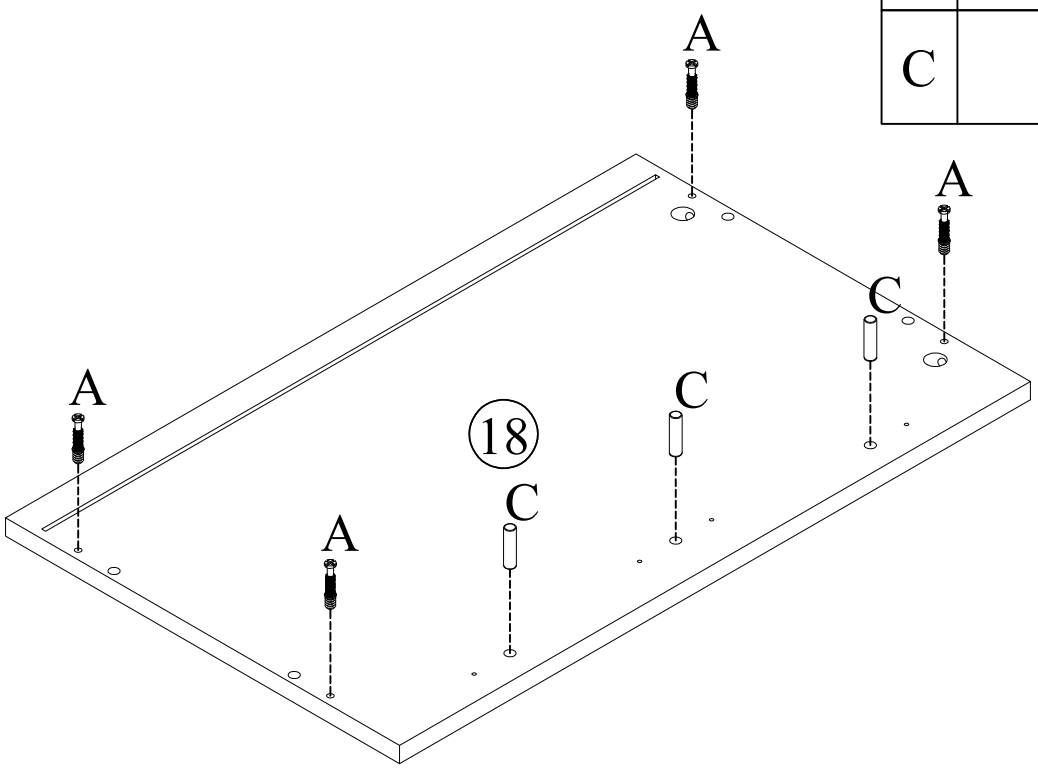


Step/Étape 71

28		1
N		2

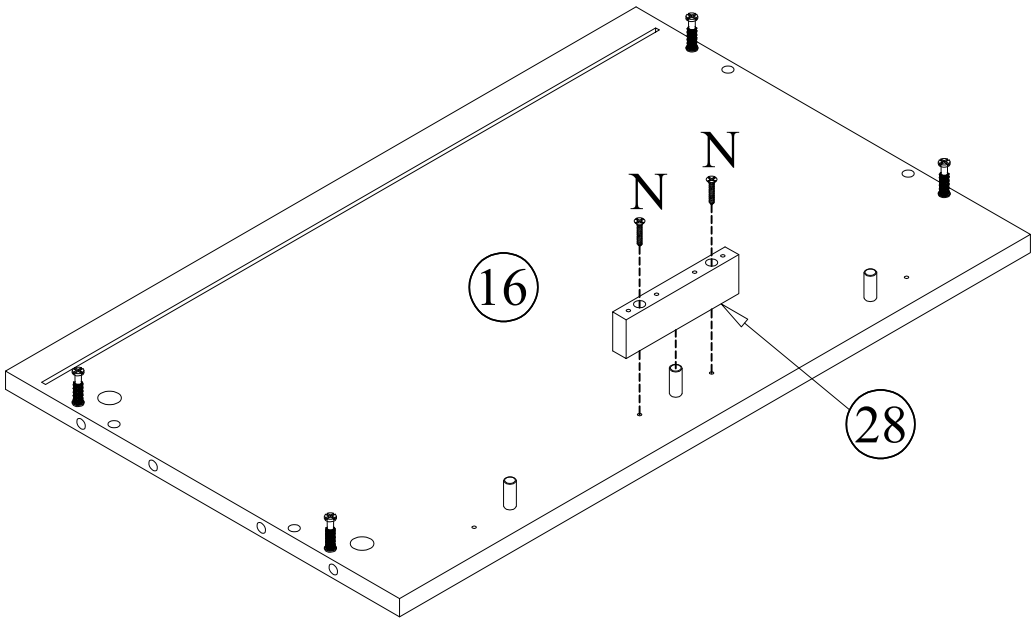



Step/Étape 72

28		1
N		2

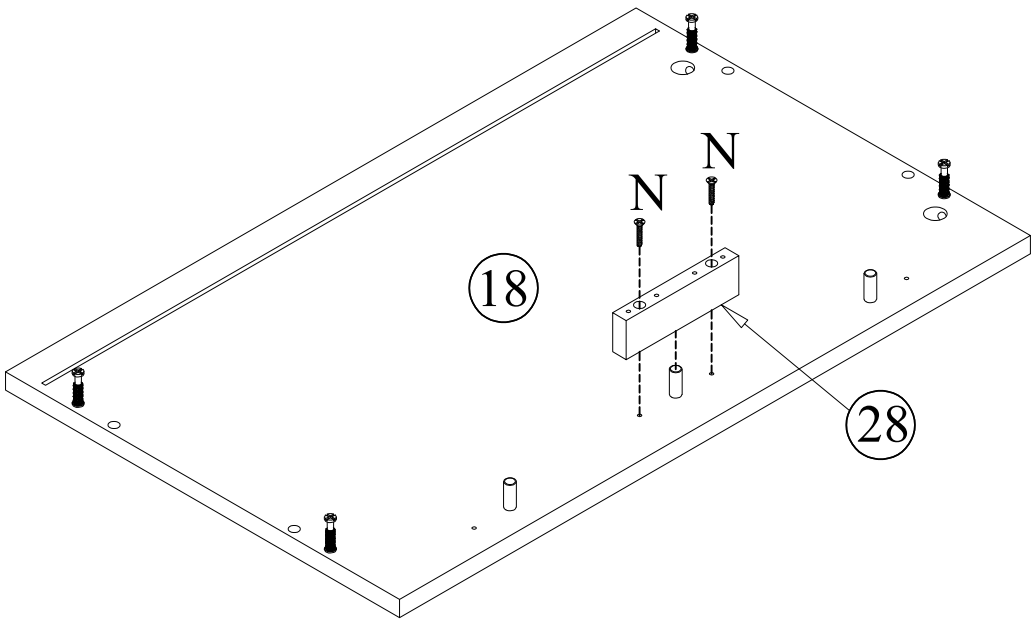


Step/Étape 73


S		2
P		4

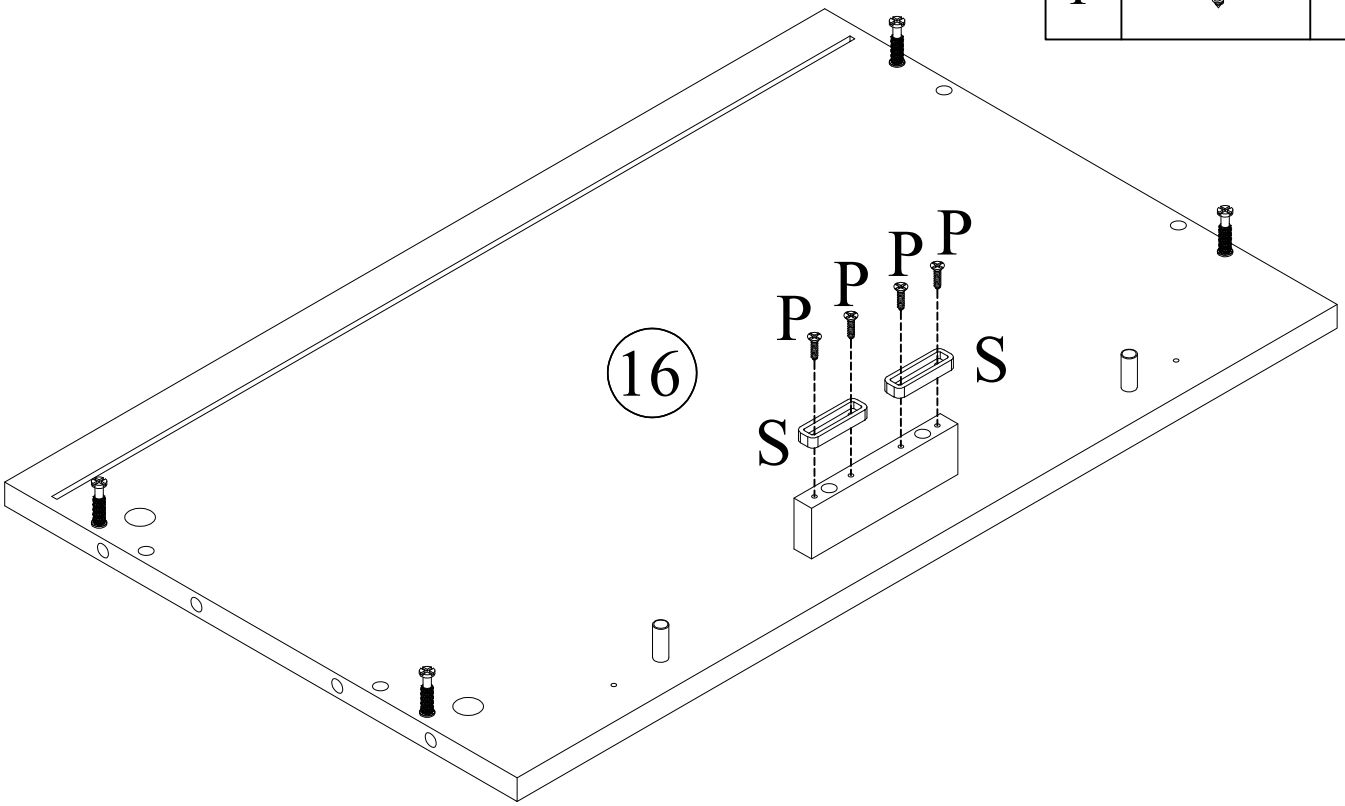


Step/Étape 74


S		2
P		4


Step/Étape 75

27		1
N		2

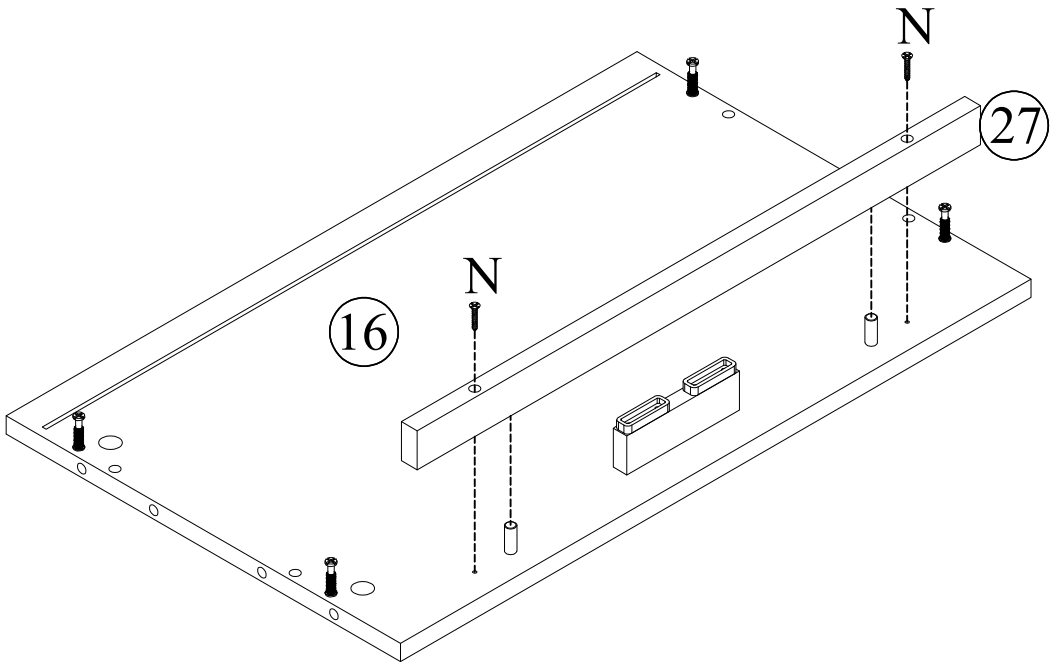



Step/Étape 76

27		1
N		2

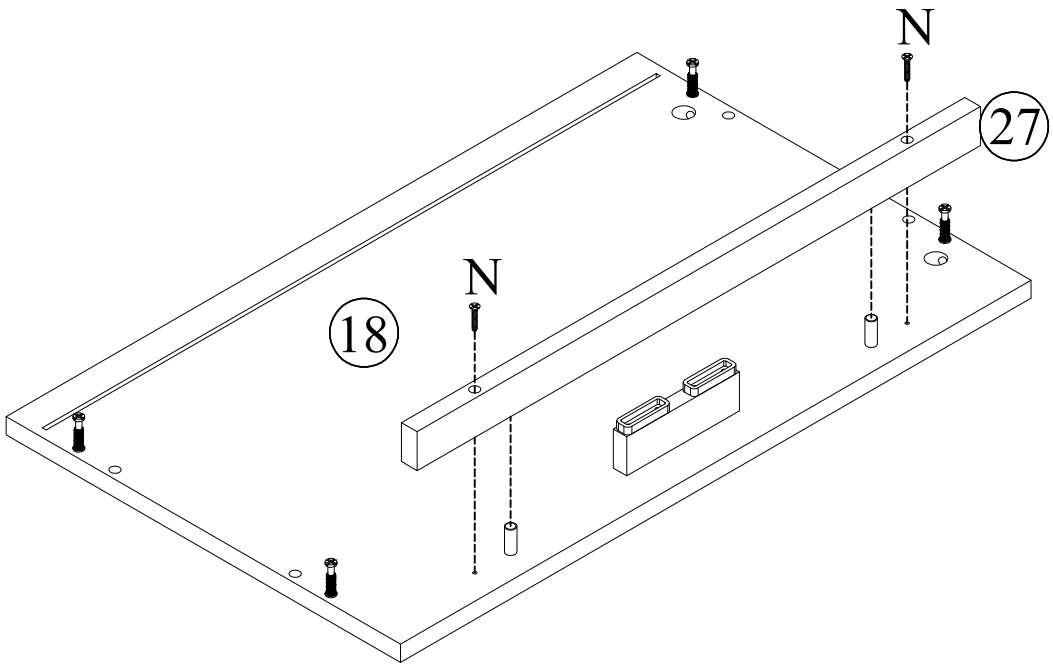



Step/Étape 77

17		1
A		12
C		4

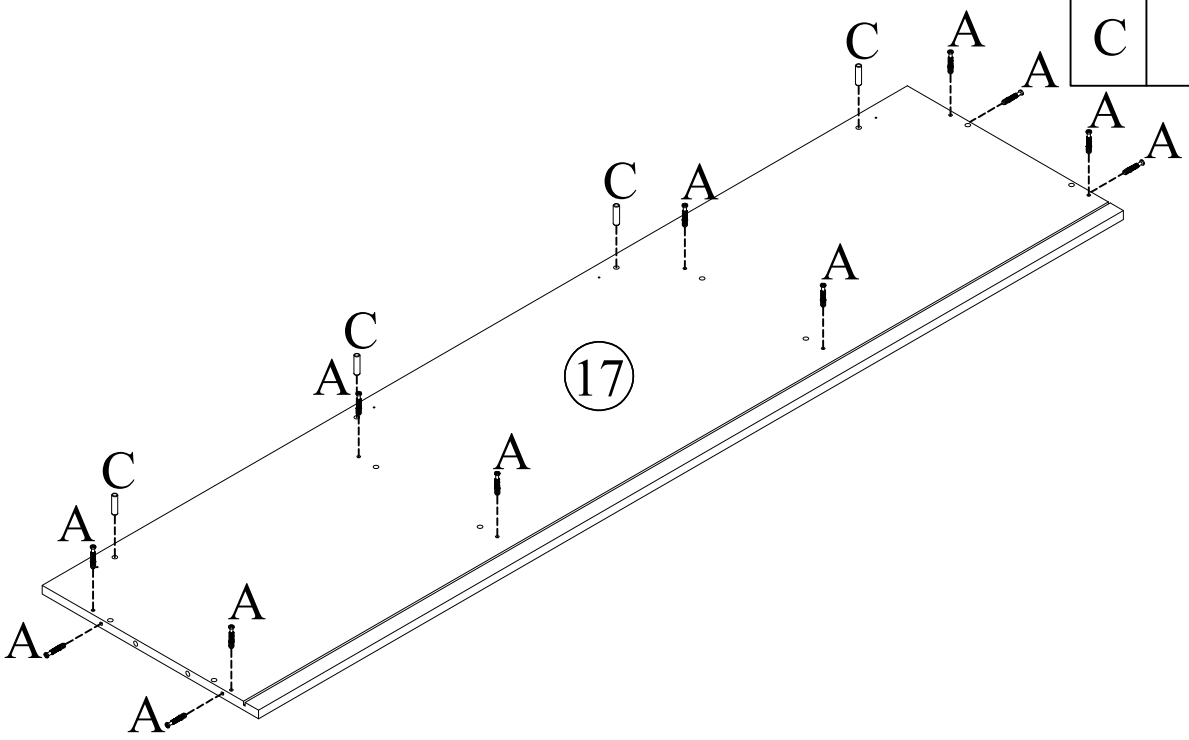


Step/Étape 78

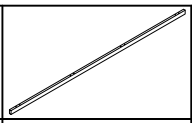
39		1
N		4

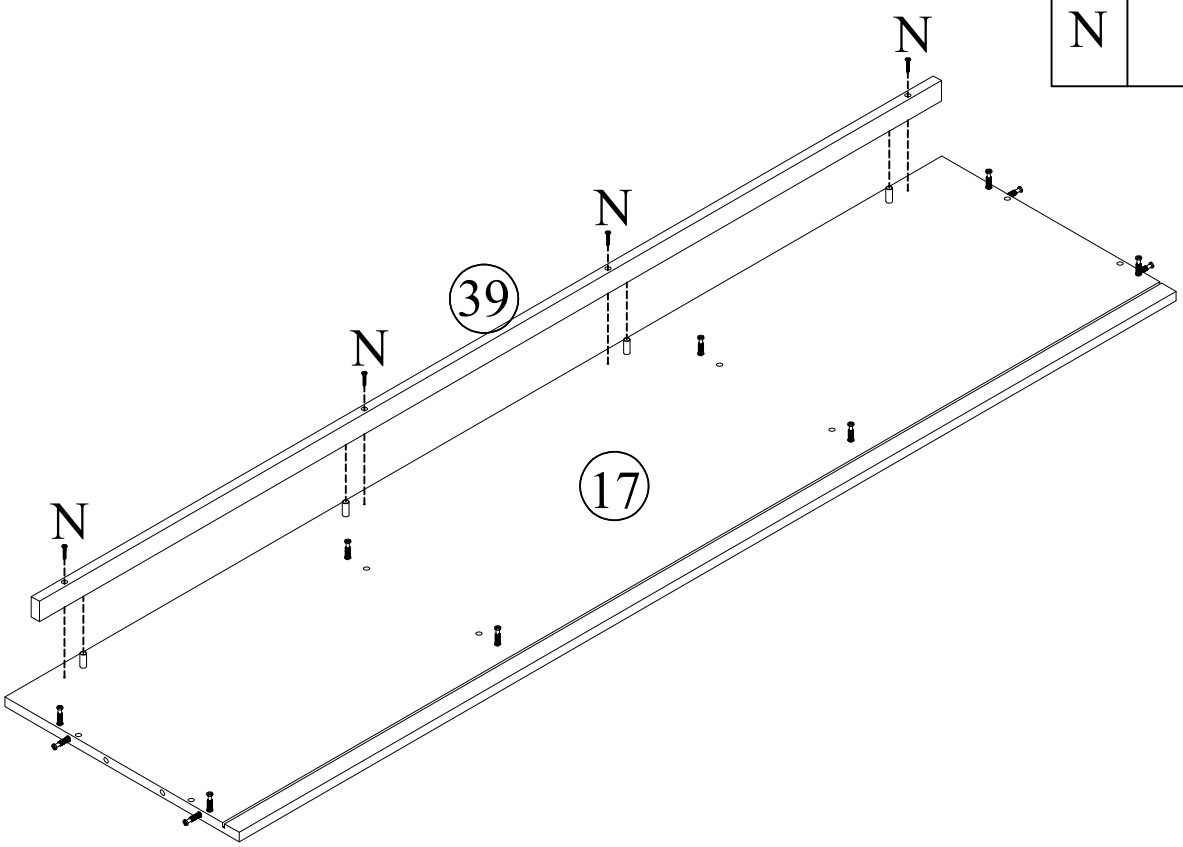

Step/Étape 79


B		4
C		4

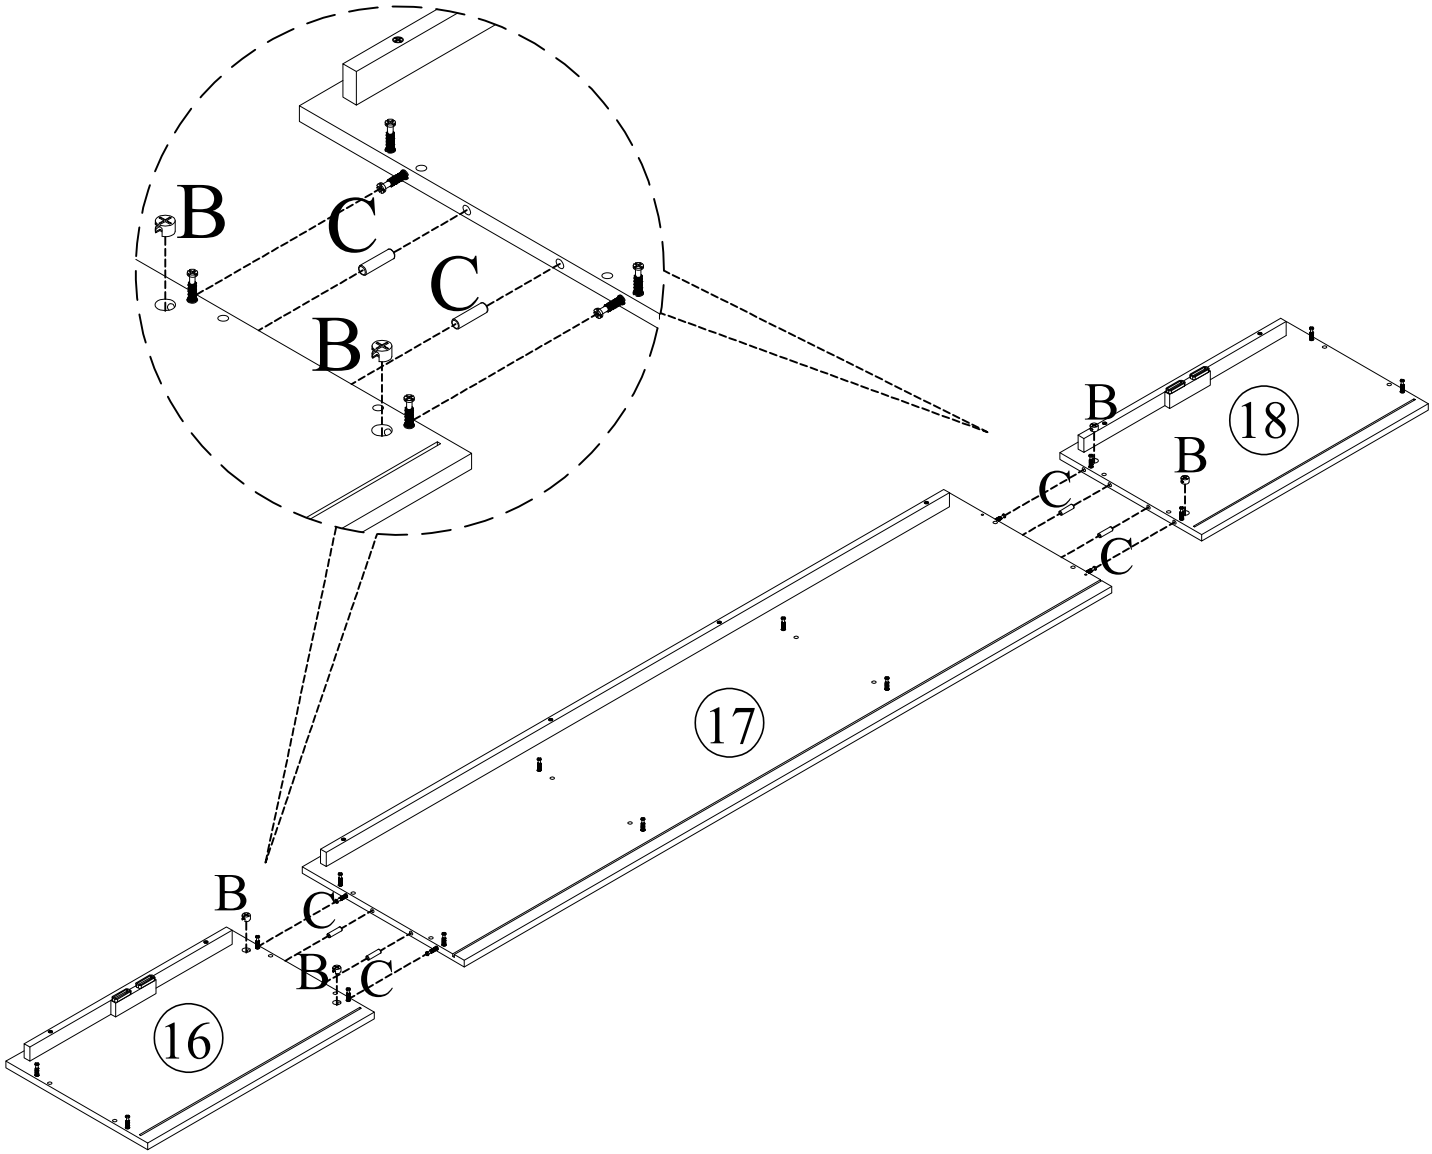

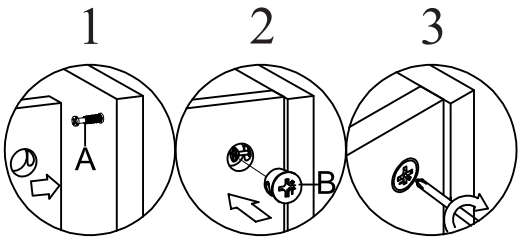



Step/Étape 80

B		16
C		16

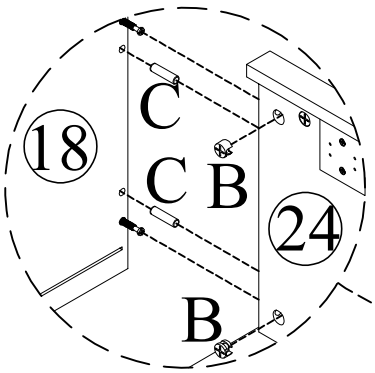


Be careful!
At least 2 people
are required.

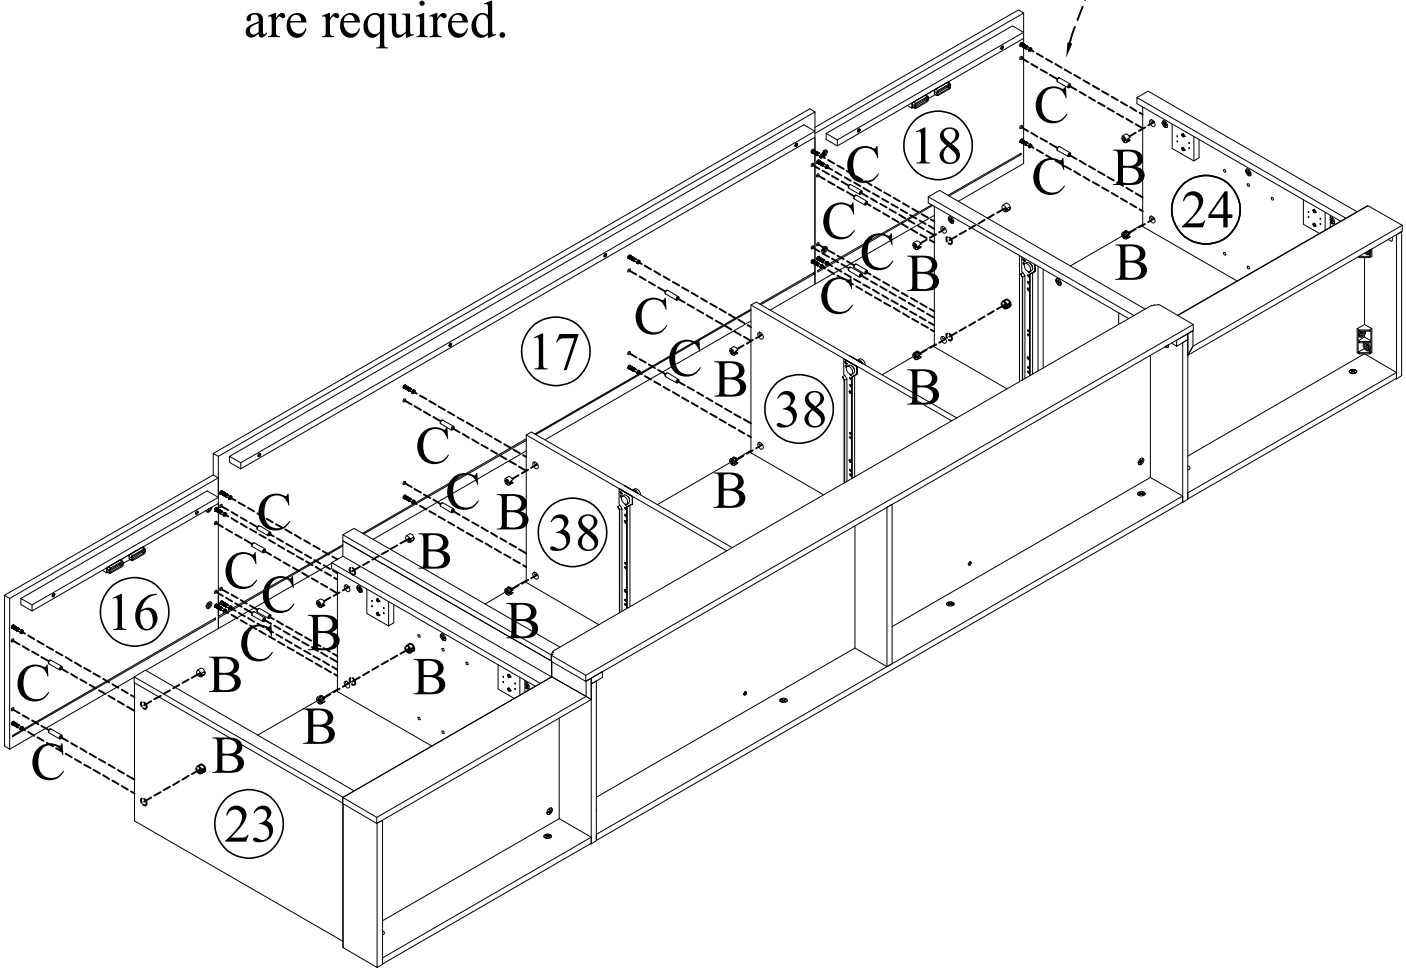

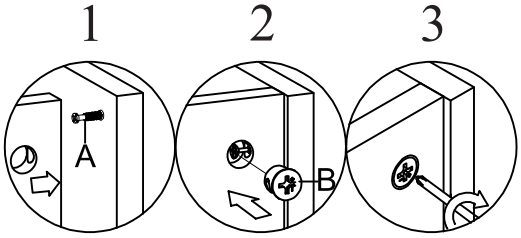

Step/Étape 81


A		16
E		16

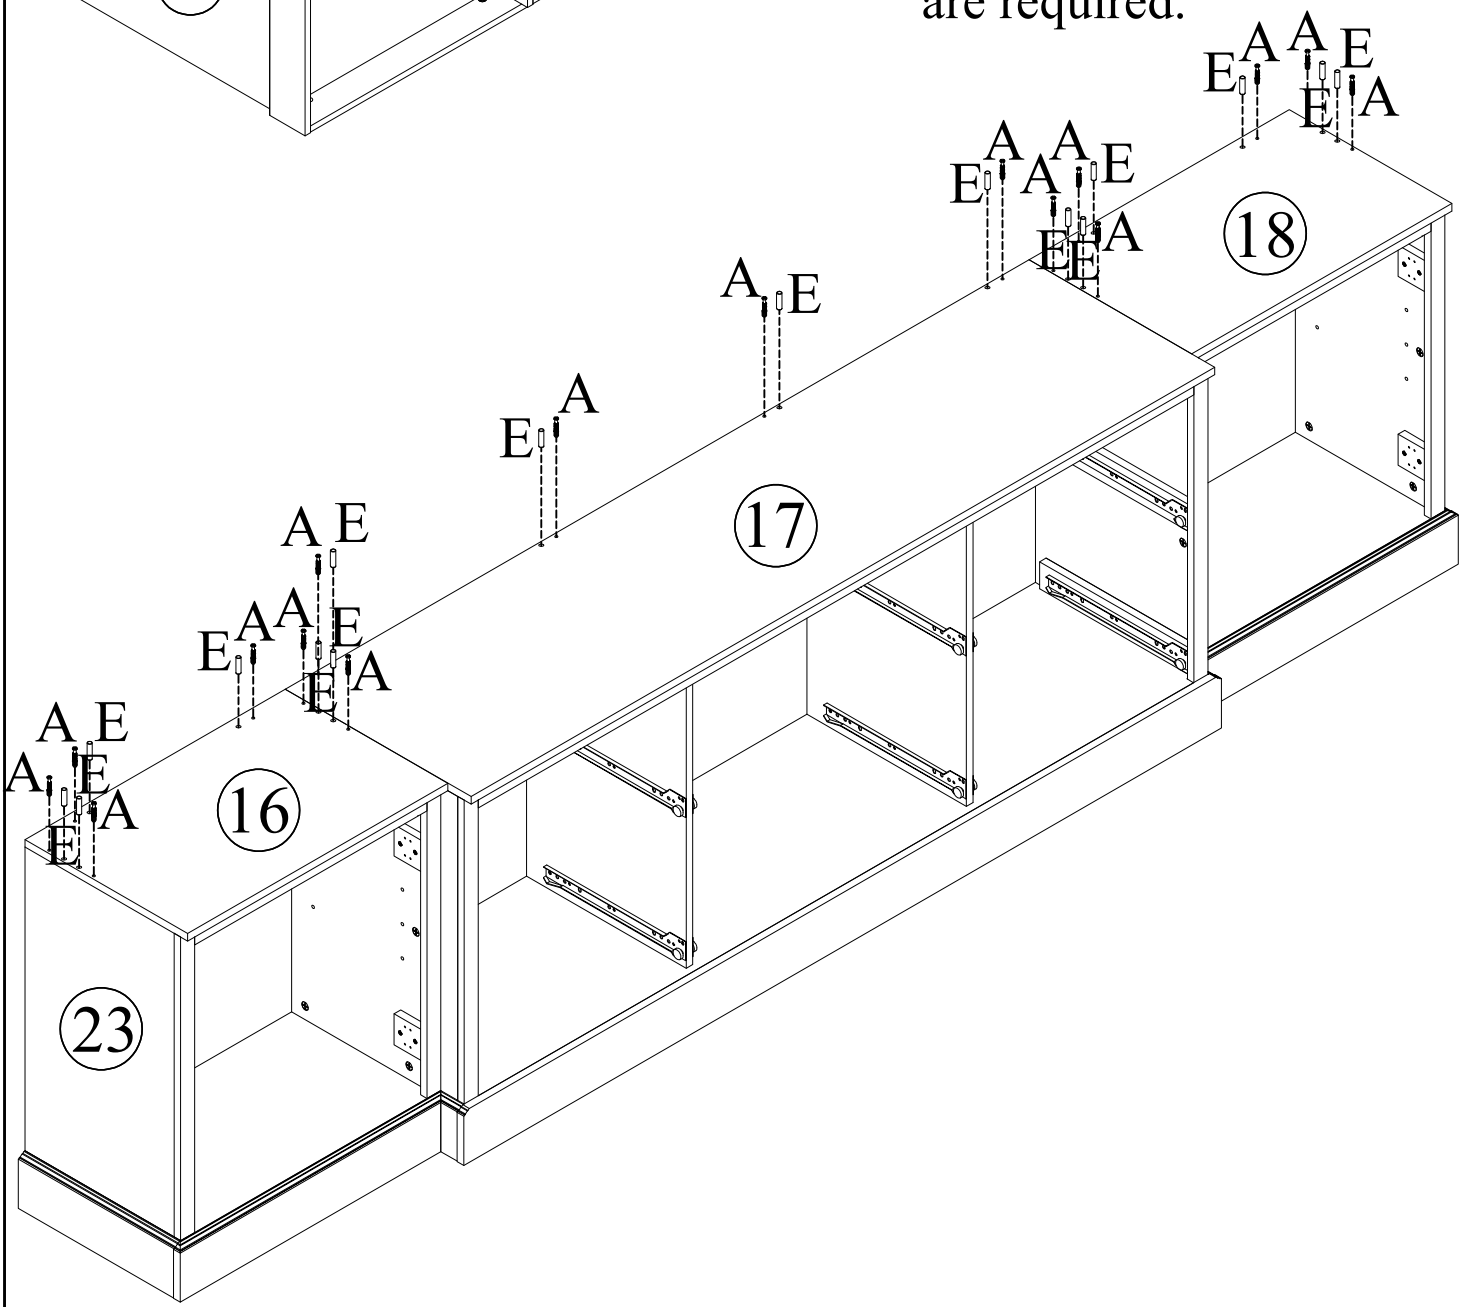

Step/Étape 82


B		8

Be careful!
At least 2 people
are required.

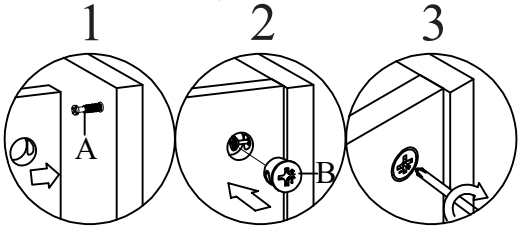


Step/Étape 83


B		8

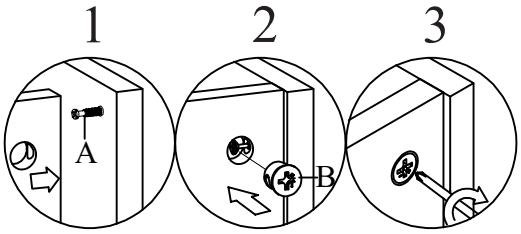


Step/Étape 84



49		2
54		2
A		16
E		8

X2

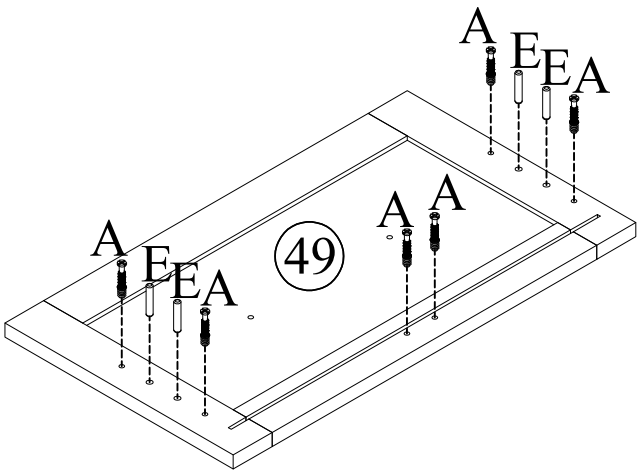


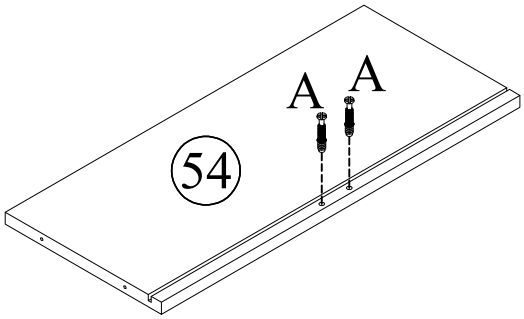


Step/Étape 85


52		2
53		2
B		8

X2

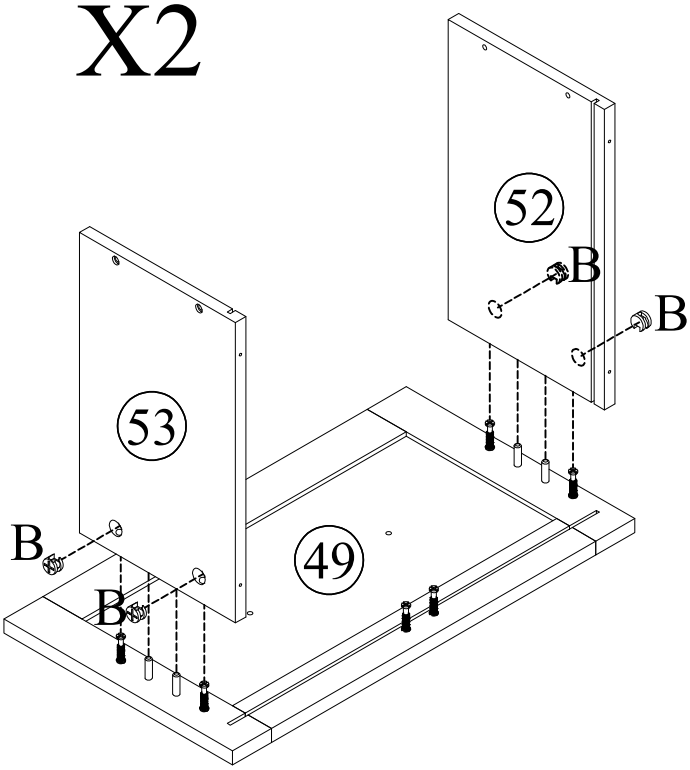


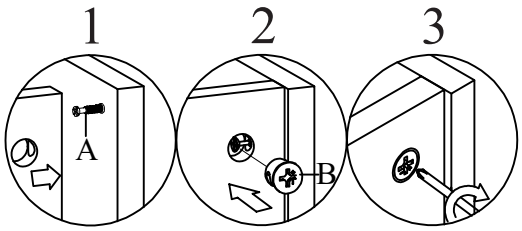


Step/Étape 86


58		2
B		4

X2

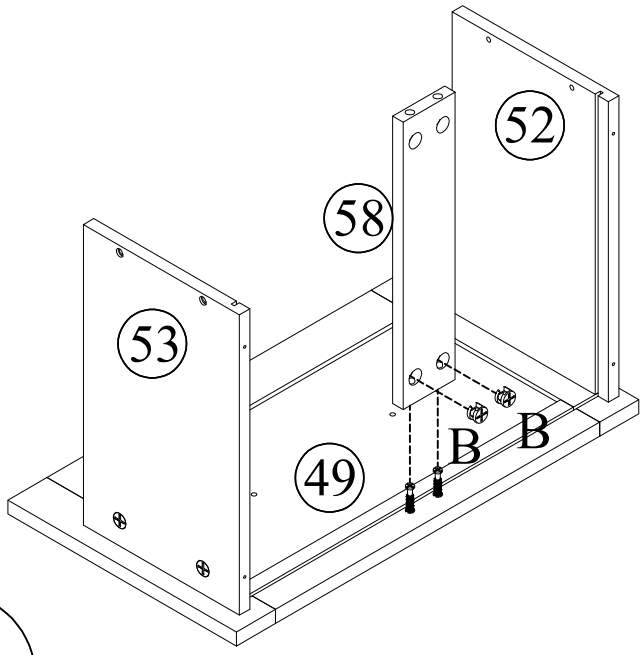


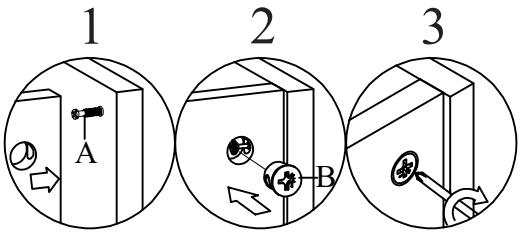

Step/Étape 87

56		2


X2

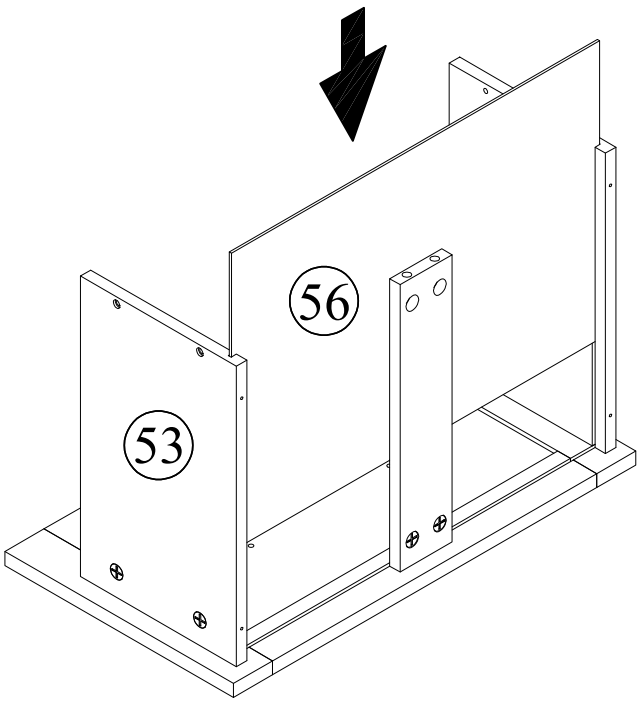


Step/Étape 88

B		4

X2

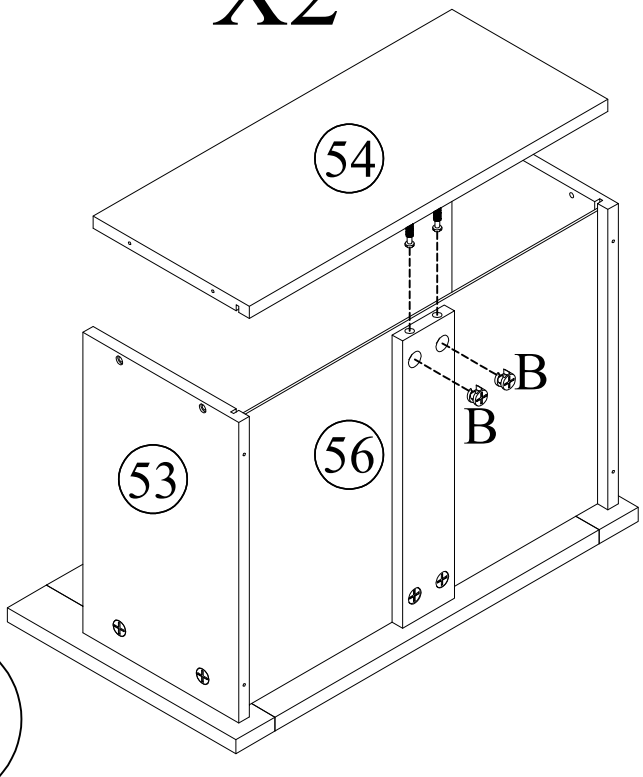


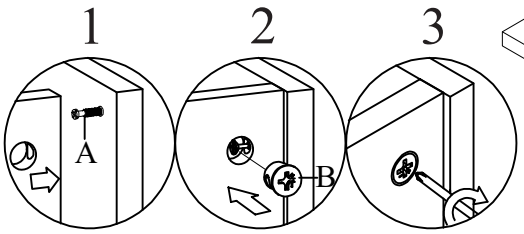


Step/Étape 89

O		8


X2

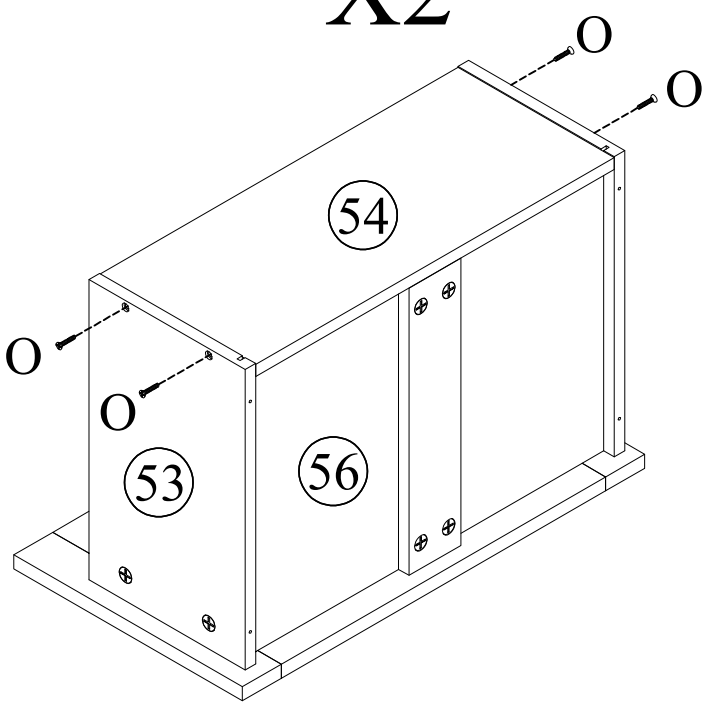

Step/Étape 90


G		2
I		4


X2

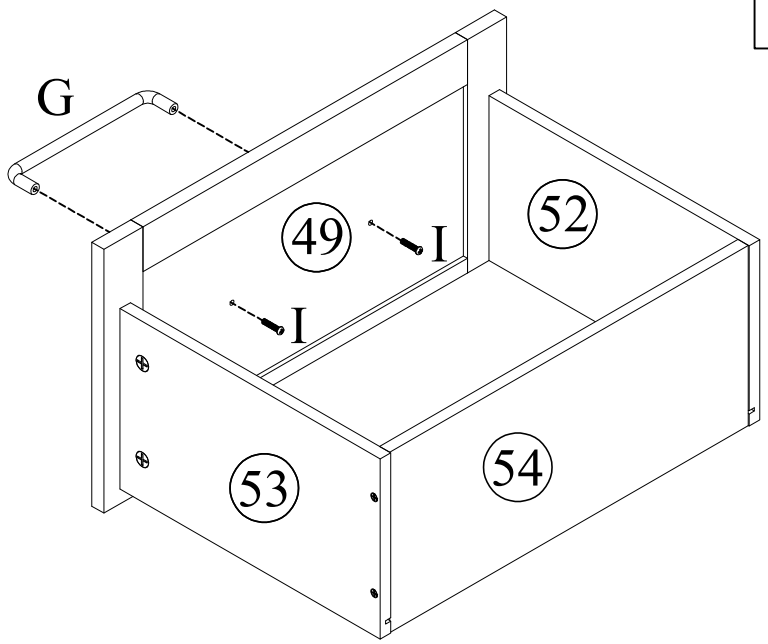

Step/Étape 91


P		12
Y	Y-DL 	2
Y	Y-DR	2

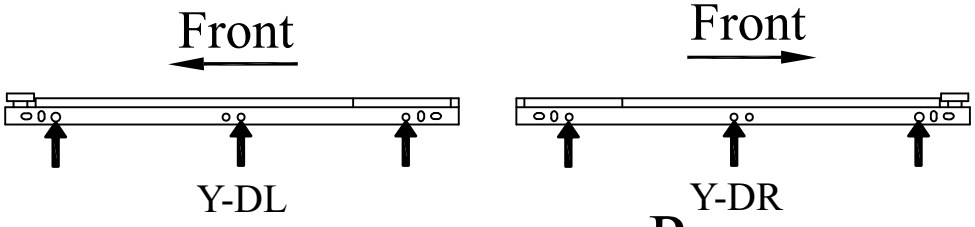

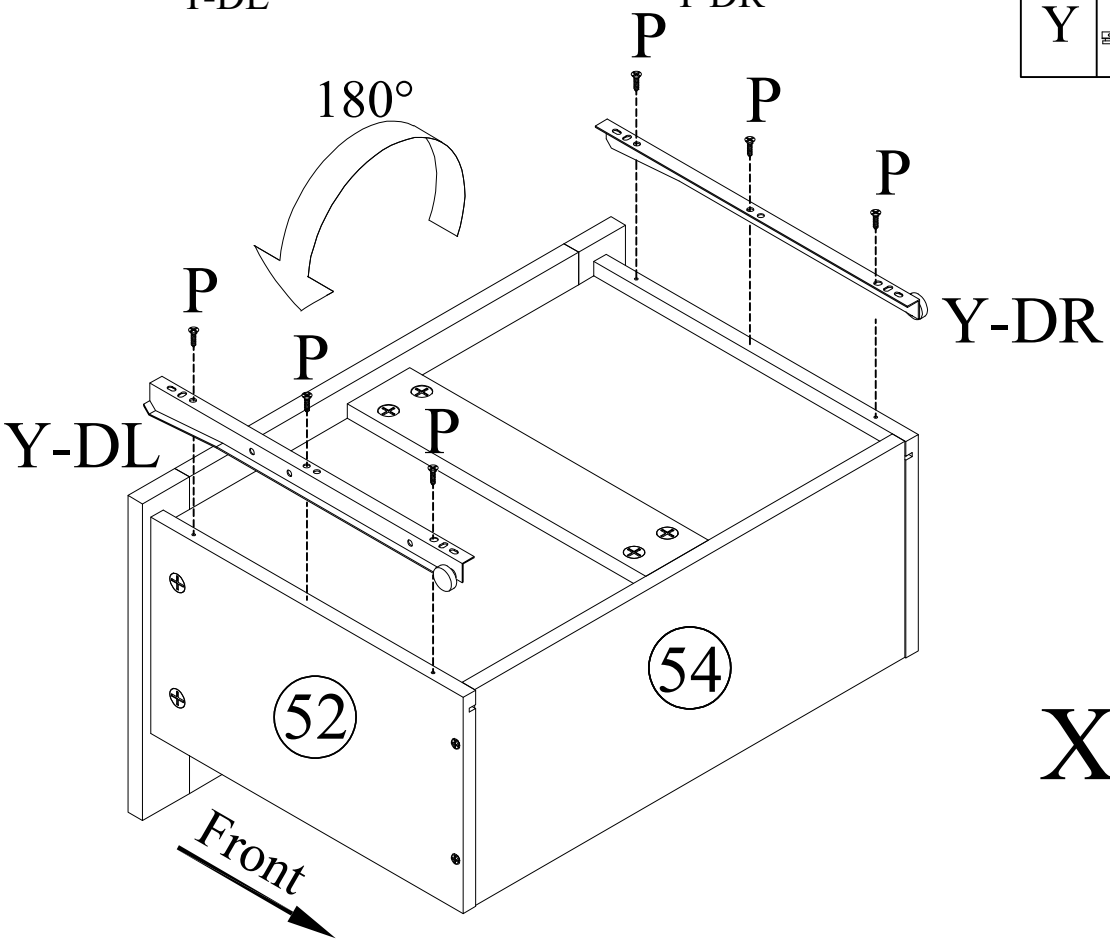



X2

Step/Étape 92



51		2
54		2
A		16
E		8

X2

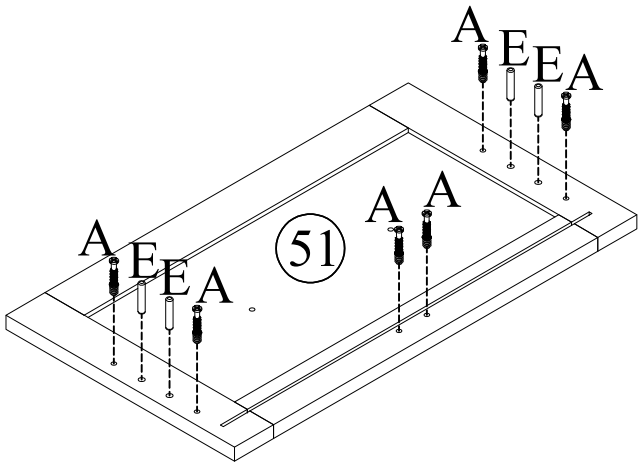


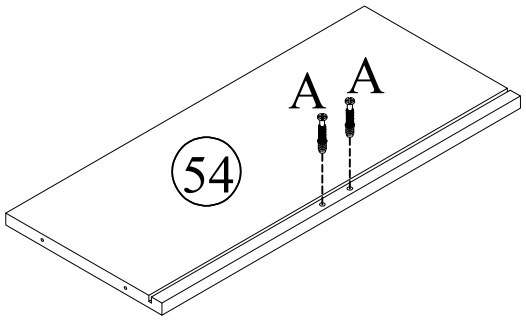


Step/Étape 93


52		2
53		2
B		8

X2

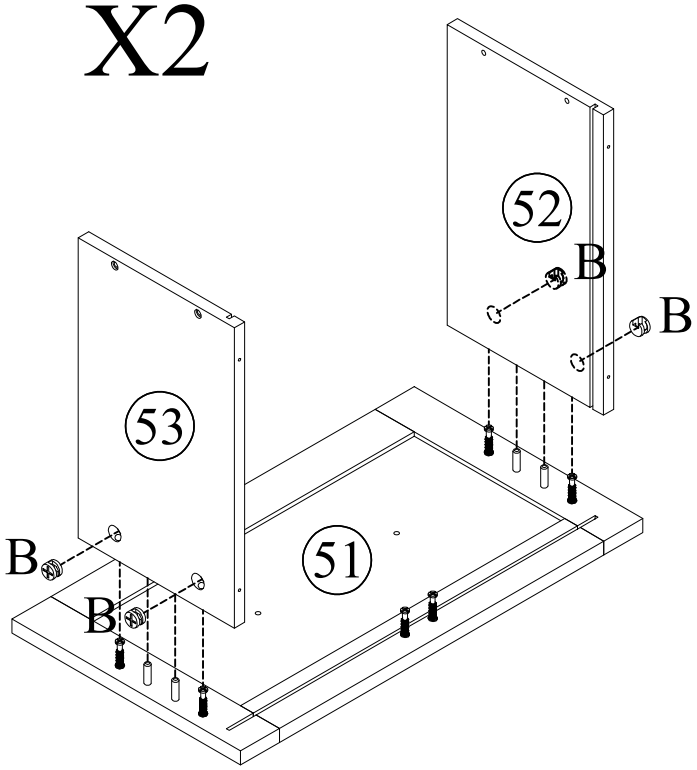


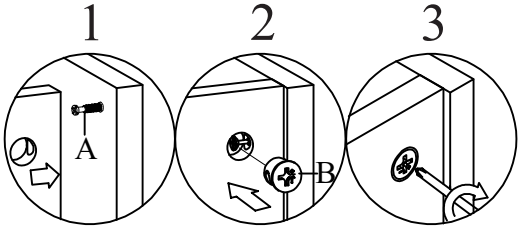


Step/Étape 94


58		2
B		4

X2

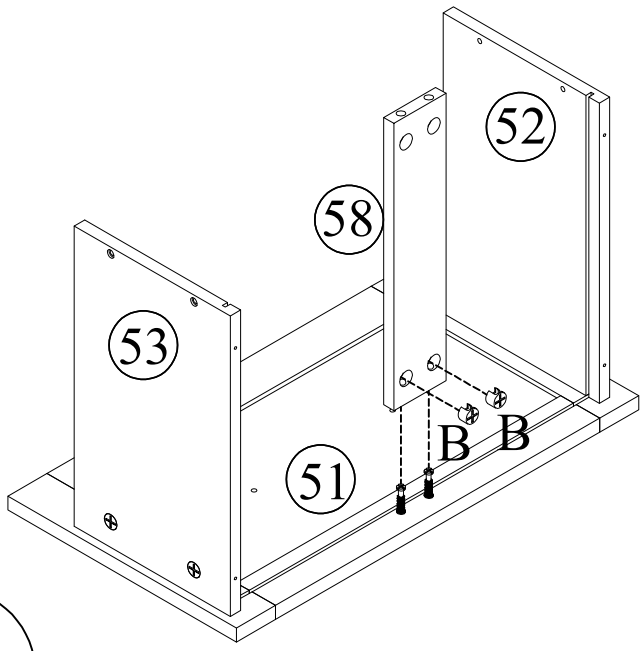


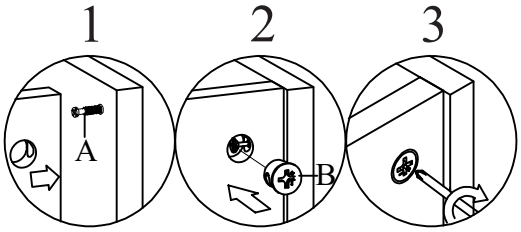

Step/Étape 95

56		2


X2

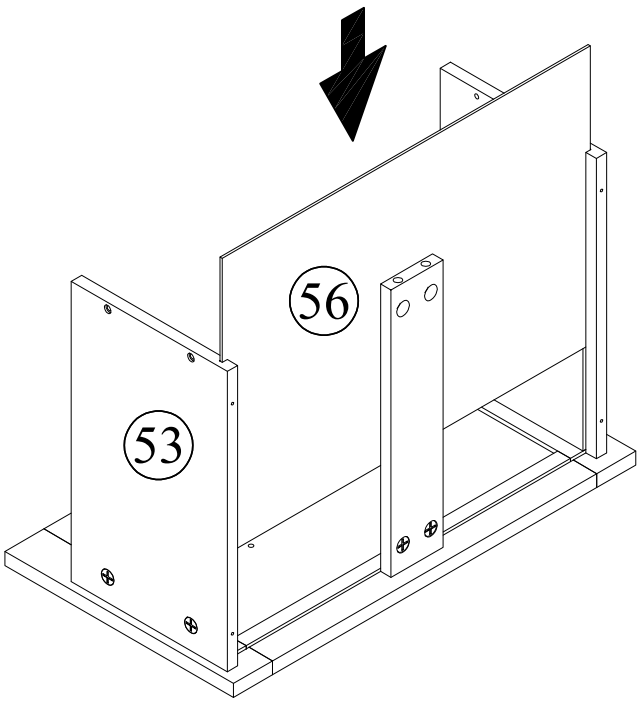


Step/Étape 96

B		4

X2

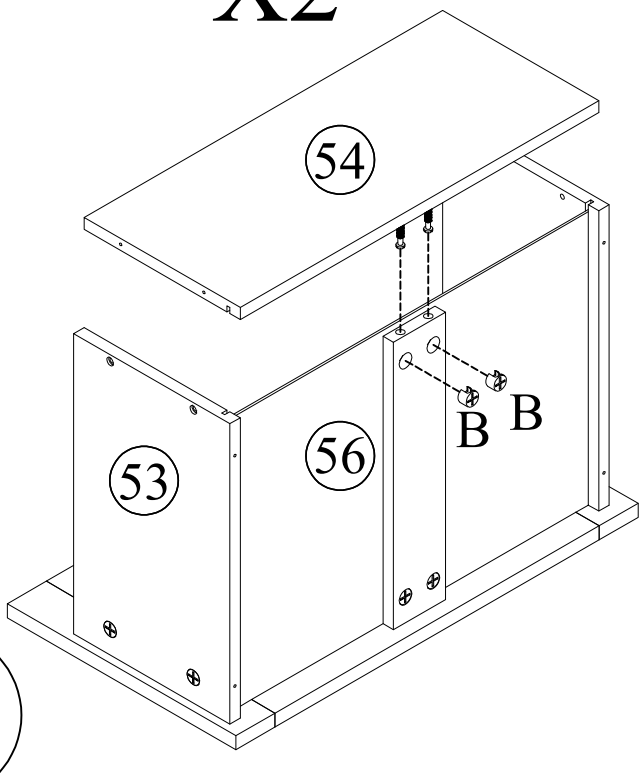


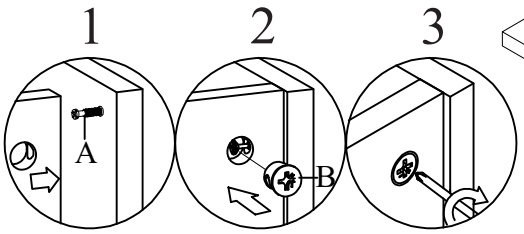


Step/Étape 97

O		8


X2

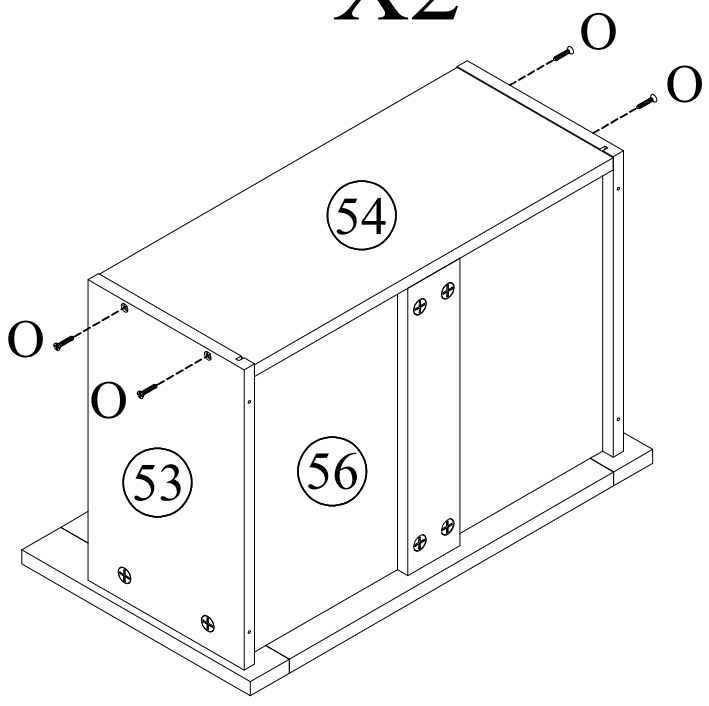

Step/Étape 98


G		2
I		4


X2

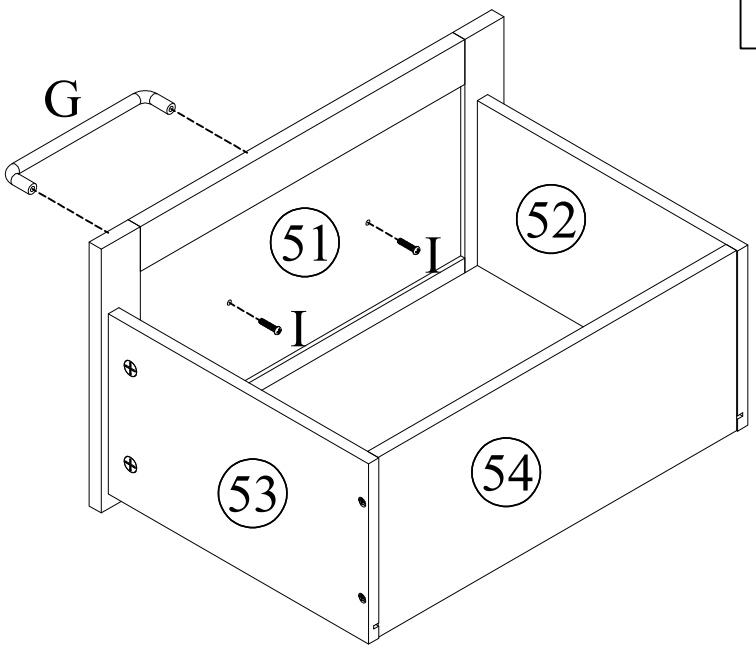

Step/Étape 99



P		12
Y	Y-DL	2
Y	Y-DR 	2

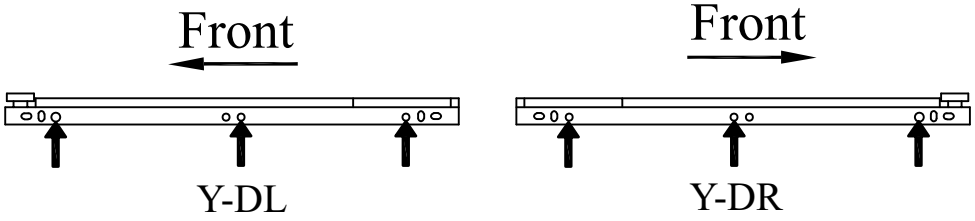

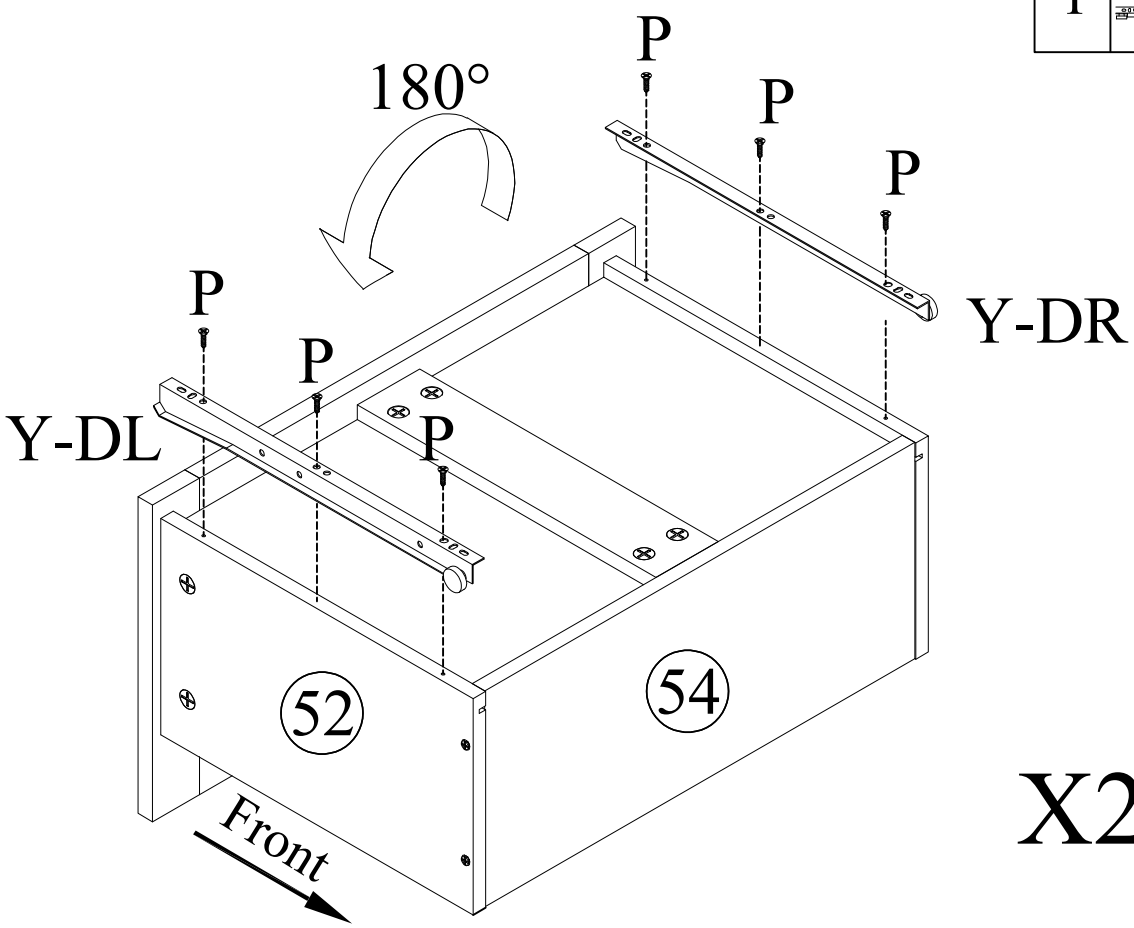



X2

Step/Étape 100



50		2
55		2
A		16
E		8

X2

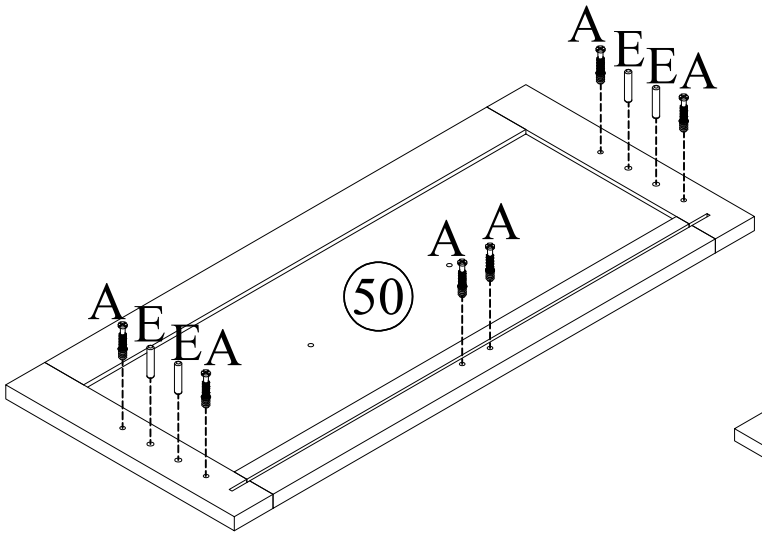


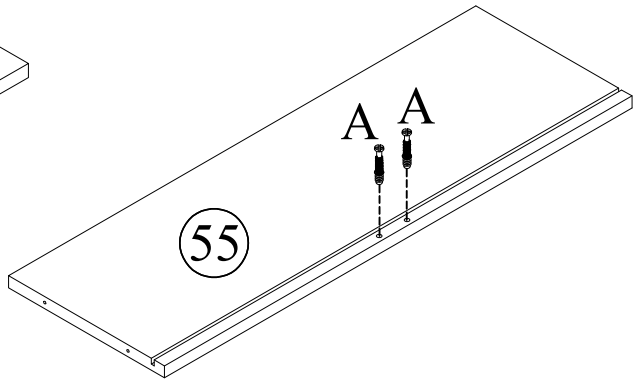


Step/Étape 101


52		2
53		2
B		8

X2

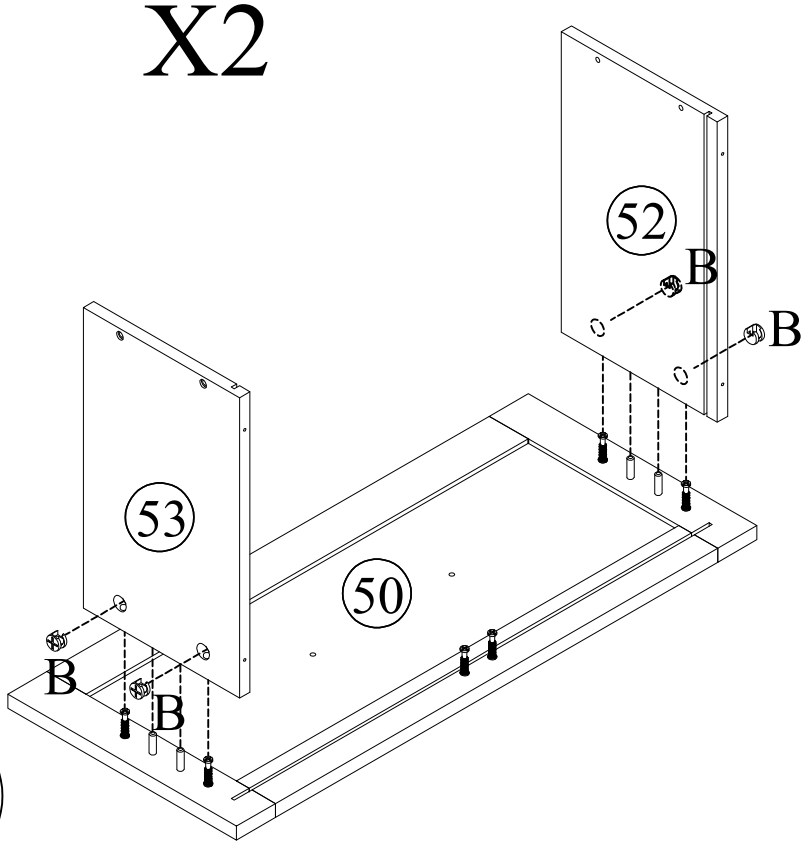


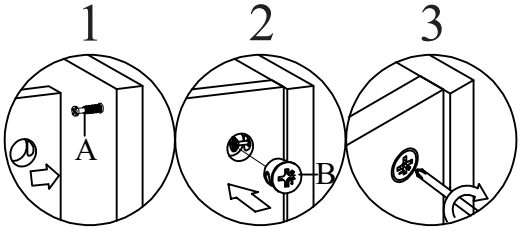


Step/Étape 102


58		2
B		2

X2

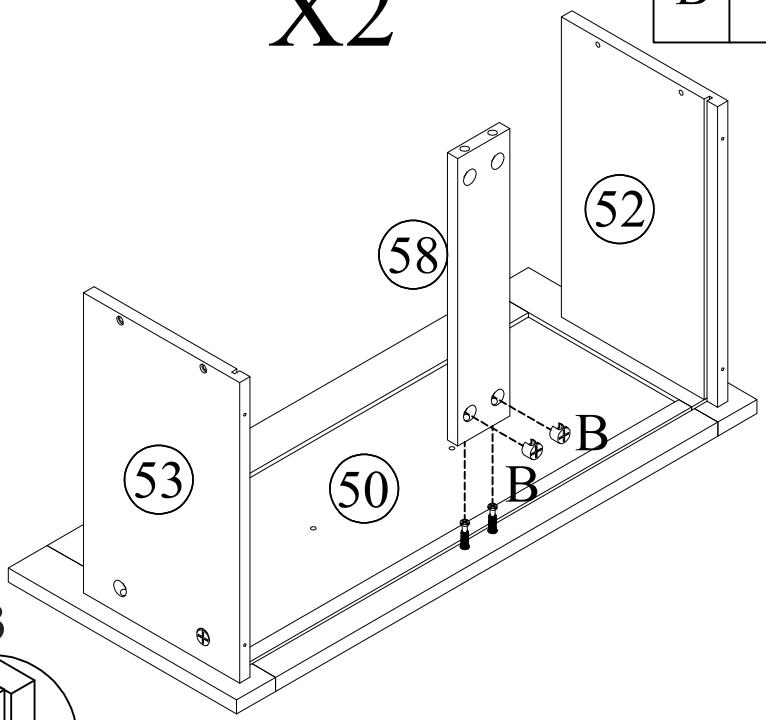


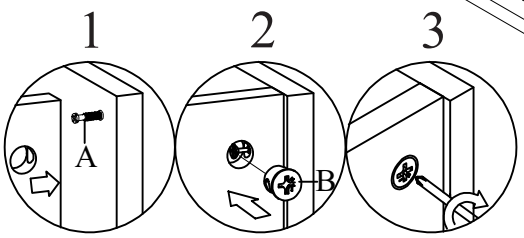

Step/Étape 103

57		2


X2

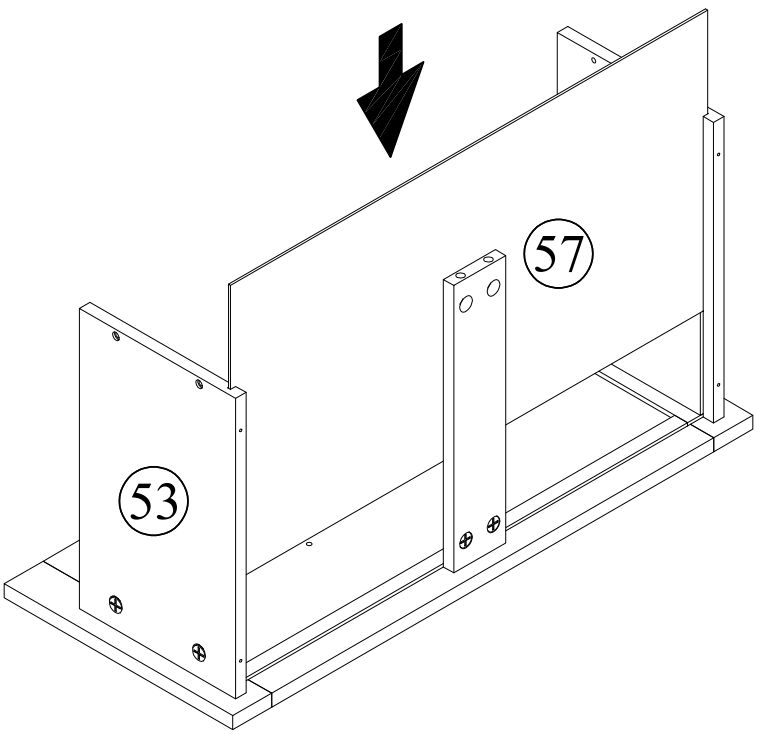


Step/Étape 104

B		4

X2

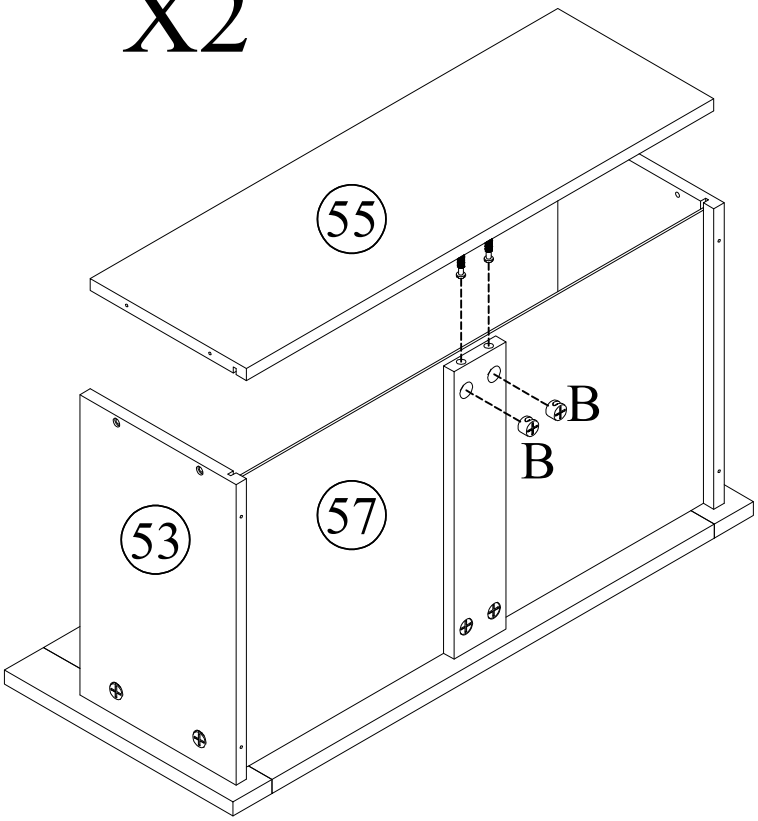


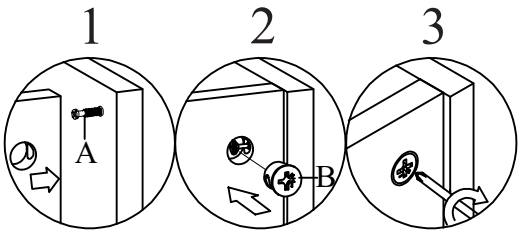

Step/Étape 105


O		8


X2

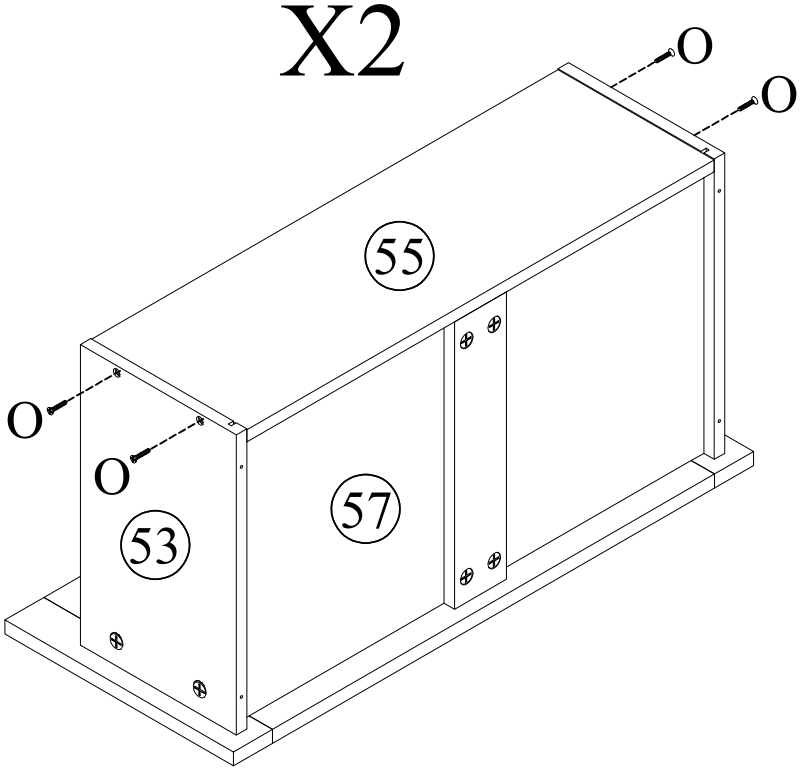


Step/Étape 106

X2


G		2
I		4

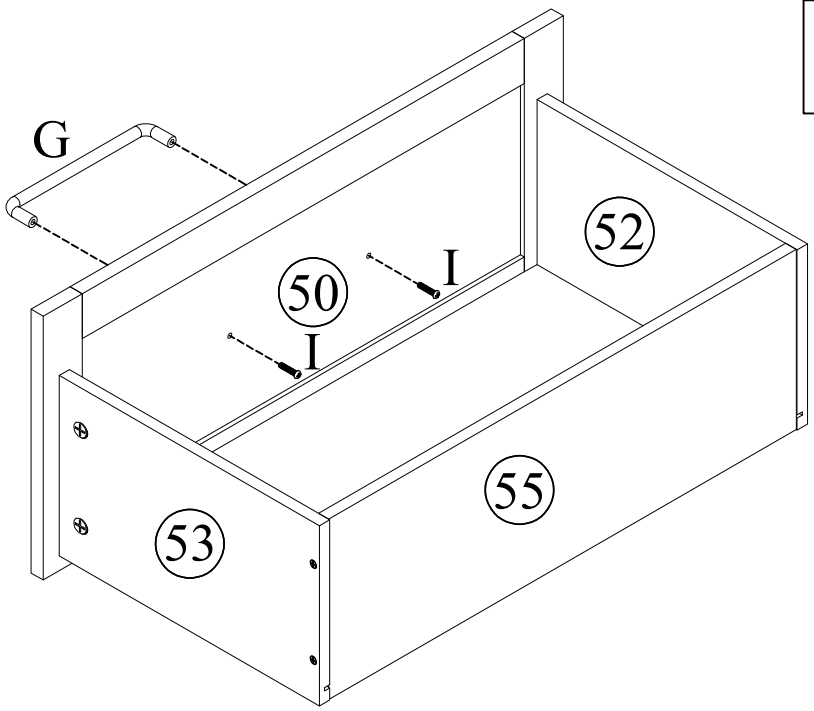

Step/Étape 107

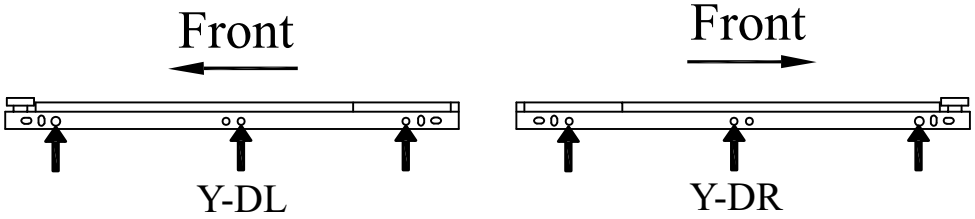

P		12
Y	Y-DL	2
Y	Y-DR 	2

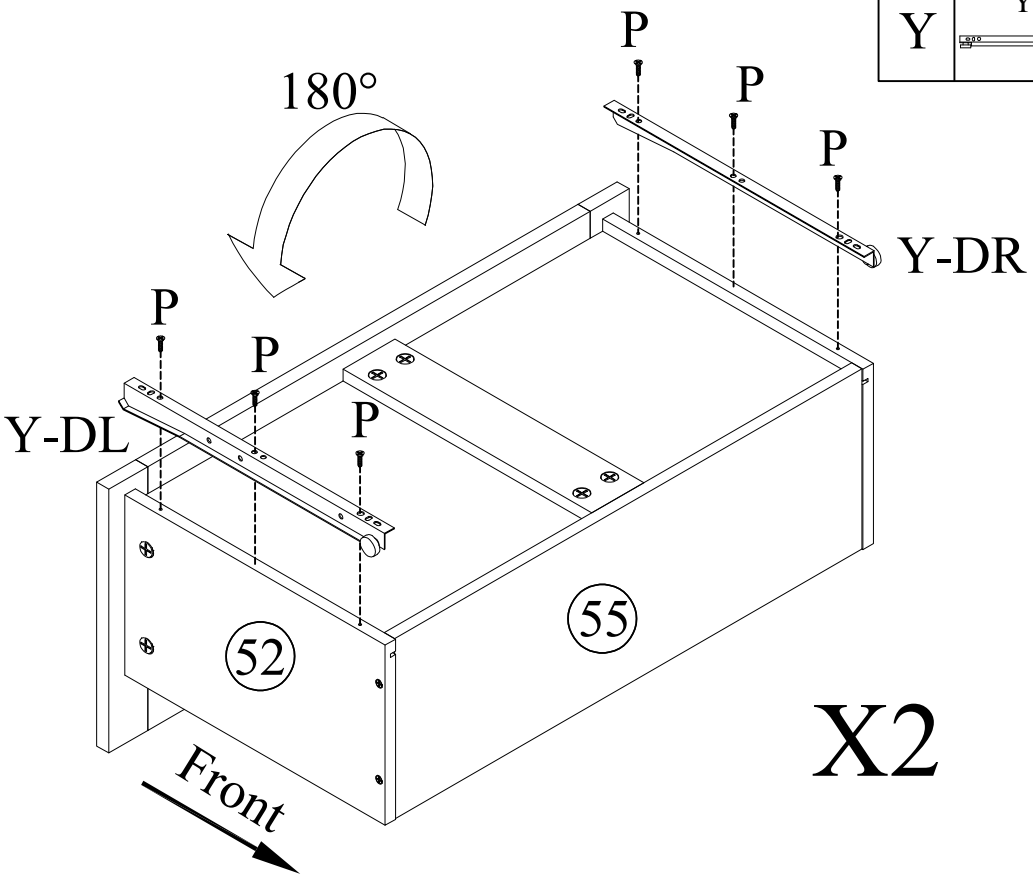


X2

Step/Étape 108

X	⬭	208



Covering the round hole in the cabinet
makes the surface more uniform and neat.

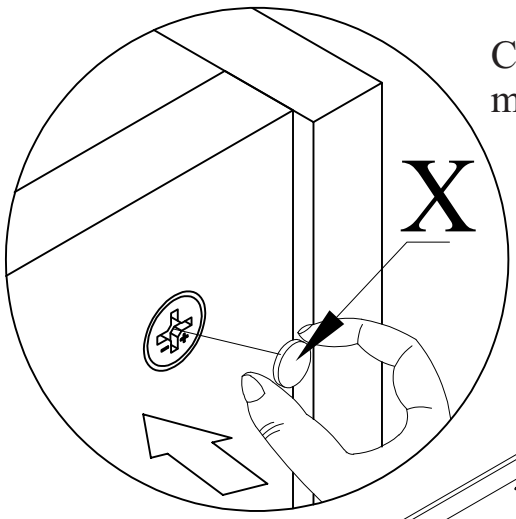


Step/Étape 109

J		16


Step/Étape 110

11		2
25		2
K		16




The shelf height can be adjusted as needed.
Please decide on the layer placement before installing the shelves in the side cabinet.

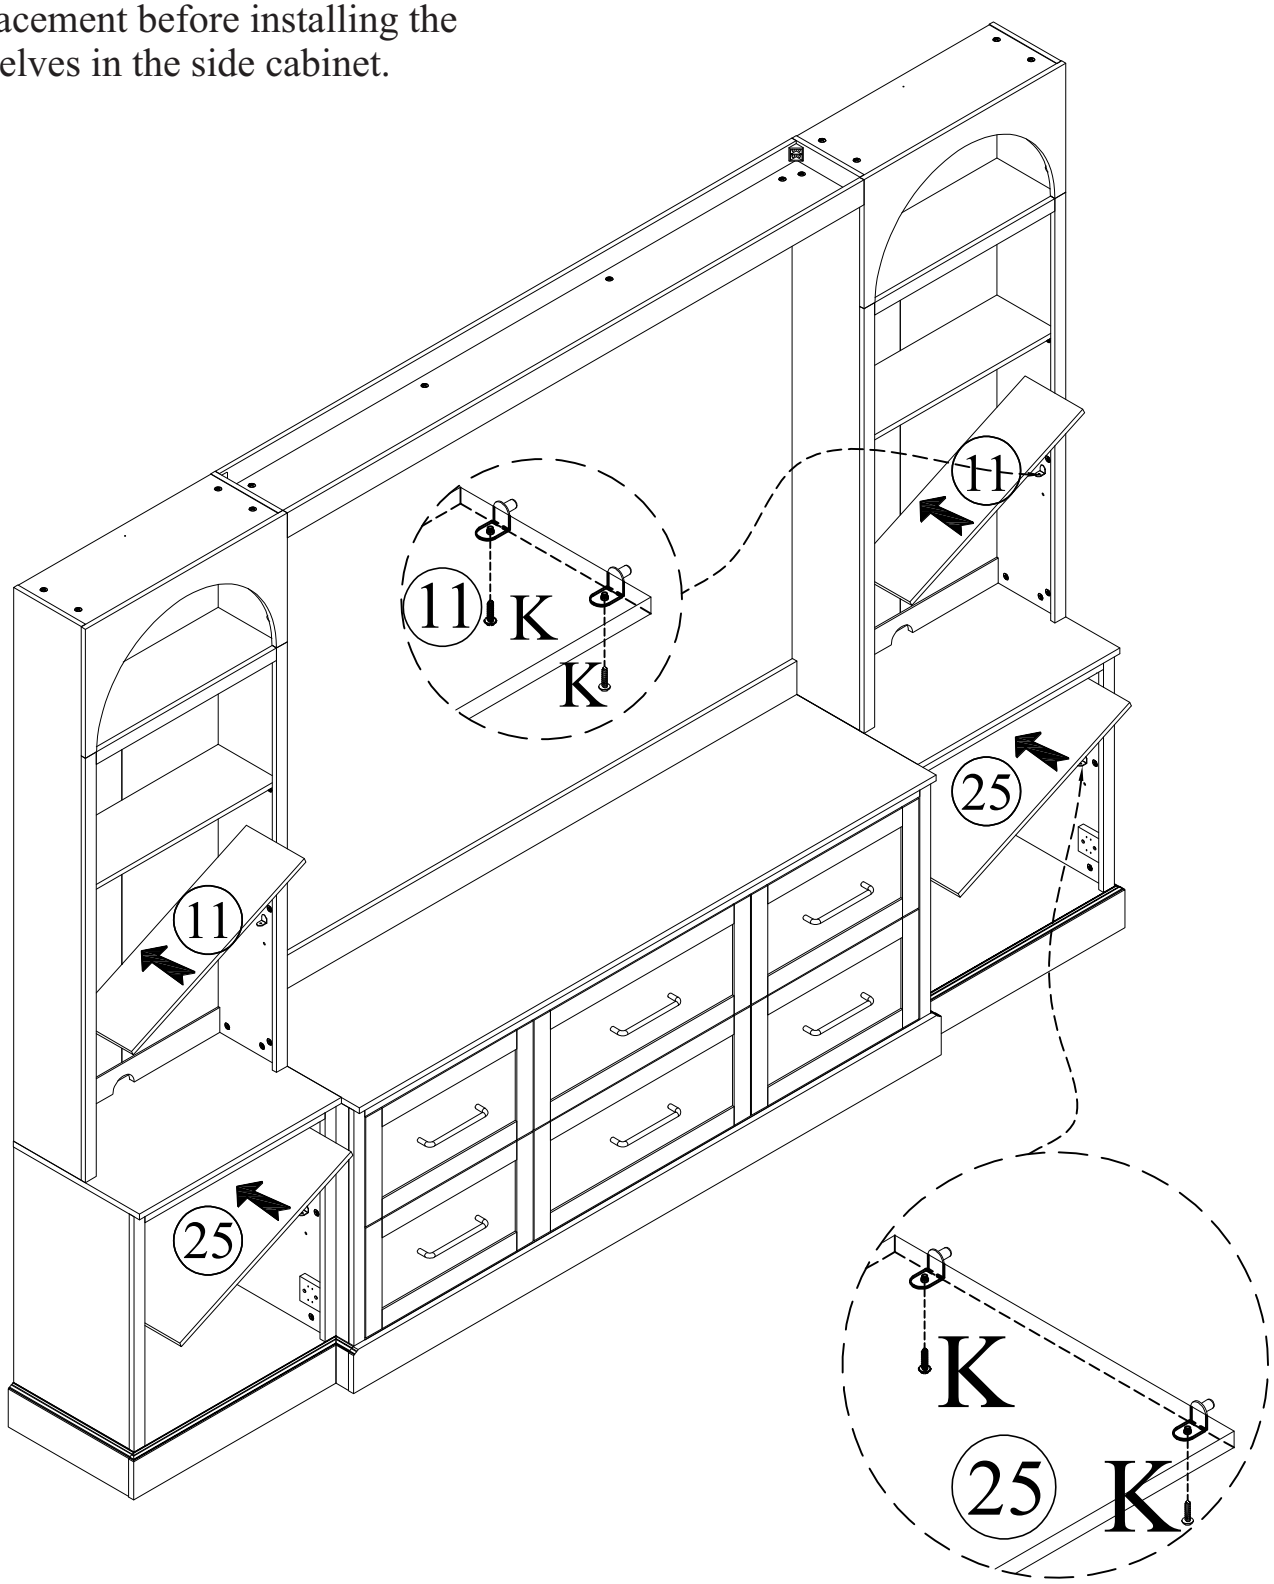


Step/Étape 111


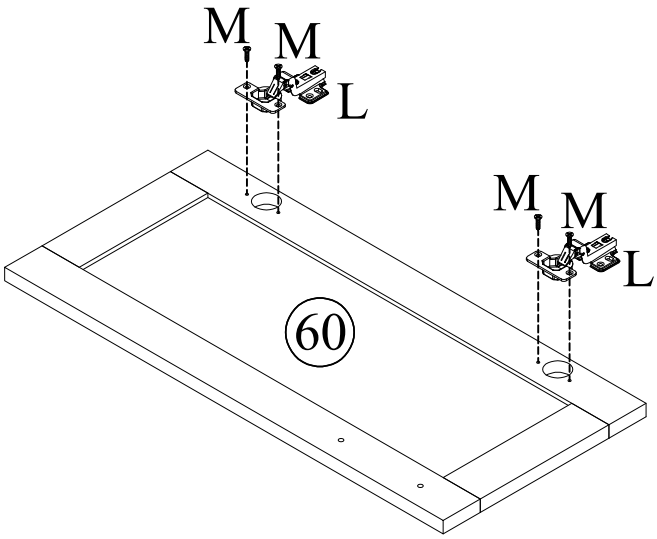


X2


59		2
60		2
L		8
M		16

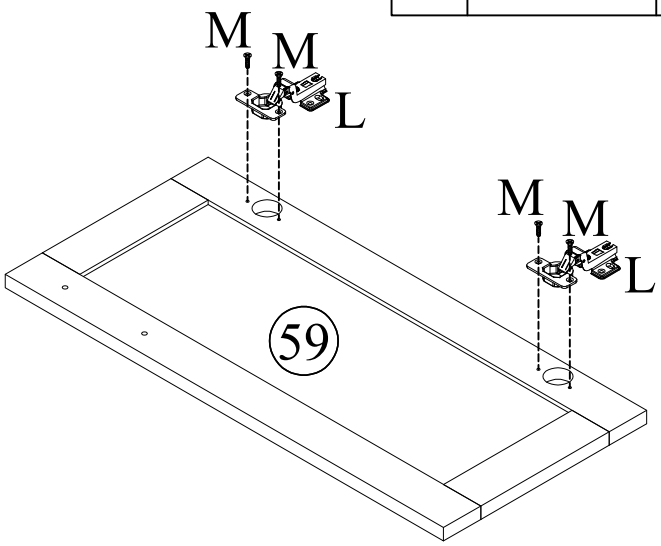


Step/Étape 112

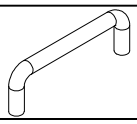F		4
H		8


X2

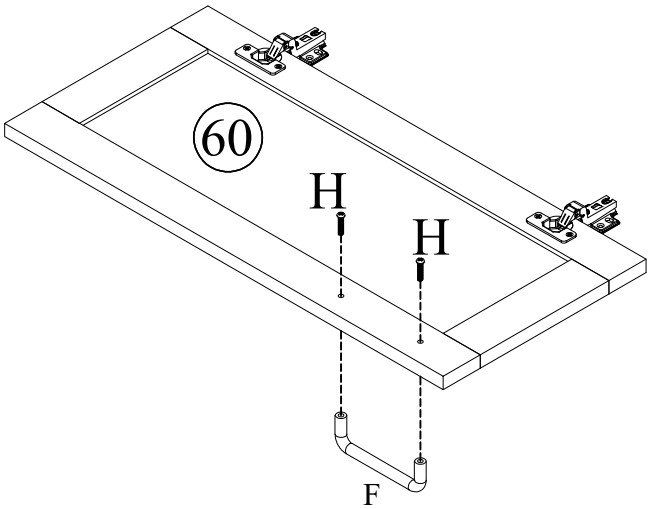

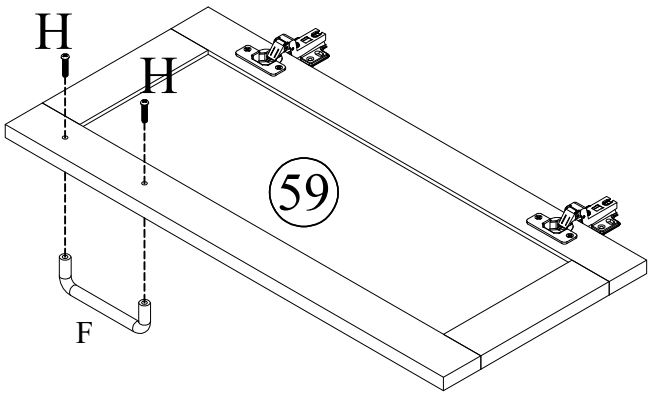


Step/Étape 113

M		16

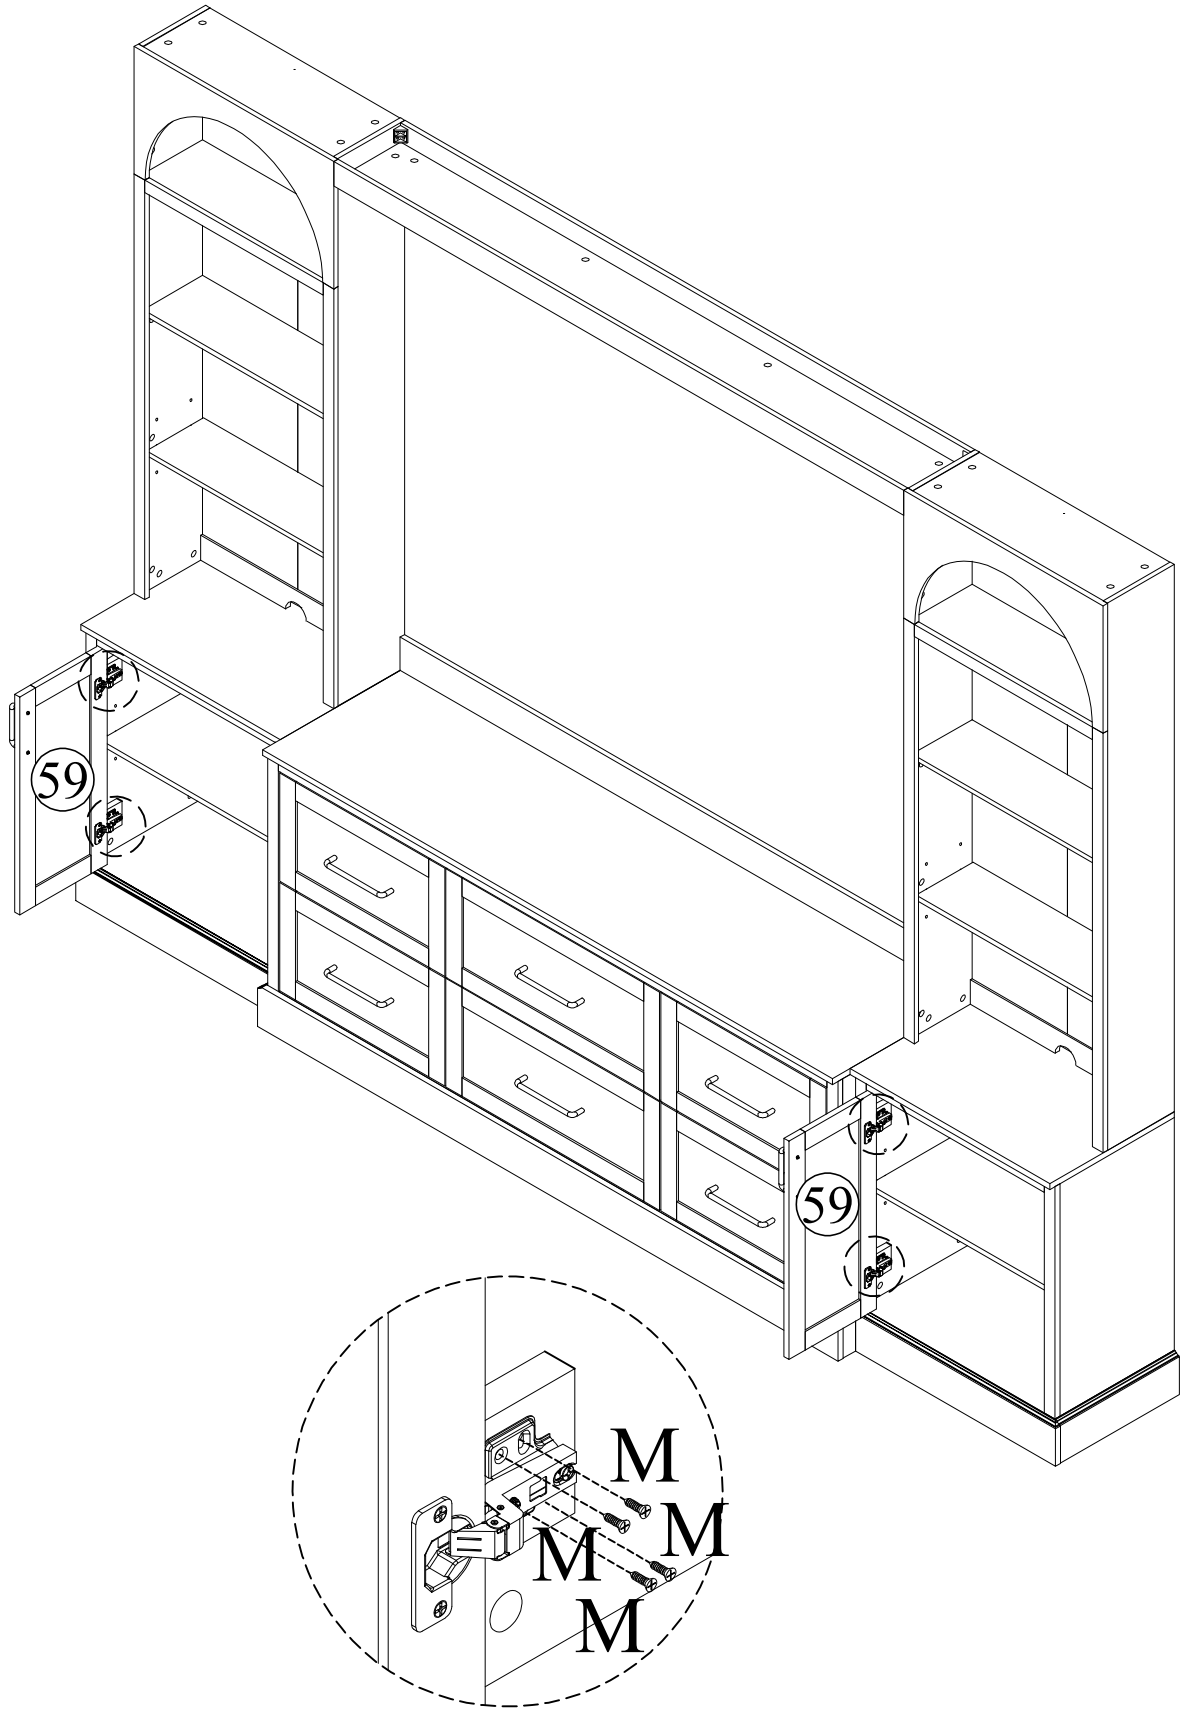


Step/Étape 114

M		16

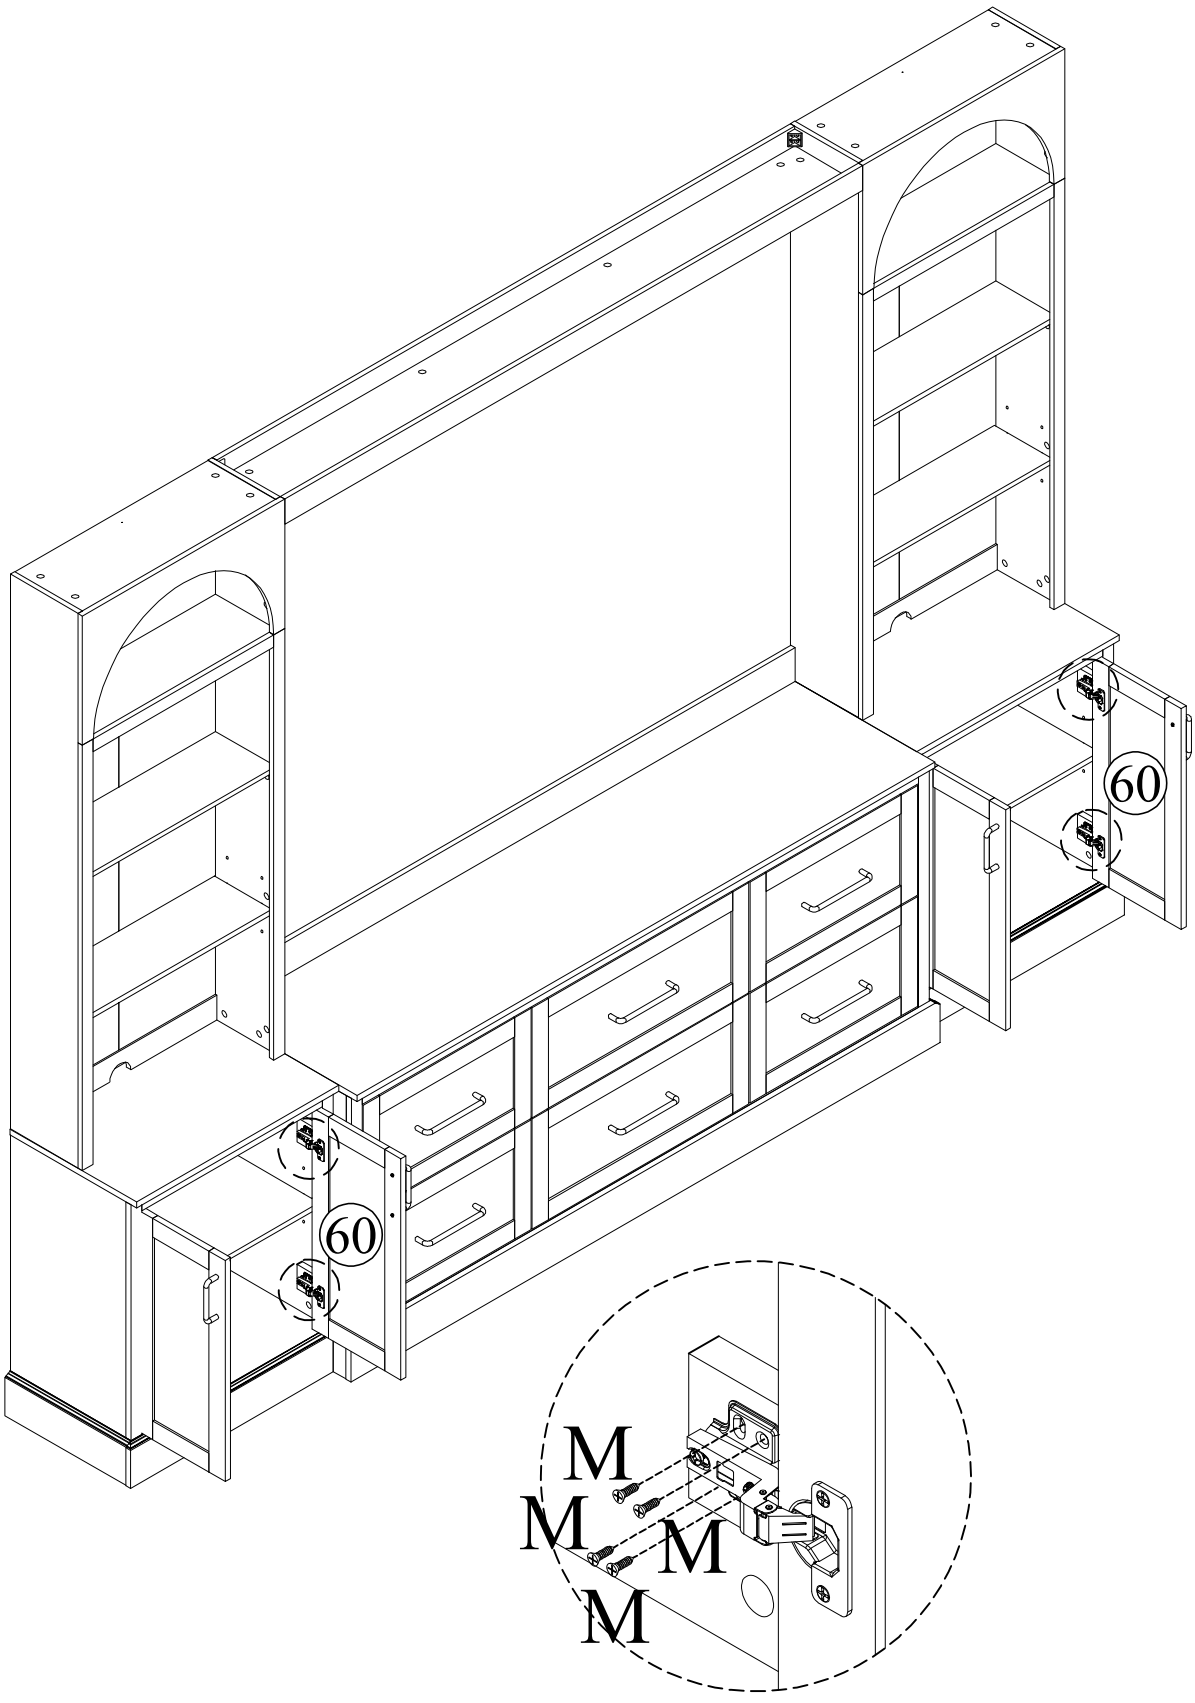



Assembly Instructions

When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

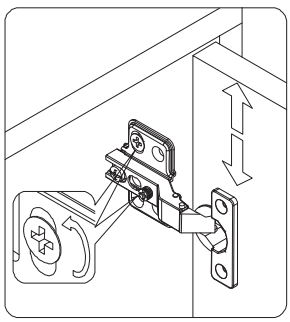



1. Adjust the screws shown in Fiqure 1 to adjust the door up and down.

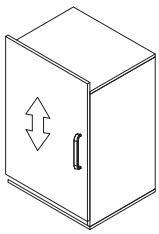

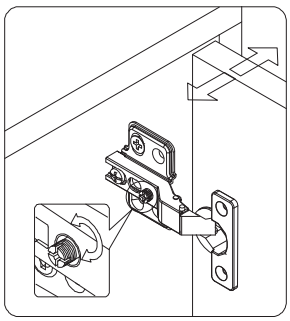



2. Adiust the screws shown in Fiqure 2 to adjust the door left and right to the right position.

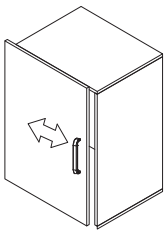

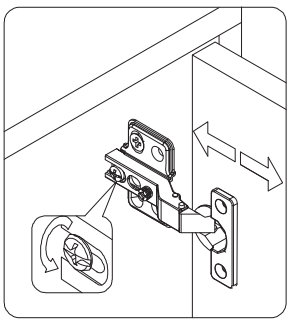


3. Adjust the screws shown in Fiqure 3 and pull the door back and forth so that it can be opened smoothly.

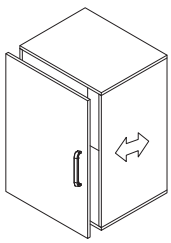


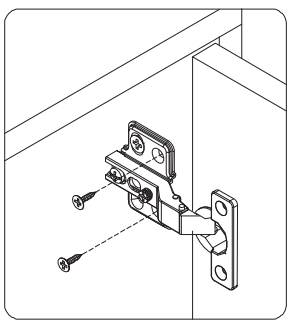

4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

Step/Étape 115


U		40
V		40

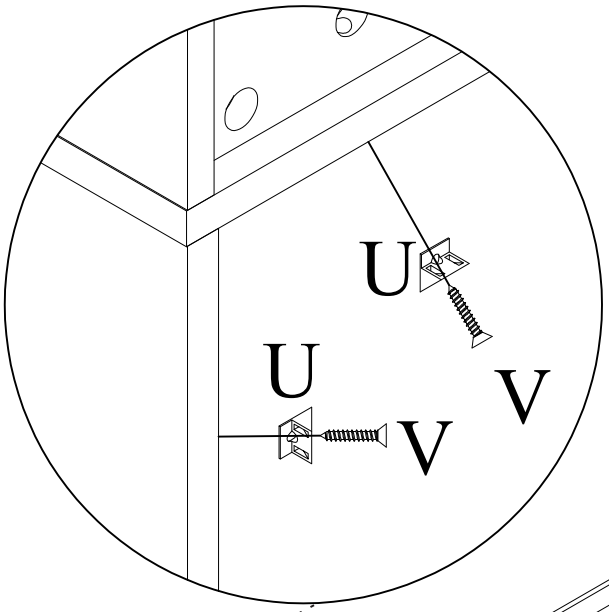


Reinforce the cabinet: Reduce cabinet swaying and improve overall stability

Step/Étape 116

W		2
W		2
W		2

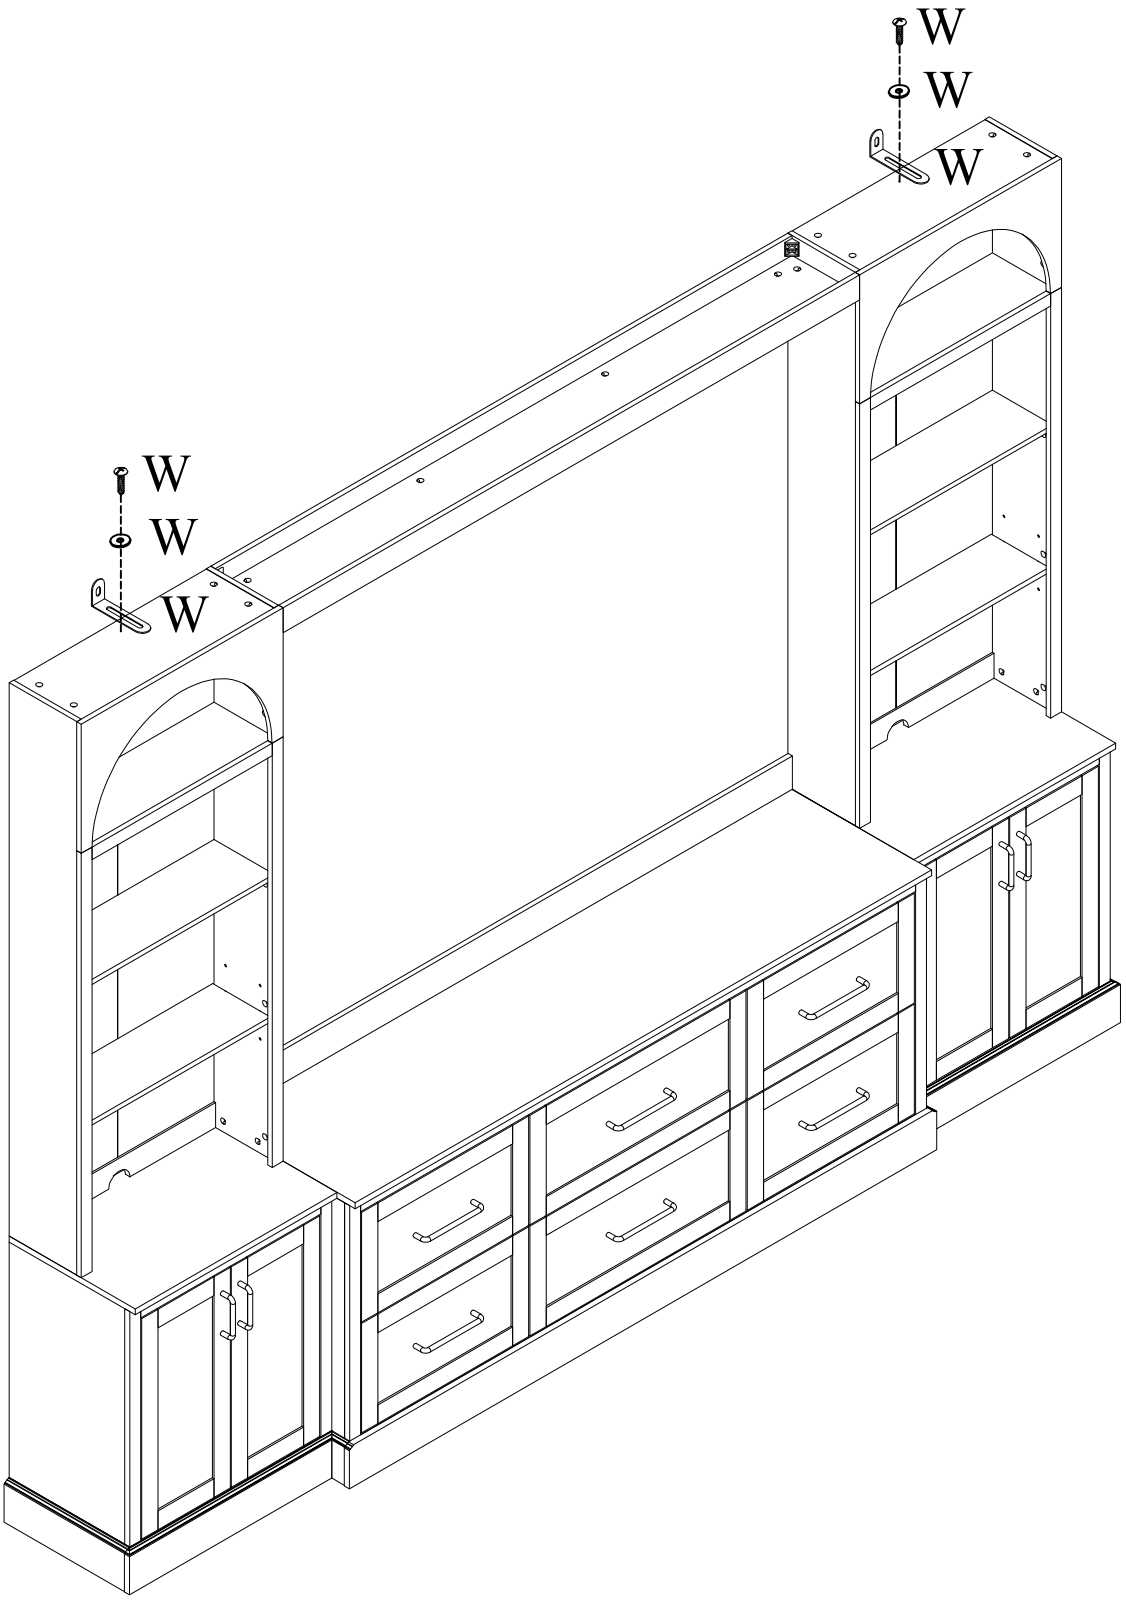


Step/Étape 117

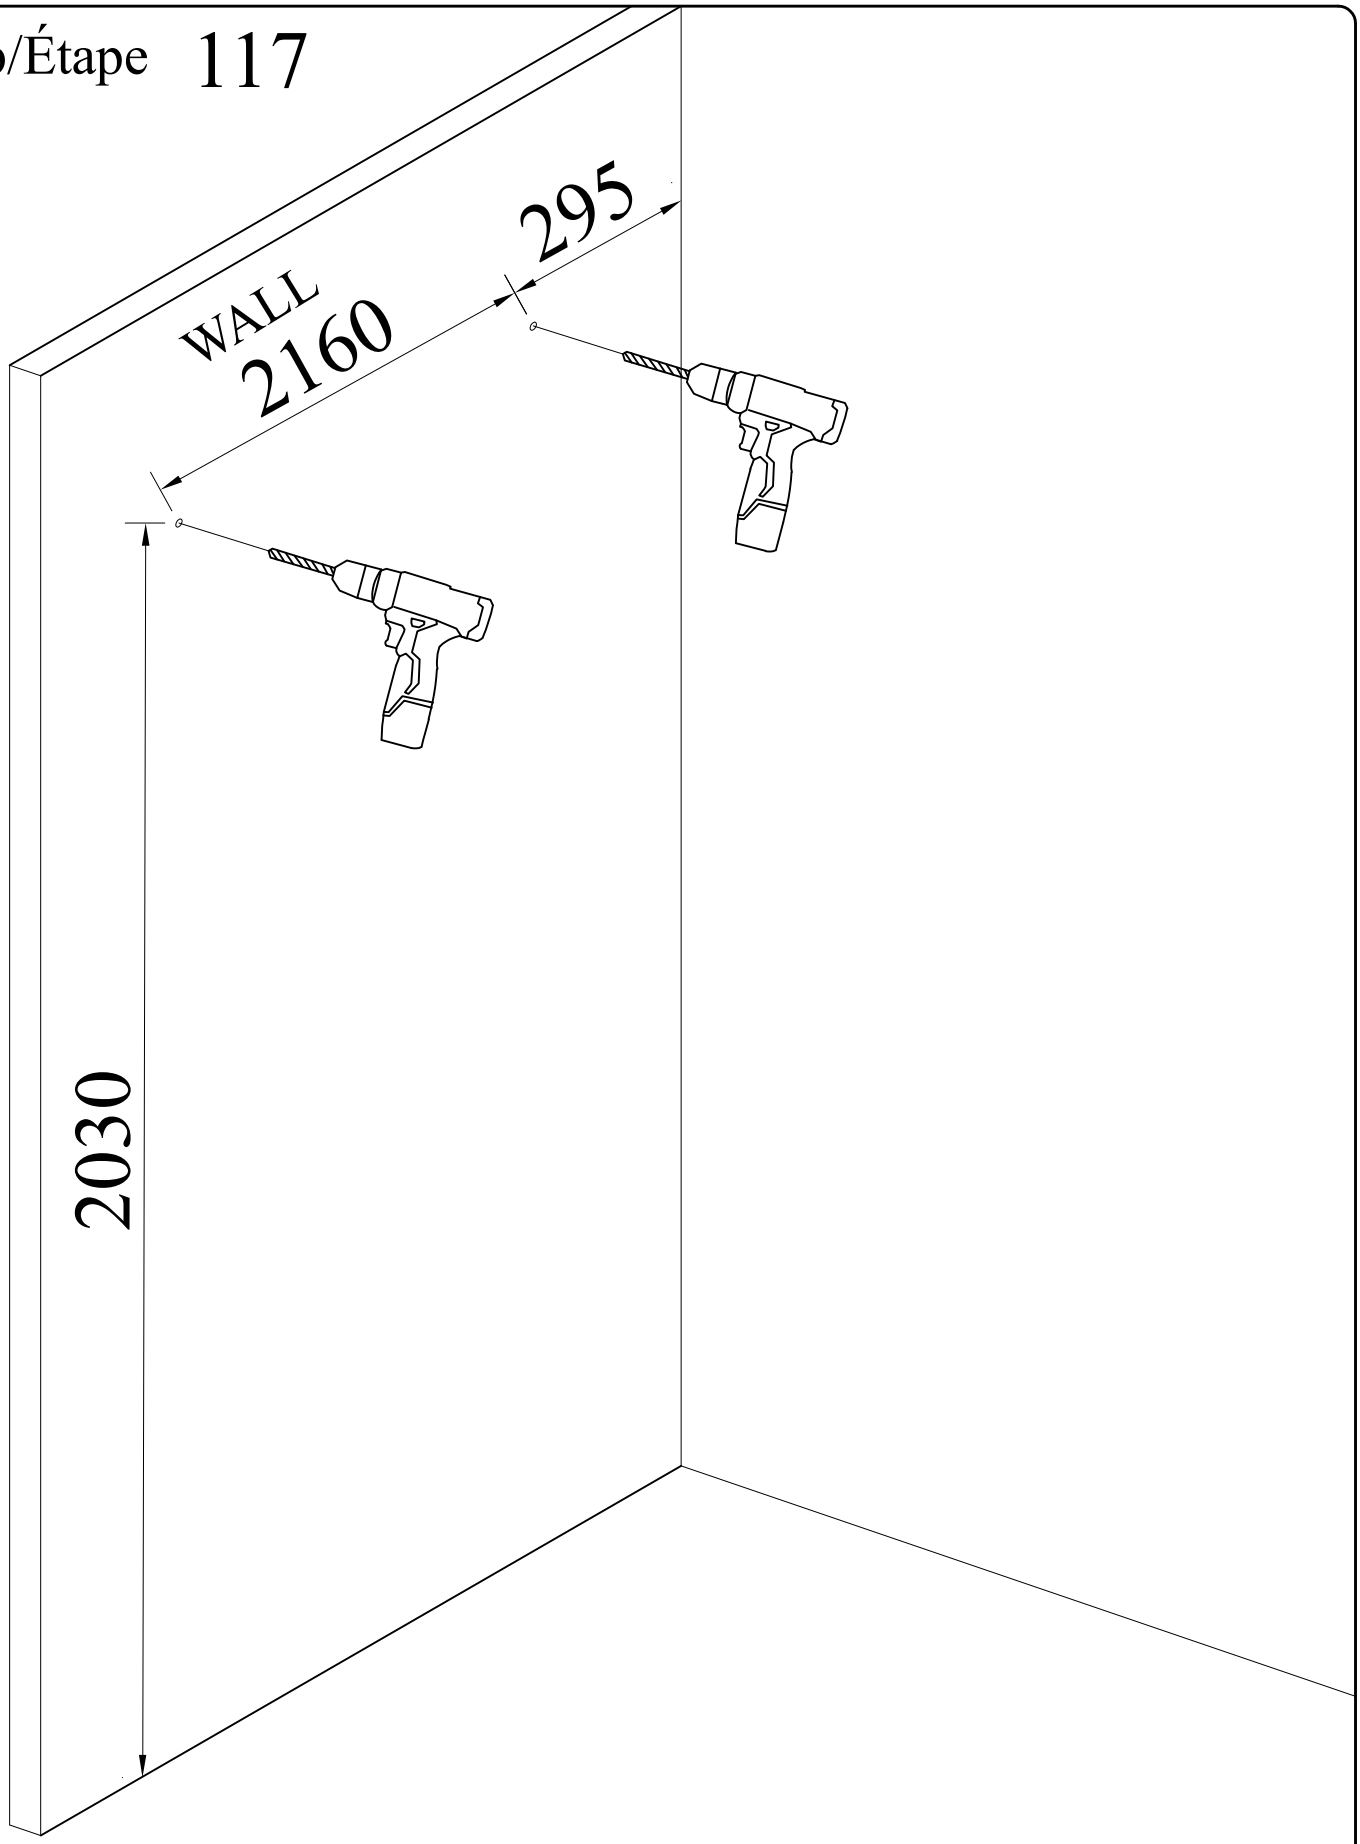


Before installing the anti-tipping device,
ensure the correct distance when drilling holes in the wall.


Step/Étape 118


W		2

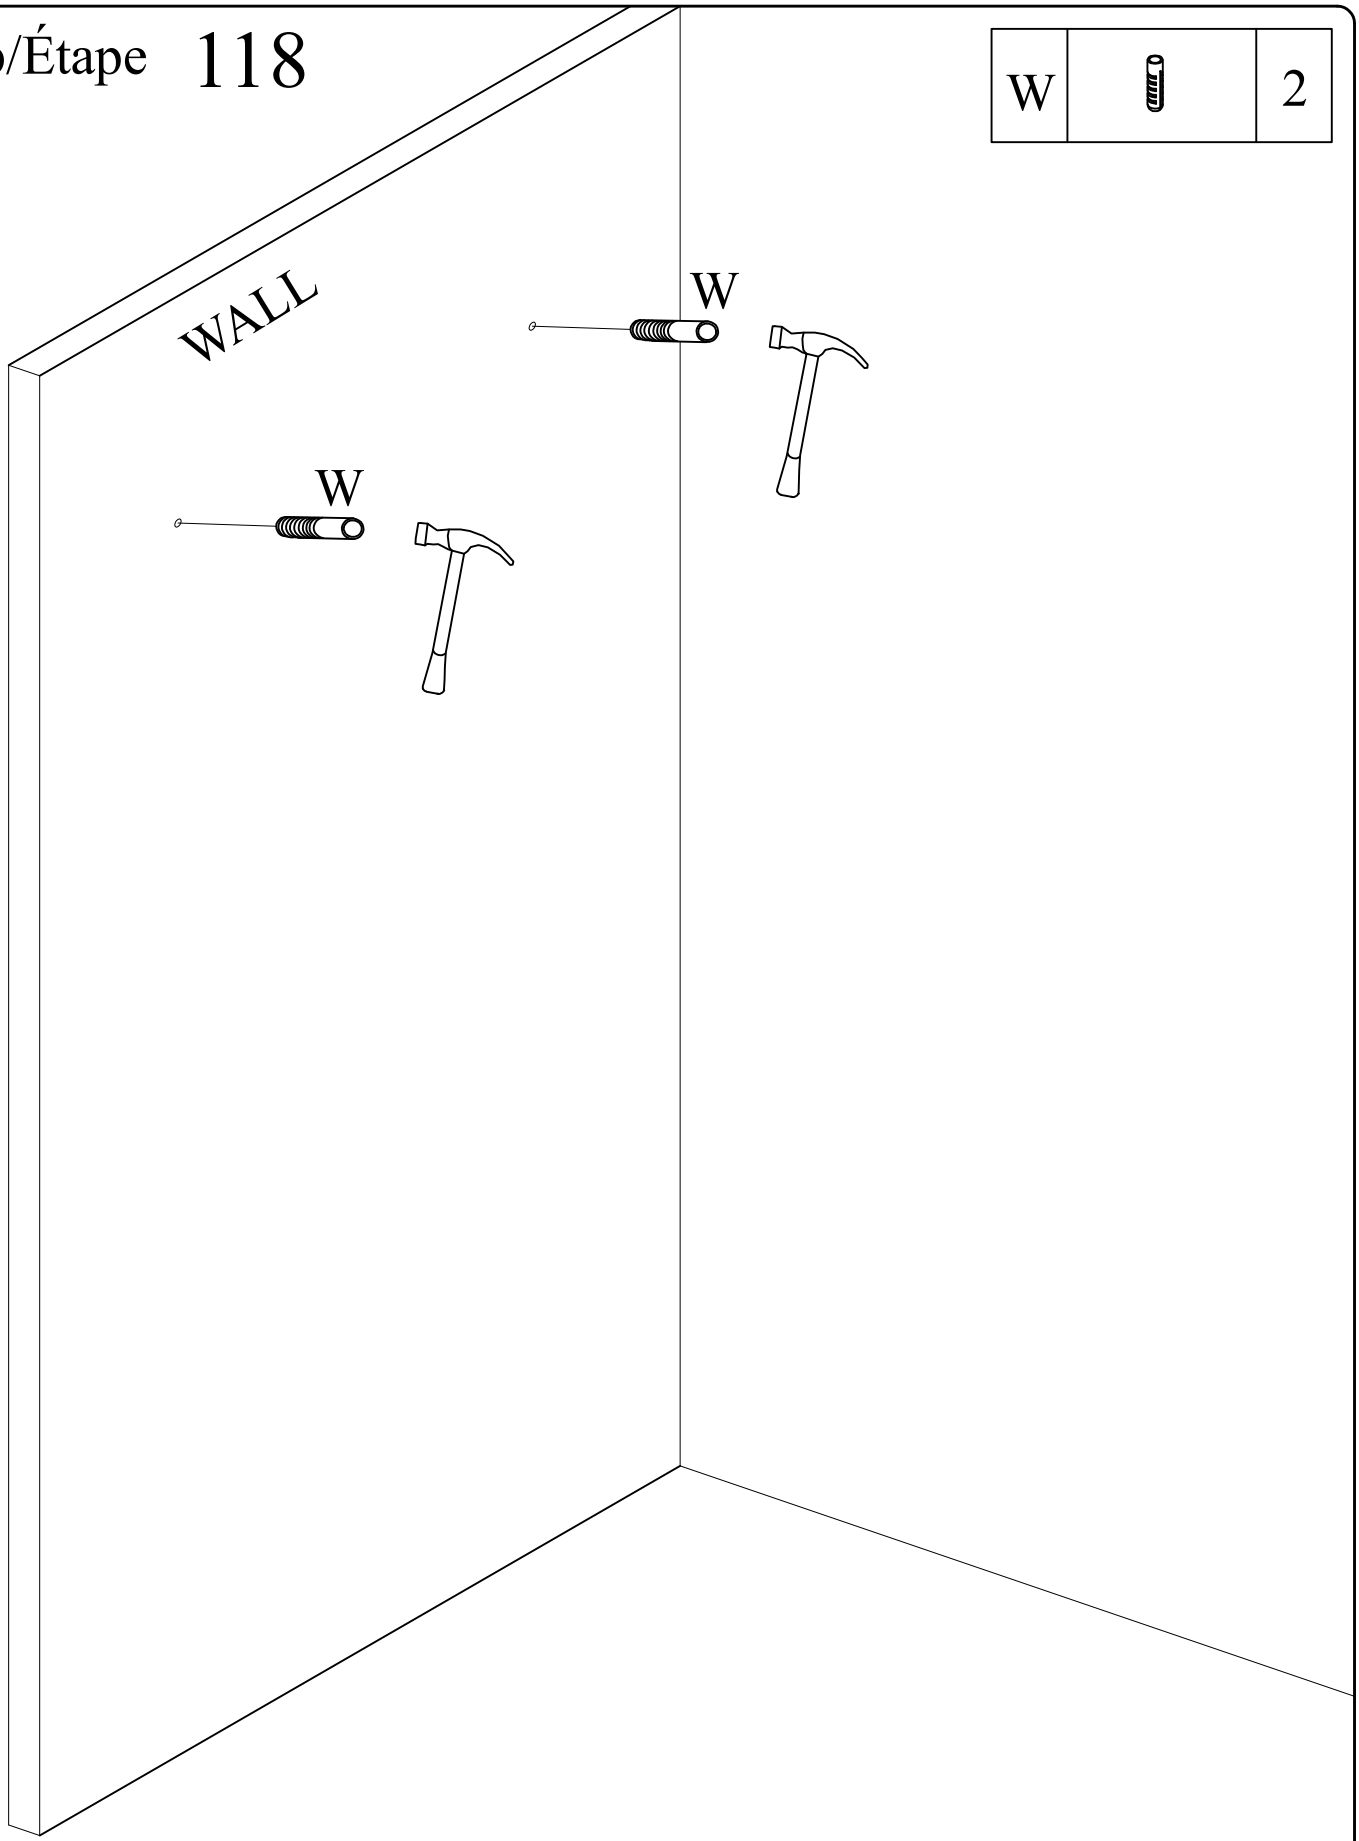

Step/Étape 119

W		2
W		2

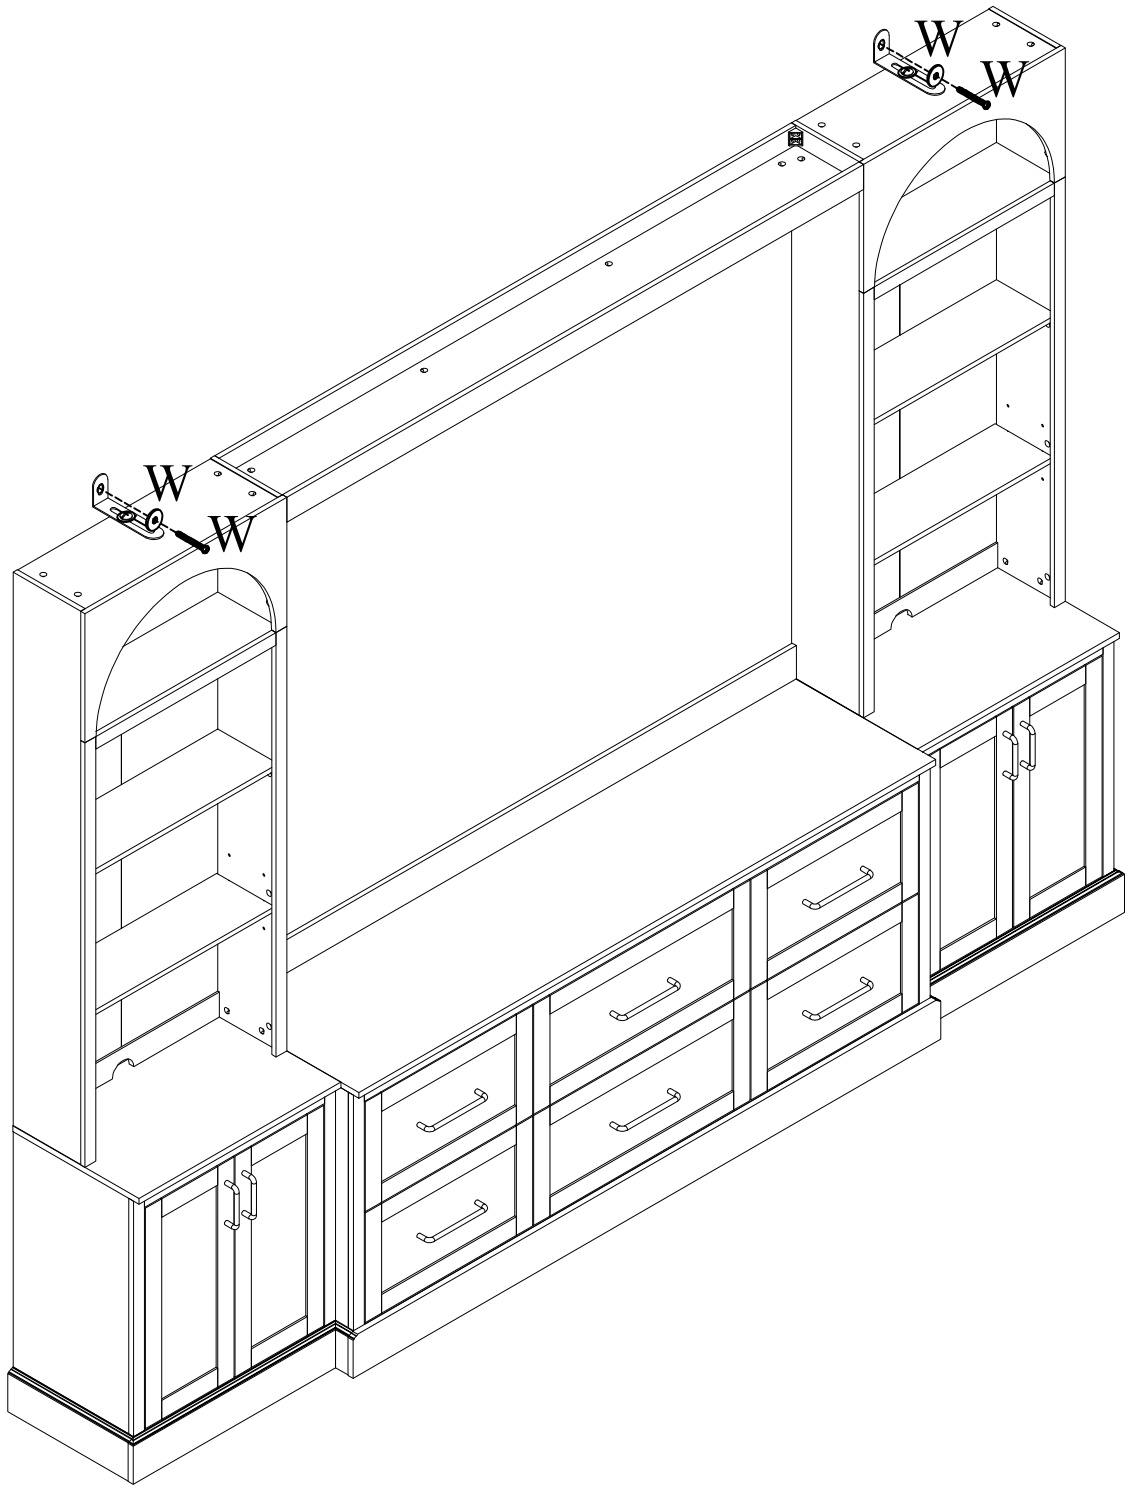

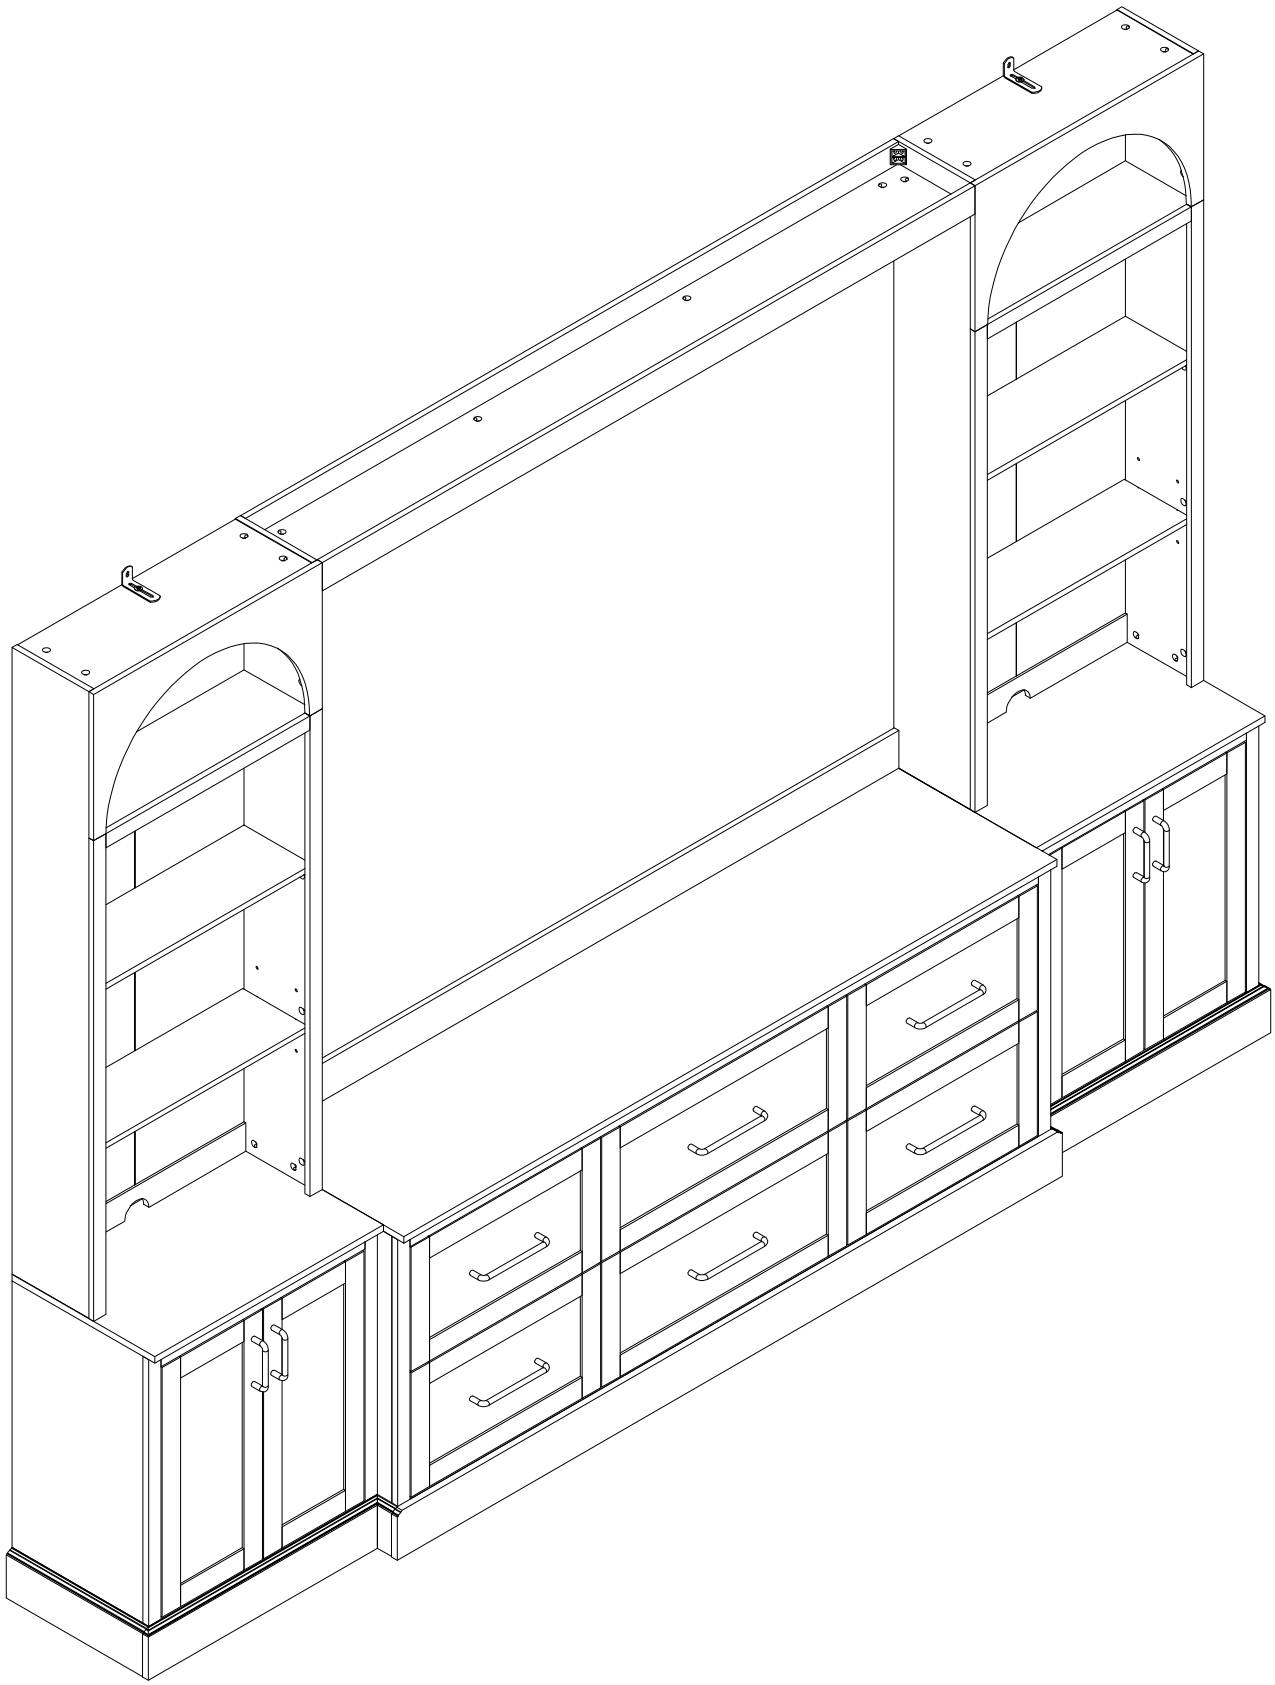

Finish/Finir