

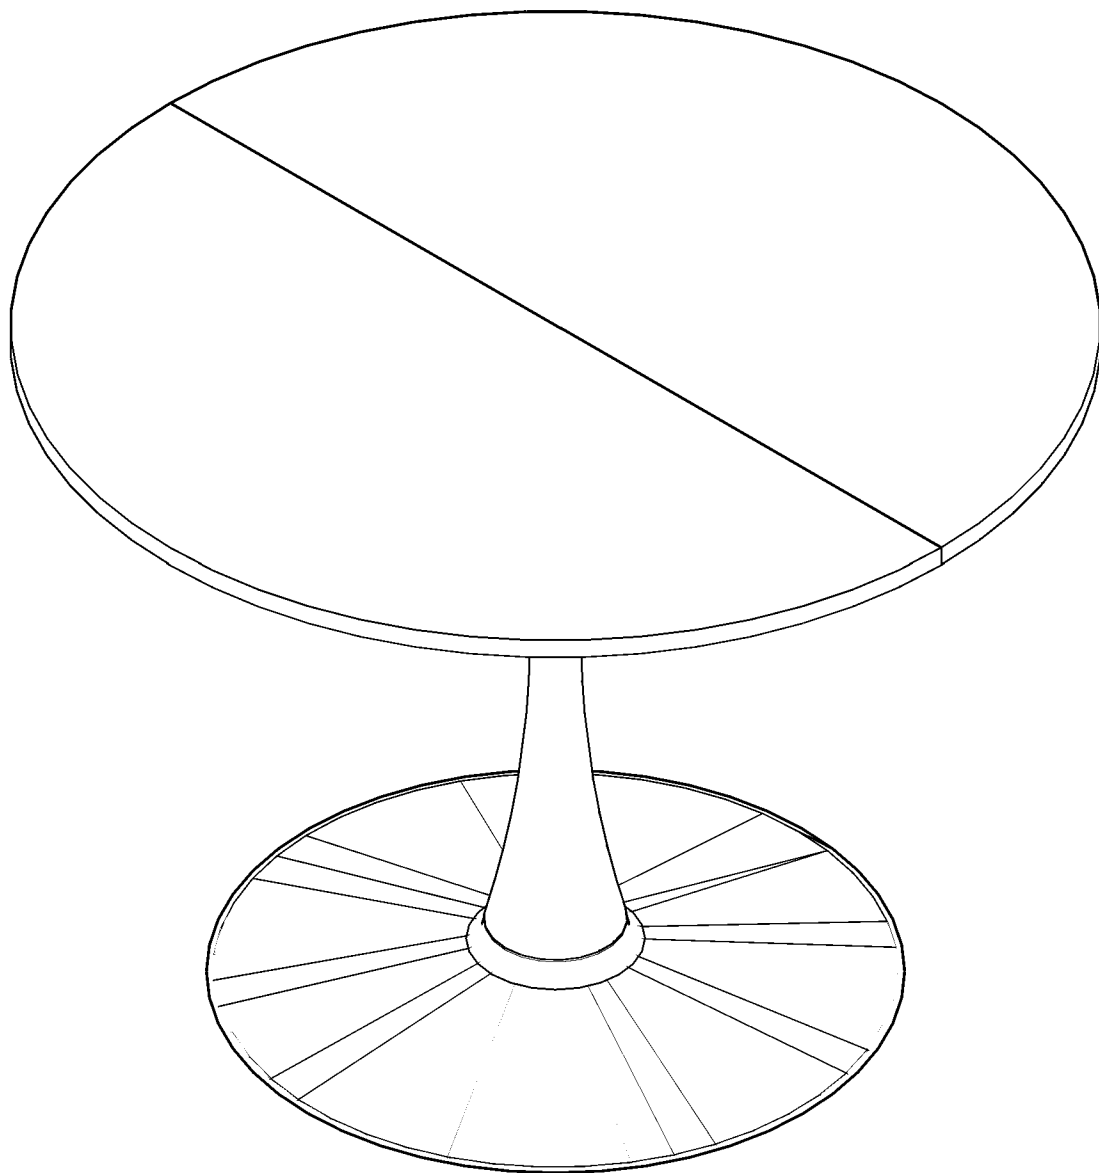
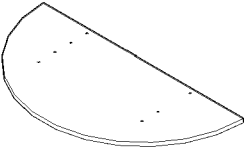
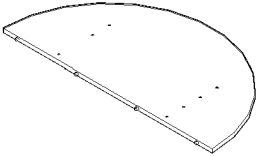
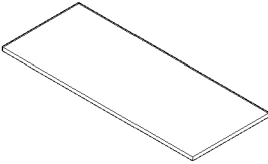
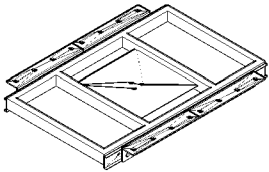
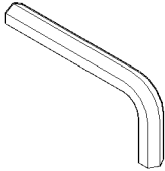
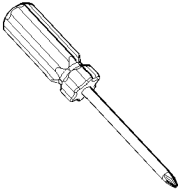



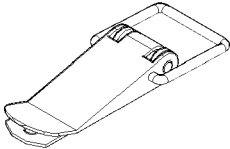
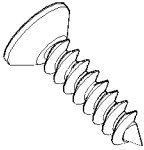


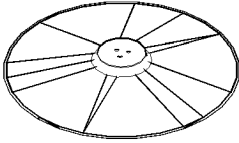


1.X1 	2.X1 	3.X1 	4.X1 
---	---	--	---

	A.X1 	B.X1 	C.X6  M8x30mm
D.X6  M8	E.X16  M6x14mm	F.X16  M6	G.X4 
H.X4 	I.X16 	J.X1 	K.X1 


A.X1

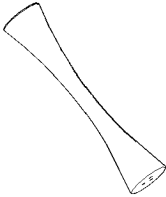

1

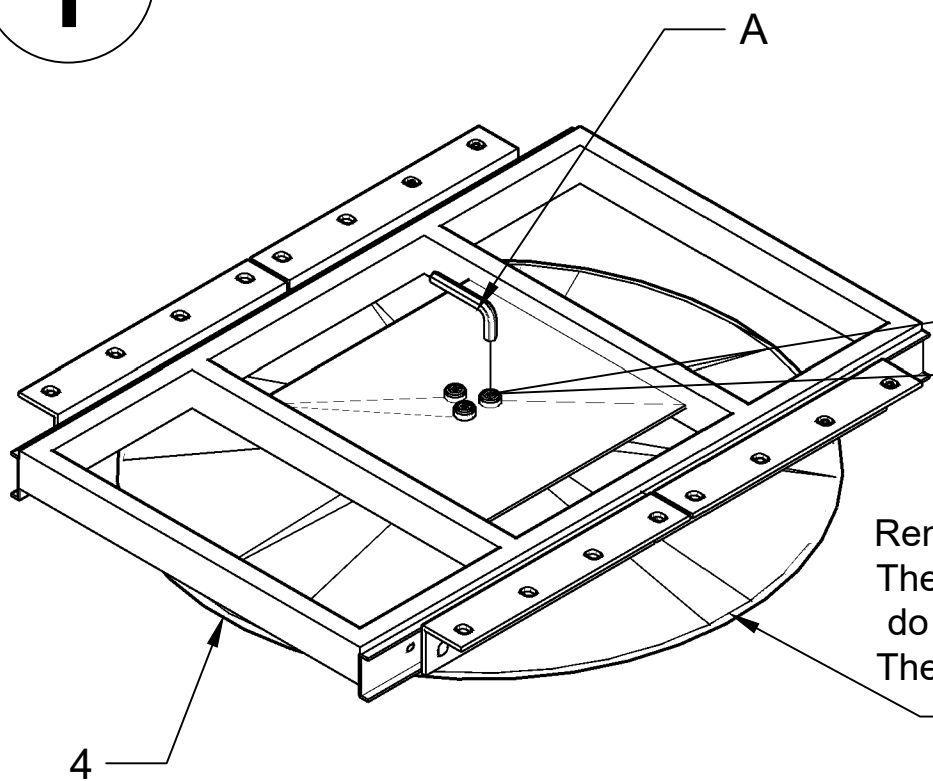

Remove three screws.
These screws can be discarded;
do not keep them.
Then follow the steps below to install.

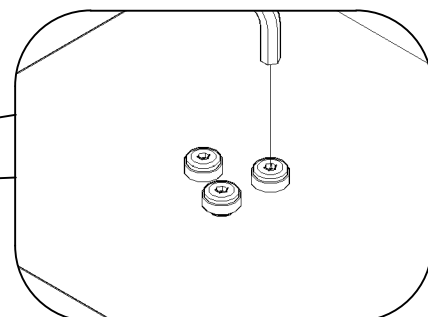

A.X1



C.X3





M8x30mm

D.X3




M8

2

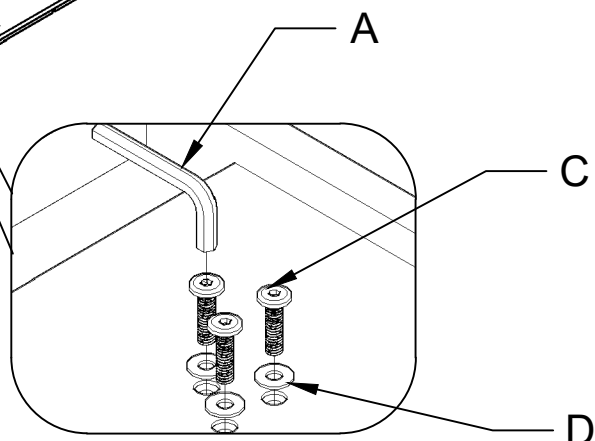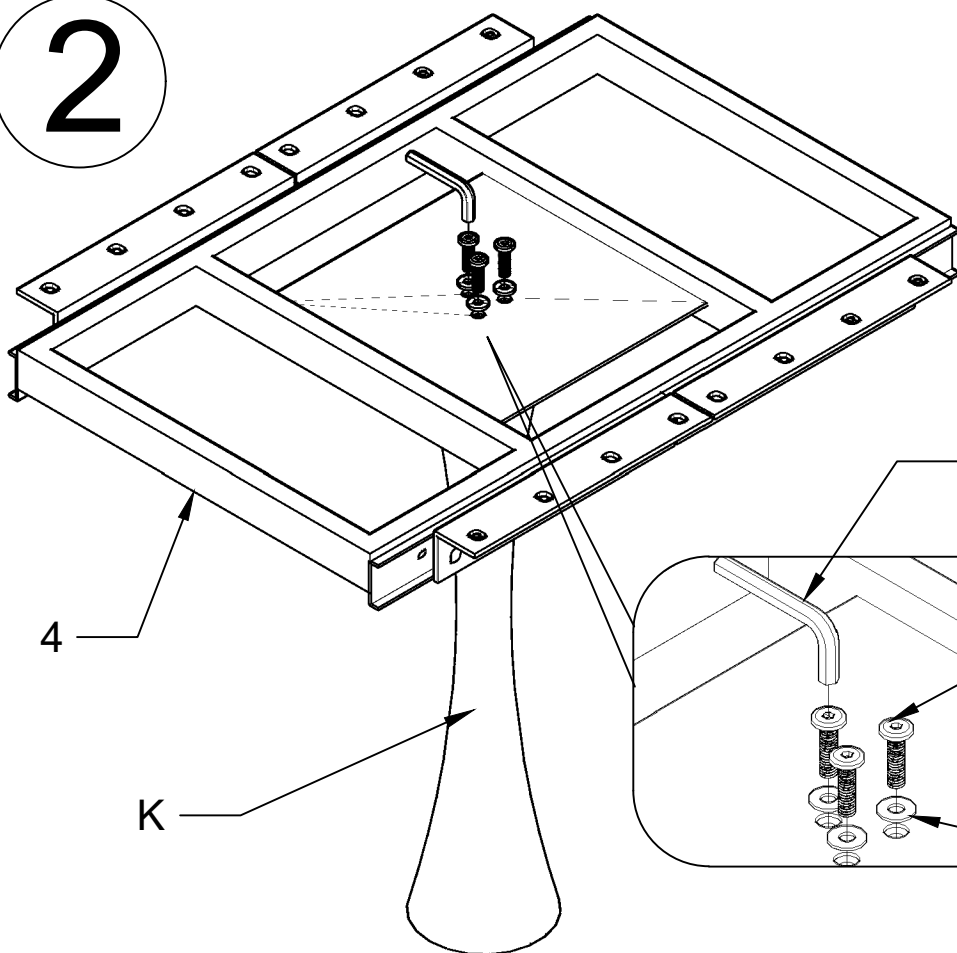

3

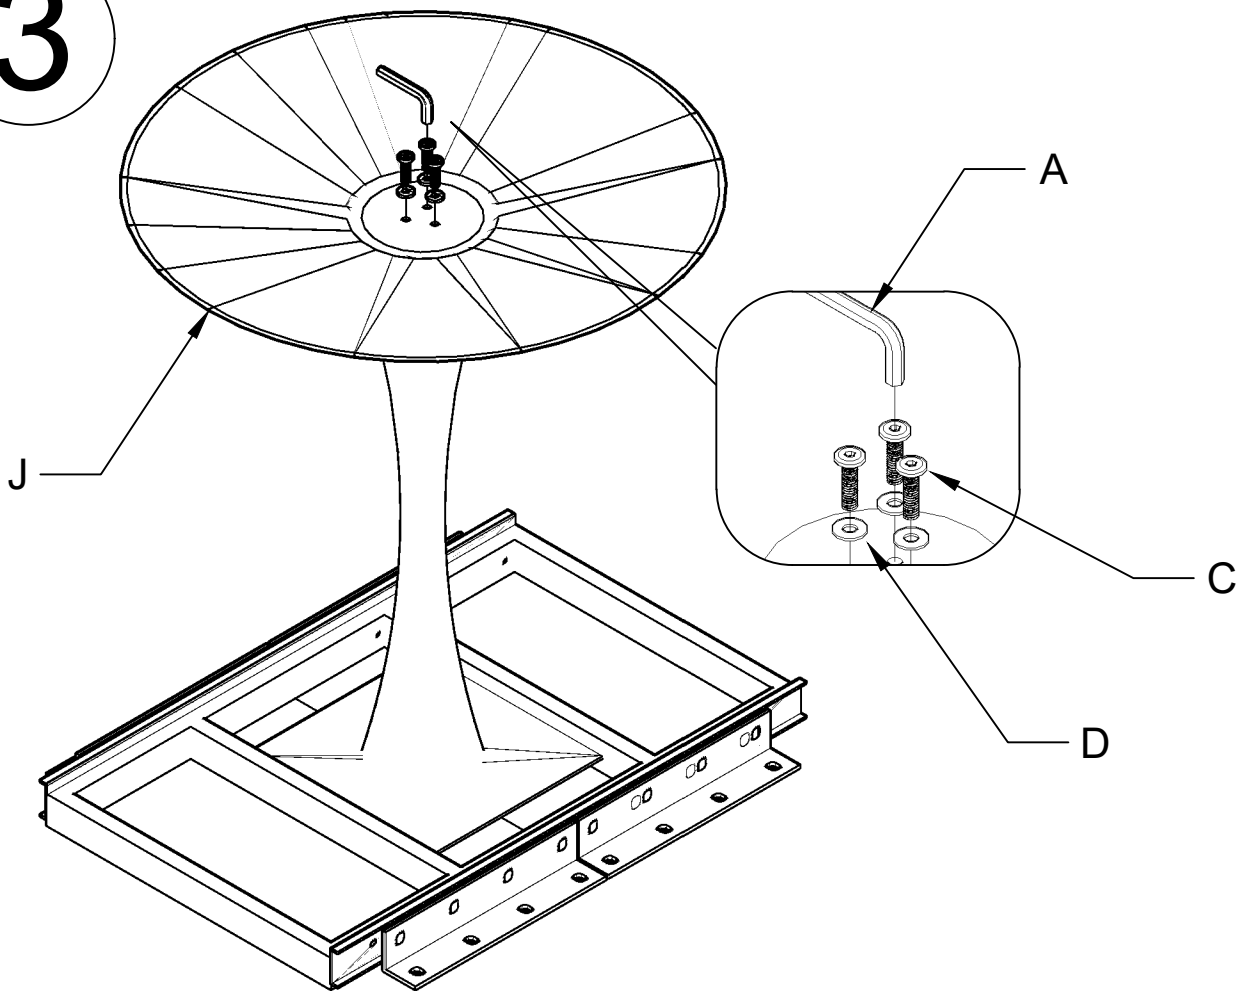


- A.X1**

- C.X3**


 M8x30mm
- D.X3**


 M8

4

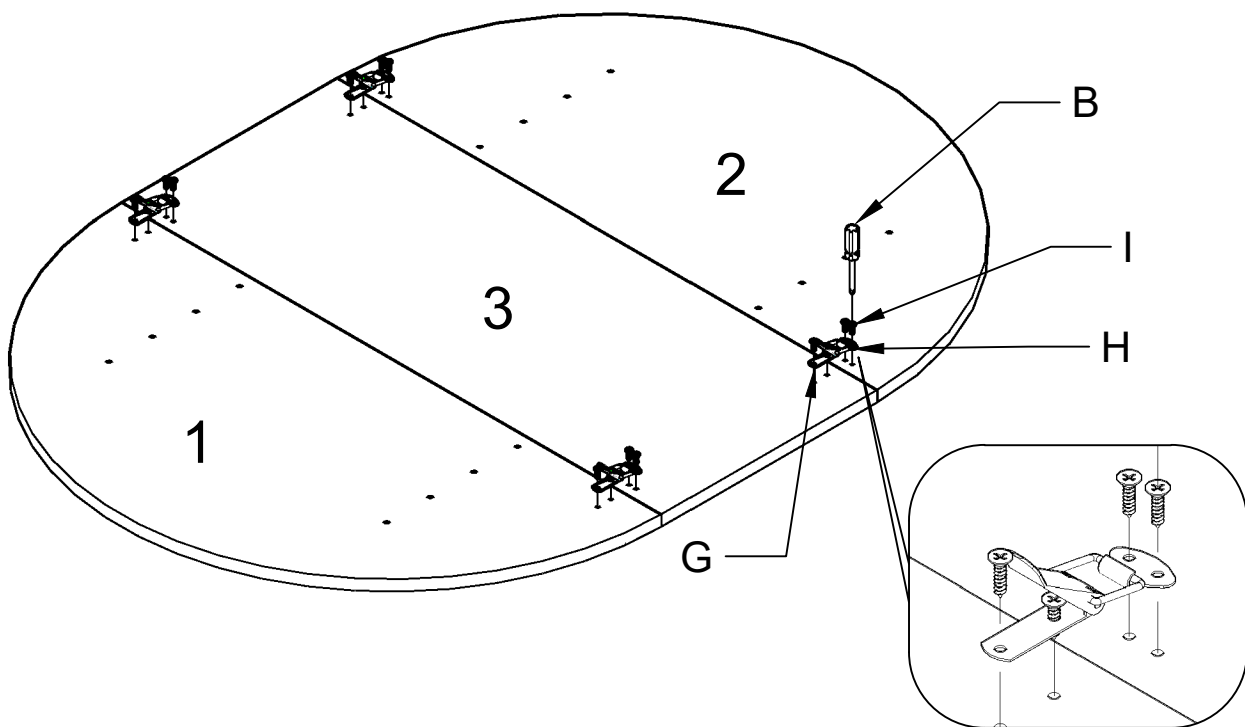


- B.X1**

- G.X4**

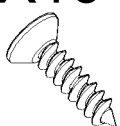- H.X4**


- I.X16**


5

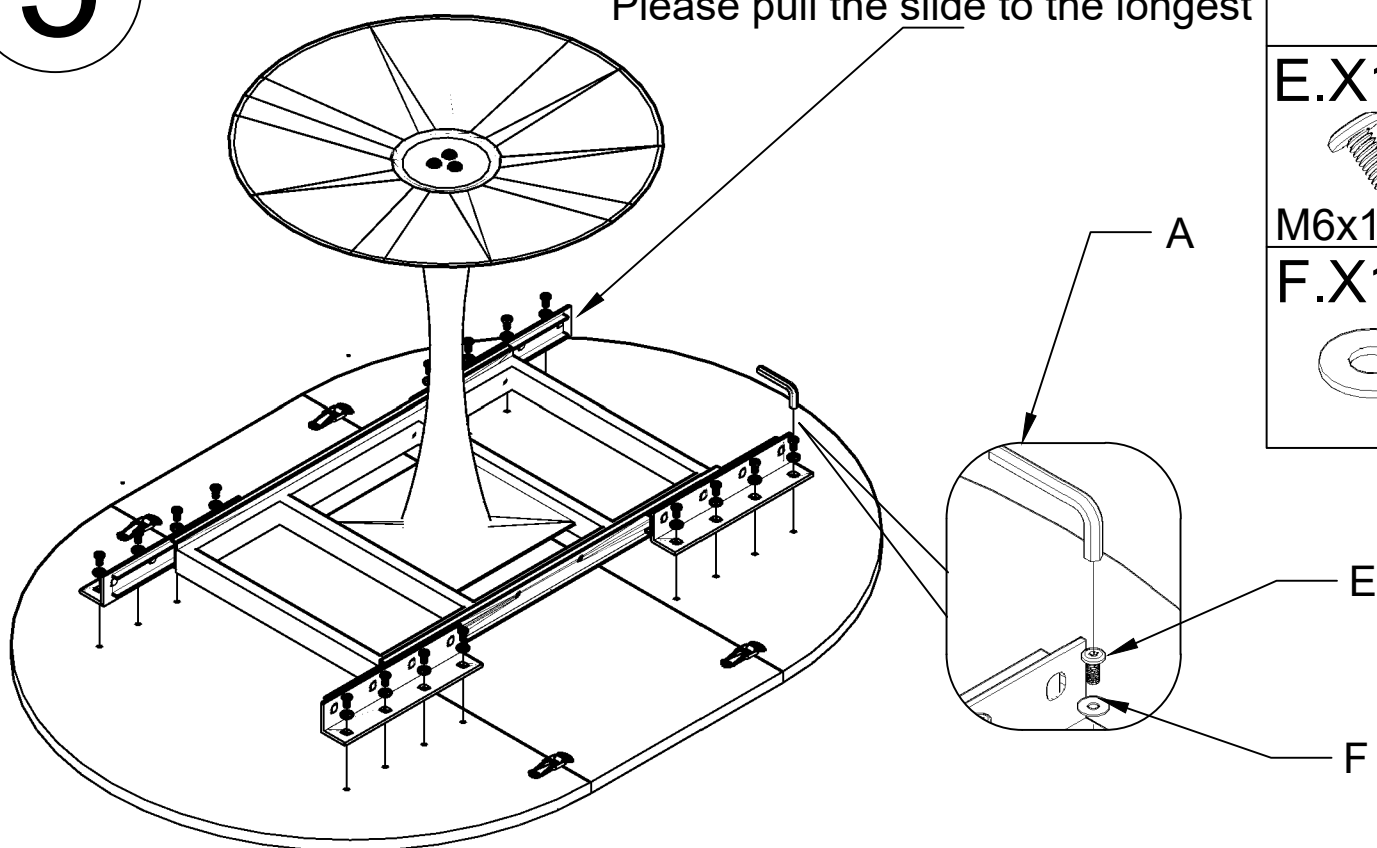
Please pull the slide to the longest



A.X1




E.X16



M6x14mm

F.X16



M6

6

