


Product ID. QUBFD



Scan for Support

6 x 10ft Greenhouse With Single Door Assembly Instruction

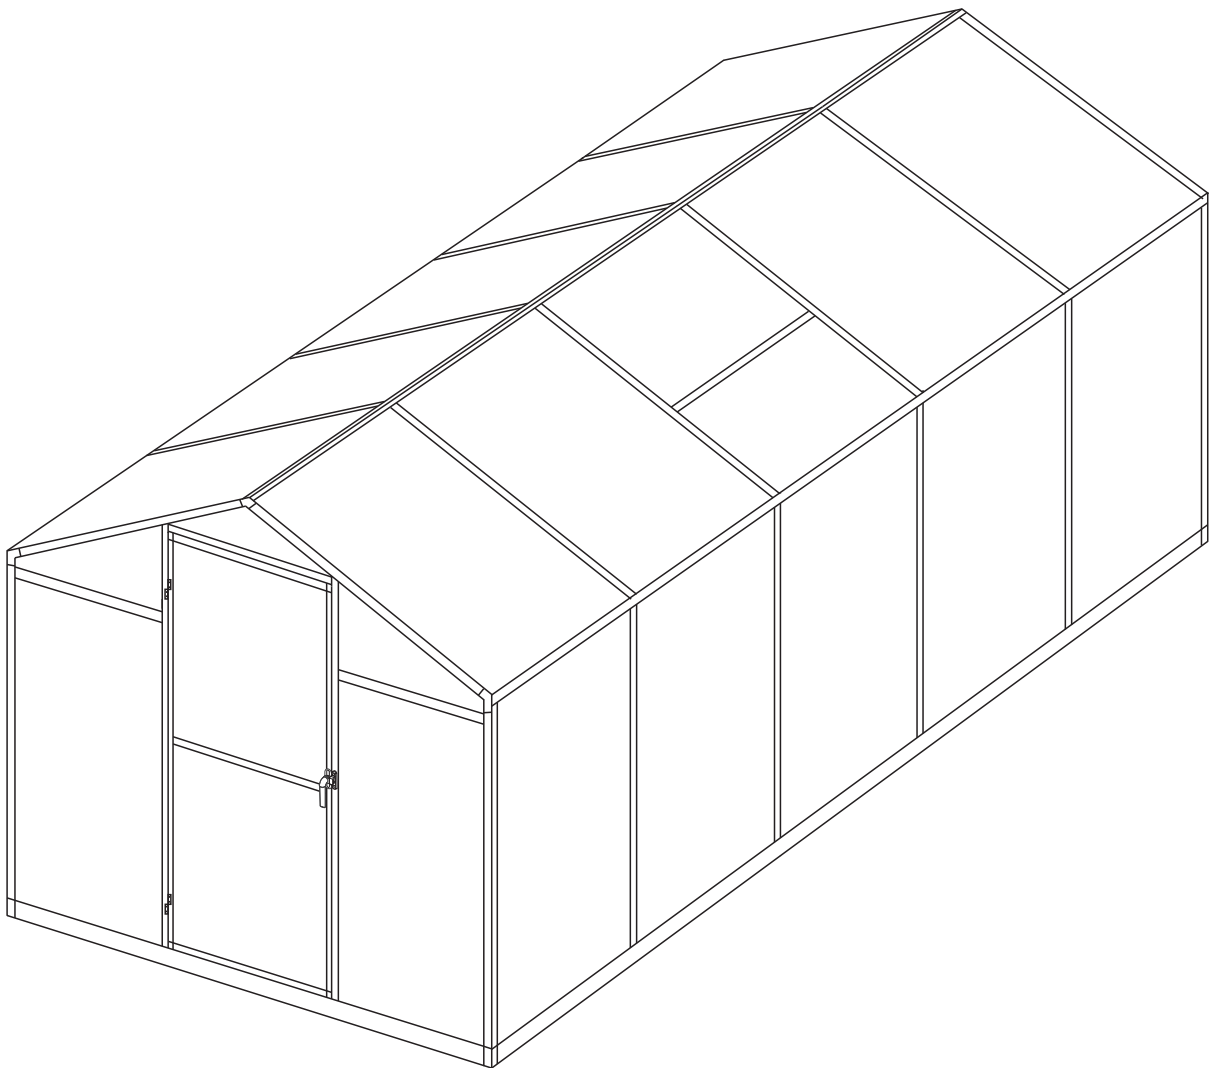

Distributed by
GARVEE.com

support@garvee.com

****Please Note:****

1. Some metal parts may have sharp edges. Please handle with care and use gloves during assembly to avoid injury.

Customer Phone Service


+1 888 891 2855

Mon - Fri from 9AM to 5PM (PST)

2. Do not fully tighten the screws prior to completion of the installation process to facilitate necessary adjustments.

Attention: The placement and positioning of each parts in the following steps must be carried out in accordance with the steps in the manual to avoid repeated disassembly during installation.

Tools Recommended

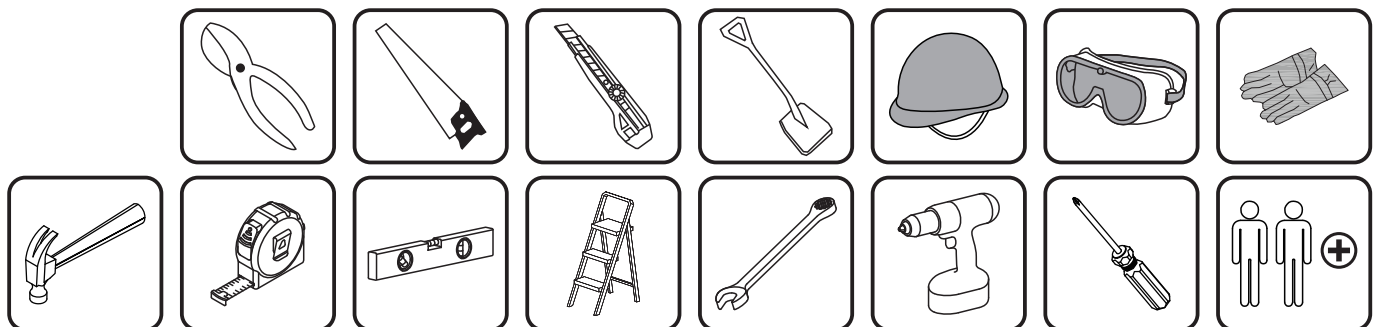

CONTENTS

01	CONTENTS	3
02	PRECAUTIONS FOR INSTALLATION	4
03	PART LIST	5-9
04	PRODUCT EXPLOSION DIAGRAM	10-11
05	BASE INSTALLATION STEPS	12
06	BACK WALL INSTALLATION STEPS	13-16
07	FRONT WALL INSTALLATION STEPS	17-21
08	SIDE WALL INSTALLATION STEPS	22
09	TOP INSTALLATION STEPS	23-27
10	DOOR INSTALLATION STEPS	28-29

TIPS&IDEAS



The product may have uncontrollable scratches of aluminum alloys, which will not affect the normal use of the product.



If the product has obvious quality problems, please provide photos and communicate with our customer service in time.

Trouble shooting:

Missing / Wrong / Broken parts and installation issues



Send email with your question, pic and order NO. to
support@garvee.com























Respond within 24 hours
















Issue resolved

PART LIST

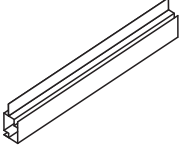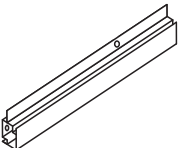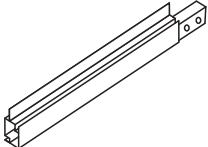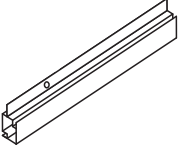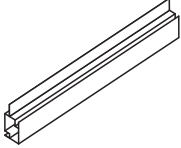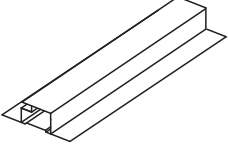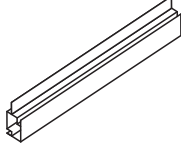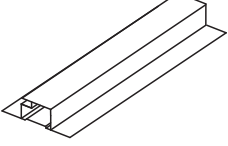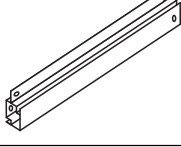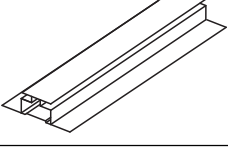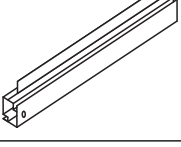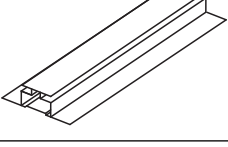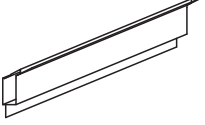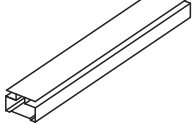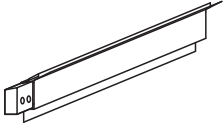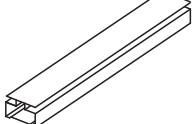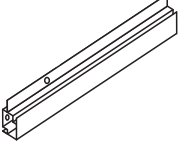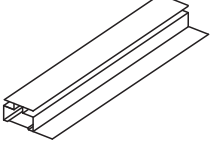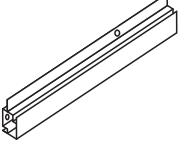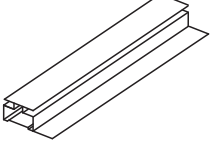
No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
1		2	58"	10		1	38"
2		2	58"	11		1	38"
3		1	67.7"	12		1	65.9"
4		1	67.7"	13		1	65.9"
5A		2	52.7"	14		1	66.8"
5B		2	52.7"	15		1	66.8"
6		2	58"	16		8	52.7"
7		2	58"	17		6	38.6"
8		1	38"	18A		1	38.6"
9		1	38"	18B		1	38.6"

PART LIST

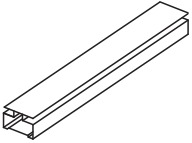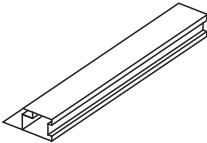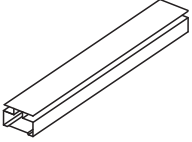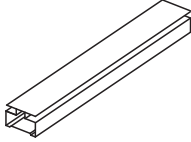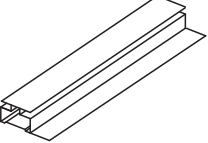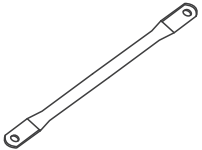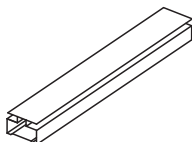
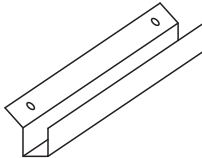
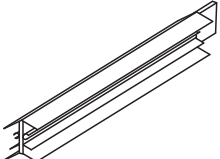
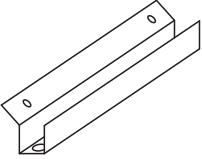
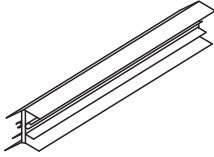
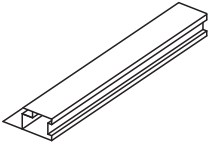
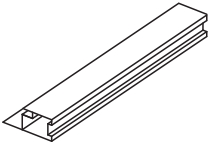
No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
19		3	21.8"	27		2	24.5"
20		2	20.4"	28		1	22.5"
21		1	24.8"	29		8	46.5"
22		1	22.4"	31A		2	57.7"
23A		1	58"	31B		2	57.7"
23B		1	58"				
25		1	64.1"				
26		1	64.1"				

Warning:


If the aluminum part curved as below pic, pls use the wrench to restore it.

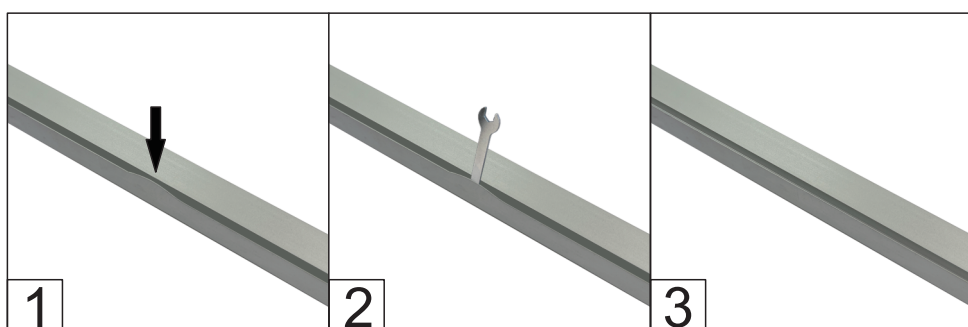


PART LIST



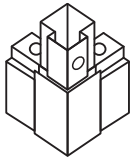
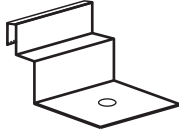
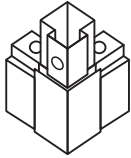


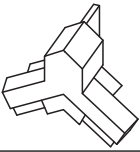
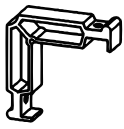
No.	Picture	Qty.		No.	Picture	Qty.	
32A		2		48		4	
32B		2		51		4	
33A		2		62-1		1	
33B		2		62-2		1	
34		2		62-3		3	
35		4		62-4		1	
35A		2		62-5		1	
40		4		62-6		1	
42C	42C# screw pre-installed on 40# accessory. 	8	M4x0.47"	63		2	
						2	

PART LIST


No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
41		12	M6*0.35"	43		2	M4x0.43"
41A		12	M6	60		2	M4x0.63"
42		44	M6x0.47"	61		2	M4x0.98"
42A		2	M4x0.35"			1	
42B		60	M4x0.47"			1	M6
42D	 washer	60	M4			1	M4

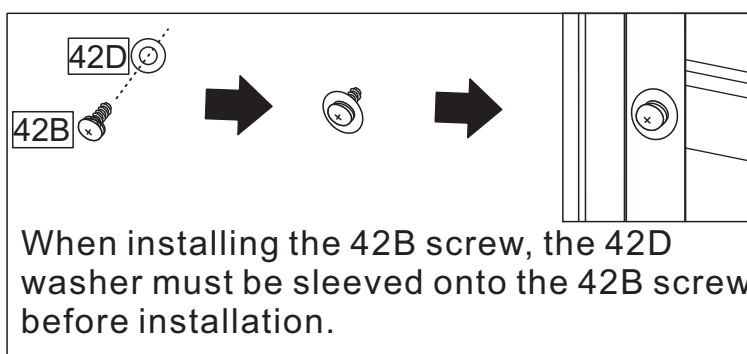


PART LIST

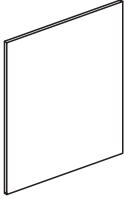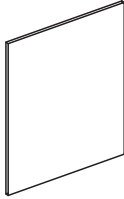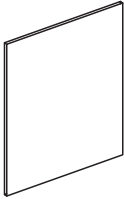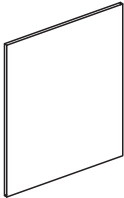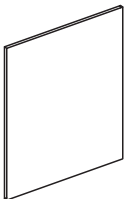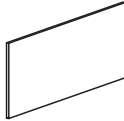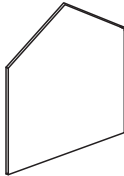No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
A		10	54.3"x23"	G		2	31.2"x23.1"
B		9	39.1"x23"	H		2	13.6"x21.1" x1.3"
C		3	52.4"x22.6"	I		1	8.4"x24.8"x 1.3"
D		2	52.4"x21.1"	J		1	14.8"x23"
E		2	14.4"x22.6" x1.3"	30		1	22.8"x22.8"
F		1	14.5"x22. 6"x21"				

PRODUCT EXPLOSION DIAGRAM

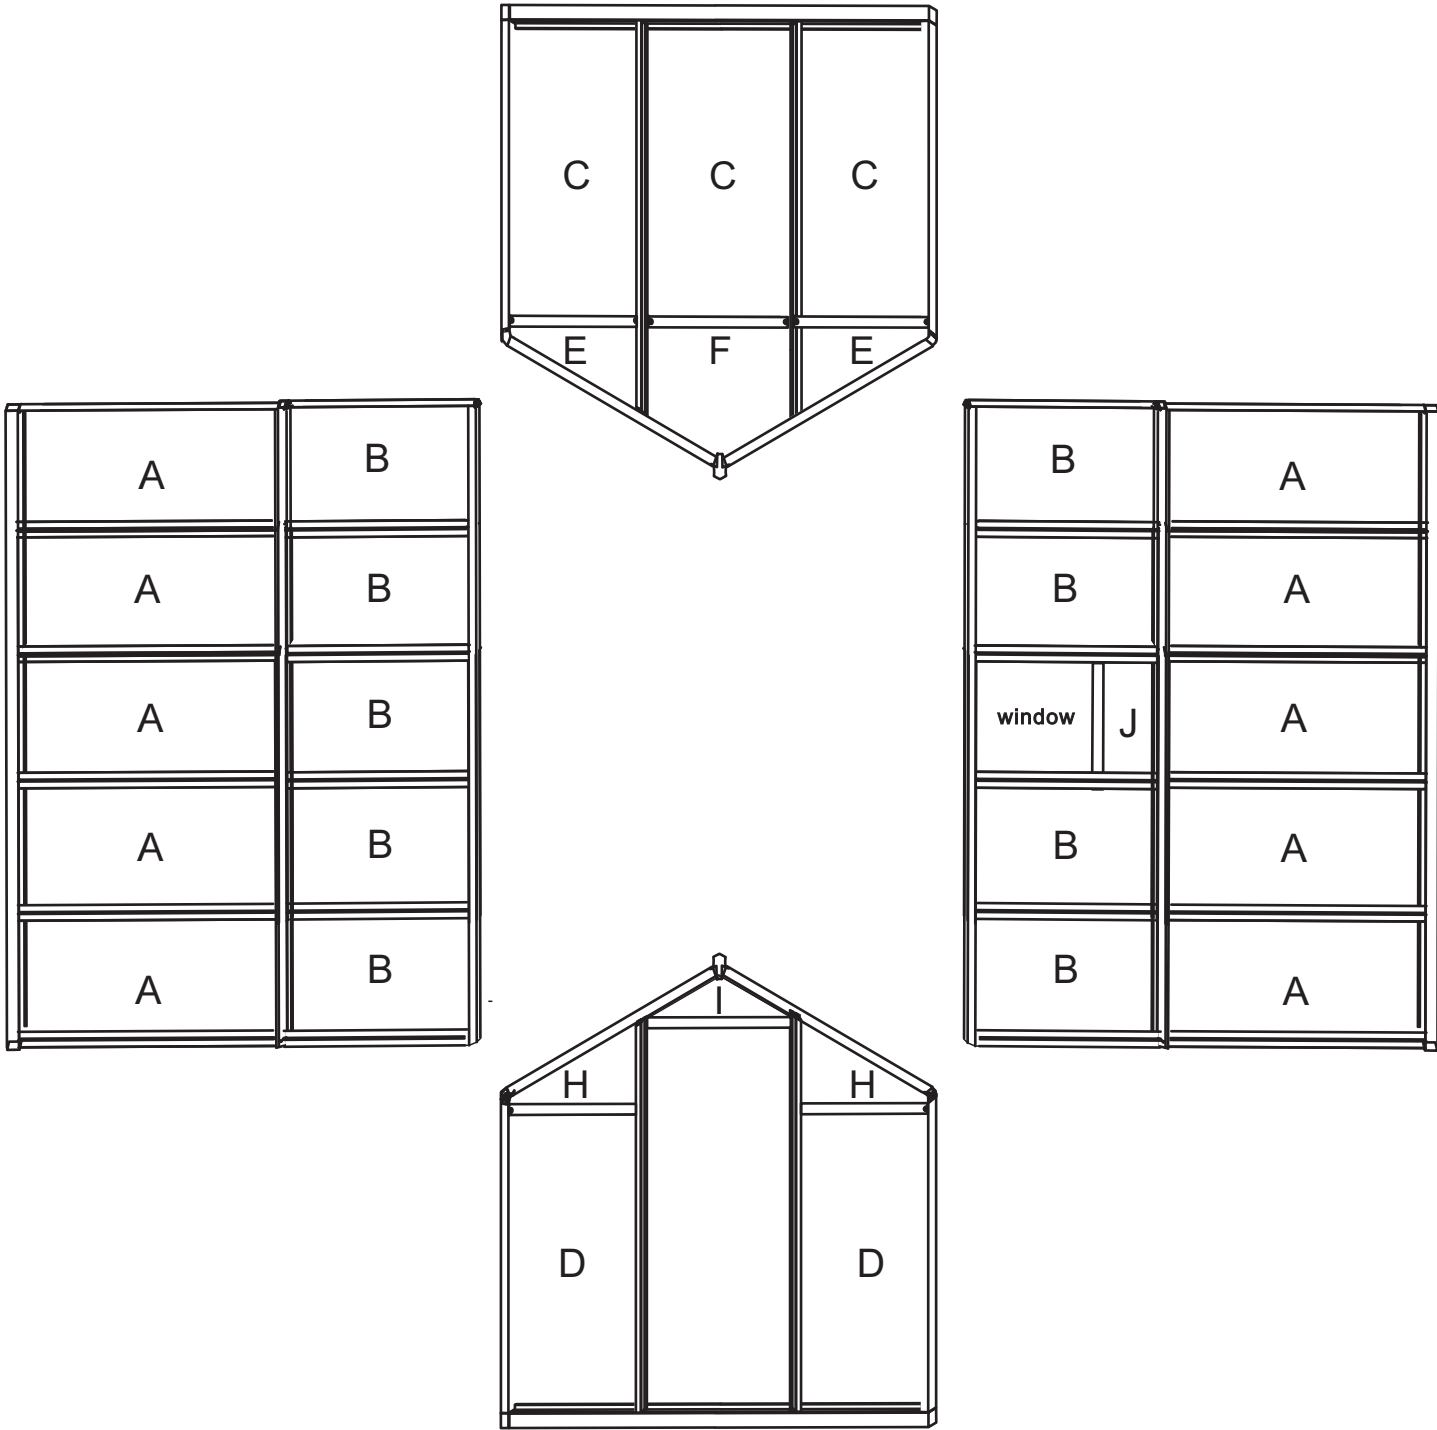


Pull off film on both sides before installation.

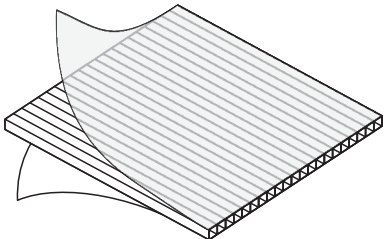


The white film faces outward.

PRODUCT EXPLOSION DIAGRAM

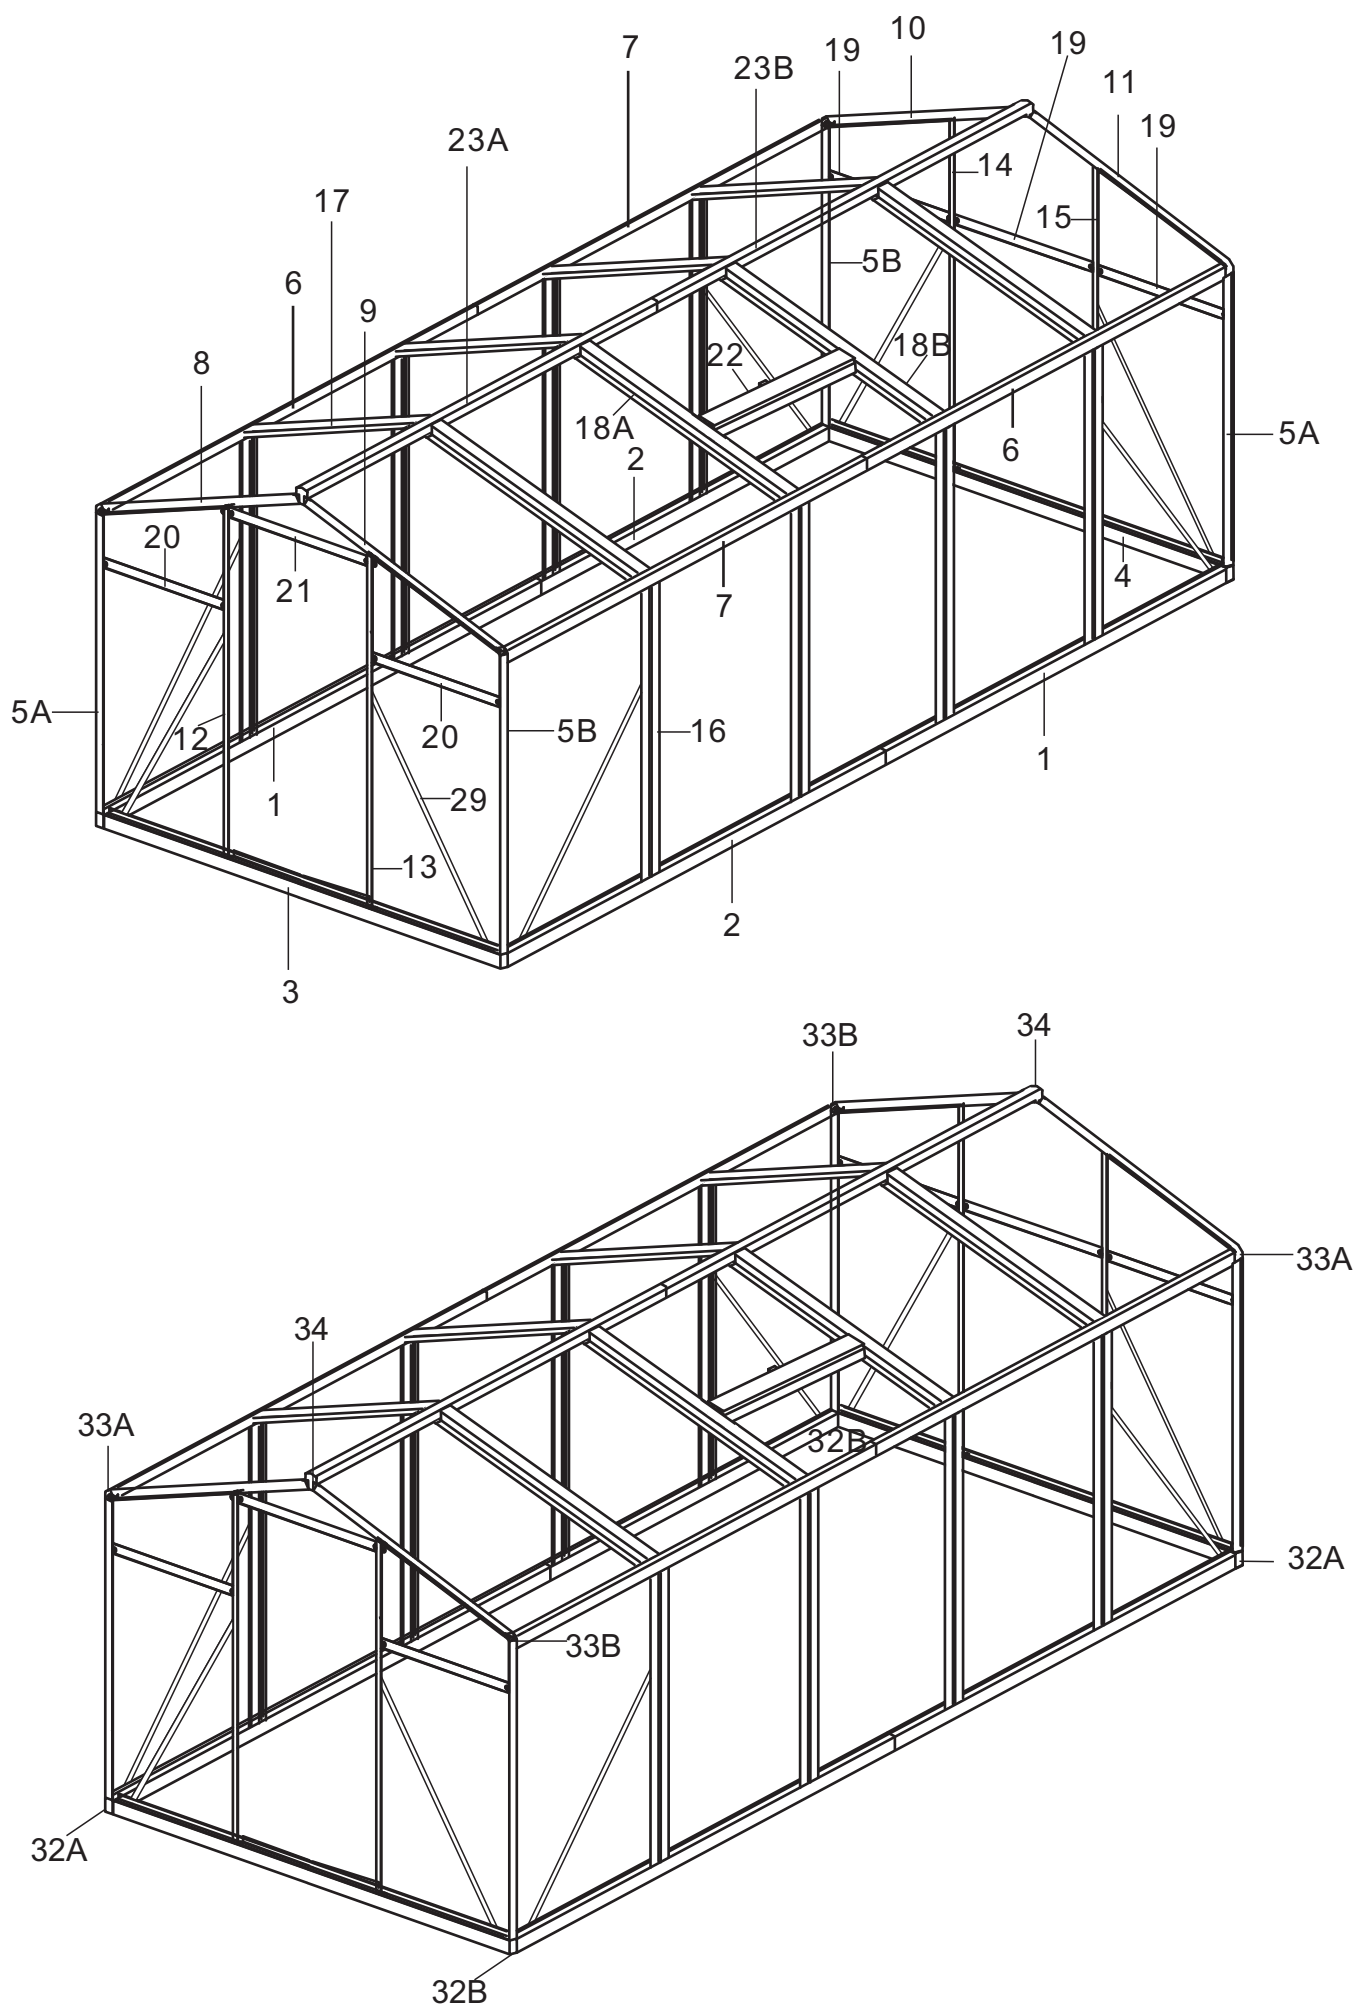


BASE INSTALLATION STEP

Step 1

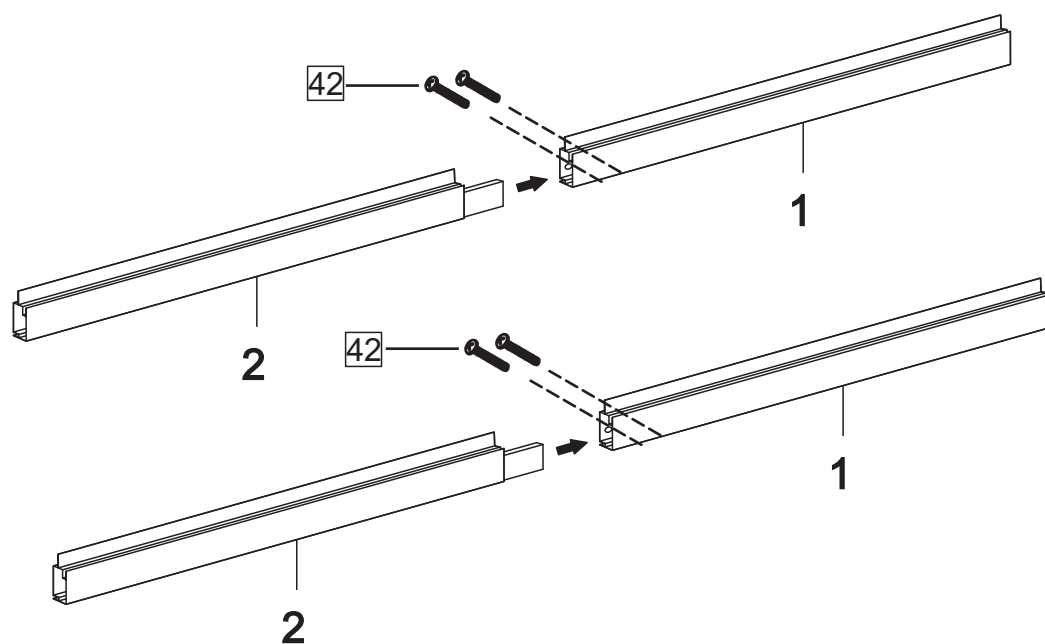


Picture	NO.	Qty.
	1	2
	2	2
	42	4

Step 2

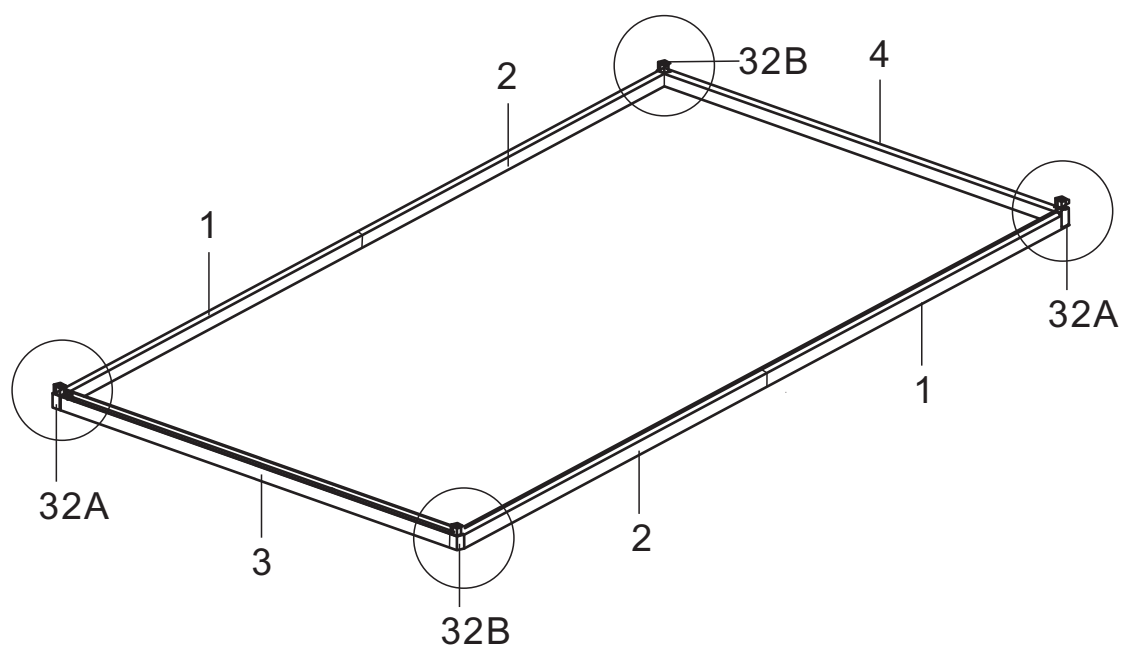


Picture	NO.	Qty.
	3	1
	4	1
	32A	2
	32B	2
	42	8

pay attention to the orientation of the hole position.

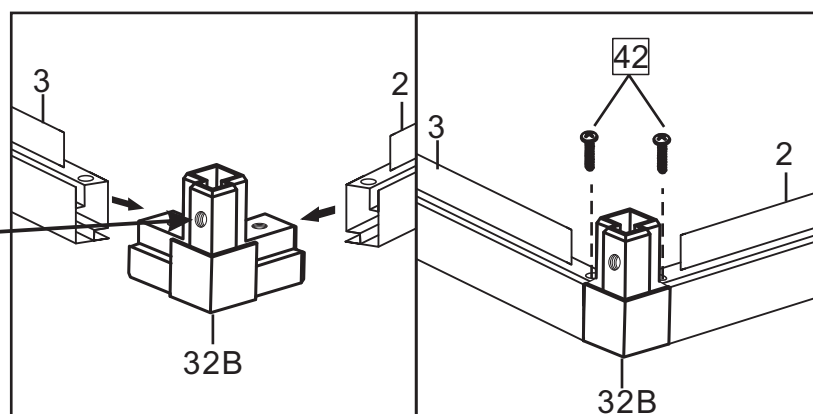


BACK WALL INSTALLATION STEPS



Step 3

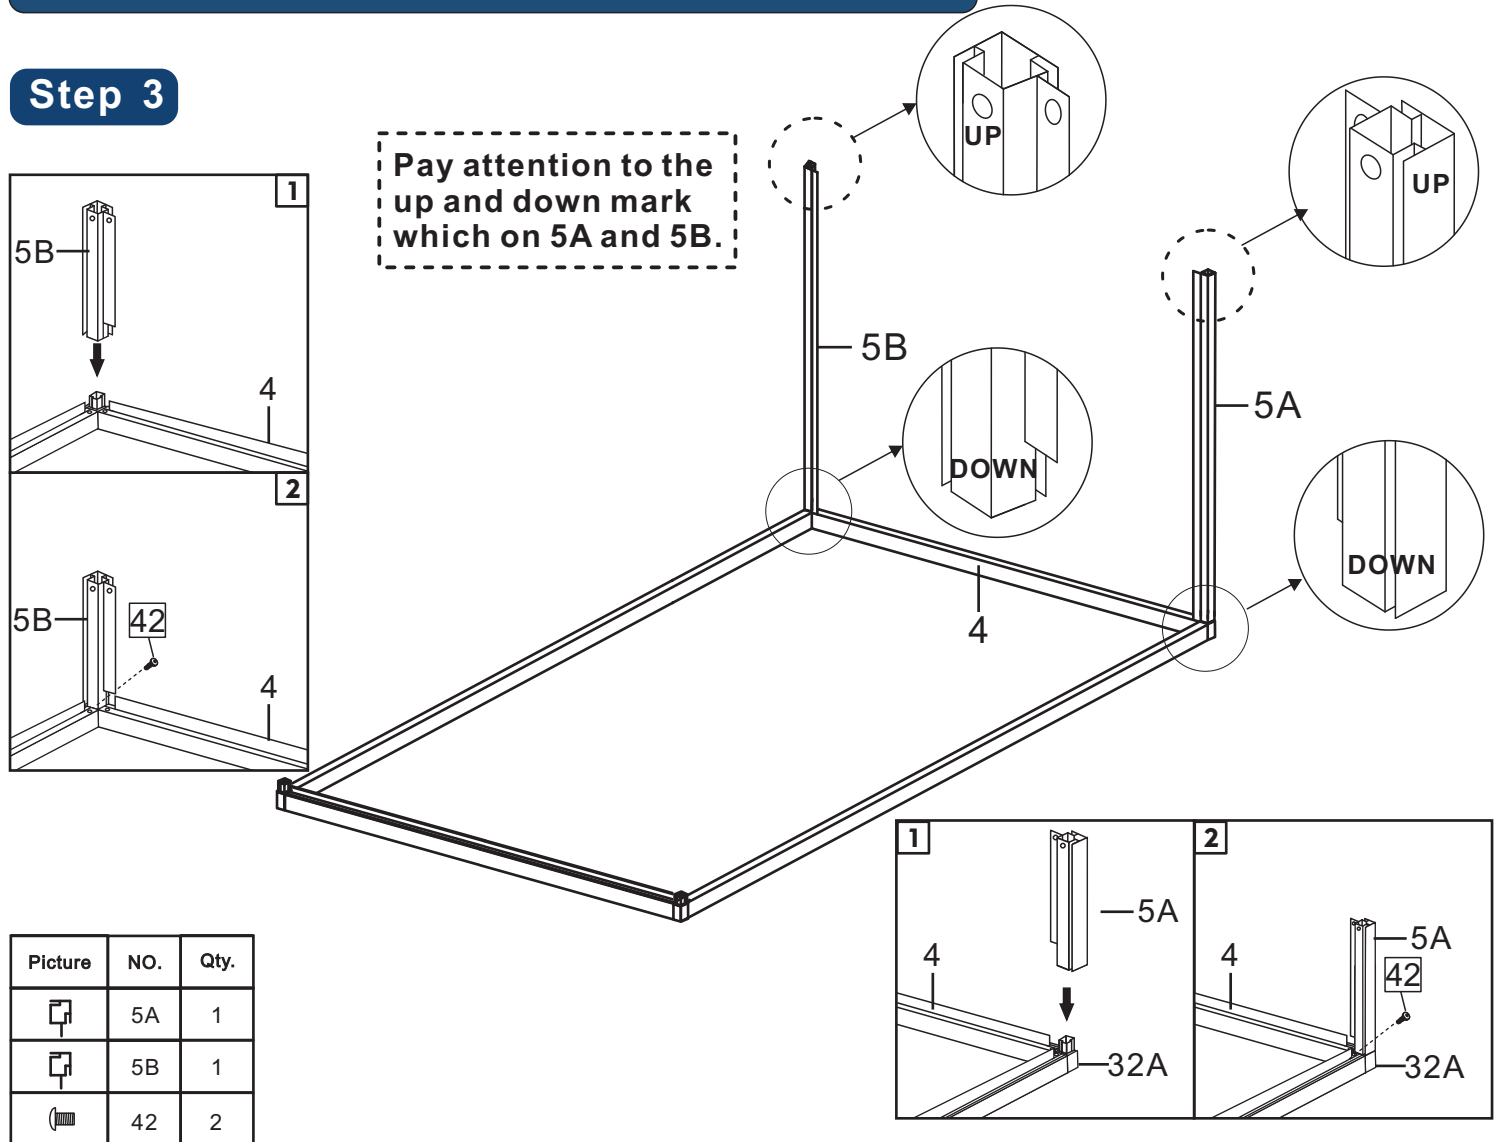

Step 4



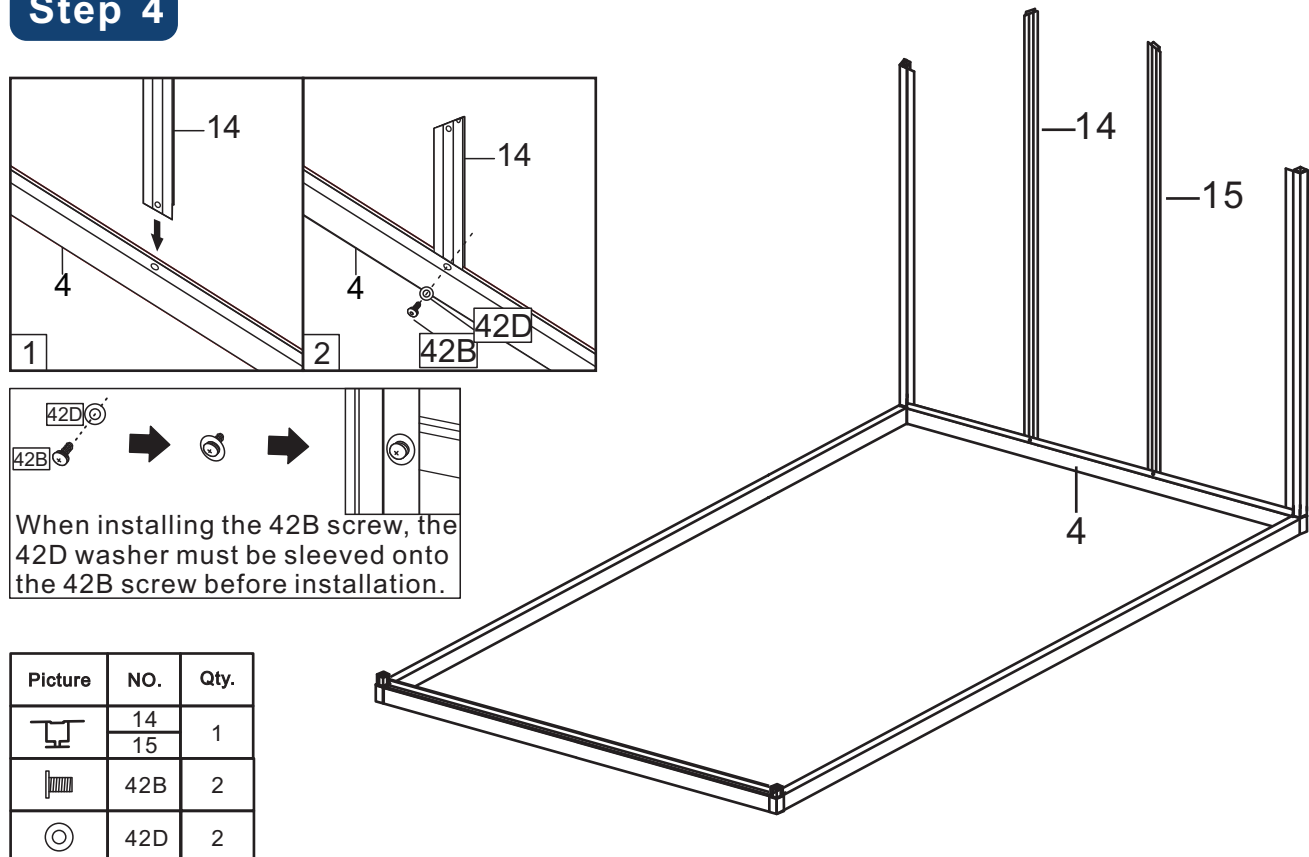


Step 5

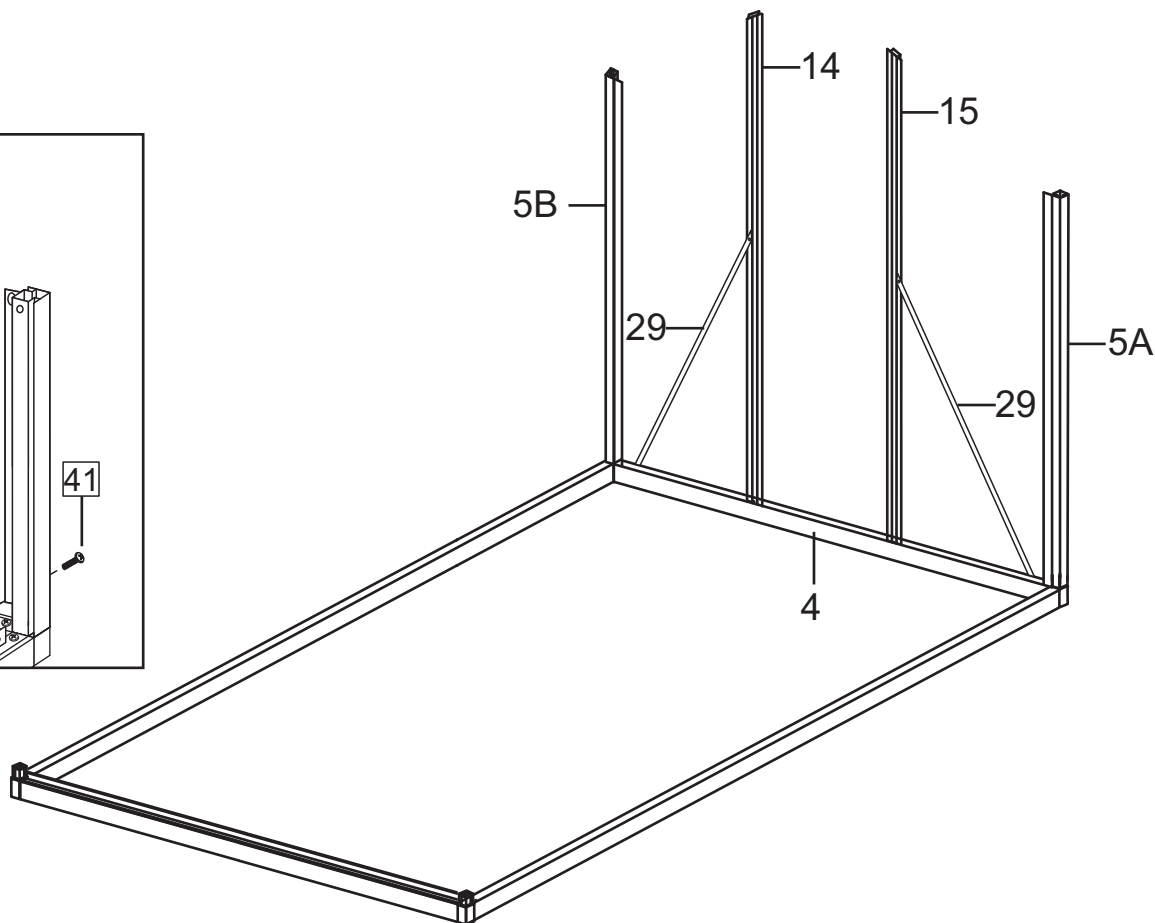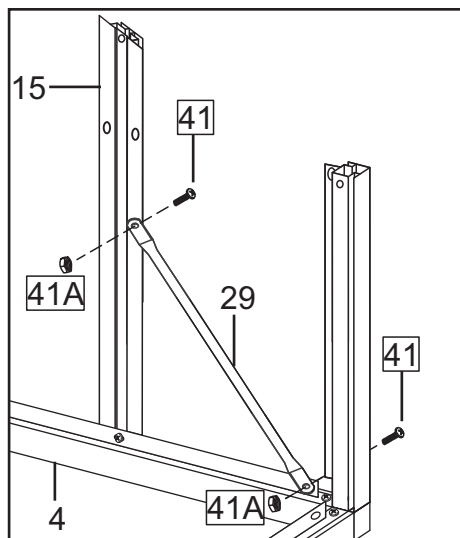



Picture	NO.	Qty.
	29	2
	41	4
	41A	4

Step 6

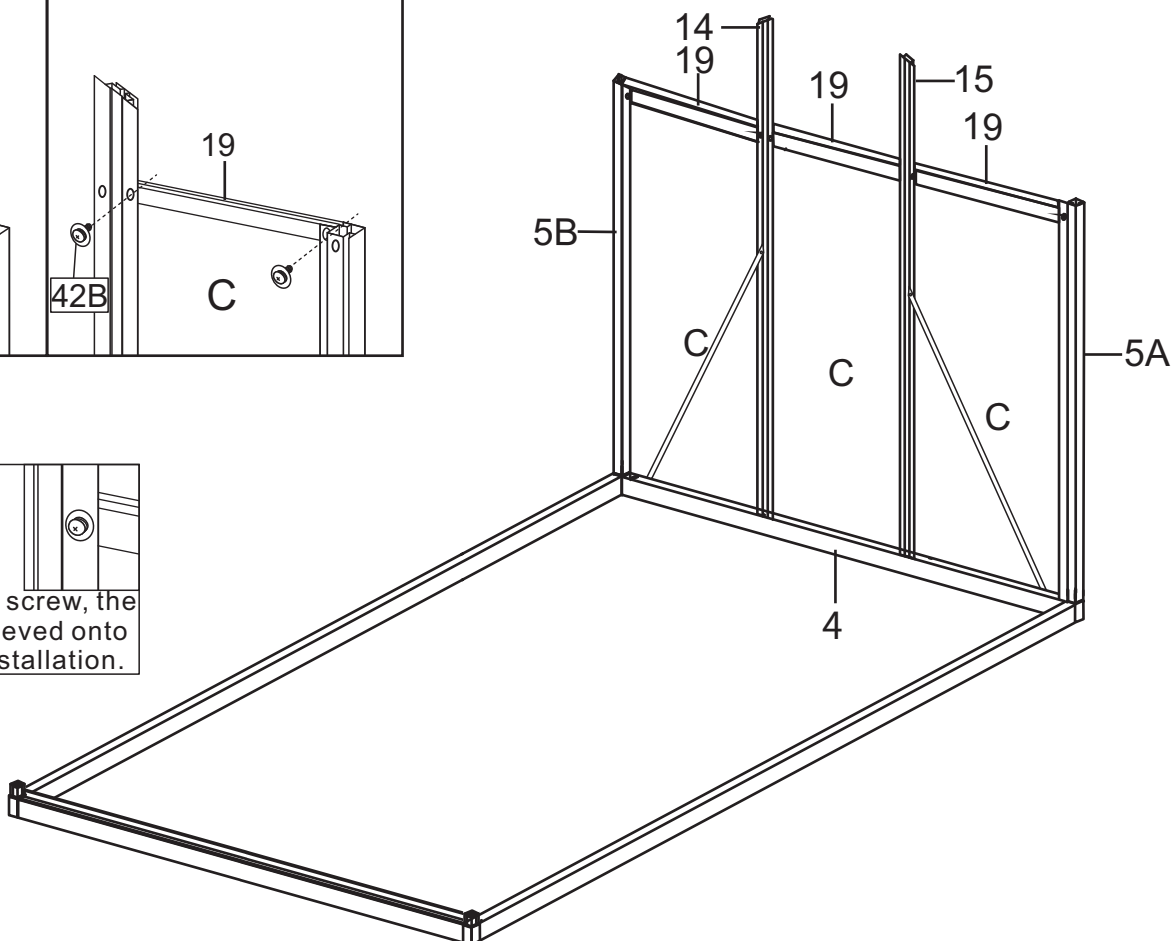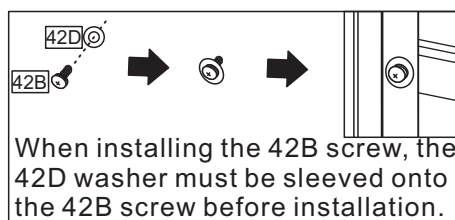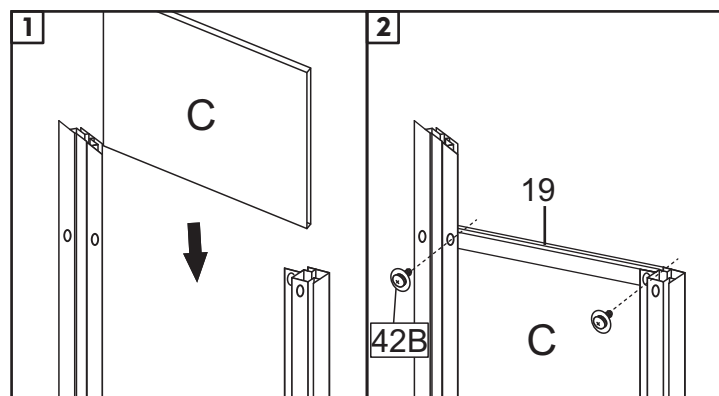



Picture	NO.	Qty.
	19	3
	42B	6
	42D	6
	C	3

Step 7

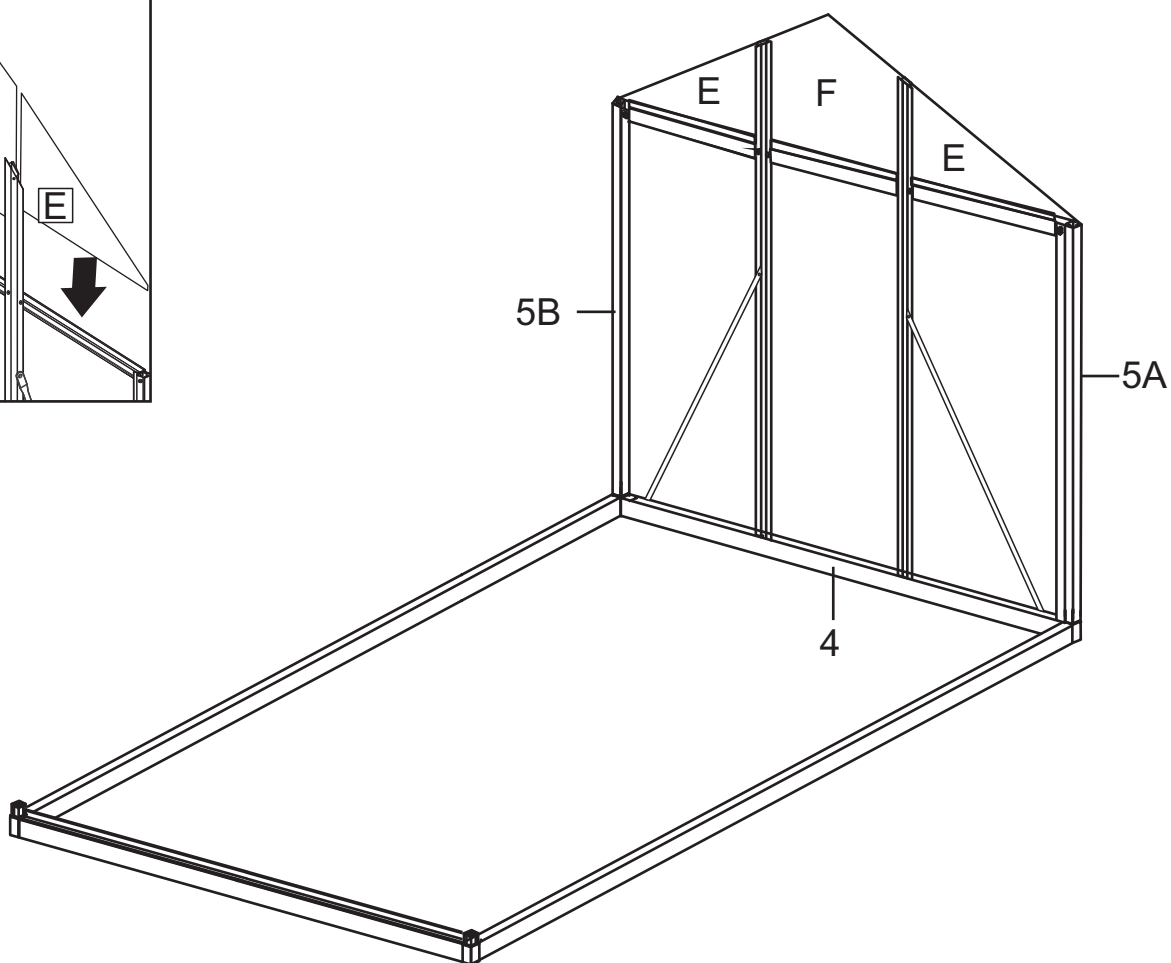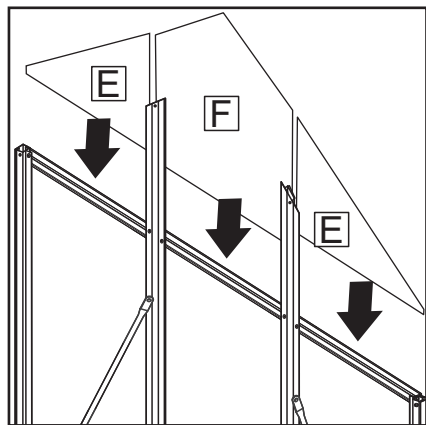


Picture	NO.	Qty.
	F	1
	E	2


Step 8

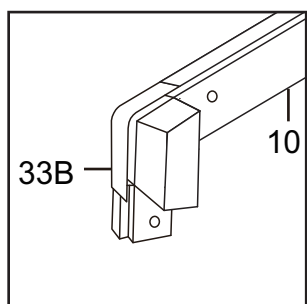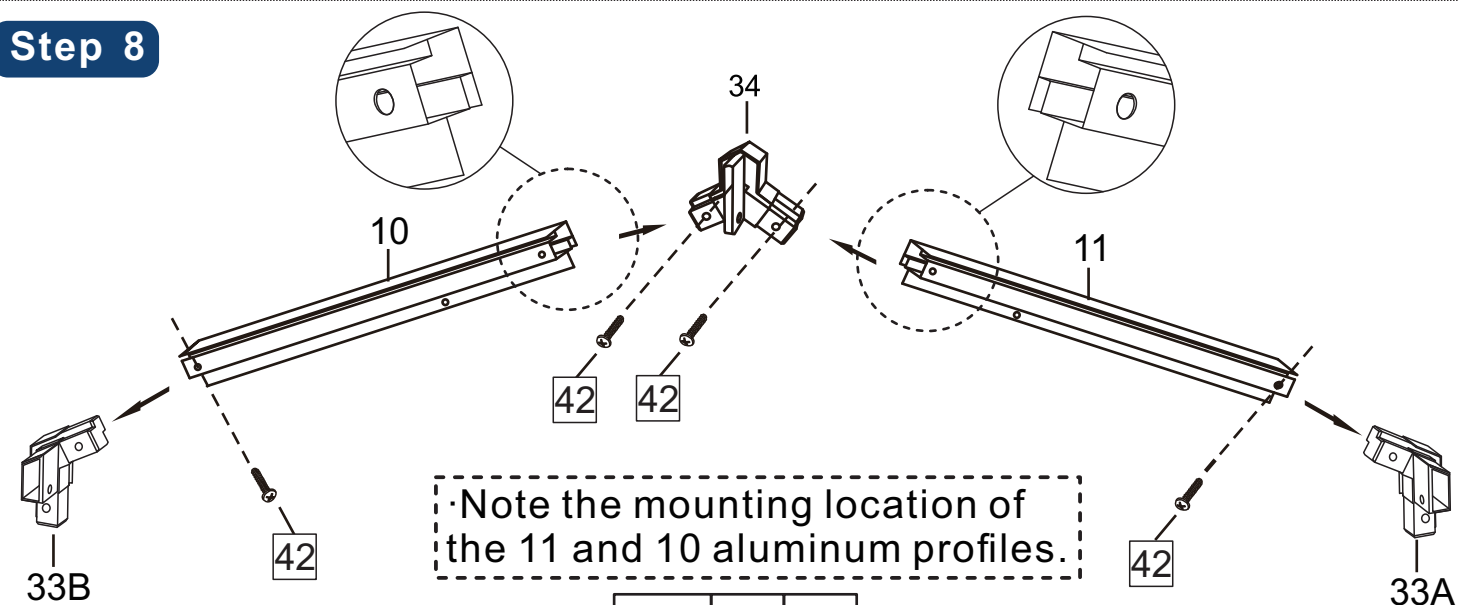


Picture	NO.	Qty.
	10	1
	11	1
	34	1
	33A	1
	33B	1
	42	4

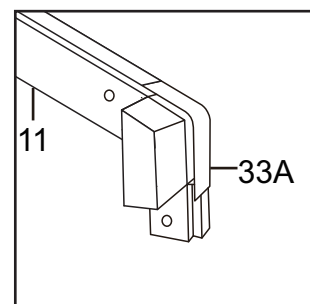

Step 9

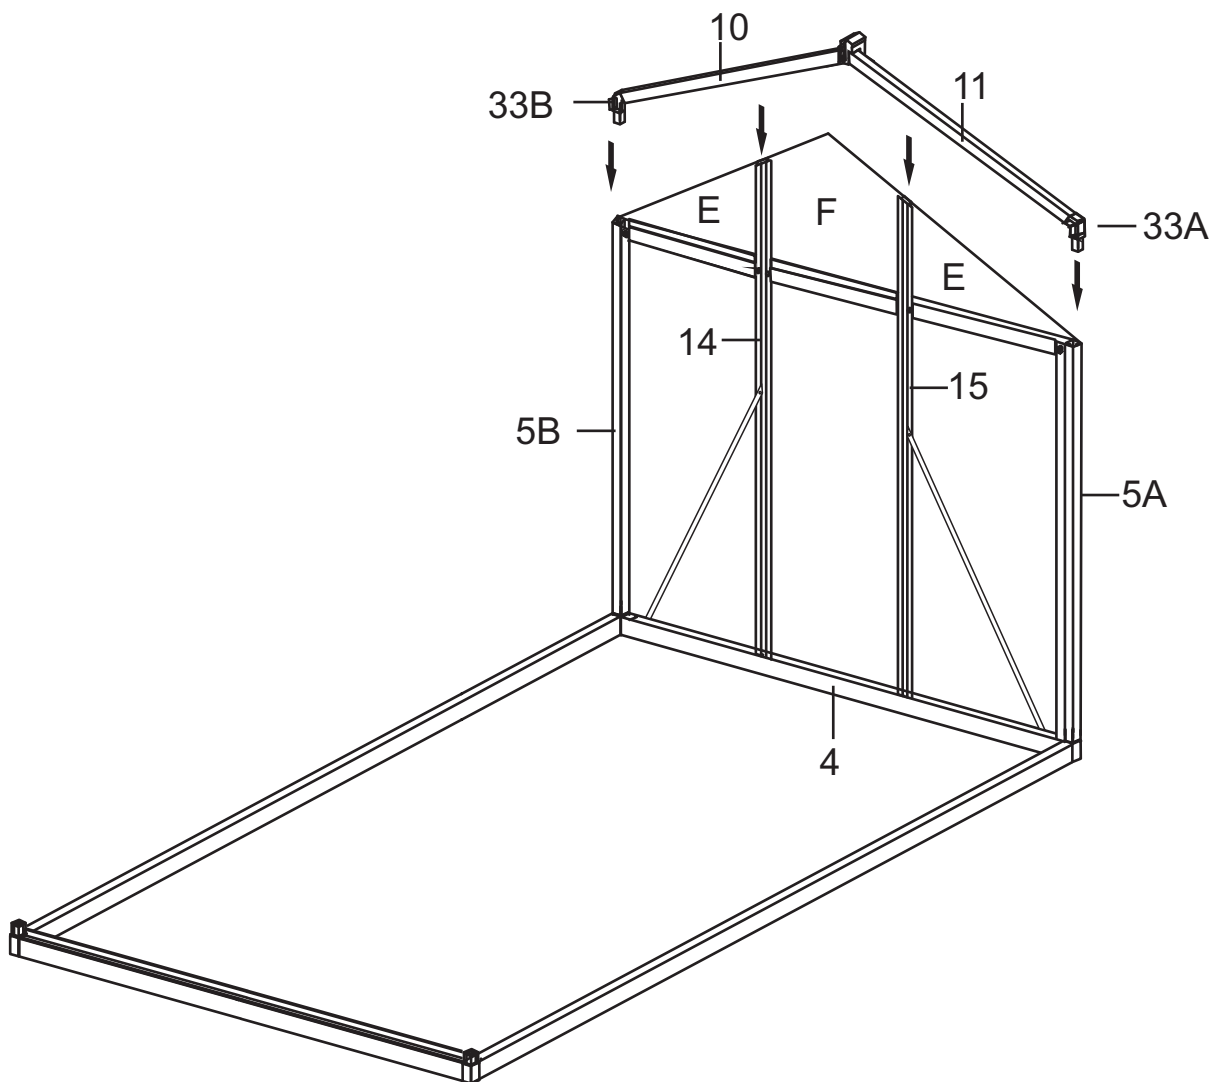


Step 10

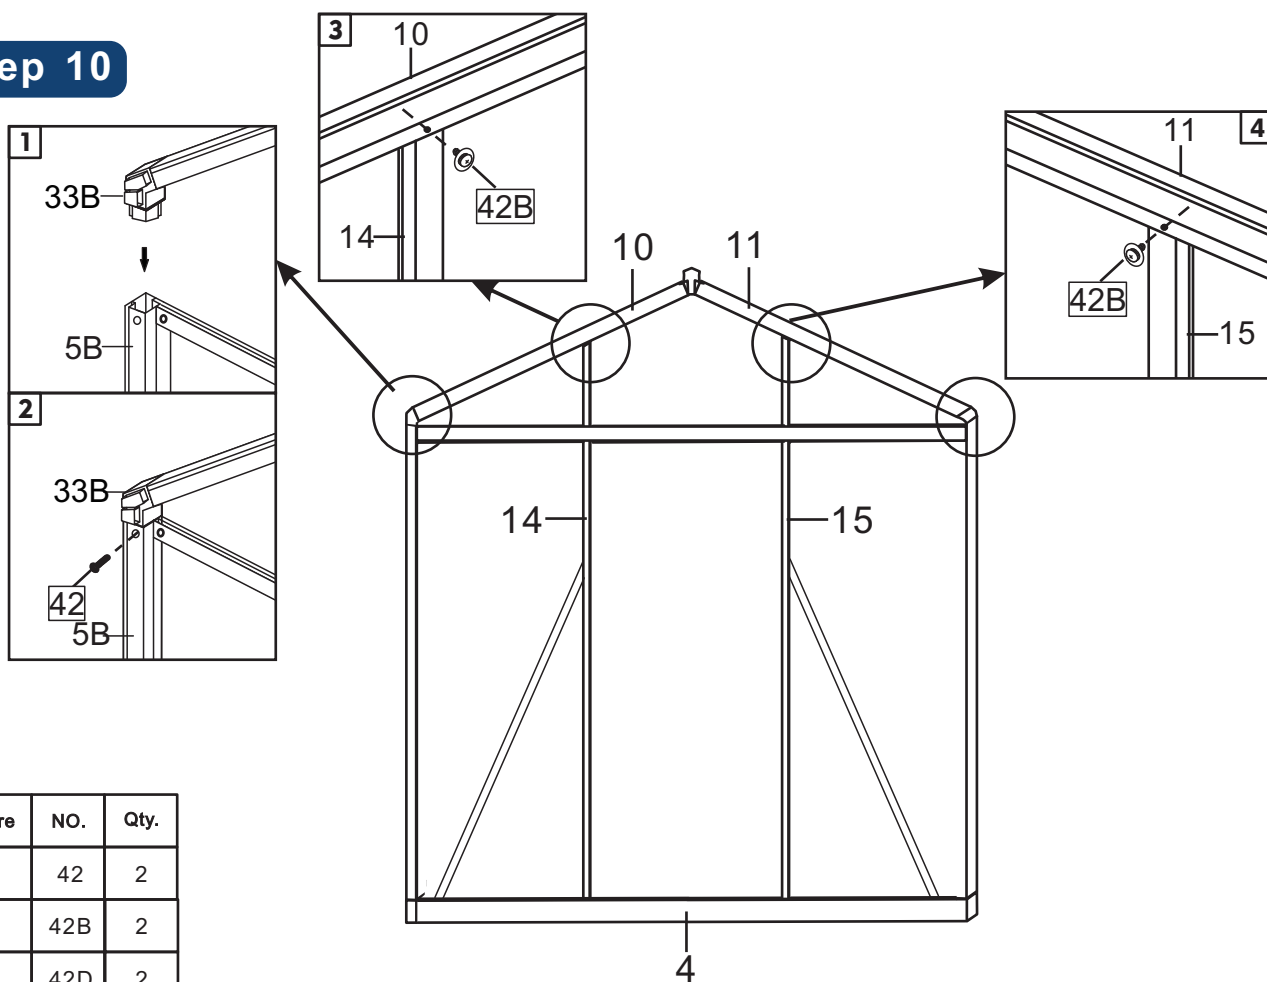


Picture	NO.	Qty.
	42	2
	42B	2
	42D	2

FRONT WALL INSTALLATION STEPS


Step 11

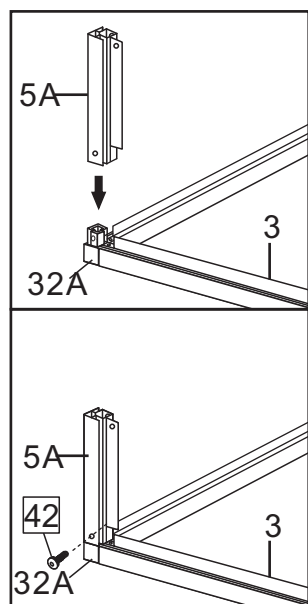


Picture	NO.	Qty.
	5A	1
	5B	1
	42	2

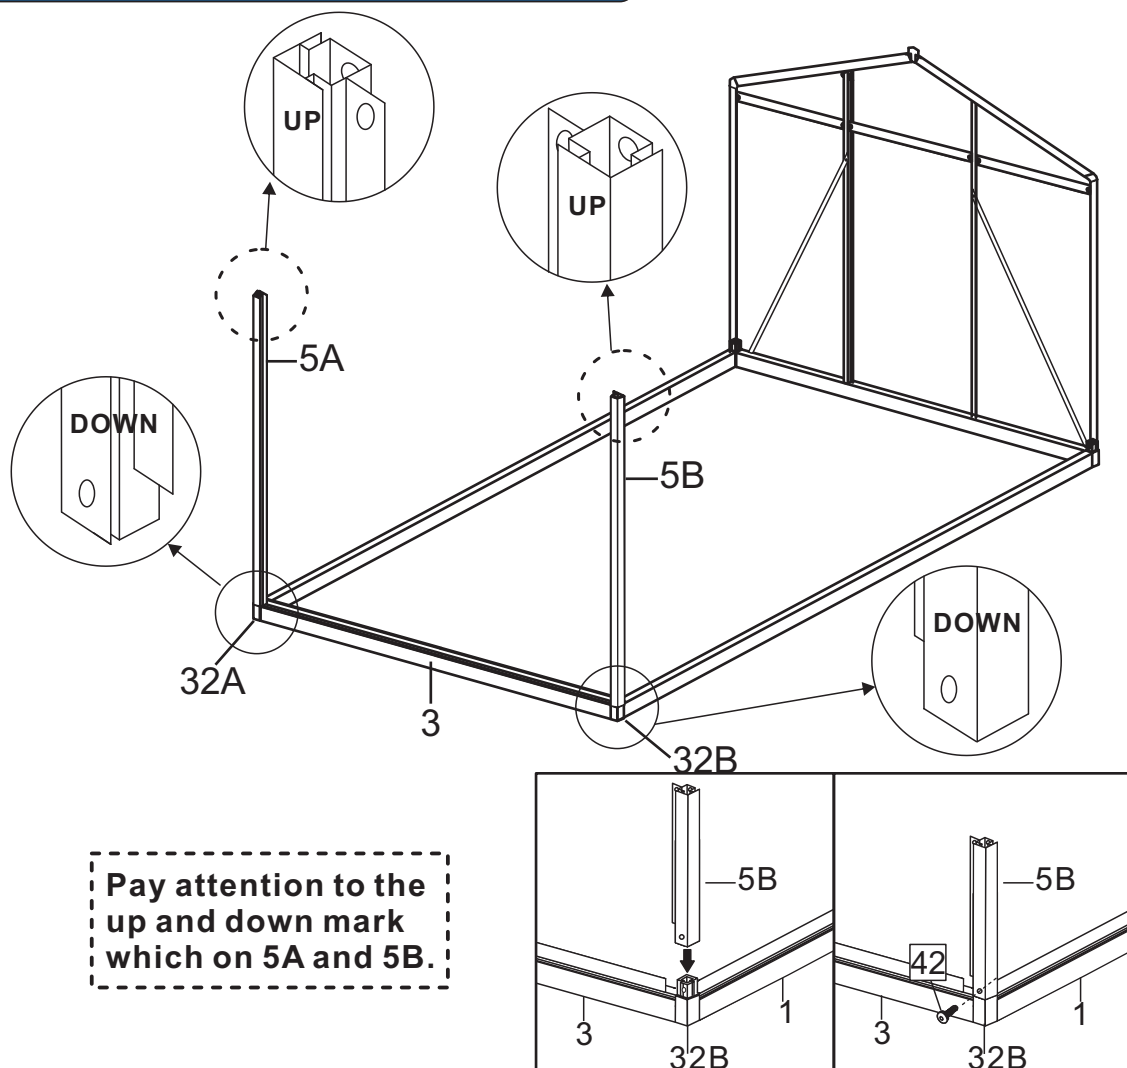


Step 12

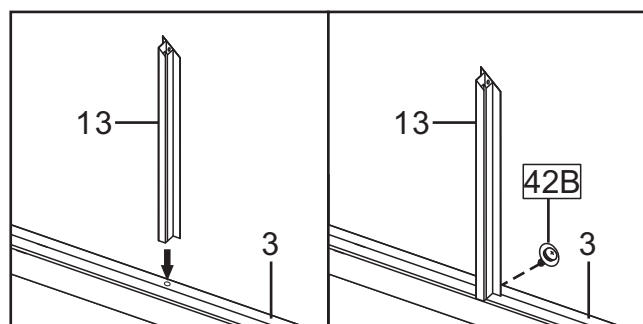


Picture	NO.	Qty.
	12	1
	13	1
	42B	2
	42D	2

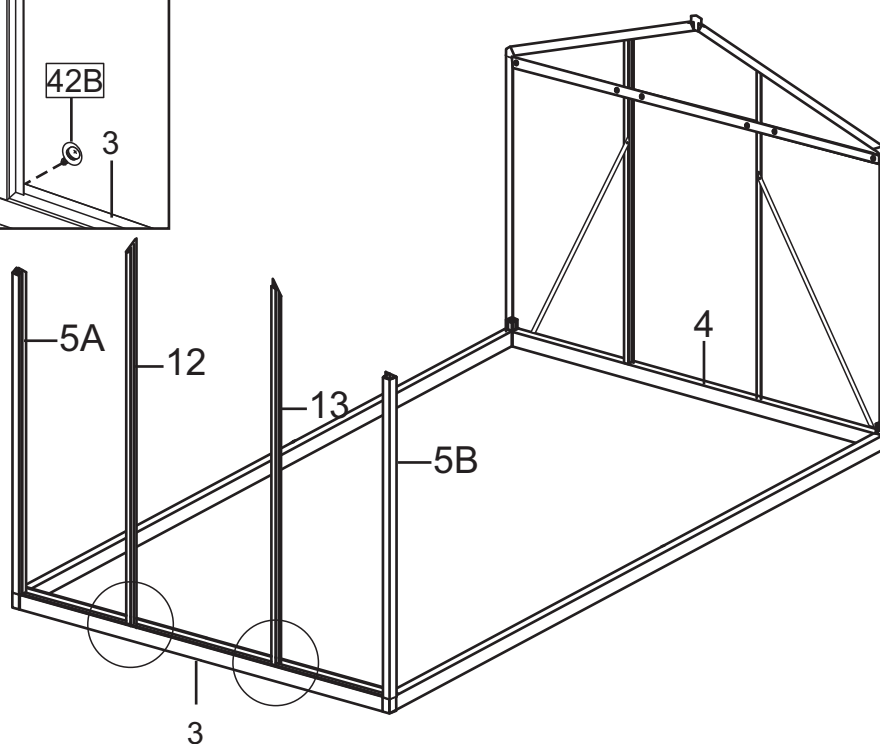


Step 13

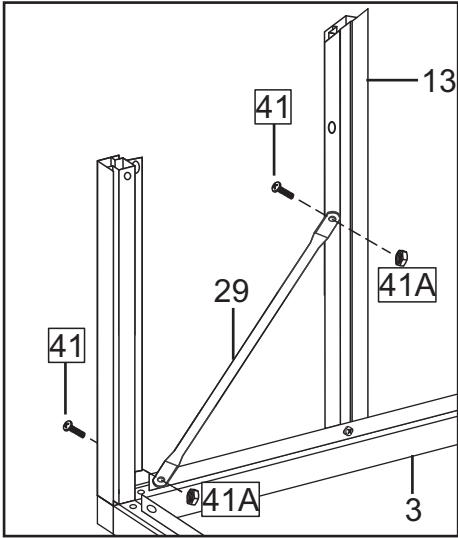


Picture	NO.	Qty.
	29	2
	41	4
	41A	4

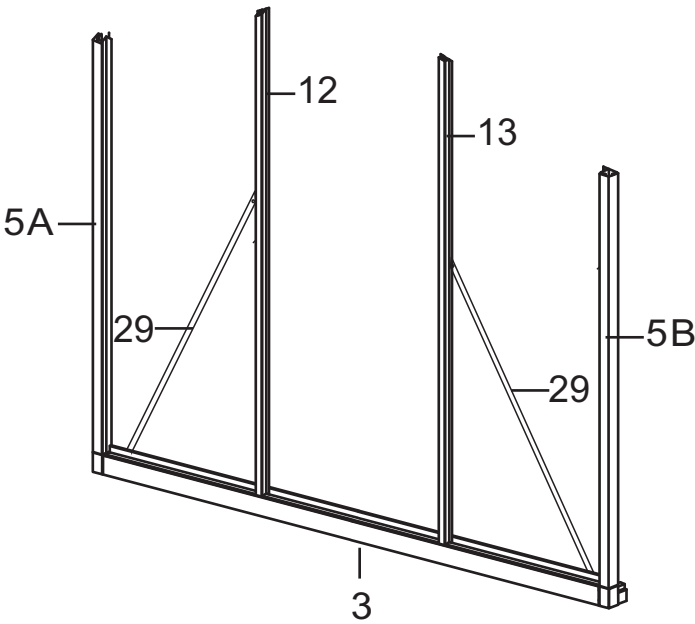


Step 14

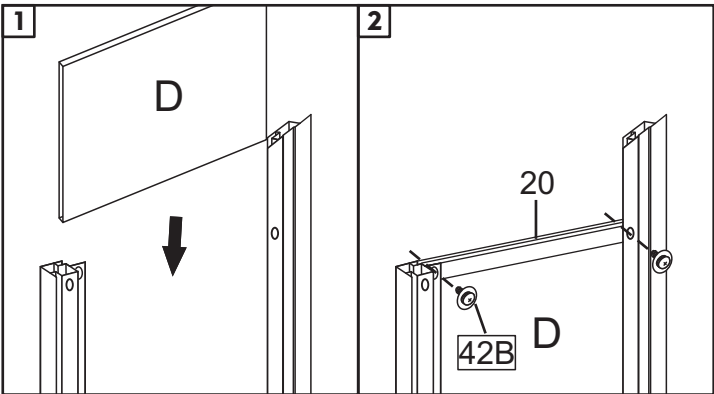

Picture	NO.	Qty.
	20	2
	42B	4
	42D	4
	D	2


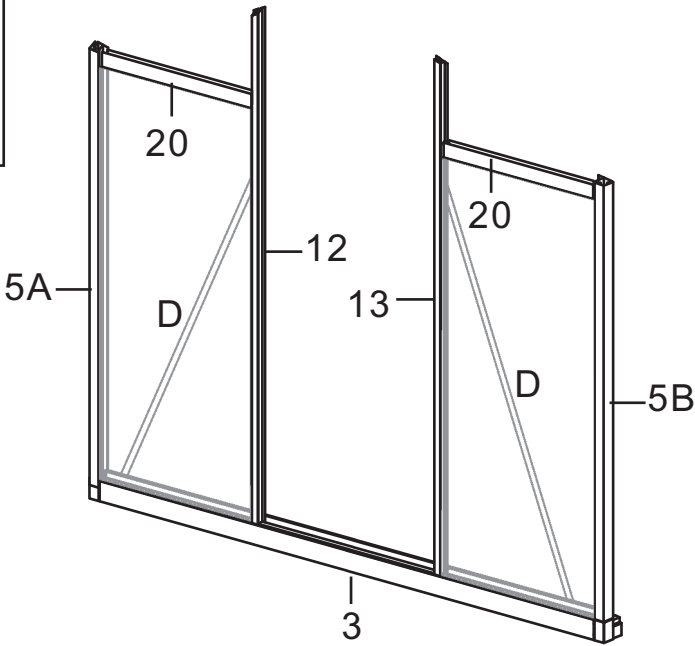


Step 15

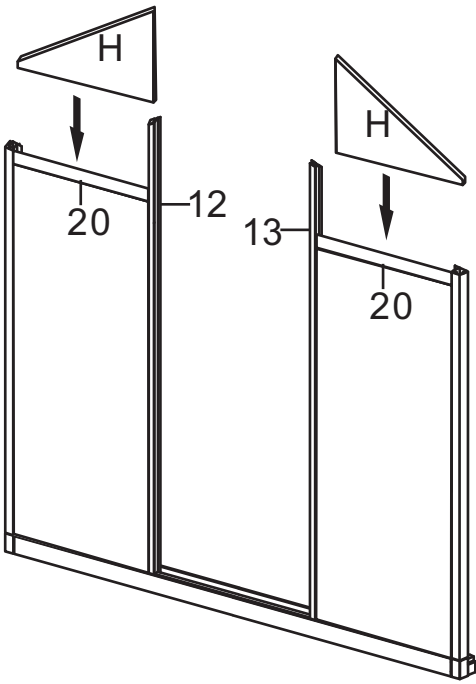


Picture	NO.	Qty.
	H	2


Step 16

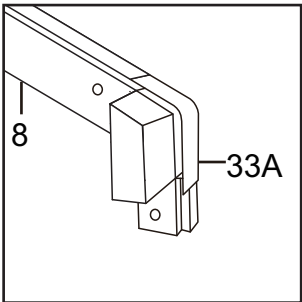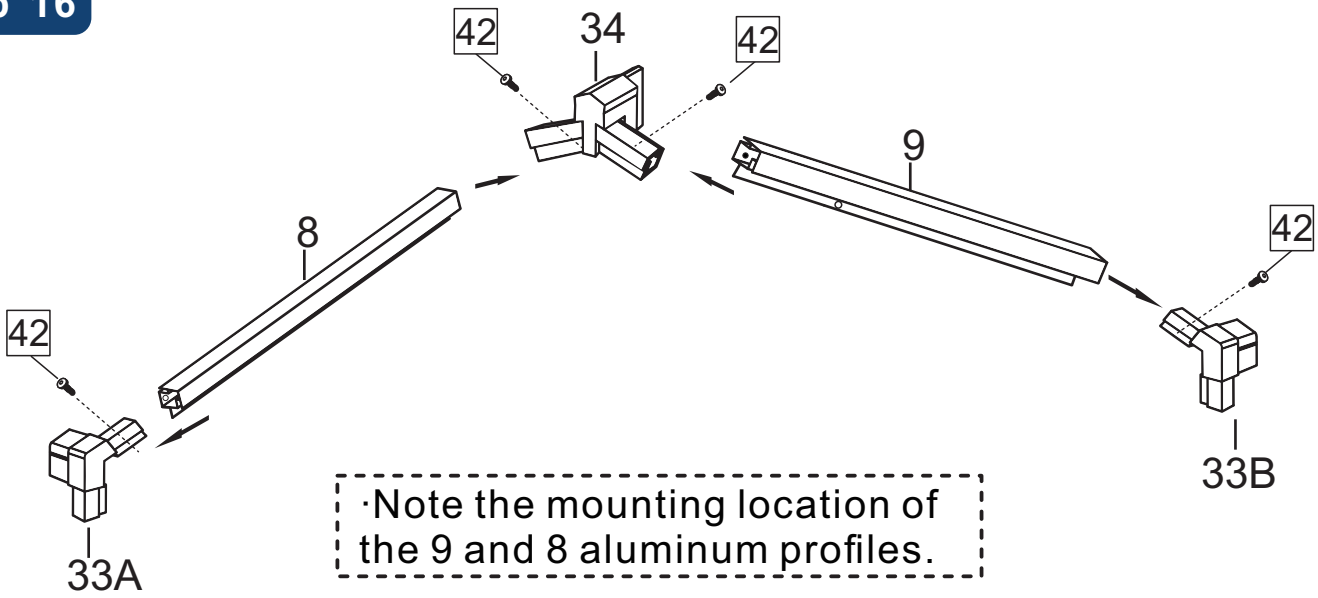


Picture	NO.	Qty.
	8	1
	9	1
	34	1
	33A	1
	33B	1
	42	4

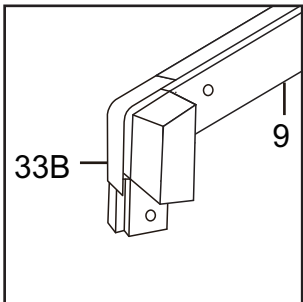




Step 17

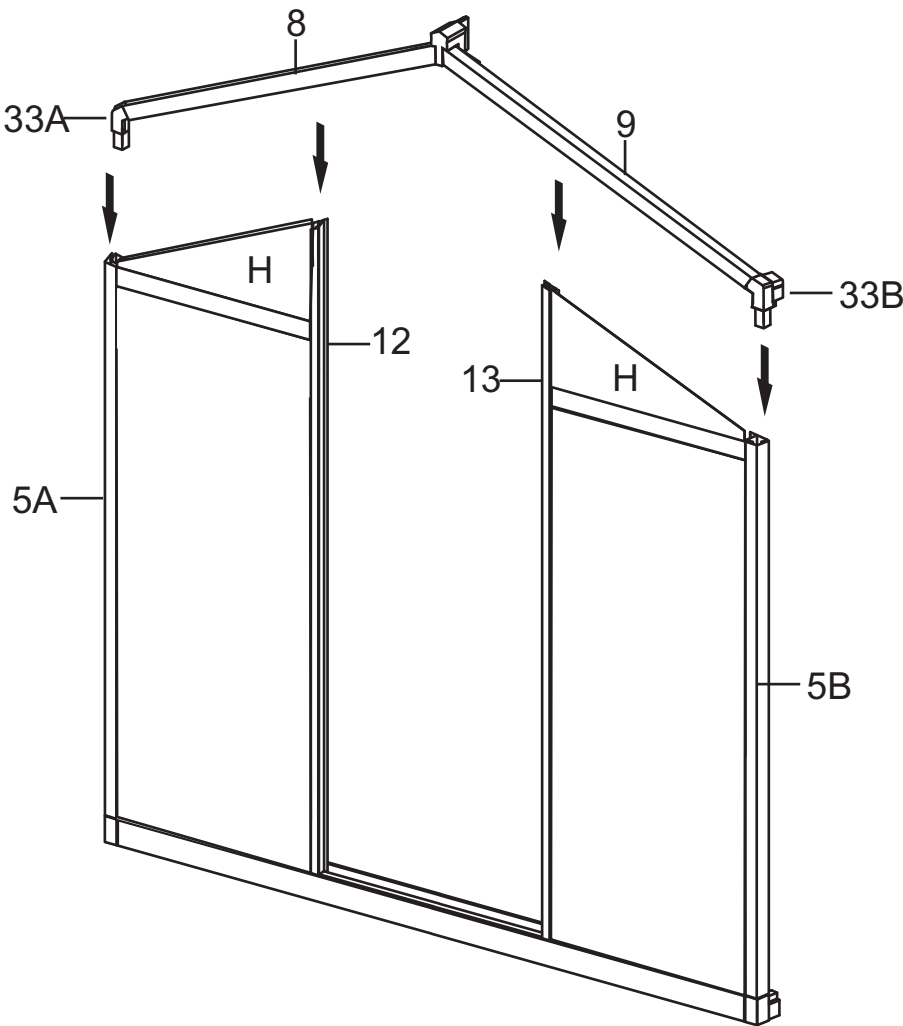

Step 18

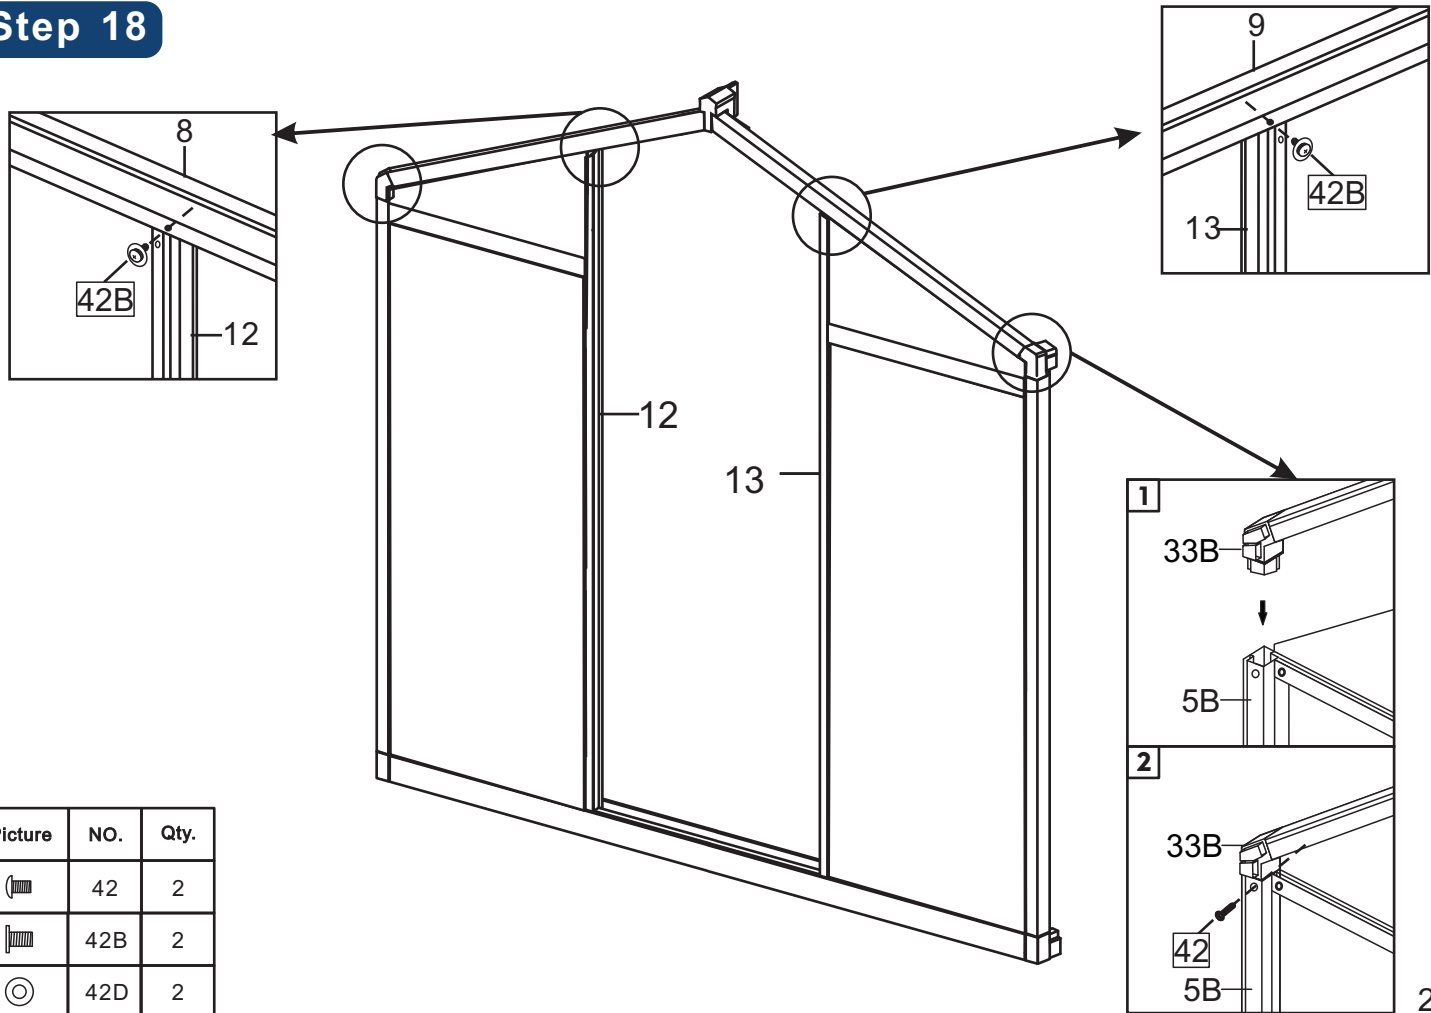


Step 19

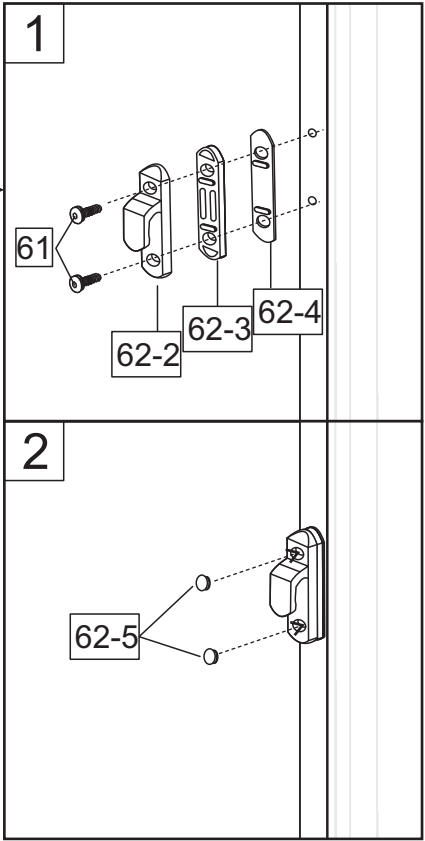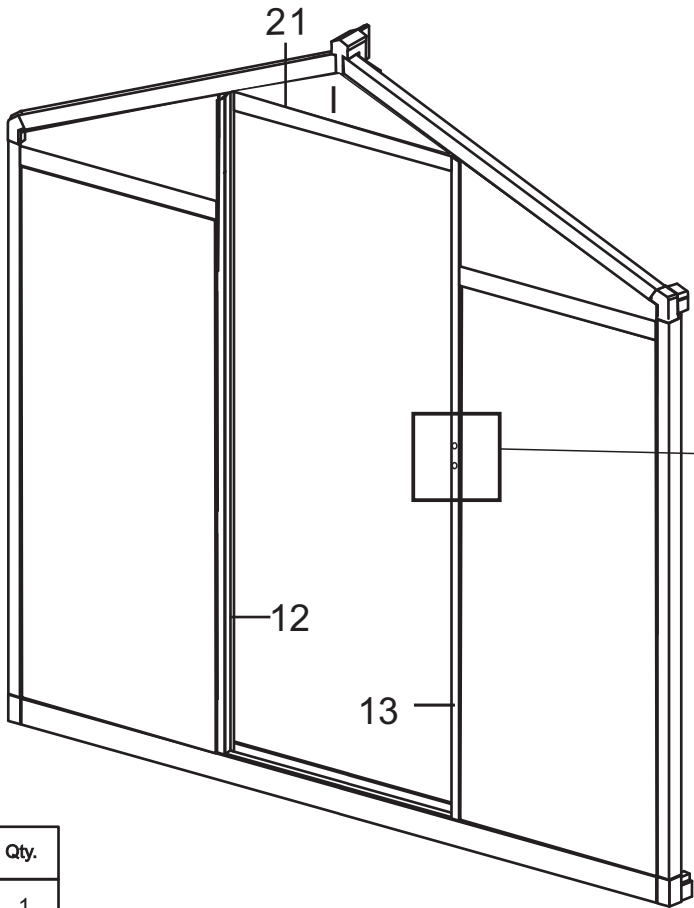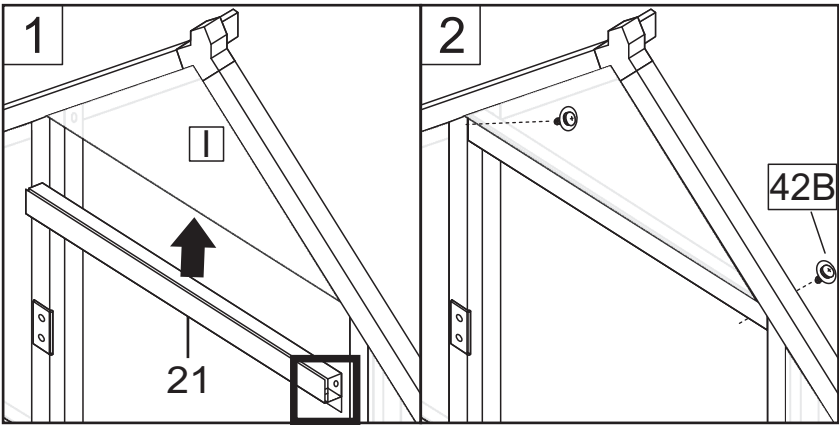

Picture	NO.	Qty.
	21	1
	42B	2
	42D	2
	I	1
	62-2	1
	62-3	1
	62-4	1
	62-5	1
	61	2


SIDE WALL INSTALLATION STEPS

Step 20

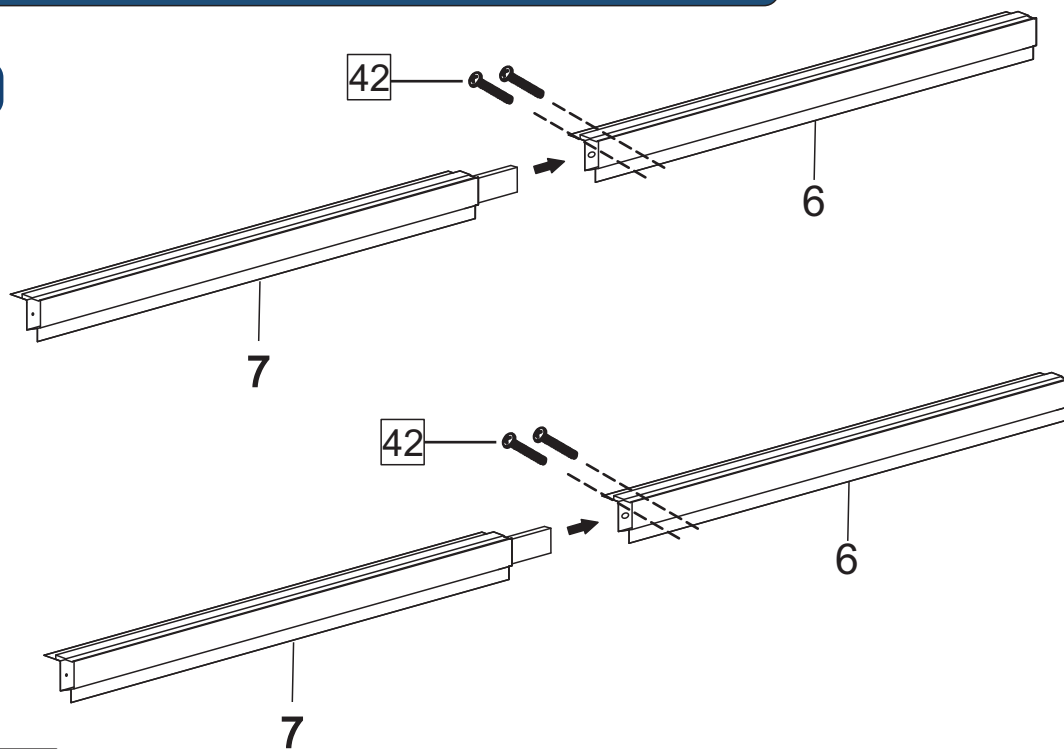


Picture	NO.	Qty.
	6	2
	7	2
	42	4

Step 21


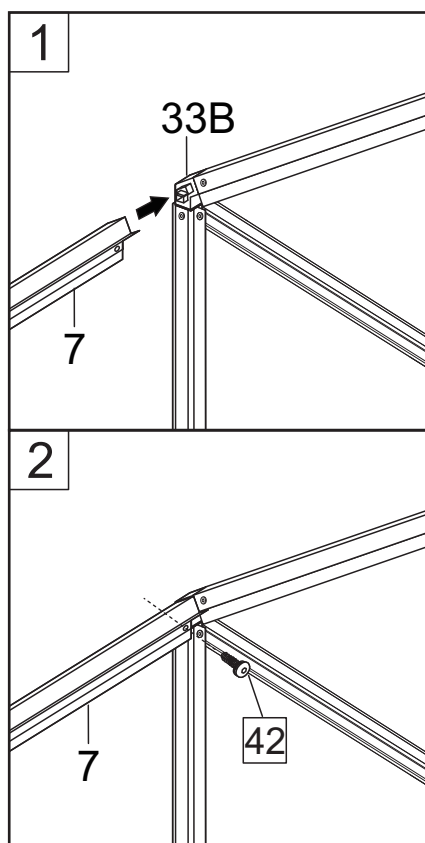


Picture	NO.	Qty.
	42	4

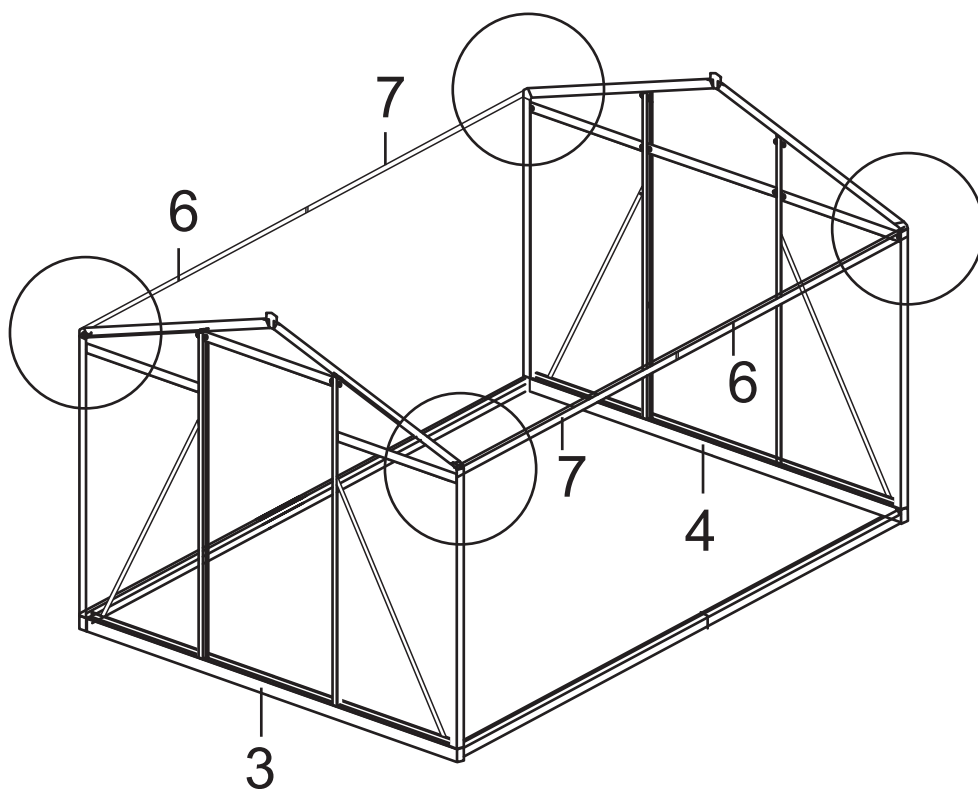



TOP INSTALLATION STEPS

Step 22

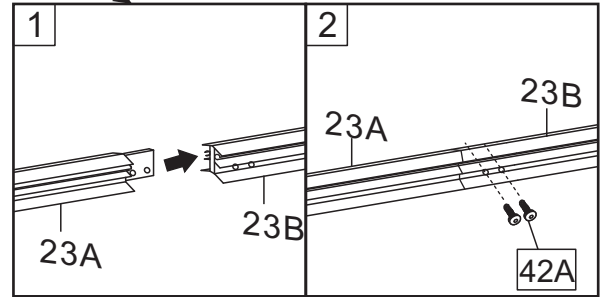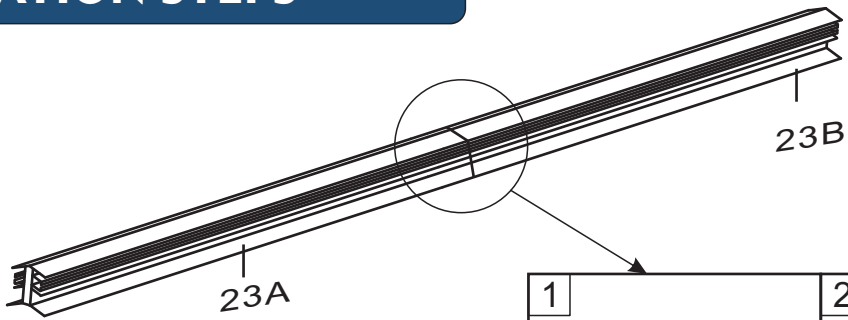



Picture	NO.	Qty.
	23A	1
	23B	1
	42A	2

Step 23

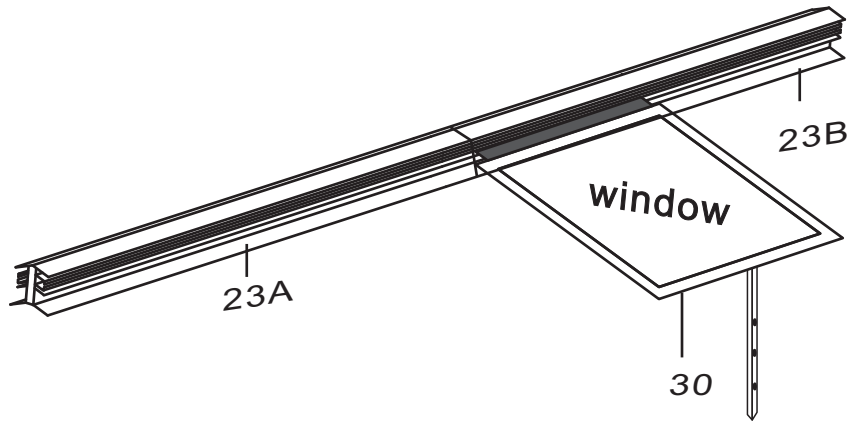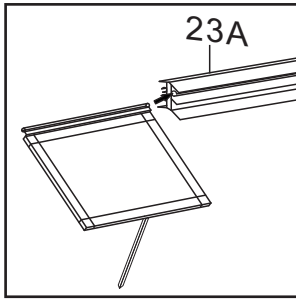






Picture	NO.	Qty.
	30	1

Step 24

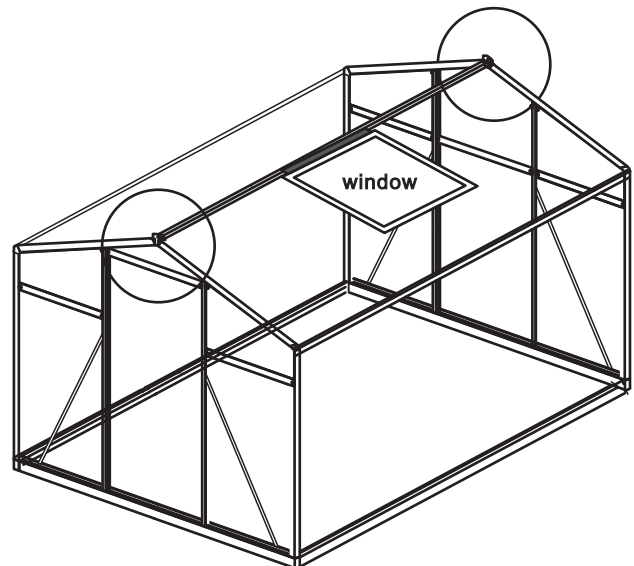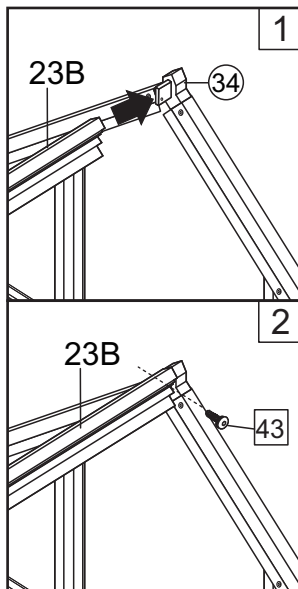

Picture	NO.	Qty.
	43	2

Step 25

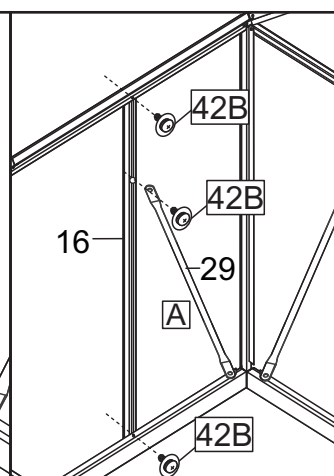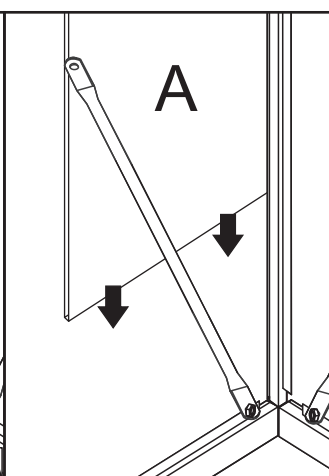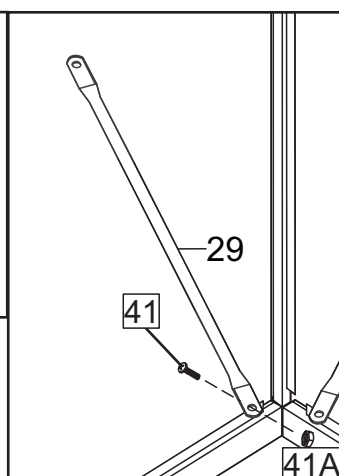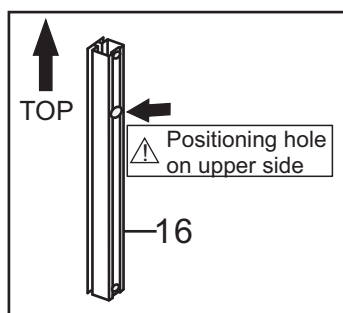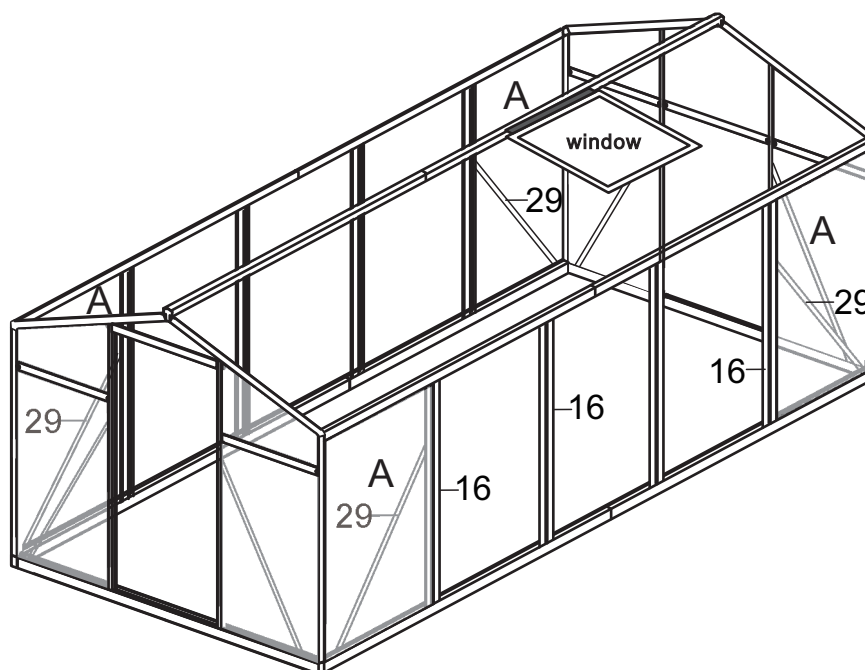


1. Secure the No. 29 reinforcement part to the base with No. 41 screws and No. 41A nuts.

2. Align and insert Panel A into the aluminum alloy slot.


3. Insert the No. 16 aluminum alloy slot into Panel A and secure with No. 42B screws. Connect the No. 29 reinforcement bracket to the No. 16 aluminum profile using No. 42B screws.

Picture	NO.	Qty.
	16	8
	29	4
	41	4
	41A	4
	42B	20
	42D	20
	A	4

Step 26

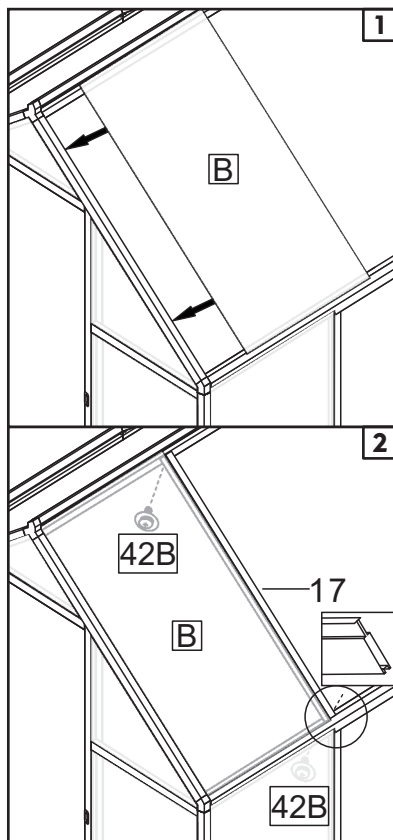


! Tighten all screws only after all sunlight panels are properly installed and aligned.

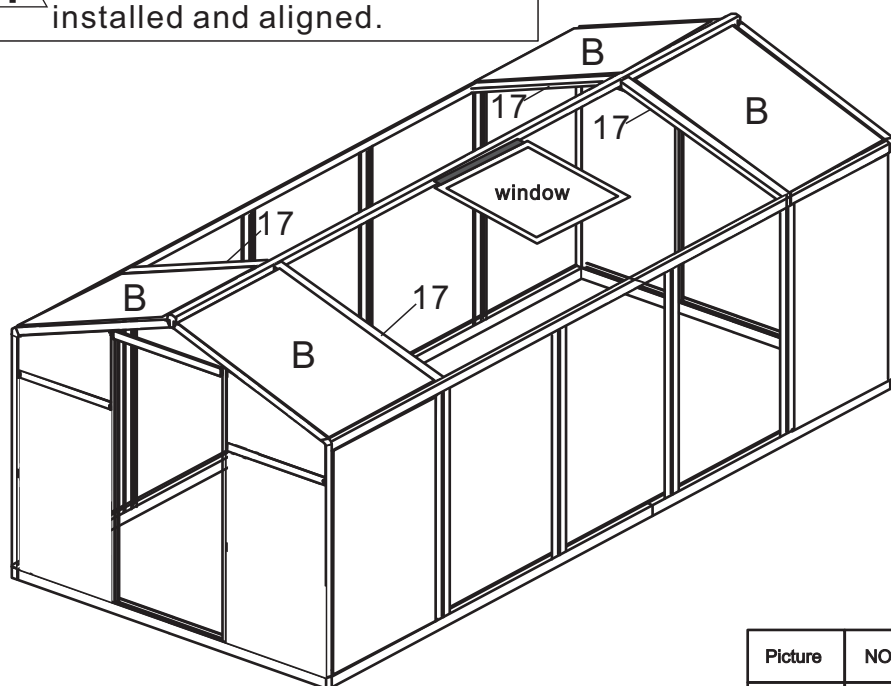


Picture	NO.	Qty.
	B	4
	17	4
	42B	8
	42D	8


Step 27

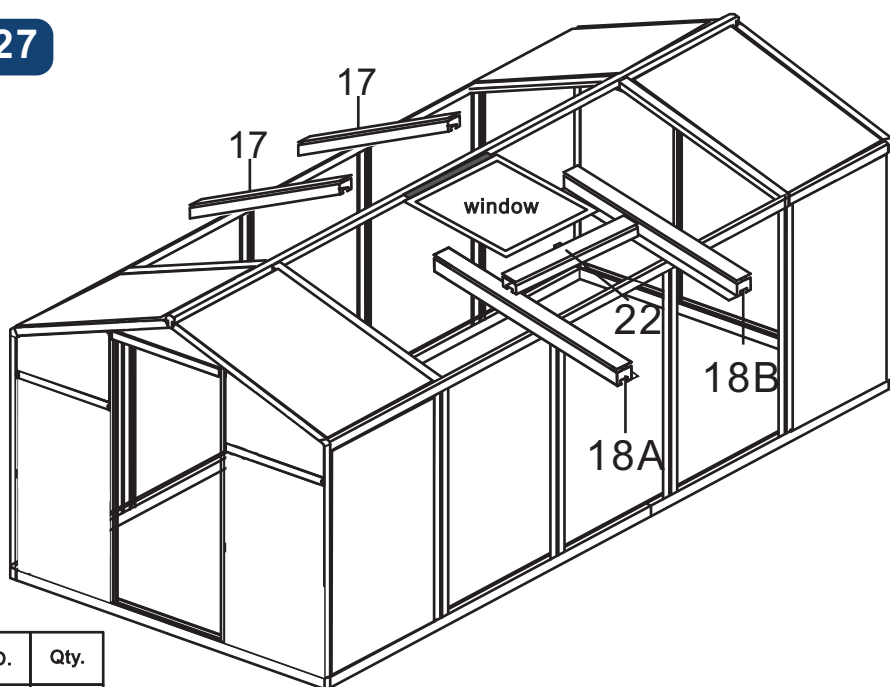

Picture	NO.	Qty.
	17	2
	18A	1
	18B	1
	22	1
	42B	10
	42D	10

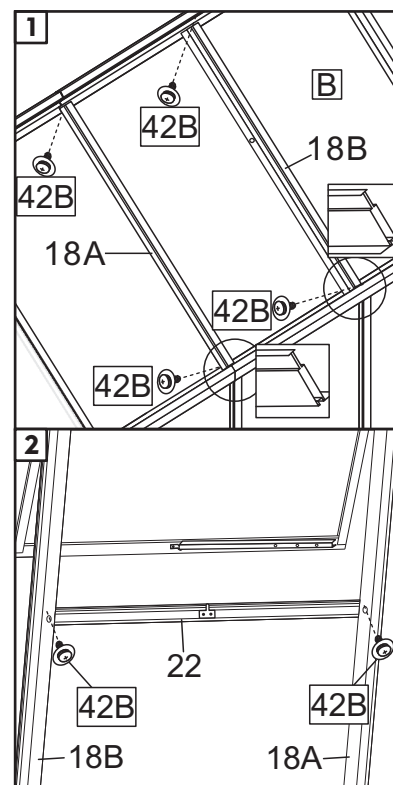


Step 28

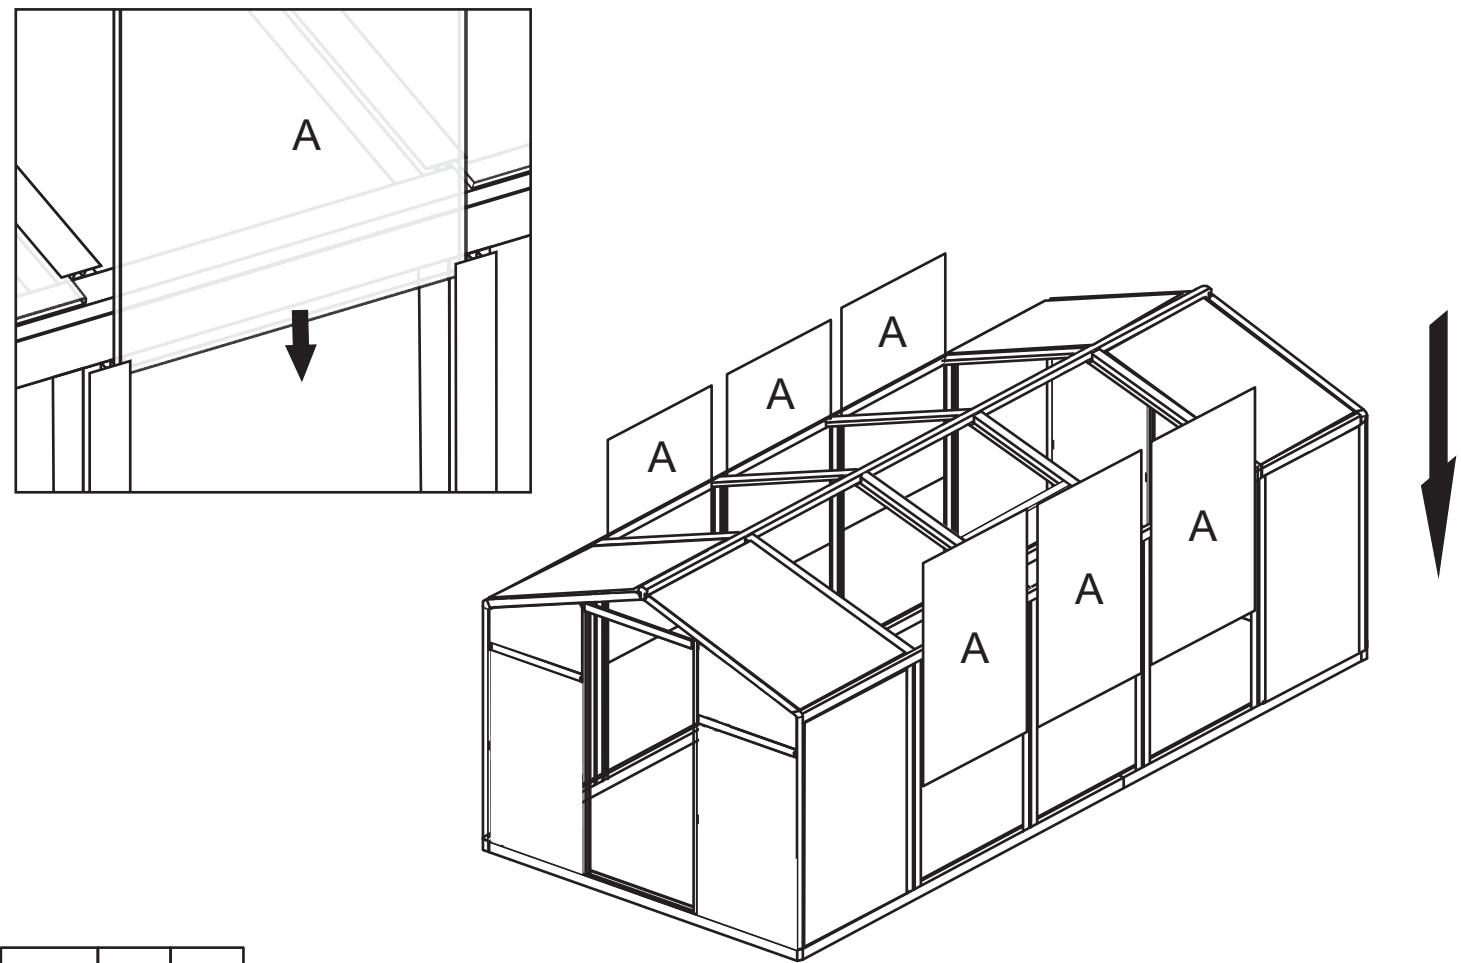


Picture	NO.	Qty.
	A	6

Step 29



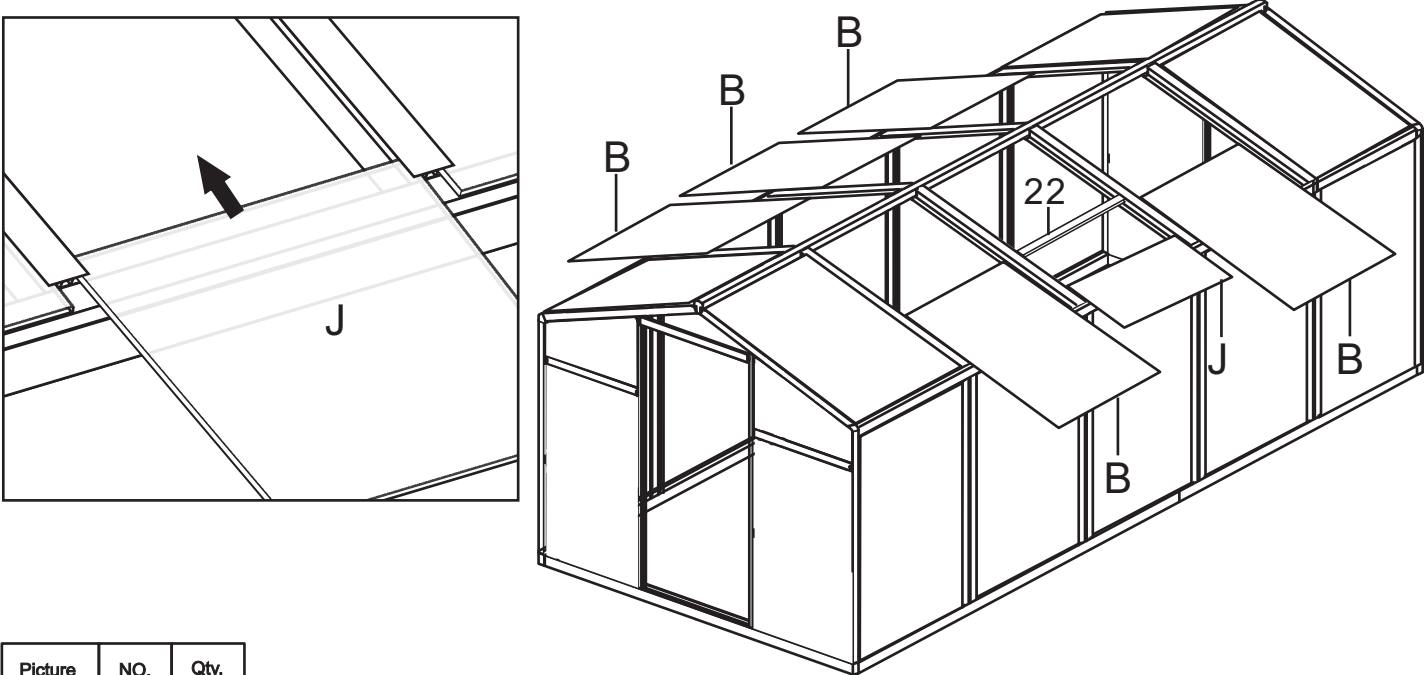


Picture	NO.	Qty.
	B	5
	J	1

Step 30

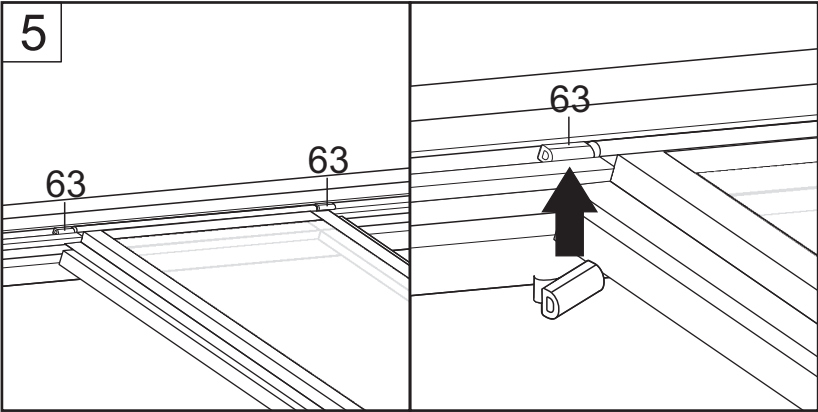




Calibrate the window position. Tear off the protective film of the 63# accessory and insert it into both side tracks of the window for secure adhesion, preventing the window from sliding.

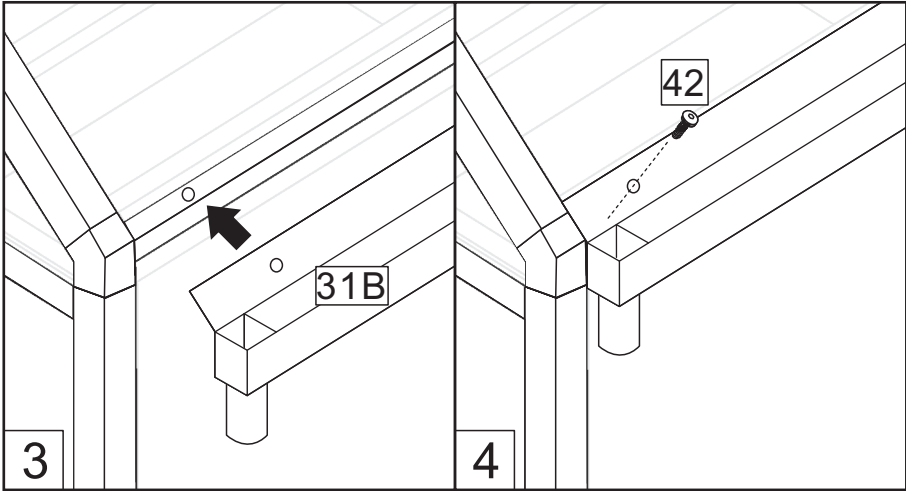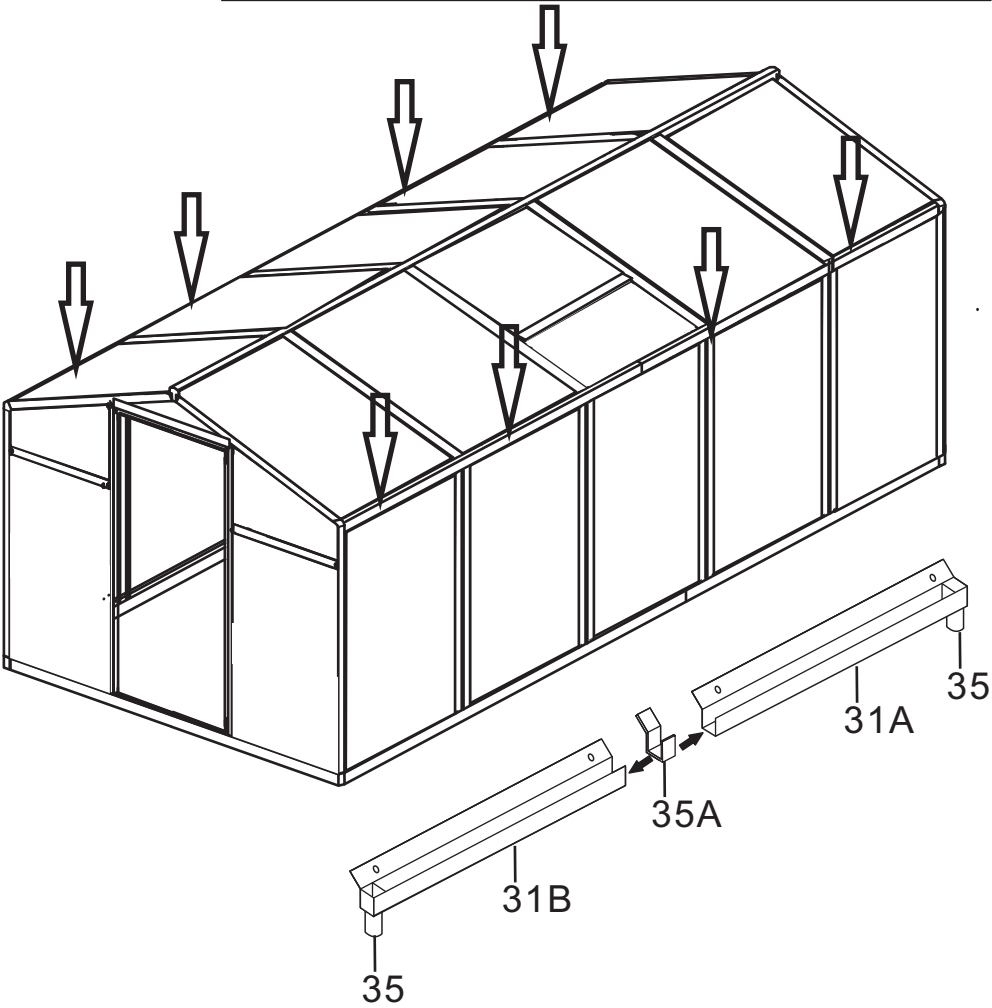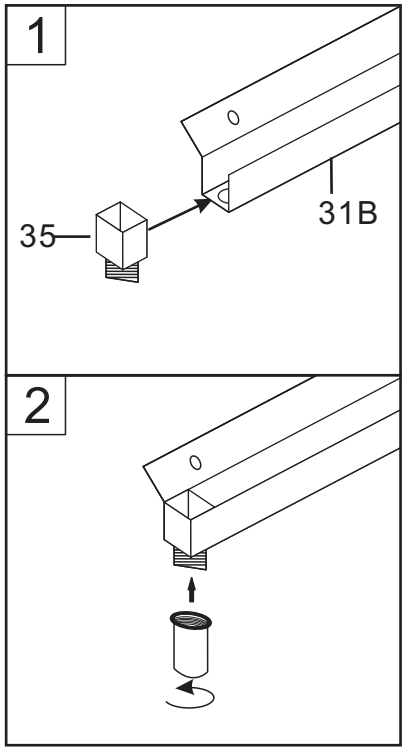

Picture	NO.	Qty.
	31A	2
	31B	2
	35	4
	35A	2
	42	8
	63	2


DOOR INSTALLATION STEPS

Step 31

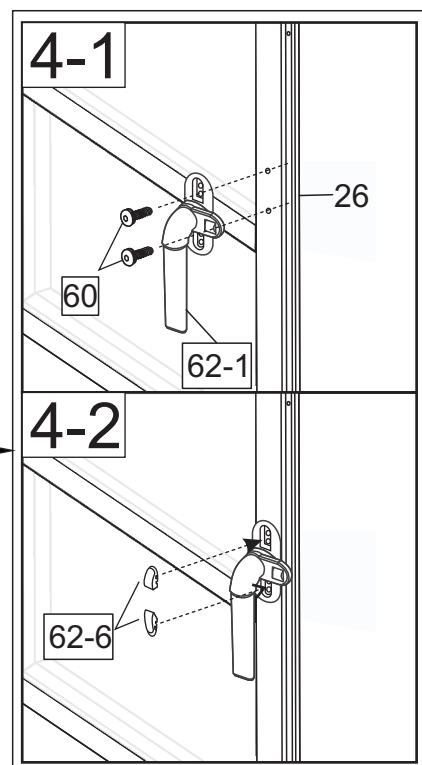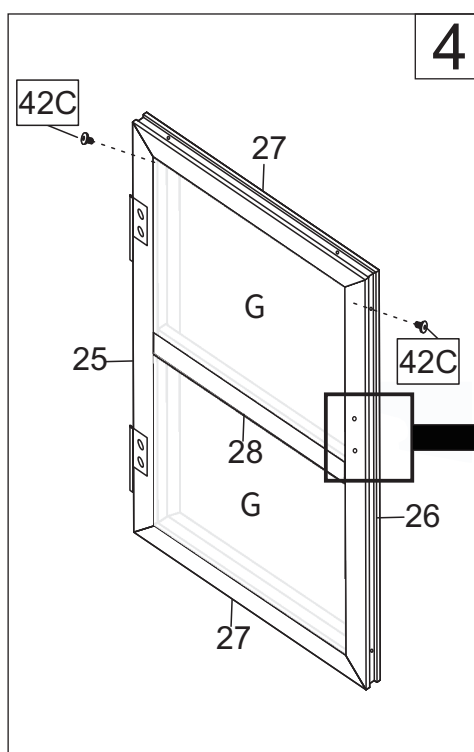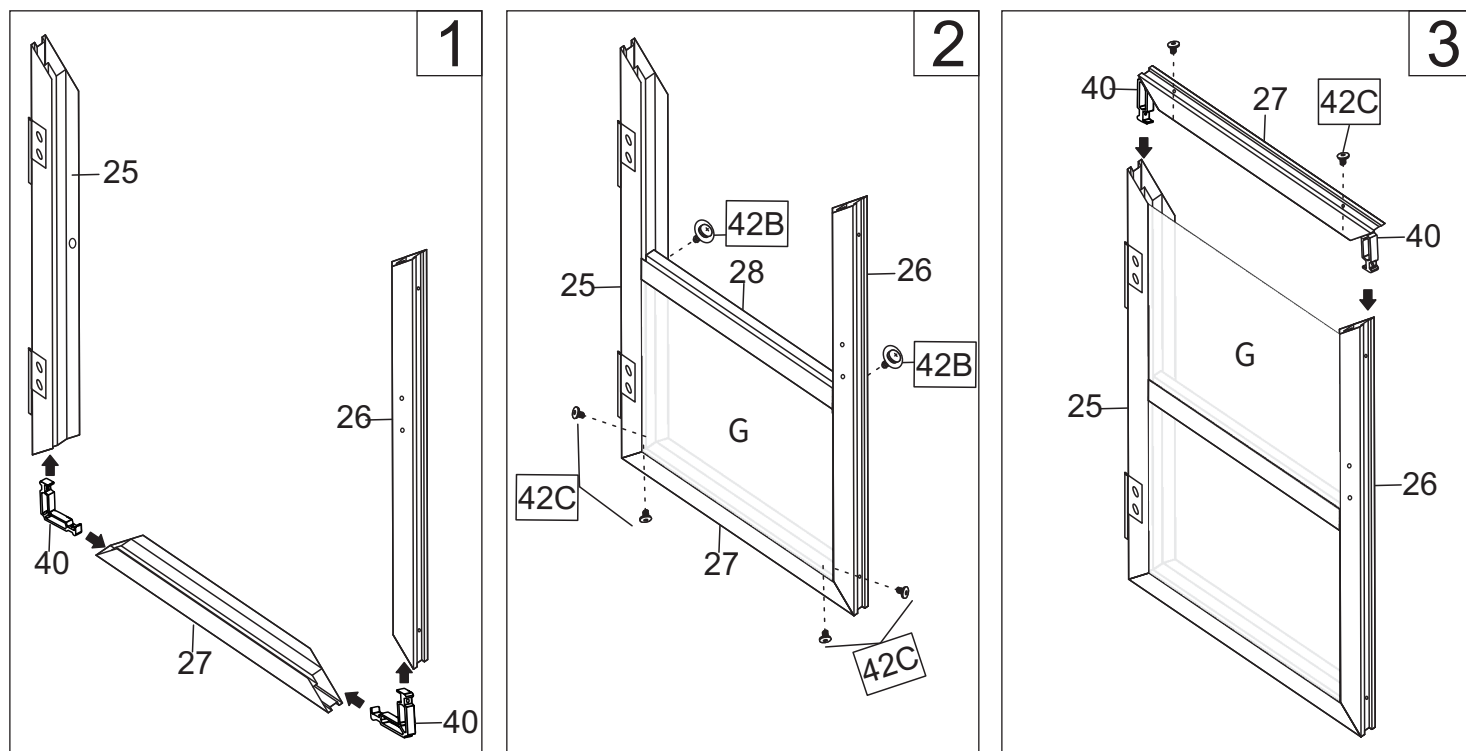


Picture	NO.	Qty.
	25	1
	26	1
	27	2
	28	1
	G	2
	42B	2
	42D	2
	42C	8
	40	4
	62-1	1
	62-6	1
	60	2


Step 32

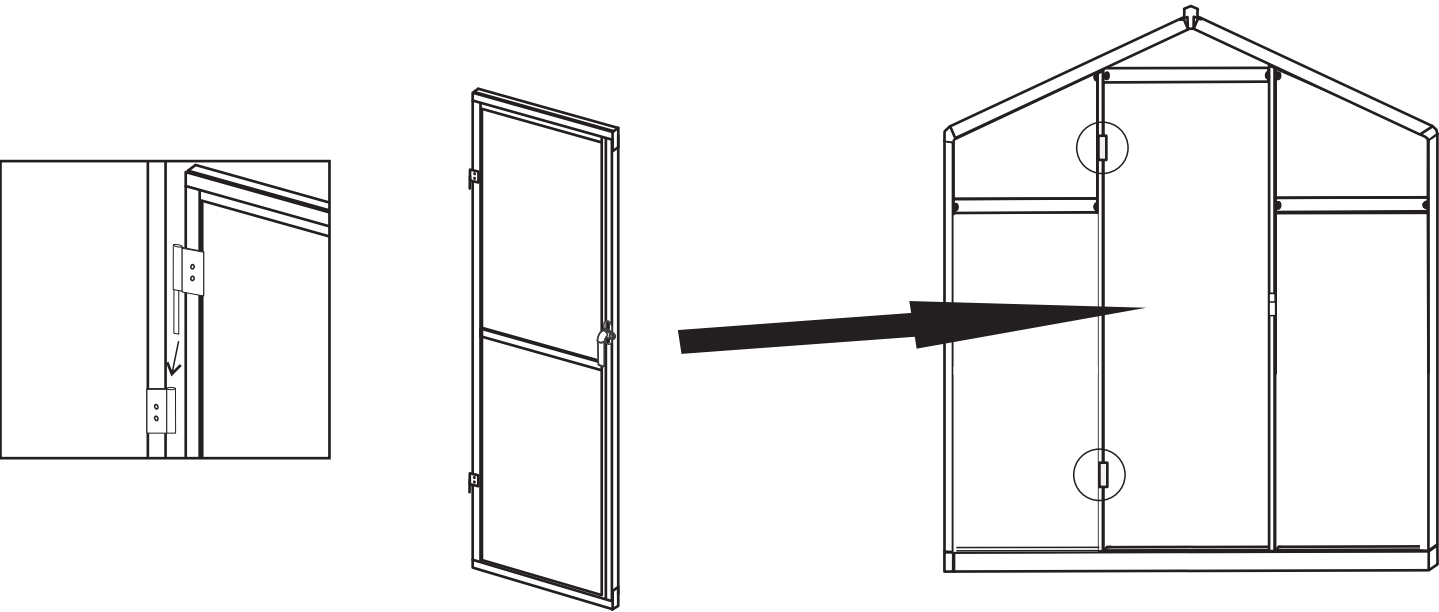

Step 33

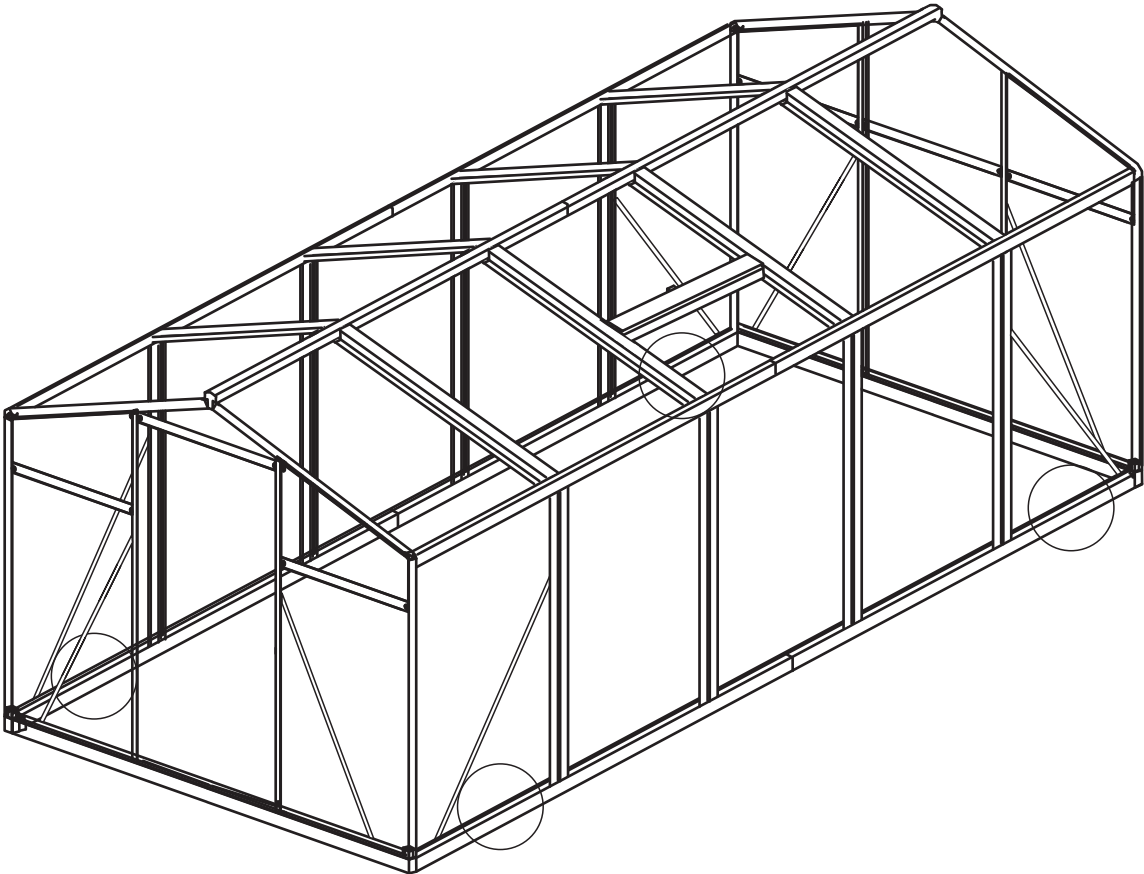

Picture	NO.	Qty.
	48	4
	51	4

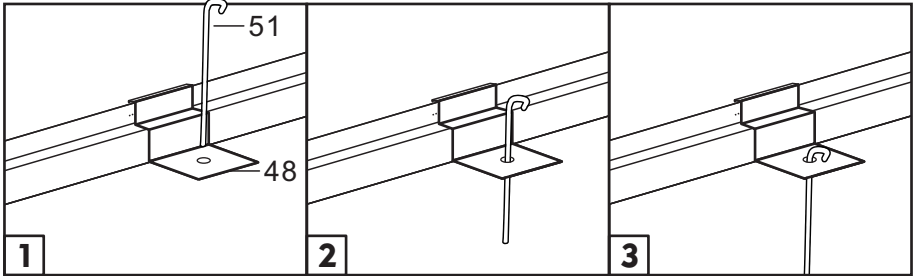

IMPORTANT SAFETY INFORMATION

Please carefully read the instructions and caution warnings below before assembling the product. Following this guide will ensure that you install, use and maintain the product properly.

- Please keep this installation and user manual/instructions for future reference in case you need to assemble the product.
- Do not assemble if you notice serious damage such as cracks or bends.
- During installation, please use work gloves for hand safety.
- Please assemble the unit on carpeted floor or the flat cardboard box to avoid scratching the surface or your floor while assembling on the floor.
- To assemble, please use the complimentary installation tools (Allen Wrench). Pay more attention to the direction of components at each step.
- It is recommended that two people work together to assemble the product.
- Please do not tighten the screws up too much, just to 80% before you finish to make the installation go on successfully.

RETURN POLICY

We believe you will absolutely love your new product. But for some reason you want to return your item, please contact us within 30 days after receiving and ensure that the product which you want to return is in a good condition in the original box with all original certificates of purchase, manuals and accessories attached.

HOW TO MAINTAIN YOUR PRODUCT:

- Check the screws of the product are not loose from regular use.
- Do not use sharp instruments, rubbing alcohol, corrosive chemicals, or abrasive cleaners to clean the product.
- Do not keep the product in a damp environment for a long period of time. The damp environment may cause the iron components to rust and the plates to bulge and crack.

How to find us ?

Customer Service

Email: support@garvee.com

GARVEE
support@garvee.com