



# Bed Frame Installation Manual

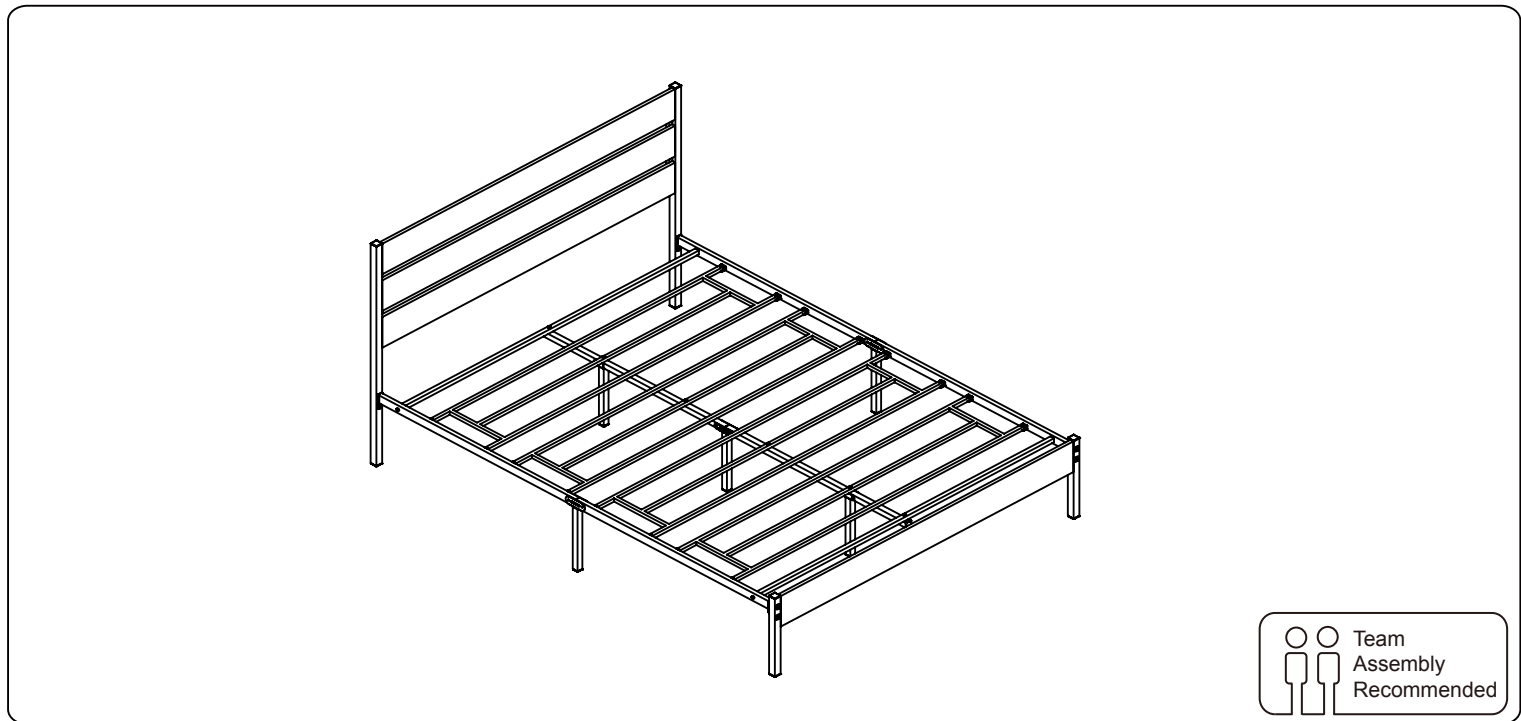





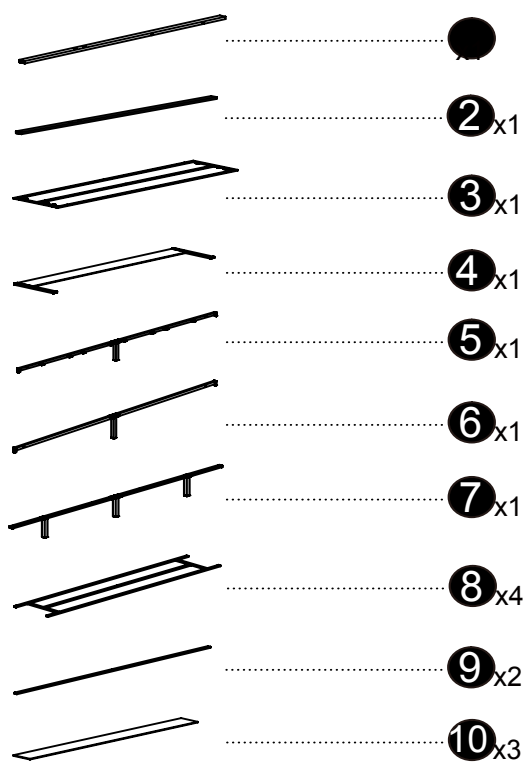




 Team Assembly Recommended

### Componets




### Screws & Tools


A		M8x45mm	x4
B		M6x50mm	x2
C		M6x35mm	x8
D		M6x25mm	x17
E		M6x20mm	x16
F		M6x12mm	x6
L		M8	x8
M		M6x20mm	x4
N		M4	x2

## 1


Note: For easy setup intention, do not tighten screws during the installation process




M6x25  
4pcs




N

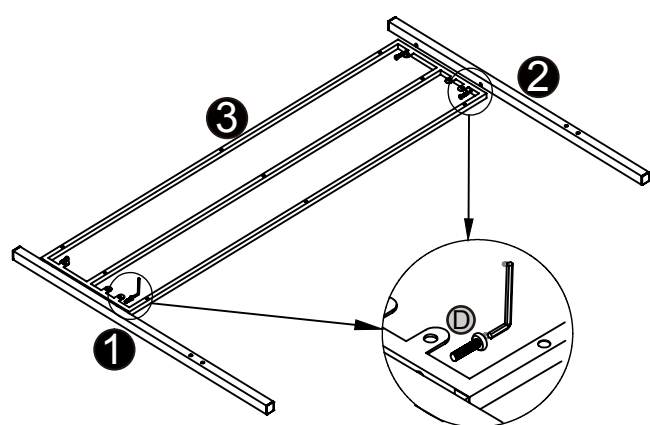


## 2



M6x25  
9pcs



M6x12  
6pcs



N

