



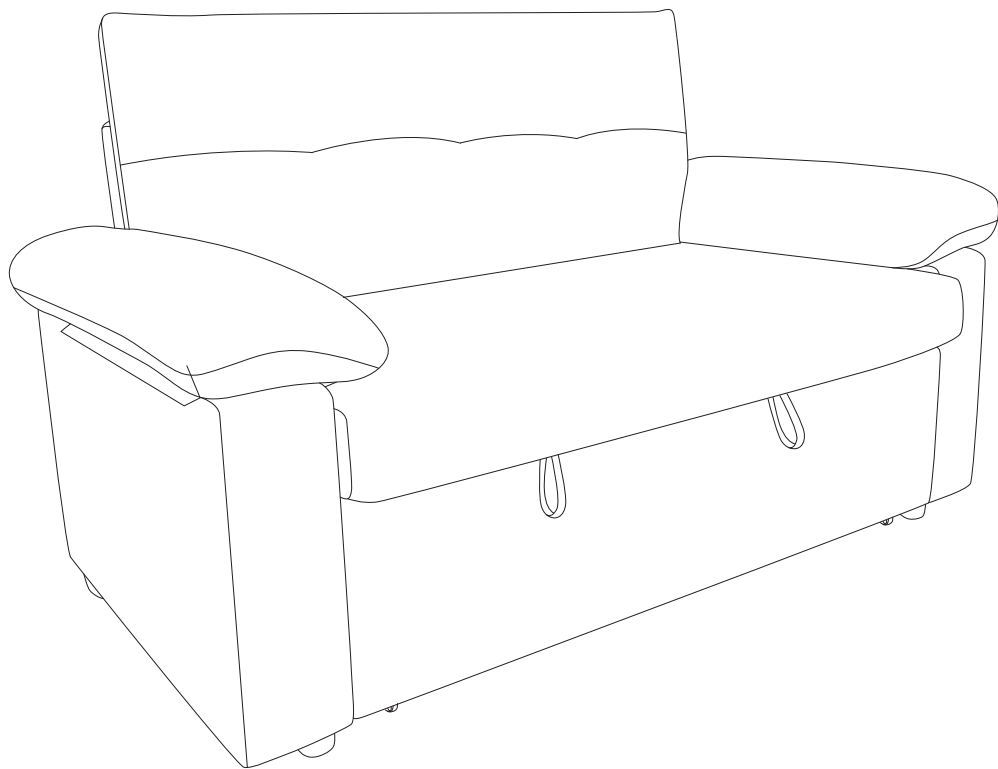


Installation & Assembly


Parts List

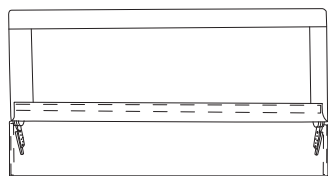


H X1

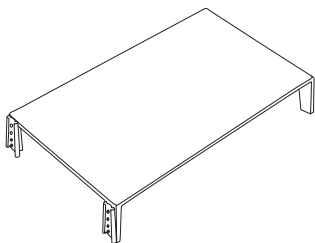


I X1

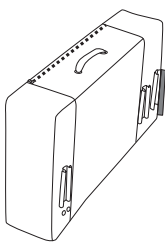

J-L X1

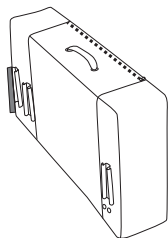


J-R X1

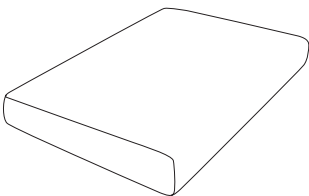


K X1




L X1

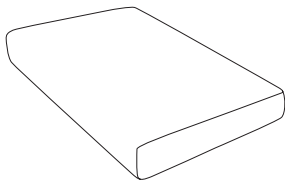


M X1

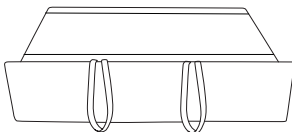

N X1

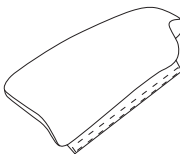

O-L X1

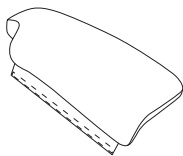


O-R X1

Hardware List

A	M6X20mm	B	M4	C		D		E		F	
											
	X14		X1		X4		X1		X4		X2


STEP 1

	CX4
--	-----

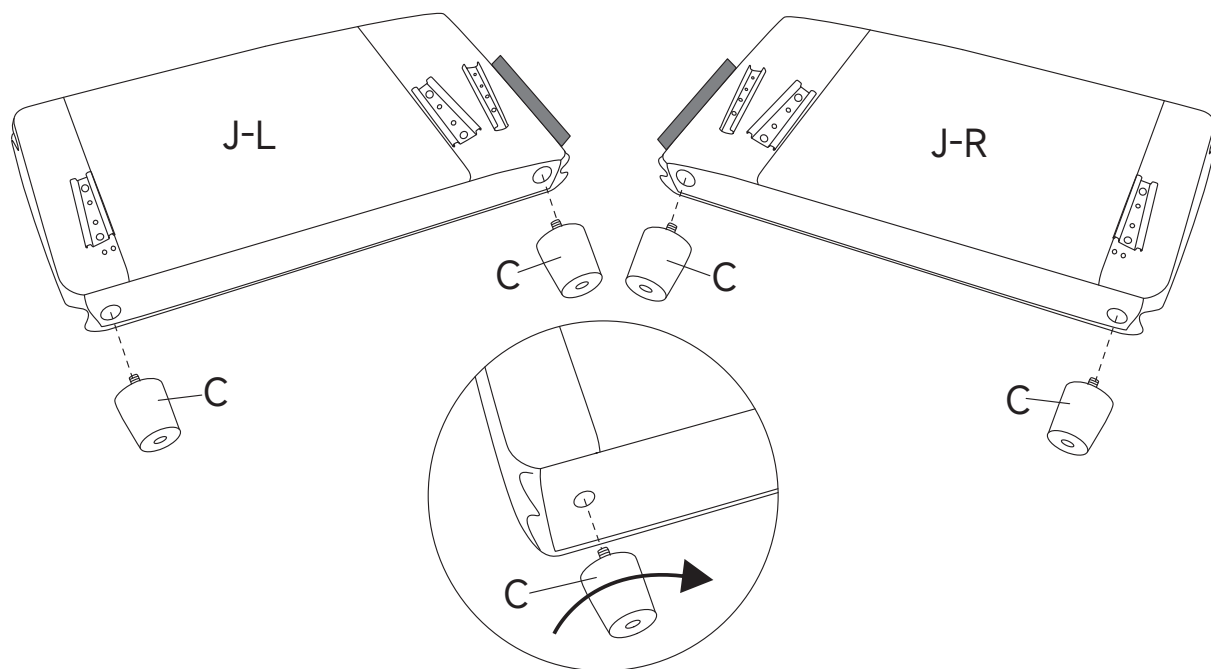


STEP 2

	AX4
	BX1
	FX2

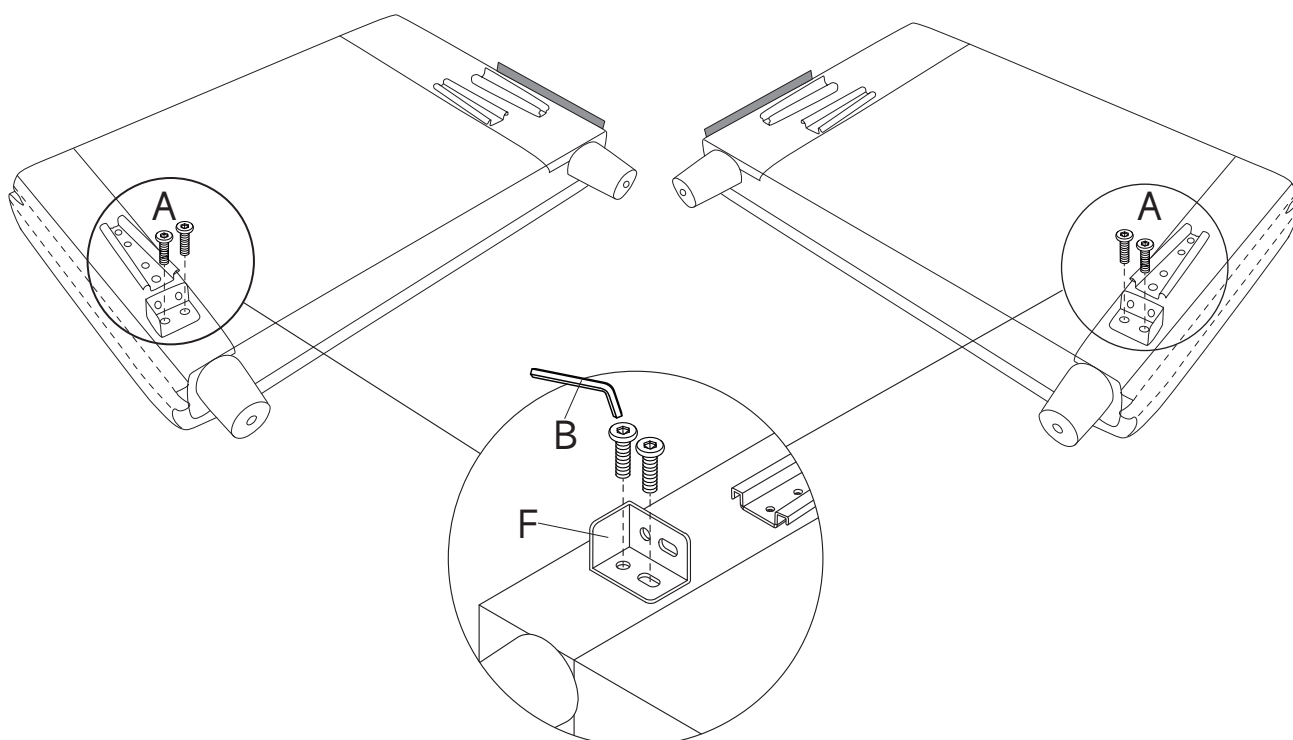


STEP 3

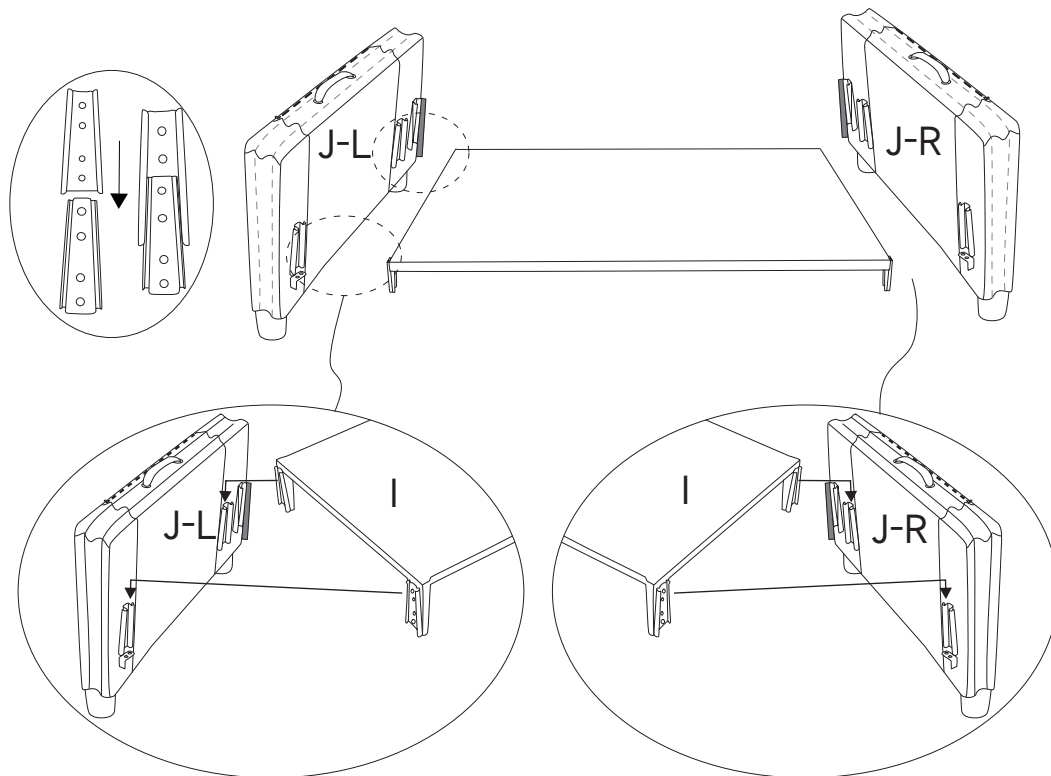


STEP 4


Press armrest down
to make it wider.

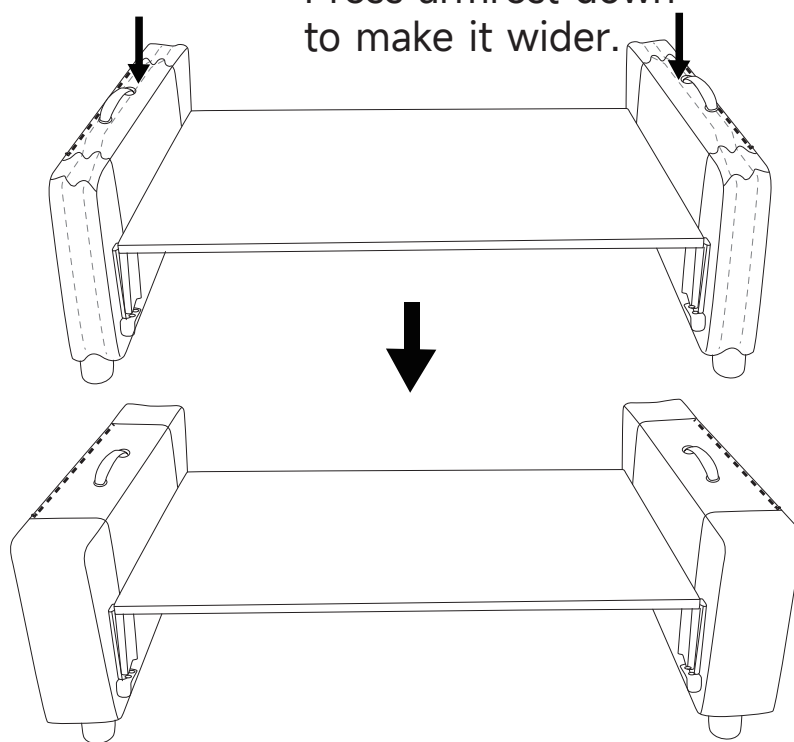


The armrest after connect the
seat frame (#J)

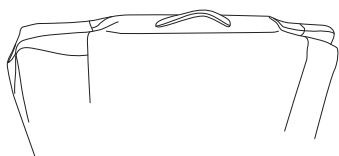


b. Separate the two panels inside
the armrest a little.

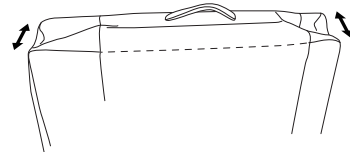

c. Push the wood frame line as
arrow shows slightly.




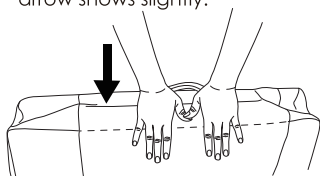


d. The armrest become wider.


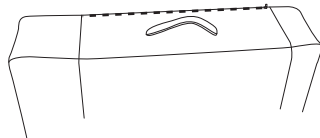


STEP 5


	AX2
	BX1
	DX1

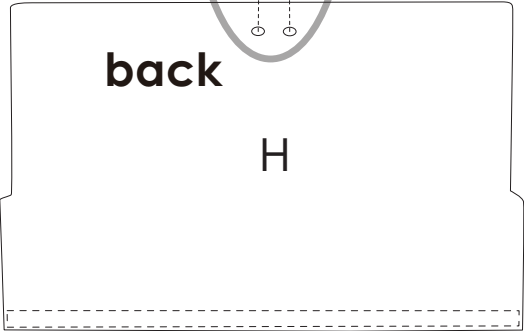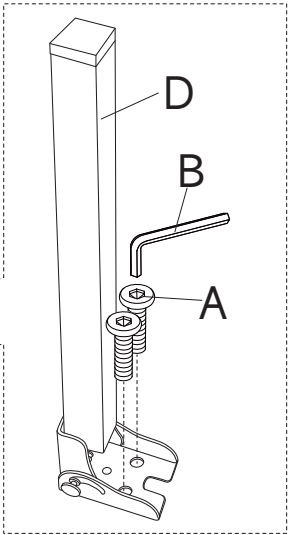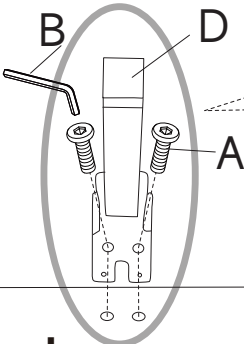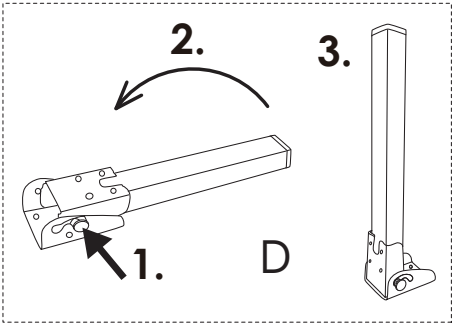


STEP 6

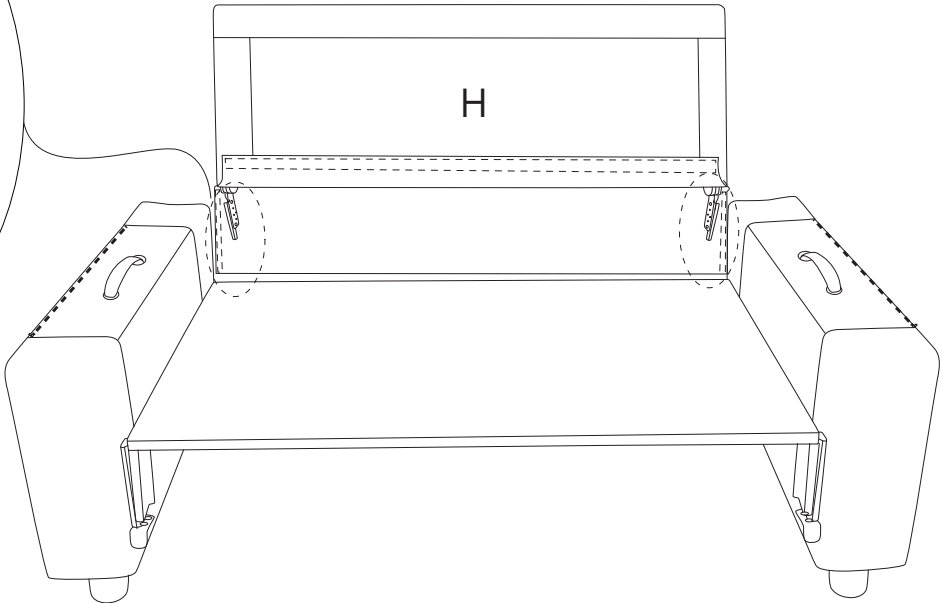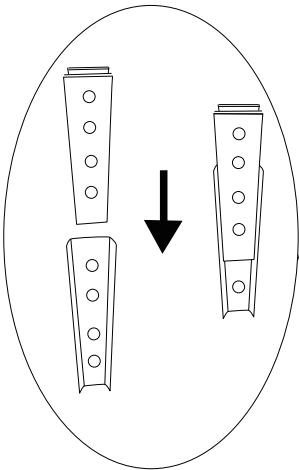

STEP 7

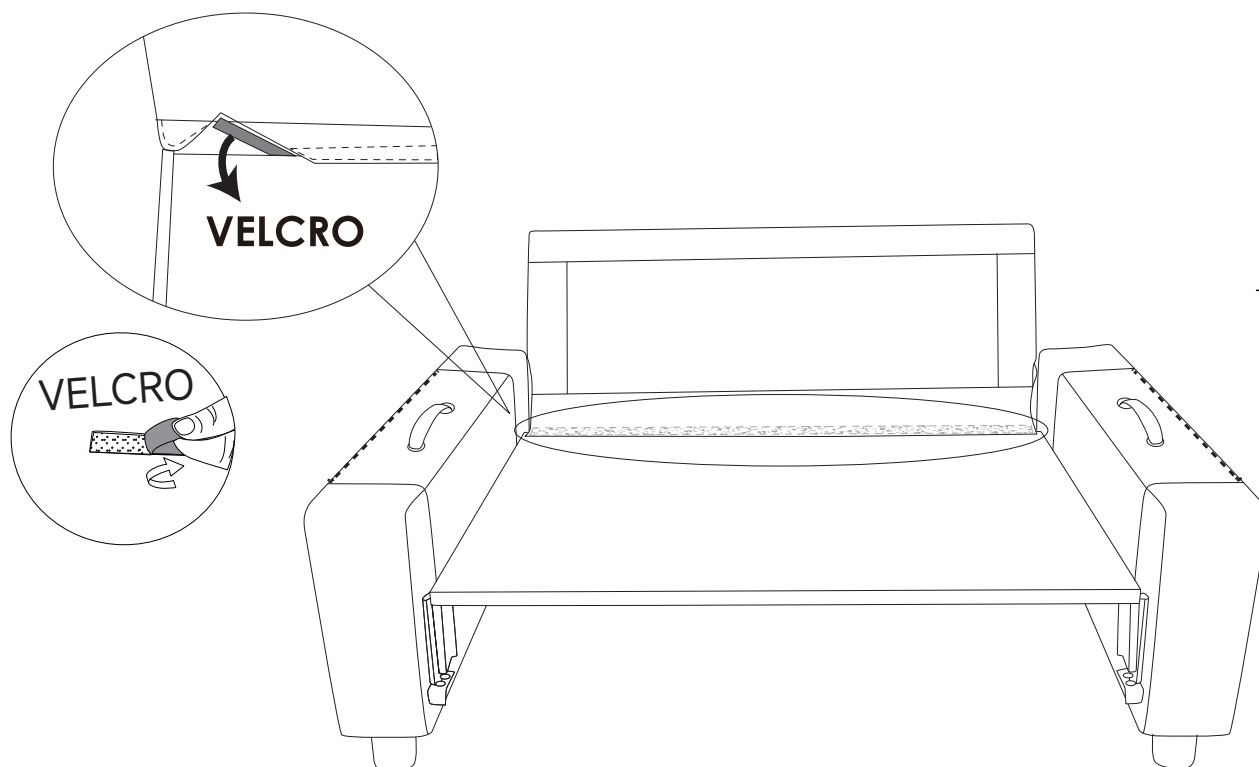


STEP 8


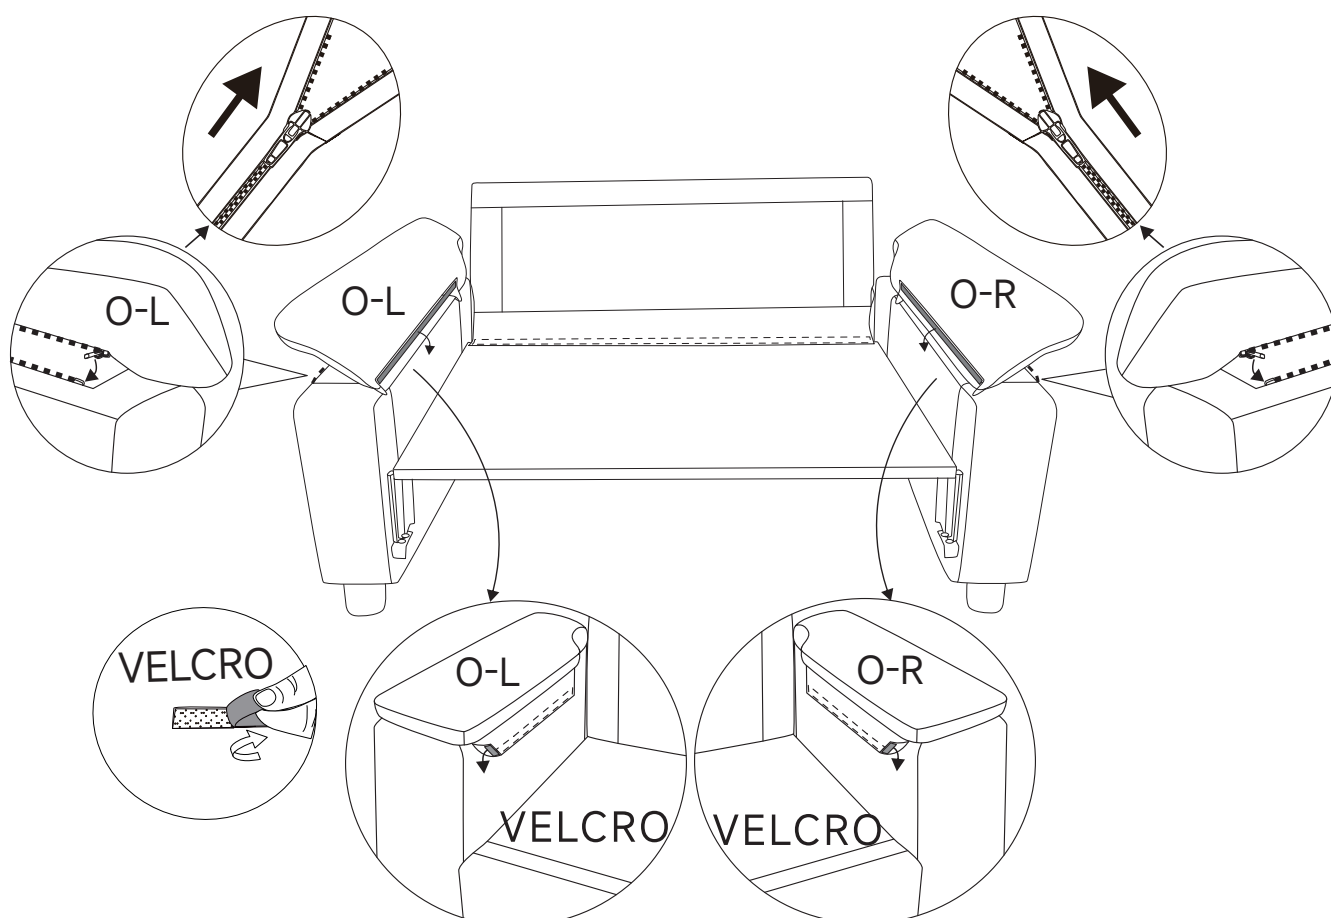


STEP 9

The zipper side
faces inwards


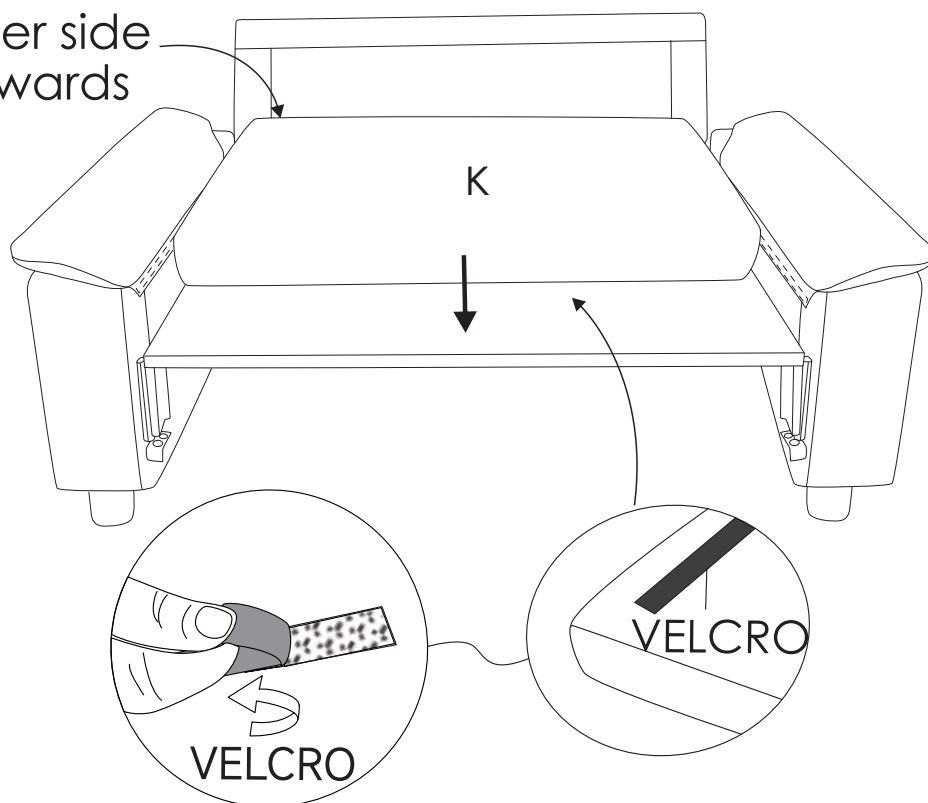


STEP 10

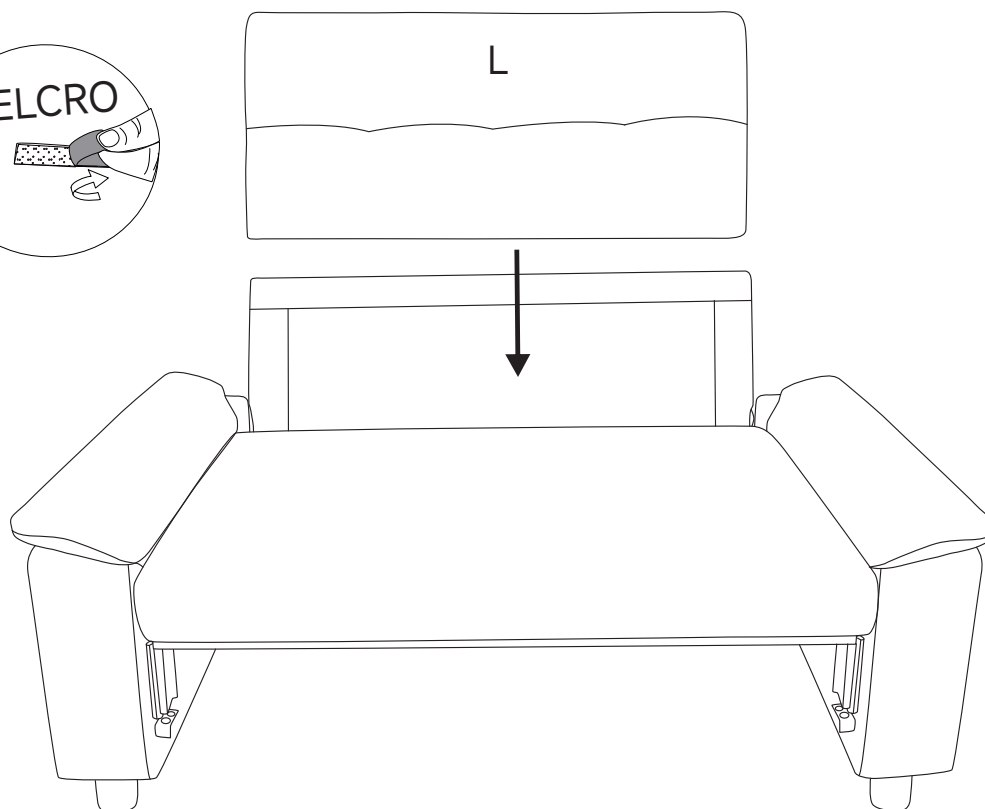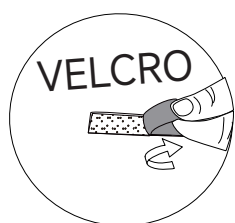


STEP 11


	AX8
	BX1
	EX4

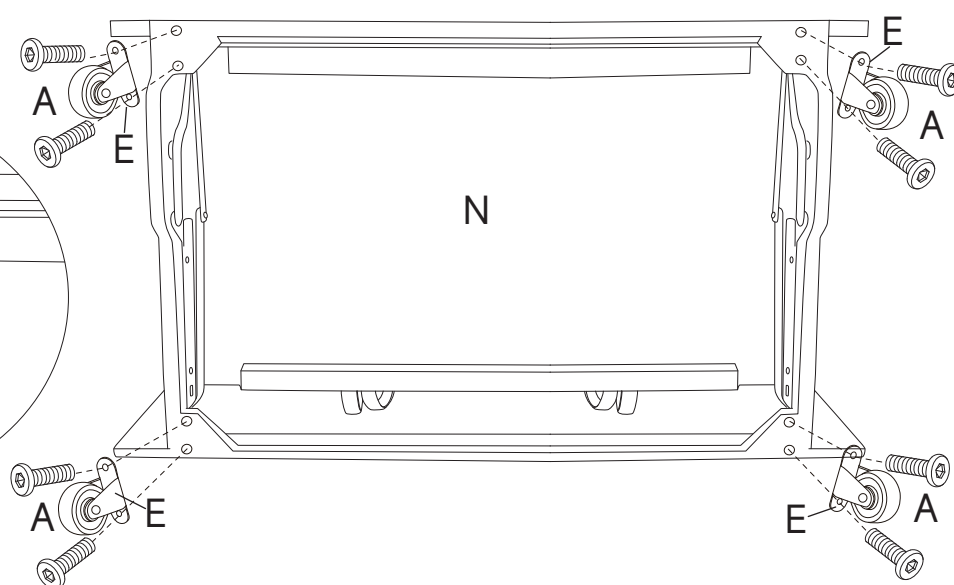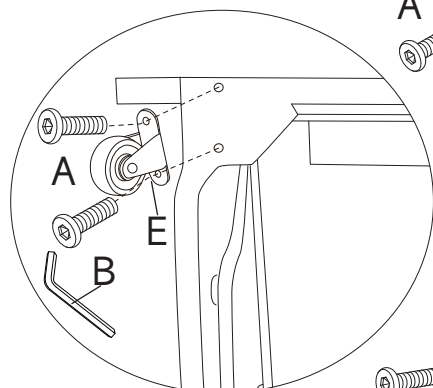

STEP 12

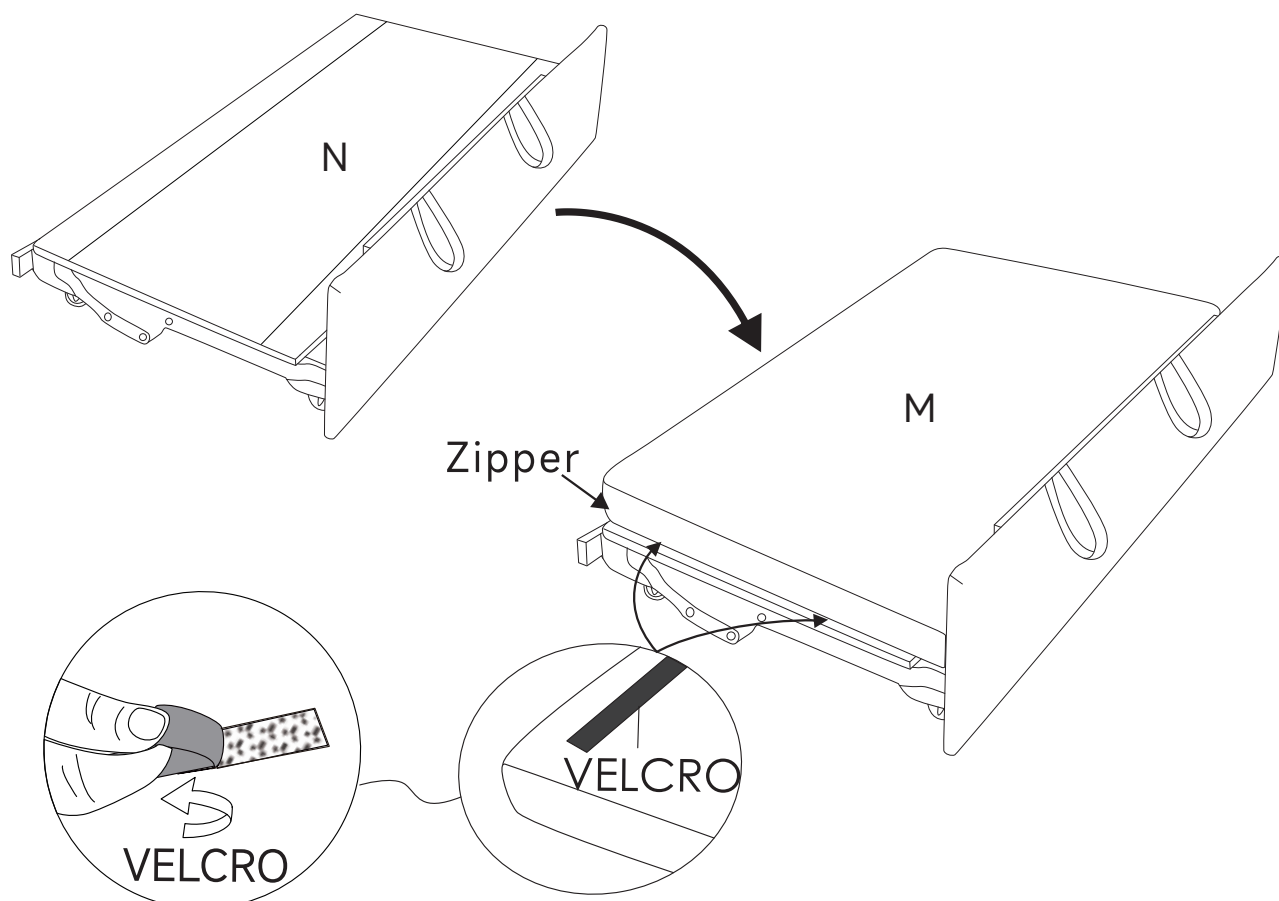

STEP 13

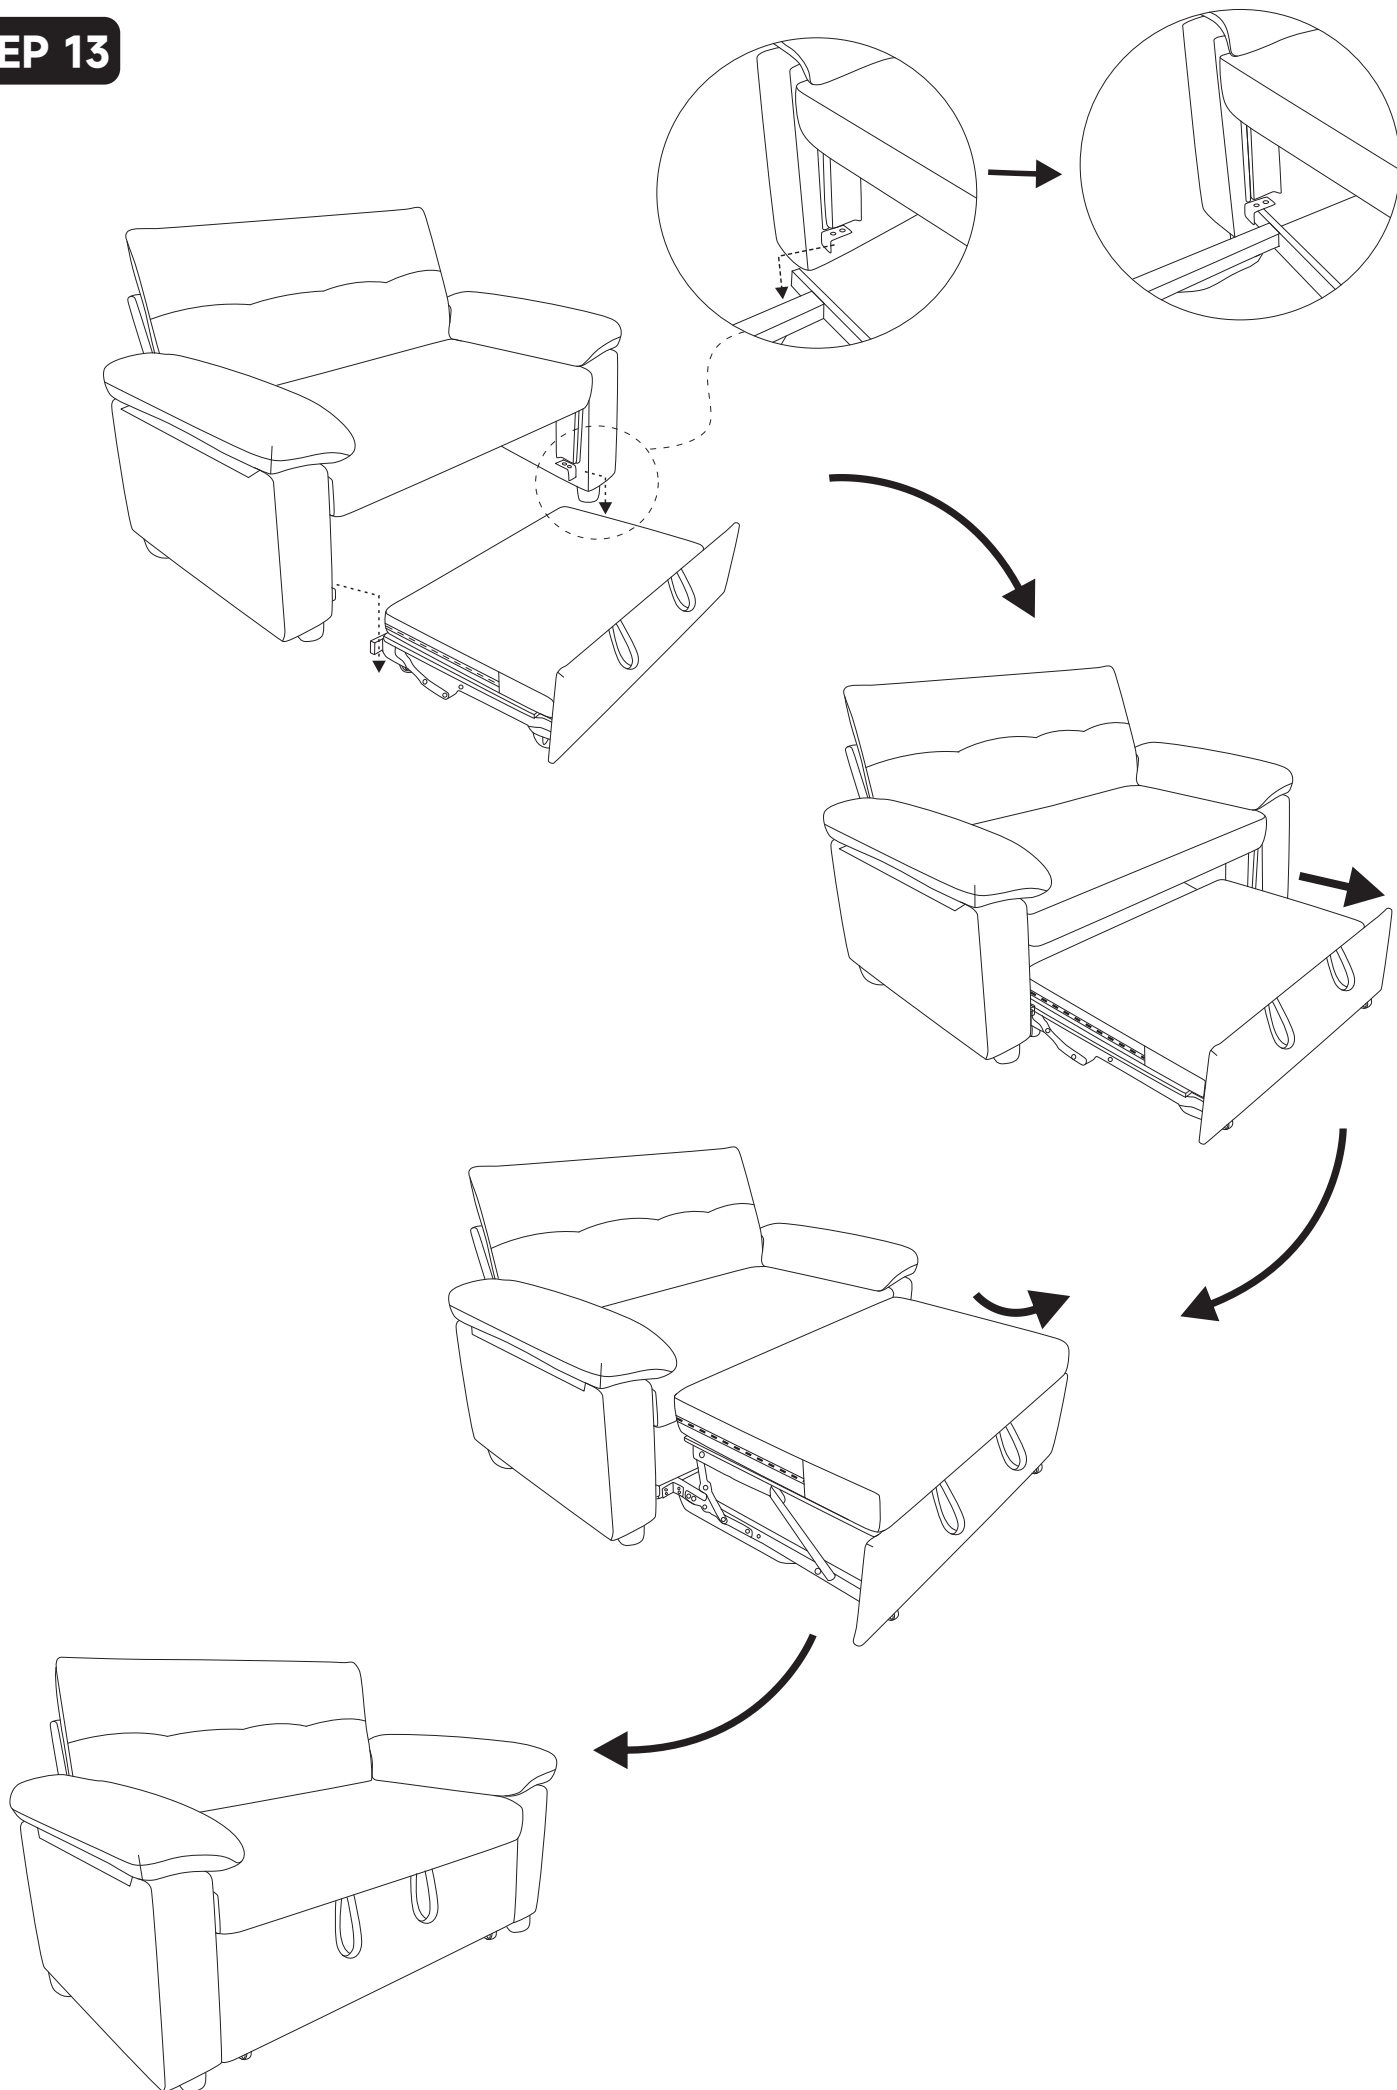

STEP 14

