


# Under Window Bookcase

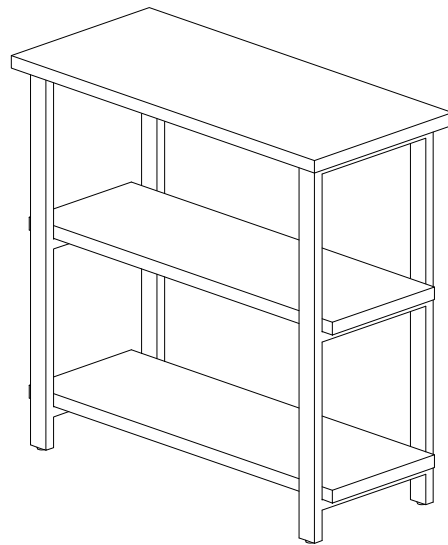

Thank you for purchasing the Under Window Bookcase. We have found it helpful to have a second person present during the assembly process.

## Under Window Bookcase Assembly Instructions

### Parts

| NO. | DRAWING | DESCRIPTION | QTY |
|-----|---------|-------------|-----|
| A   |         | METAL FRAME | 2   |
| B   |         | TOP         | 1   |
| C   |         | SHELF       | 2   |

| NO. | DRAWING | DESCRIPTION  | QTY |
|-----|---------|--------------|-----|
| D   |         | M6x35MM BOLT | 12  |
| E   |         | ALLEN KEY    | 1   |
| F   |         | ANTI-TIP     | 1   |

## Step 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

---


## Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish

---


## Step 3

Lay Metal Frame Assembly (A) on a non abrasive surface. Attach Top (B) to Metal Frame (A) using 4-M6x35MM Hex Bolts (D). NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

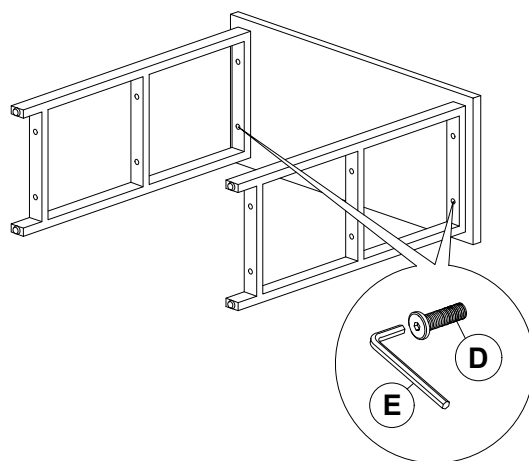


## Step 4

Attach Shelf (C) to Metal Frame (A) using 8-M6x35MM Hex Bolts (D). NOTE: TIGHTEN ALL BOLTS AT THIS TIME !

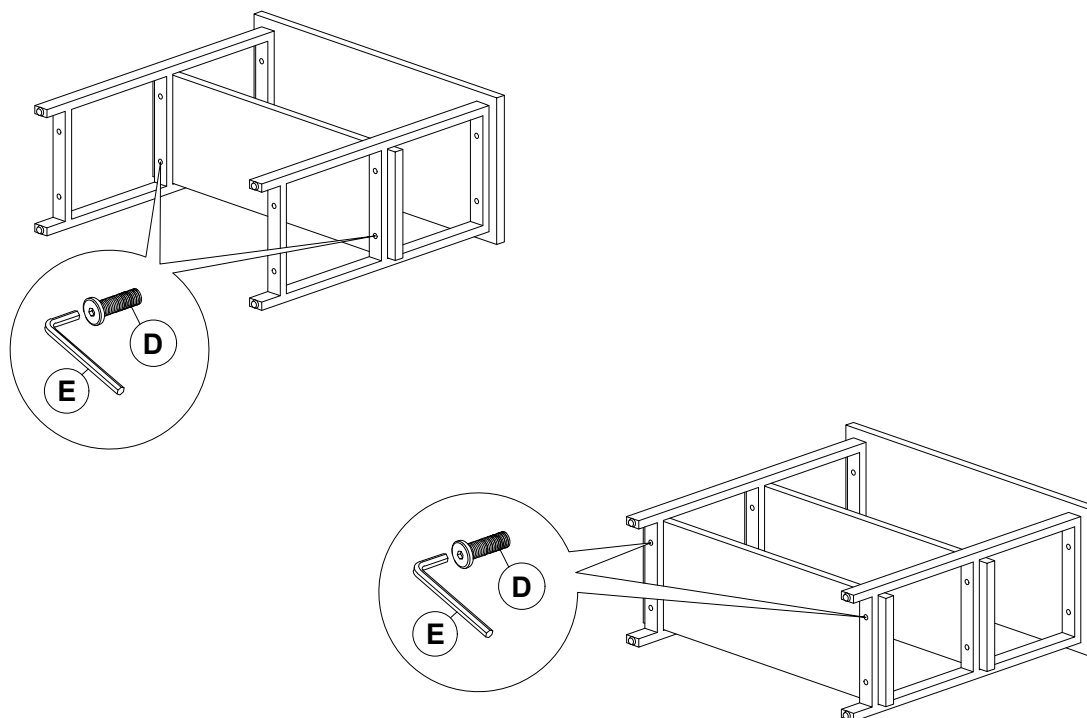

## Step 5

Set Under Window Bookcase upright. Adjust levelers in bottom of legs as necessary. Attach to Wall using Anti Tip Kit

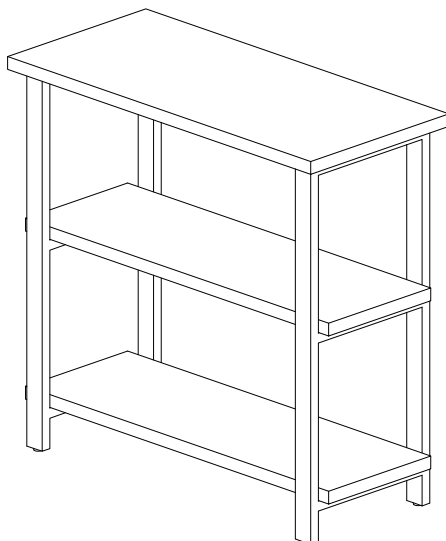

---

## CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

---