



ASSEMBLY INSTRUCTIONS












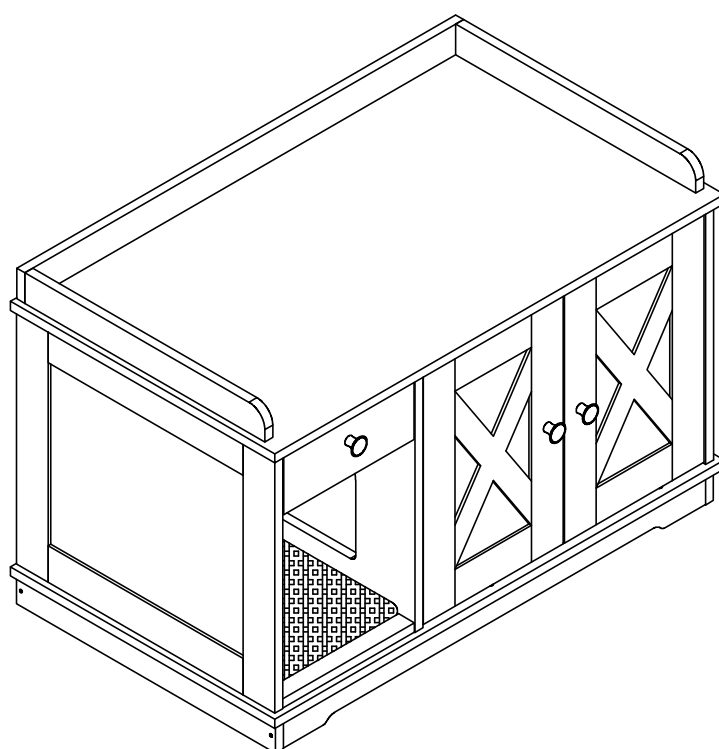


NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS


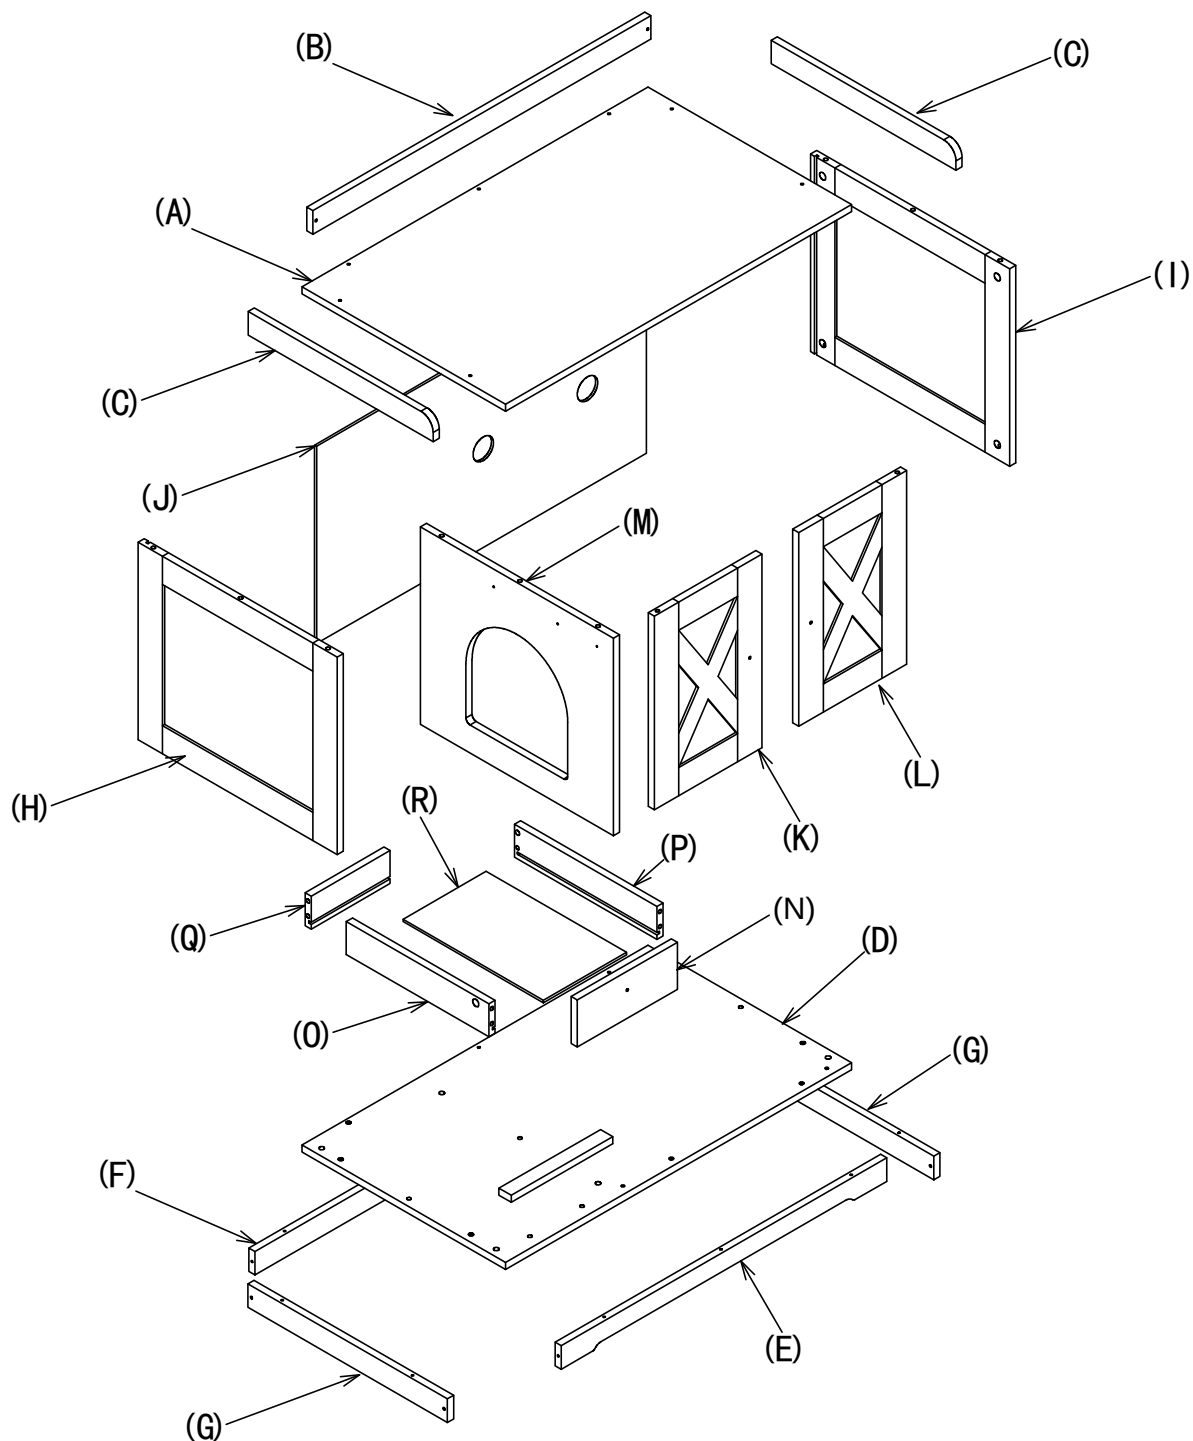


Notice:








1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

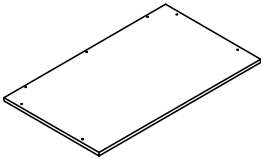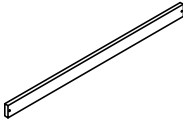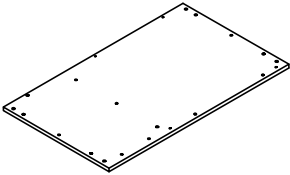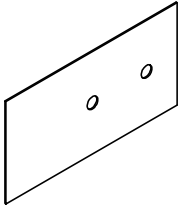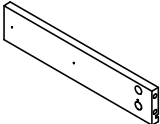PART LIST		
A  Top Panel (1PC)	B  Roof Rear Guardrail (1PC)	C  Roof Side Guardrail (2PCS)
D  Bottom Panel (1PC)	E  Front Strip (1PC)	F  Base Strip (1PC)
G  Base Strake (2PCS)	H  Left Frame (1PC)	I  Right Frame (1PC)
J  Back Panel (1PC)	K  Left Door (1PC)	L  Right Door (1PC)
M  Center Panel (1PC)	N  Drawer Panel (1PC)	O  Drawer Left (1PC)

PART LIST

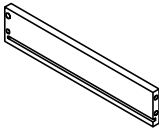
P	Q	R
		
Drawer Right (1PC)	Drawer Back Panel (1PC)	Drawer Bottom (1PC)

HARDWARE LIST

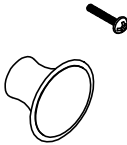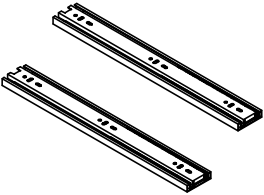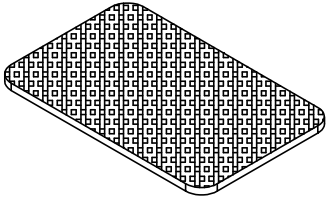
1		2		3	
Bolt M5*40 (22PCS)		Bolt M6*20 (2PCS)		Wood Screw M3.5*12 (16PCS)	
4		5		6	
Cam Bolt (18PCS)		Big Cam Lock (18PCS)		Wood Dowel Ø8*40 (8PCS)	
7		8		9	
Portal Axle (4PCS)		Handle (3PCS)		Door Suction (2PCS) Wood Screw M3*16 (4PCS)	
10		11		12	
Sliding Rail (2PCS)		Square Tube (1PC)		Cat litter Mat (1PC)	
13		14		15	
Backplane Buckle (4PCS)		Beauty Paste (18PCS)		Allen Key 3mm (1PC) Allen Key 4mm (1PC)	

CARTON CONTENT:


N704P265258K:

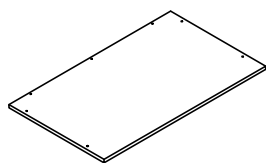


A Top Panel (1PC)

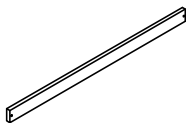


B Roof Rear Guardrail (1PC)




C Roof Side Guardrail (2PCS)

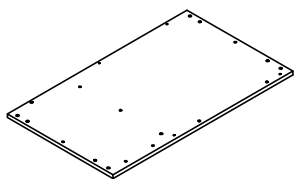


D Bottom Panel (1PC)

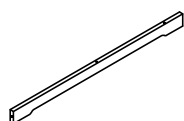


E Front Strip (1PC)

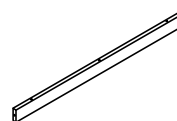


F Base Strip (1PC)




G Base Strake (2PCS)




H Left Frame (1PC)



I Right Frame (1PC)

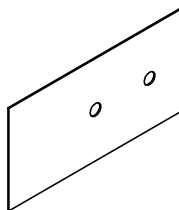


J Back Panel (1PC)




K Left Door (1PC)




L Right Door (1PC)



M Center Panel (1PC)




N Drawer Panel (1PC)

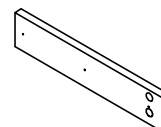

O Drawer Left (1PC)

CARTON CONTENT:


N704P265258K:

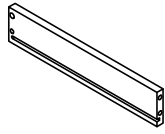

P Drawer Right (1PC)




Q Drawer Back Panel (1PC)




R Drawer Bottom (1PC)

STEP 1

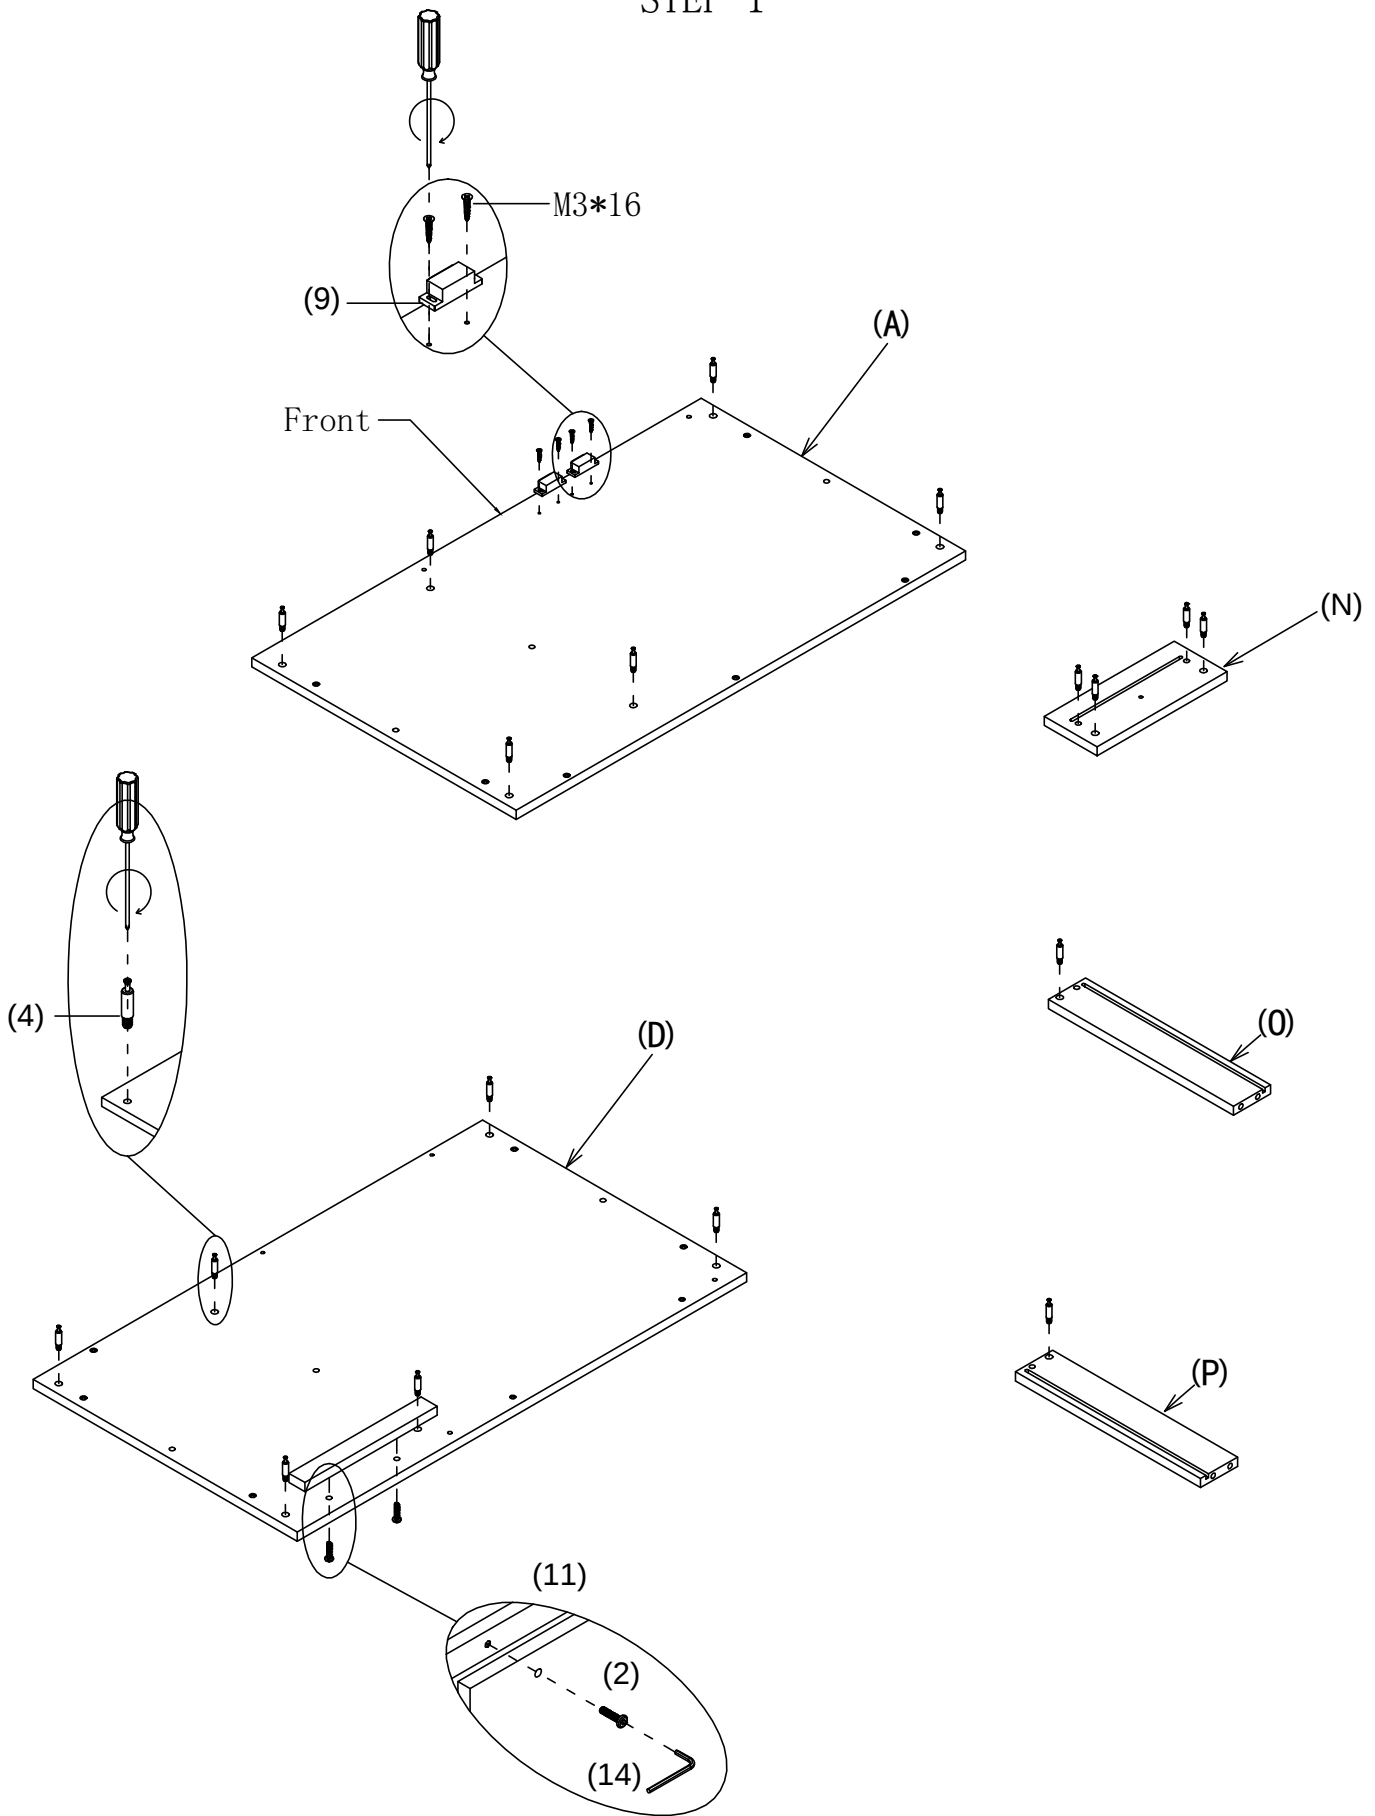


2		Bolt	2PCS	9		Door Suction/Wood Screw	2PCS
4		Cam Bolt	18PCS	11		Square Tube	1PC
				15		Allen Key 4mm	1PC

STEP 2

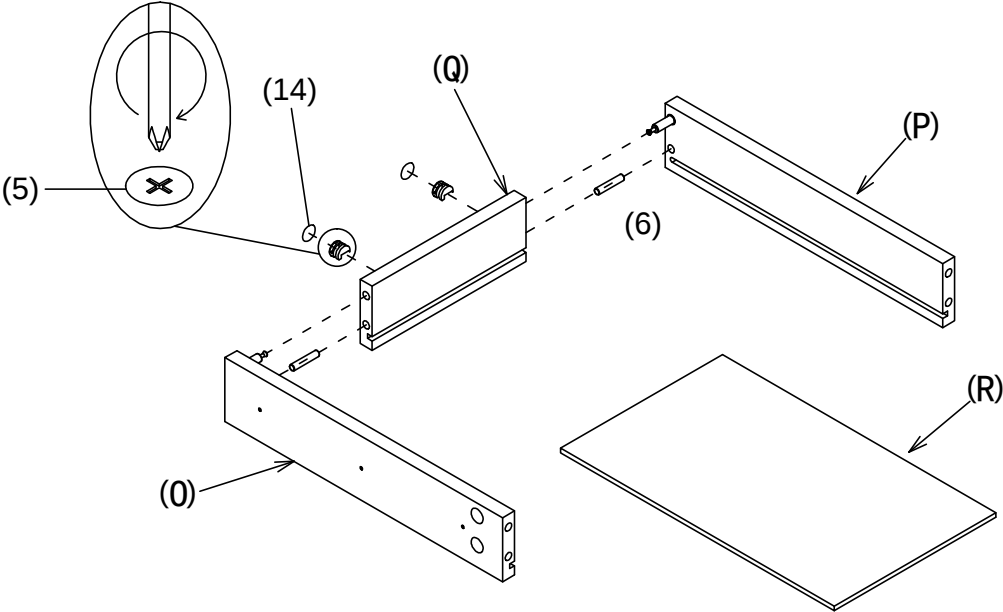

5		Big Cam Lock	2PCS				
6		Wood Dowel	2PCS	14		Beauty Paste	2PCS

STEP 3

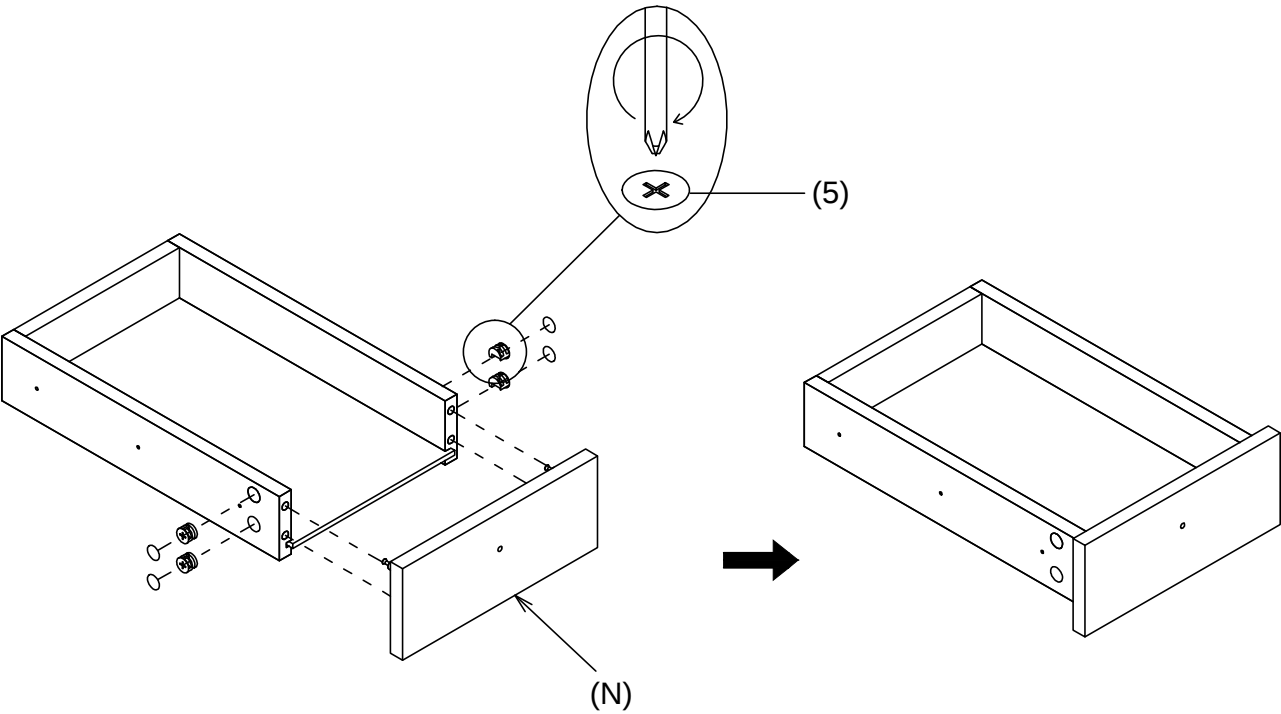

5		Big Cam Lock	4PCS	14		Beauty Paste	4PCS
---	--	--------------	------	----	--	--------------	------

PRE-FIX DRAWER RUNNER INSTRUCTIONS

EN_NOTE: Pull inner and outer drawer runners apart before fixing them to panels.


FR_REMARQUE: Avant de fixer les glissières de tiroir aux panneaux, tirez vers l'extérieur et poussez vers l'intérieur de chacun des tiroirs.

ES_NOTA: retire los rieles interiores y exteriores antes de fijarlos a los paneles.

PT_NOTA: Separar as corrediças das gavetas interiores e exteriores antes de fixar para os painéis.

DE_HINWEIS: Ziehen Sie die inneren und äußeren Schubladenführung auseinander, bevor Sie sie an den Platten befestigen.

IT_NOTA: Separare le guide interne ed esterne del cassetto prima di fissarle ai pannelli.



EN_Slide drawer runners apart until the drawer lock can be seen, as shown.

FR_Les glissières de tiroir doivent être ouvertes jusqu'à ce que la serrure du tiroir soit visible, comme indiqué.

ES_Deslice a un lado los rieles del cajón hasta que se pueda ver el cierre del armario, tal y como se muestra.

PT_Deslizam-se as gavetas até?se poder ver o fecho da gaveta, como se mostra.

DE_Schieben Sie die Schubladenführungen auseinander, bis das Schubladenschloss sichtbar ist, gemäß der Abbildung.

IT_Far scorrere le guide del cassetto fino a quando non sia visibile il blocco di scorrimento, come mostrato.



OUTER RUNNER

INNER RUNNER

EN_Press and hold the drawer runner lock and then continue to slide drawer runners apart, as shown.


FR_En appuyant et en maintenant le verrouillage des glissières de tiroir, vous pouvez continuer à les écarter l'une de l'autre, comme indiqué.

ES_Mantenga presionado el cierre del riel del cajón y después continúe deslizando a un lado los rieles de los cajones, tal y como se muestra.

PT_Manter pressionado o fecho de gaveta e depois continuar a deslizar as corrediças da gaveta, como mostrado.


DE_Drücken und halten Sie die Verriegelung der Schubladenführung und schieben Sie die Schubladenführungen wie abgebildet weiter auseinander.

IT_Tenere premuto il blocco di scorrimento e quindi continuare a far scorrere la guida, come mostrato.

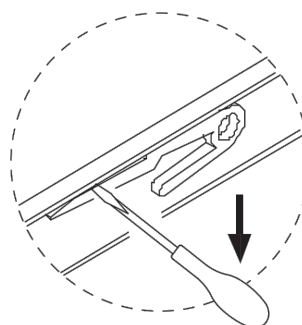


OUTER RUNNER

INNER RUNNER

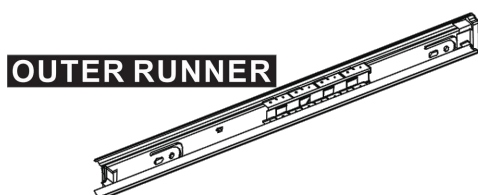

OUTER RUNNER

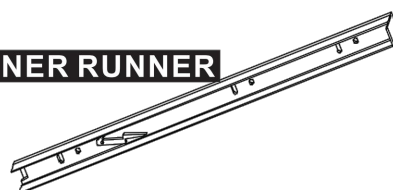

INNER RUNNER

EN_Your inner and outer drawer runners are ready to be fixed to panels.

FR_Il est possible, à présent, de fixer les glissières intérieures et extérieures de vos tiroirs sur des panneaux.


ES_Los rieles interiores y exteriores del cajón están listos para fijarse a los paneles.

PT_As corrediças das gavetas interiores e exteriores estão prontas para serem fixadas nos painéis.

DE_Ihre inneren und äußeren Schubladenführungen sind bereit, an den Platten befestigt zu werden.


IT_Le guide interne ed esterne sono pronte per essere fissate ai pannelli.

STEP 5

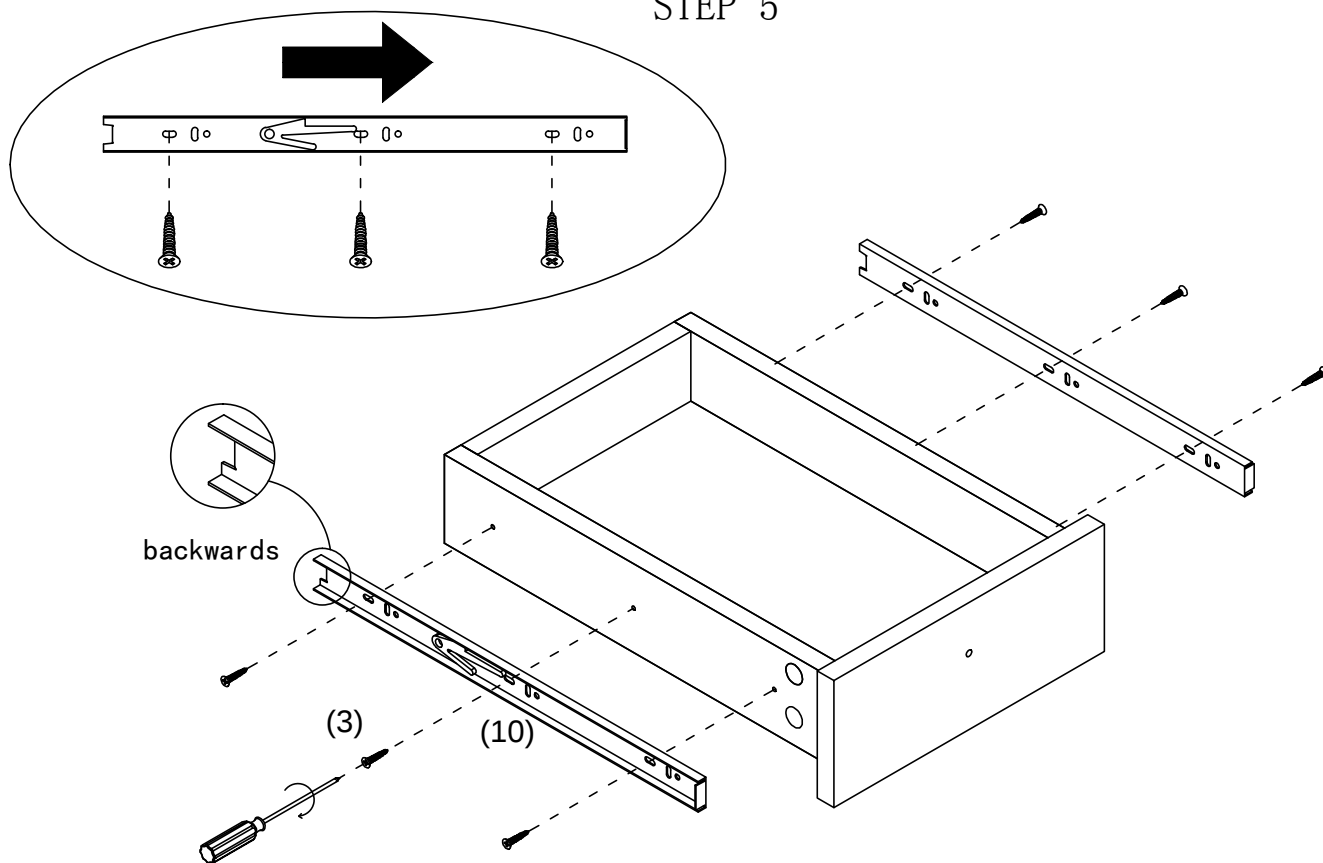


3		Wood Screw	6PCS	10		Sliding Rail	2PCS
---	--	------------	------	----	--	--------------	------

STEP 6

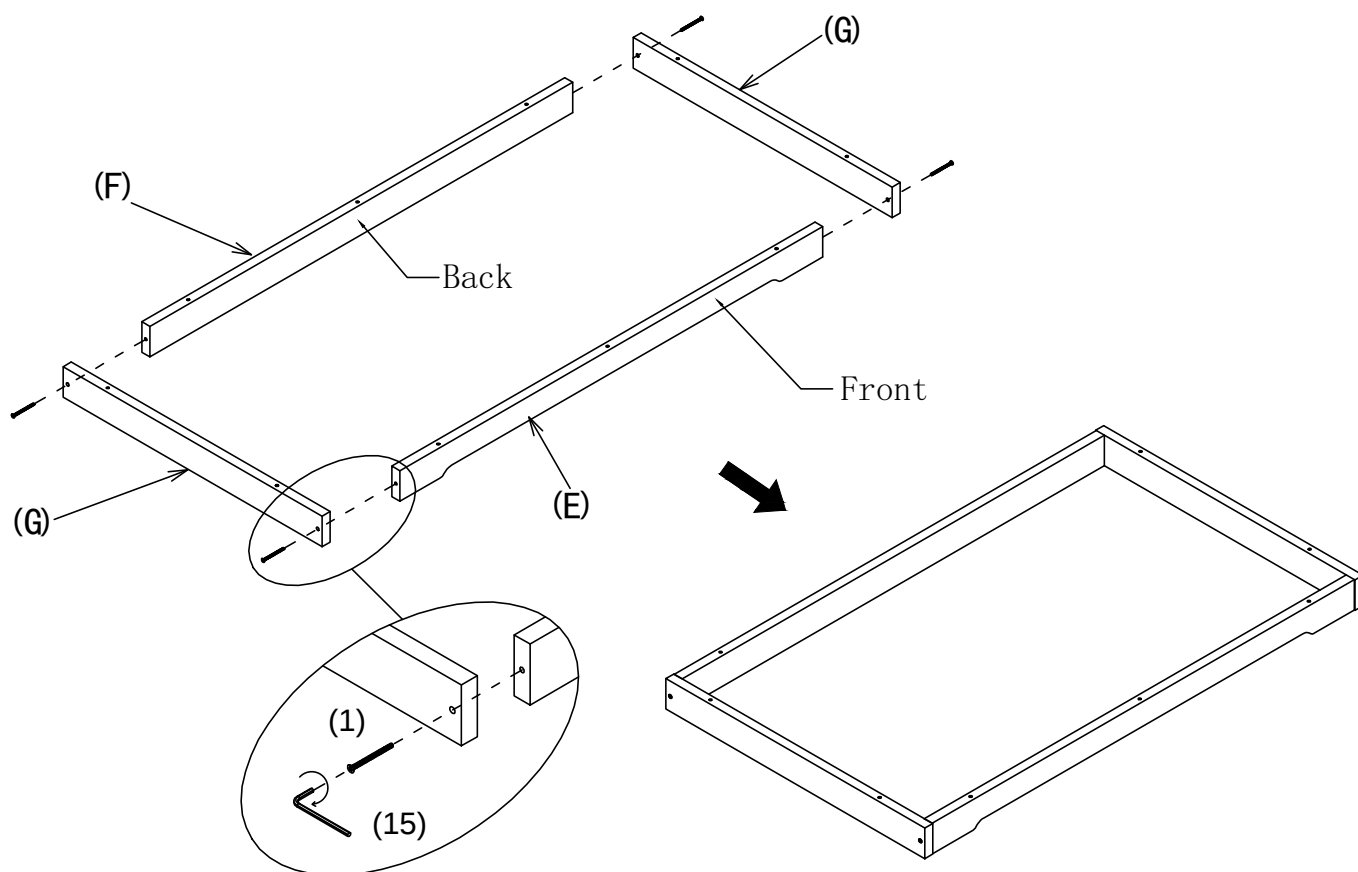

1		Bolt	4PCS	15		Allen Key 3mm	1PC
---	--	------	------	----	--	---------------	-----


STEP 7

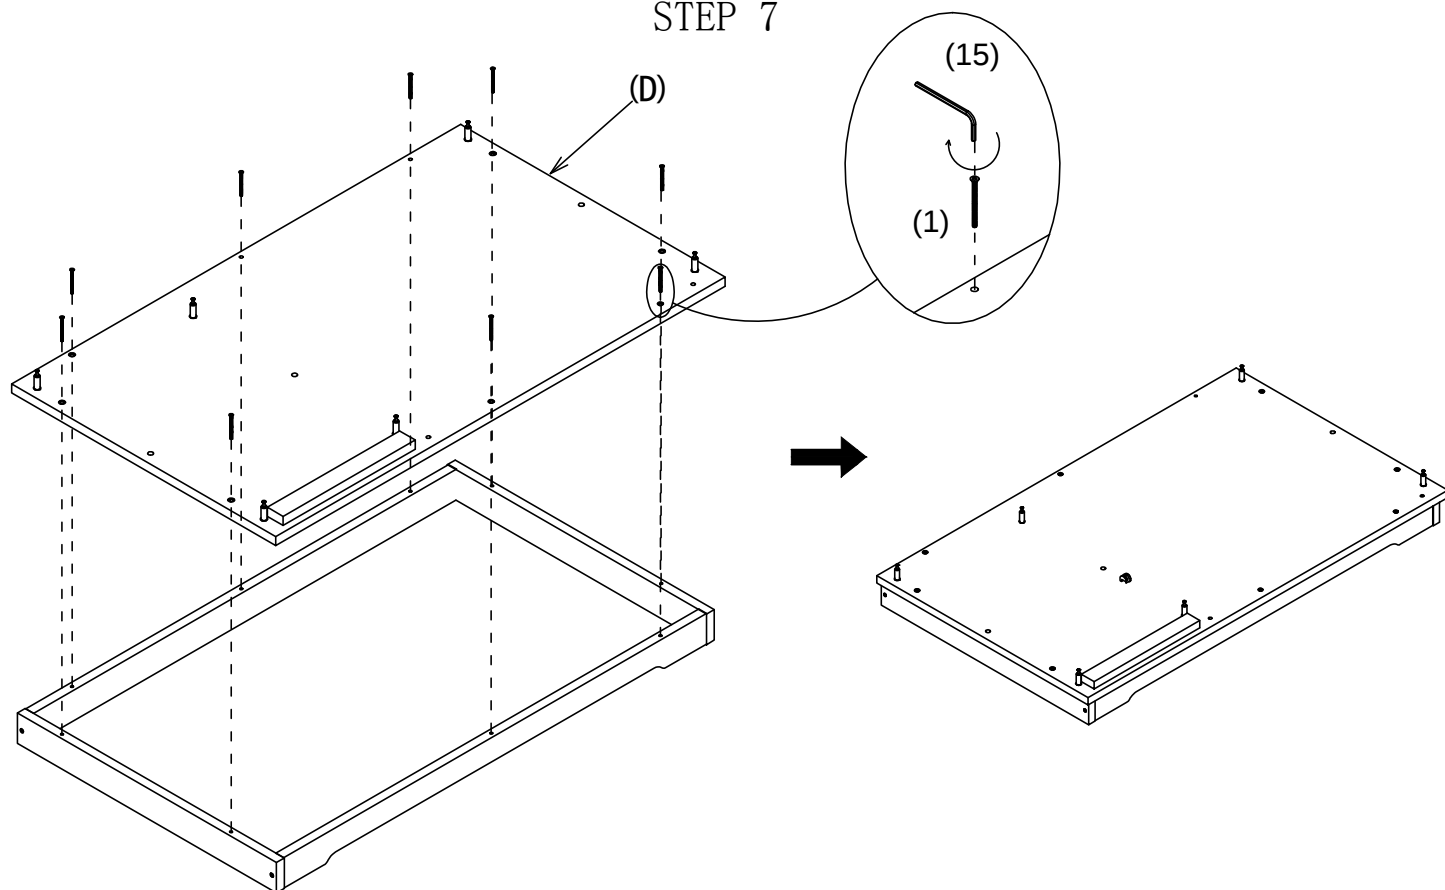

1		Bolt	9PCS	15		Allen Key 3mm	1PC
---	---	------	------	----	---	---------------	-----


STEP 8

The hole is on the left.

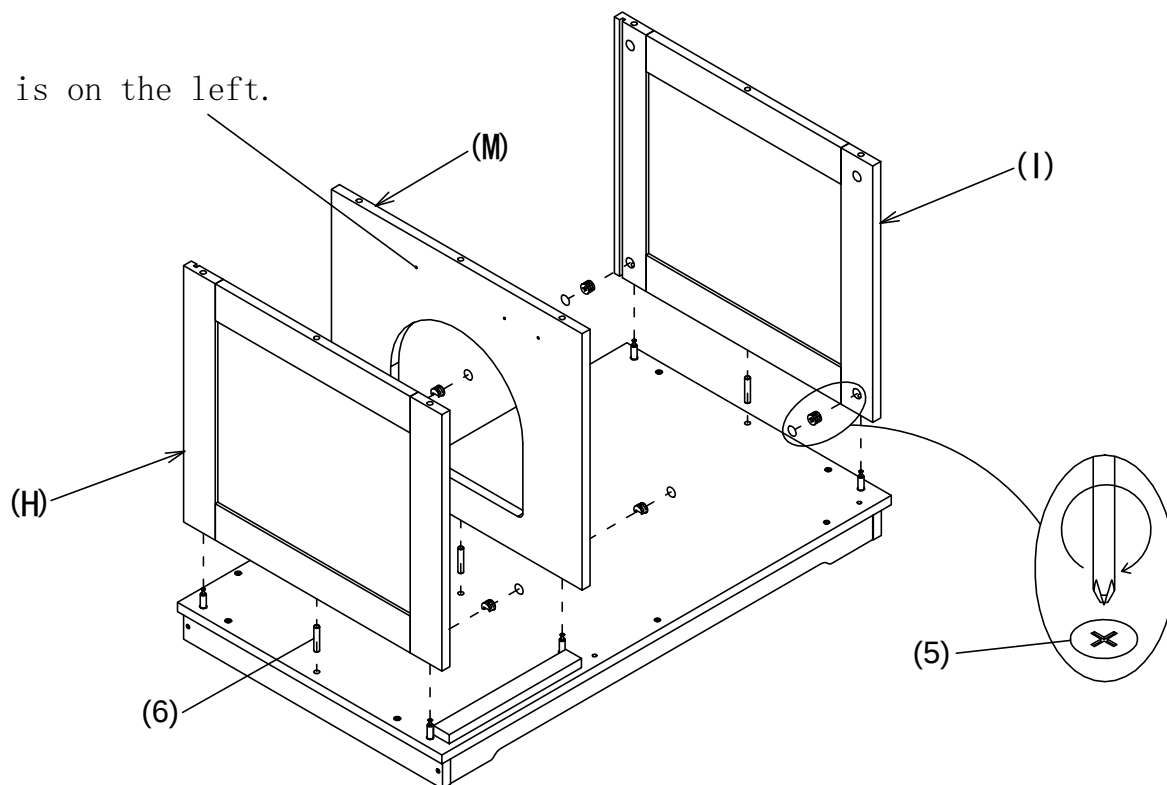


5		Big Cam Lock	6PCS	14		Beauty Paste	6PCS
6		Wood Dowel	3PCS				

STEP 9

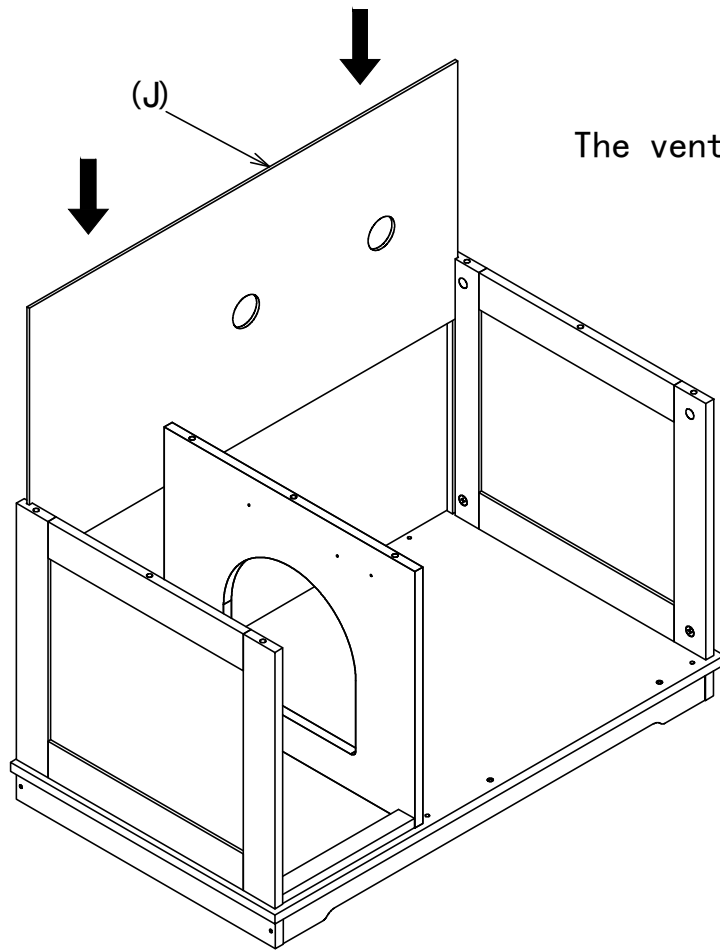

STEP 10

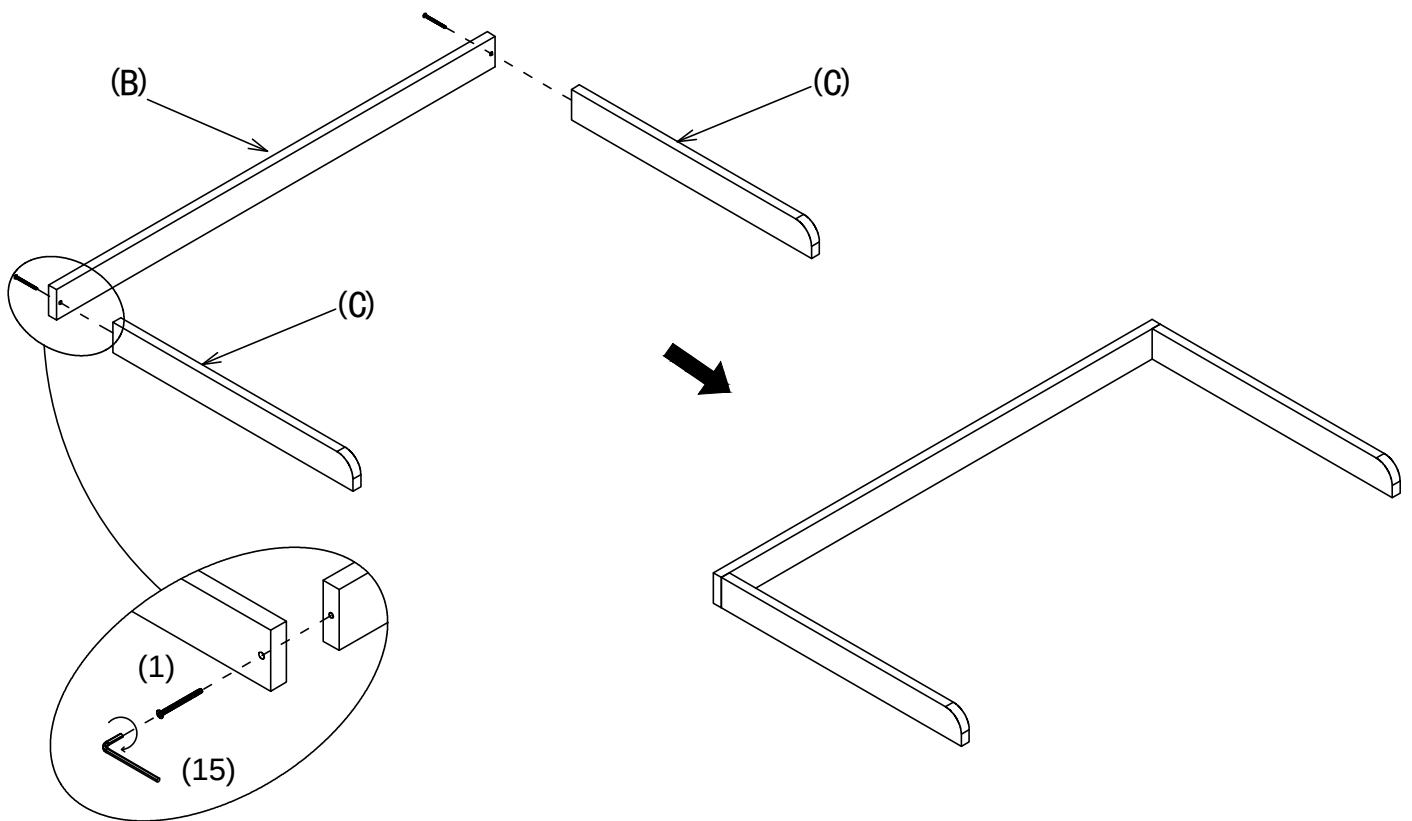

1



Bolt

2PCS


15



Allen Key 3mm


1PC

STEP 11

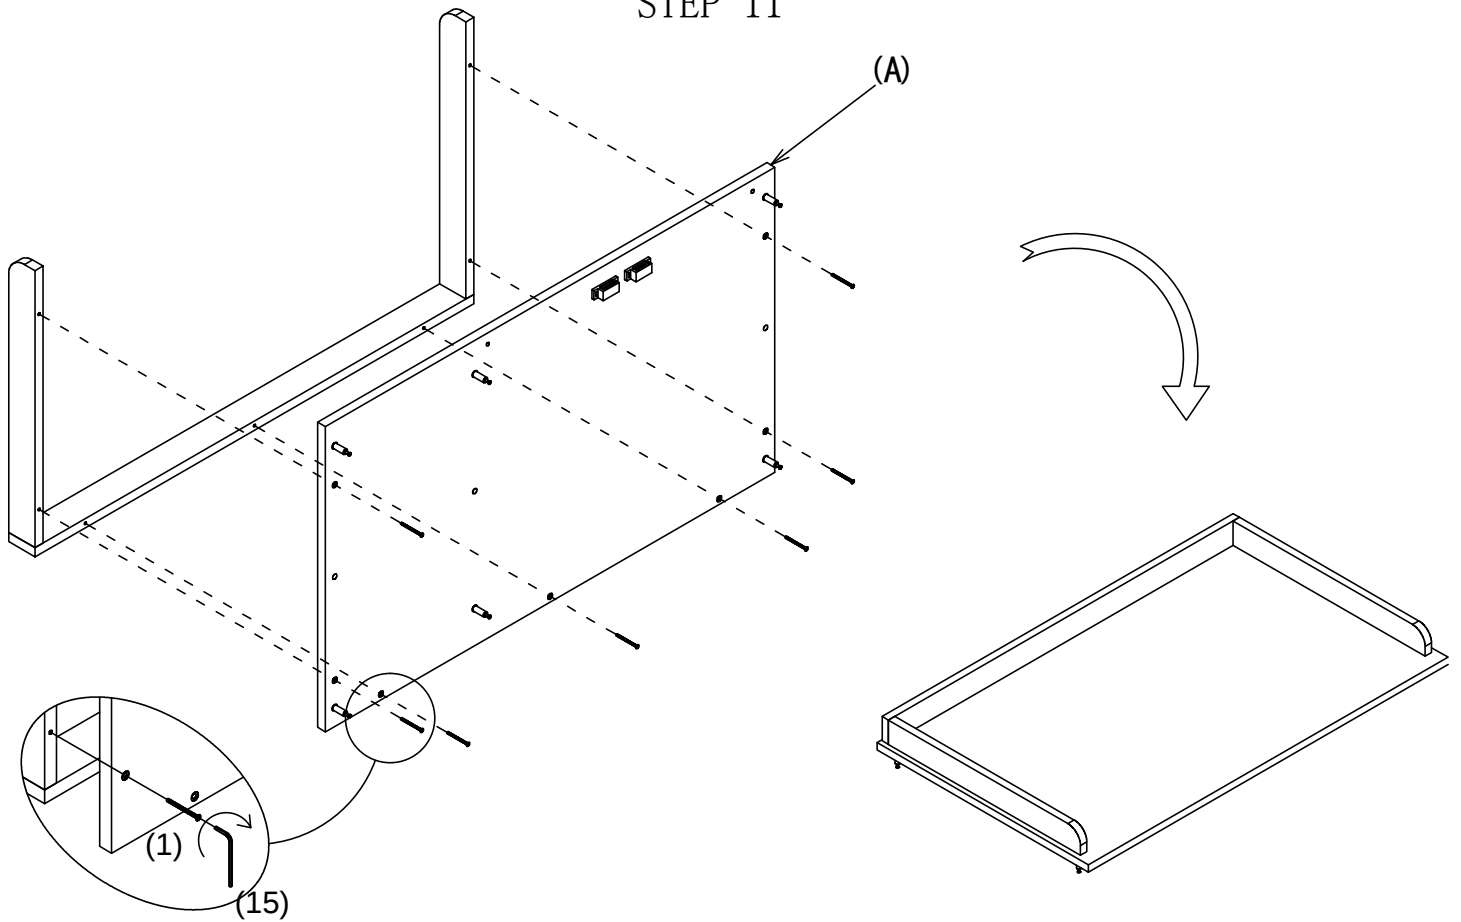





1		Bolt	7PCS	15		Allen Key 3mm	1PC
---	--	------	------	----	--	---------------	-----

STEP 12

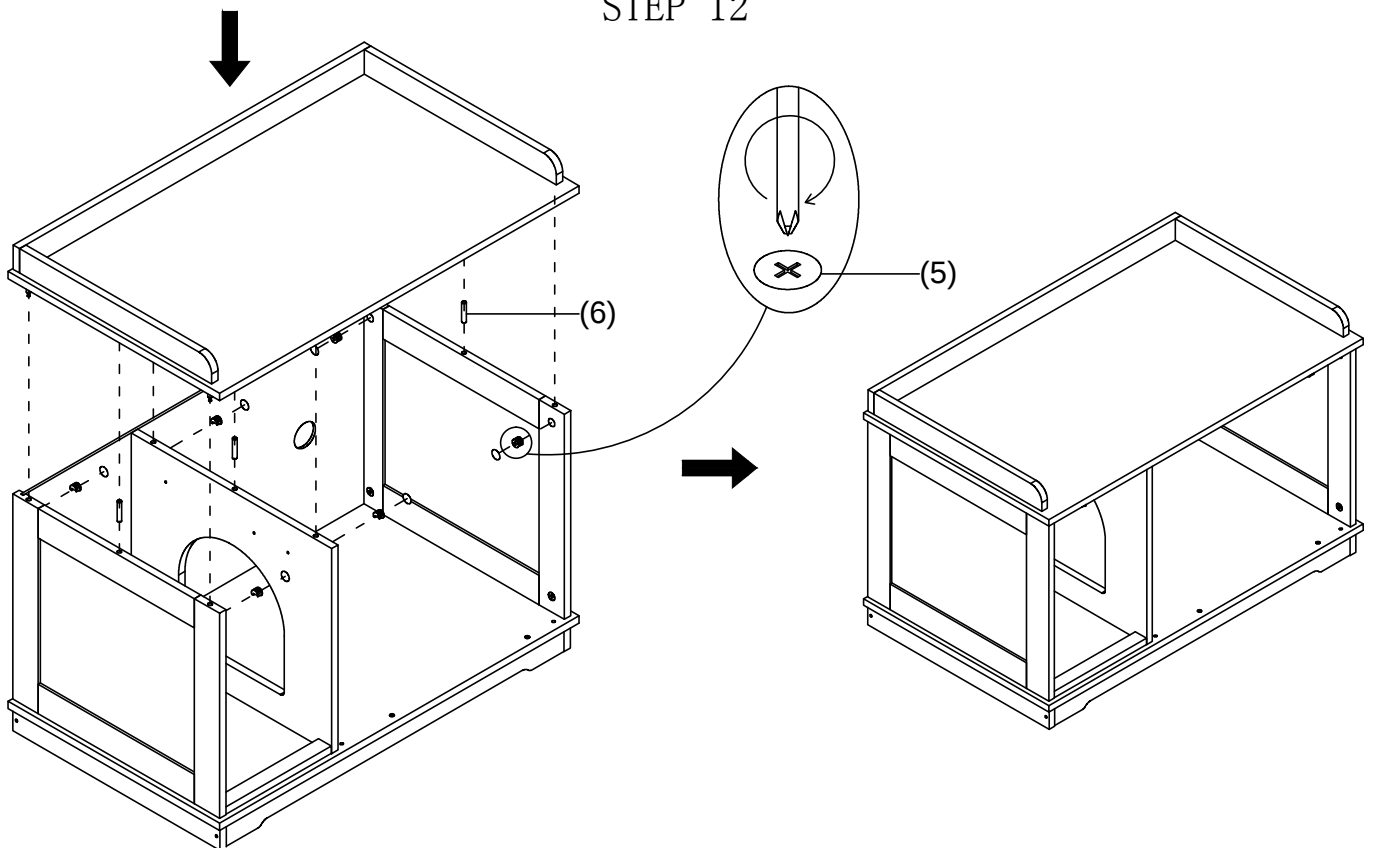


5		Big Cam Lock	6PCS	14		Beauty Paste	6PCS
6		Wood Dowel	3PCS				

STEP 13

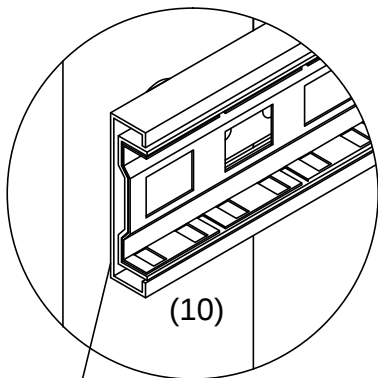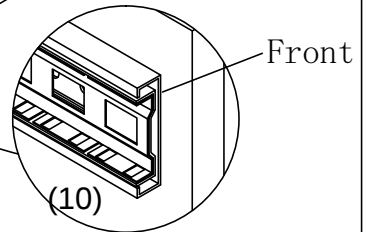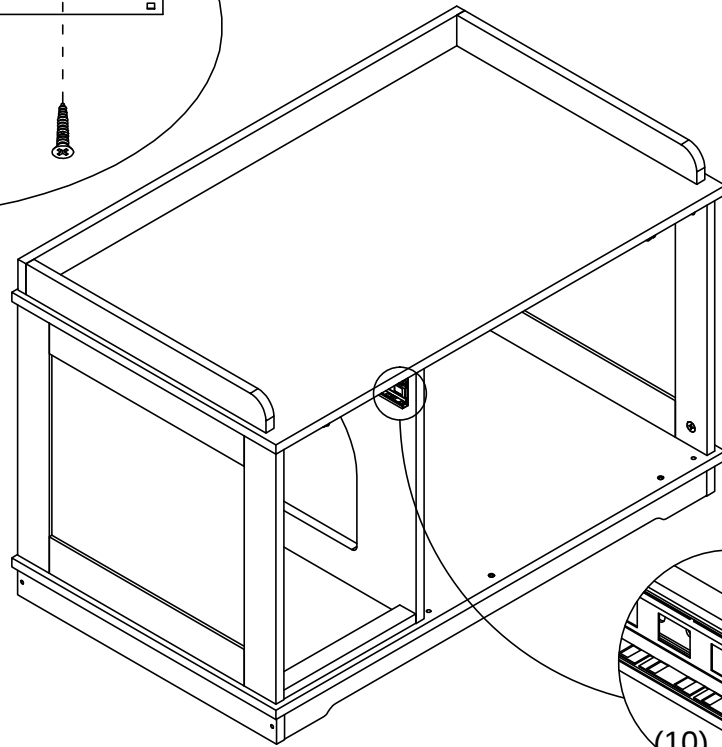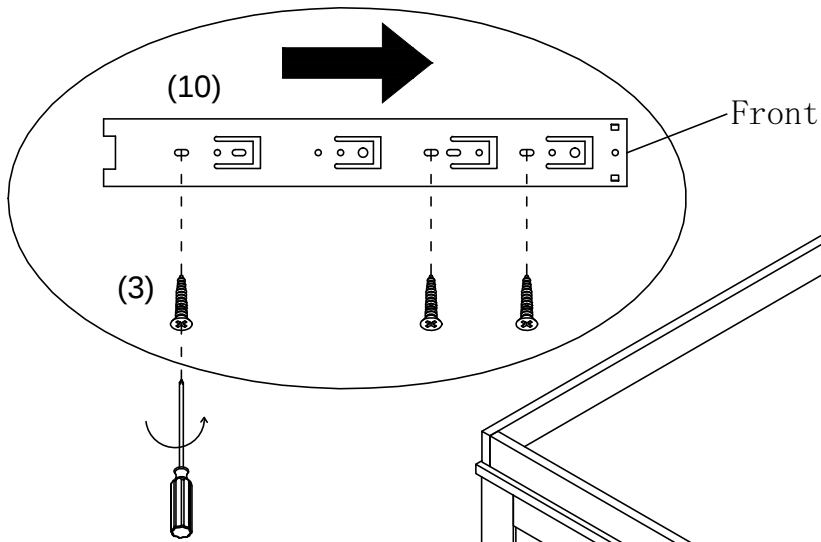

Front

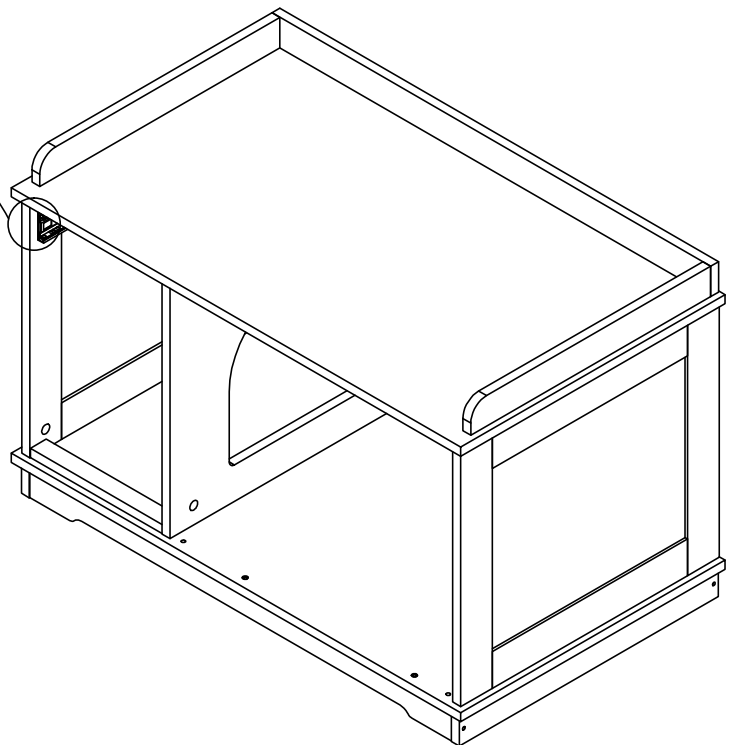

3



Wood Screw

6PCS


10



Sliding Rail


2PCS

STEP 14

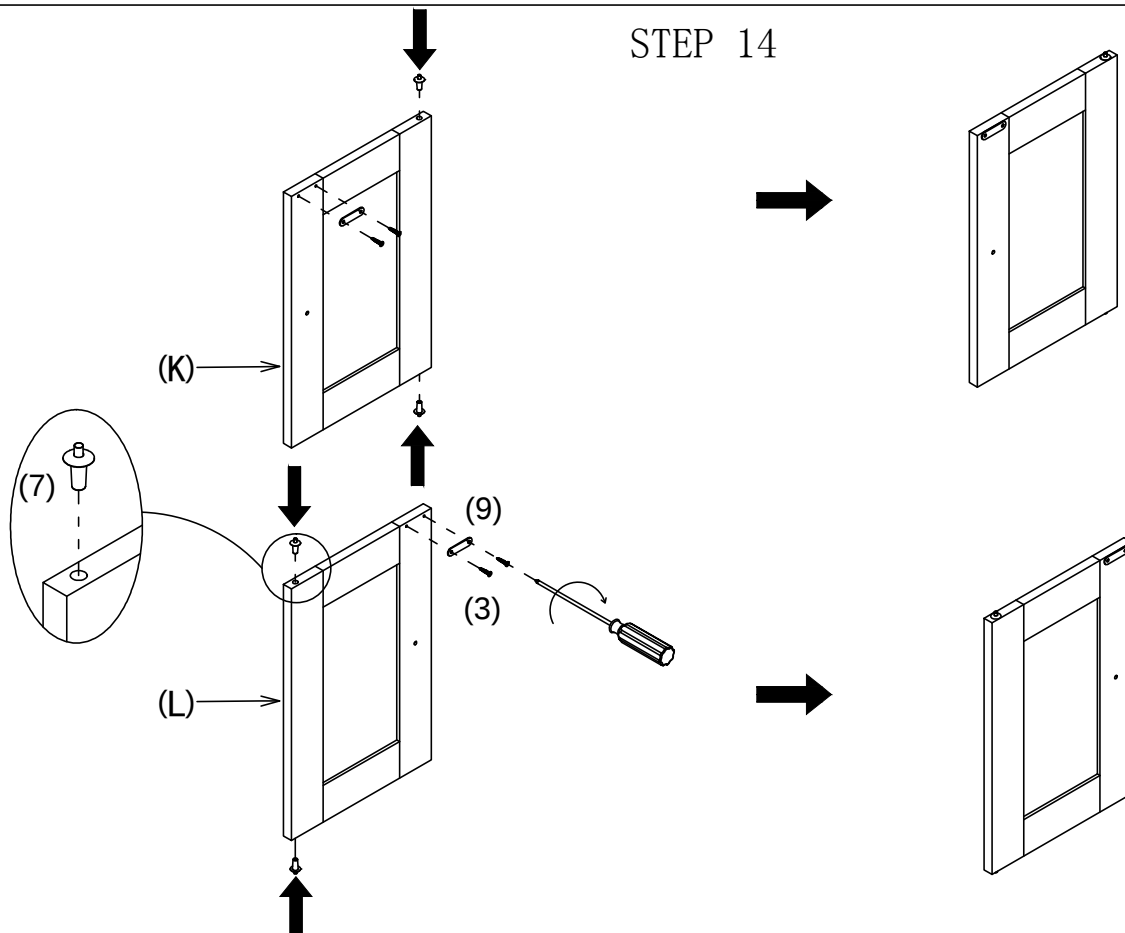

3		Wood Screw	4PCS
7		Portal Axle	4PCS
9		Door Suction	2PCS


STEP 15

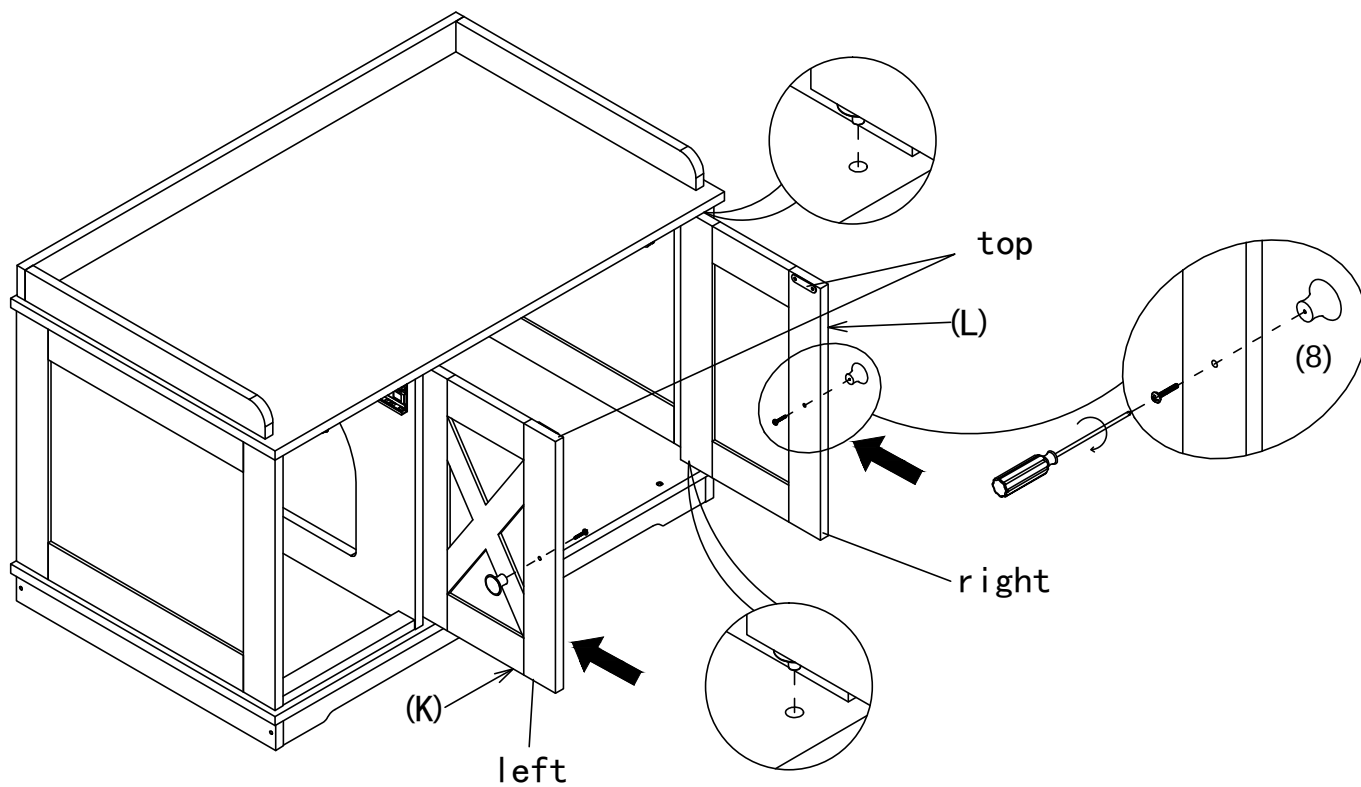


Left and right door panels.

8		Handle	2PCS
---	--	--------	------

STEP 16

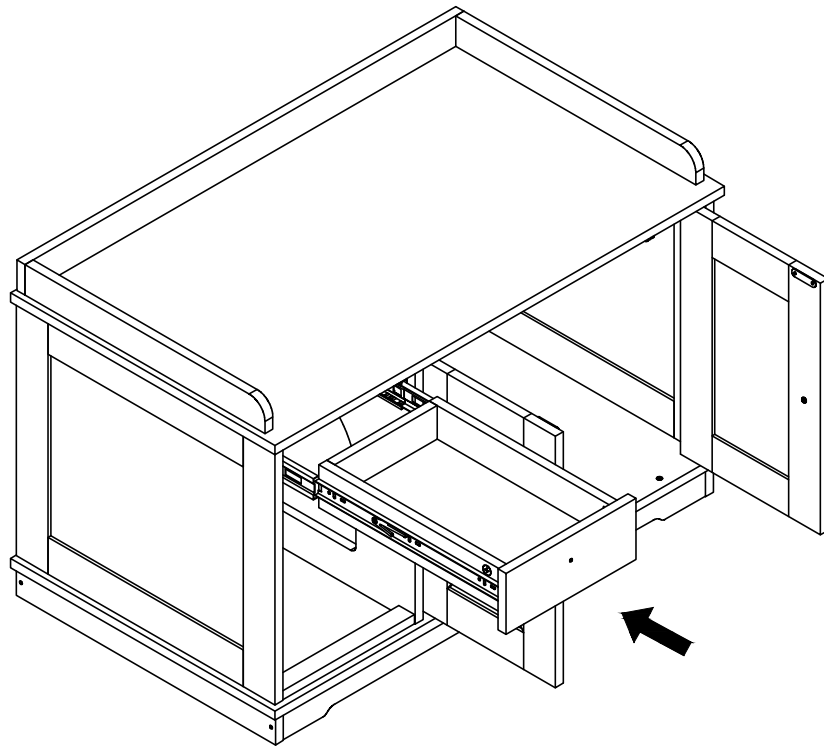

STEP 17

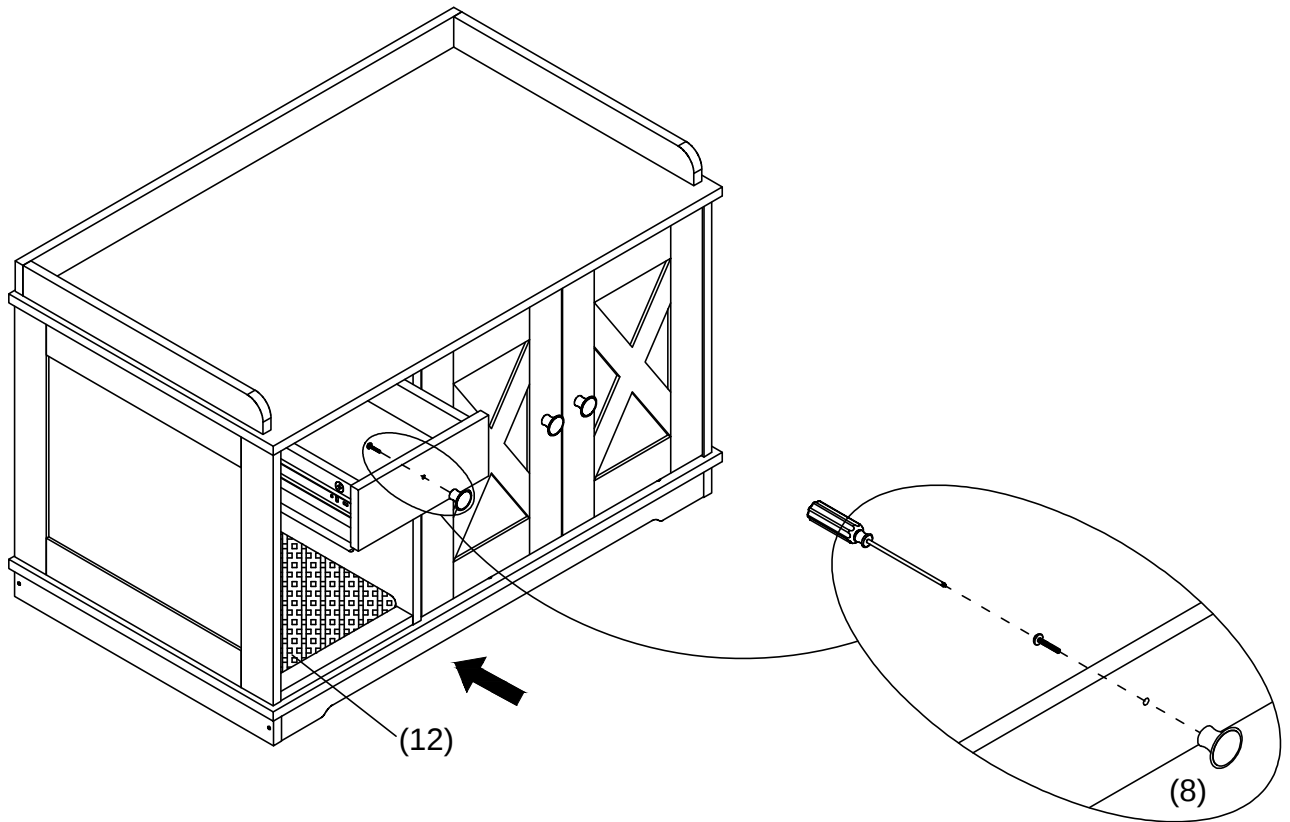

8



Handle

1PC



12




Cat litter Mat

1PC

STEP 18

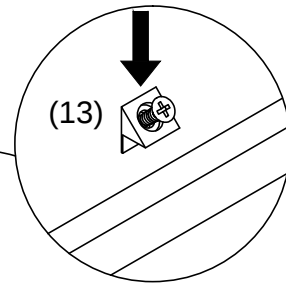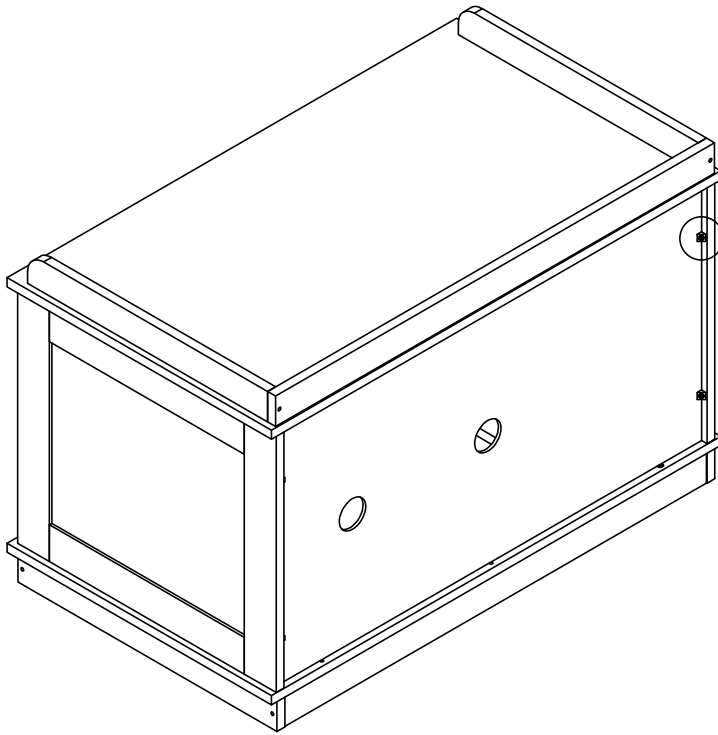

step 1: Insert into backplane slot.

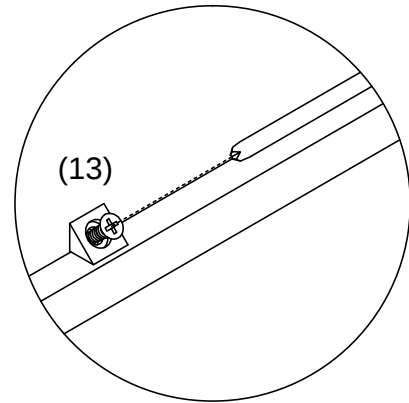

step 2: To tighten with a screwdriver.

13



Backplane Buckle

4PCS

COMPLETE

