

## **WRITING DESK**

### **ASSEMBLY INSTRUCTION**



# ASSEMBLY INSTRUCTION


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.













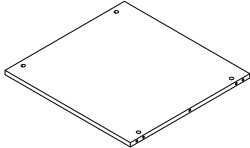



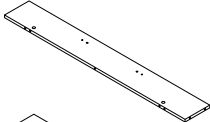

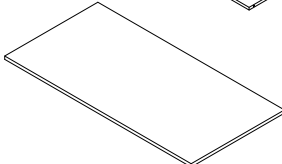

## Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

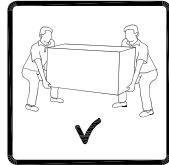


ASSEMBLY TIME PER UNIT: 60 MINUTES

## PARTS IDENTIFICATION:

(A) LEFT SIDE PANEL		1 PC	(J) DRAWER FRONT PANEL		2 PCS
(B) RIGHT SIDE PANEL		1 PC	(K) DRAWER BACK PANEL		2 PCS
(C) LEFT DIVIDER PANEL		1 PC	(L) DRAWER LEFT SIDE PANEL		2 PCS
(D) RIGHT DIVIDER PANEL		1 PC	(M) DRAWER RIGHT SIDE PANEL		2 PCS
(E) LEFT BOTTOM PANEL		1 PC	(N) DRAWER BOTTOM PANEL		2 PCS
(F) MIDDLE BOTTOM PANEL		1 PC	(O) MIDDLE DRAWER FRONT PANEL		1 PC
(G) RIGHT BOTTOM PANEL		1 PC	(P) MIDDLE DRAWER BACK PANEL		1 PC
(H) BACK PANEL		1 PC	(Q) MIDDLE DRAWER LEFT SIDE PANEL		1 PC
(I) TOP PANEL		1 PC	(R) MIDDLE DRAWER RIGHT SIDE PANEL		1 PC


**PARTS IDENTIFICATION:**

(S) MIDDLE DRAWER BOTTOM PANEL




1 PC

(U) CROSS BAR

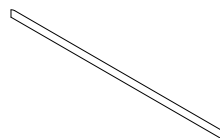

1 PC

(T) METAL FRAME

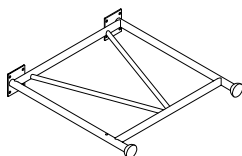










2 PCS

Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	GLIDES SCREW ø3x12mm		36 PCS
2	WOODEN DOWEL ø8x30mm		45 PCS	9	KNOB		3 PCS
3	CAM BOLT ø7x35.5mm		20 PCS	10	KNOB BOLT ø4x28mm		3 PCS
4	CAM LOCK ø15x12mm		20 PCS	11	BOLT M6x20mm		16 PCS
5	SCREW ø4.5x42mm		16 PCS	12	BOLT M6x44mm		2 PCS
6	DRAWER SCREW ø4.3x35mm		12 PCS	13	ALLEN WRENCH		1 PC
7	GLIDES L = 350mm		3SET	14	STICKER ø20mm		4 PCS


Z7,Z9,Z10 not included in blister packaging.

# ASSEMBLY INSTRUCTION


## STEP 1 :

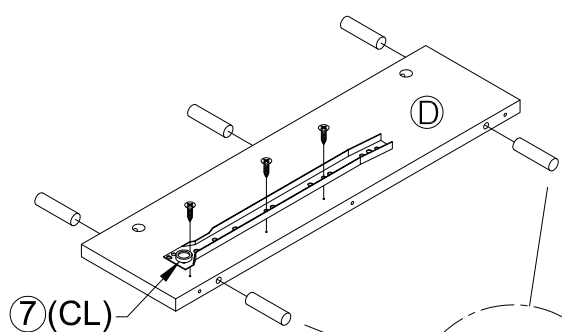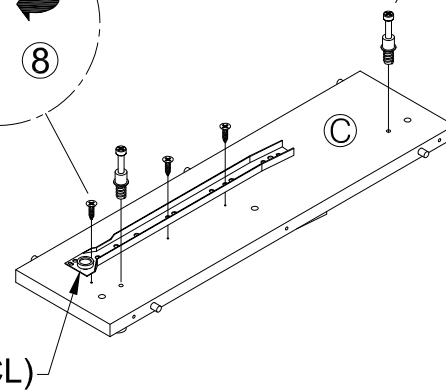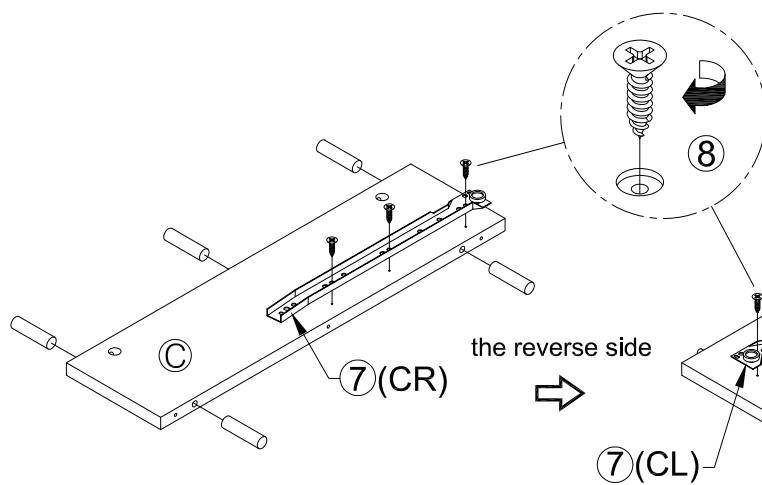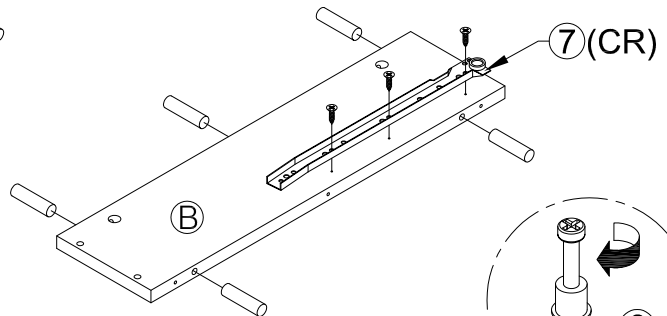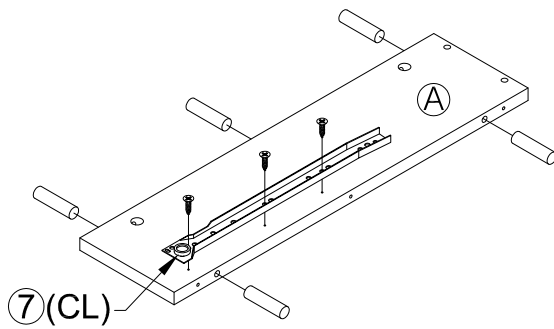



the reverse side

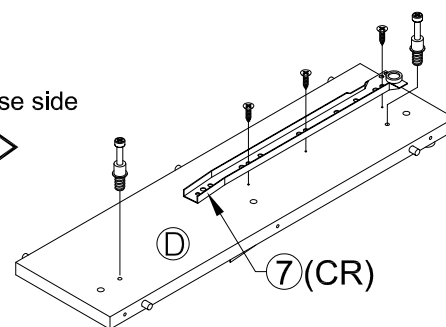


INCORRECT CORRECT

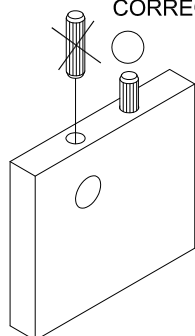

Apply glue on all wooden dowels to ensure integrity of the structure.

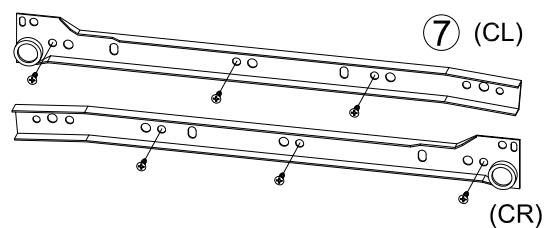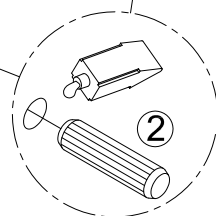


## STEP 2 :

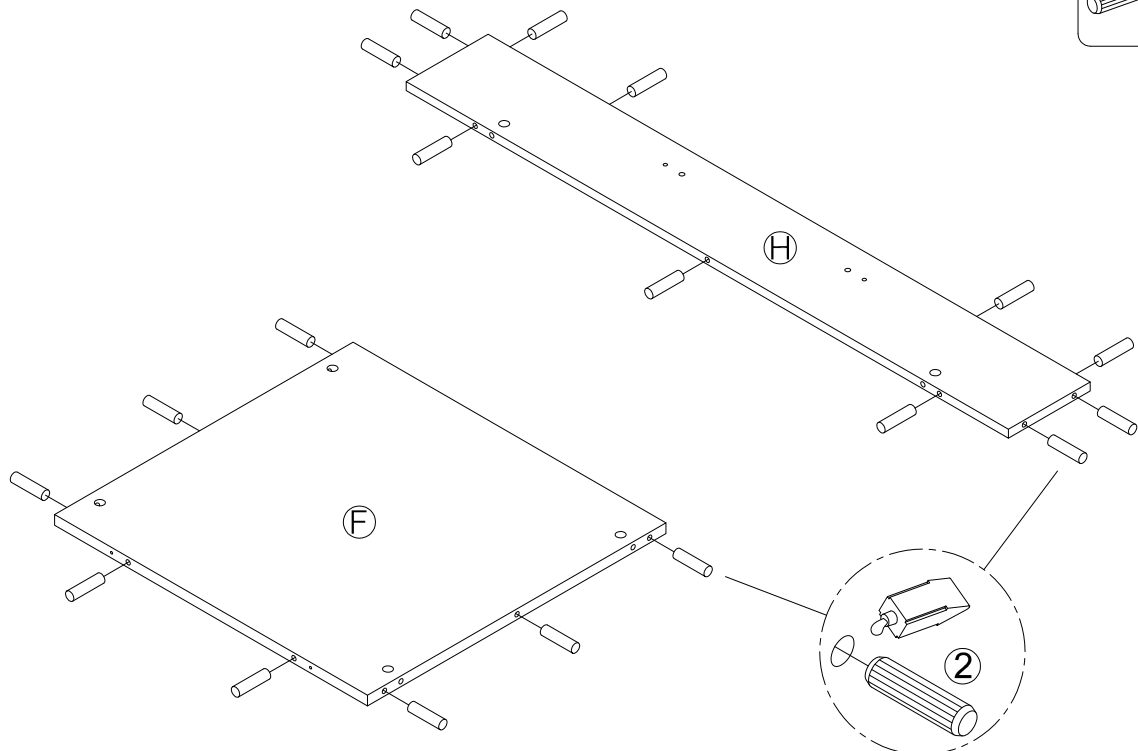

2  
x 19

Apply glue on all wooden dowels to ensure integrity of the structure.


## STEP 3 :

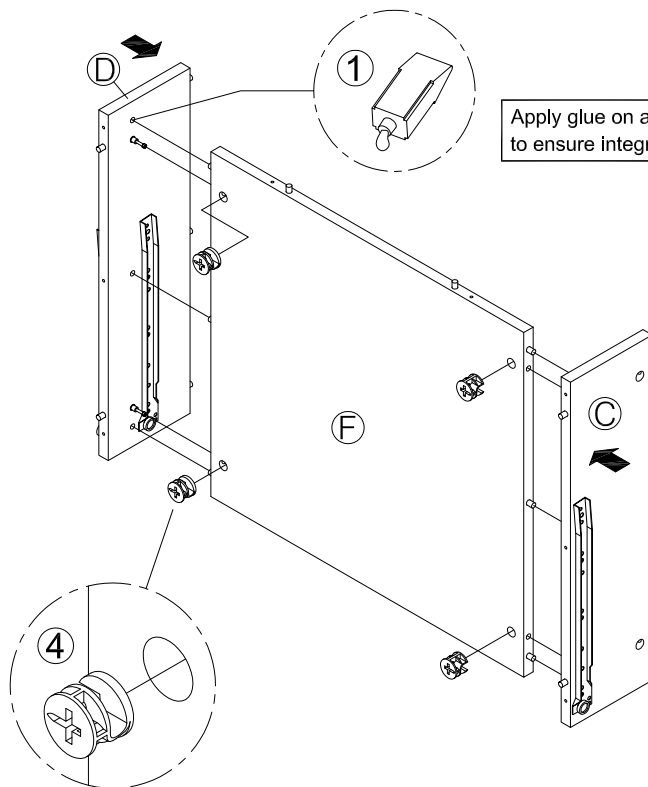



4  
x 4

14

Apply glue on all wooden dowels to ensure integrity of the structure.

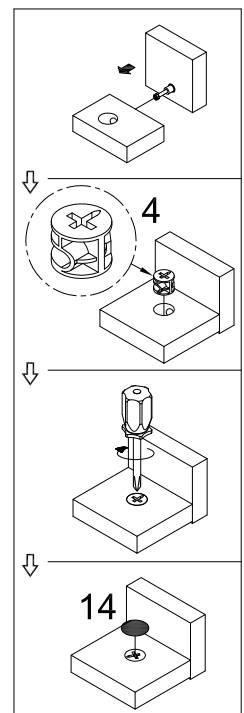


## STEP 4 :

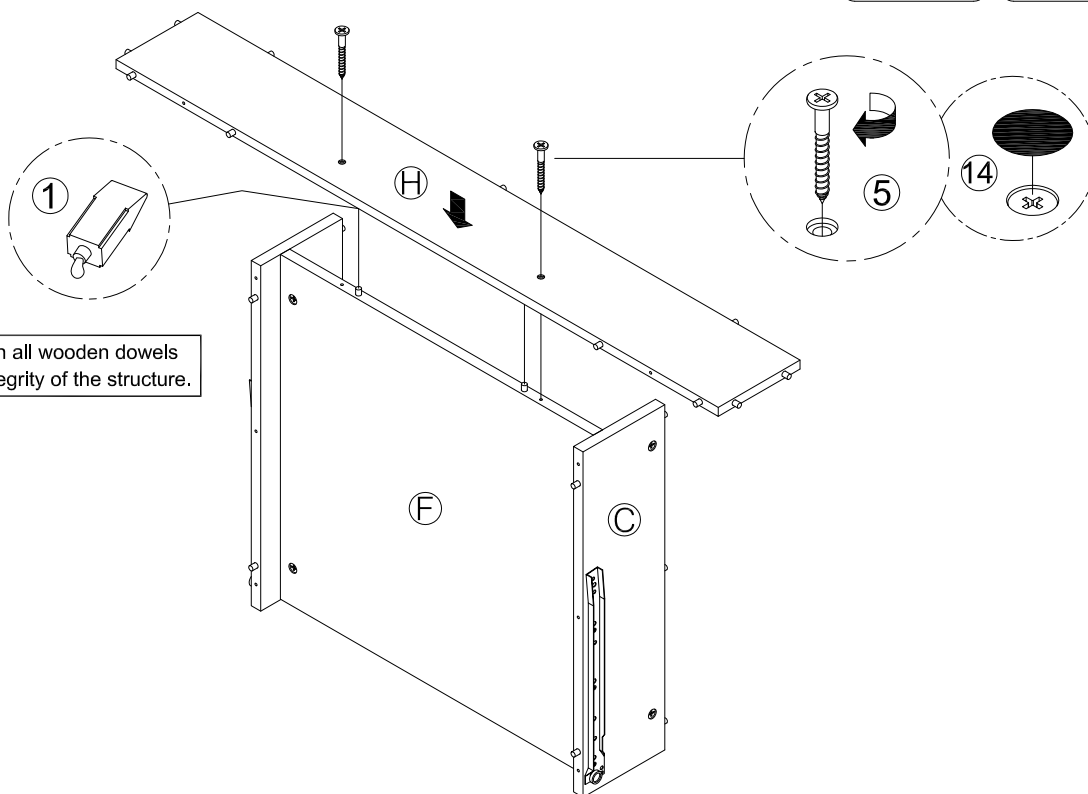


Apply glue on all wooden dowels to ensure integrity of the structure.


## STEP 5 :

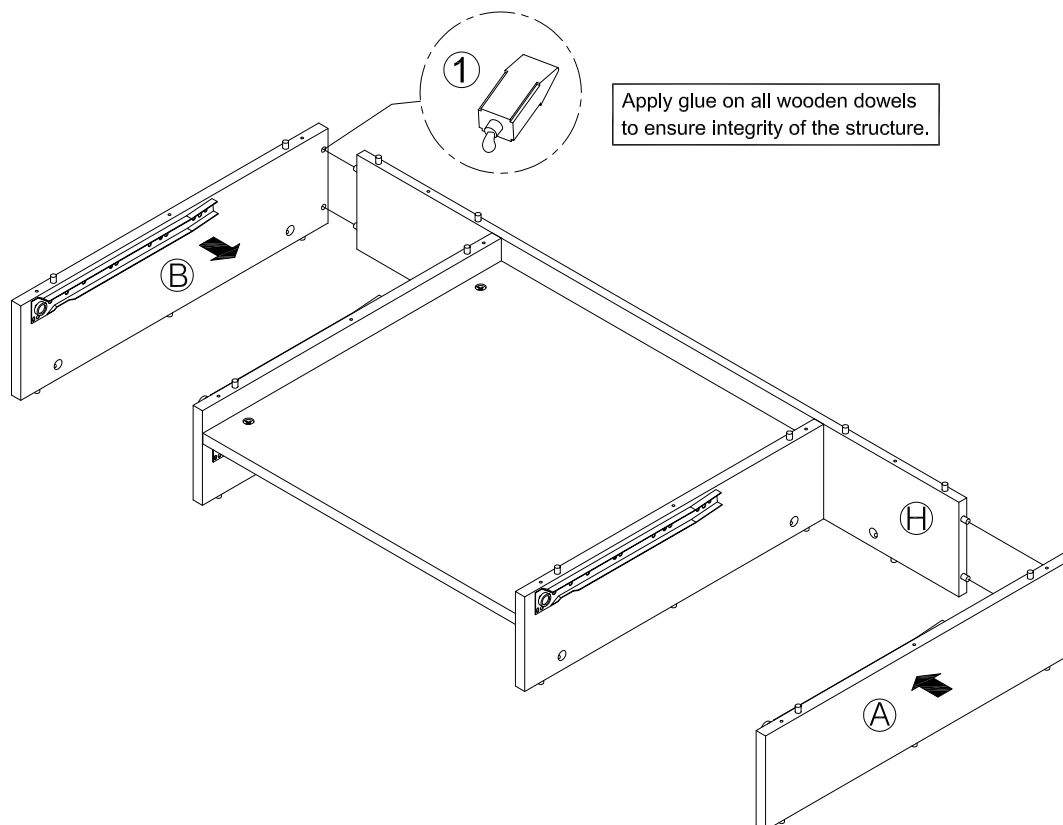


## STEP 6 :

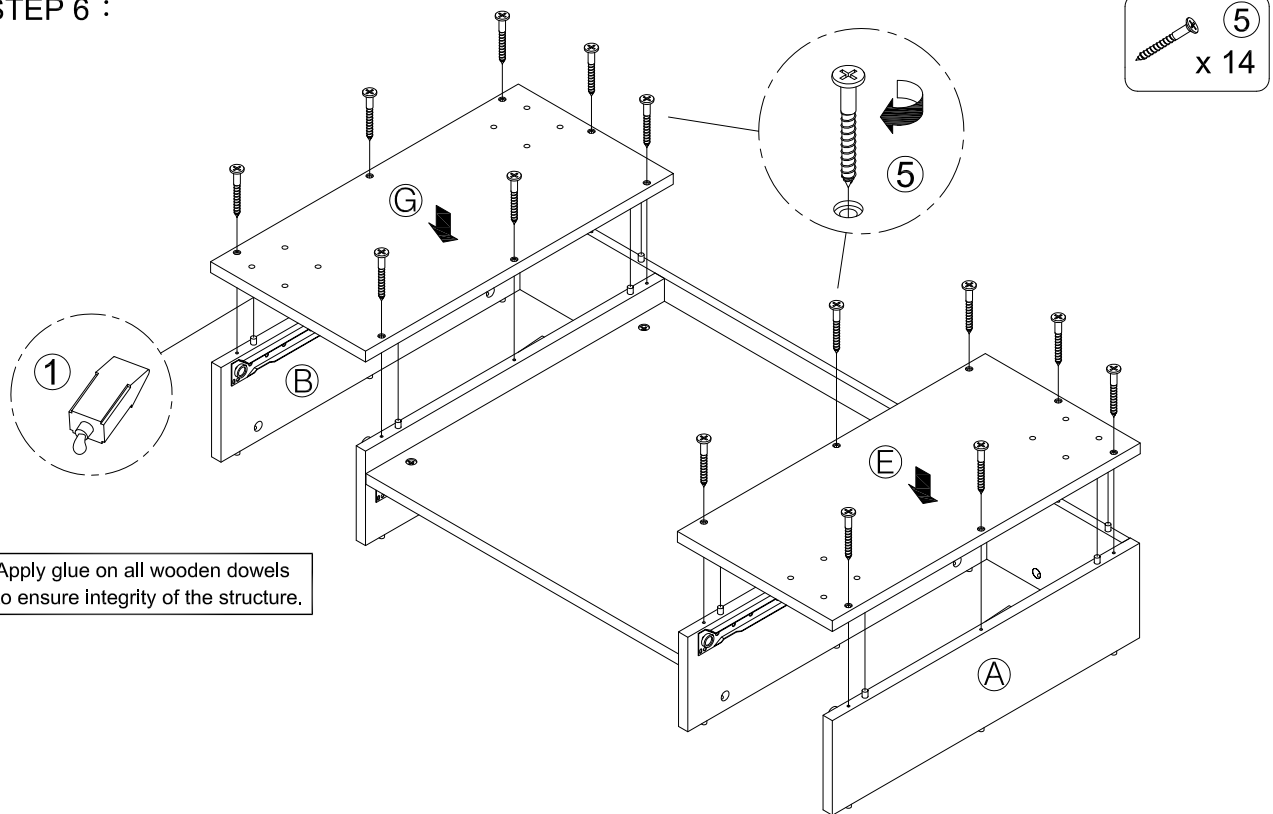

## STEP 7 :

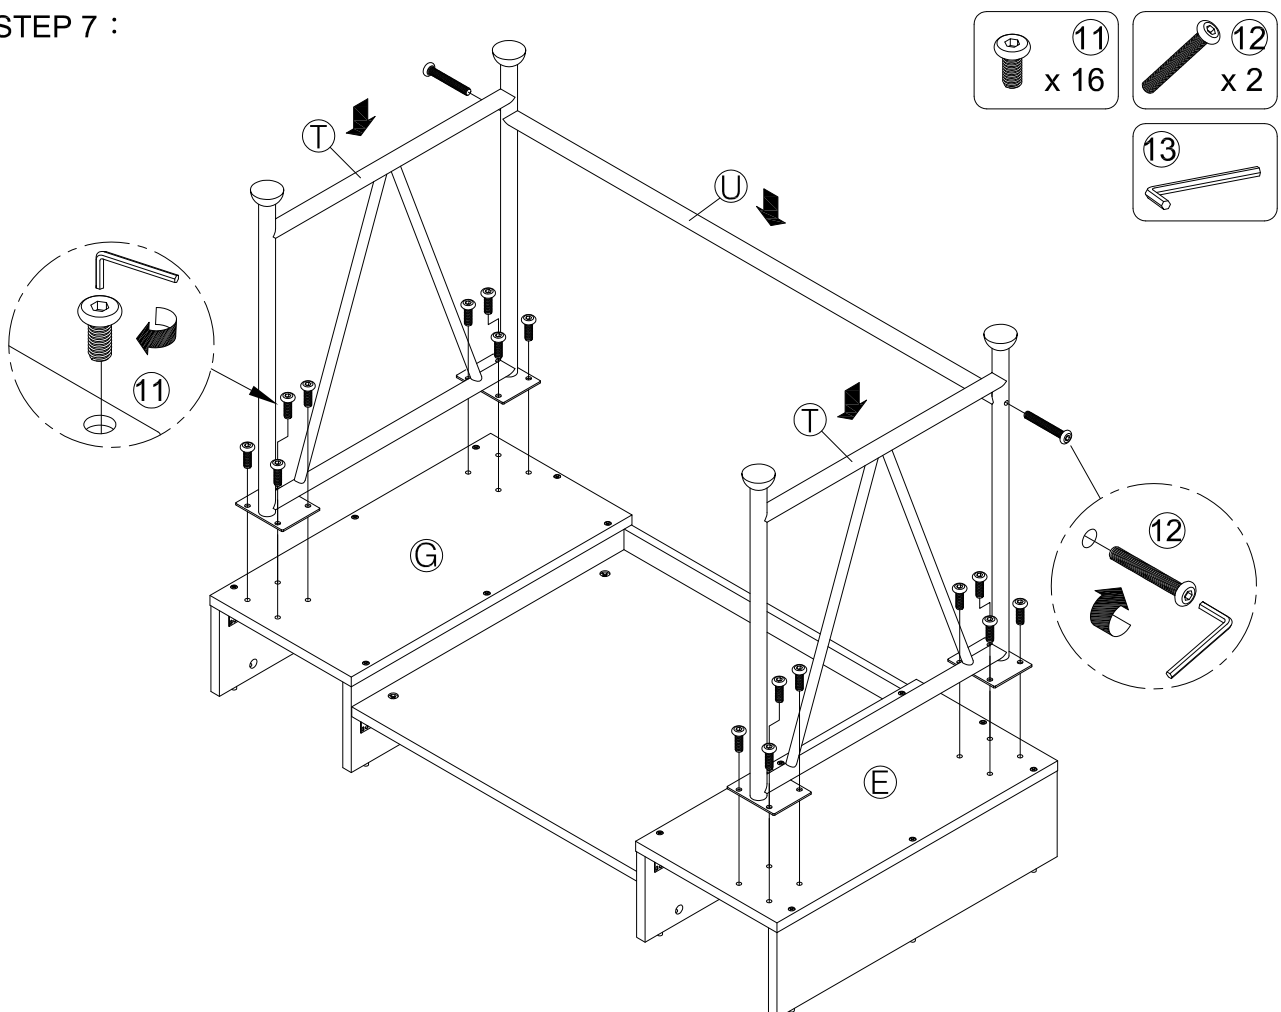


## STEP 8 :

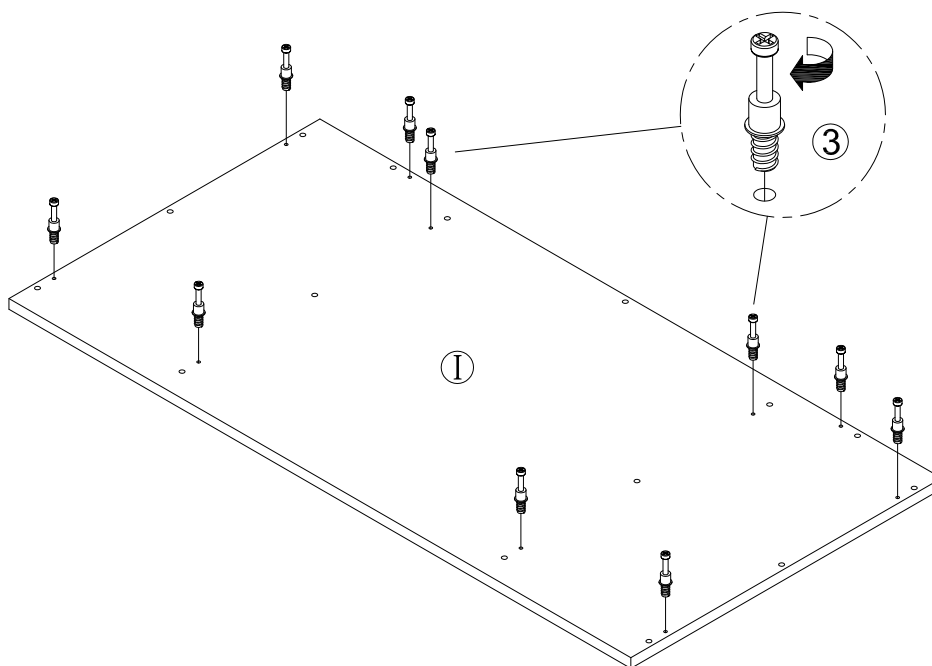

③  
x 10



## STEP 9 :

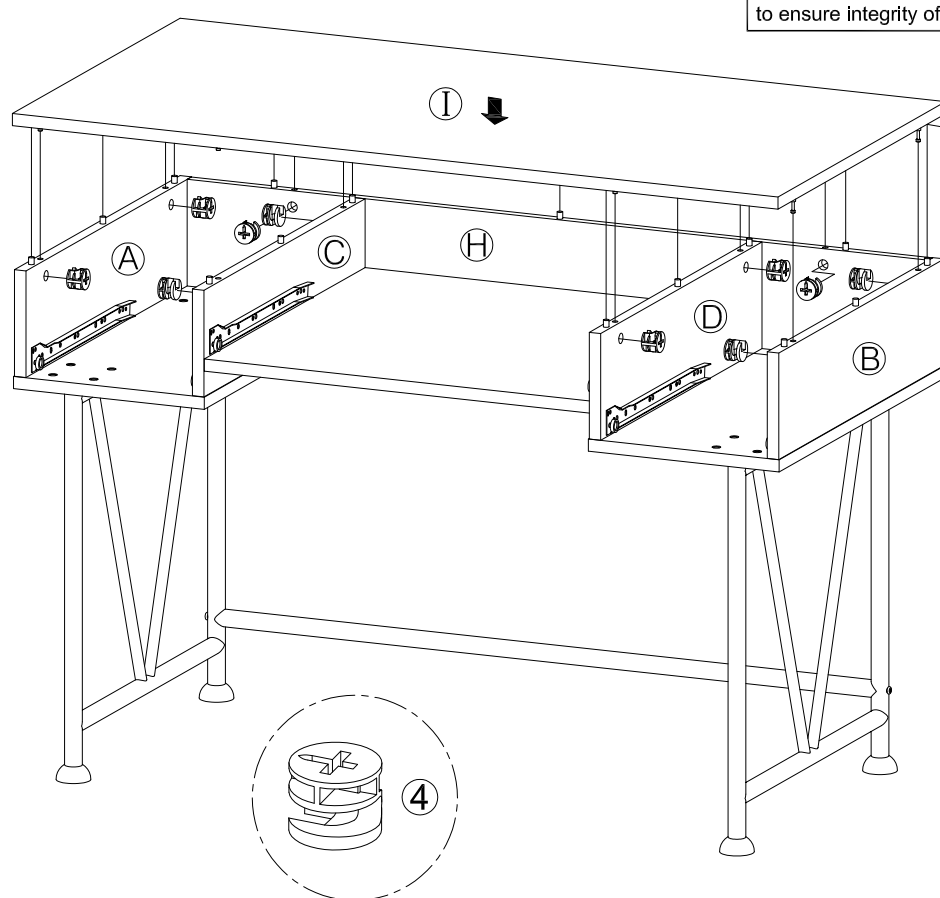

Apply glue on all wooden dowels to ensure integrity of the structure.


④  
x 10

⑭

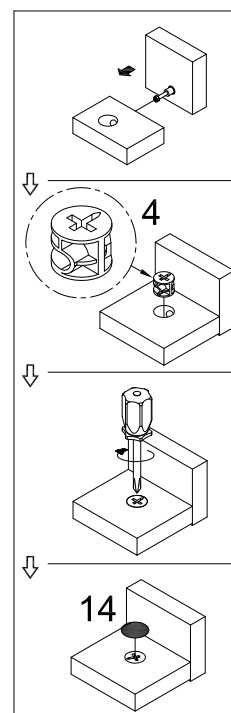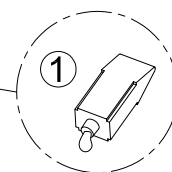





## STEP 10-1 :

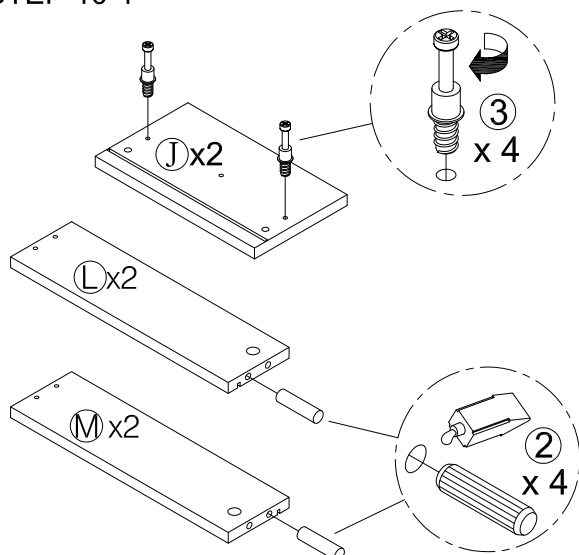


## STEP 10-2 :

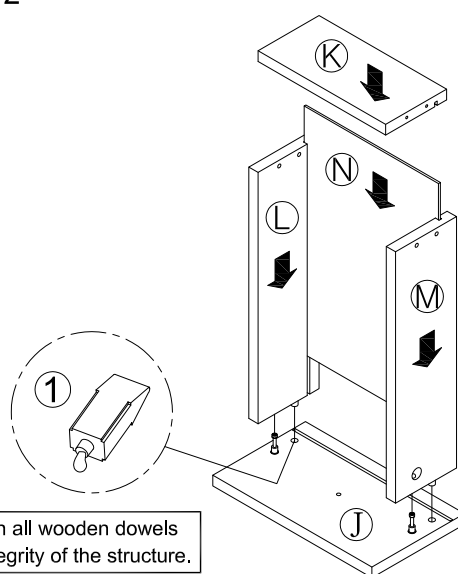



## STEP 10-3 :

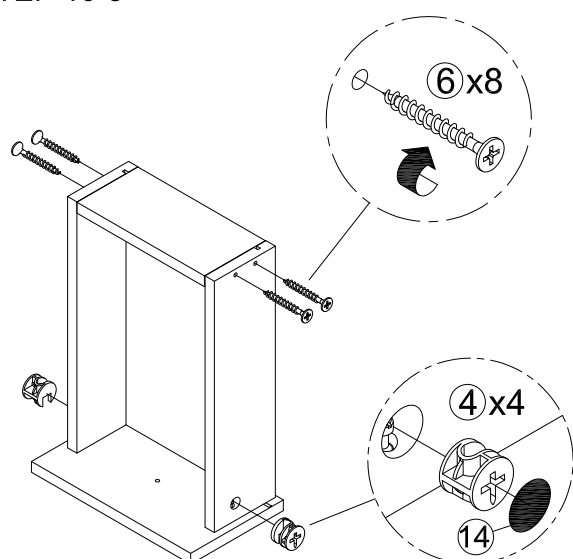


## STEP 10-4 :

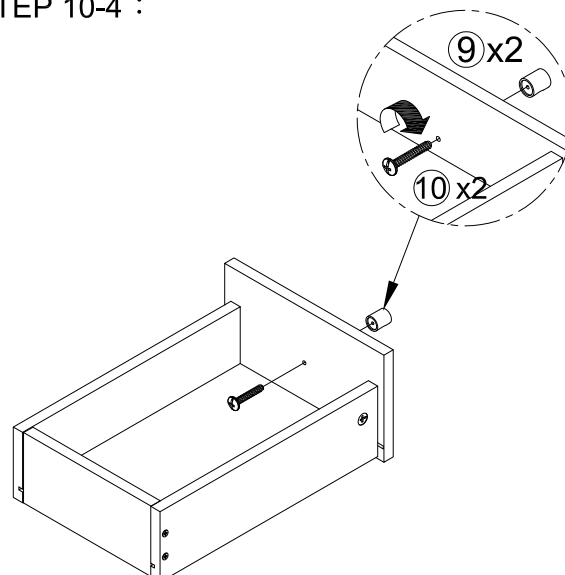


## STEP 10-5 :

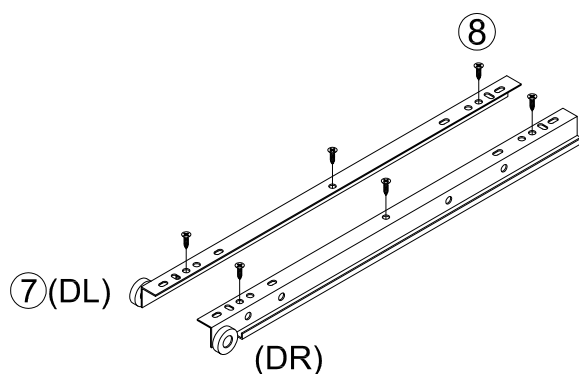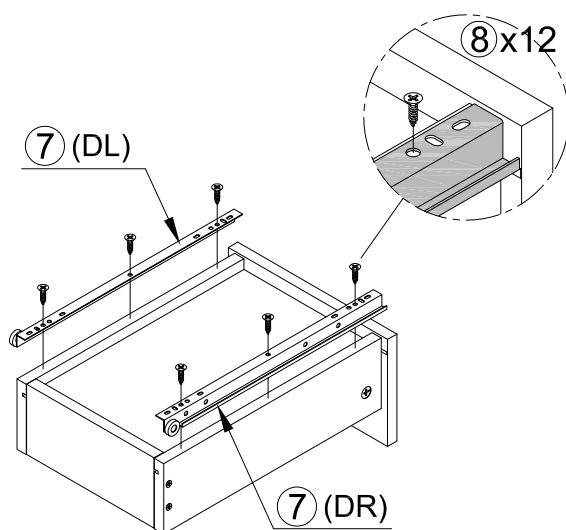


## STEP 11-1 :

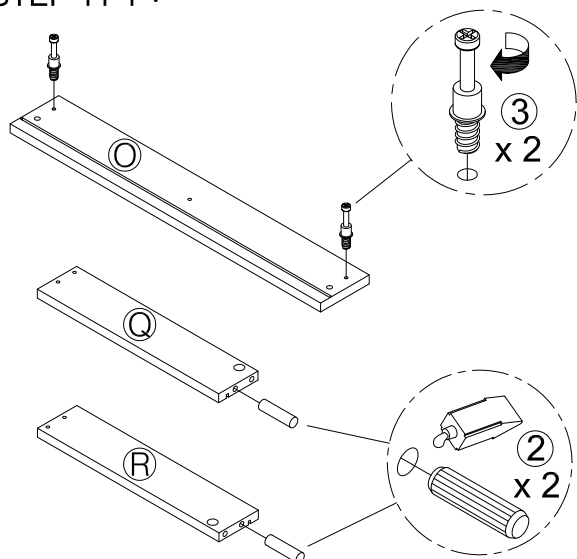


## STEP 11-2 :

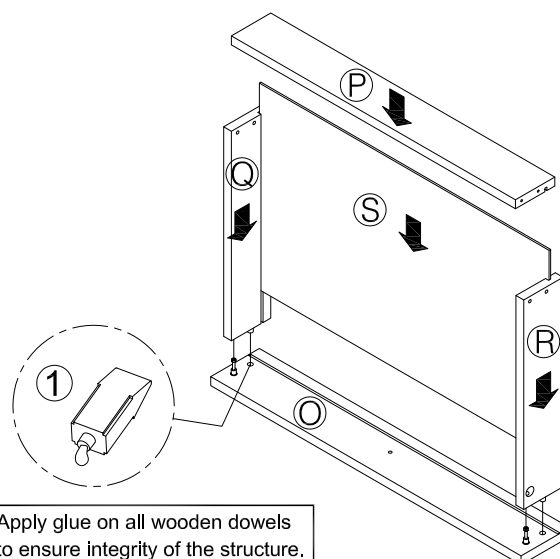


## STEP 11-3 :

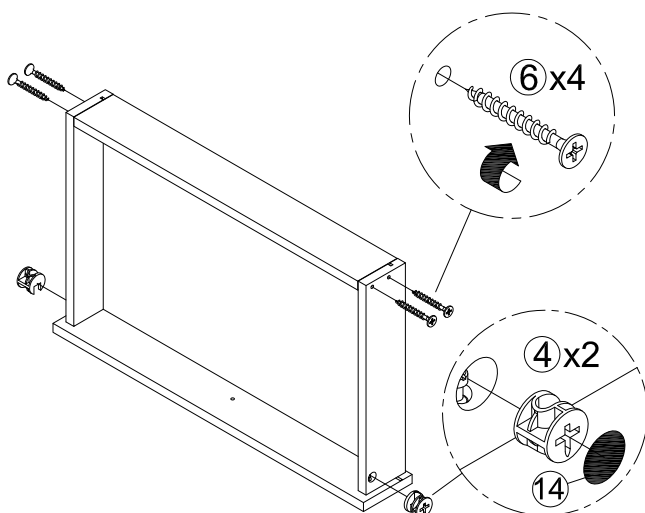


## STEP 11-4 :

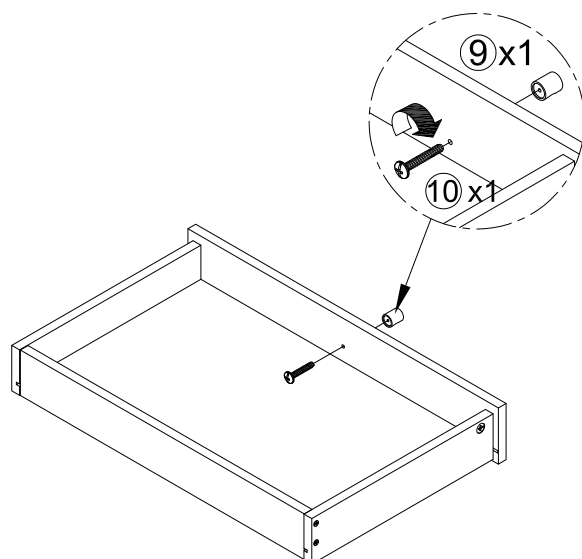

## STEP 11-5 :

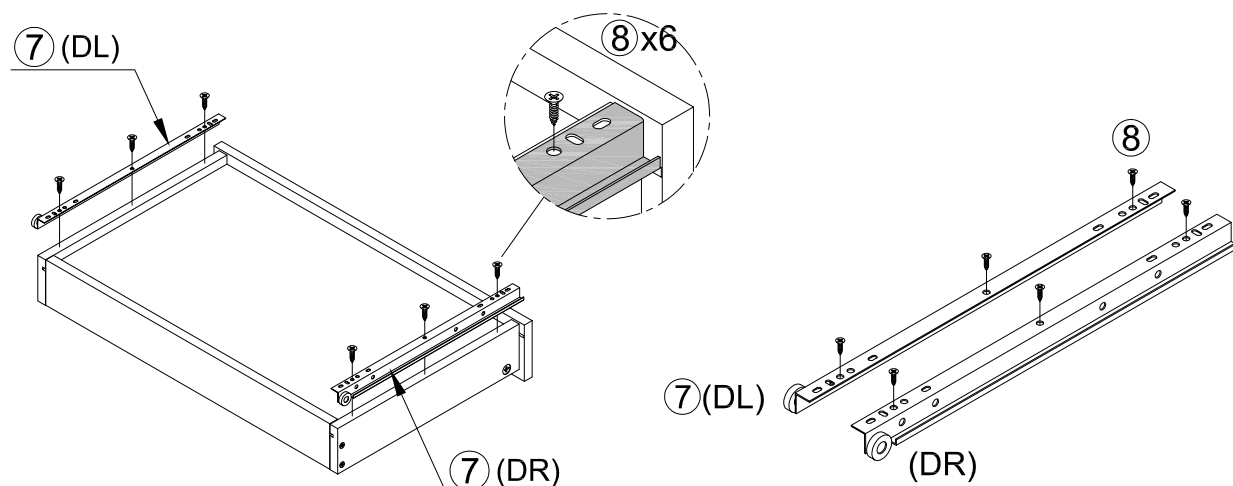

STEP 12 :

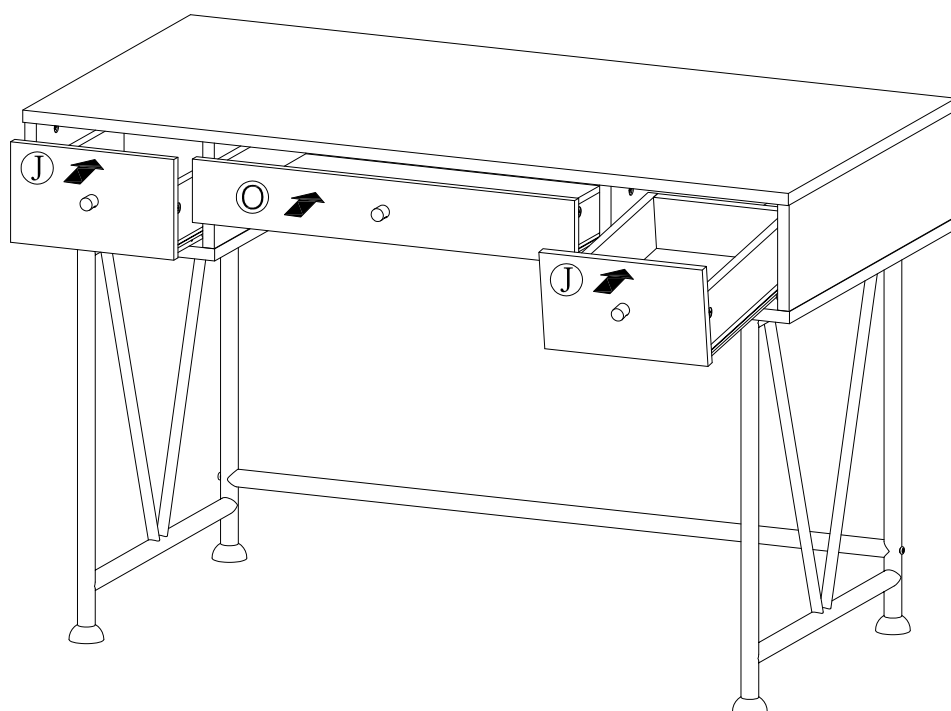

FINISH

