


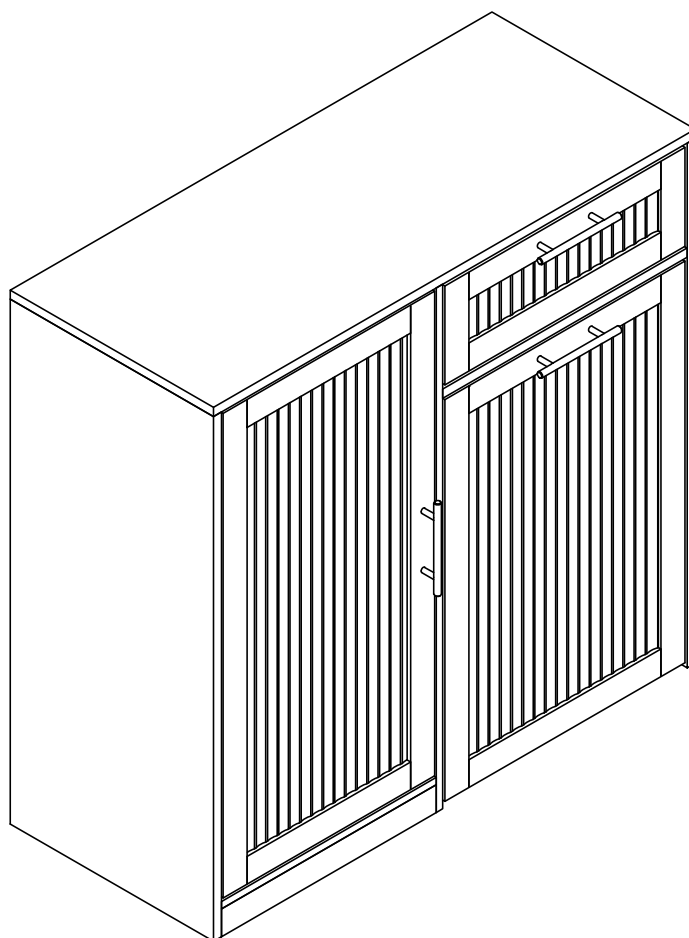




Please note: Items cannot be returned once assembled.

HLG222


Version:1.1



IT IS RECOMMENDED
TO USE POWER TOOLS

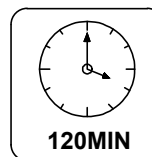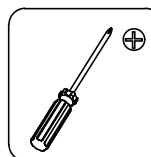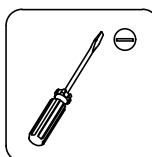

120MIN

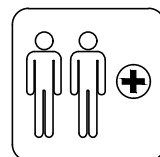

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.
For any damaged or missing components, we're happy to provide FREE replacement parts.




WhatsApp

Email: support@anymaple.com


WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

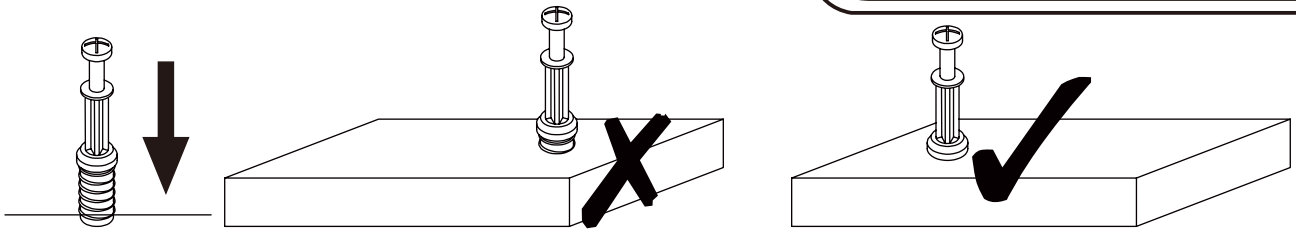


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

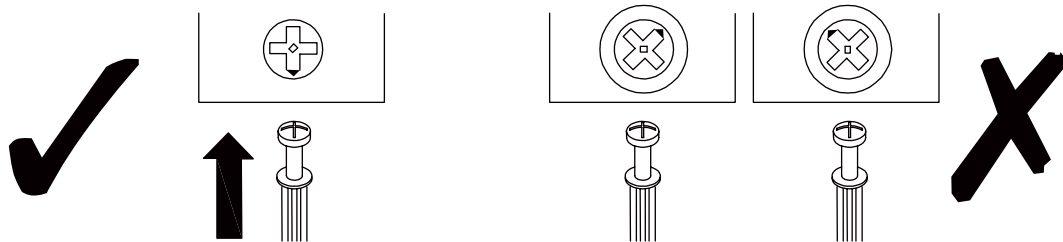











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










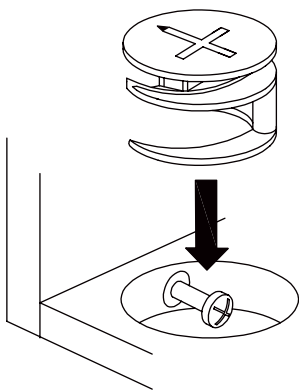






EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

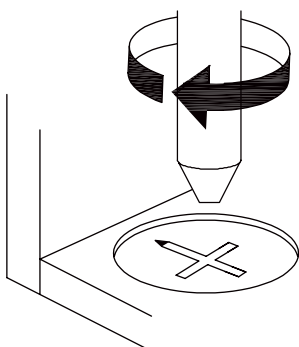













EN_Turn cam lock clockwise to tighten.

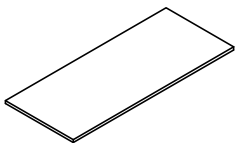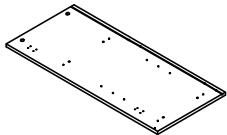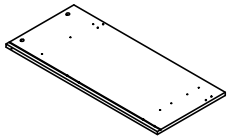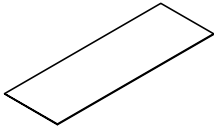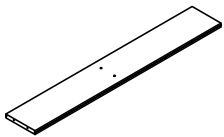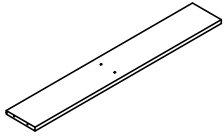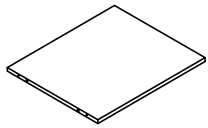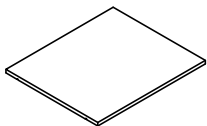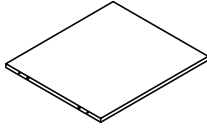

NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x1	
7		x1	
8		x1	
9		x1	
10		x1	

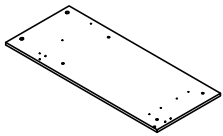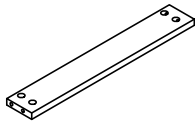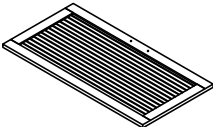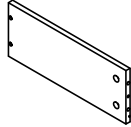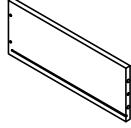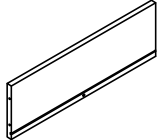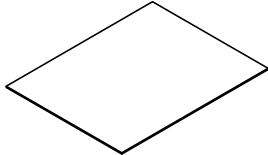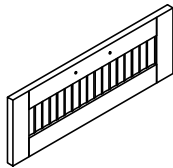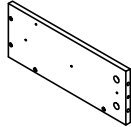NO.	PARTS	QTY	SPARE
11		x1	
12		x2	
13		x1	
14		x1	
15		x1	
16		x1	
17		x1	
18		x1	
19		x1	
20		x1	

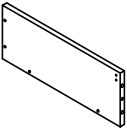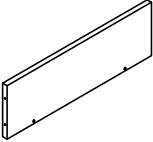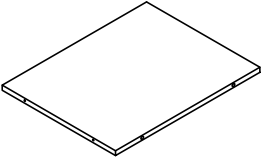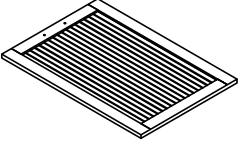NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x1	
24		x1	
	 Hardware Kit	x1	

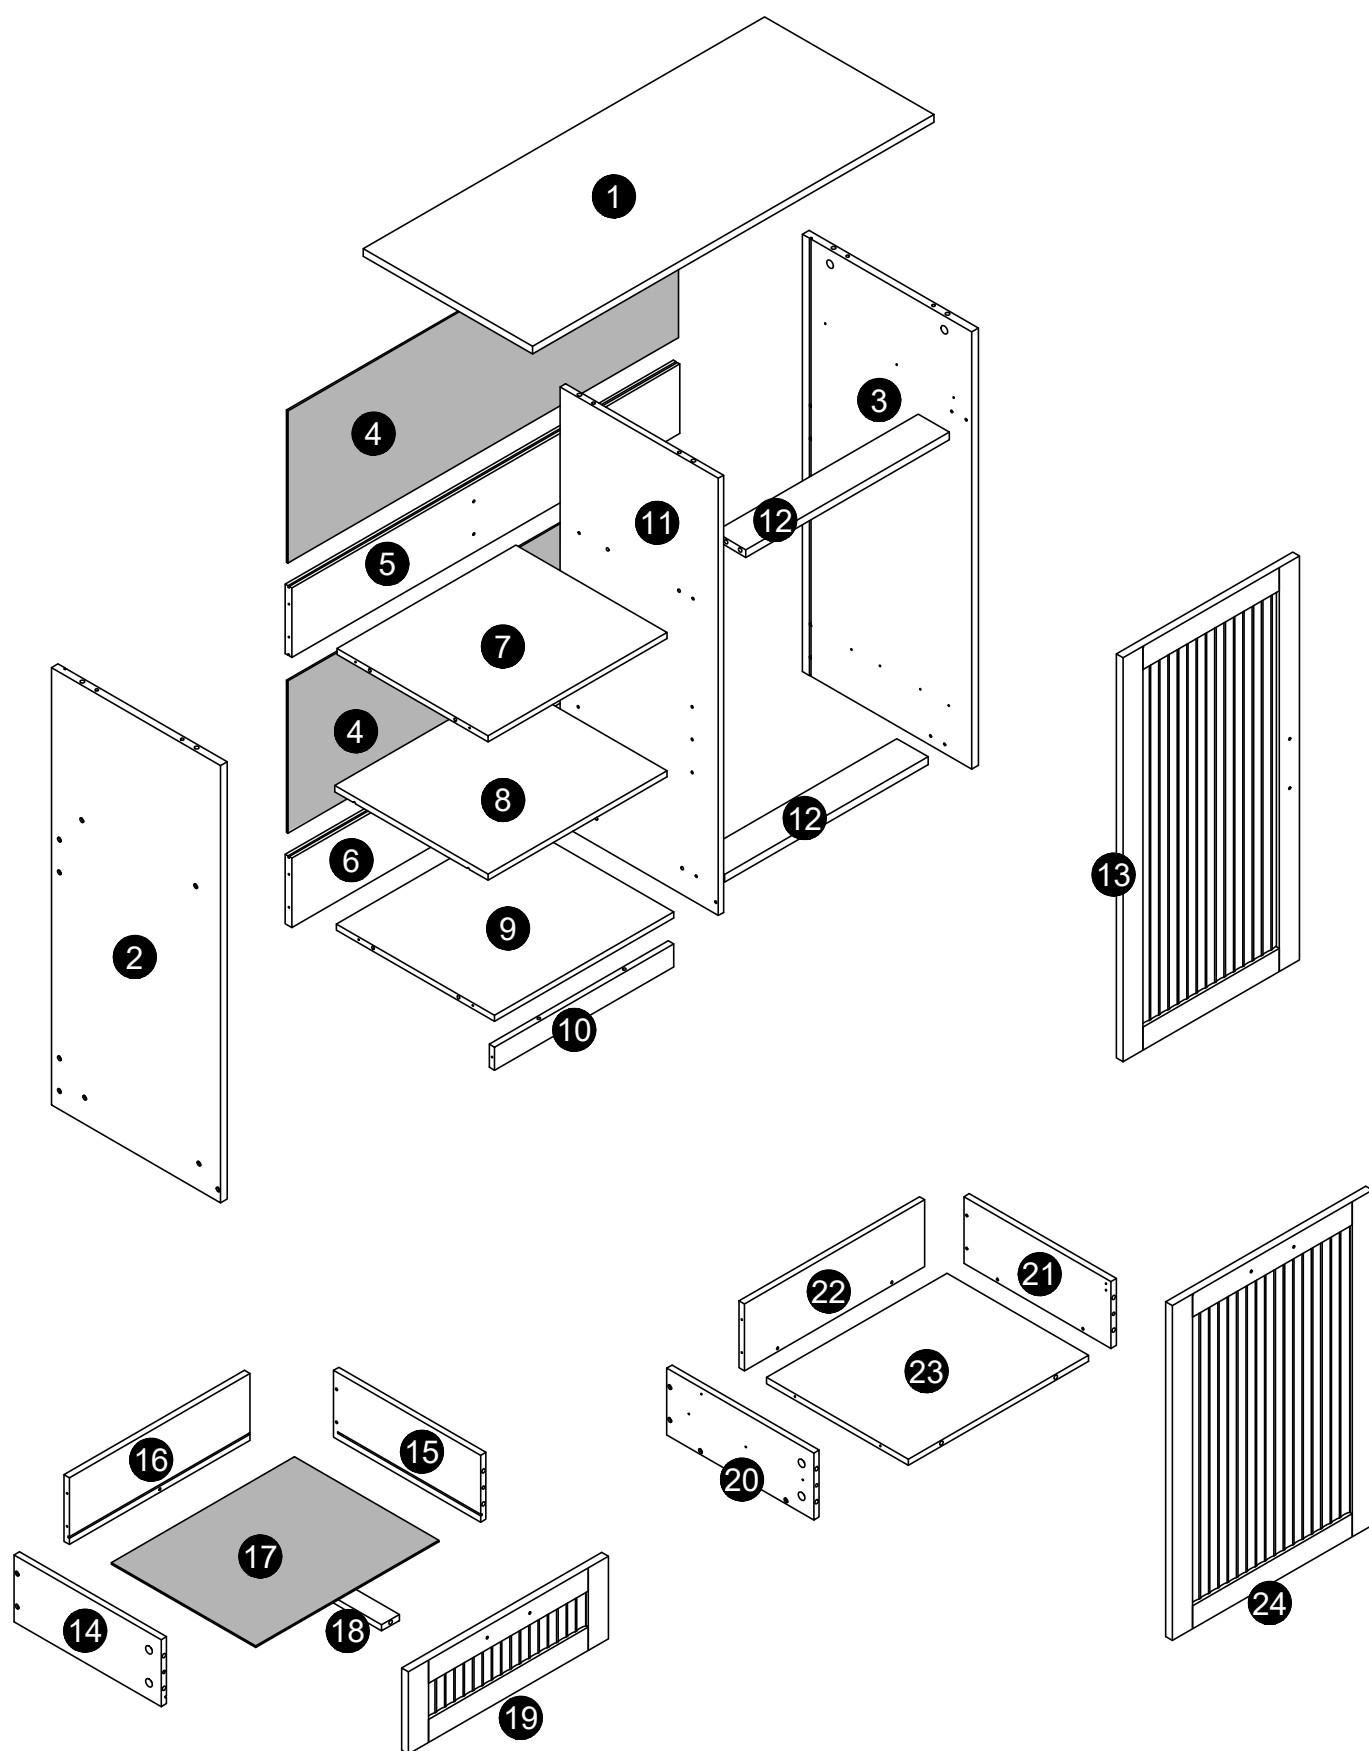


 A x25 Ø6x35mm +2(spare)	 B x25 Ø15x10mm +2(spare)	 C x20 Ø6x30mm +2(spare)	 D x39 Ø4x35mm +3(spare)	 E x46 Ø3.5x12mm +4(spare)	 F x3 F-1  F-2
 G x2 L330mm	 H x2	 I x2	 J x4	 K x2	 L x9 Ø3x16mm +1(spare) L-1  L-2
 M x2 Ø4x14mm M-1  M-2	 N x2 Ø6x30mm	 O x13 +4(spare)	 P x10 +1(spare)	 Q x2	
 CL x1 L330mm	 CR x1 L330mm	 DL x1 L330mm	 DR x1 L330mm		

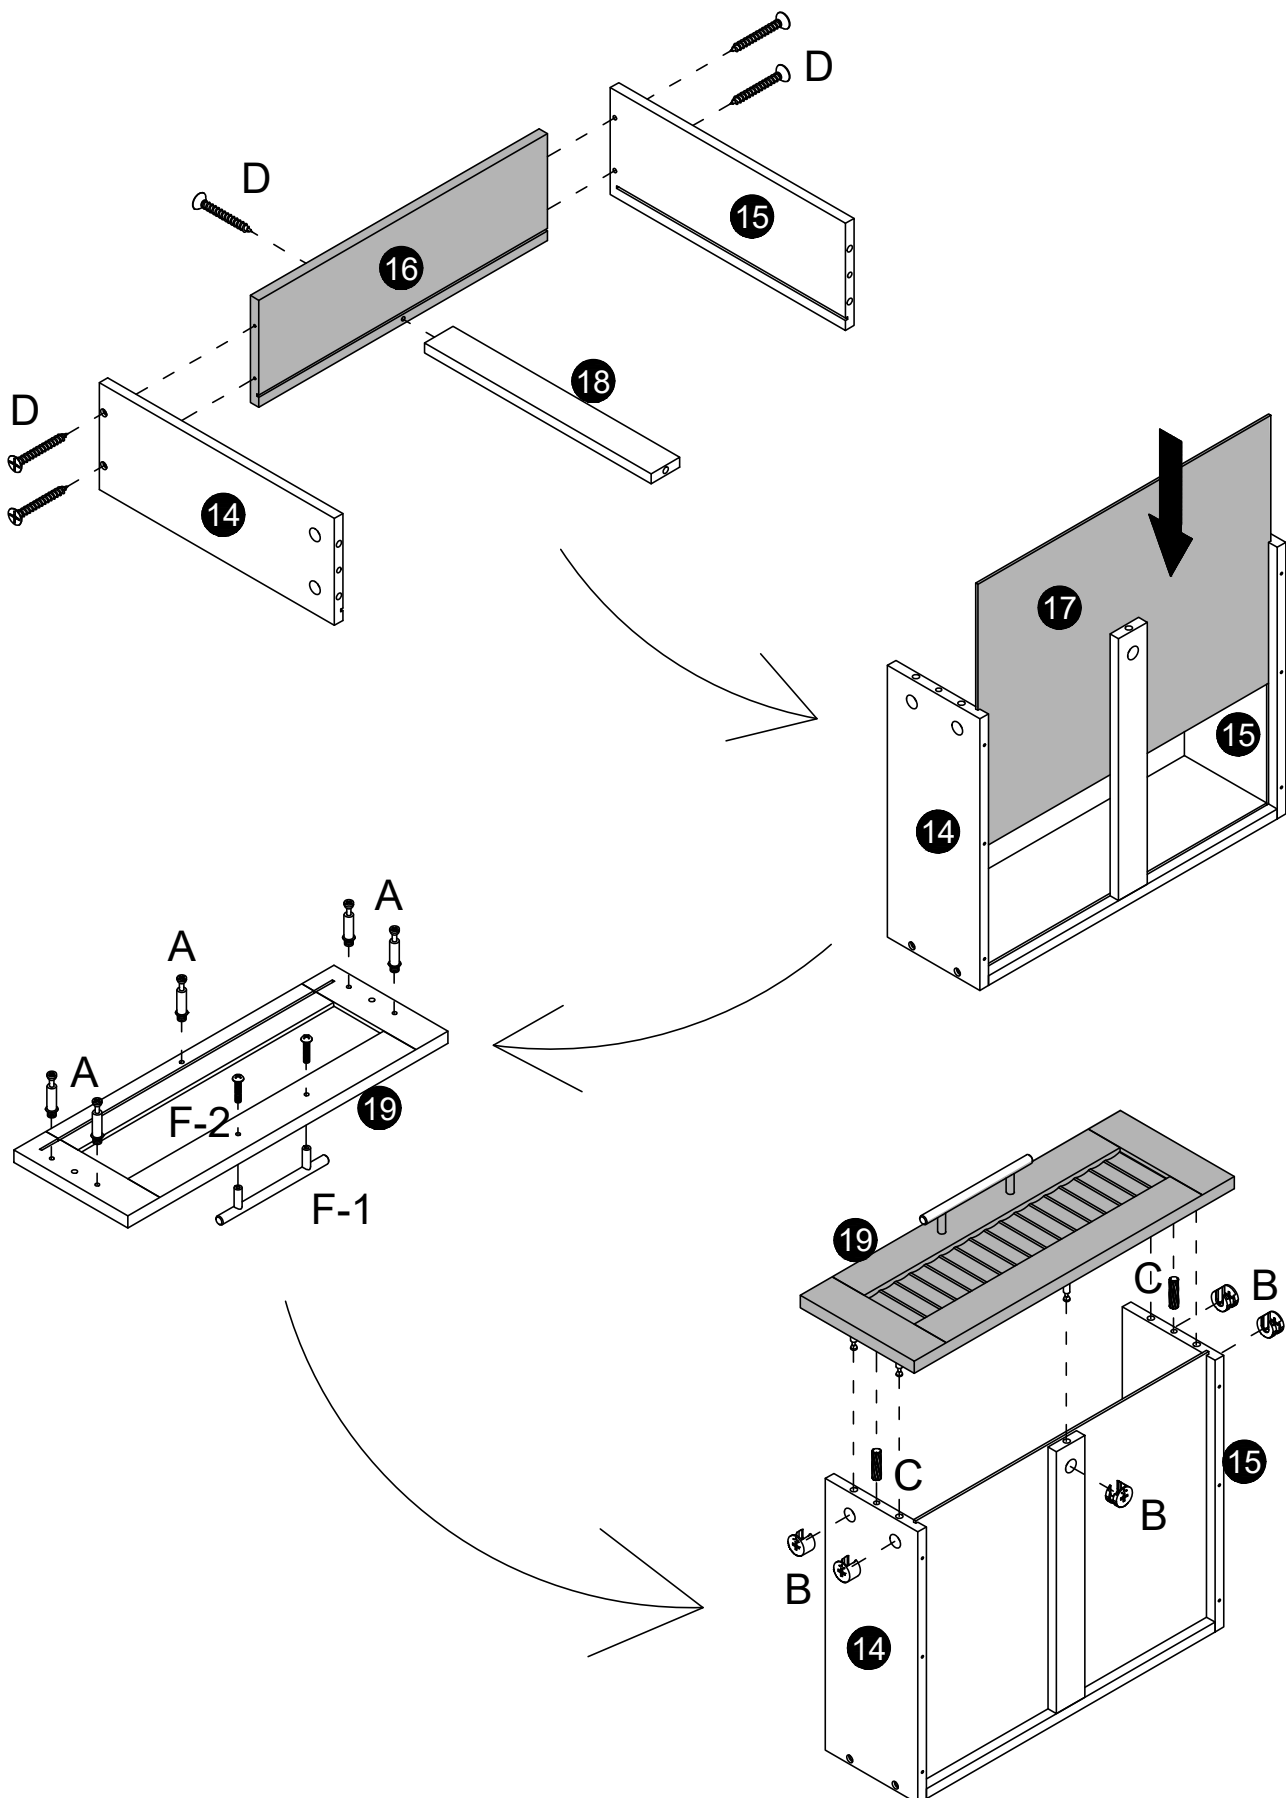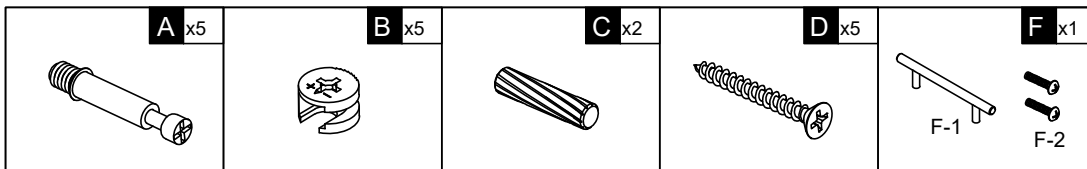




E x6

DL x1

DR x1

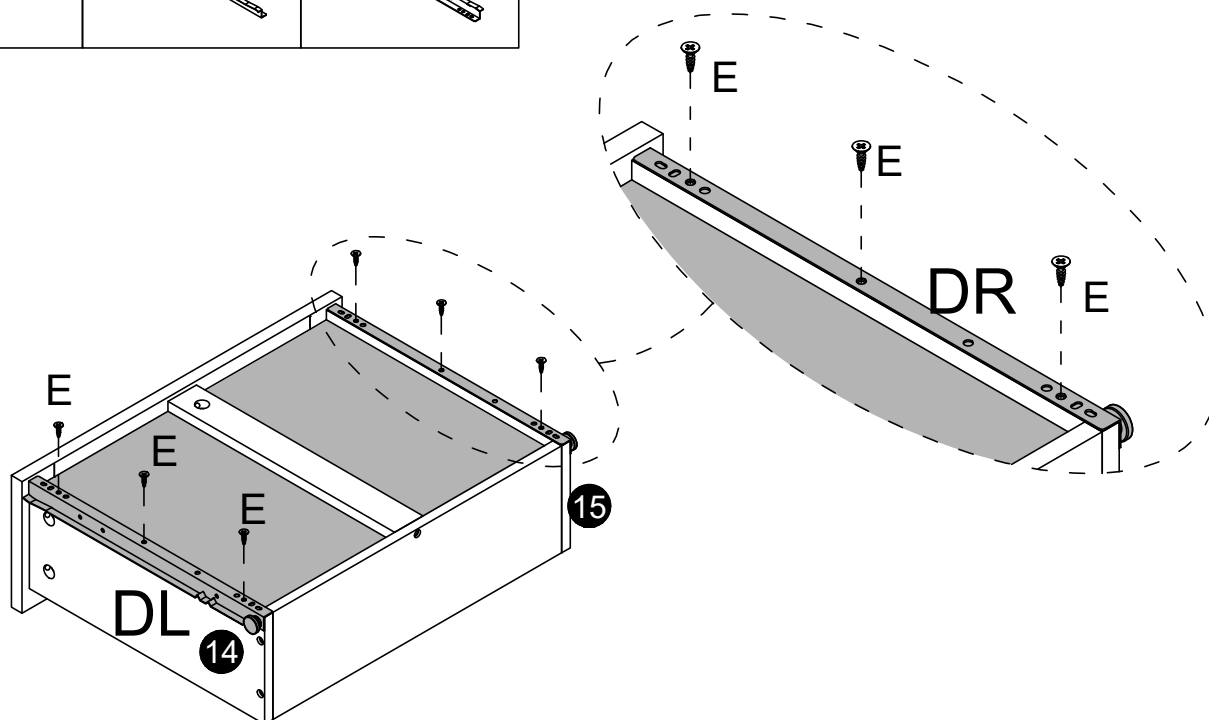

G x2

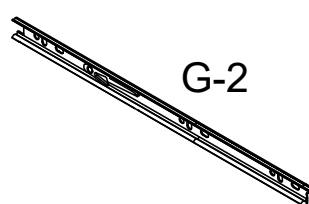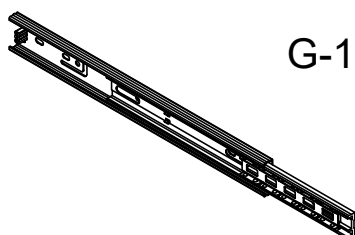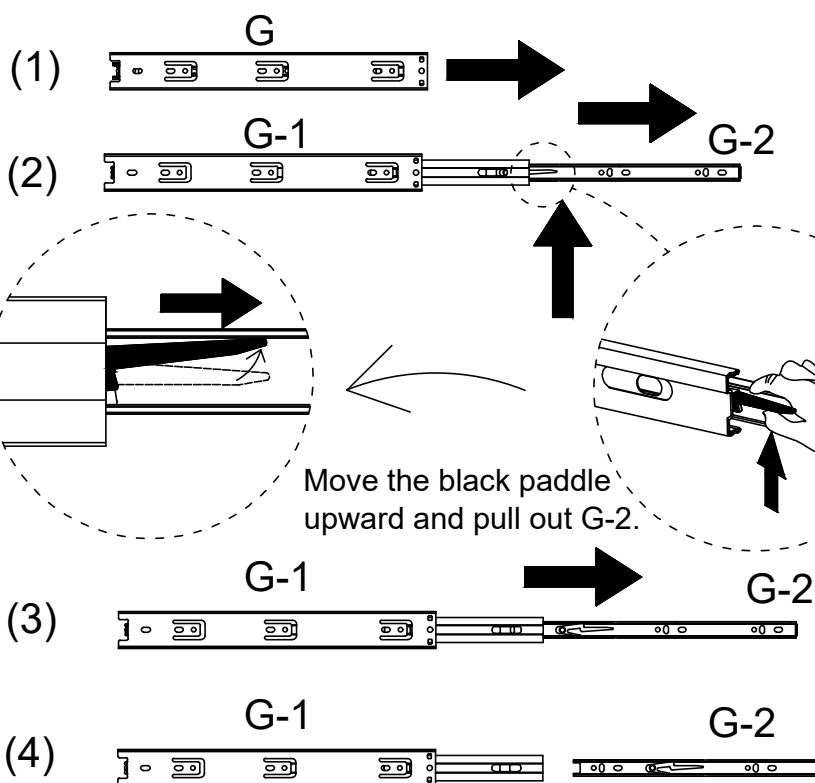

x2



E x6





G x2




G-2

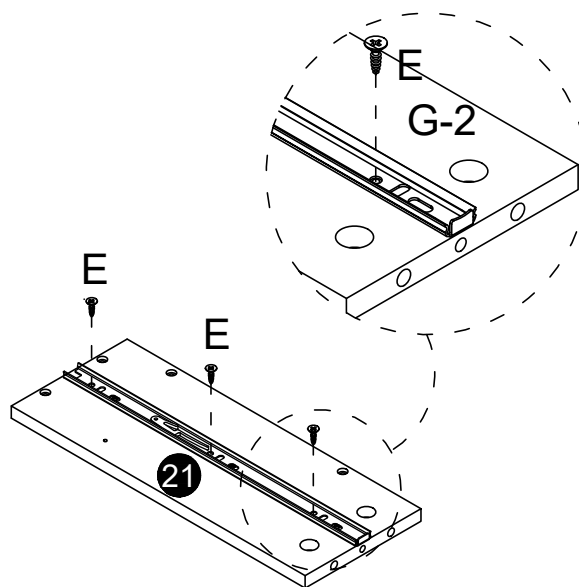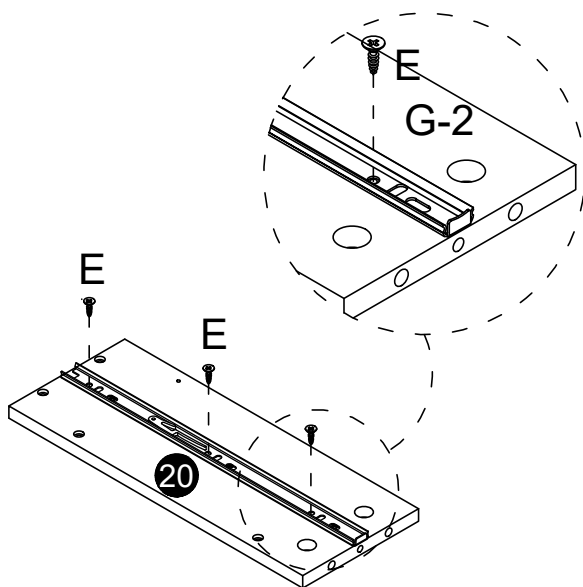


D x2

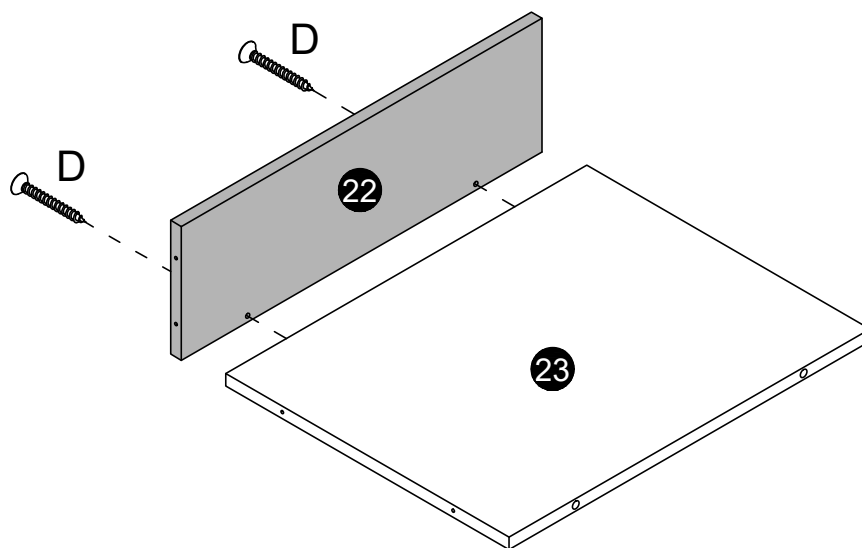

D x8



06

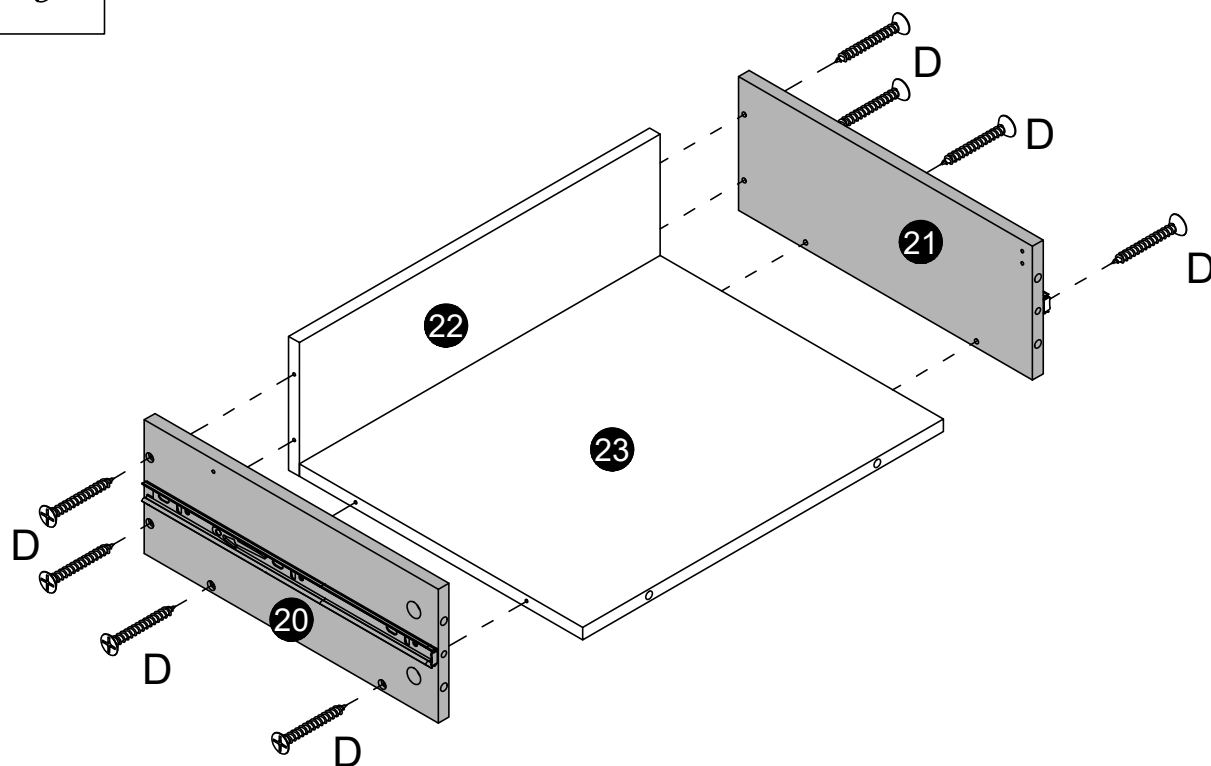


H x2






P x4







07

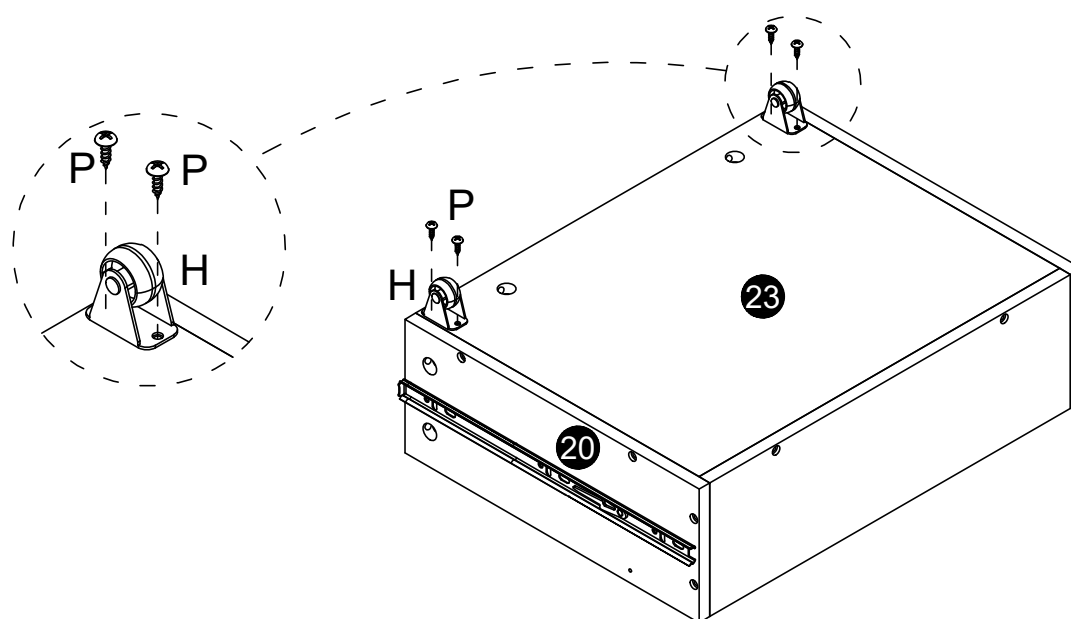

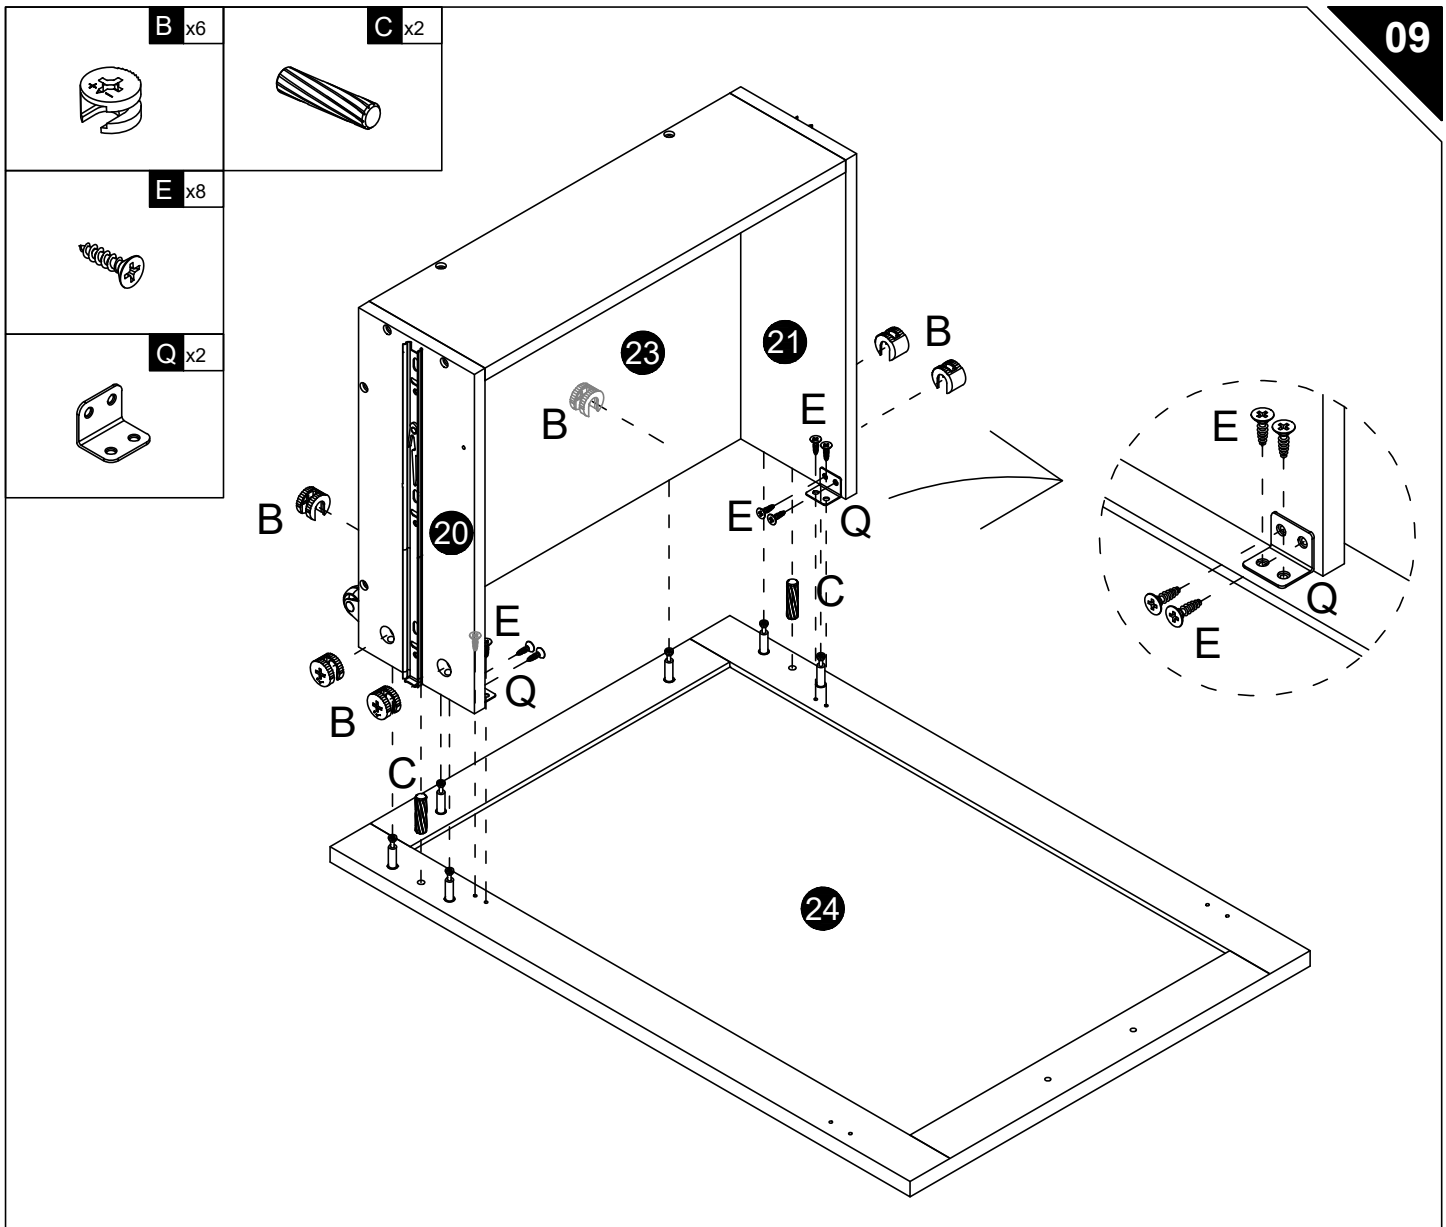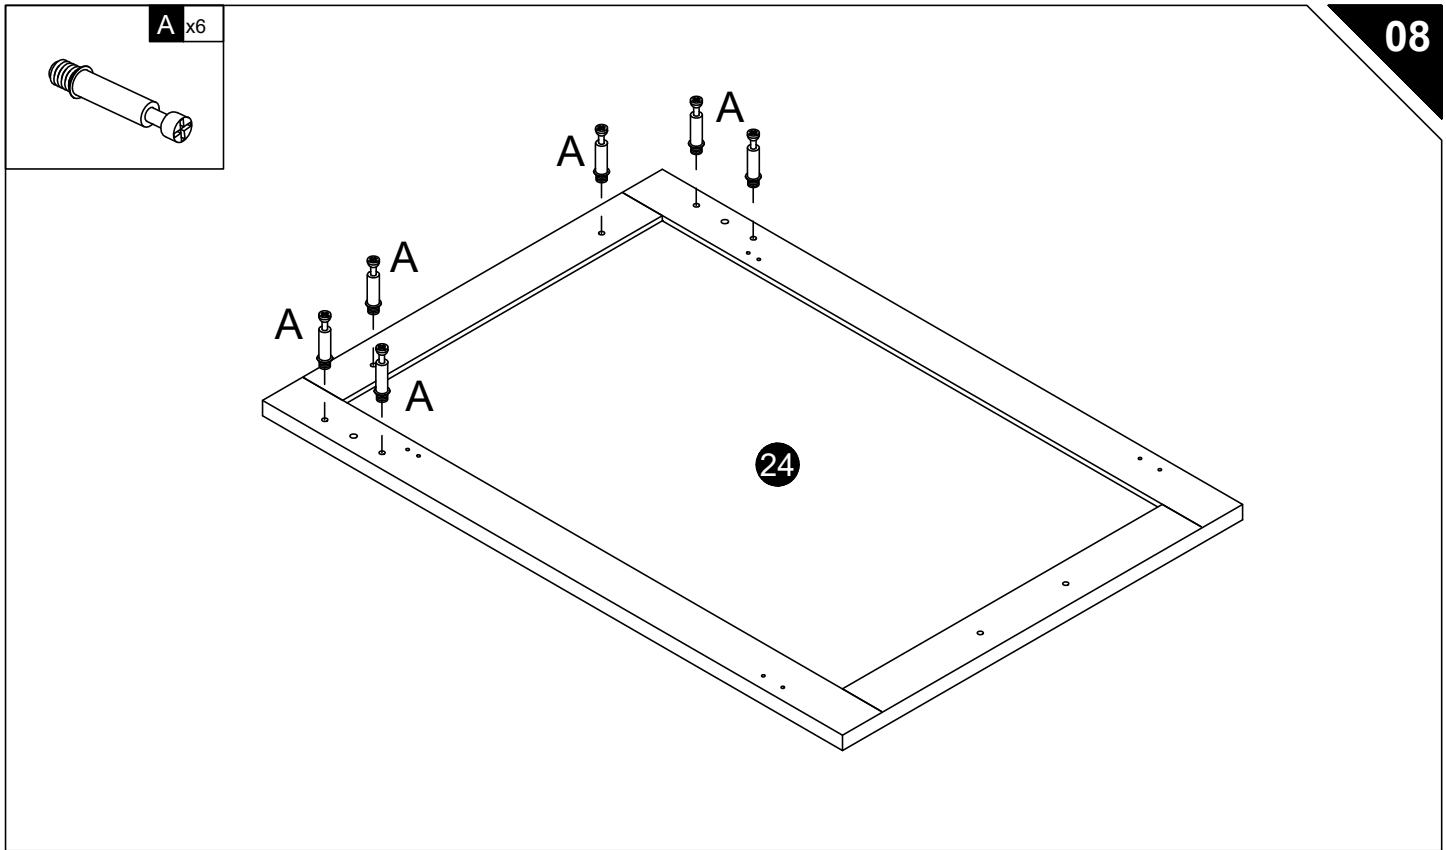


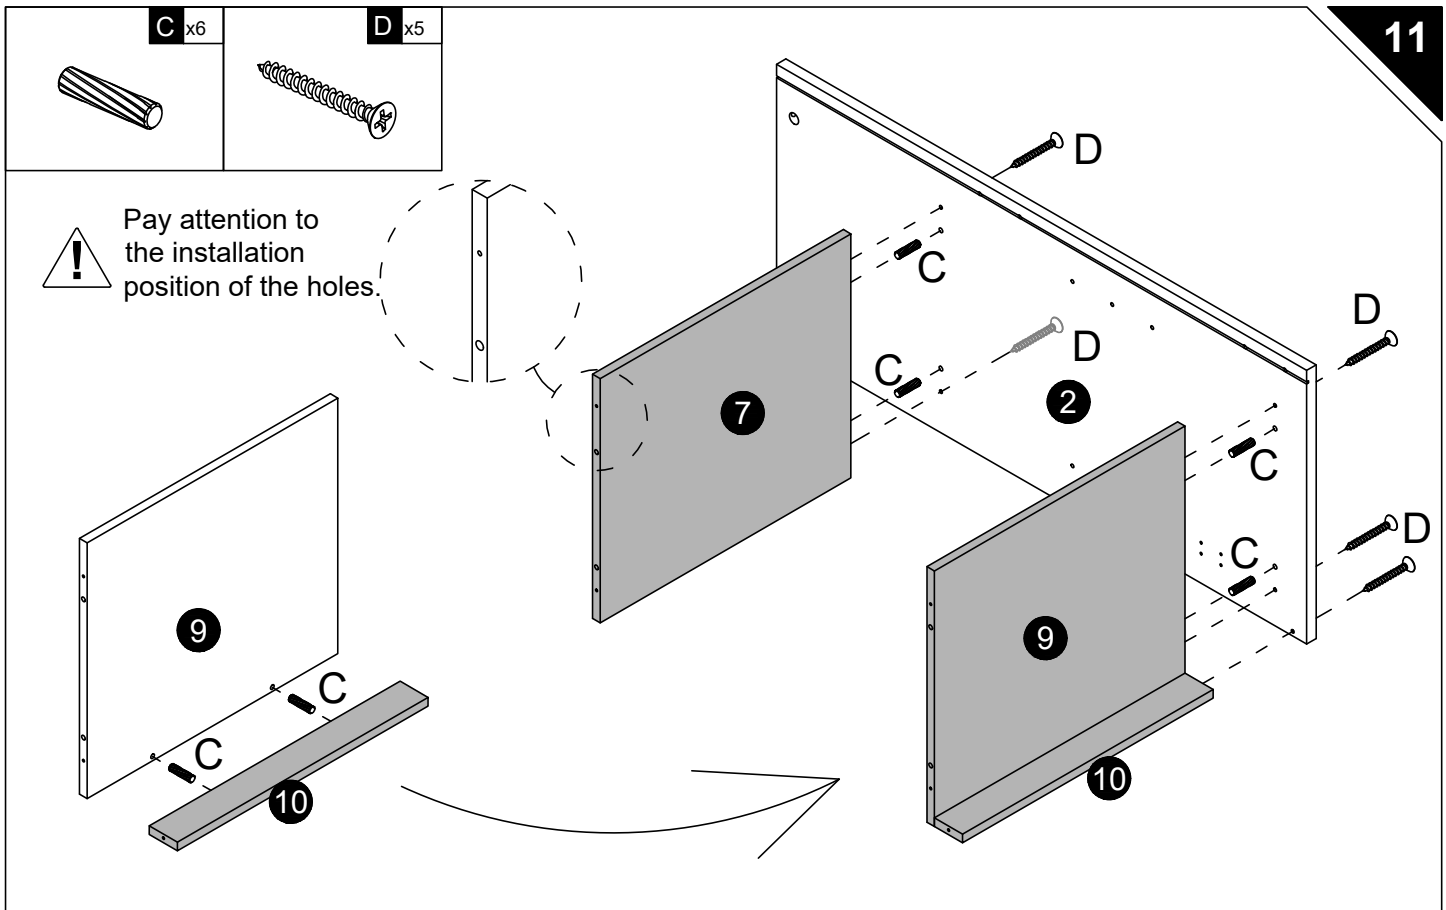


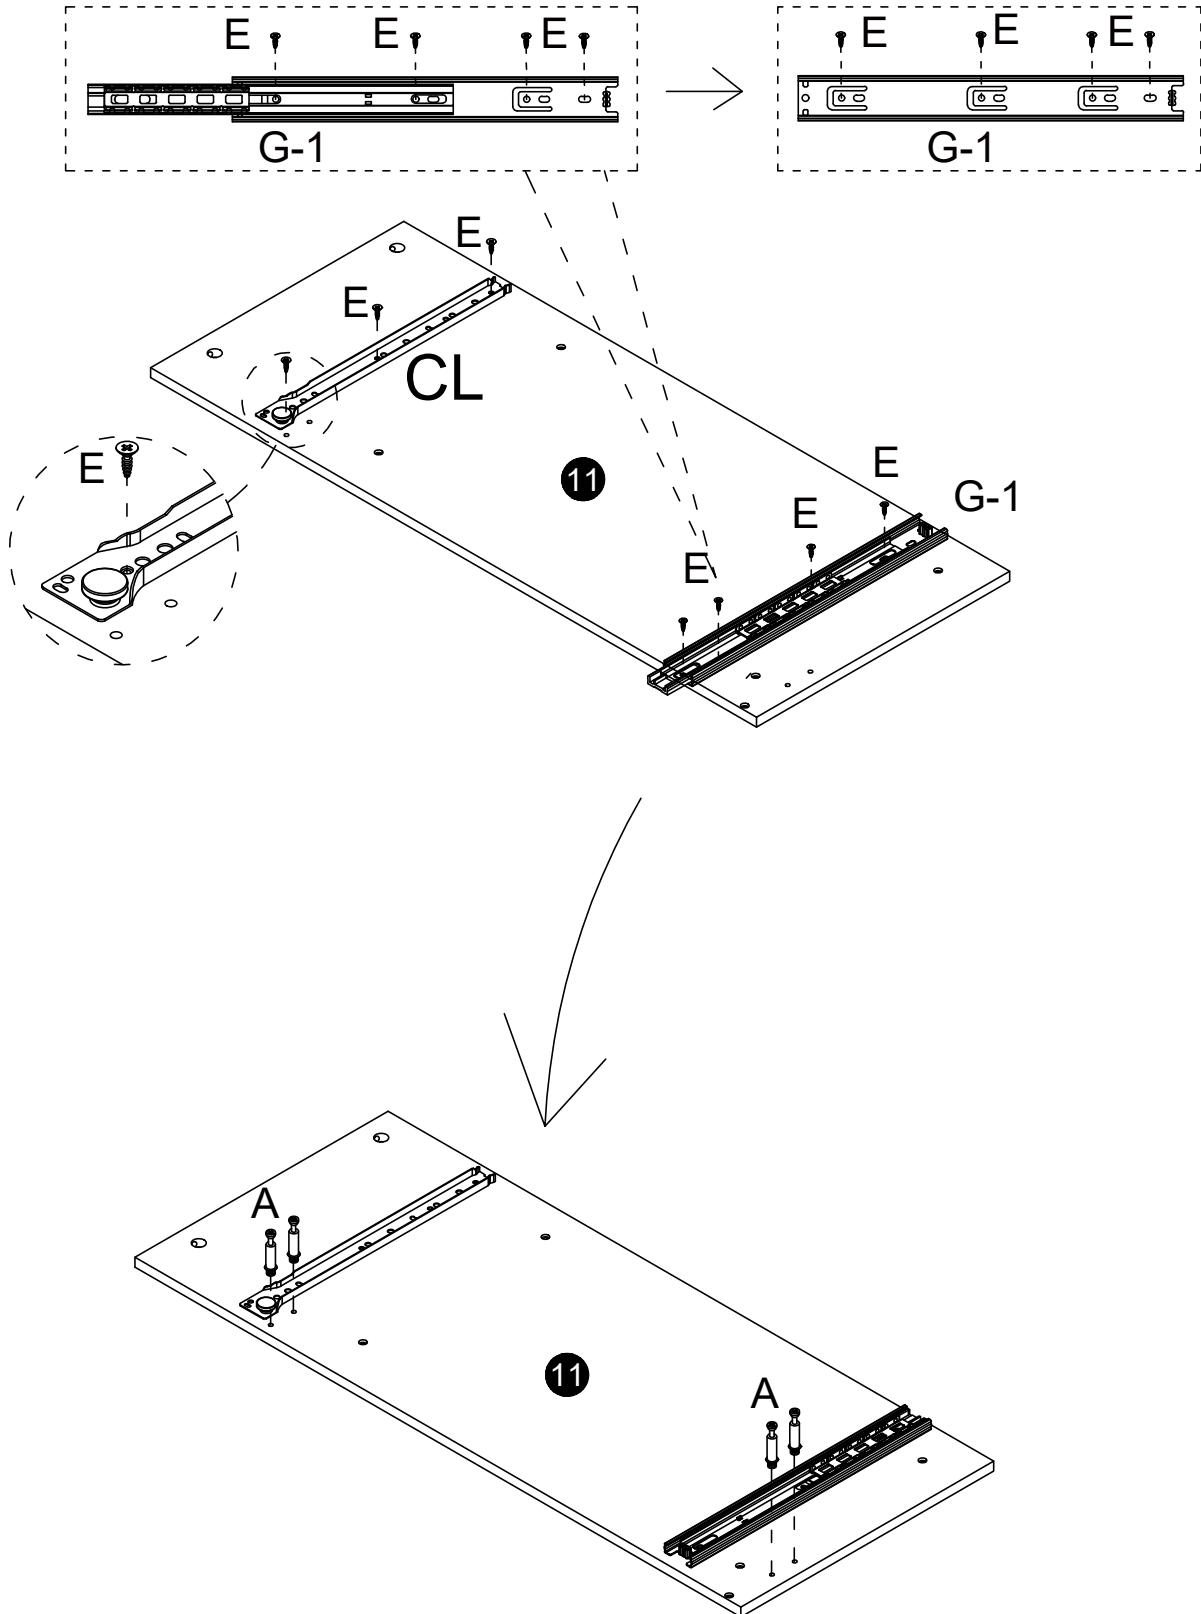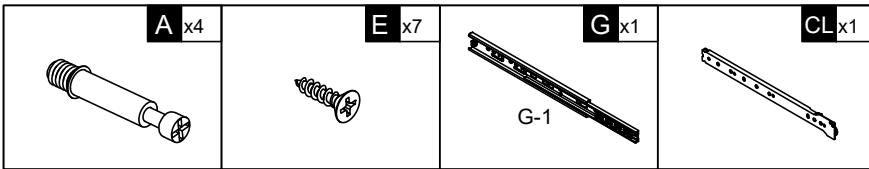

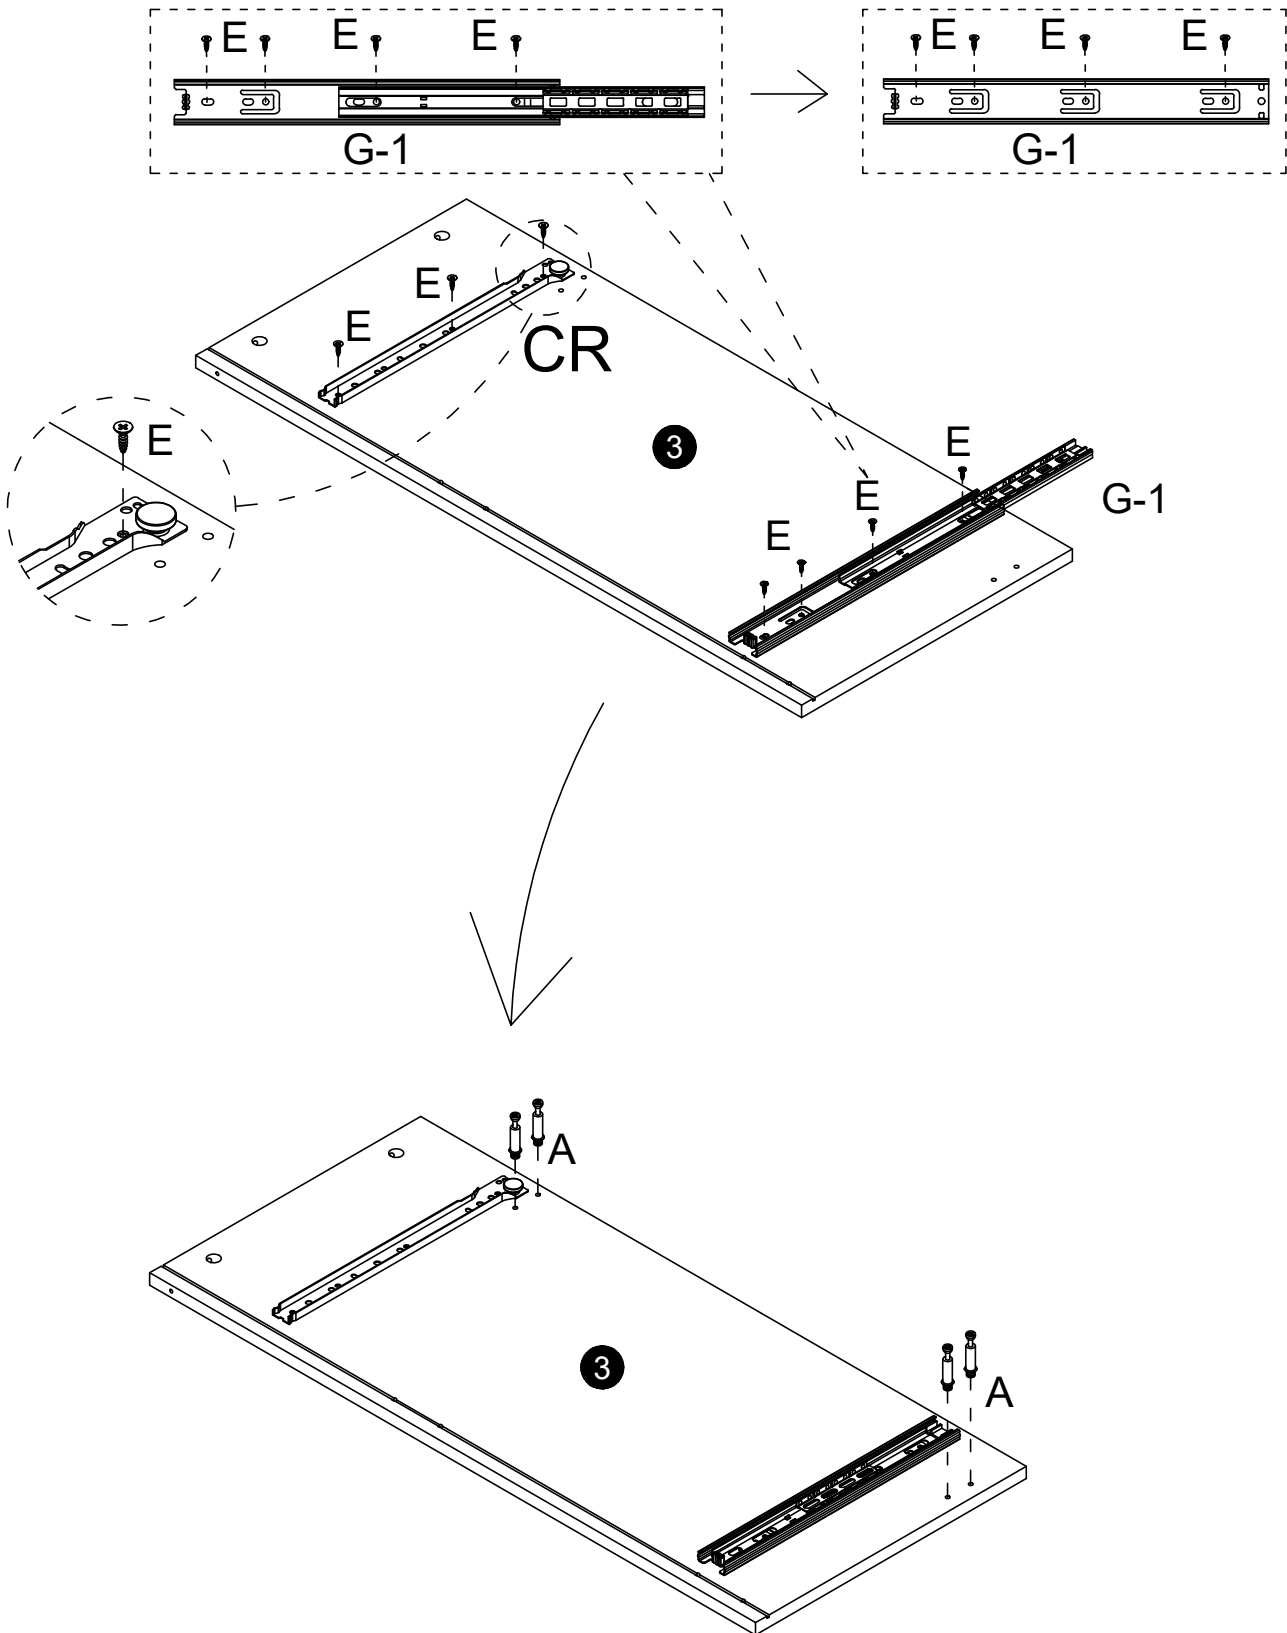
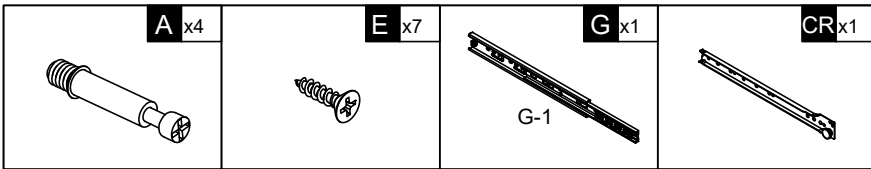


C x4

D x5

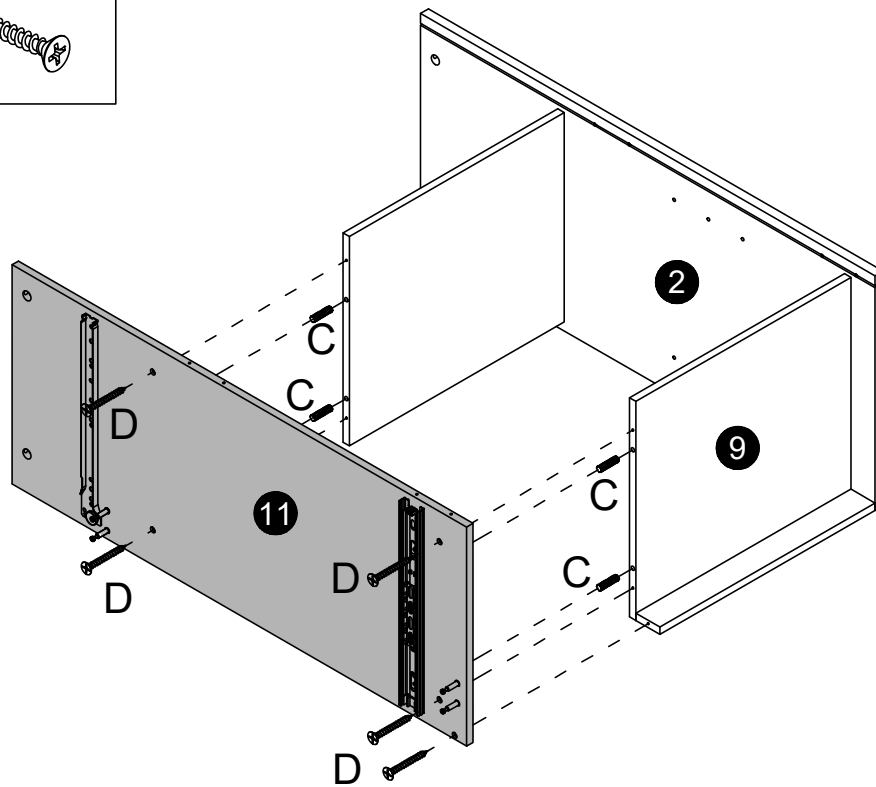


D x4

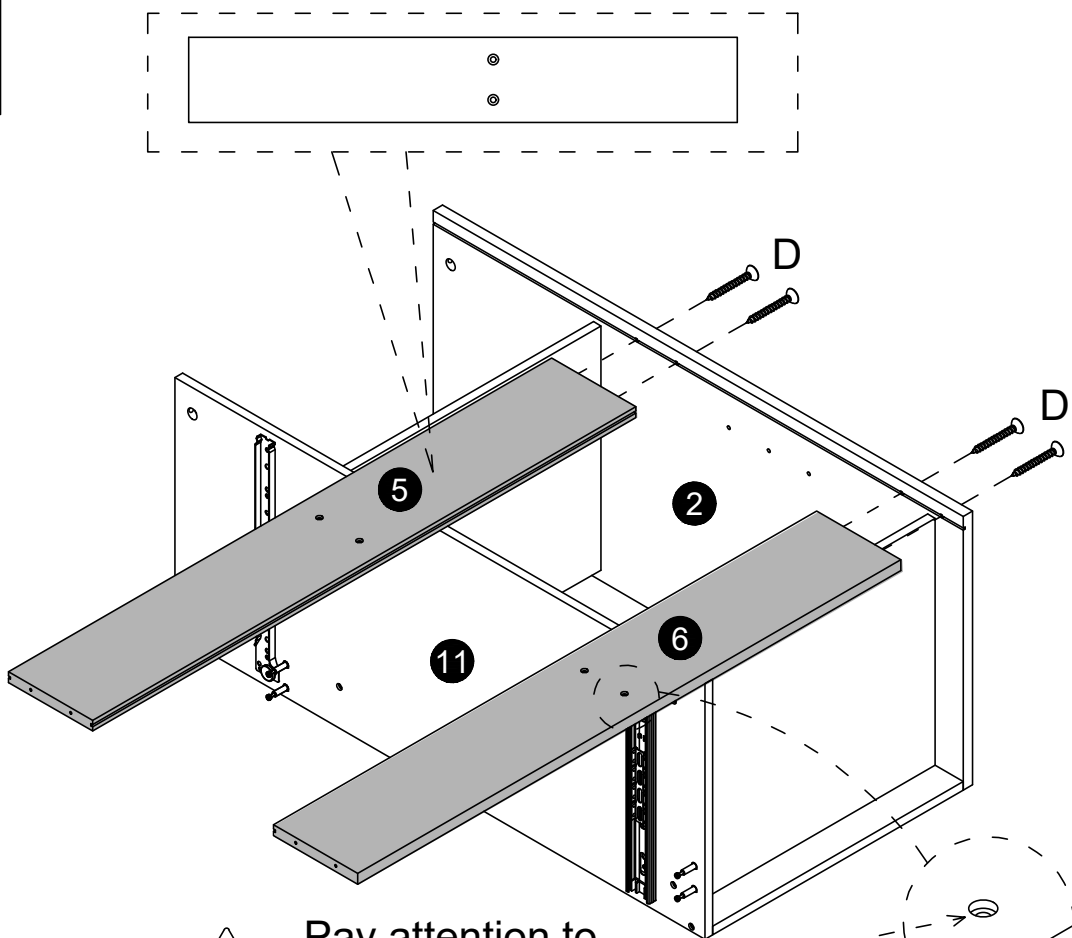


Pay attention to
the installation
position of the holes.


D x4



16

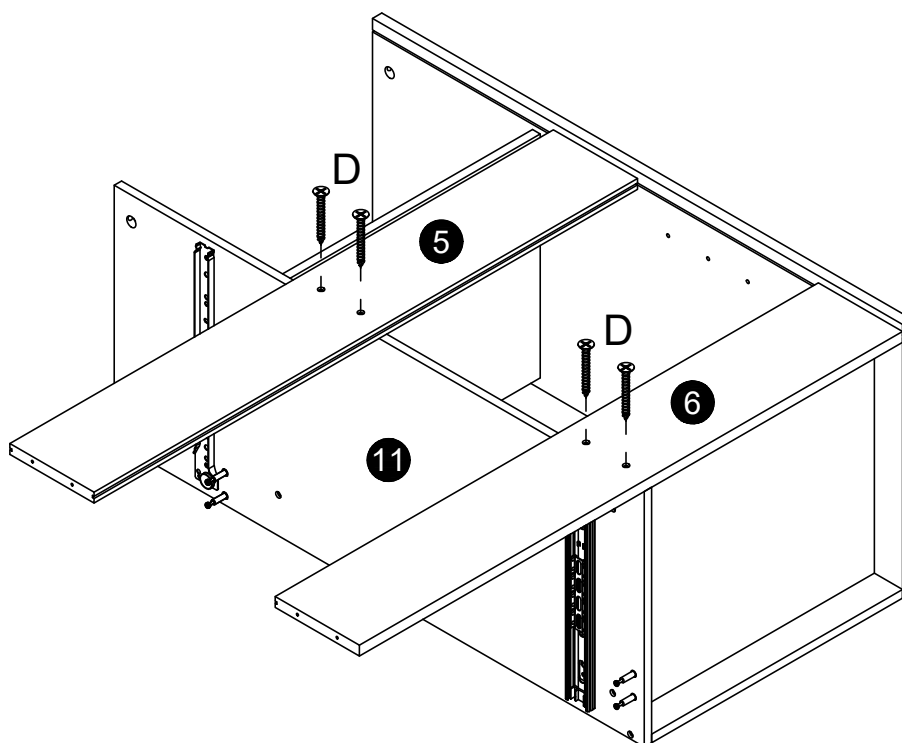



17

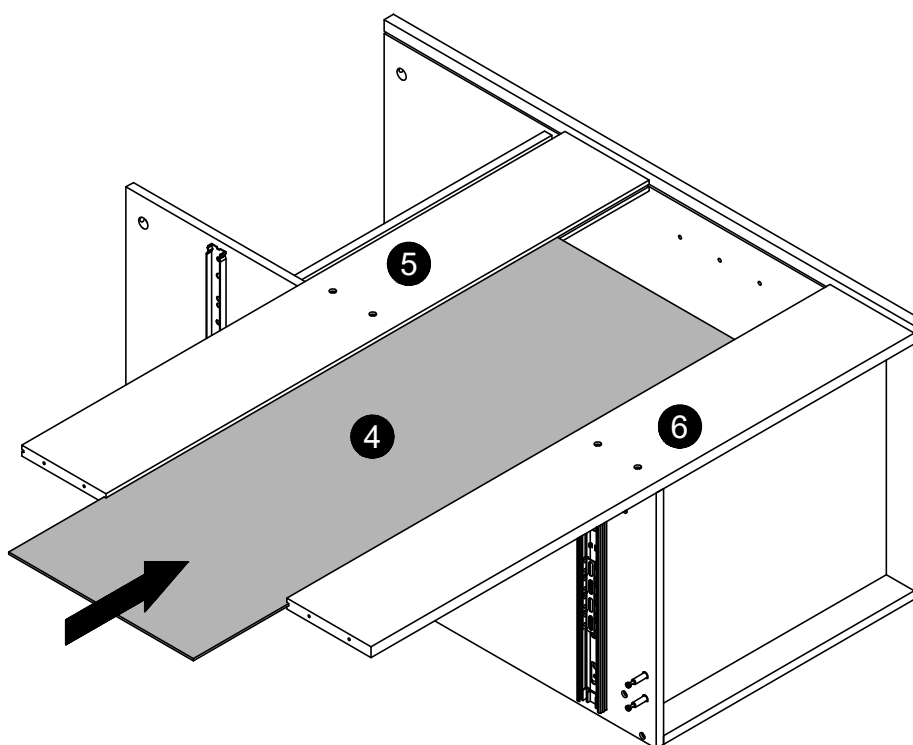


B x8



D x4

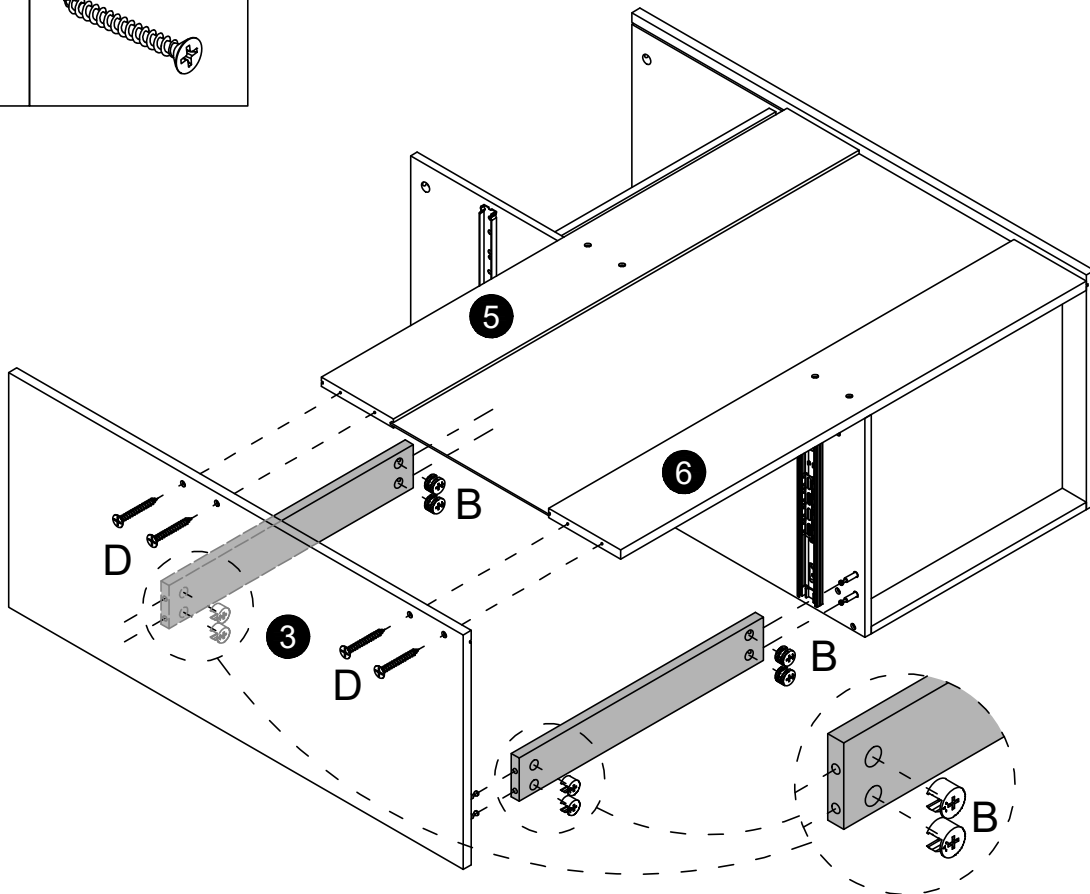



C x6

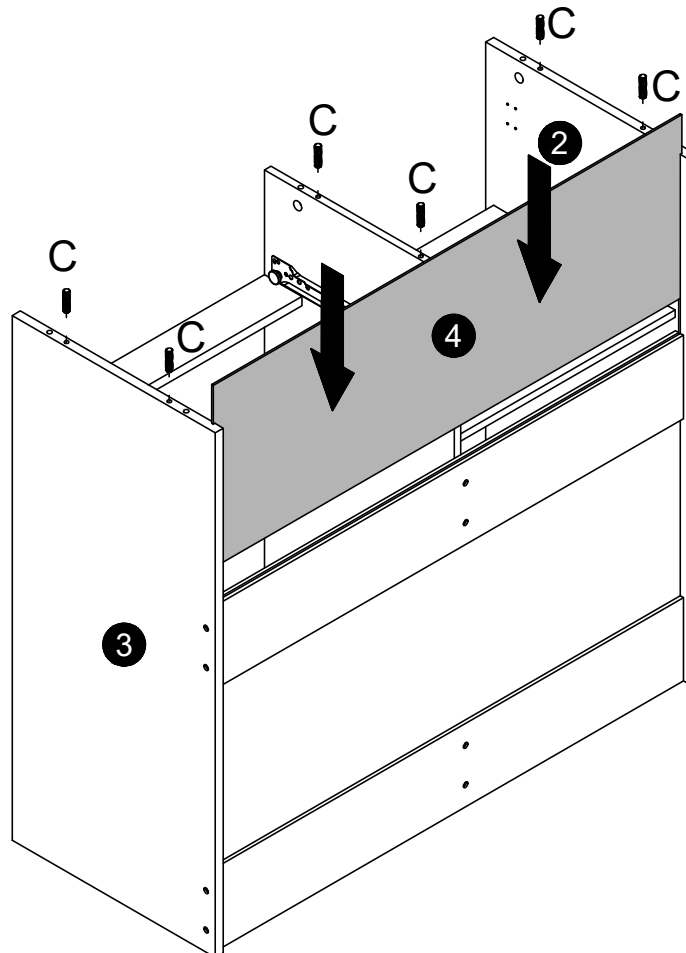


A x6




20

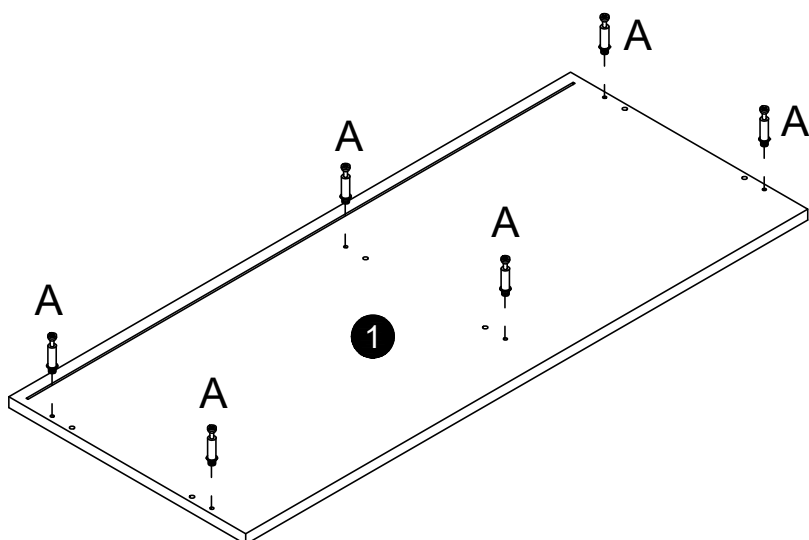


B x6

21

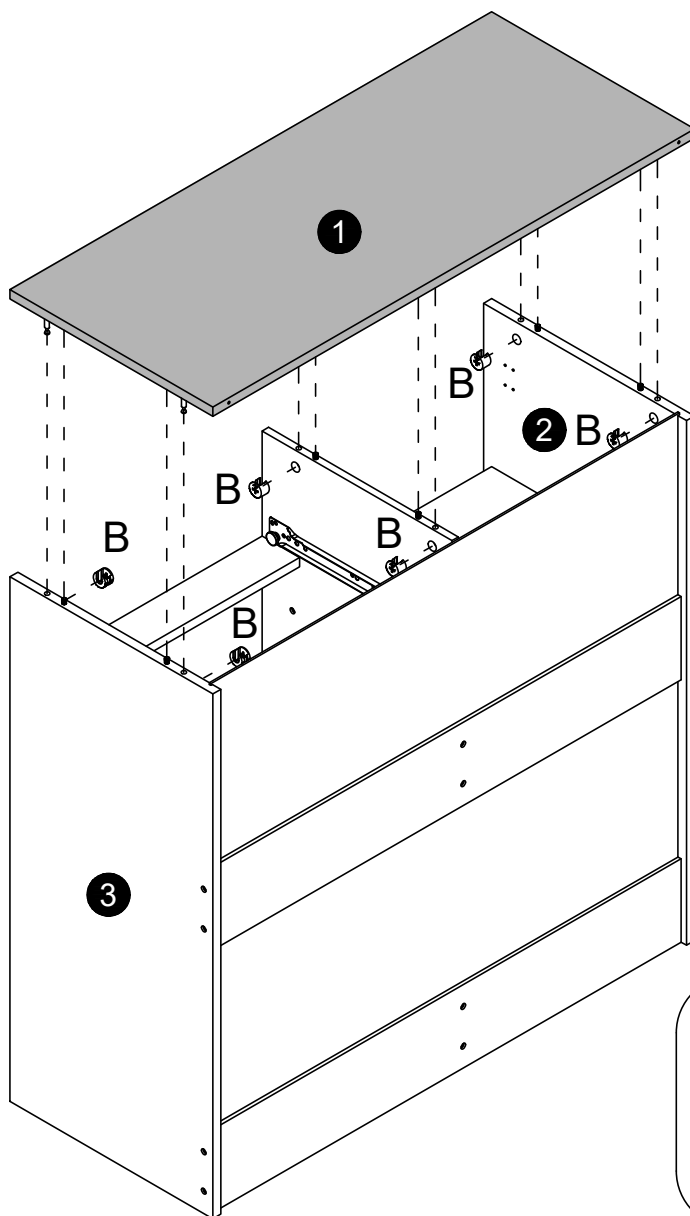

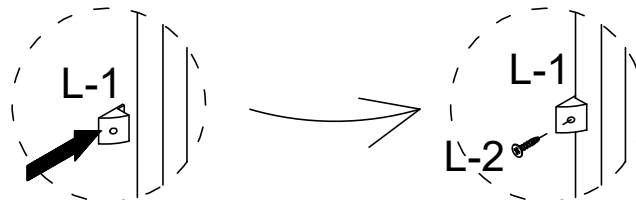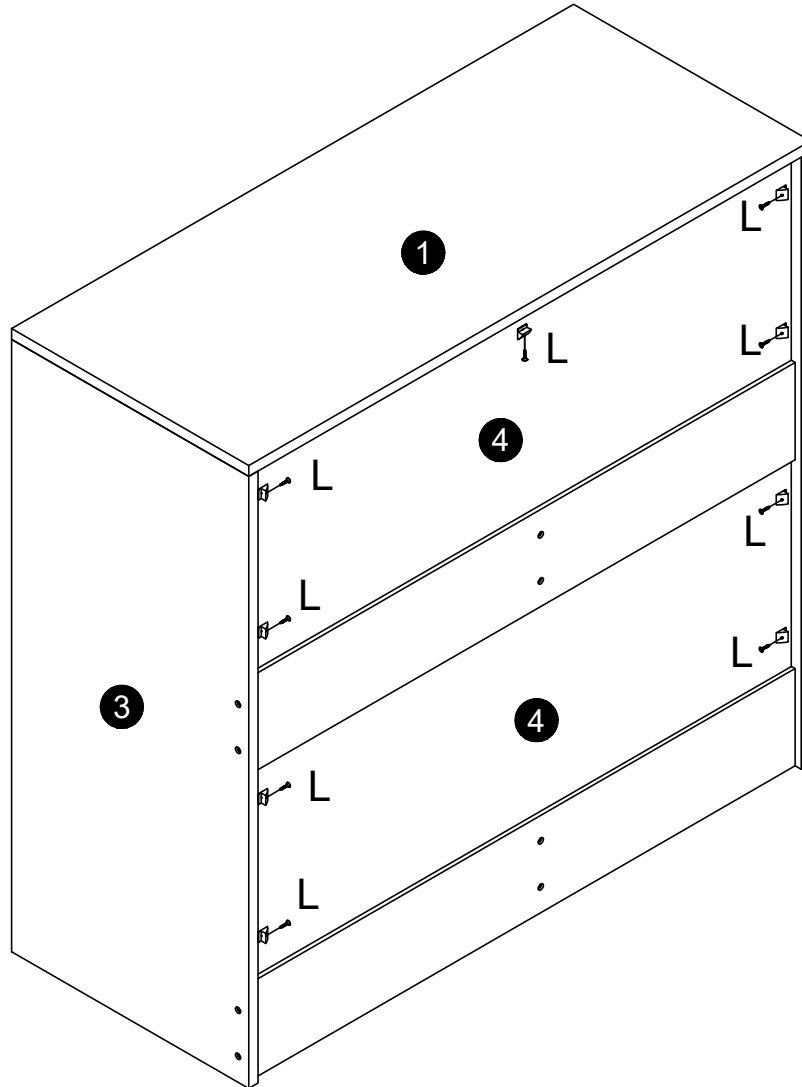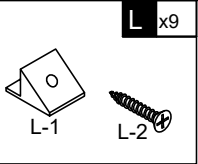


J x4

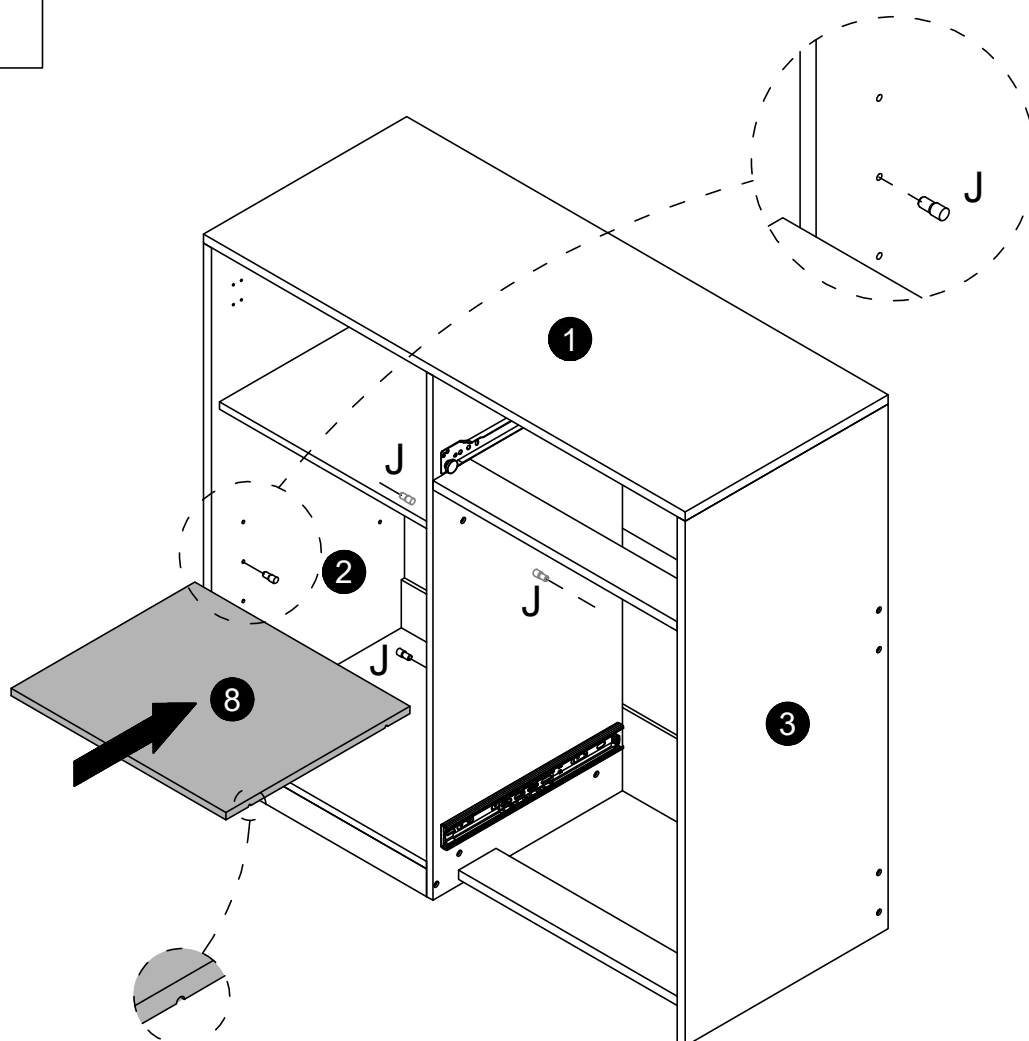


E x4






F x1




K x2

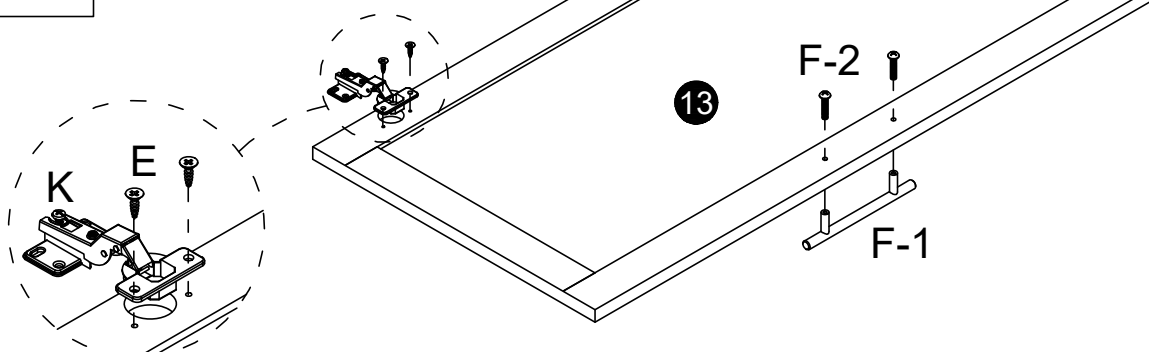

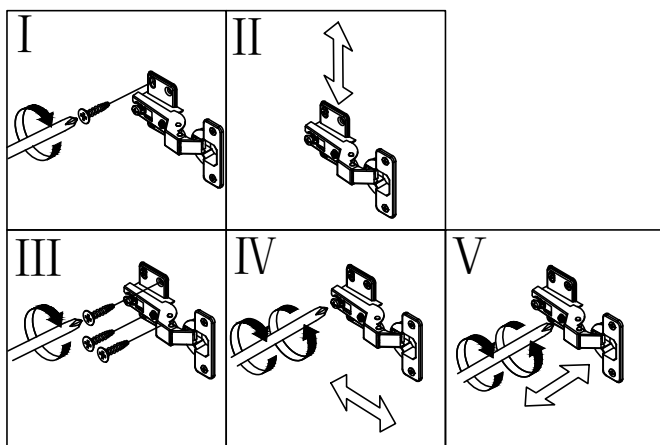
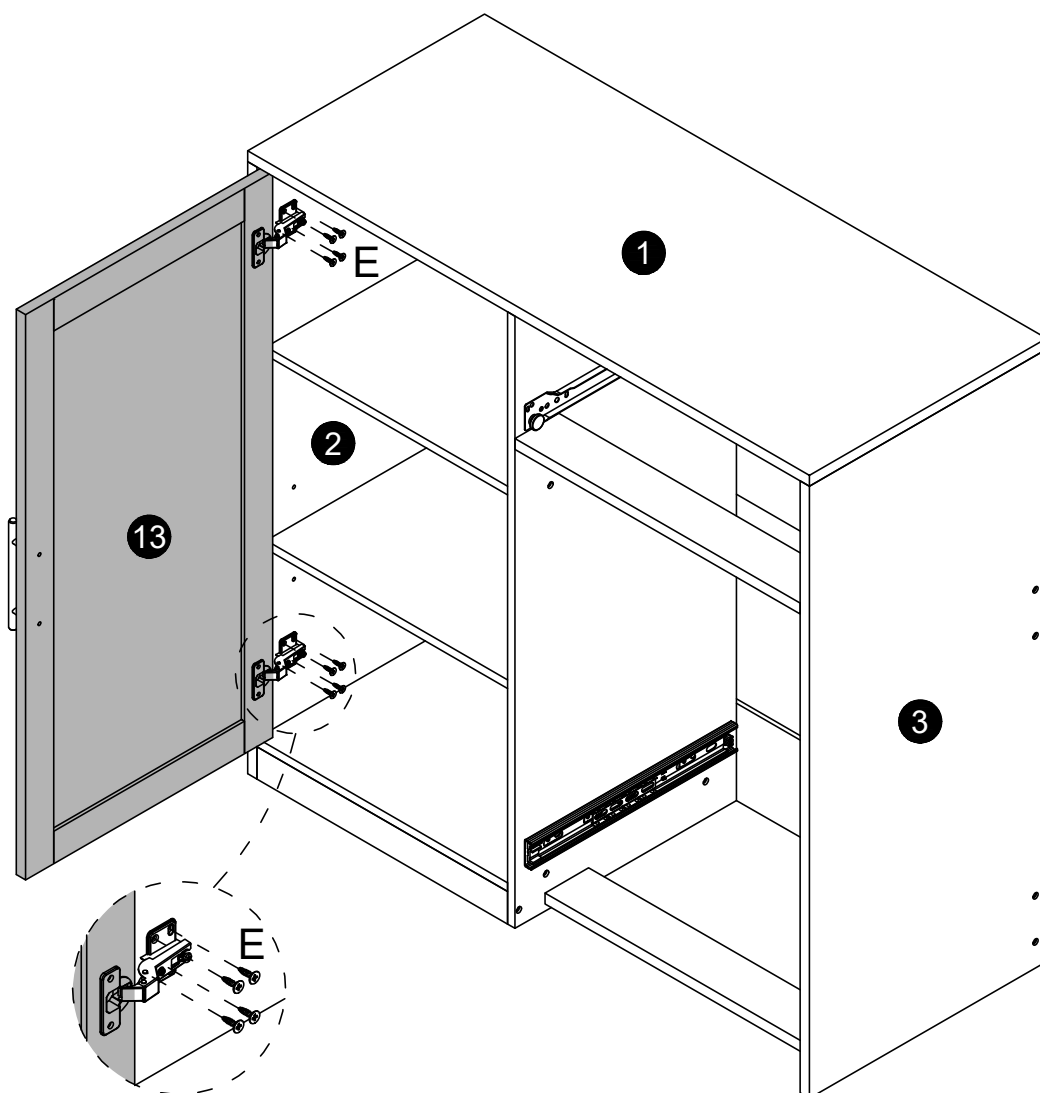



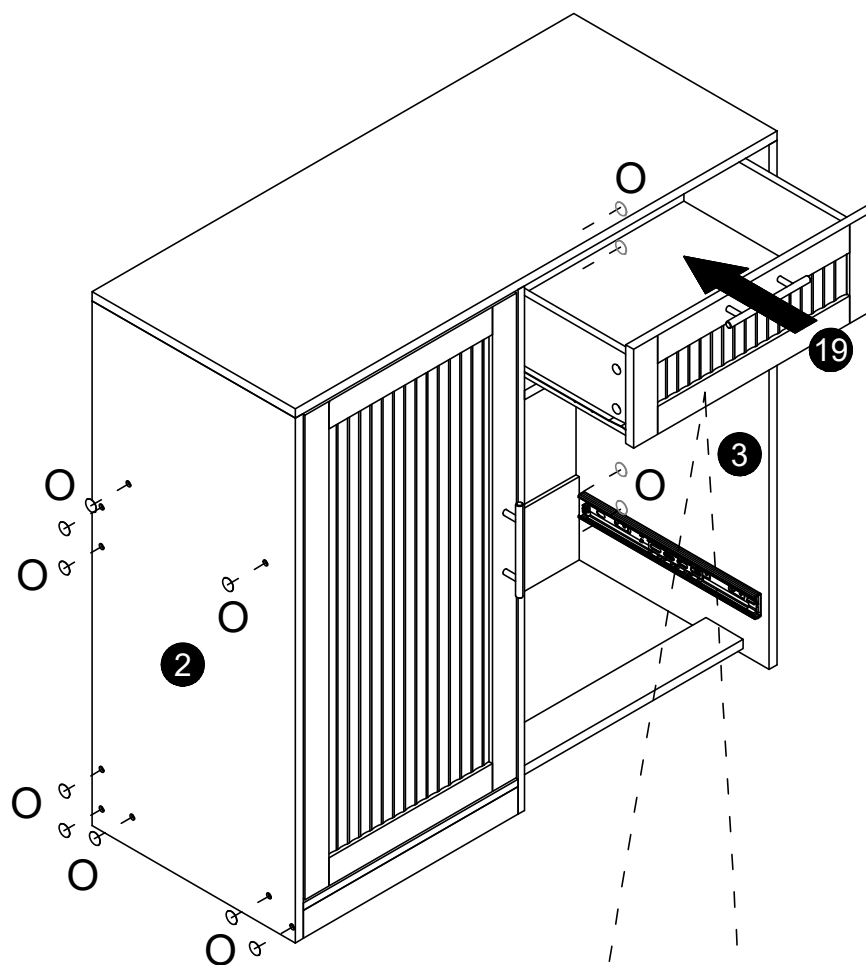


(1)

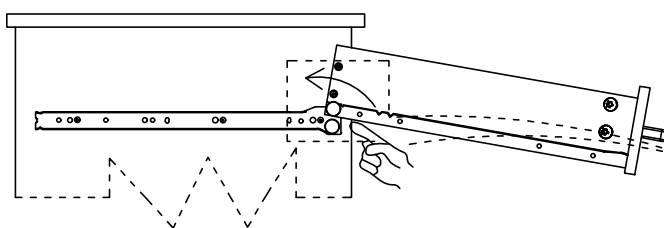


(2)

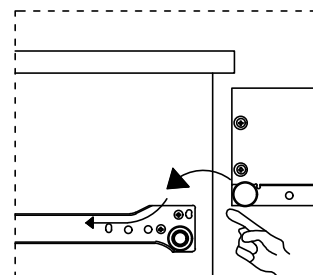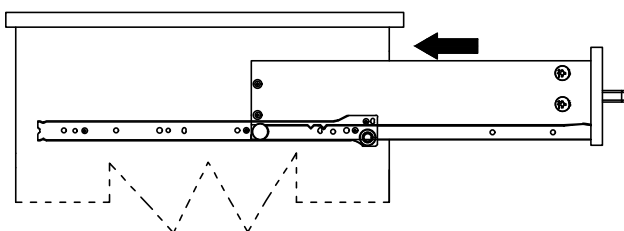

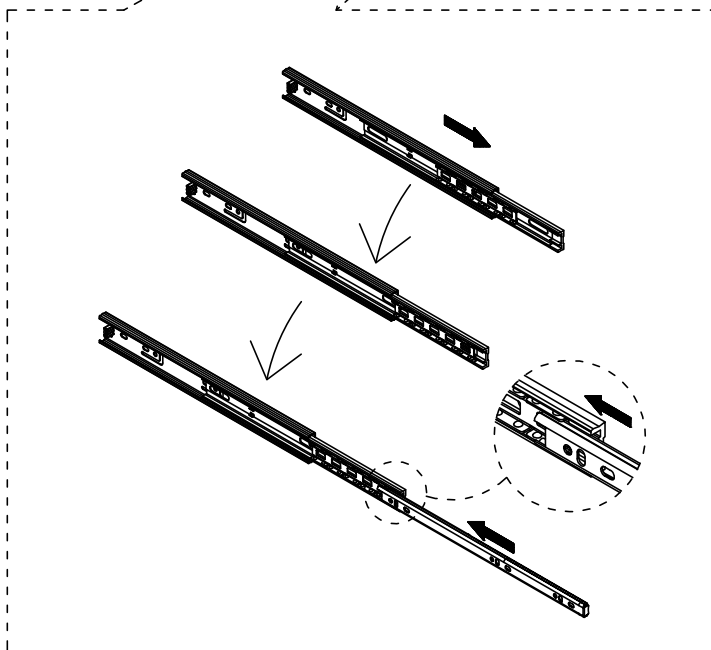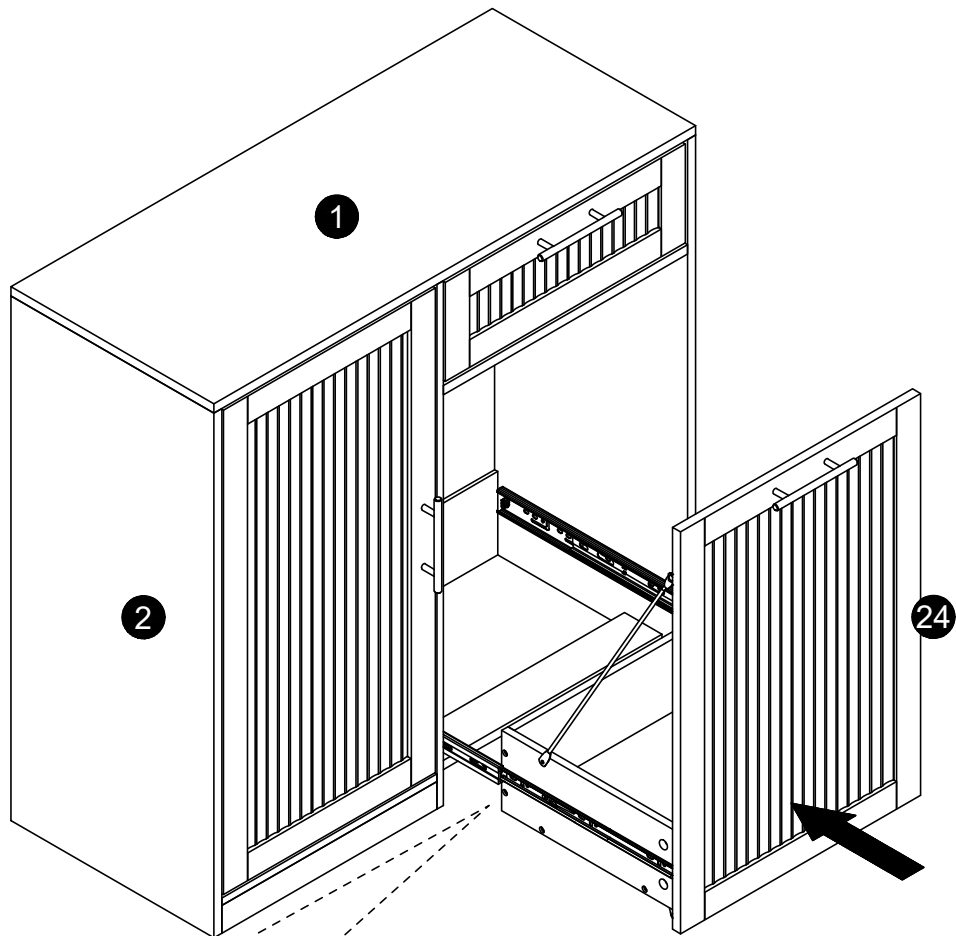


Please make sure to align the slide rail with the notch properly. Support it with your hand and push it in horizontally so that the sliding ball can fit into the groove and function properly.


D x2




M x2



N x2




M-1

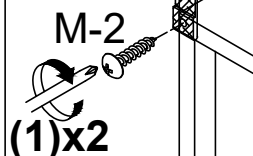

First fix the anti-rewind screw in the reserved hole of the product.


WALL



Then, put the expansion bolt into the hole

(4)x2


WALL

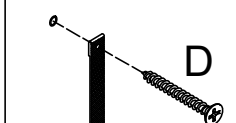

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

(2)x2

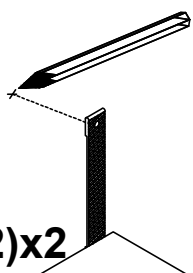


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL



Then use a tape drill to make holes in the wall that are suitable for the product screws.

(3)x2

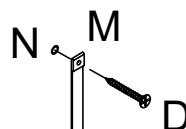

WALL

