


# Domi outdoor living

domi  
outdoor living

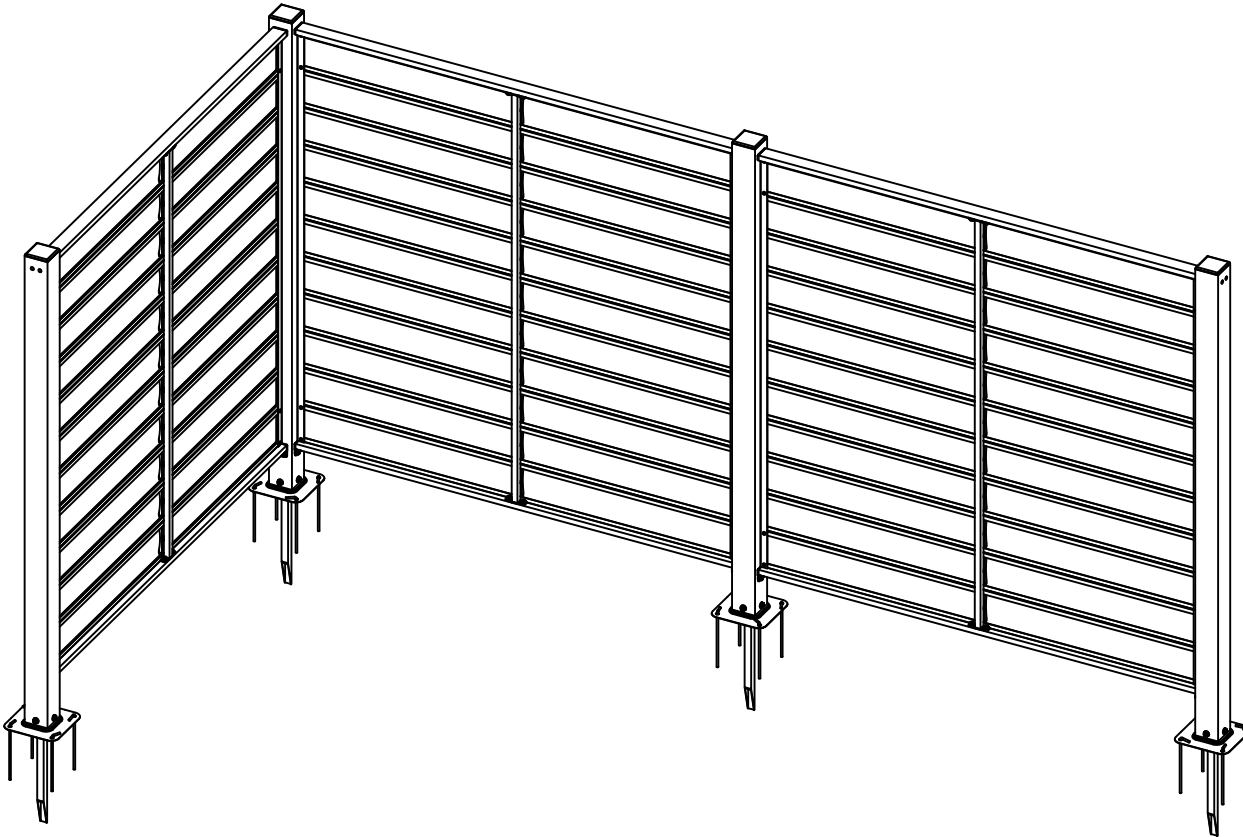


SKU: LNCF0622-3pcs

Outdoor Privacy Screen


**Assembly Manual**

# **READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY**

1. PLEASE SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ON A SOFT MAT OR SIMILAR.
3. PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. WHILE EACH SCREW AND NUT IS PROPERLY FASTENED, DO NOT OVER FASTEN IT.
6. DO NOT COMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FIXED.
7. WEARING PROTECTIVE GLOVES IS RECOMMENDED.











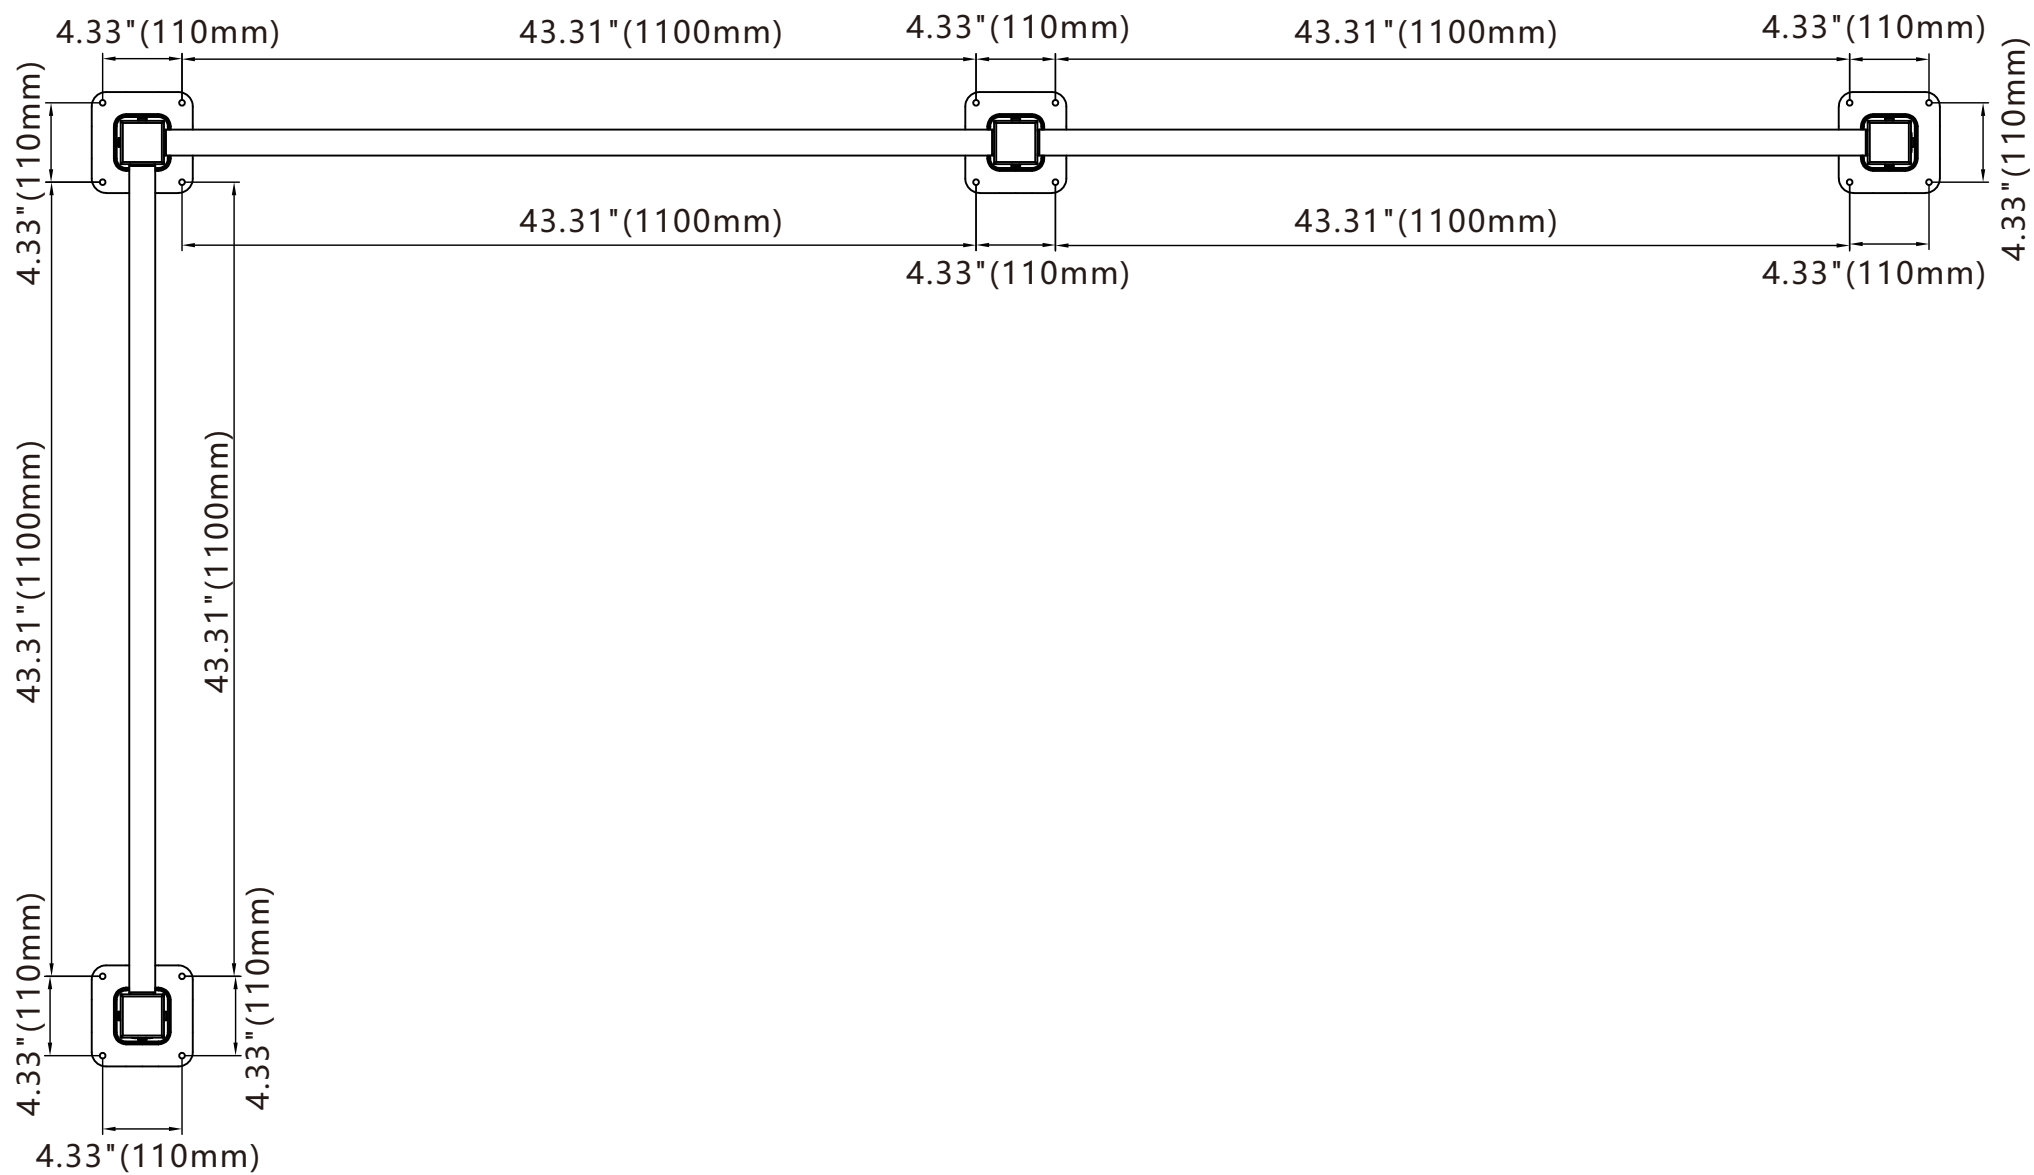




1

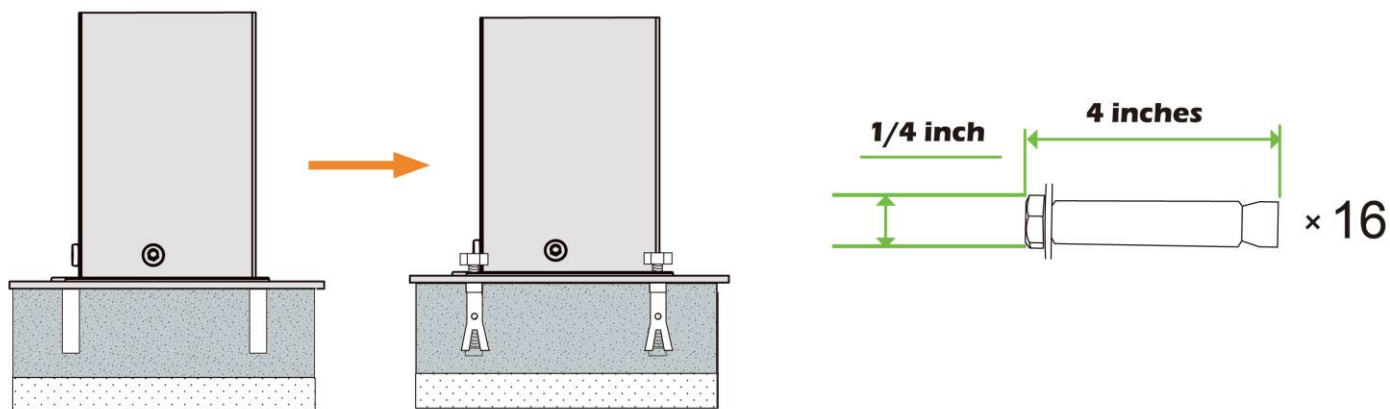

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the Outdoor Privacy Screen.


If the ground is grassy, you can use ground stakes to mount the Outdoor Privacy Screen. Make sure to drive the ground stakes deep enough into the soil to ensure stability.
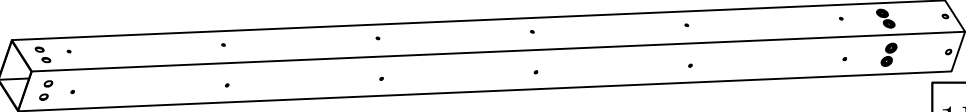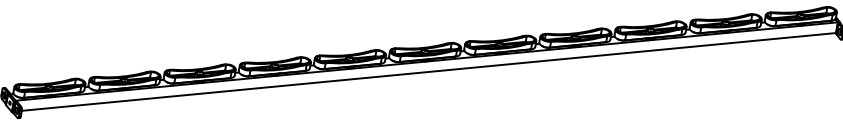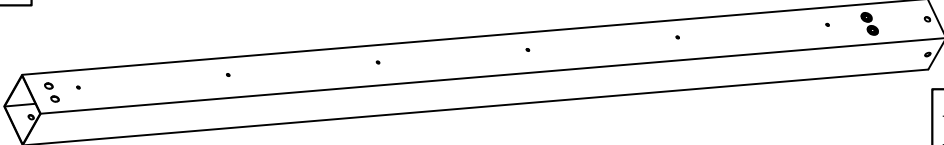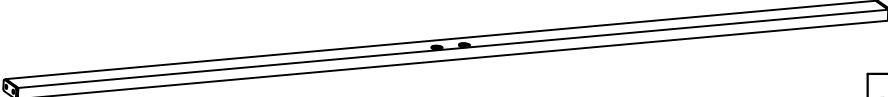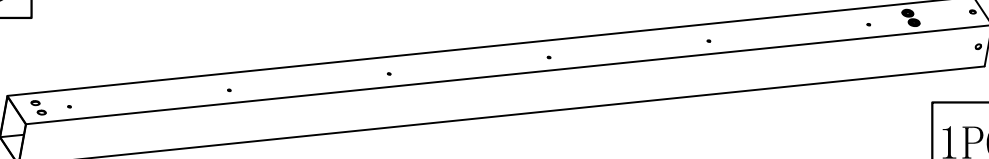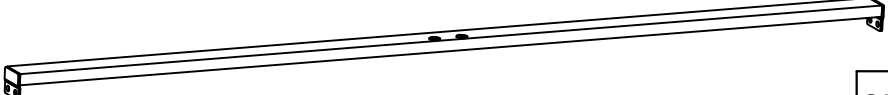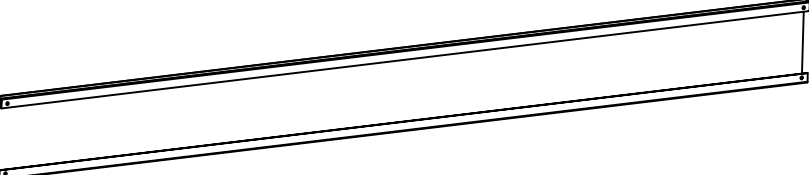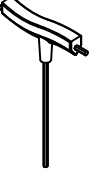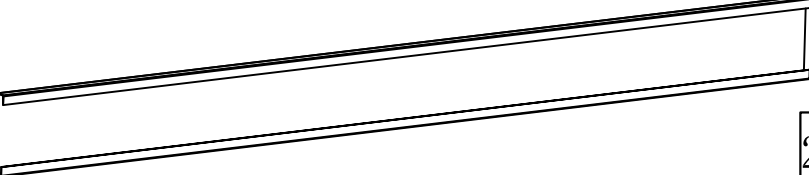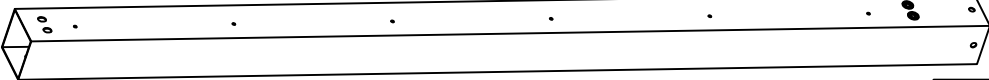
|                                                                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="51 36 138 124">A</div>  <div data-bbox="1037 212 1115 276">1PC</div>         | <div data-bbox="1120 36 1207 124">G</div>  <div data-bbox="2078 212 2188 276">3PCS</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <div data-bbox="51 292 138 379">B</div>  <div data-bbox="1037 467 1115 531">1PC</div>        | <div data-bbox="1120 292 1207 379">H</div>  <div data-bbox="2078 467 2188 531">3PCS</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <div data-bbox="51 547 138 635">C</div>  <div data-bbox="1037 707 1115 770">1PC</div>        | <div data-bbox="1120 547 1207 635">I</div>  <div data-bbox="2078 722 2188 786">3PCS</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <div data-bbox="51 802 138 890">D</div>  <div data-bbox="1014 962 1115 1026">6PCS</div>       | <div data-bbox="1120 802 1164 842">J</div>  <div data-bbox="1238 1010 1294 1042">4PCS</div> <div data-bbox="1299 802 1344 842">K</div>  <div data-bbox="1417 1010 1473 1042">4PCS</div> <div data-bbox="1478 802 1523 842">L</div>  <div data-bbox="1585 1010 1653 1042">16PCS</div> <div data-bbox="1646 802 1691 842">M</div>  <div data-bbox="1776 1010 1832 1042">4PCS</div> <div data-bbox="1825 802 1870 842">N</div>  <div data-bbox="1944 1010 2011 1042">68PCS</div> <div data-bbox="2004 802 2049 842">O</div>  <div data-bbox="2123 1010 2190 1042">52PCS</div> |
| <div data-bbox="51 1058 138 1145">E</div>  <div data-bbox="1014 1217 1115 1281">6PCS</div> | <div data-bbox="1120 1058 1164 1098">P</div>  <div data-bbox="1238 1265 1294 1297">60PCS</div> <div data-bbox="1299 1058 1344 1098">Q</div>  <div data-bbox="1417 1265 1473 1297">4PCS</div> <div data-bbox="1478 1058 1523 1098">R</div>  <div data-bbox="1608 1265 1653 1297">1PC</div> <div data-bbox="1646 1058 1691 1098">S</div>  <div data-bbox="1787 1265 1832 1297">1PC</div> <div data-bbox="1825 1058 1870 1098">T</div>  <div data-bbox="1955 1265 2011 1297">2PCS</div>                                                                                                                                                                  |
| <div data-bbox="51 1313 138 1401">F</div>  <div data-bbox="992 1473 1115 1536">27PCS</div> | <div data-bbox="1120 1313 1207 1401">U</div>  <div data-bbox="2101 1473 2188 1536">1PC</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

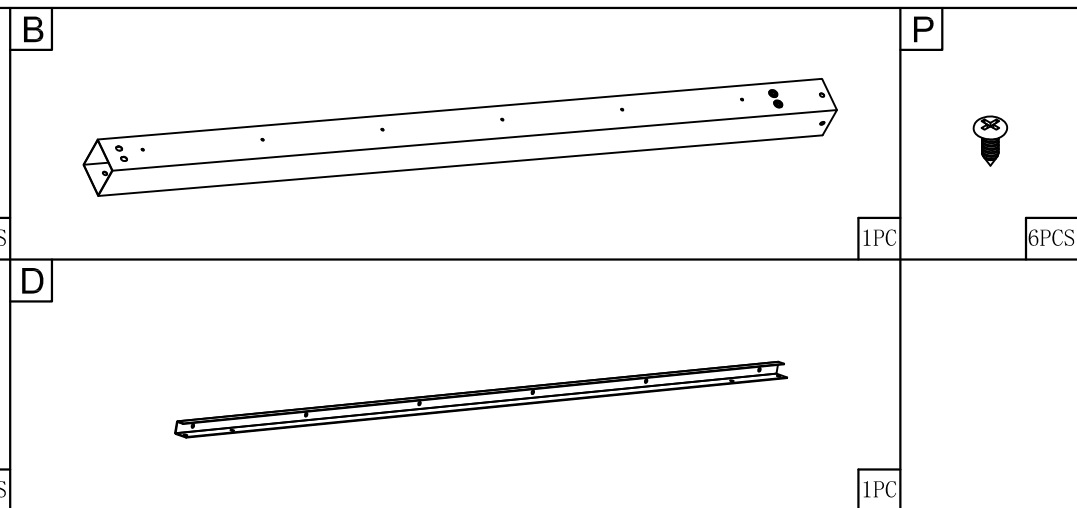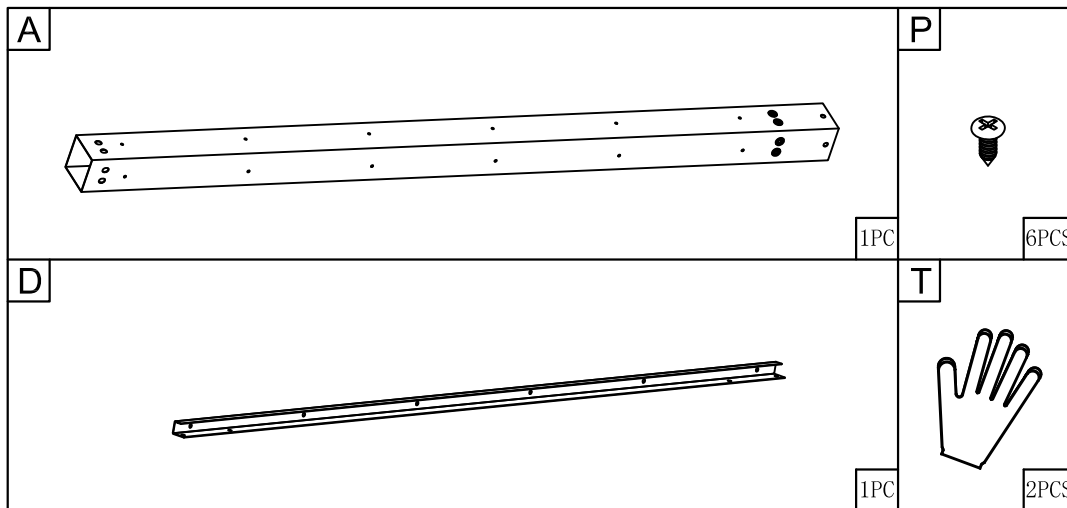


①

⚠ **MAKE SURE TO WEAR PROTECTIVE GLOVES.**


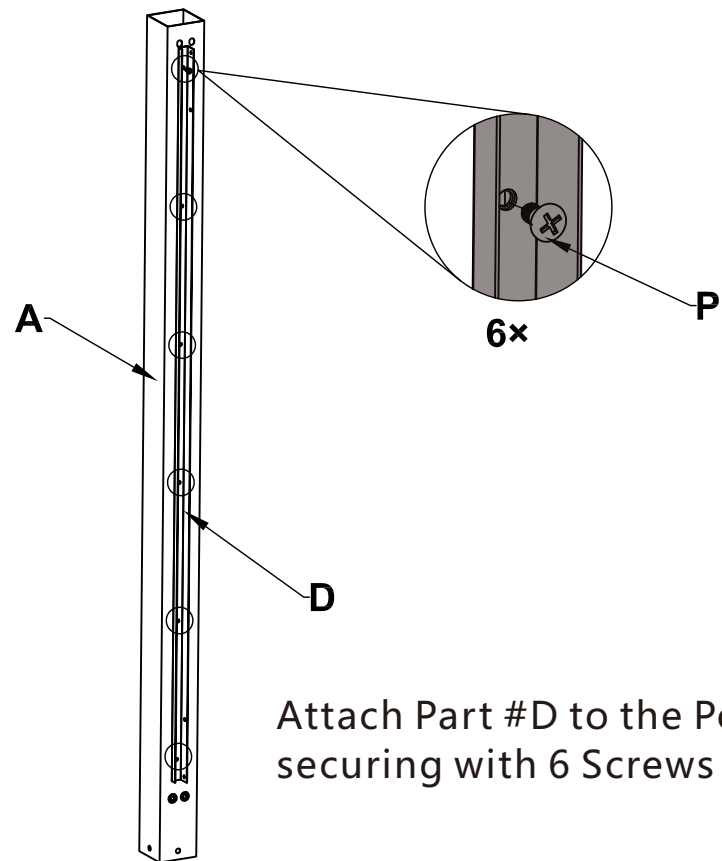


Attach Part #D to the Post #A by securing with 6 Screws #P.

②

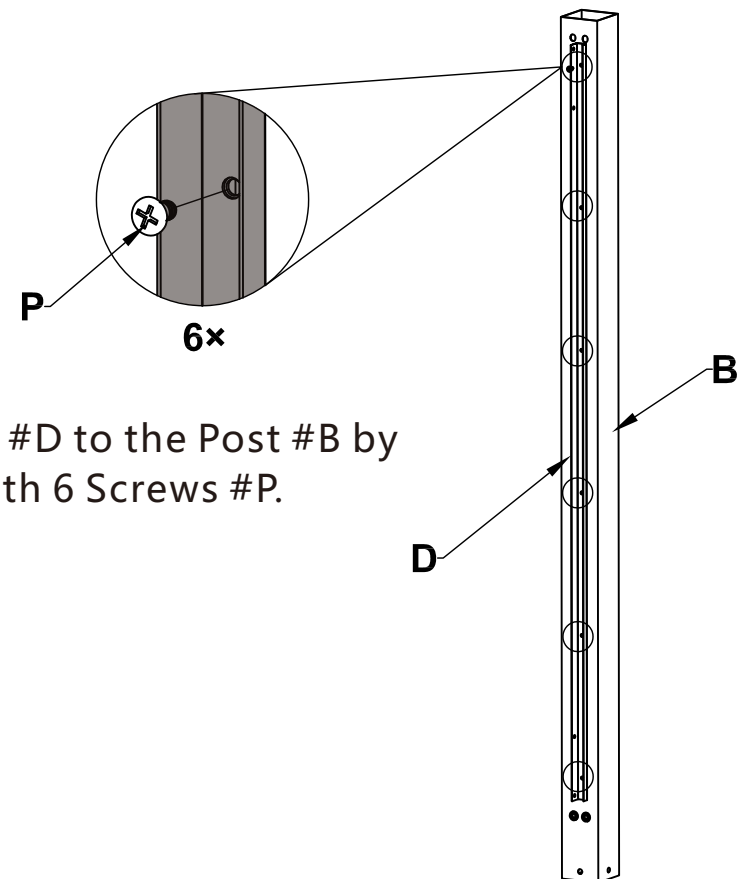


Attach Part #D to the Post #B by securing with 6 Screws #P.

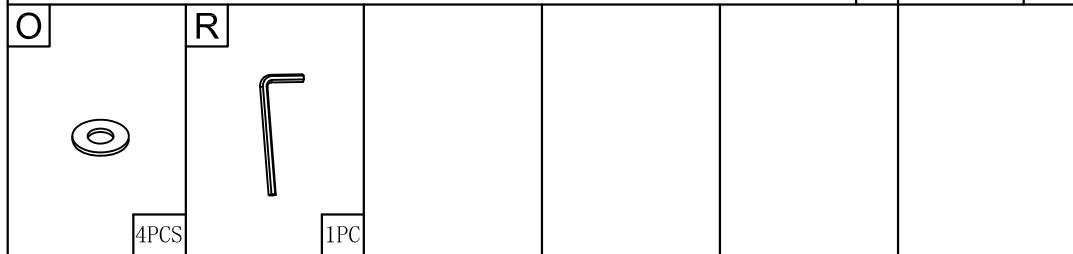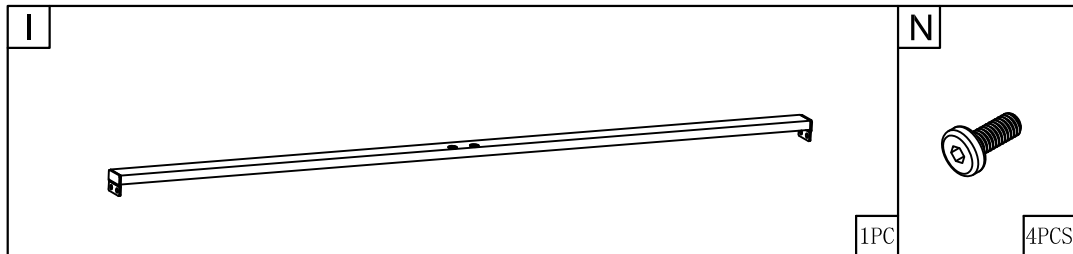

3


**⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.**

Use Part #I to connect the Post #A and #B, securing with 4 Bolts #N and 4 Washers #O.

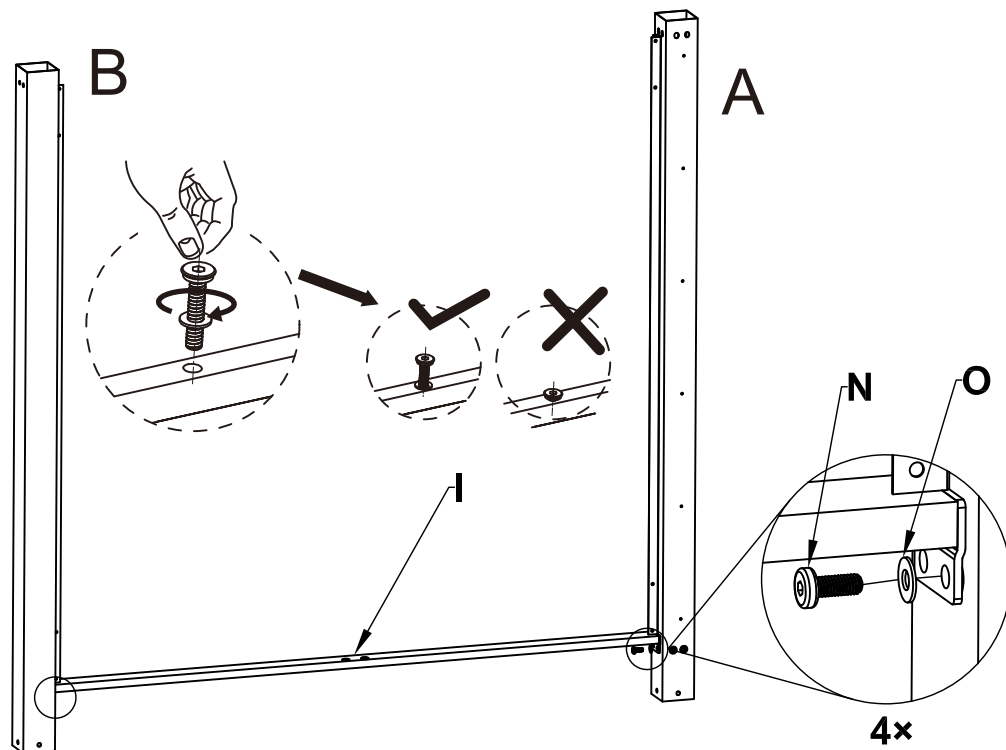


4

Please pay attention to the front and back sides.

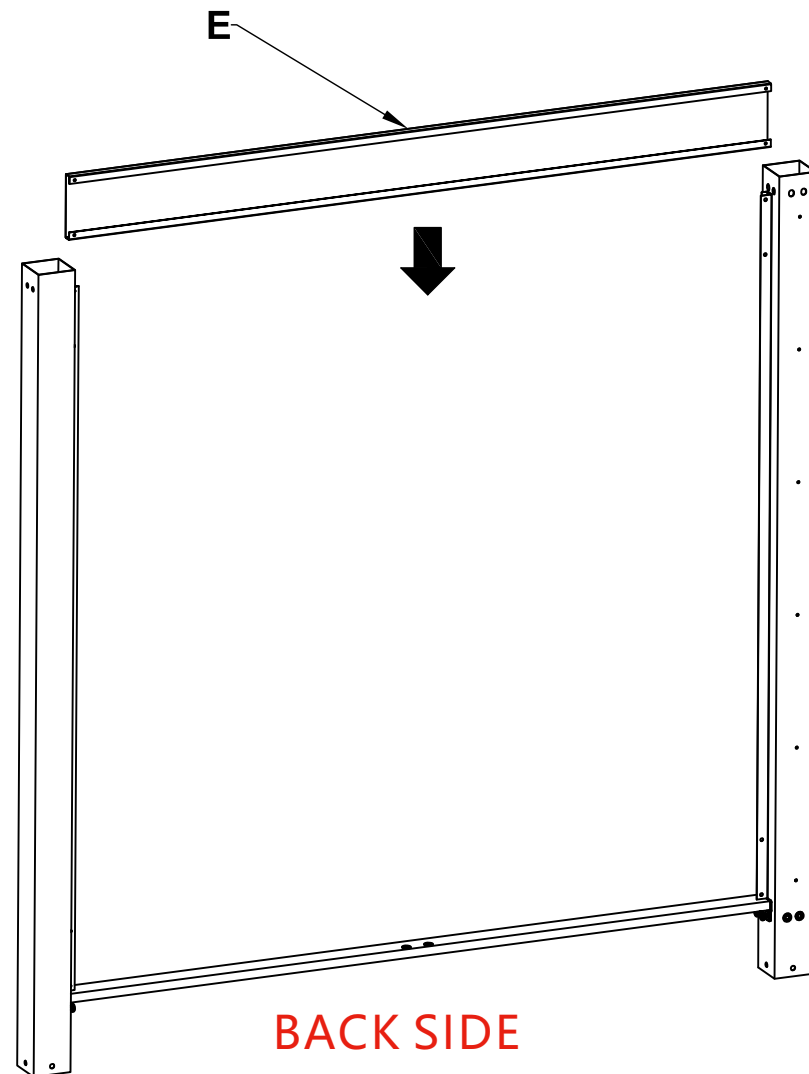


F

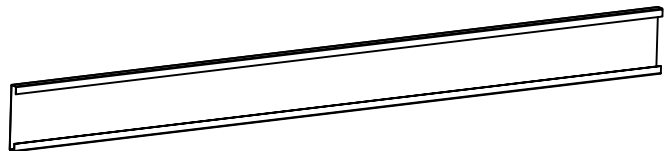


9PCS

E

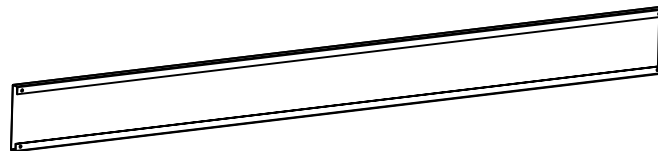


1PC

⑤

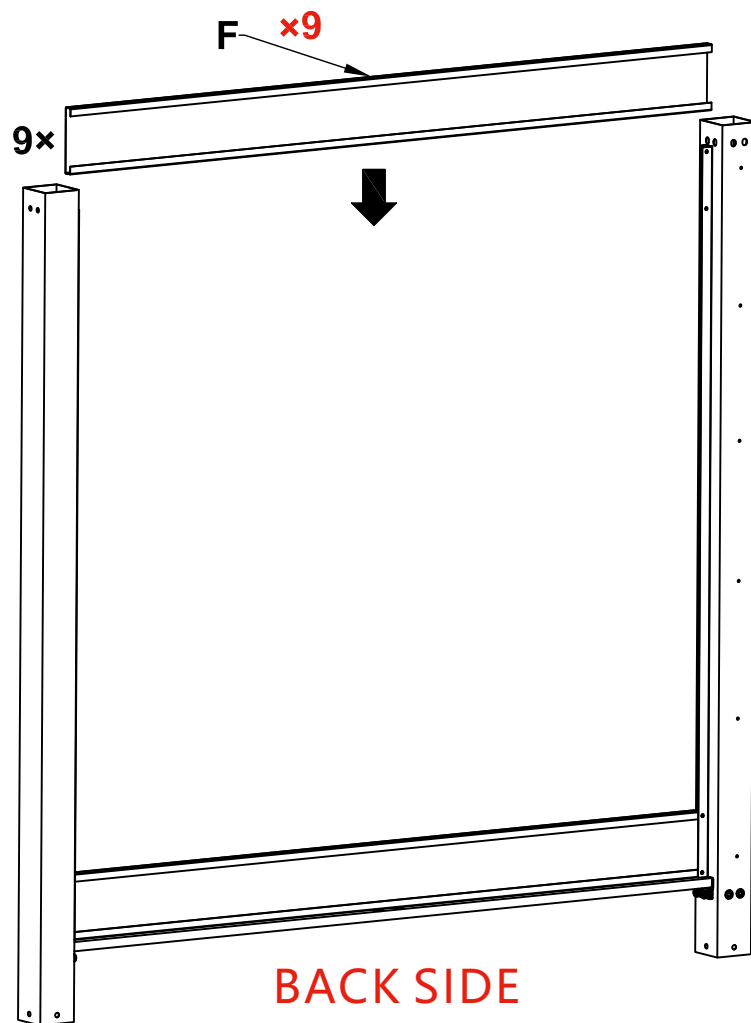

BACK SIDE

⑥

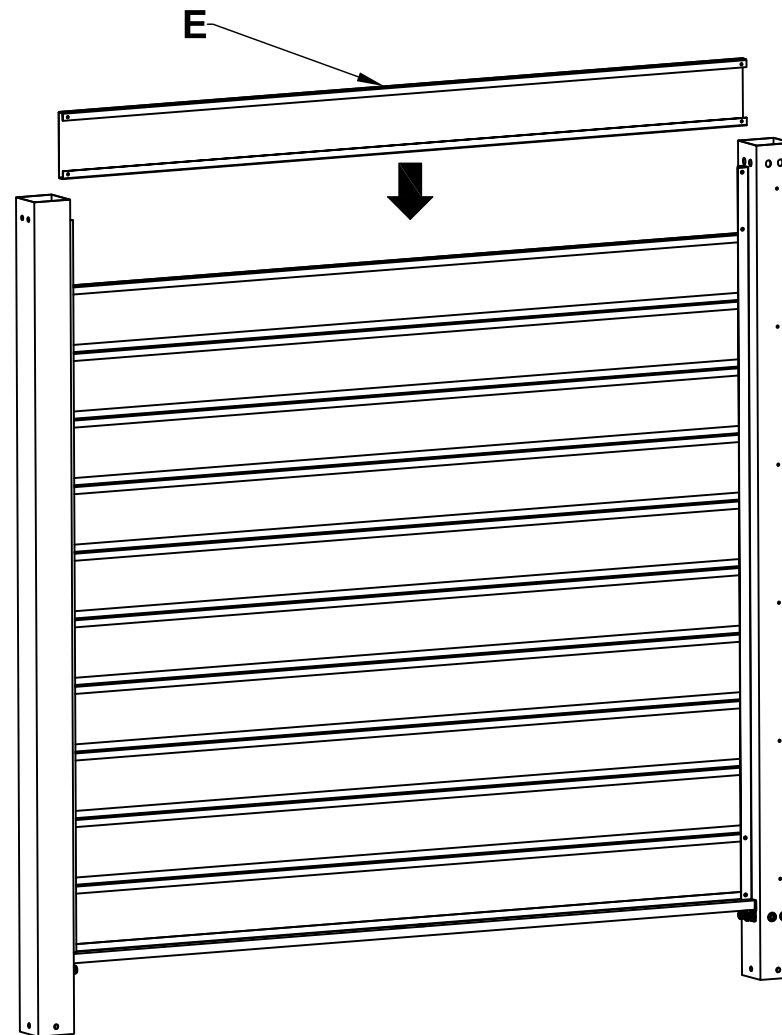

BACK SIDE



H




N



1PC

G

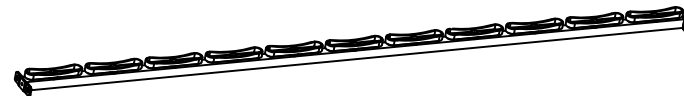

4PCS

1PC

O




4PCS

R



1PC


S

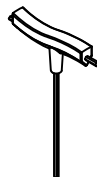

1PC

7


(1) Insert the Panel Edge Banding #H to fit the panel, use 4 Bolts #N and 4 Washers #O to fix the Panel Edge Banding #H onto the Posts.

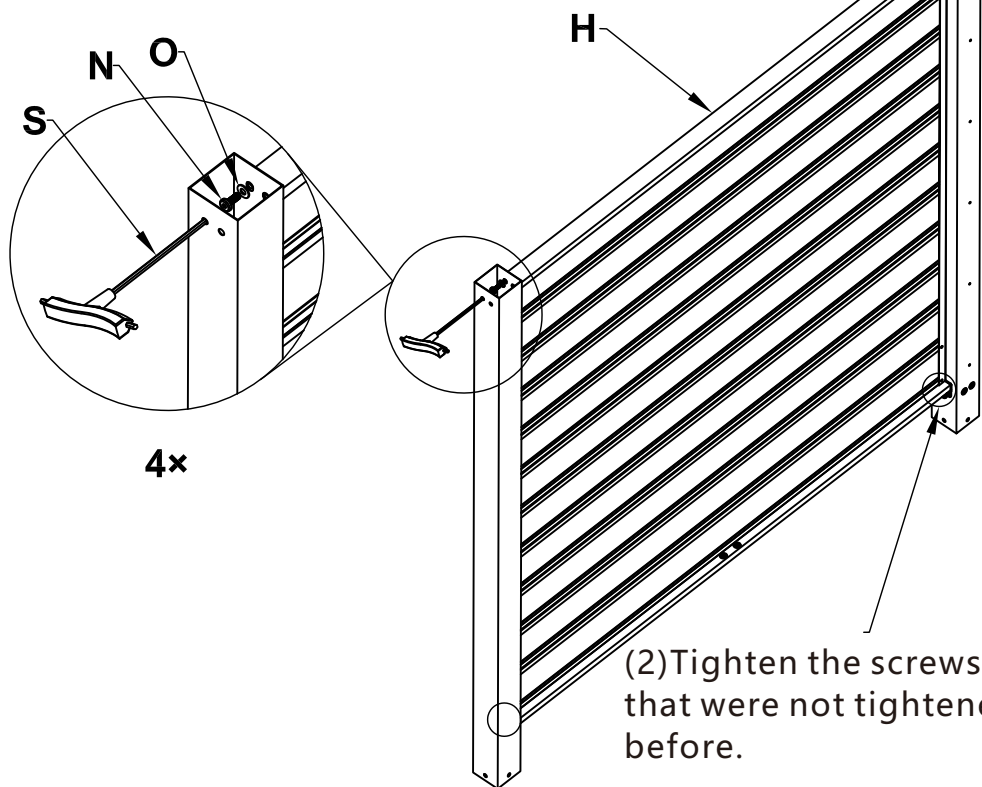

(2) Tighten the screws that were not tightened before.

8


Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

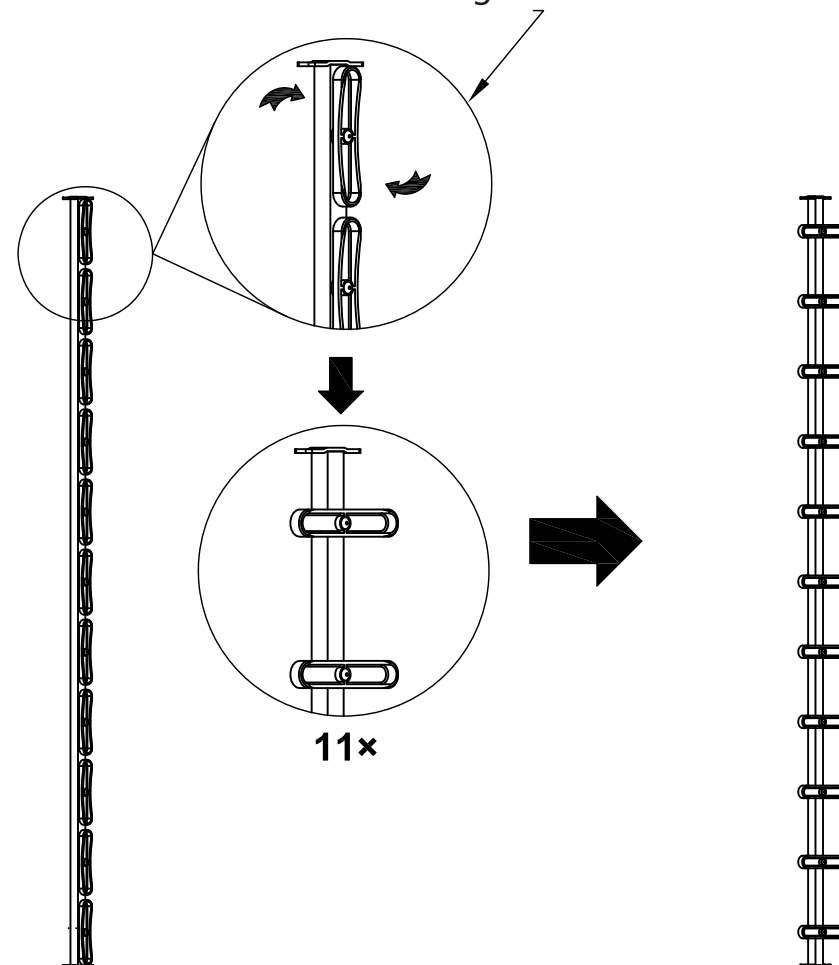

|                                                                                   |                                                                                   |                                                                                   |  |  |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--|--|--|
| N                                                                                 | O                                                                                 | R                                                                                 |  |  |  |
|  |  |  |  |  |  |
| 4PCS                                                                              | 4PCS                                                                              | 1PC                                                                               |  |  |  |


9

Secure Part #G with 4 Bolts #N and 4 Washers #O.

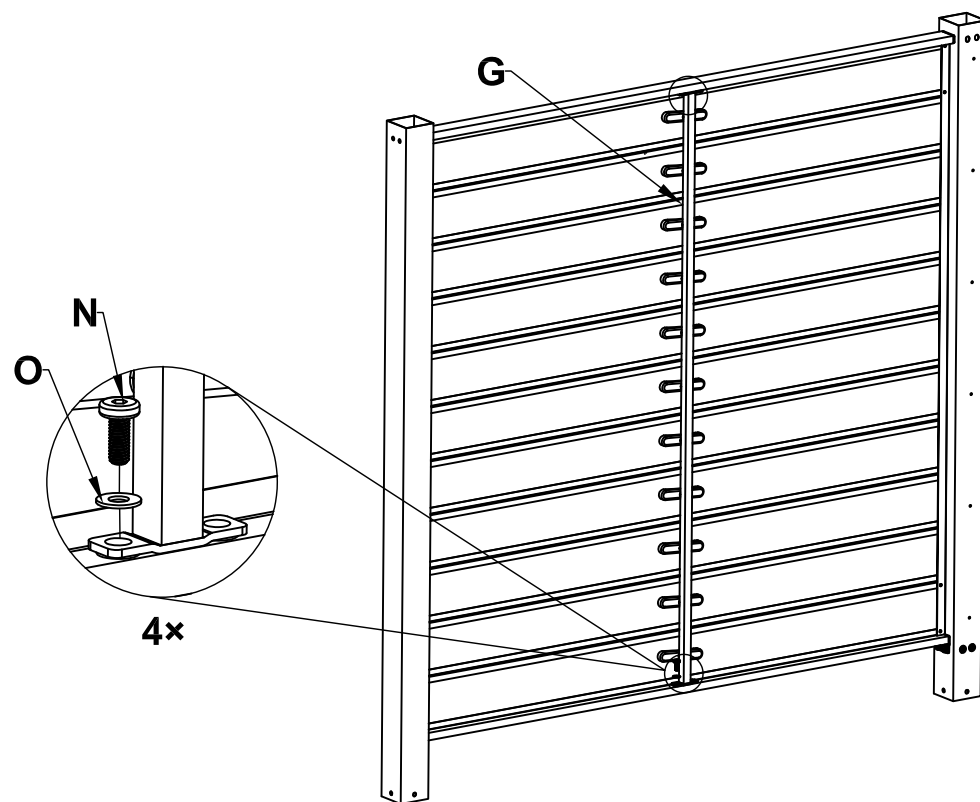


10

After installation, rotate each plastic clip for 90° to reset as shown.  
Please wear protective gloves.

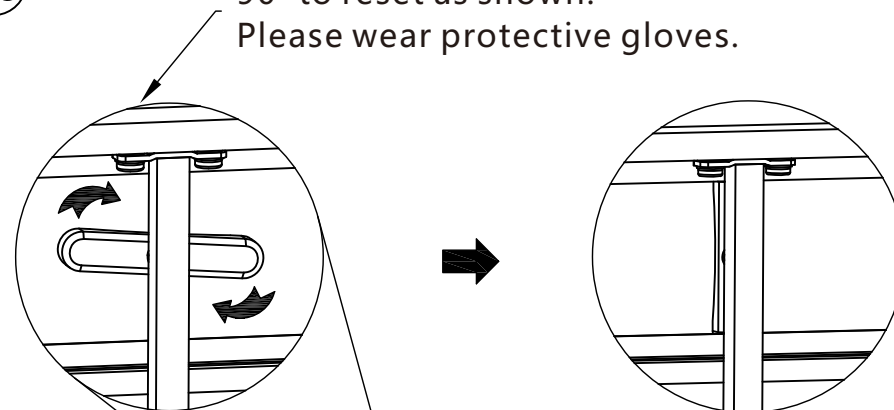

11x

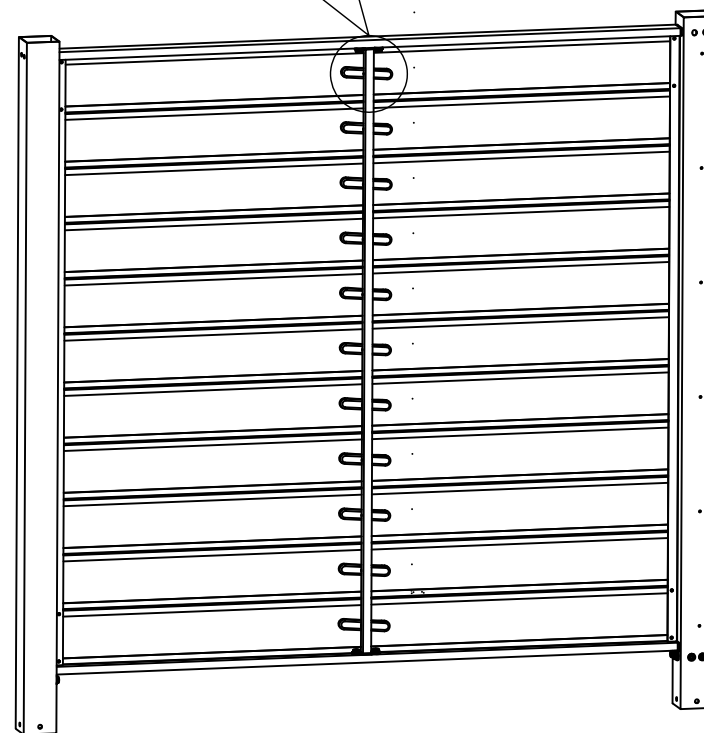

P



8PCS

D



P




1PC

6PCS


11



Use 8 Screws #P to secure Panels to the Posts.

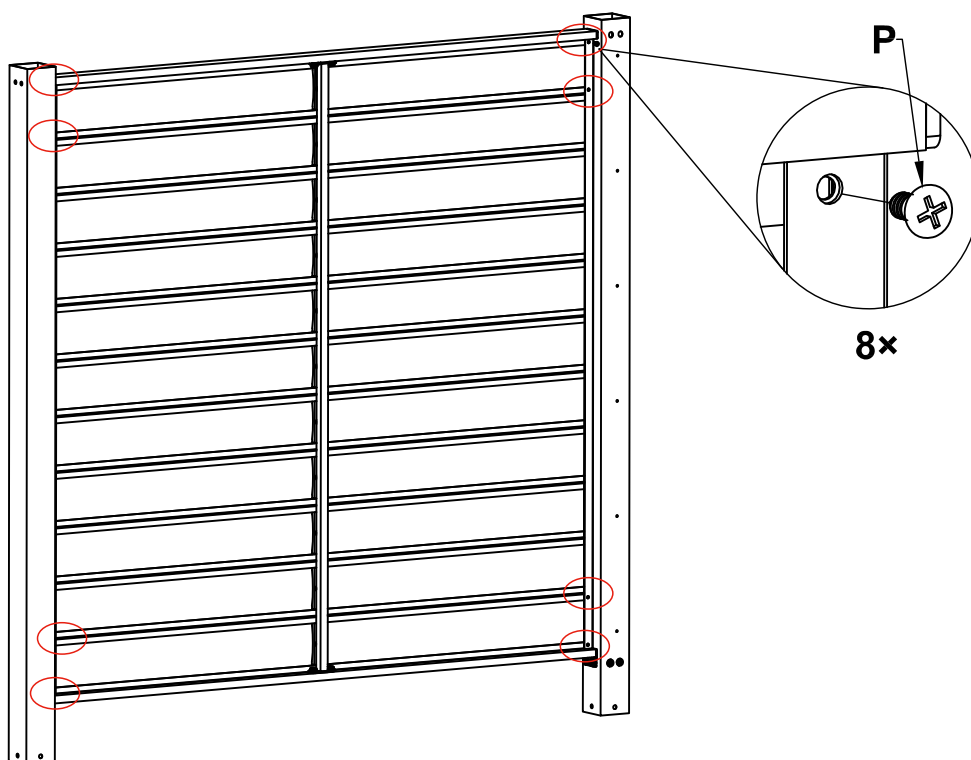


12

Attach Part #D to the Post #A, secure with 6 Screws #P.

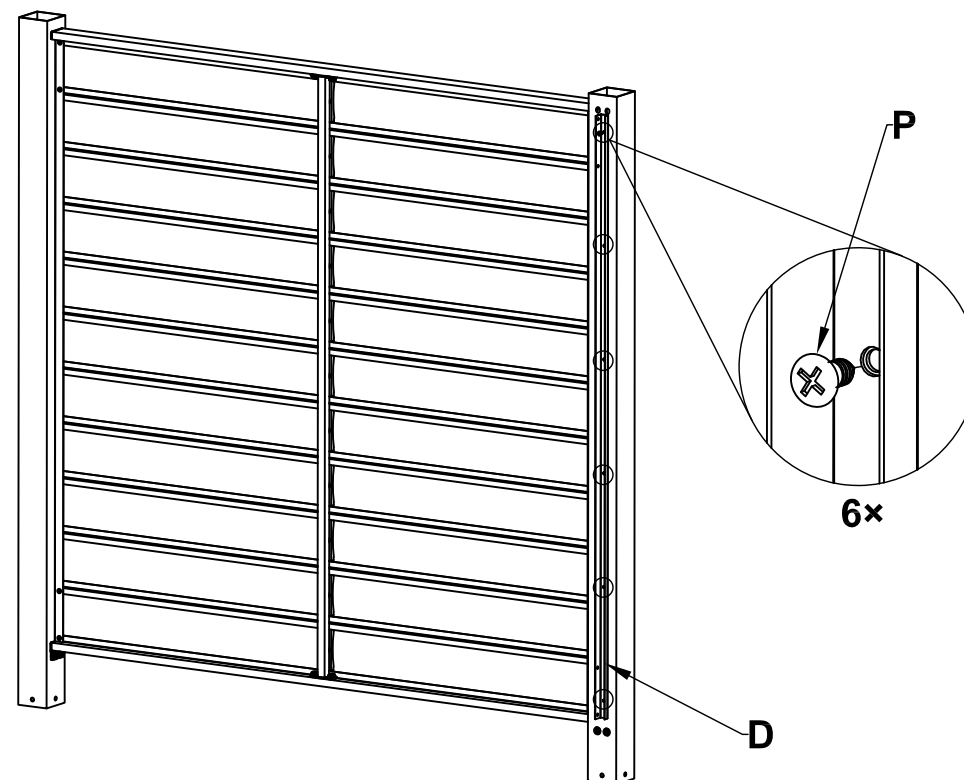

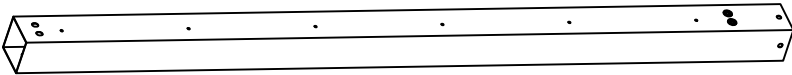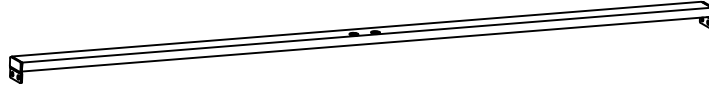
|                                                                                                                          |                                                                                                                             |                                                                                                                             |                                                                                                                             |  |  |  |  |
|--------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|--|--|--|--|
| <div>U</div> <div></div> <div>1PC</div>  | <div>P</div> <div></div> <div>6PCS</div> | <div>I</div> <div></div> <div>1PC</div>  | <div>N</div> <div></div> <div>4PCS</div> |  |  |  |  |
| <div>D</div> <div></div> <div>1PC</div> |                                                                                                                             | <div>O</div> <div></div> <div>4PCS</div> | <div>R</div> <div></div> <div>1PC</div>  |  |  |  |  |

- 13** Attach Part #D to the Post #U, secure with 6 Screws #P.

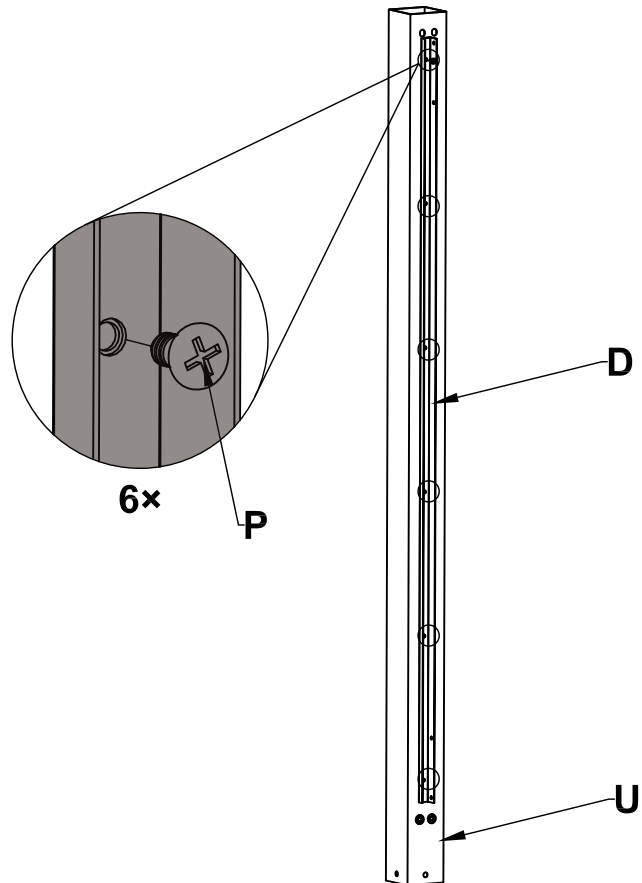


- 14** **⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.**

Use Part #I to connect the Post #A and #U, securing with 4 Bolts #N and 4 Washers #O.

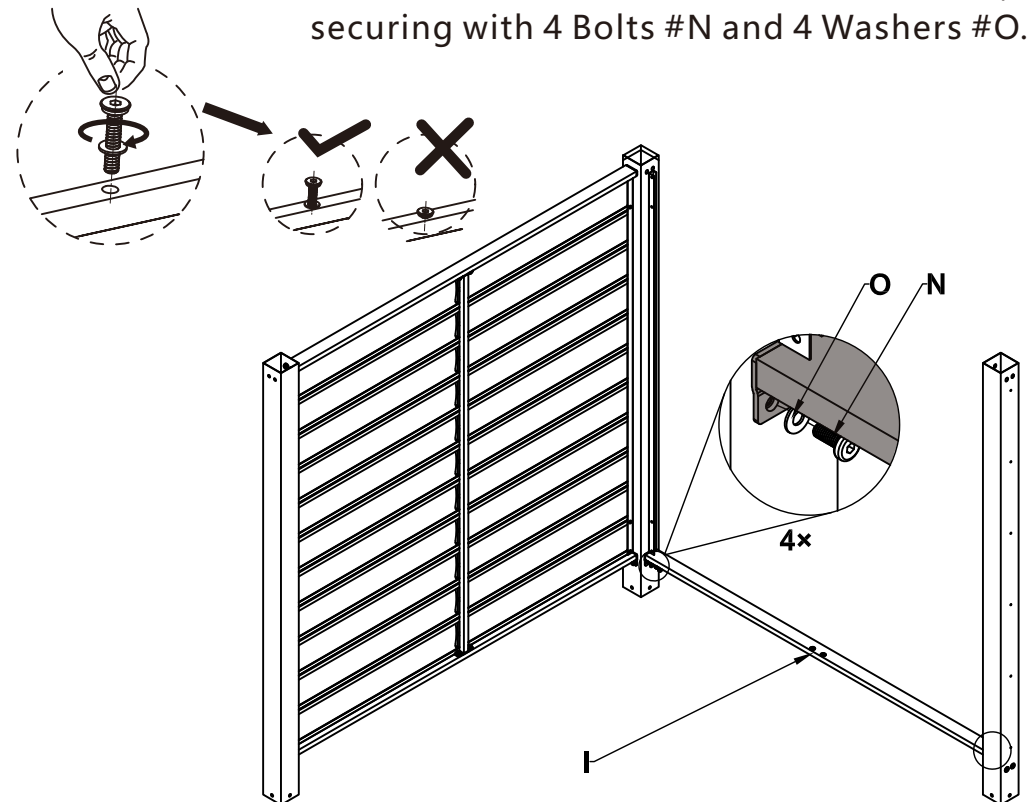


E

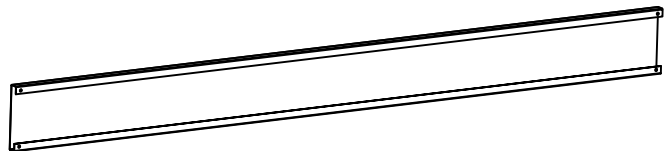

1PC


F

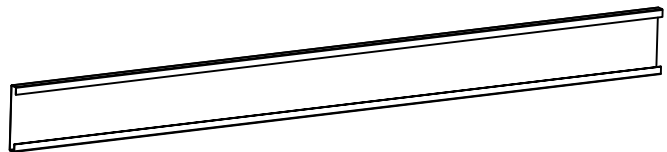


9PCS

15

Please insert Part #E and #F in the order as is shown.

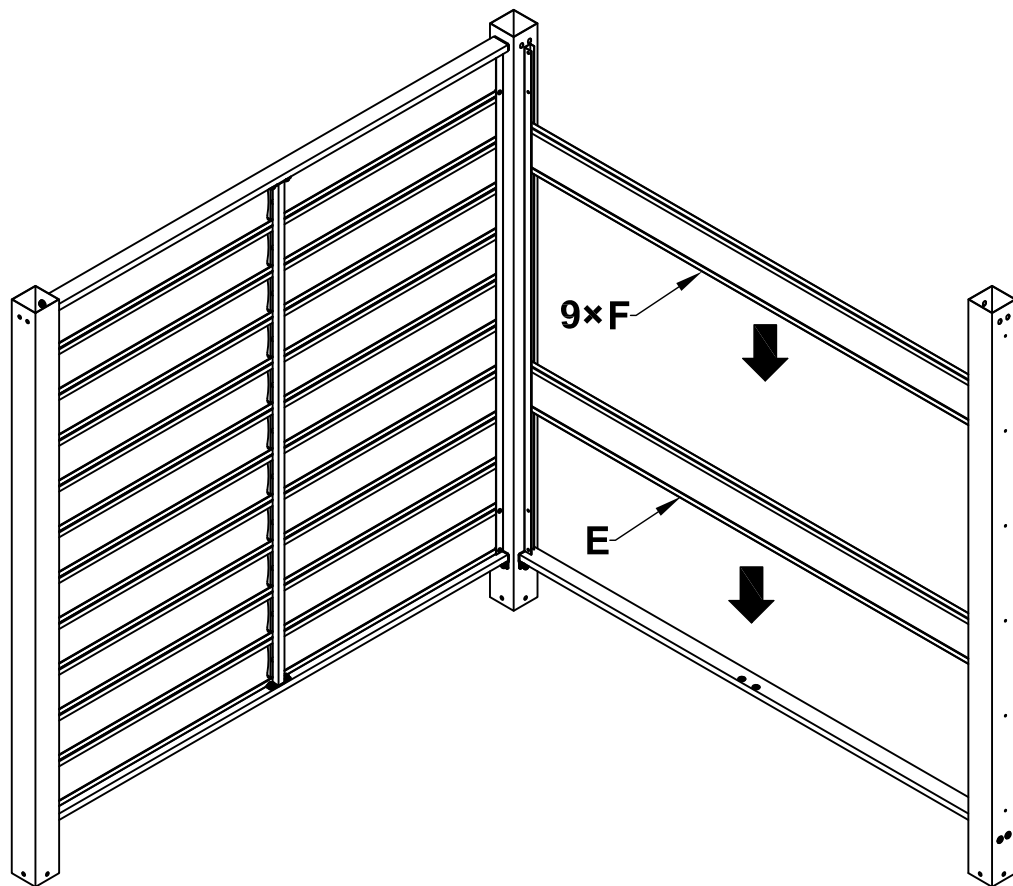


E

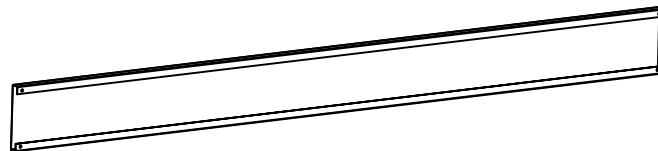

1PC

16

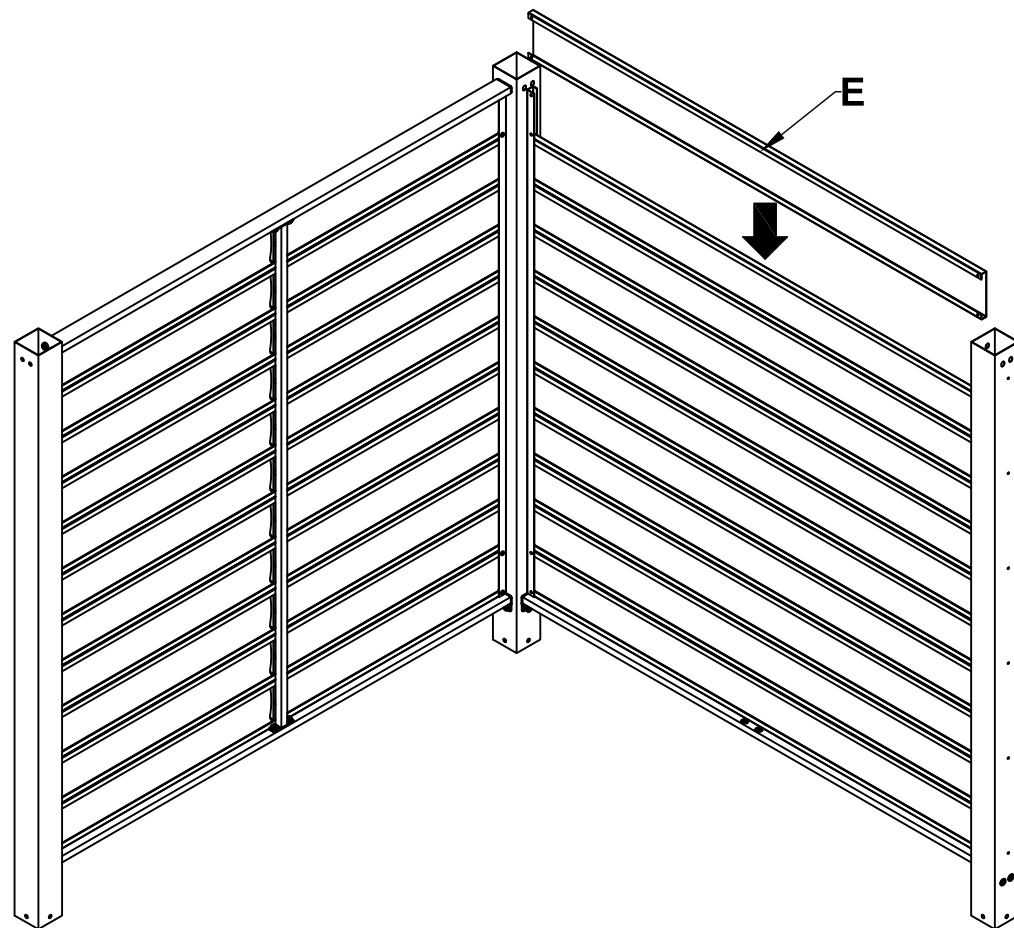

H



1PC

N



4PCS

G



1PC

O




4PCS

R



1PC


S

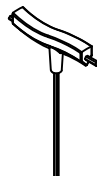

1PC


17

(1) Insert the Panel Edge Banding #H to fit the panel, use 4 Bolts #N and 4 Washers #O to fix the Panel Edge Banding #H onto the Posts.

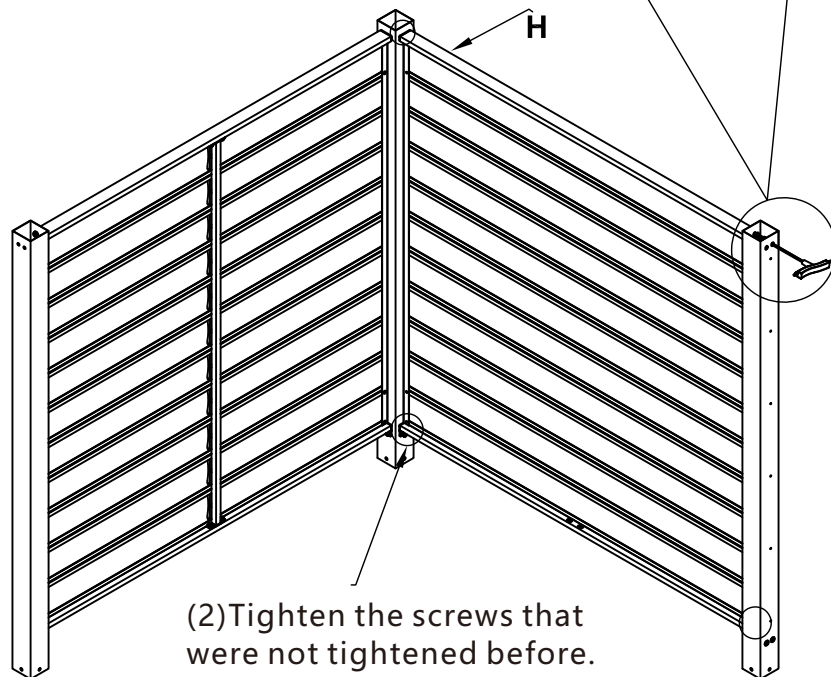


18

Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

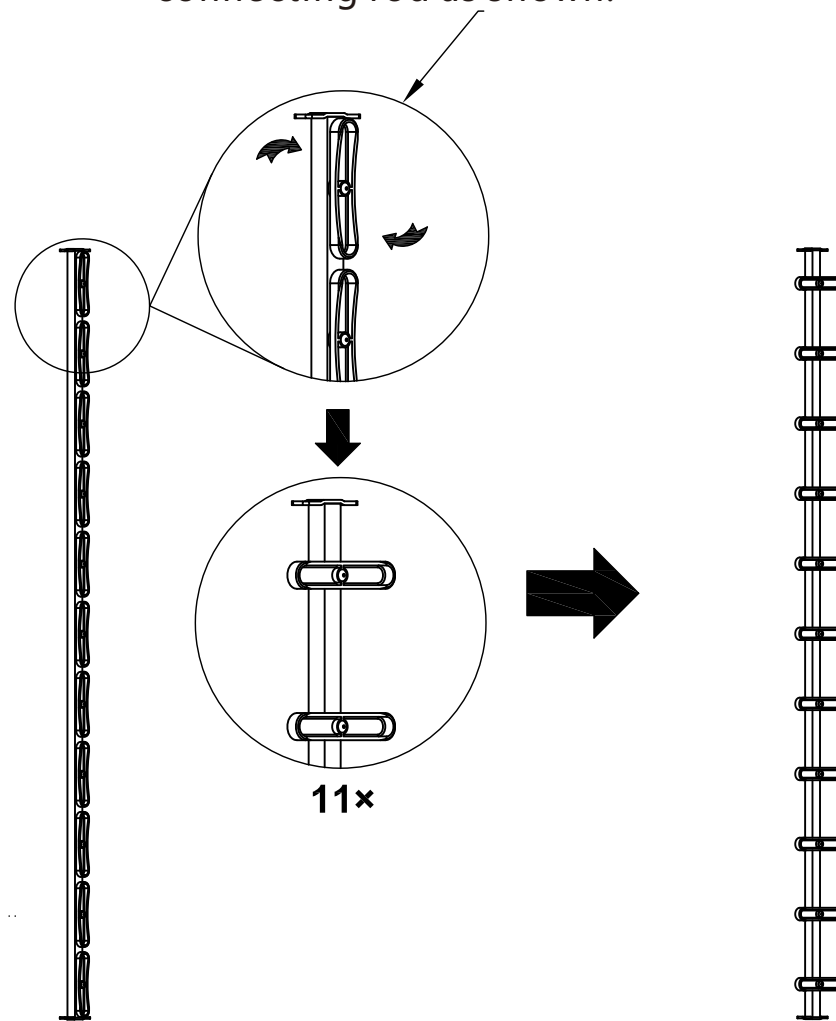



|                                                                                   |                                                                                   |                                                                                   |  |  |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--|--|--|
| O                                                                                 | R                                                                                 | N                                                                                 |  |  |  |
|  |  |  |  |  |  |
| 4PCS                                                                              | 1PC                                                                               | 4PCS                                                                              |  |  |  |

**19** Secure Part #G with 4 Bolts #N and 4 Washers #O.

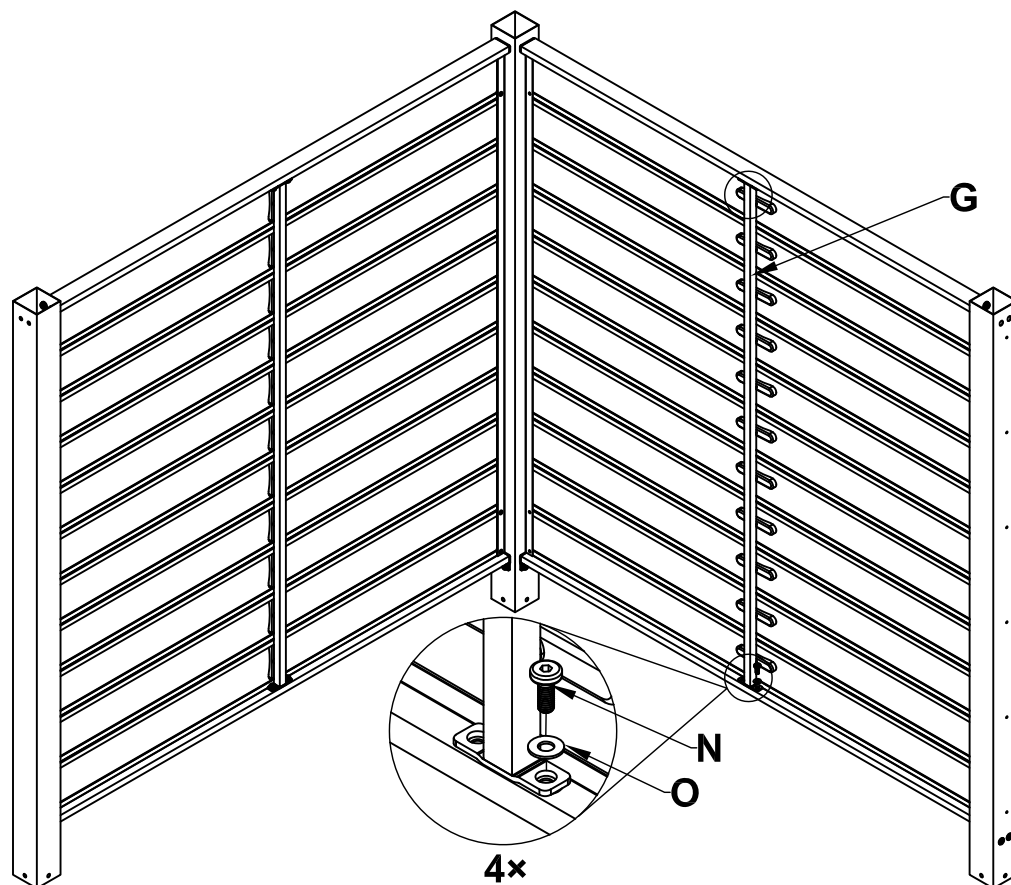

**20**

After installation, rotate each plastic clip for 90° to reset as shown.  
Please wear protective gloves.

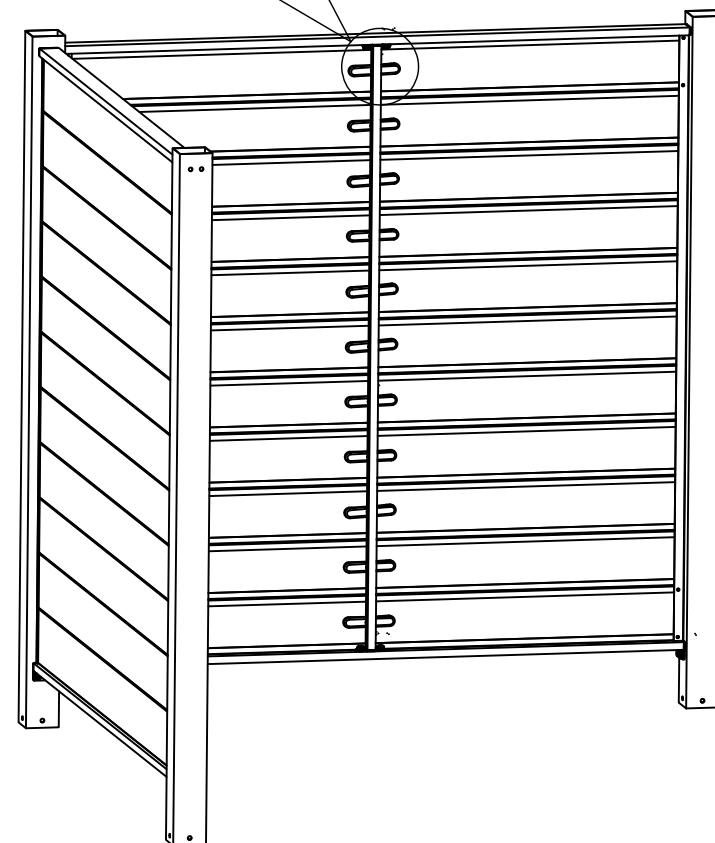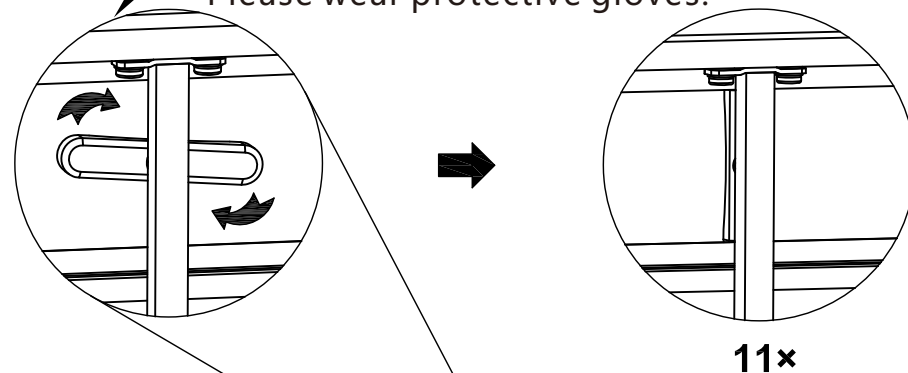




P



8PCS

21

Use 8 Screws #P to secure Panels to the Posts.

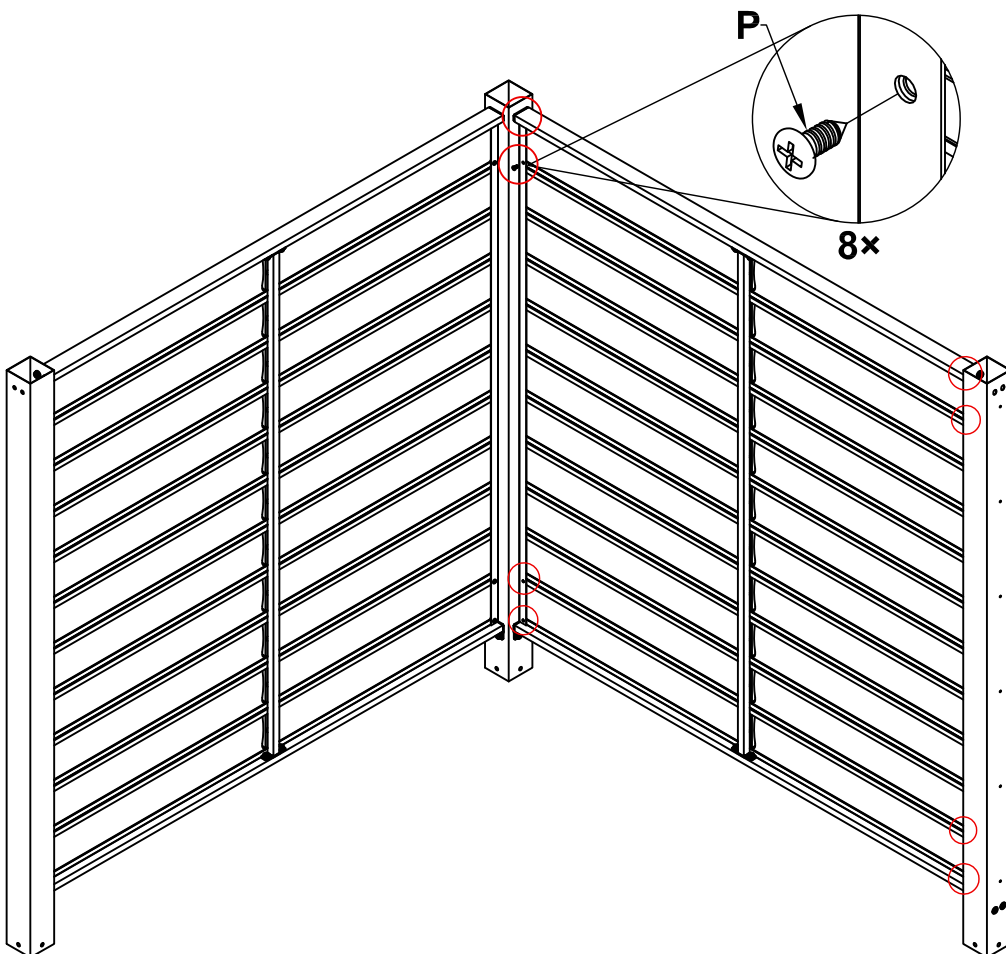

D



P




1PC



6PCS

22


Attach Part #D to the Post #U, secure with 6 Screws #P.

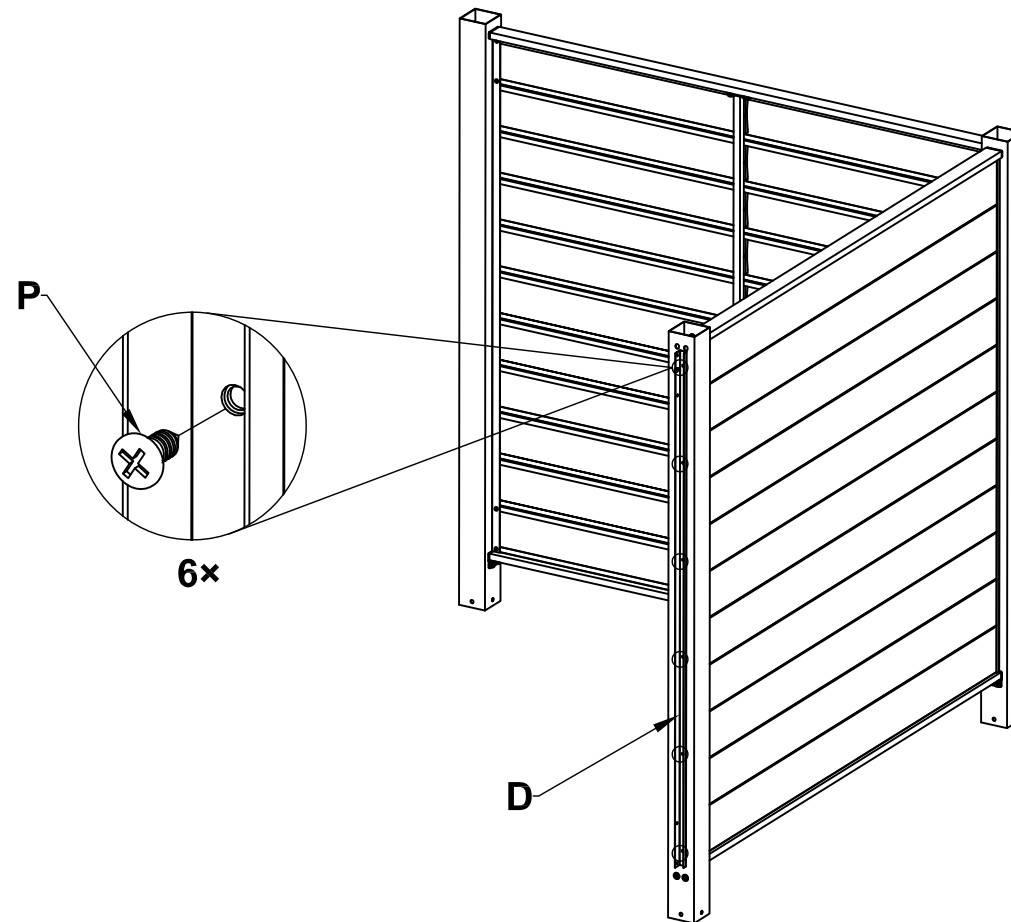

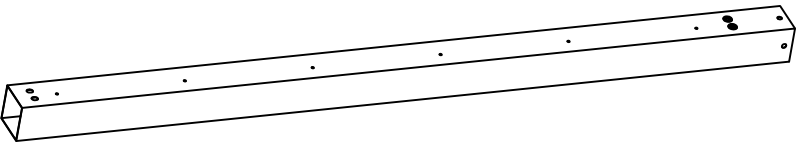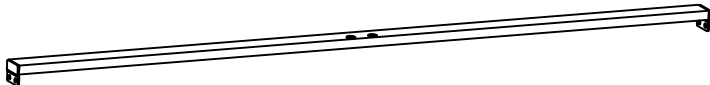


|   |                                                                                   |     |   |                                                                                     |      |   |                                                                                     |      |   |                                                                                     |      |  |  |  |  |  |  |
|---|-----------------------------------------------------------------------------------|-----|---|-------------------------------------------------------------------------------------|------|---|-------------------------------------------------------------------------------------|------|---|-------------------------------------------------------------------------------------|------|--|--|--|--|--|--|
| C |   | 1PC | P |  | 6PCS | I |  | 1PC  | N |  | 4PCS |  |  |  |  |  |  |
| D |  | 1PC |   |                                                                                     |      | O |  | 4PCS | R |  | 1PC  |  |  |  |  |  |  |


**23** Attach Part #D to the Post #C, secure with 6 Screws #P.

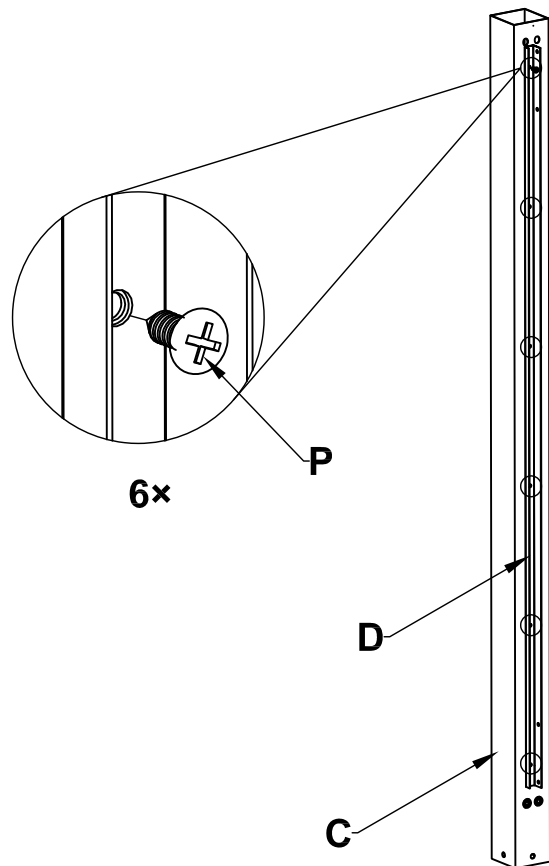

**24** **⚠ DO NOT TIGHTEN THE SCREWS COMPLETELY IN THIS STEP.**

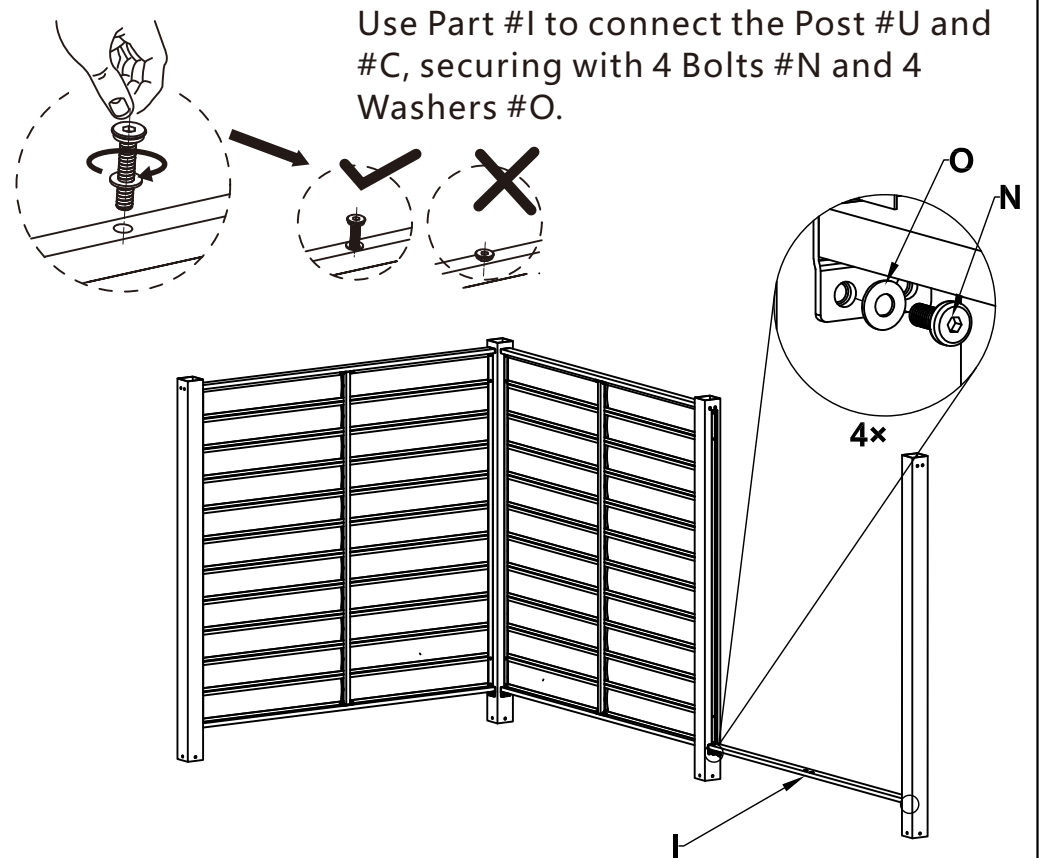


E

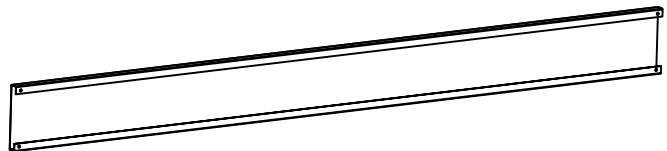

1PC


F

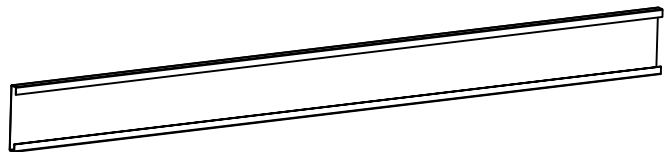


9PCS

25

Please insert Part #E and #F in the order as is shown.

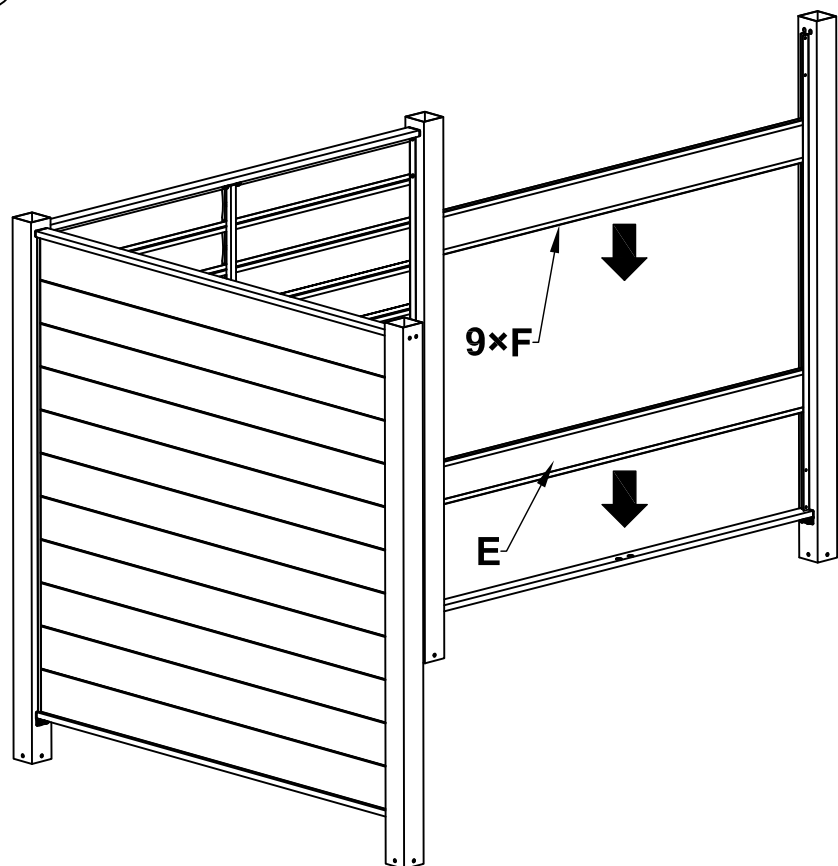




E

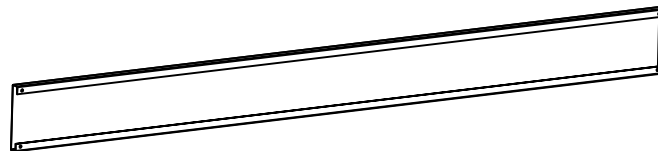

1PC


26

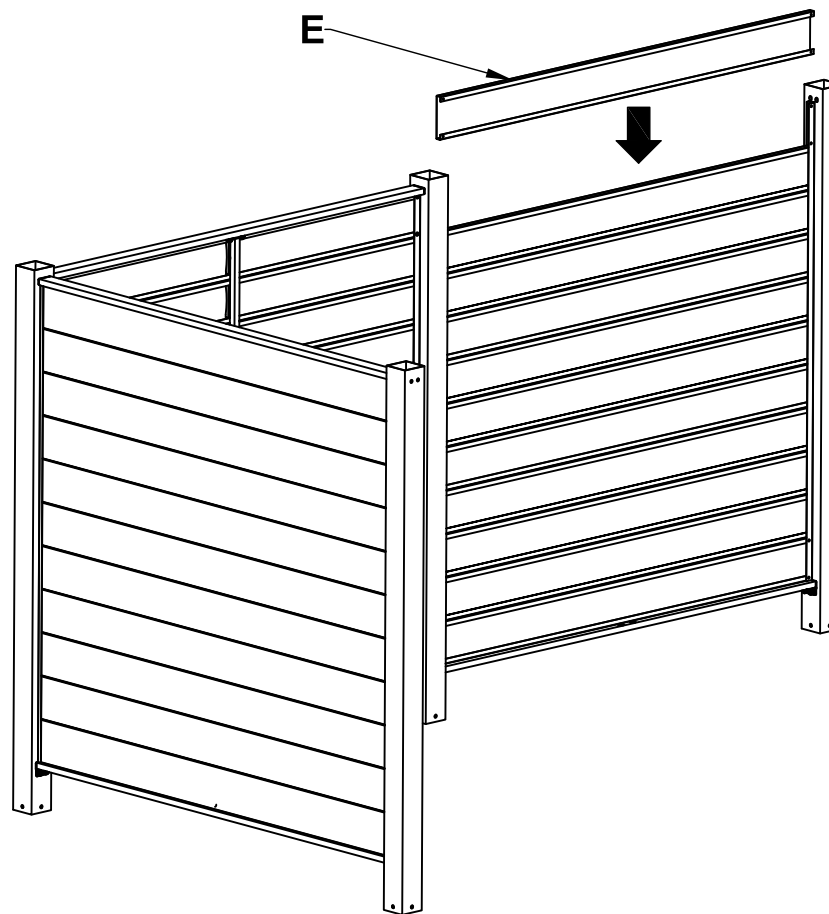

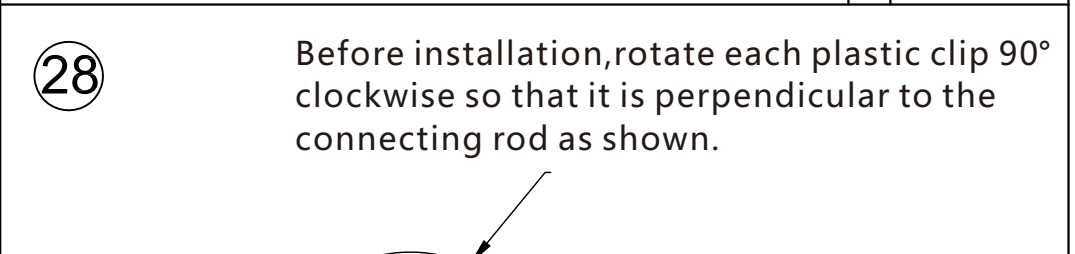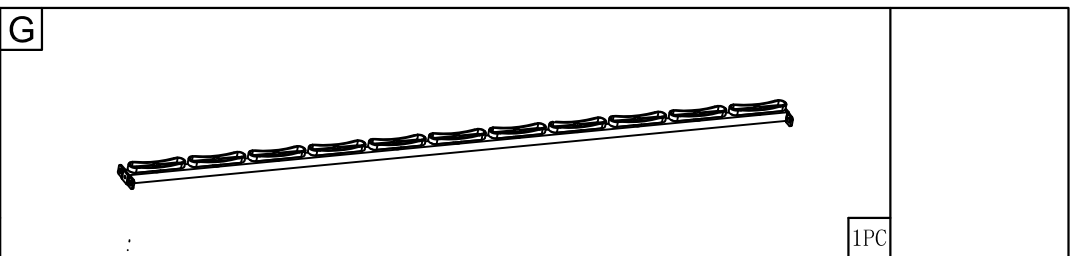

28

Before installation, rotate each plastic clip 90° clockwise so that it is perpendicular to the connecting rod as shown.

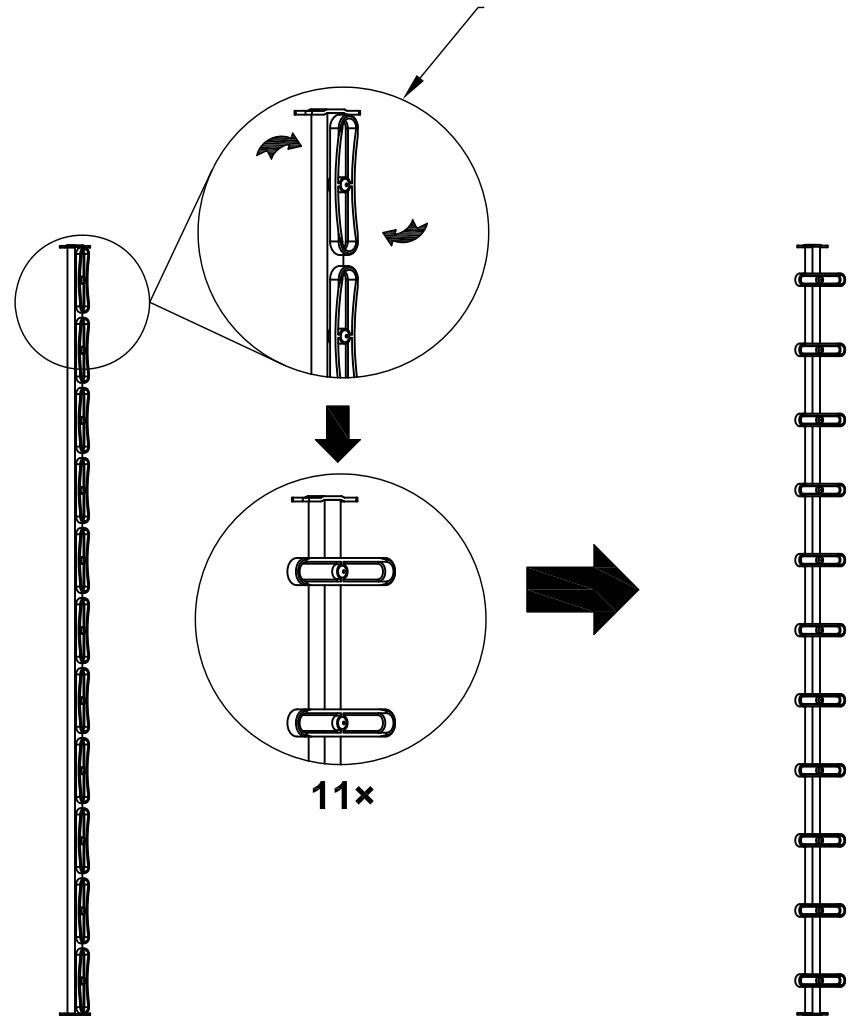

(2) Tighten the screws that were not tightened before.

N



4PCS

O



4PCS


R



1PC


29

Secure Part #G with 4 Bolts #N and 4 Washers #O.

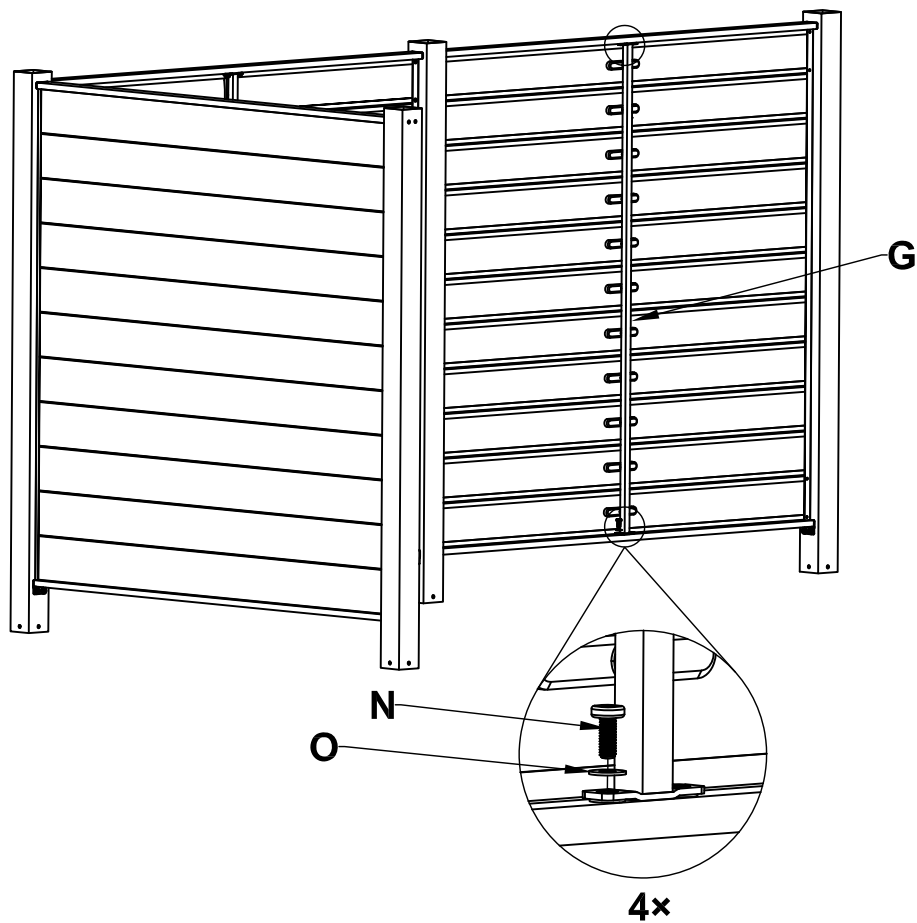

30

After installation, rotate each plastic clip for 90° to reset as shown.  
Please wear protective gloves.

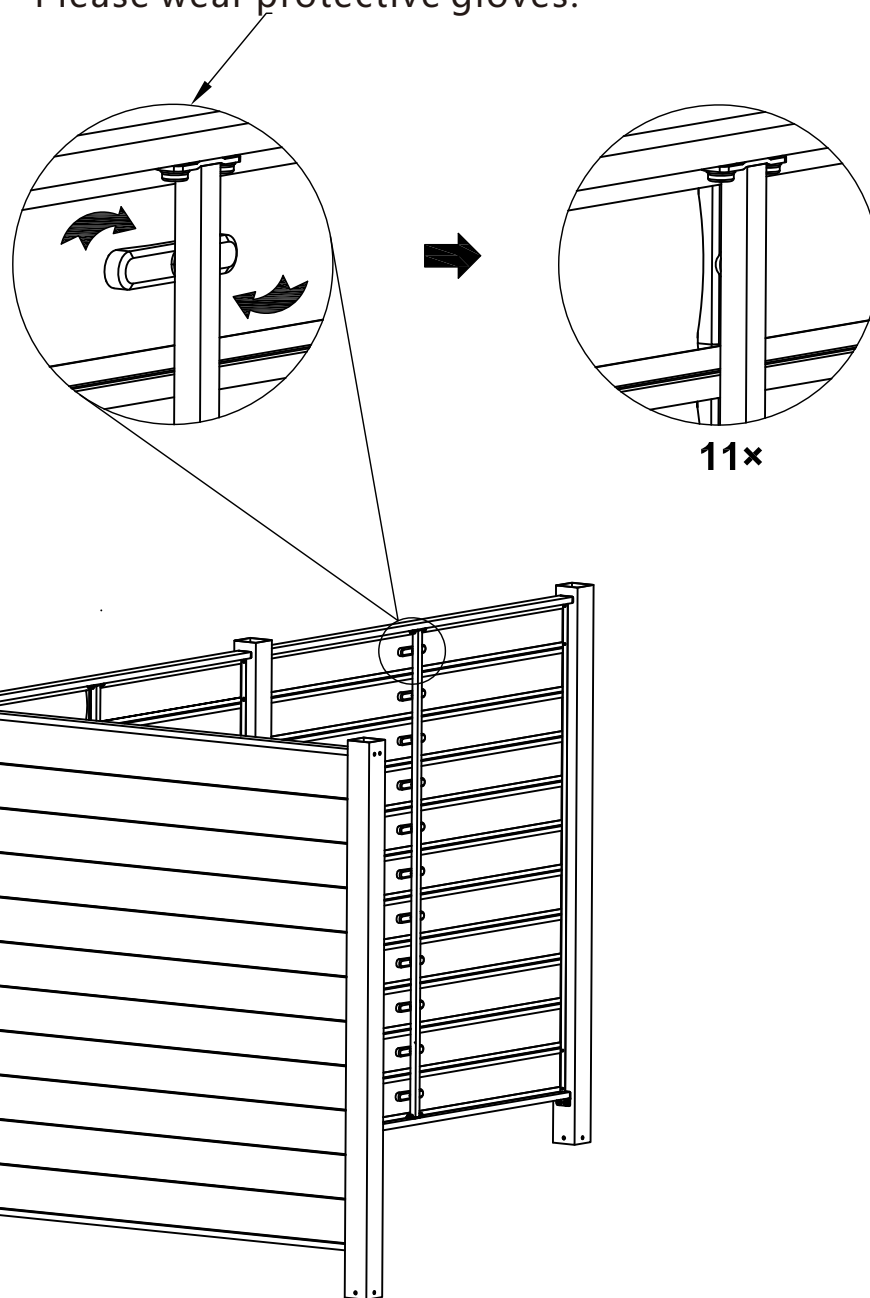

P



8PCS


M



4PCS


31

Use 8 Screws #P to secure Panels to the Posts.

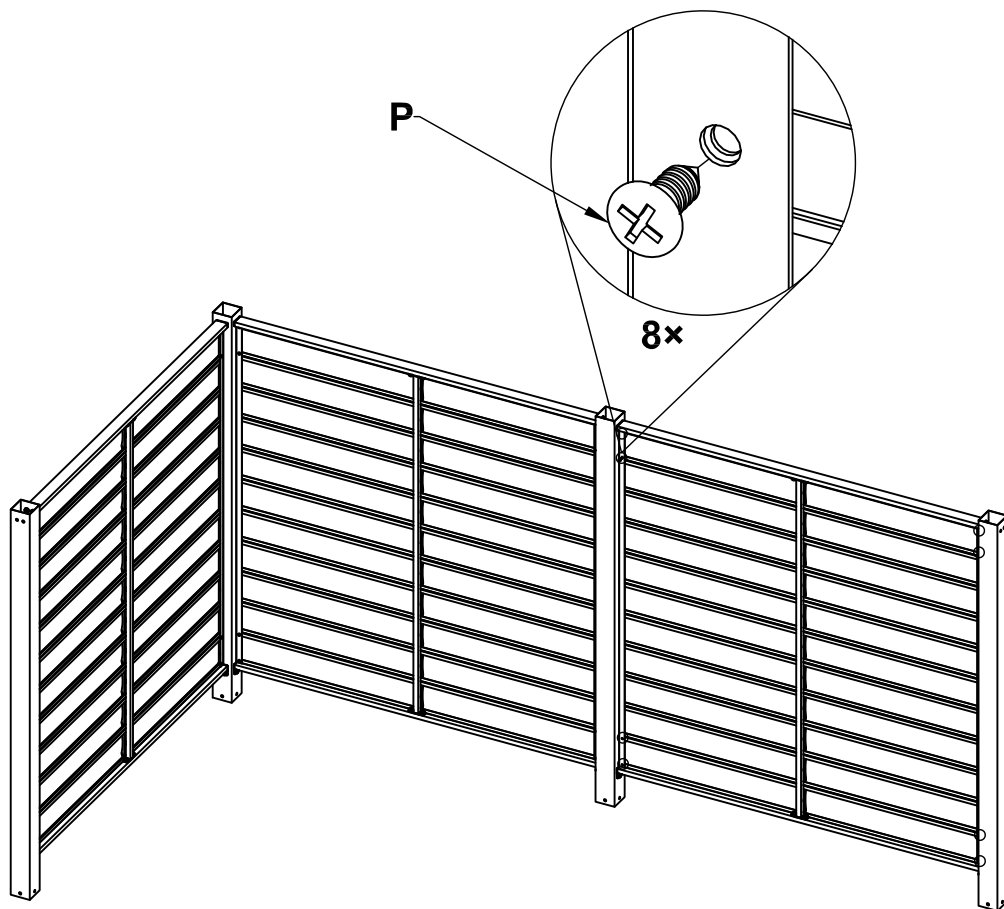

32

Install the 4 Plastic Cover #Monto the Posts.

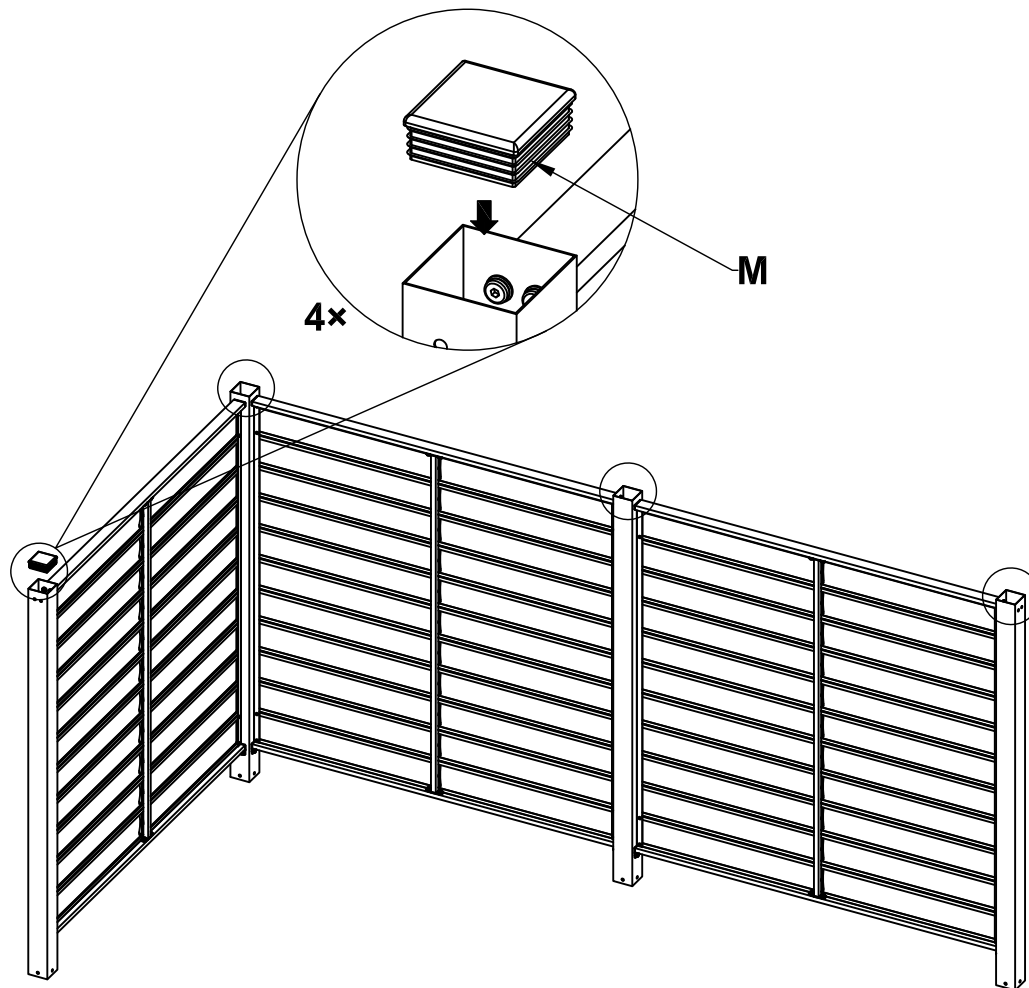


Q




4PCS

J

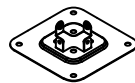

4PCS

K



4PCS

N



16PCS

R




1PC

33

Insert the 4 Plastic Caps #Q to the Post #B and #C.

4x


Q

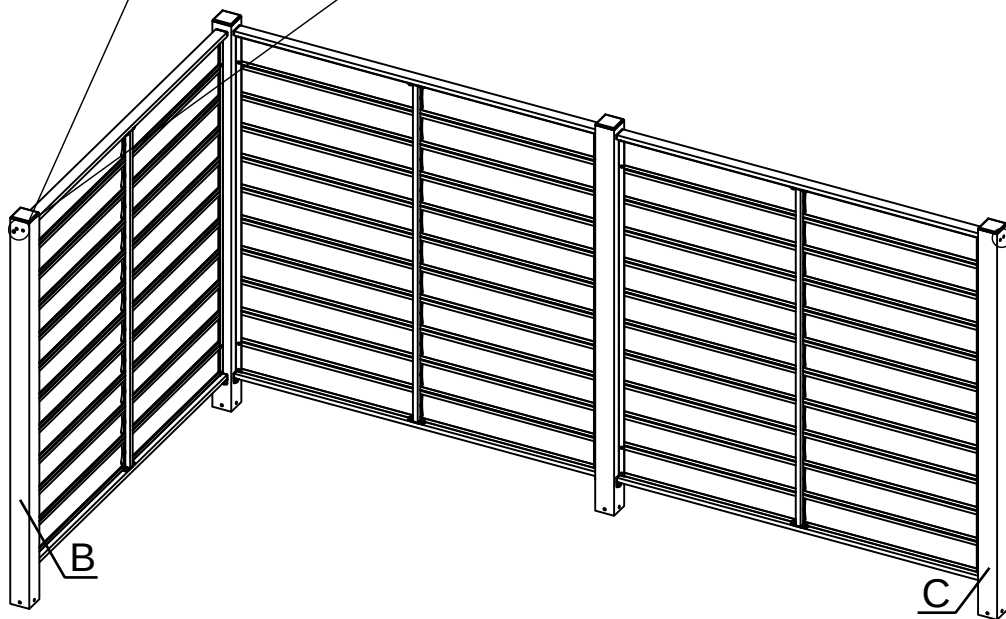

34


**! Install this step if you need to fix it to the grassland. Otherwise please skip this step.**

Insert Part #K into Part #J, secure with 4 Bolts #N.

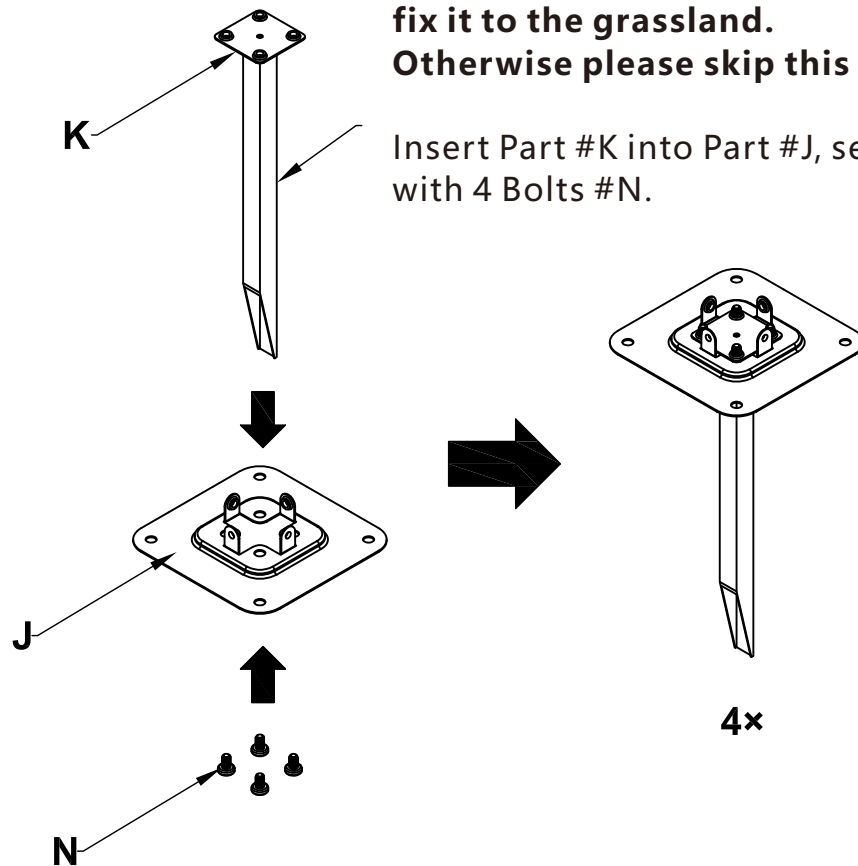

35


Based on the Posts positions, hammer the assembled Ground Stake into the grassland, then insert the assembled Panels into the Ground Stake (or Part #J).

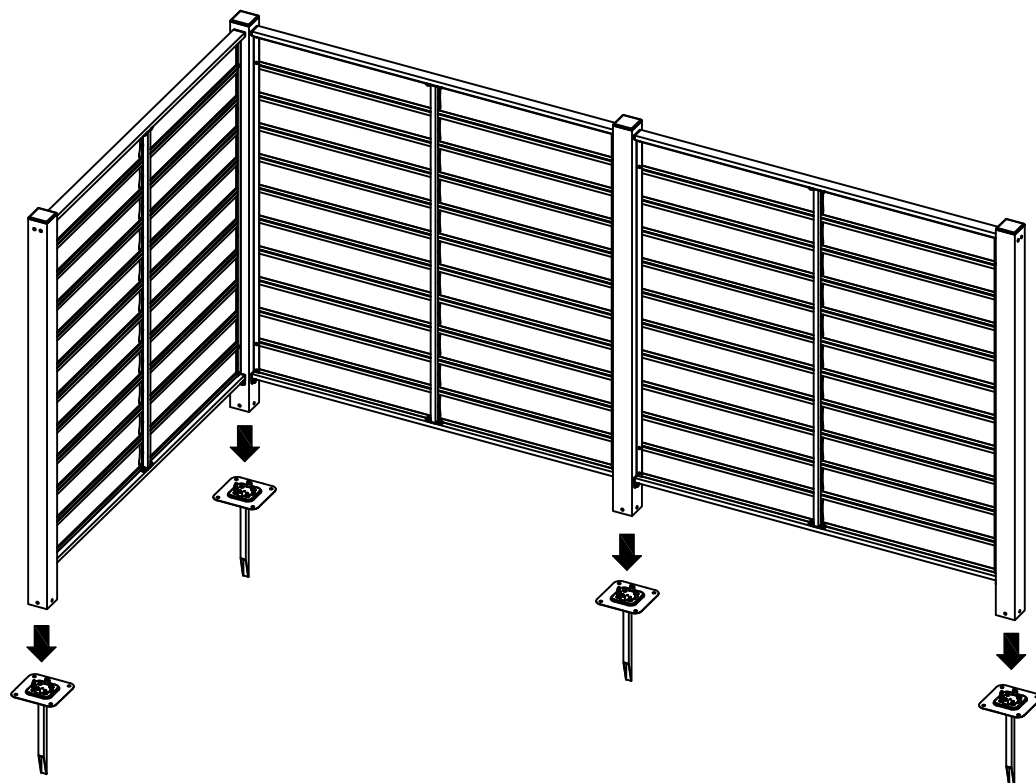

| N                                                                                   | O                                                                                   | R                                                                                   |  |  |  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--|--|--|
|  |  |  |  |  |  |
| 16PCS                                                                               | 16PCS                                                                               | 1PC                                                                                 |  |  |  |

36

Use 16 Bolts #N and 16 Washers #O to secure the Poles to the Ground Stake (or Part #J).

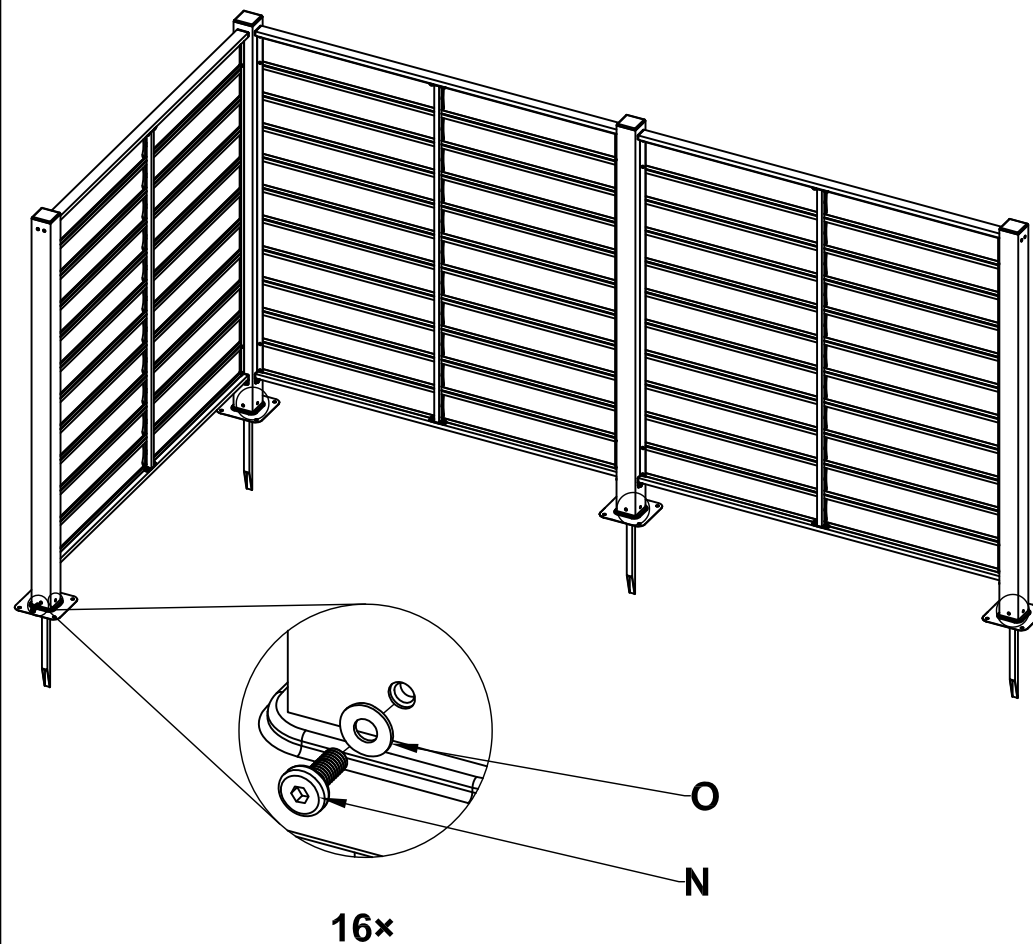


L



16PCS


37

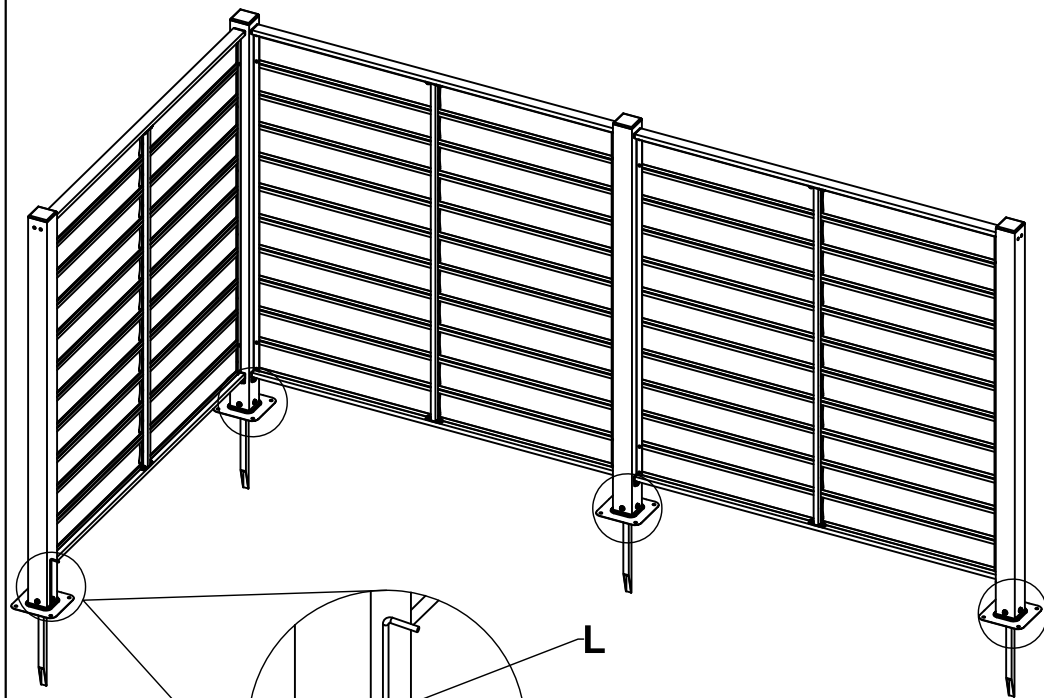

16x

If it is installed on the  
grassland, add 16 Ground  
Nails #L for fixation.

38

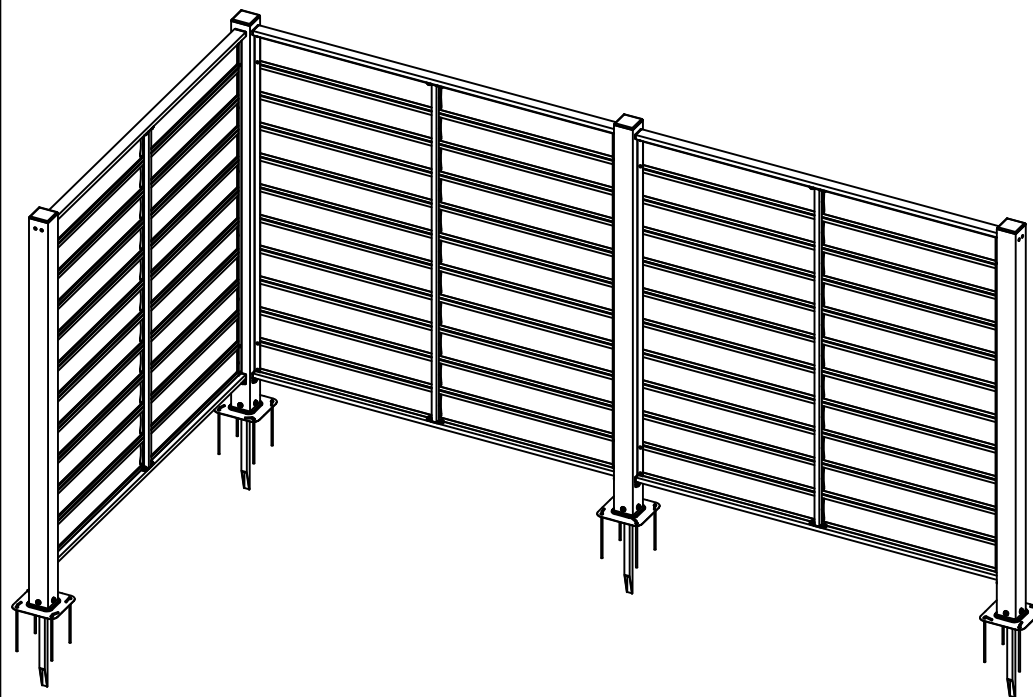





RESORT COMFORT IN YONR  
OWN BACKYARD

**Support:**



**Business cooperation contact email:**

[marketing@domioutdoorliving.com](mailto:marketing@domioutdoorliving.com)

**After-sales contact email:**

[service@domioutdoorliving.com](mailto:service@domioutdoorliving.com)

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.