

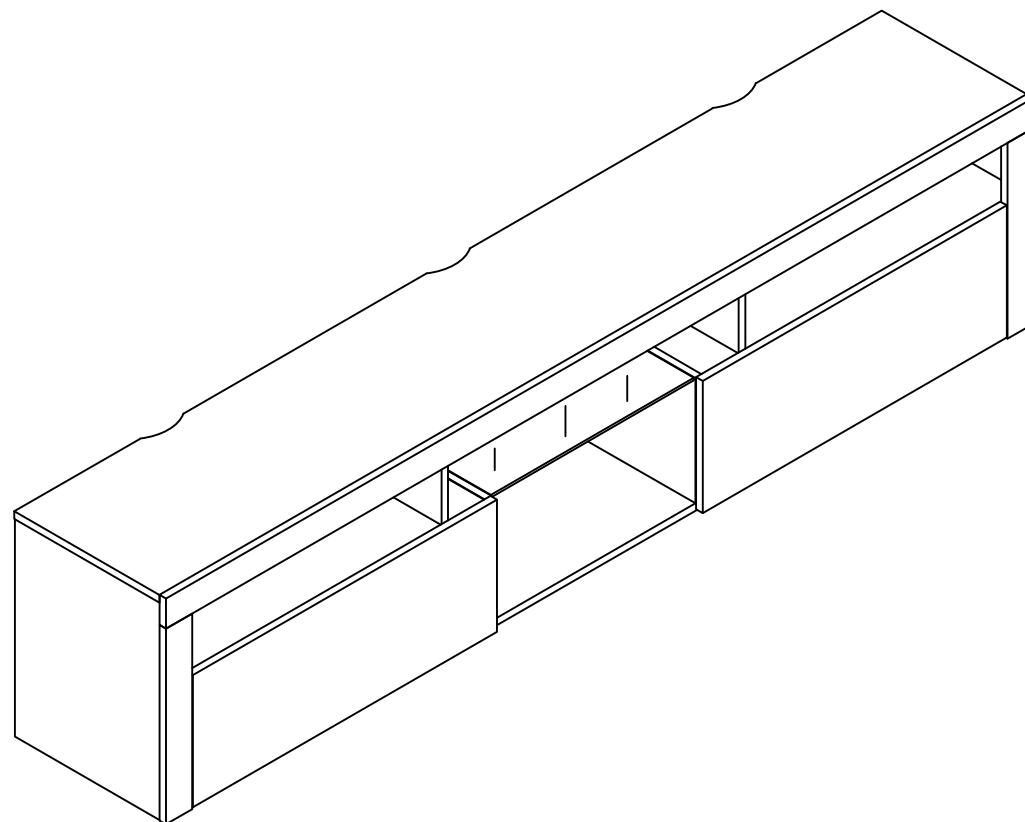
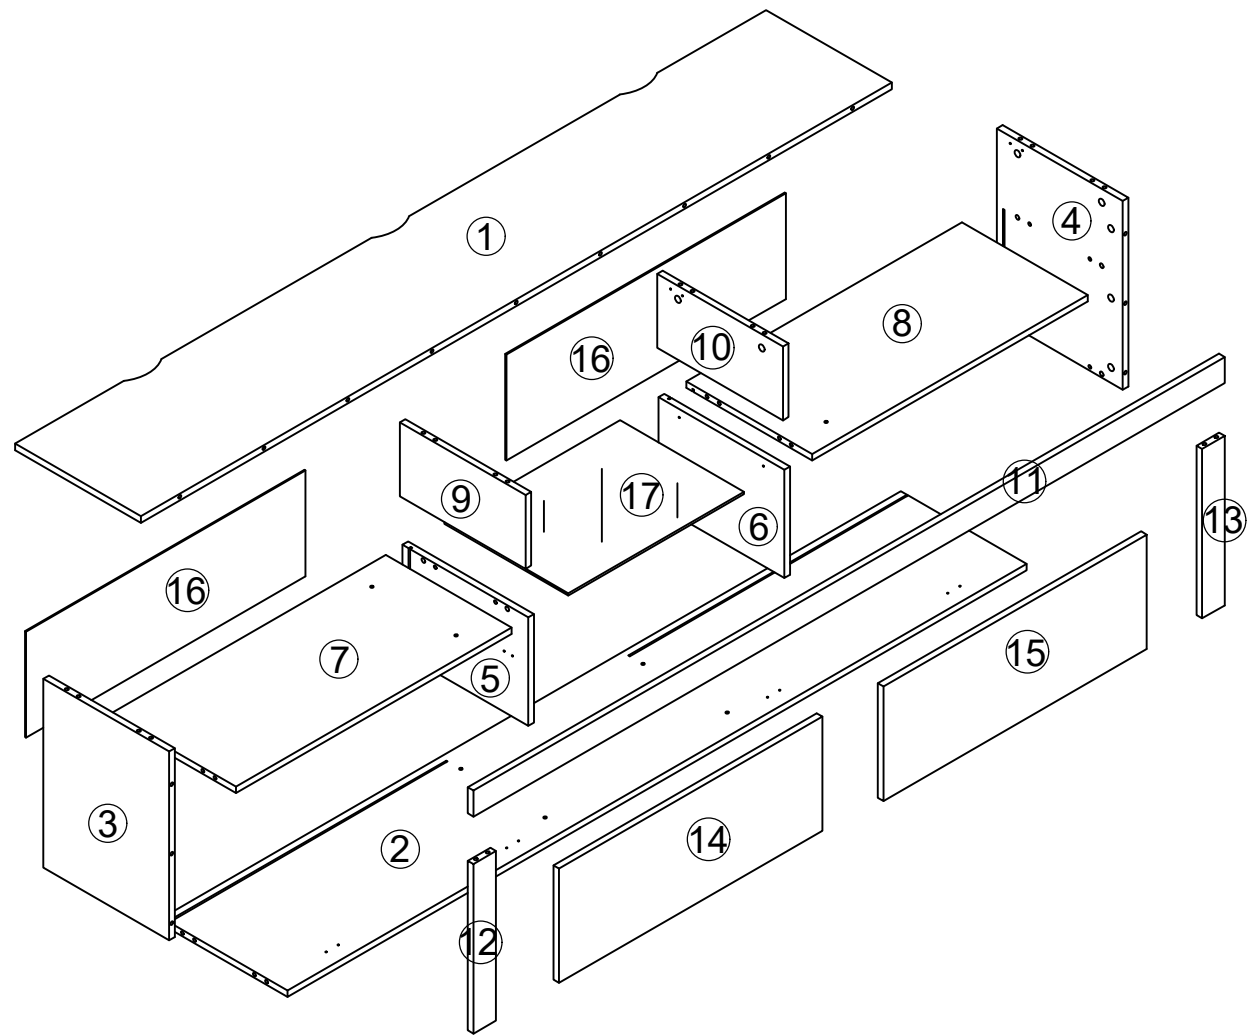










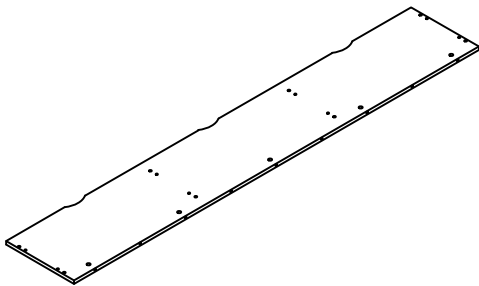
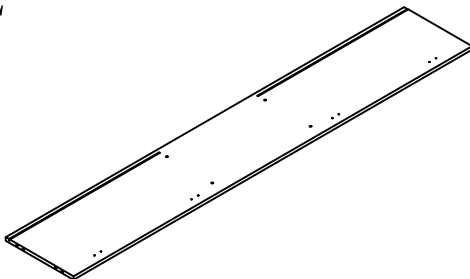
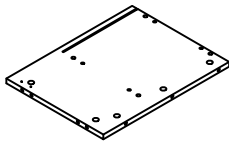
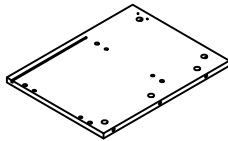


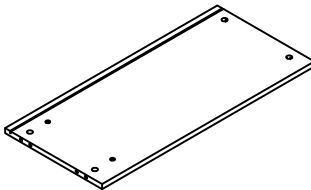
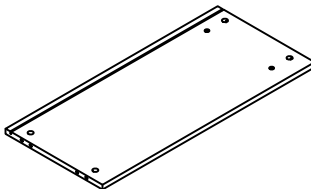


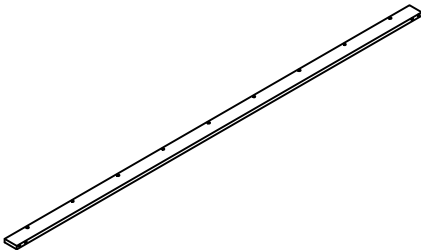


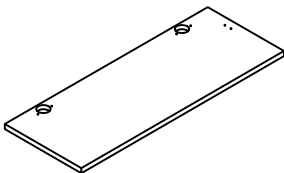
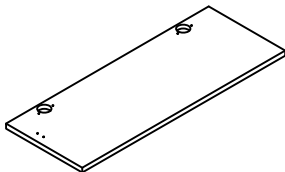


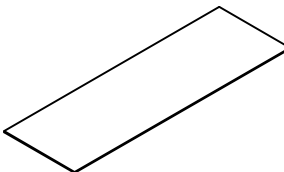

JHY2208089

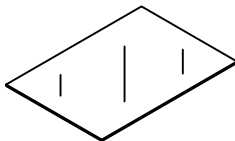

K	L	M	N	O	LED				
									
6PCS	4PCS	8PCS	8PCS	2PCS	1PCS				
A	B	C	D	E	F	G	H	I	J
									
31PCS	31PCS	28PCS	38PCS	4PCS	4PCS	8PCS	12PCS	12PCS	20PCS


1  2000*335 1PS	2  1968*335 1PS	3  435*335 1PS	4  435*335 1PS	
5  250*335 1PS	6  250*335 1PS	7  734*335 1PS	8  734*335 1PS	
9  170*335 1PS	10  170*335 1PS	11  2000*60 1PS	12  391*60 1PS	13  391*60 1PS
14  701*264 1PS	15  701*264 1PS	16  744*244 2PS	17  468*330 1PS	




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

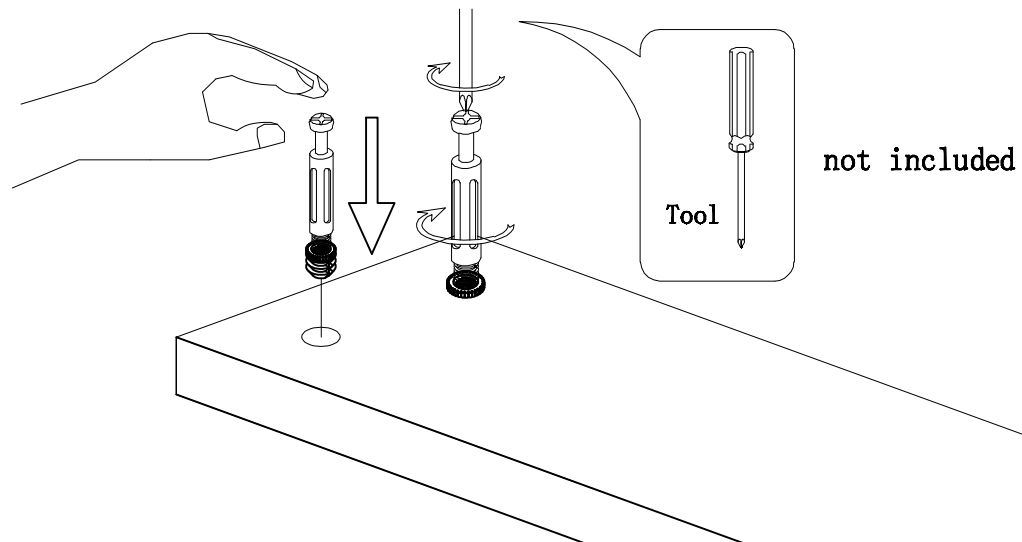

II

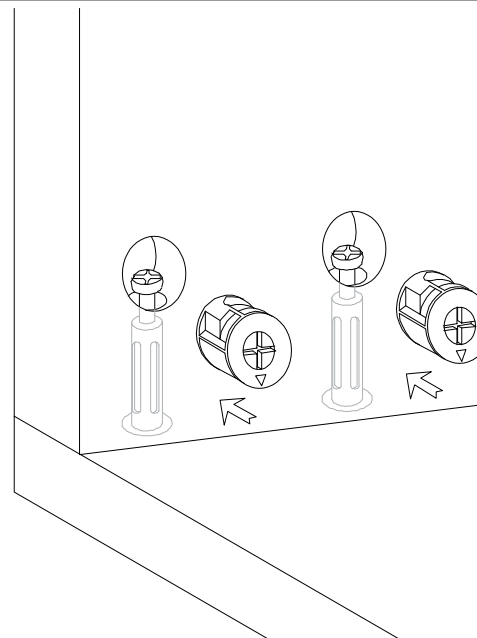


III

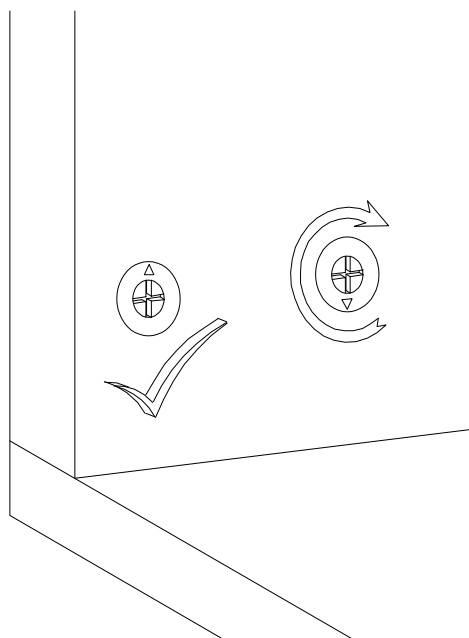


IV



Scan QR code for assembly video

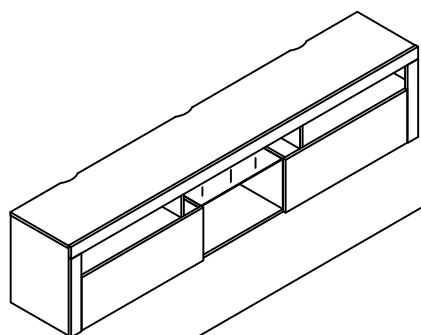


step: ① ② ③ ④ ⑤ ⑦ ⑧ ⑨ ⑩ ⑪ ⑫ ⑬

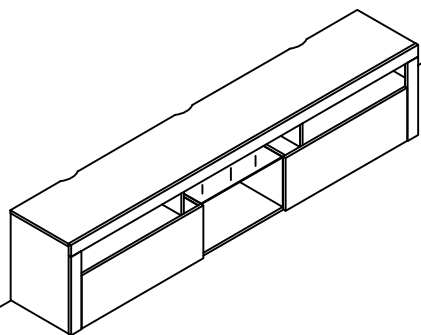

step: ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩ ⑪

1

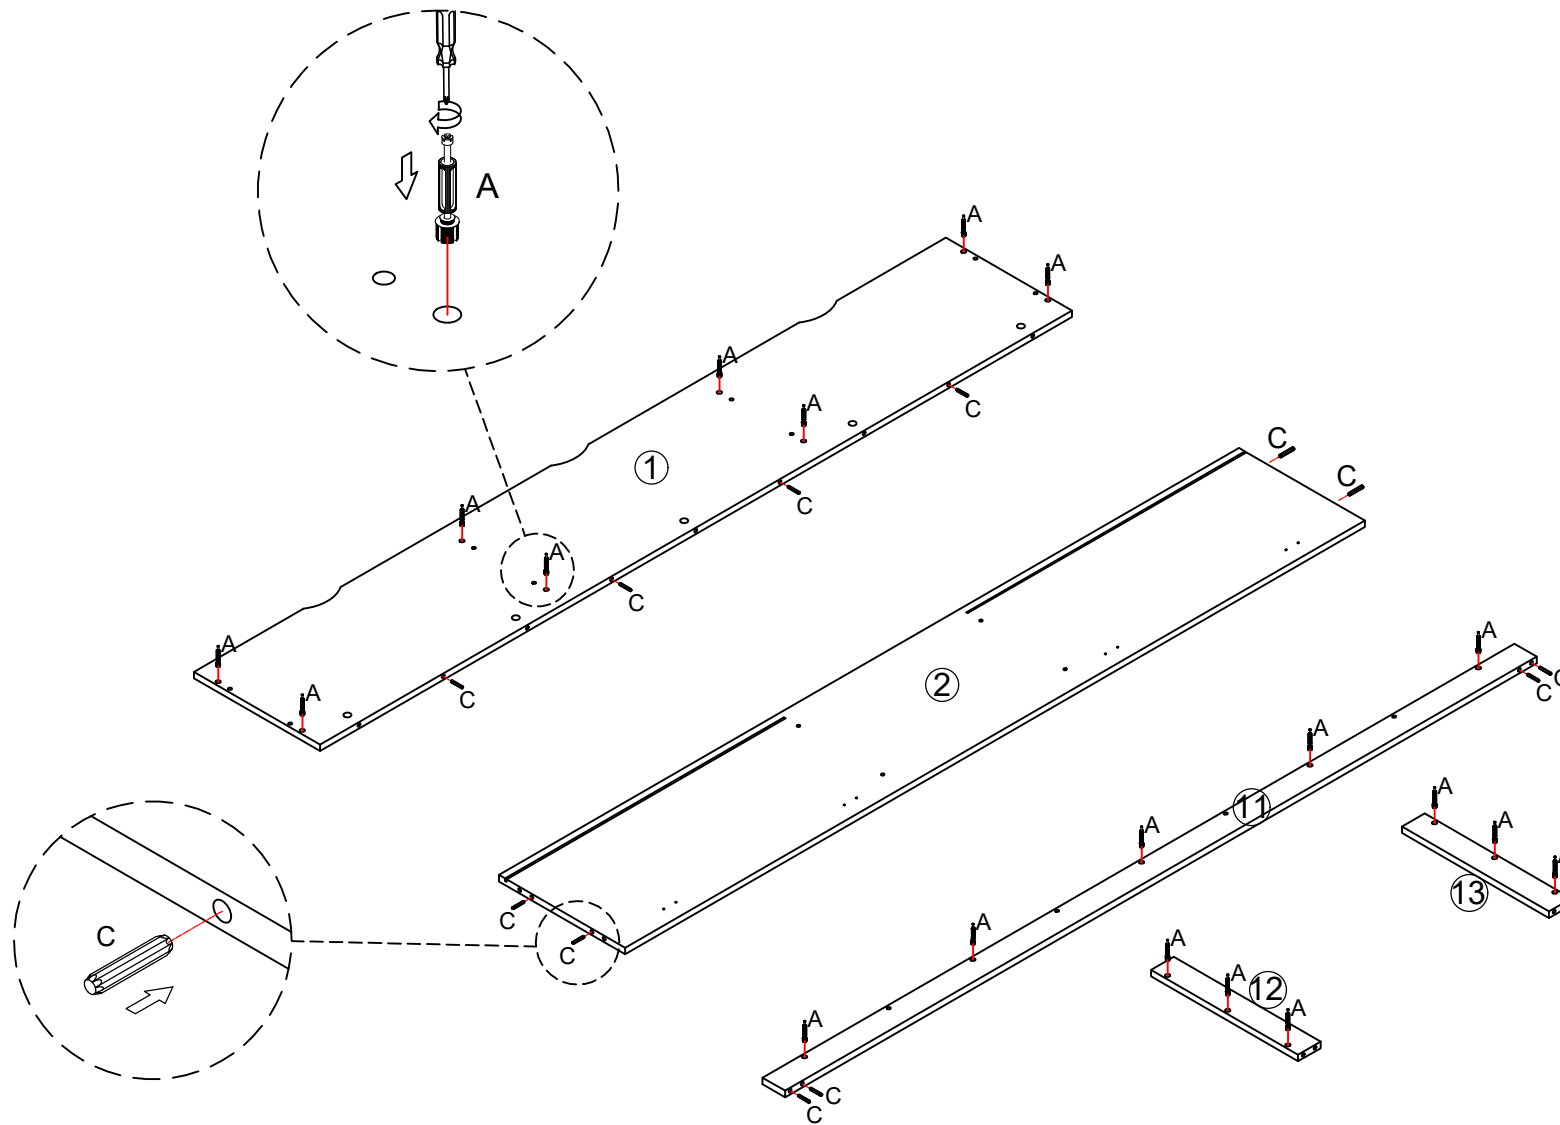

A*19













C*12

put A on board ① ② ⑪ ⑫ ⑬

put C on board ① ② ⑪

2

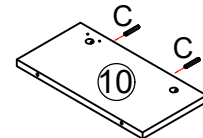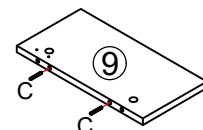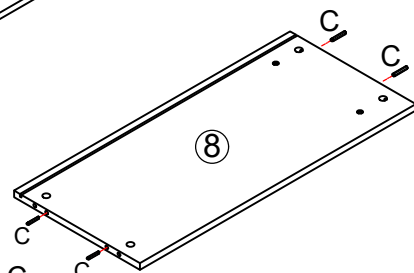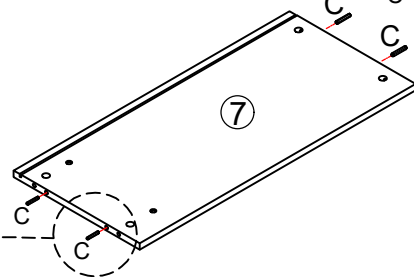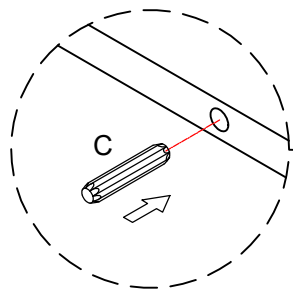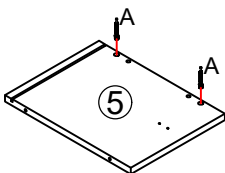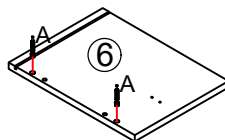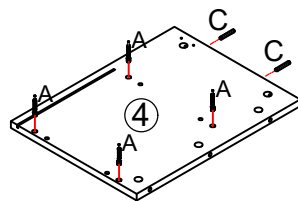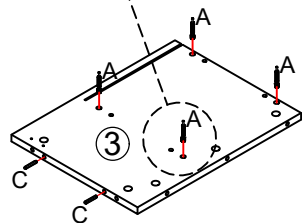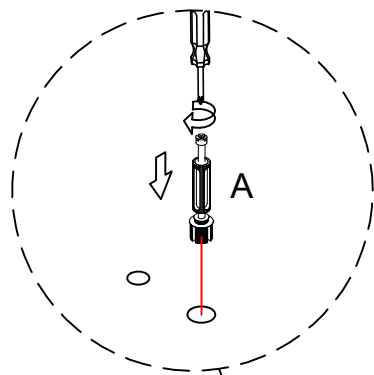

A*12




C*16

put A on board ③ ④ ⑤ ⑥

put C on board ③ ④ ⑦ ⑧ ⑨ ⑩

3

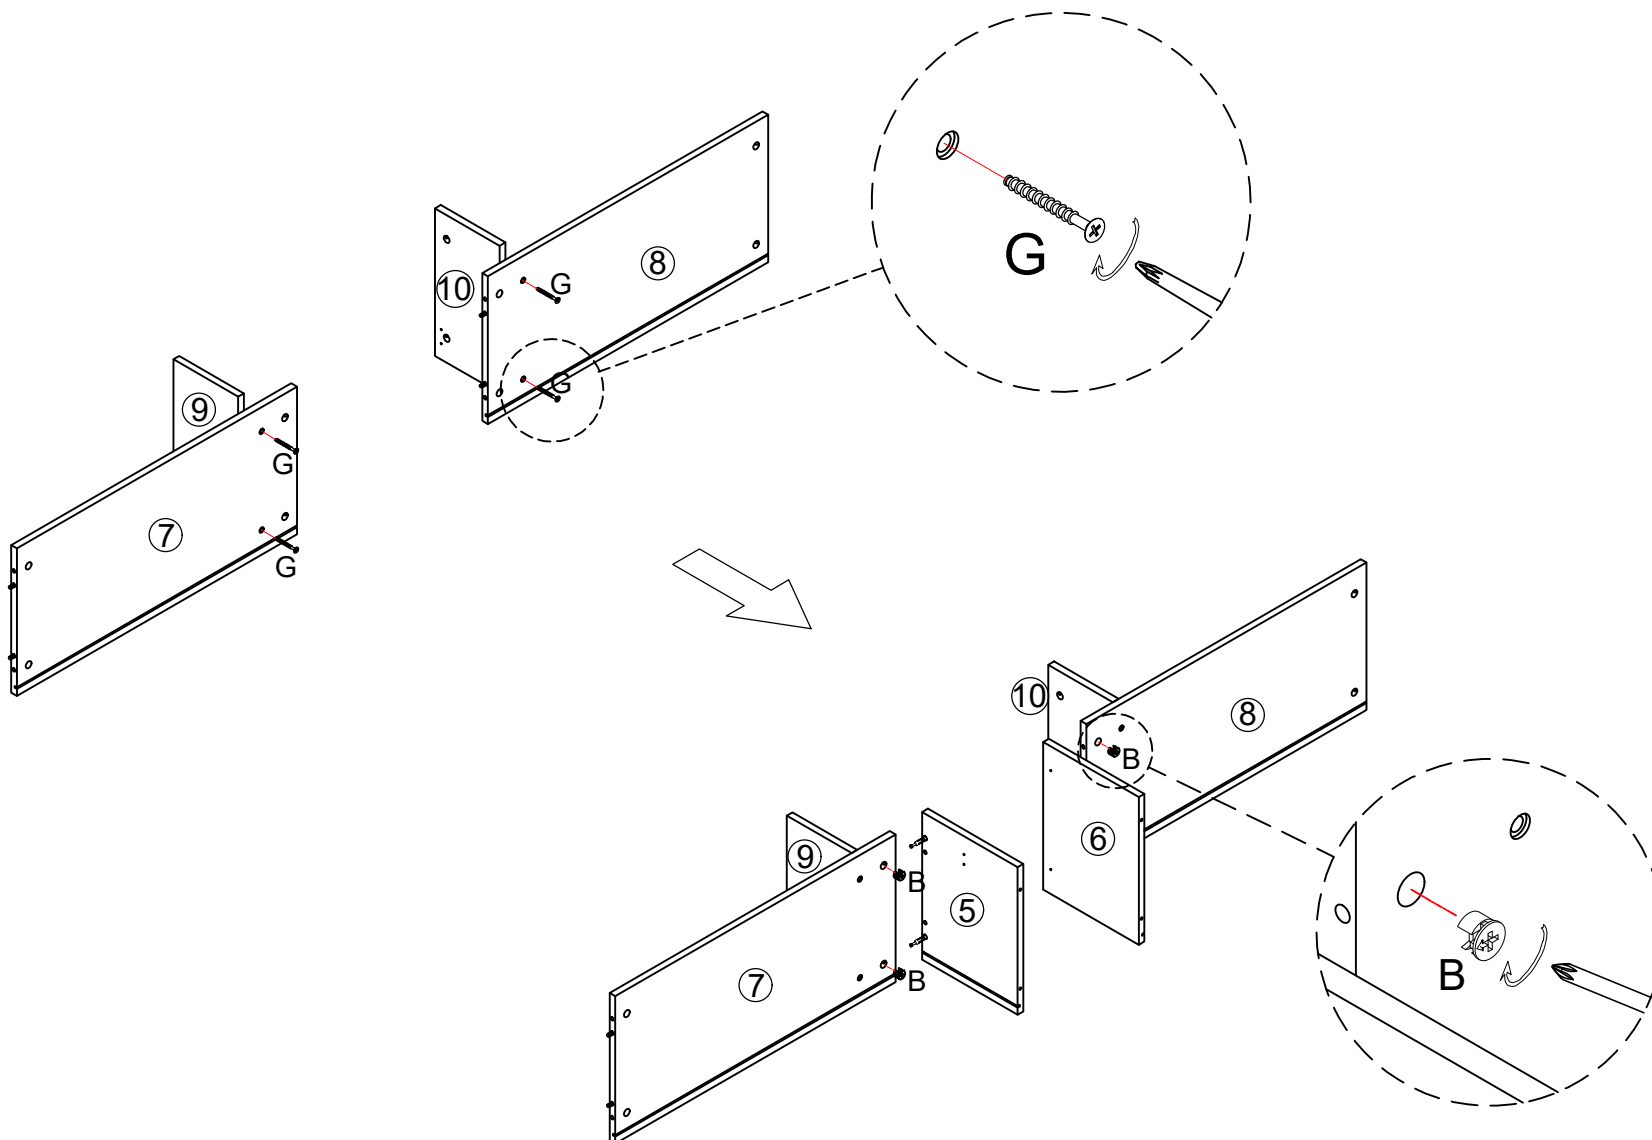

Make sure the arrow on the screw align to the hole on the side.





B*4



G*4


put B on board ⑦ ⑧

4

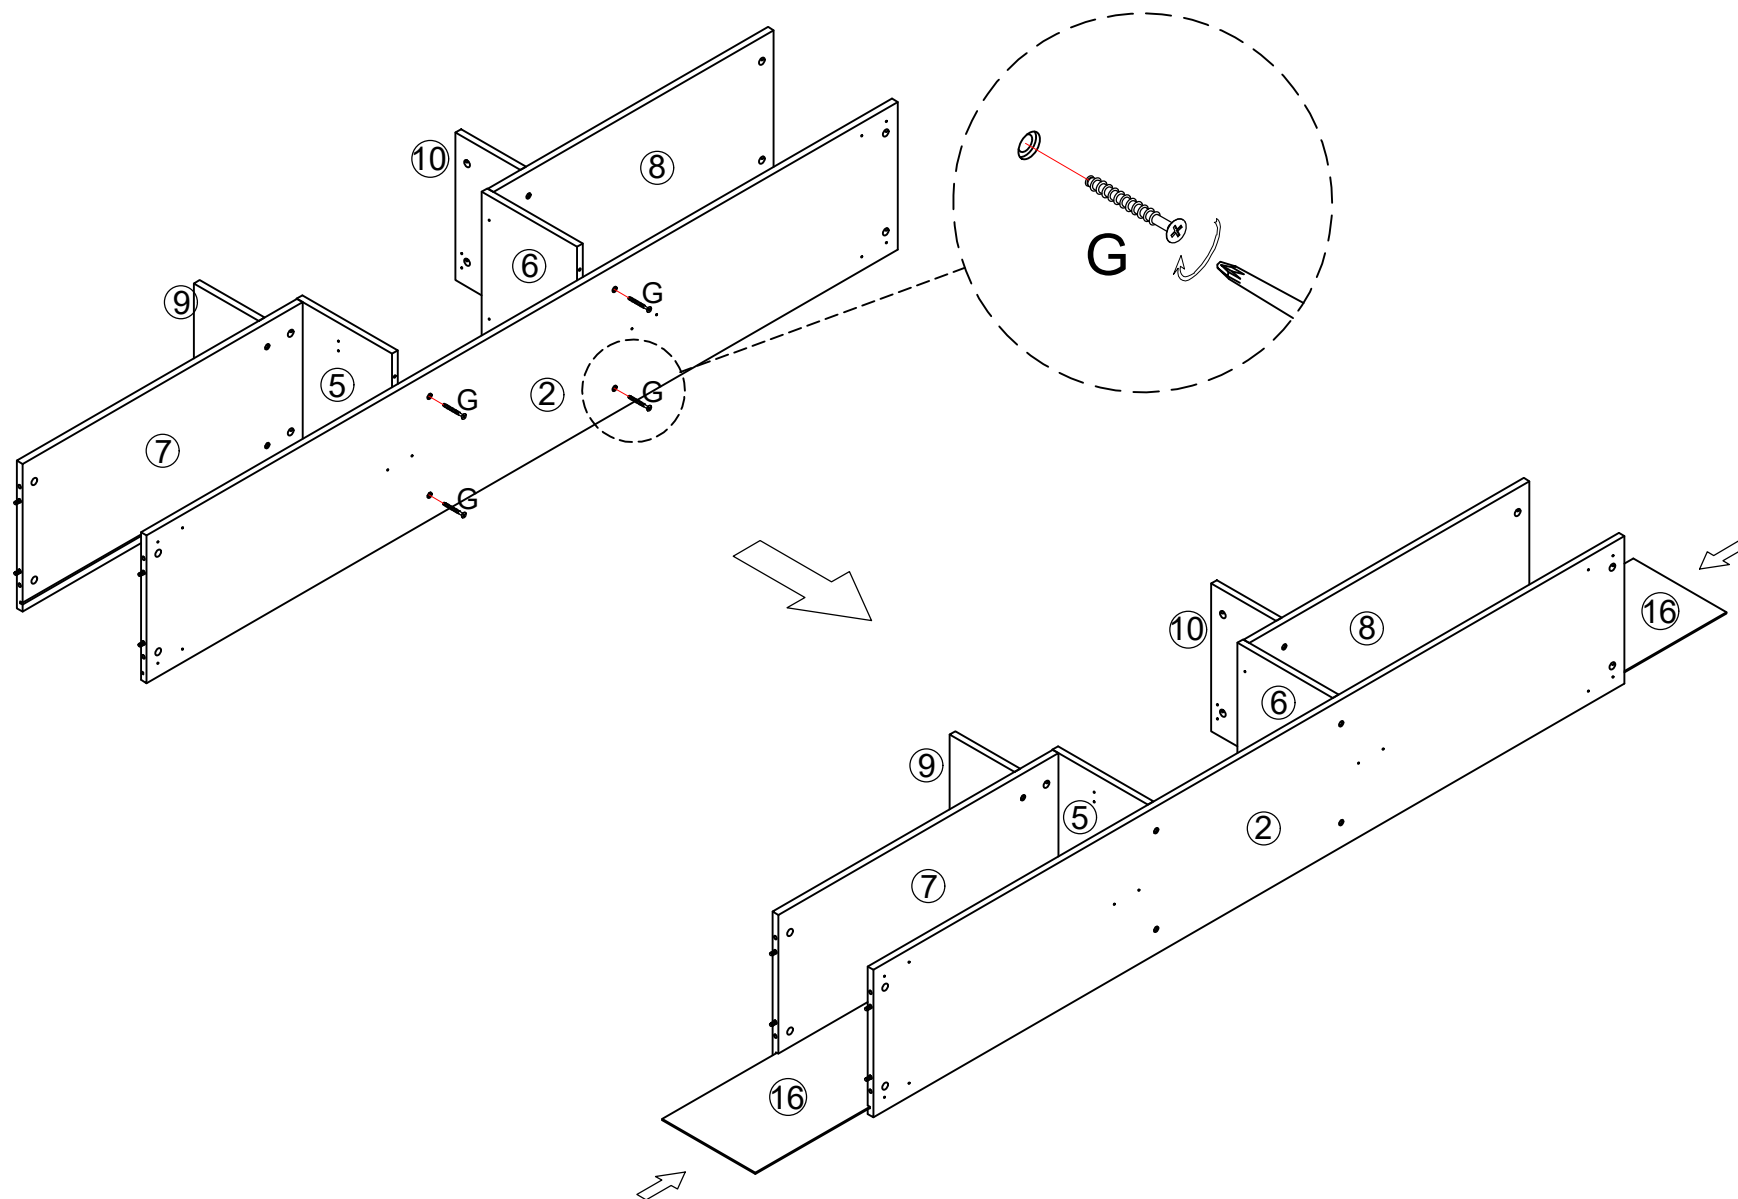

G*4

5

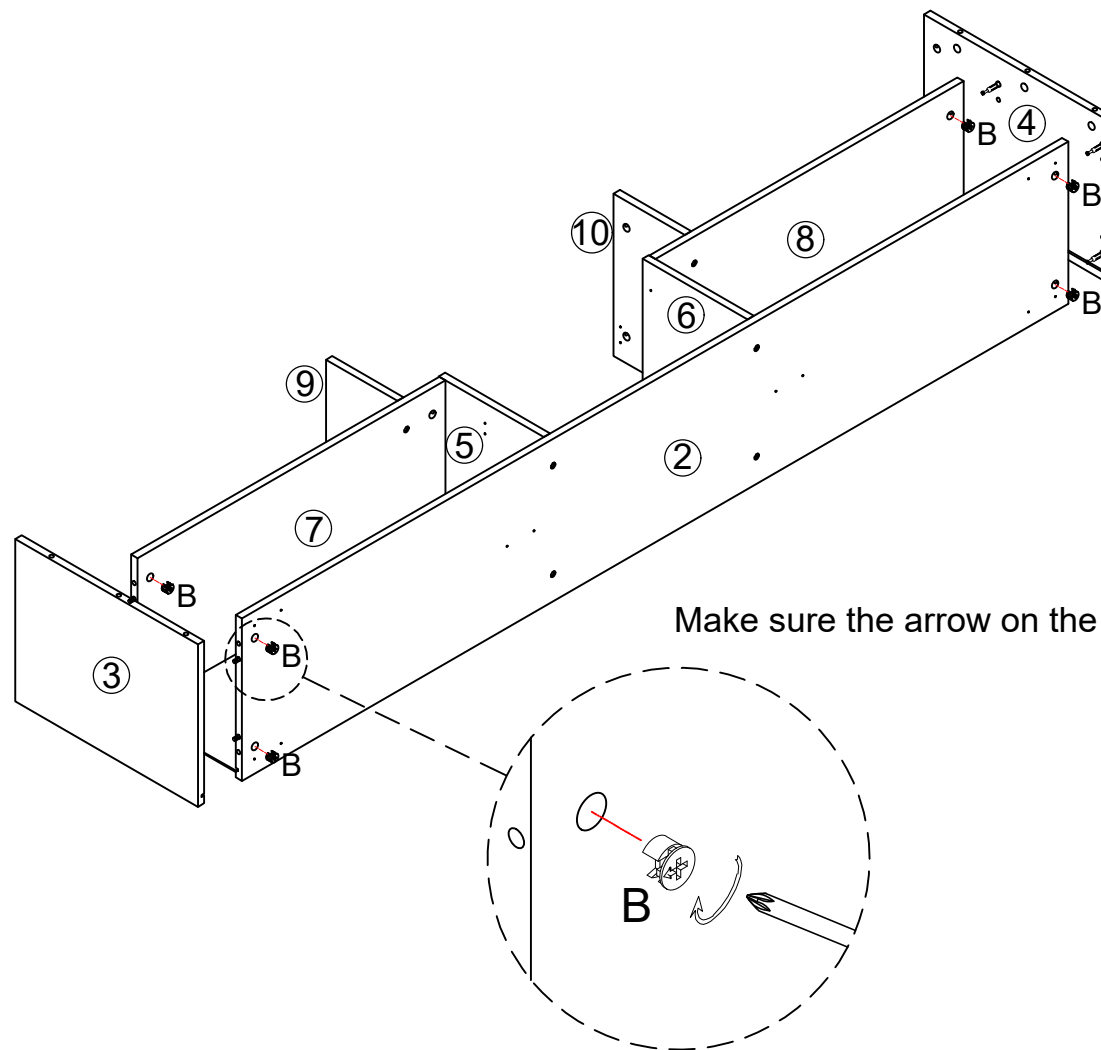


Make sure the arrow on the screw align to the hole on the side.



B*8

put B on board ② ⑦ ⑧

⑥

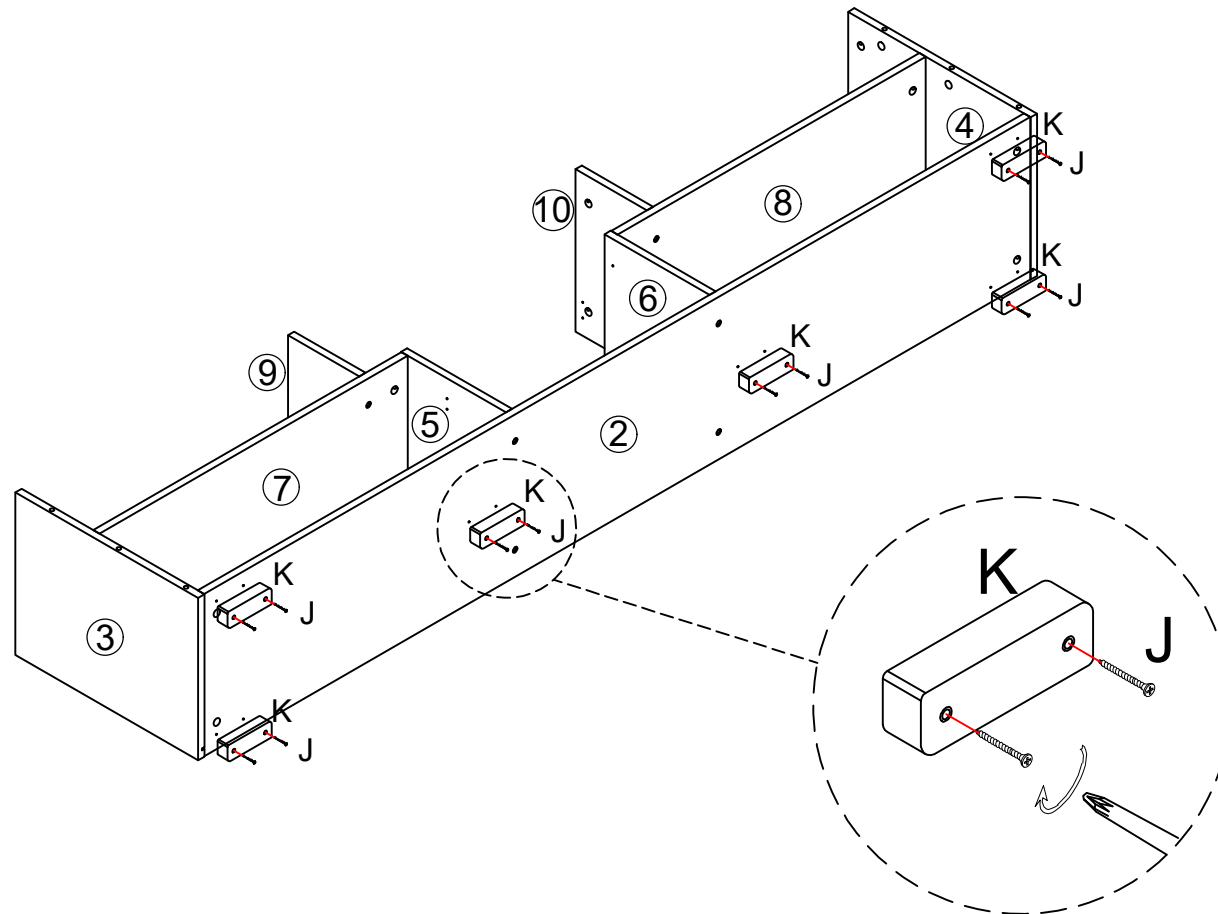


J*12



K*6

7

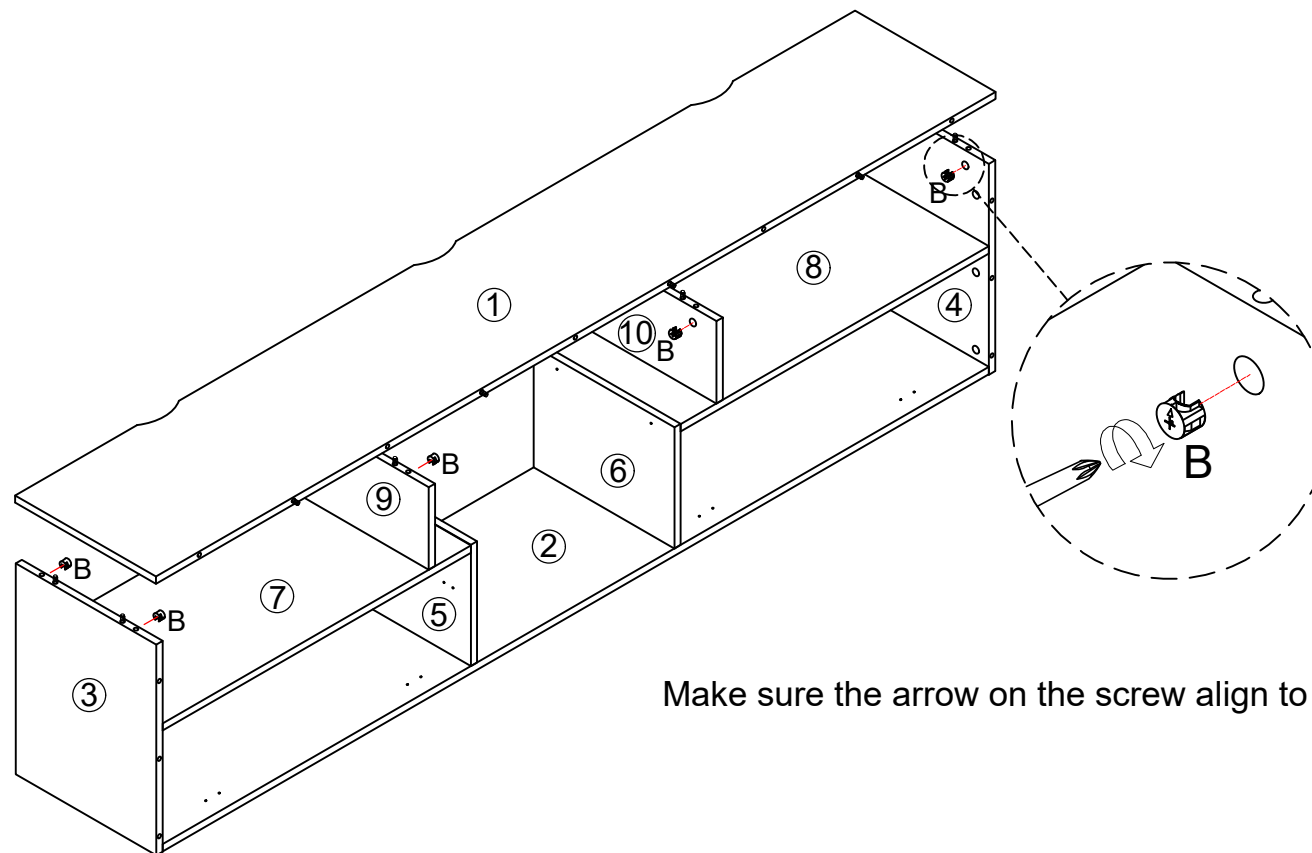


Make sure the arrow on the screw align to the hole on the side.



B*8

put B on board ③ ④ ⑨ ⑩

8

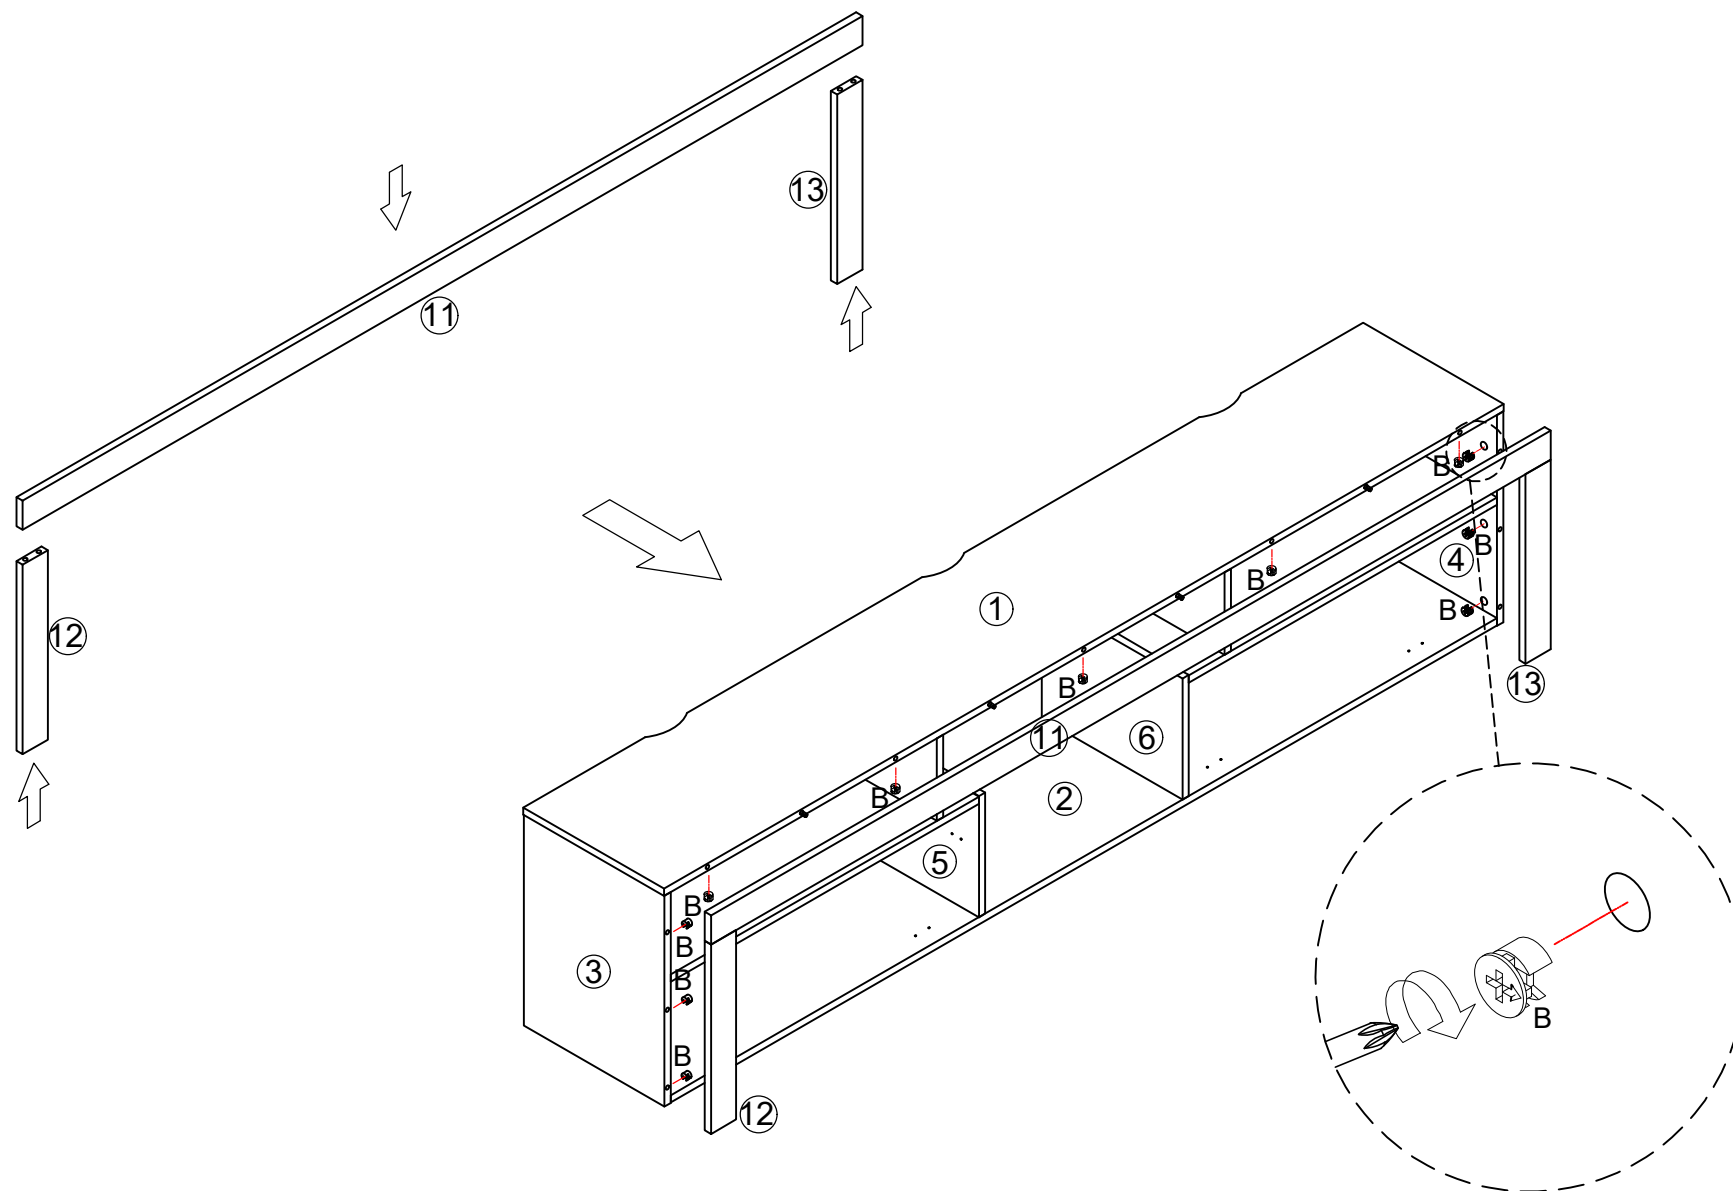


Make sure the arrow on the screw align to the hole on the side.

put B on board ① ③ ④




B*11

9

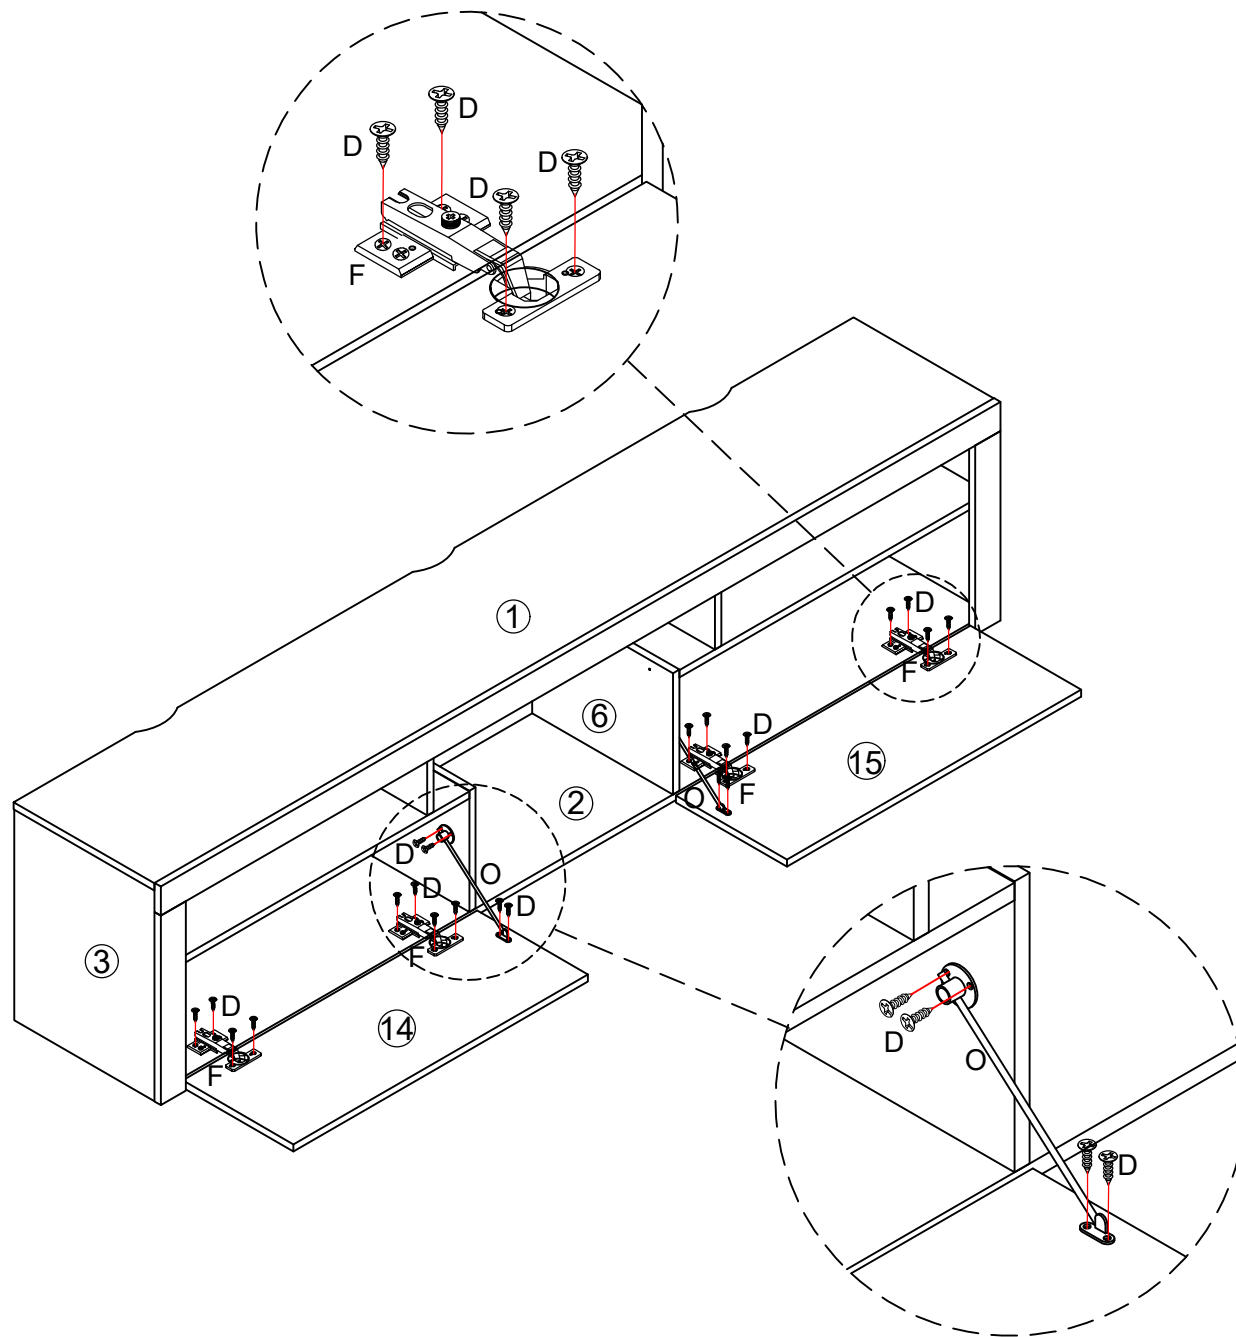

D*34




F*4



O*2

10

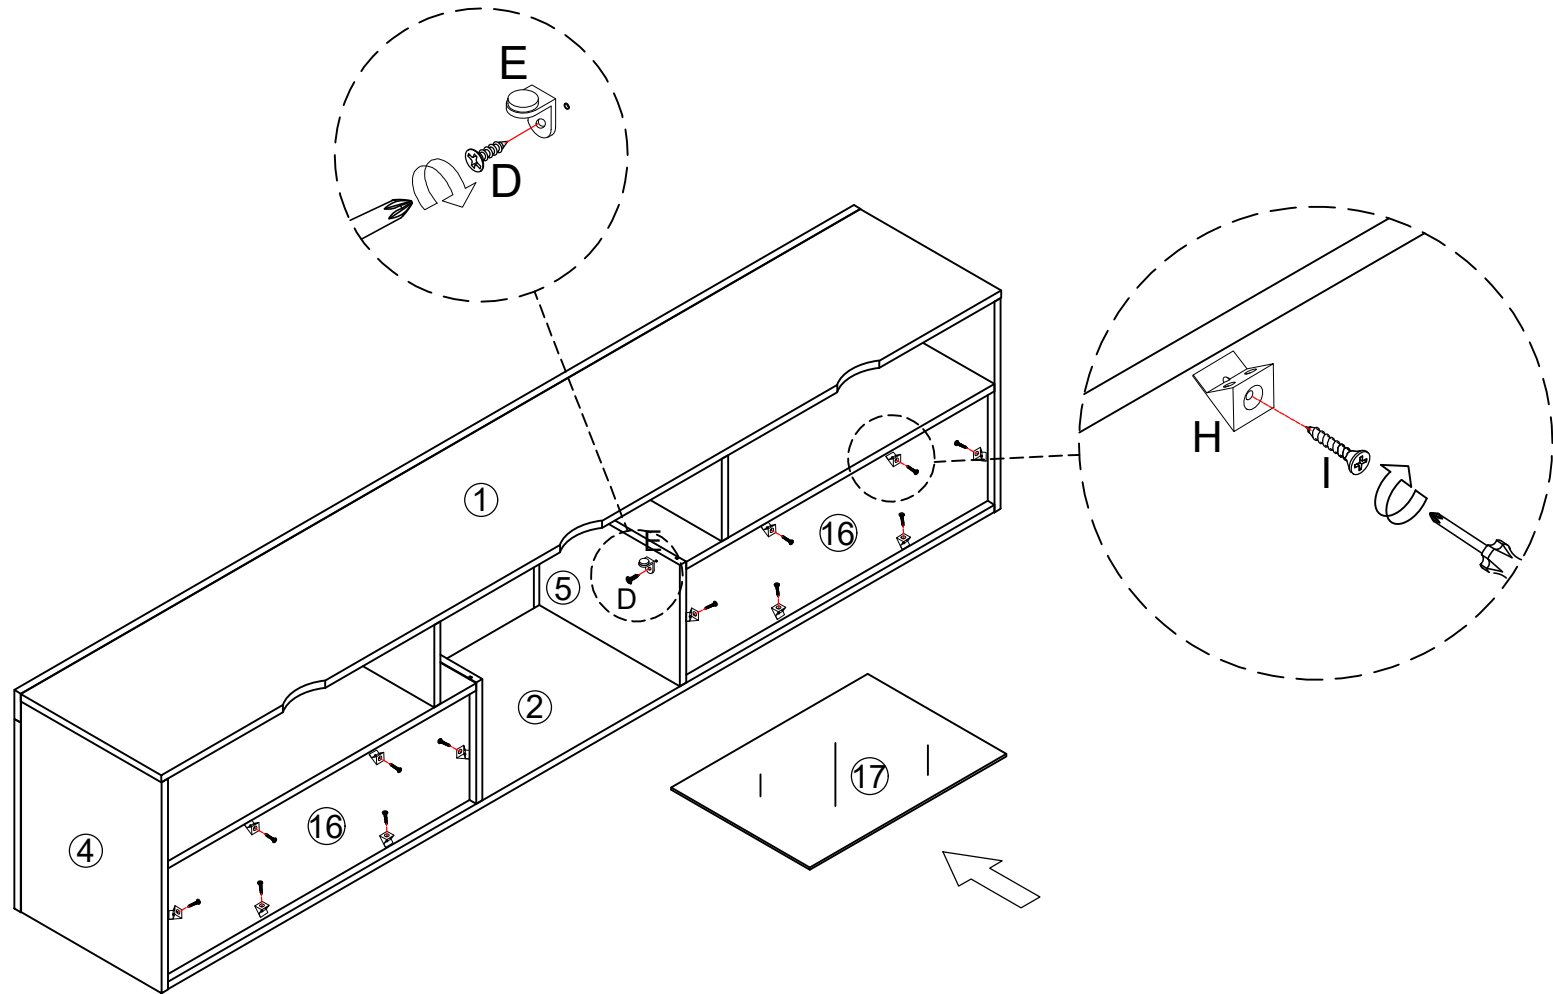

D*4




E*4



H*12




I*12

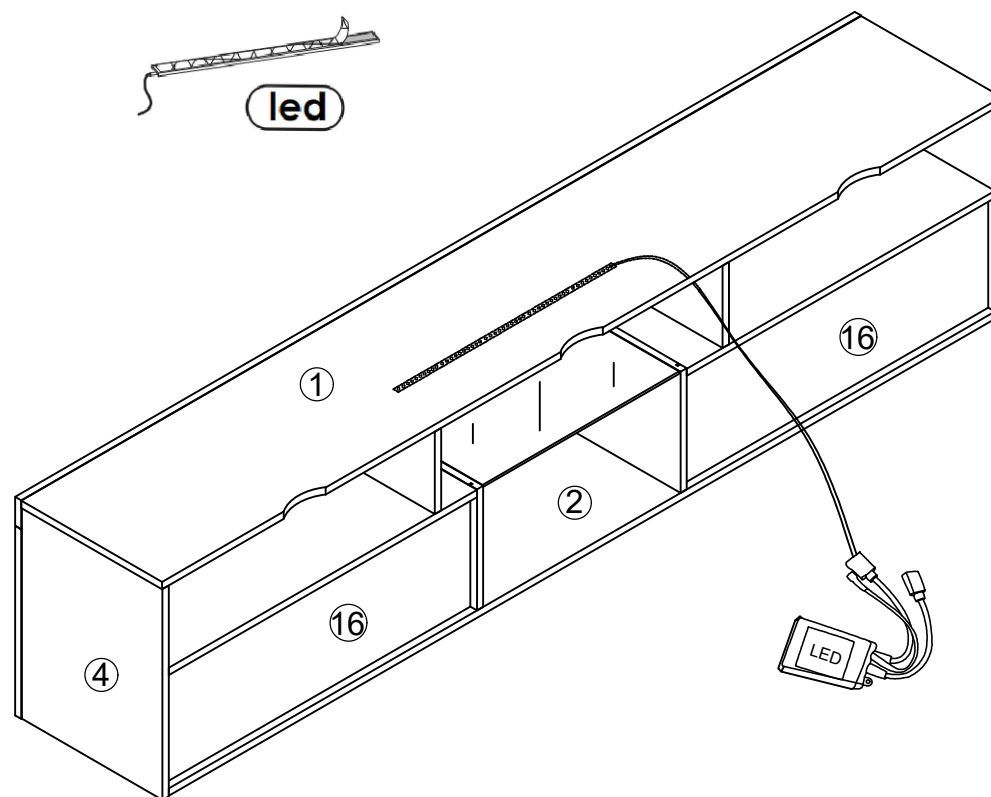

LED

12







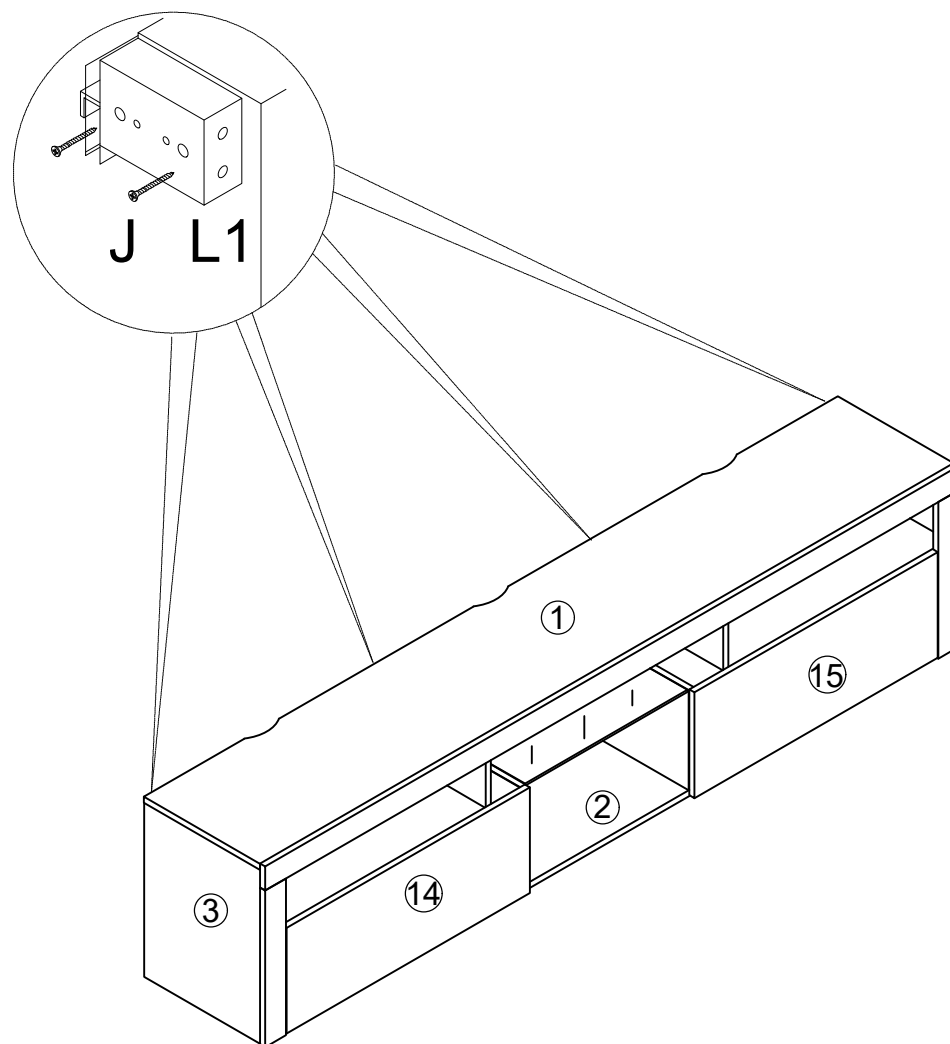


L1*4




J*8

13

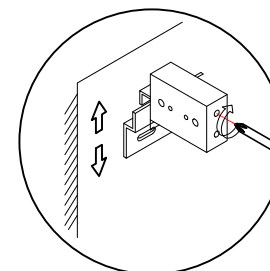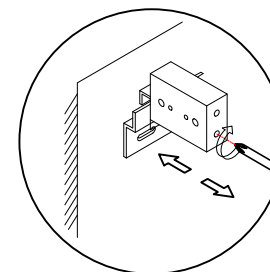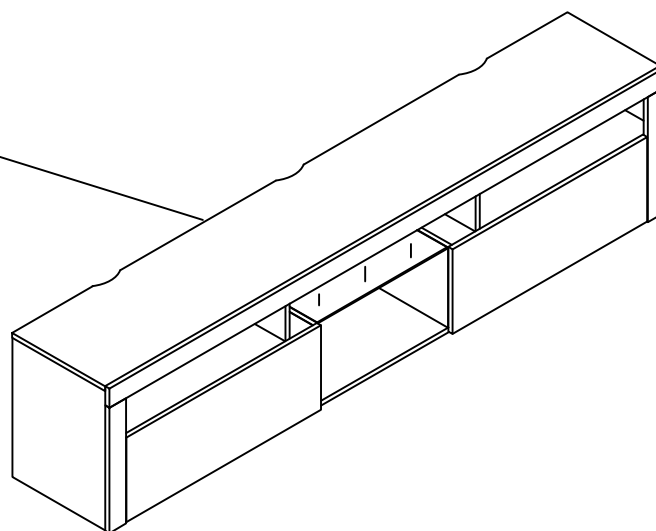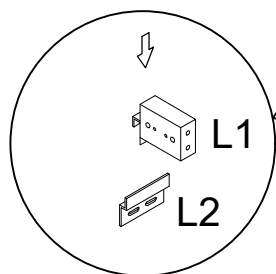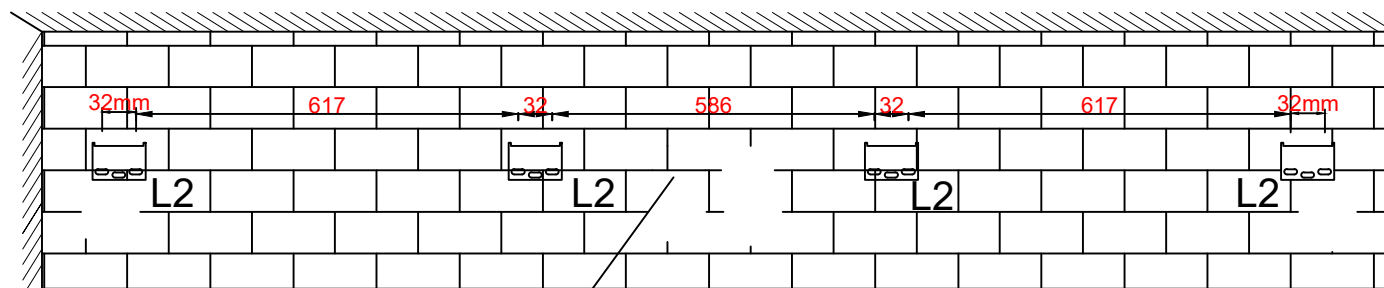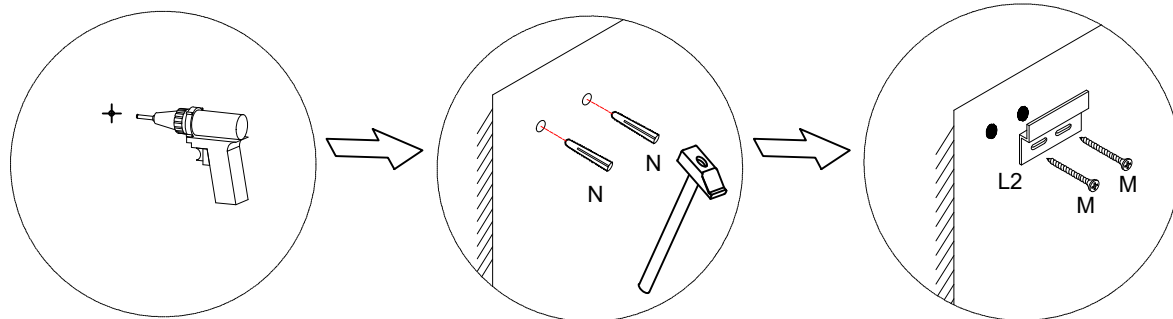


M*8



N*8



L2*4

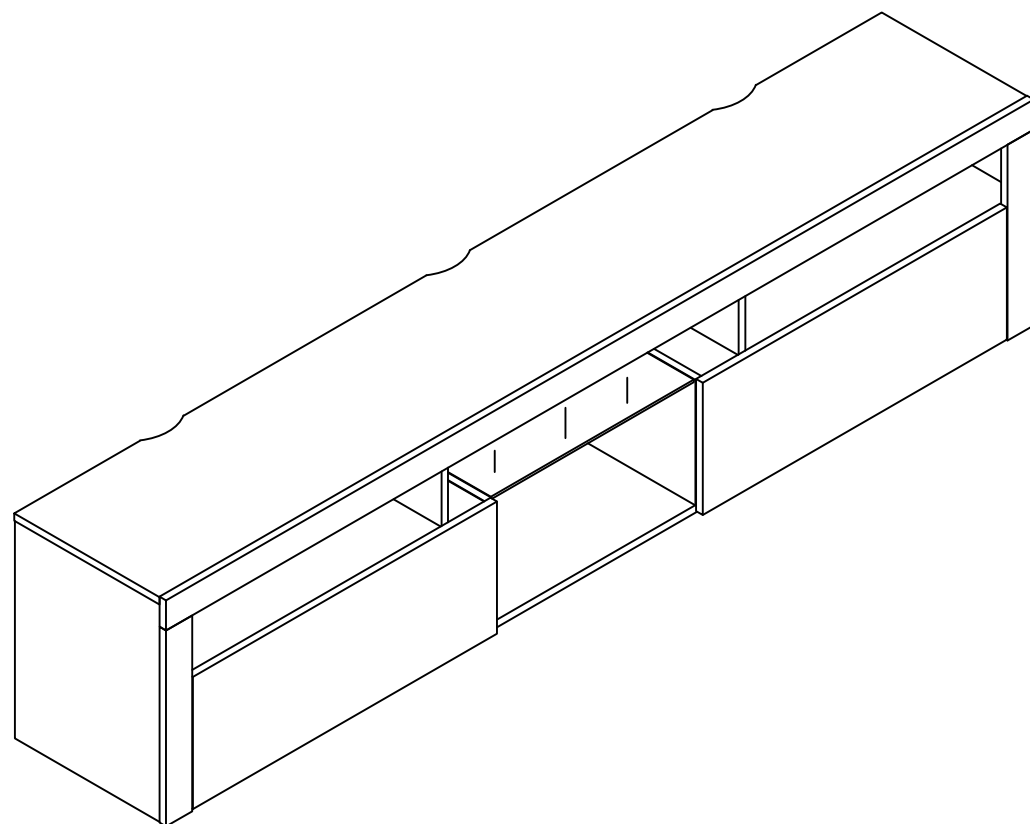

LED Light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
2. Please check the remote control, it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

