


Hall Tree

Assembly Instructions -Please keep for future reference

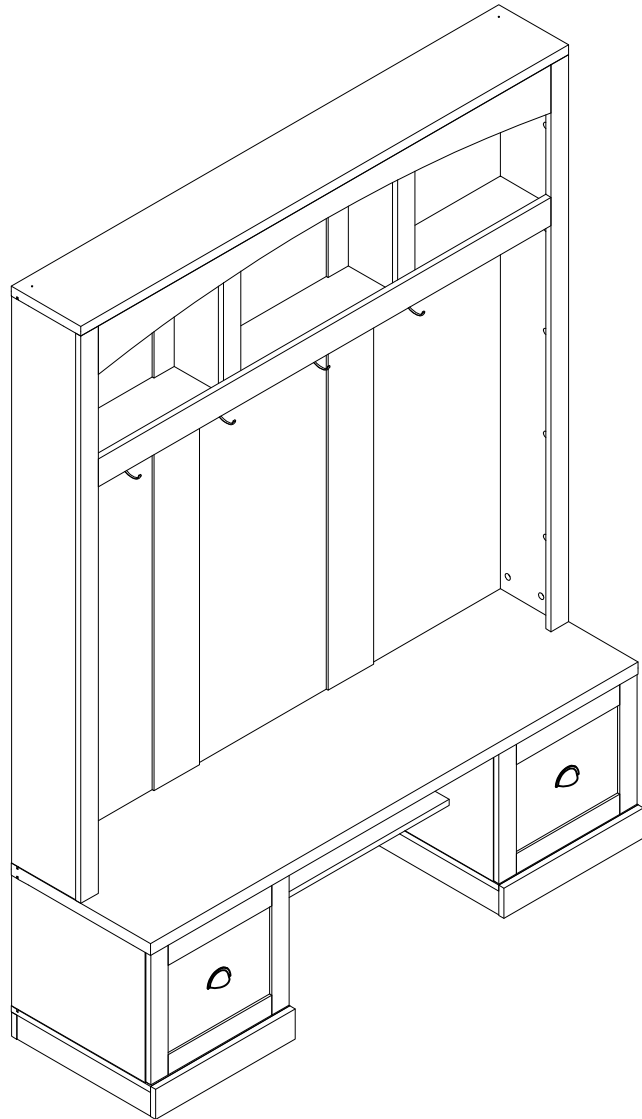

Dimensions

Width-55.1 inch

Depth-16.3 inch














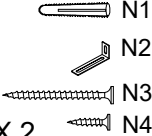

Height-73.4 inch

Important -Please read these instructions fully before starting assembly



Components -Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 119+3	(B)  Cam lock x 119+3	(C)  Dowel x 44+3	(D)  3.5*14mm Screw x 8
(E)  Clothes hook x 4	(F)  7*50mm Screw x 5	(G)  Movable partition bracket x 8	(H)  Hinge x 4
(I)  Handle x 2	(J)  Screw+Nut x 4	(K)  3.5*14mm Screw x 24+3	(L)  Plastic buckle x 32
(M)  3*12mm Screw x 32	(N)  Hook X 2	(O)  Sticker Cover x 40+3	

Tools required



Phillips screwdriver
(medium & large)



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

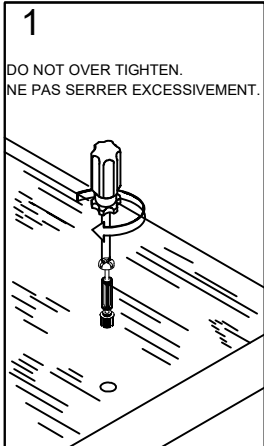

Step 2


Push the male camlock into the entry hole.

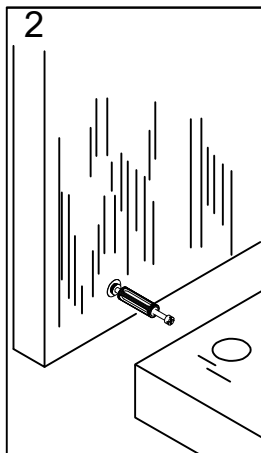

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

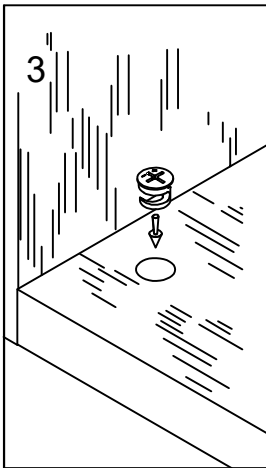


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.















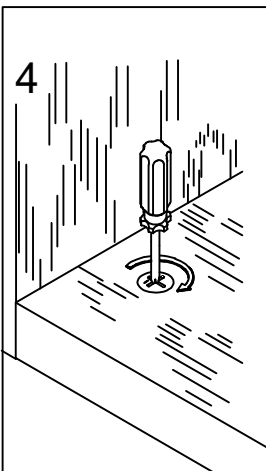


Assembly Instructions











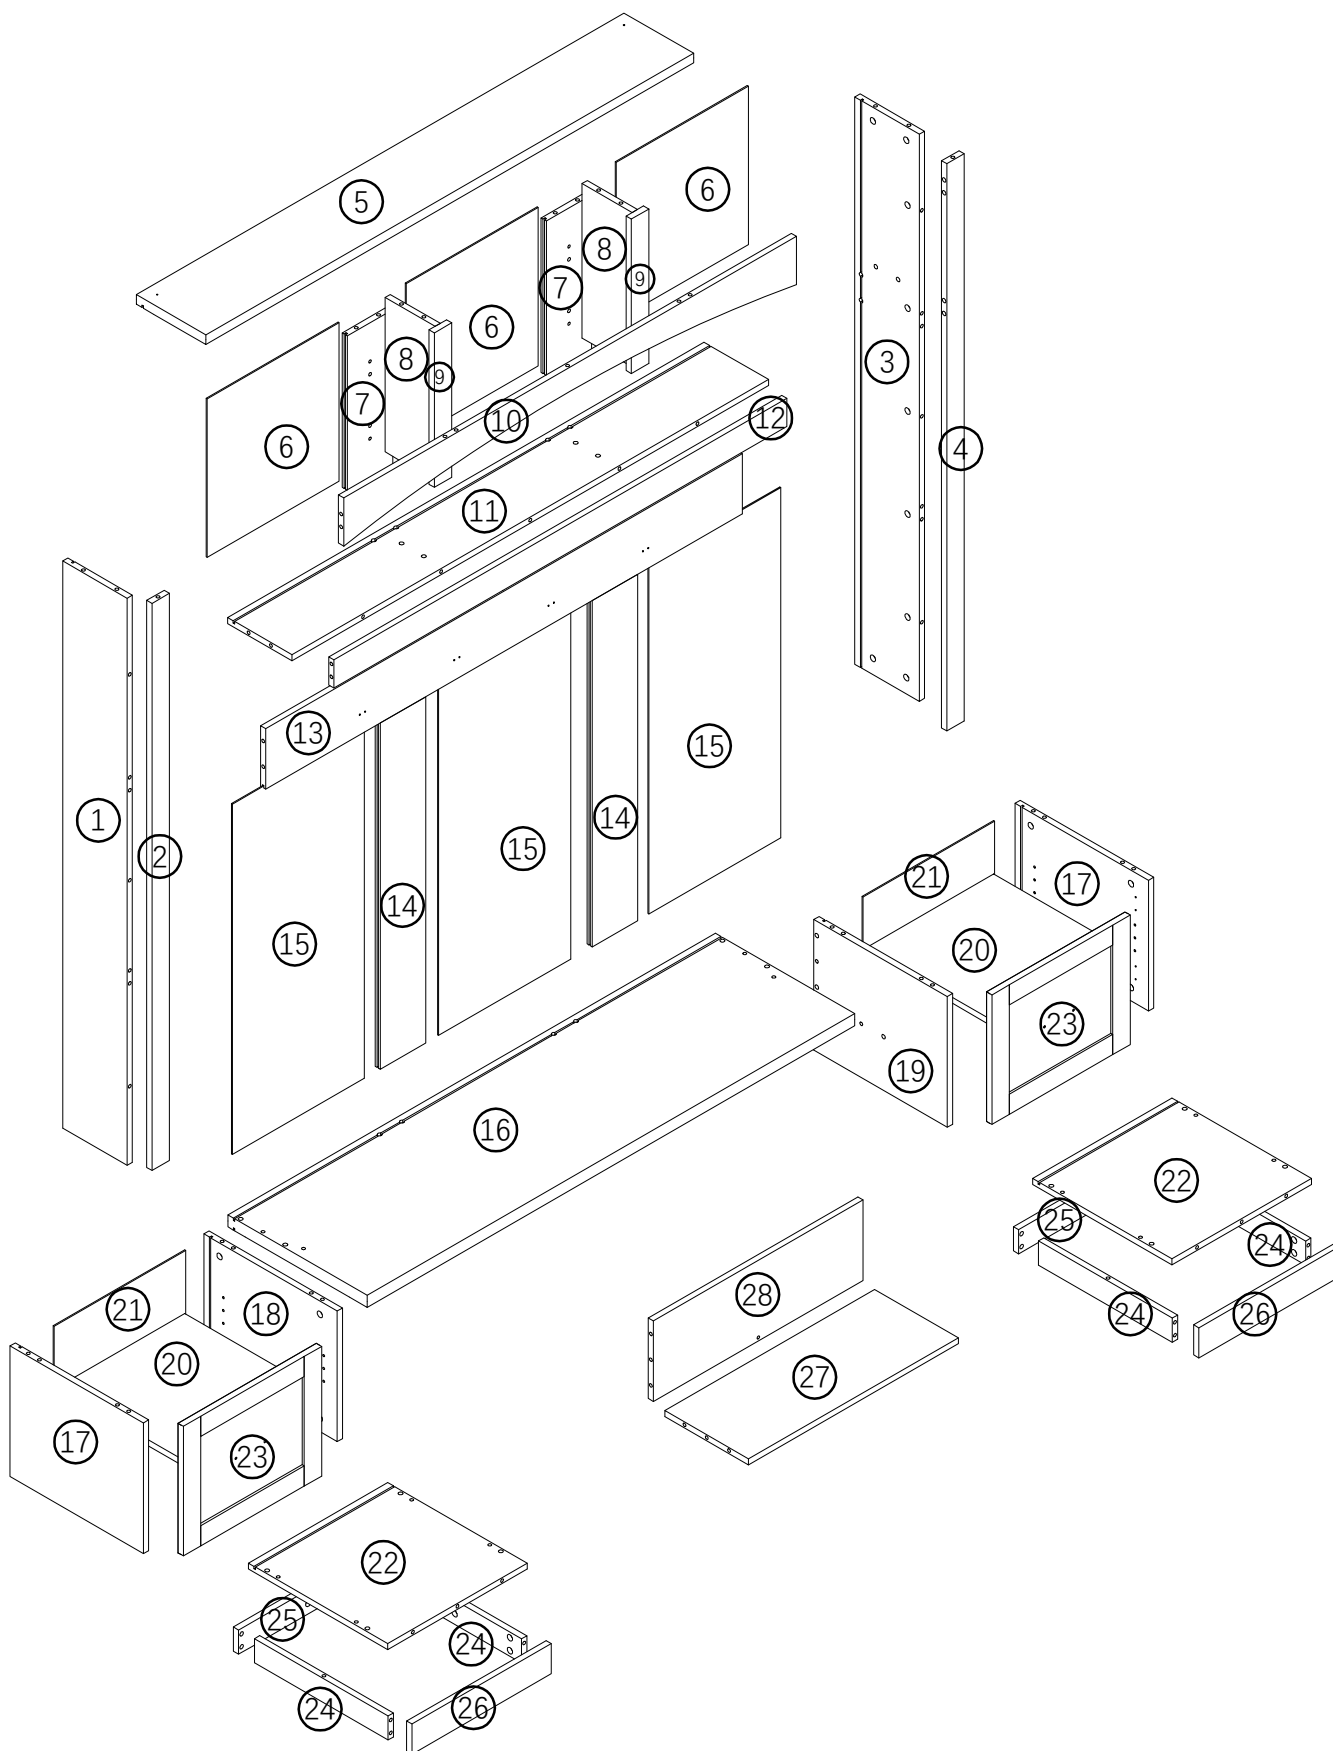

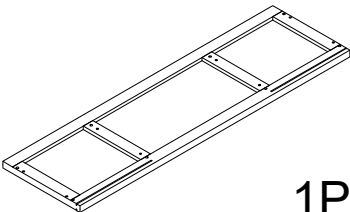
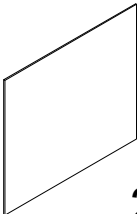


There are 2 boxes of this product.

N721P192132

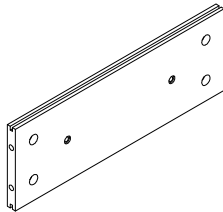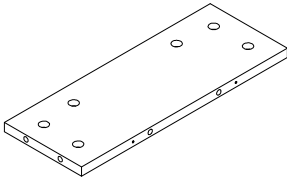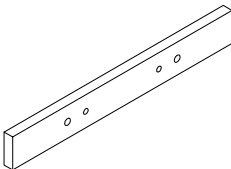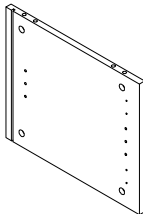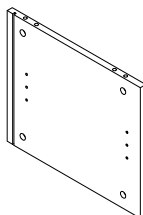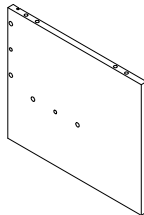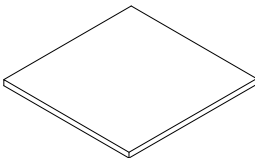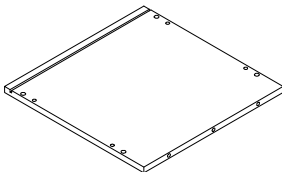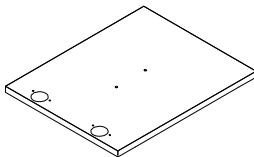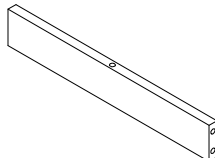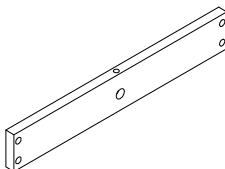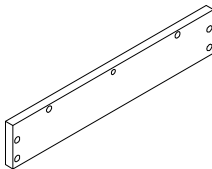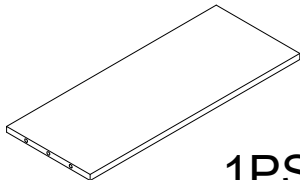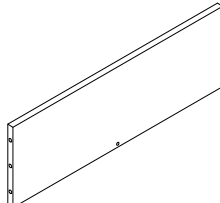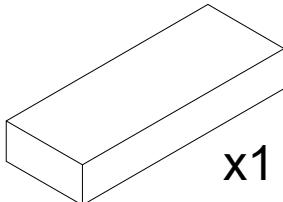
<p>7</p> <p>384*130*15mm</p>  <p>2PS</p>	<p>8</p> <p>384*144*15mm</p>  <p>2PS</p>	<p>9</p> <p>384*50*15mm</p>  <p>2PS</p>
<p>17</p> <p>325*383*15mm</p>  <p>2PS</p>	<p>18</p> <p>325*383*15mm</p>  <p>1PS</p>	<p>19</p> <p>325*383*15mm</p>  <p>1PS</p>
<p>20</p> <p>366*360*15mm</p>  <p>2PS</p>	<p>22</p> <p>400*400*15mm</p>  <p>2PS</p>	<p>23</p> <p>397*322*15mm</p>  <p>2PS</p>
<p>24</p> <p>384*60*15mm</p>  <p>4PS</p>	<p>25</p> <p>400*60*15mm</p>  <p>2PS</p>	<p>26</p> <p>400*75*15mm</p>  <p>2PS</p>
<p>27</p> <p>602*240*15mm</p>  <p>1PS</p>	<p>28</p> <p>602*200*15mm</p>  <p>1PS</p>	 <p>x1</p> <p>Hardware Kit</p>

N721P192130

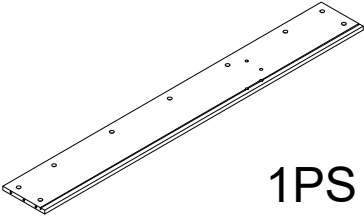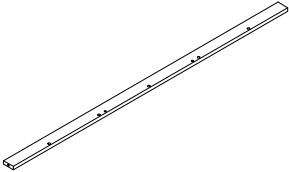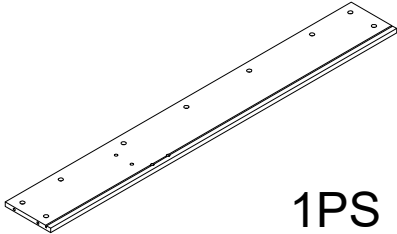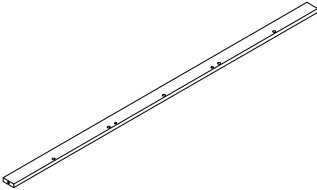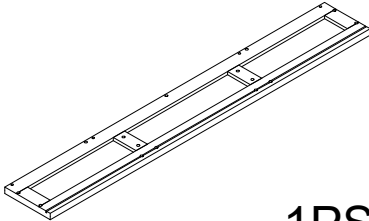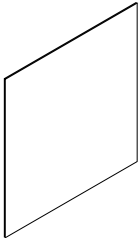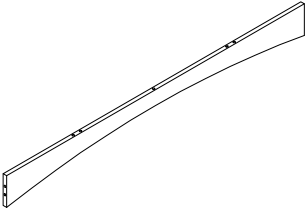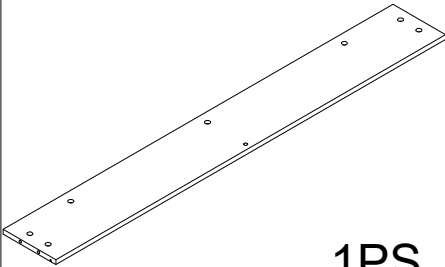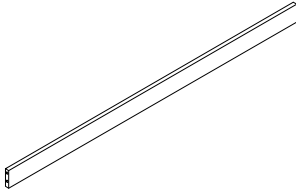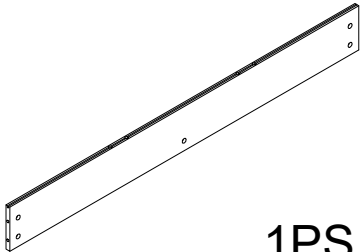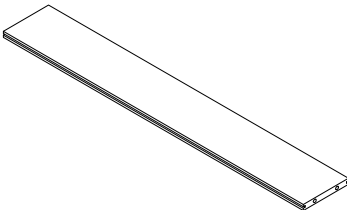
<div>①</div> <div>1410*185*15mm</div> <div></div> <div>1PS</div>	<div>②</div> <div>1410*50*15mm</div> <div></div> <div>1PS</div>	<div>③</div> <div>1410*185*15mm</div> <div></div> <div>1PS</div>
<div>④</div> <div>1410*50*15mm</div> <div></div> <div>1PS</div>	<div>⑤</div> <div>1400*200*24mm</div> <div></div> <div>1PS</div>	<div>⑥</div> <div>394*379*3mm</div> <div></div> <div>3PS</div>
<div>⑩</div> <div>1300*120*15mm</div> <div></div> <div>1PS</div>	<div>⑪</div> <div>1368*185*15mm</div> <div></div> <div>1PS</div>	<div>⑫</div> <div>1300*70*15mm</div> <div></div> <div>1PS</div>
<div>⑬</div> <div>1368*150*15mm</div> <div></div> <div>1PS</div>	<div>⑭</div> <div>861*130*15mm</div> <div></div> <div>2PS</div>	<div>⑮</div> <div>871*379*3mm</div> <div></div> <div>3PS</div>
<div>⑯</div> <div>1400*400*30mm</div> <div></div> <div>1PS</div>	<div>⑰</div> <div>335*378*3mm</div> <div></div> <div>2PS</div>	

Assembly Instructions

Step 1

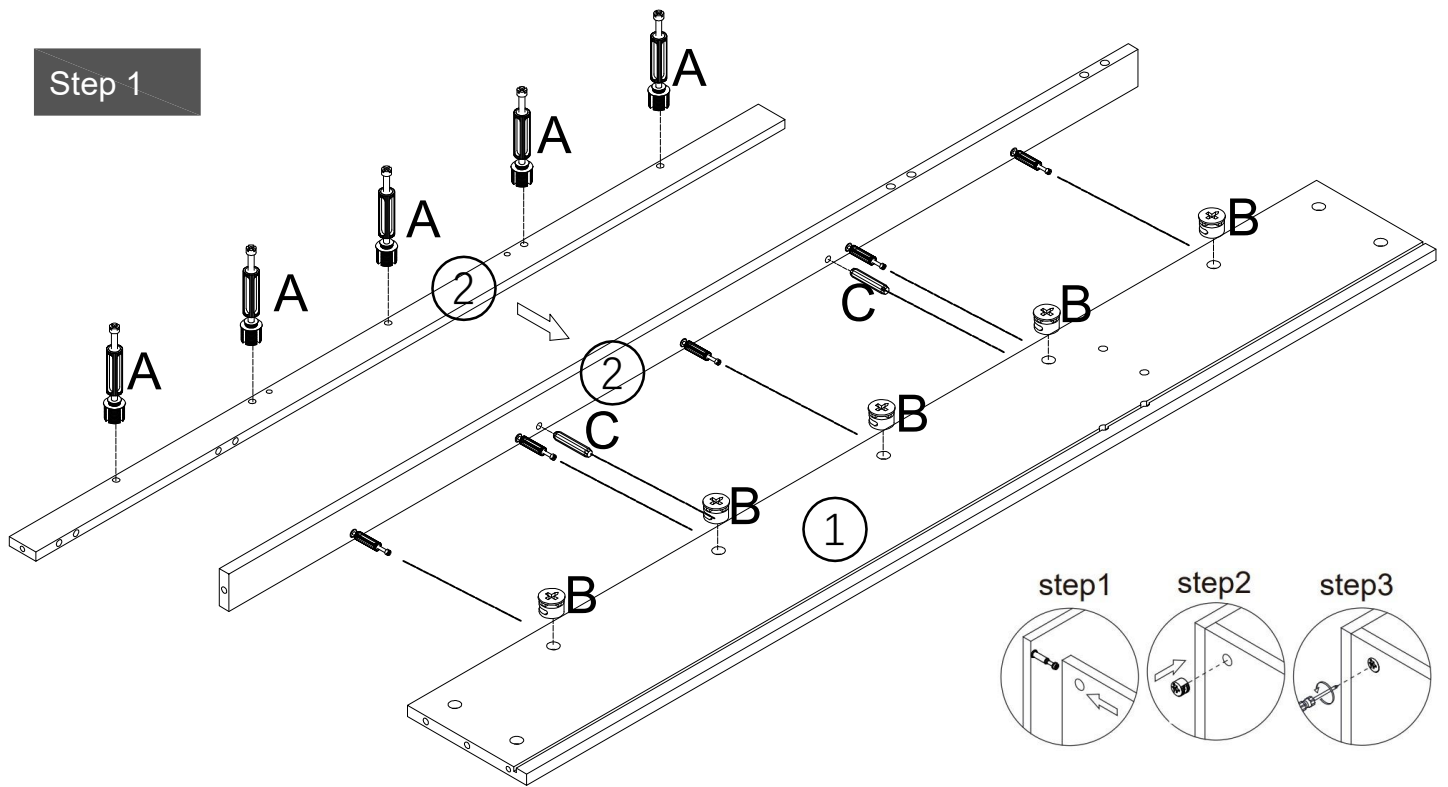

(A)




Cam Bolt x 5

(B)




Cam lock x 5

(C)




Dowel x 2

Step 2

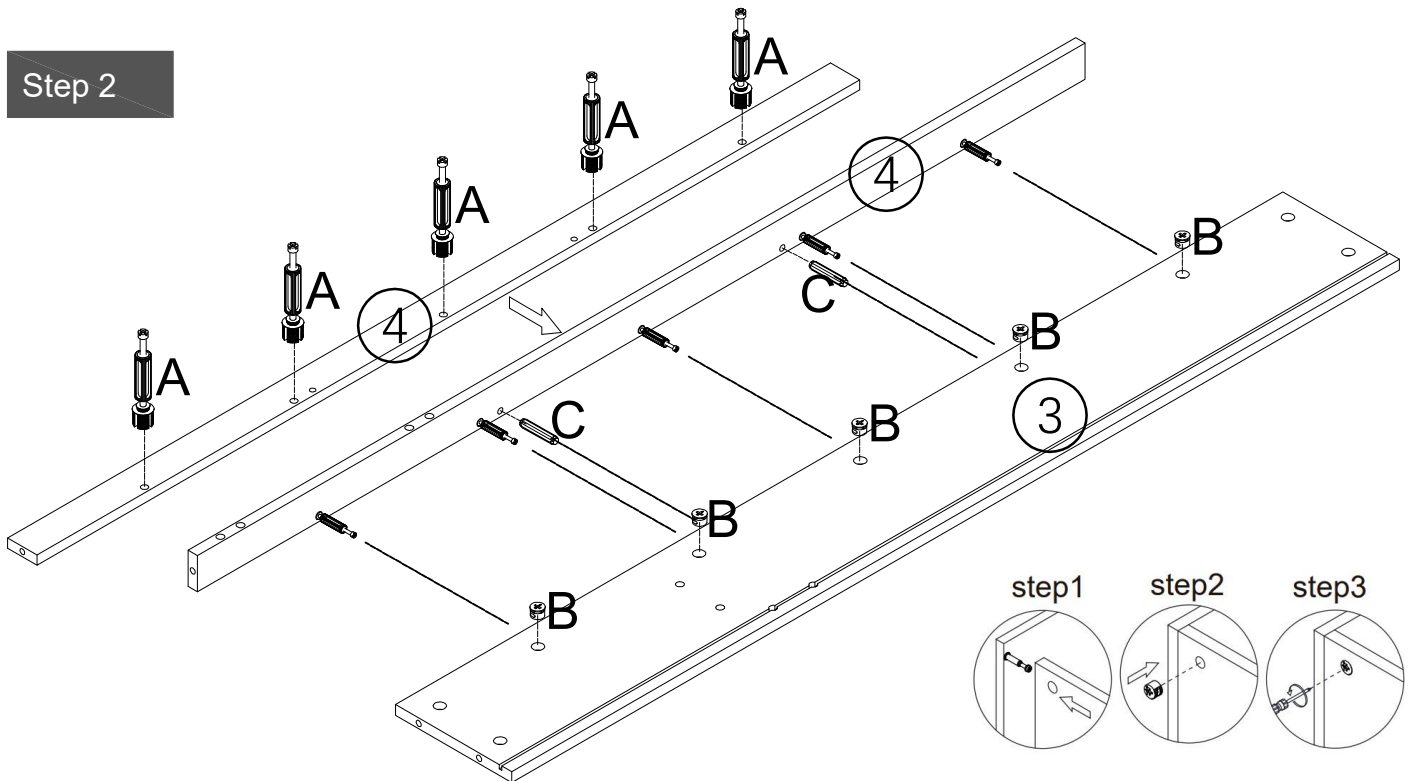

(A)




Cam Bolt x 5

(B)



Cam lock x 5



(C)



Dowel x 2

Assembly Instructions

Step 3

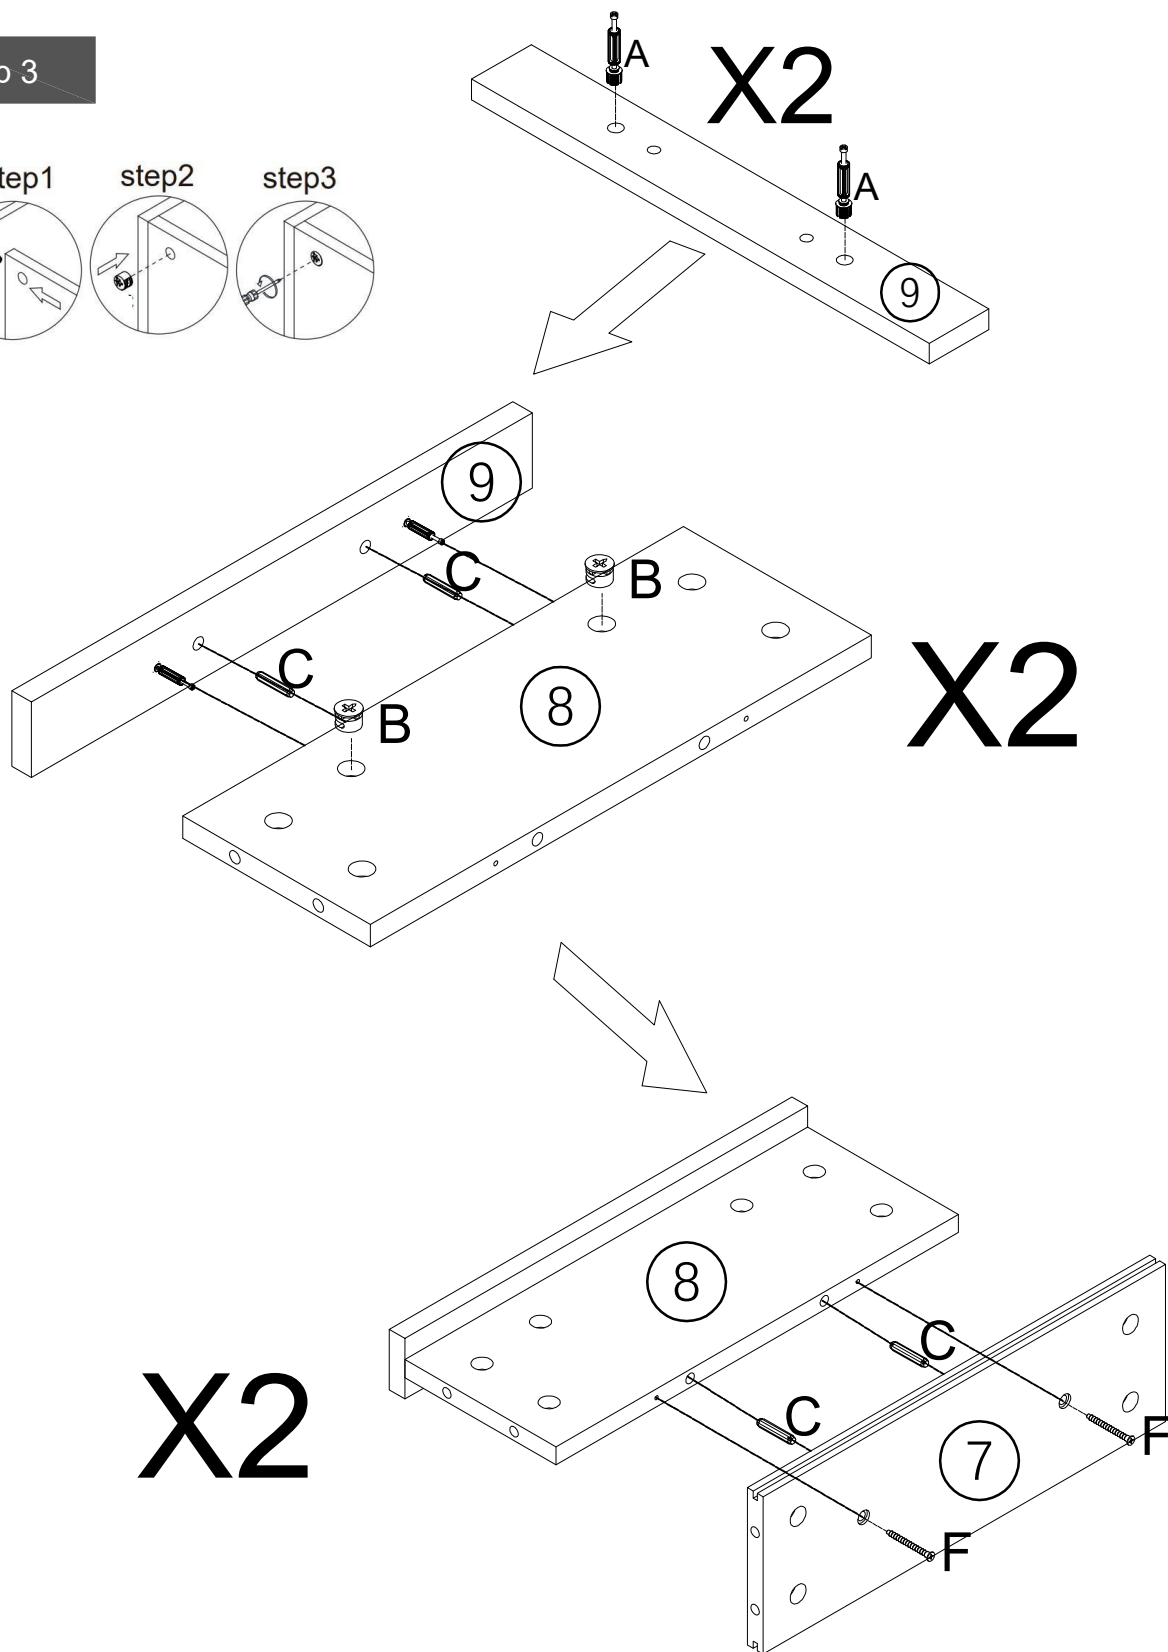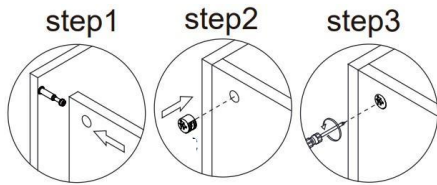

(A)



Cam Bolt x 4

(B)



Cam lock x 4

(C)



Dowel x 8


(F)



7*50mm Screw x 4

Assembly Instructions

Step 4

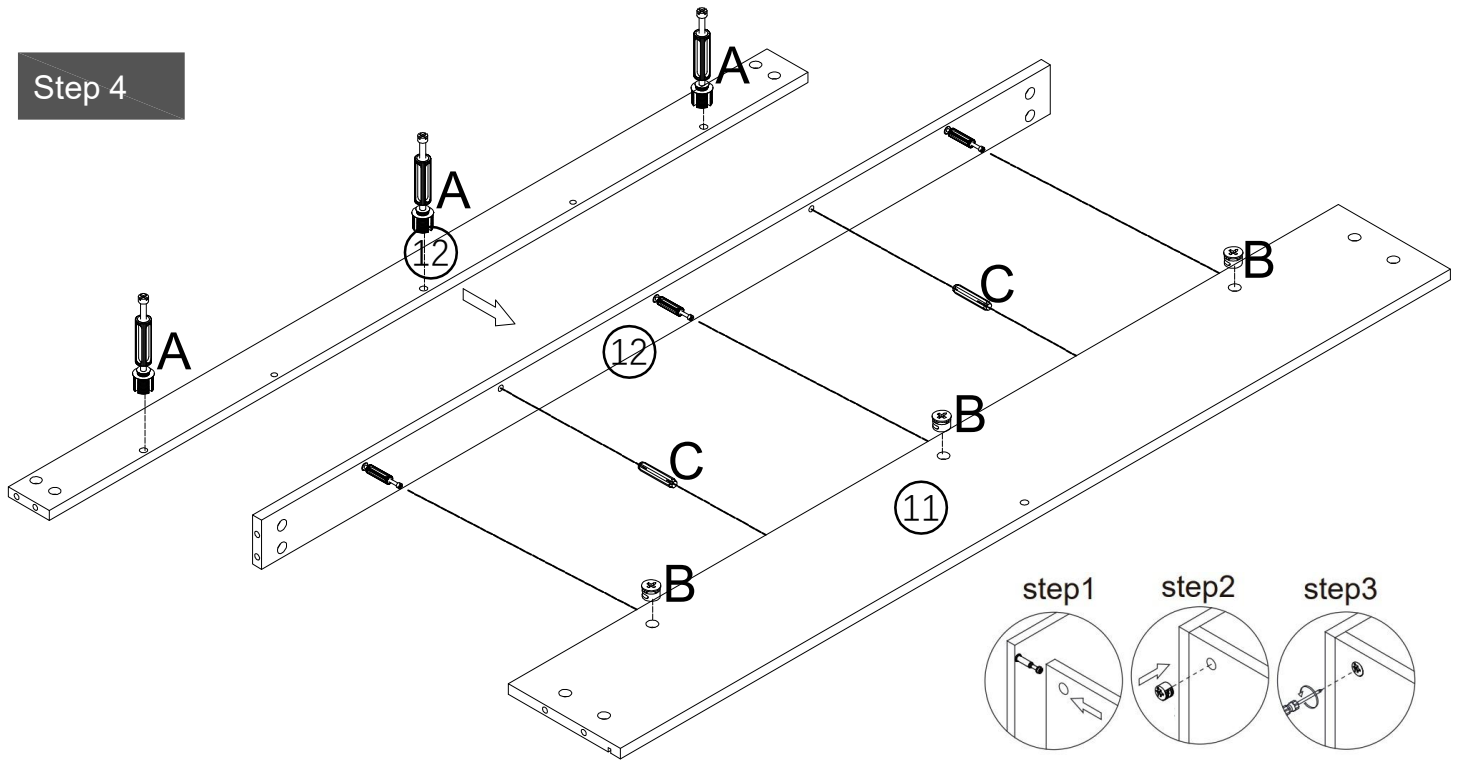

(A)




Cam Bolt x 3

(B)




Cam lock x 3

(C)



Dowel x 2

Step 5

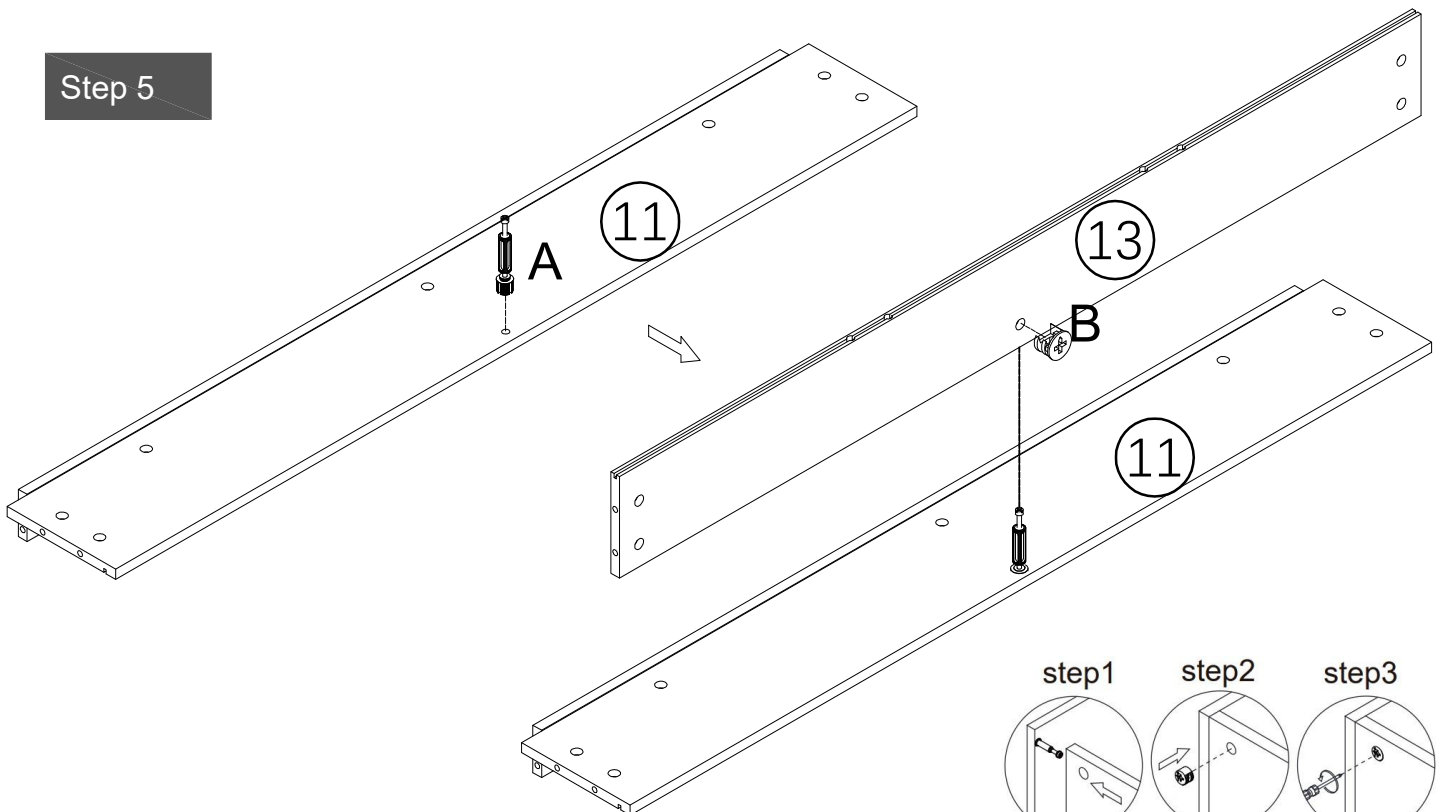

(A)



Cam Bolt x 1


(B)



Cam lock x 1

Assembly Instructions

Step 6

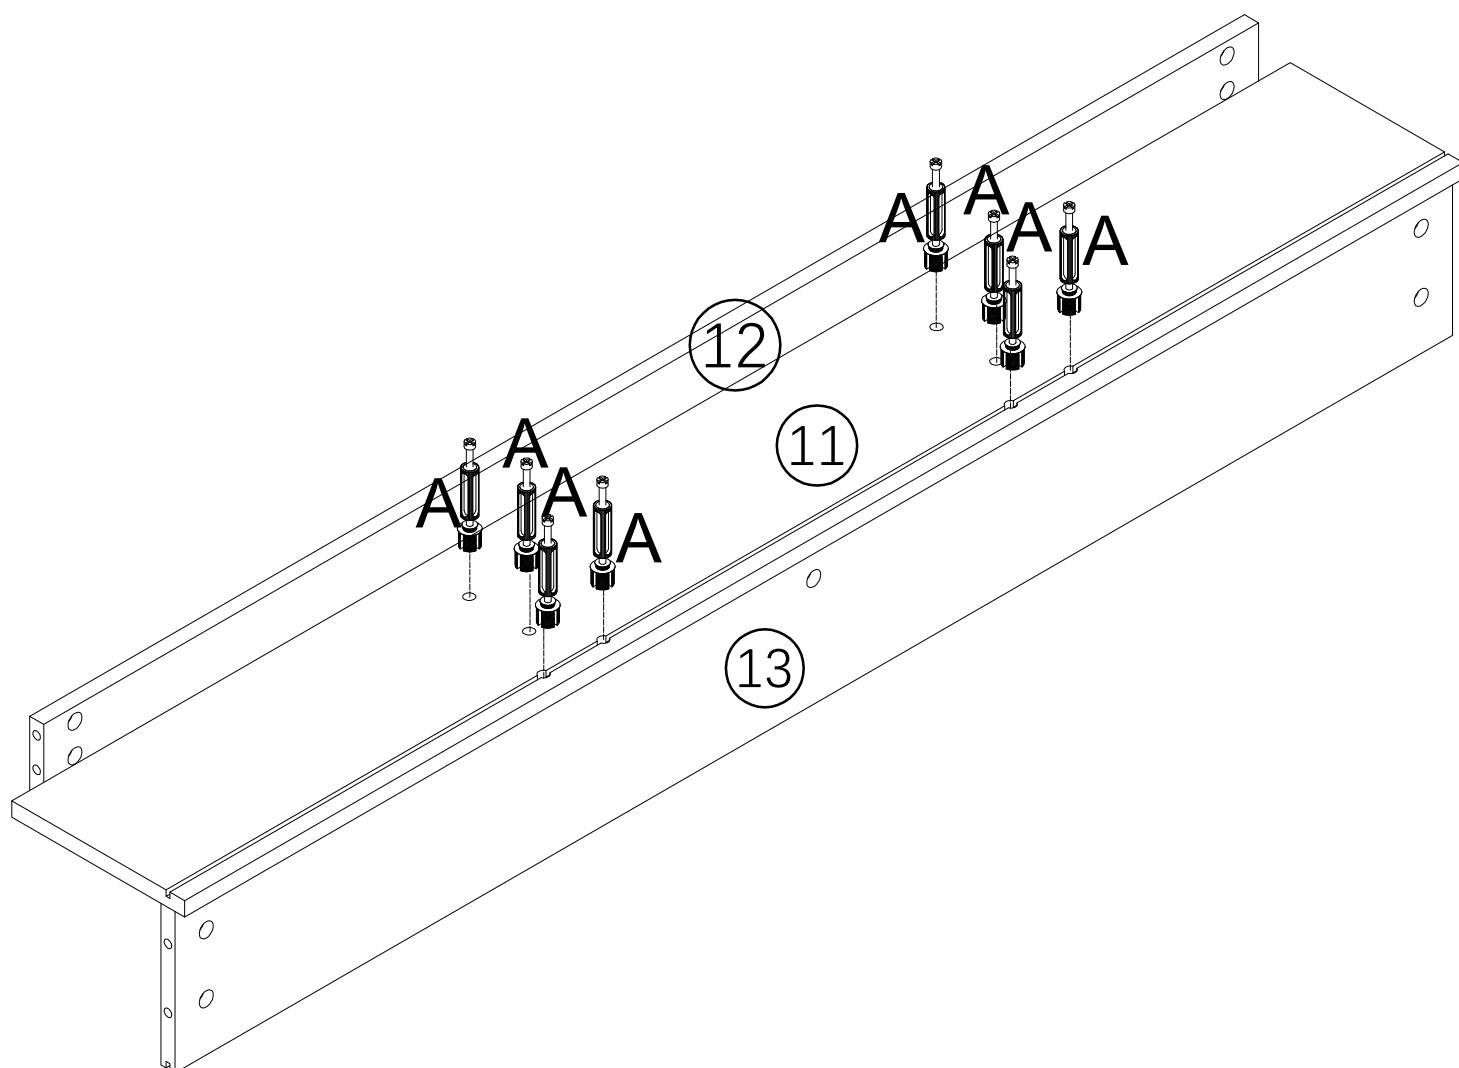



(A)



Cam Bolt x 8

Assembly Instructions

Step 7

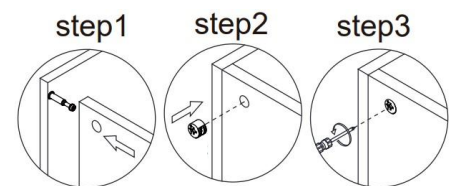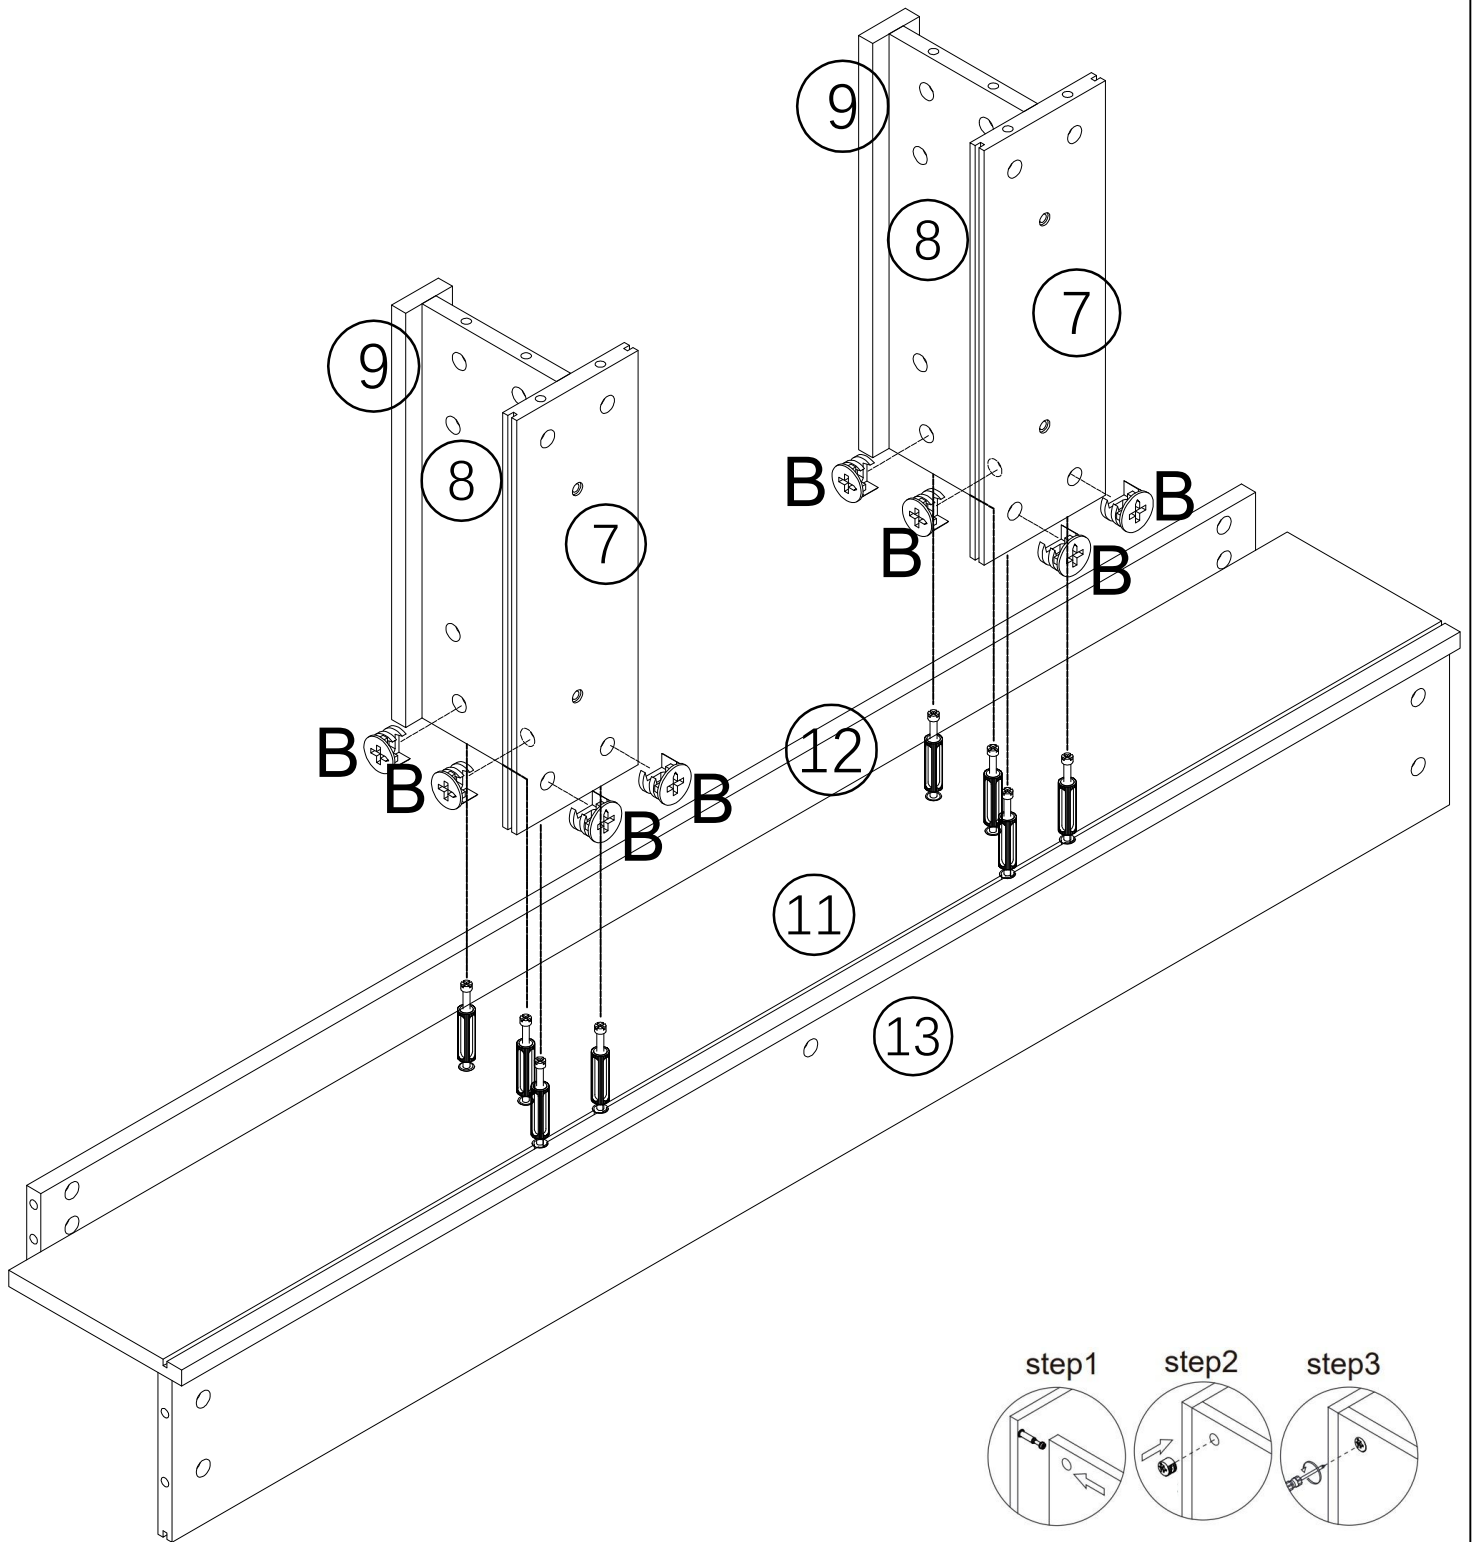


(B)




Cam lock x 8

Assembly Instructions

Step 8

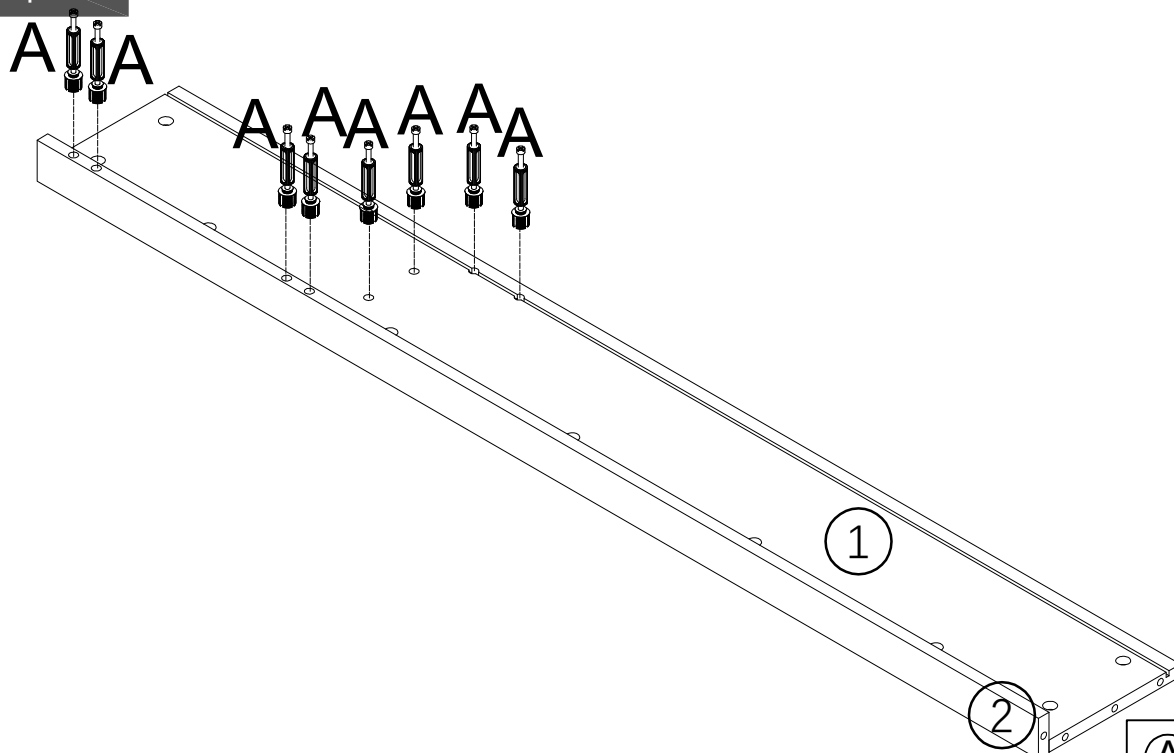


A




Cam Bolt x 8

Step 9

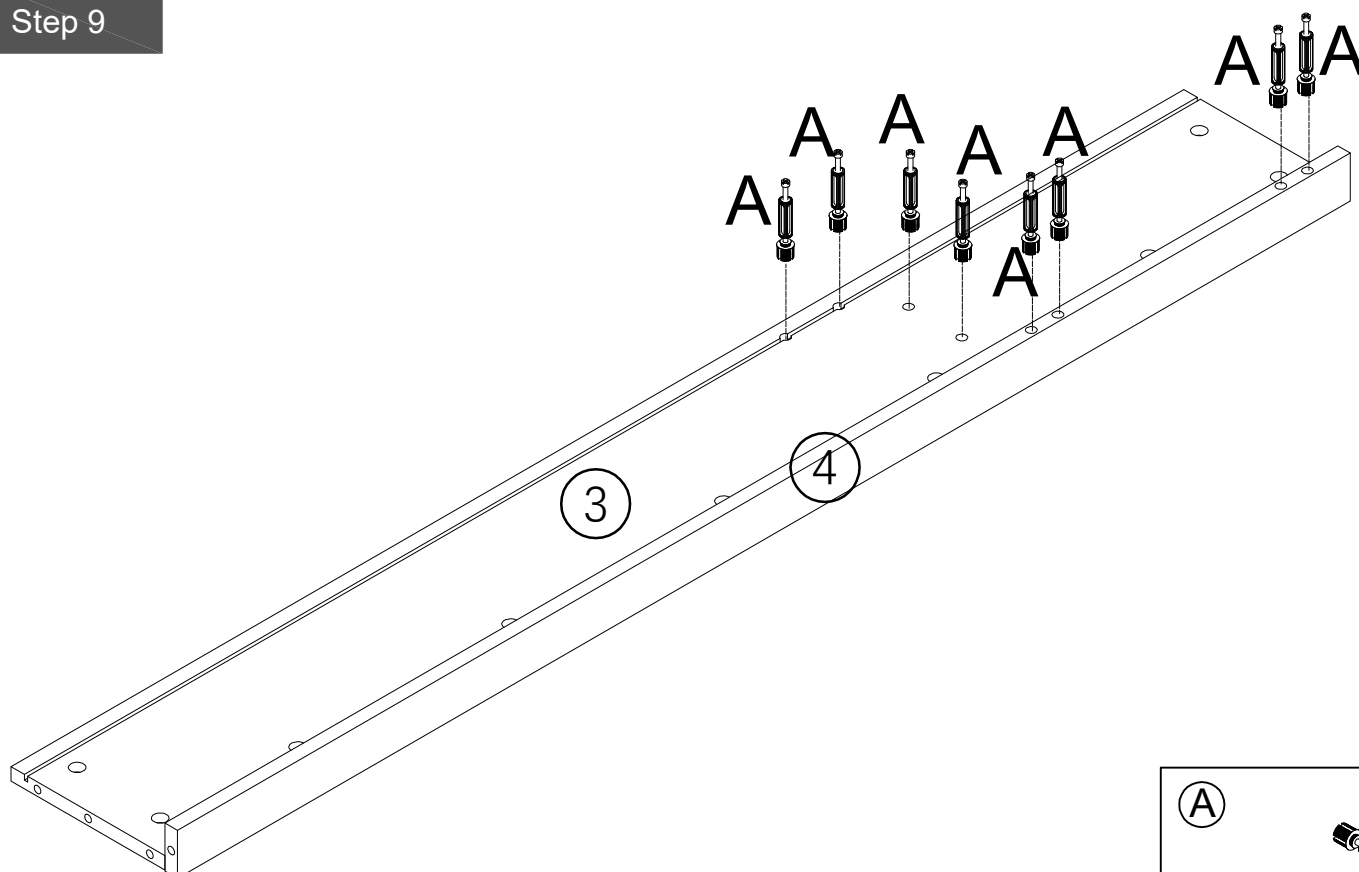



A




Cam Bolt x 8

Assembly Instructions

Step 10

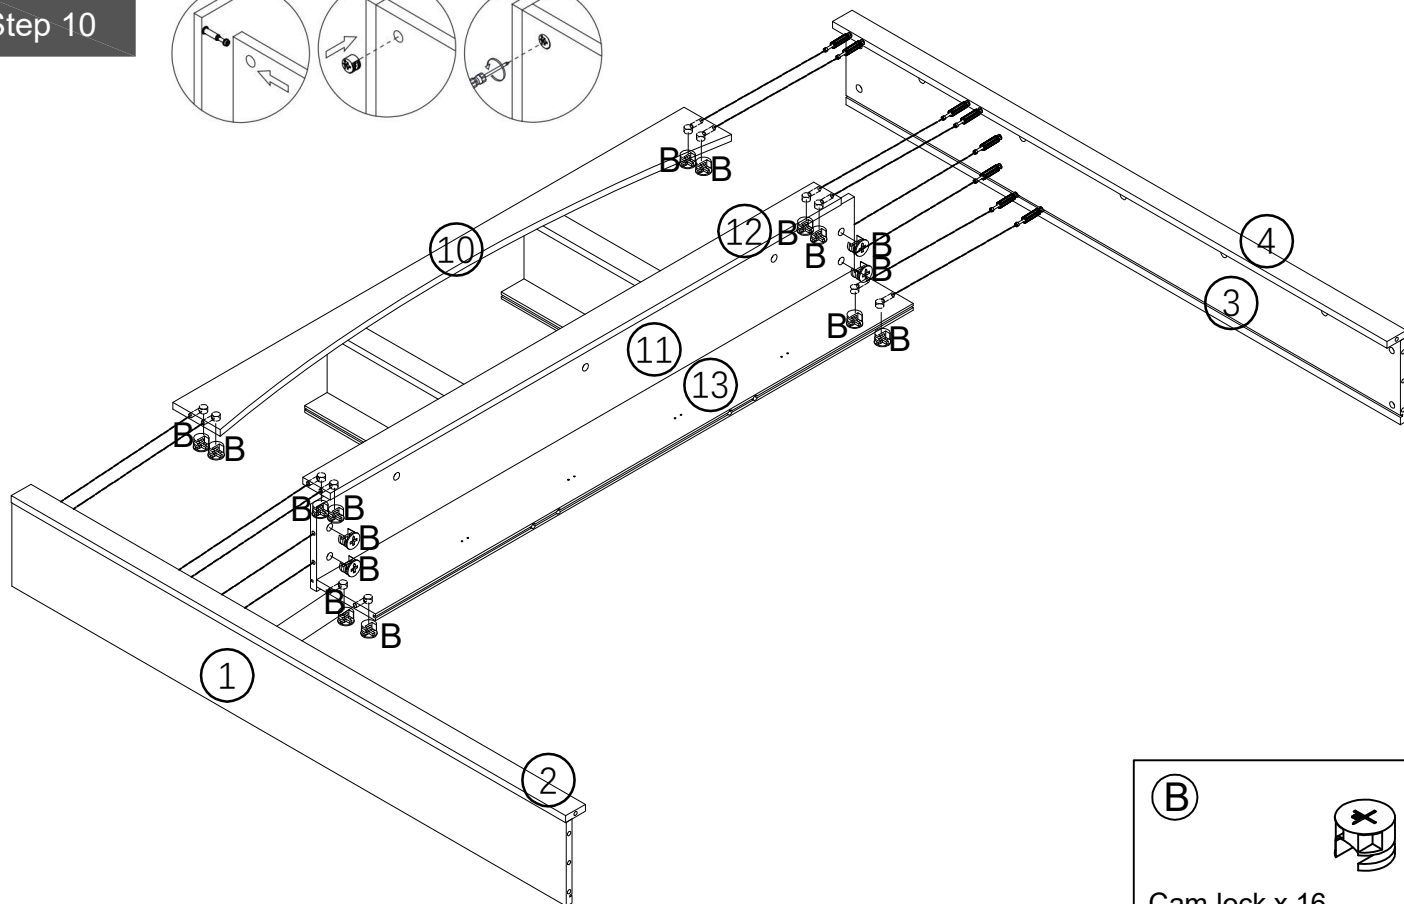
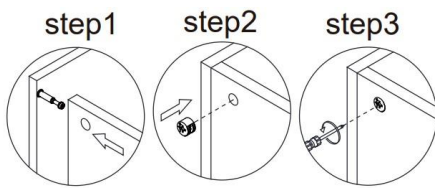


Step 11

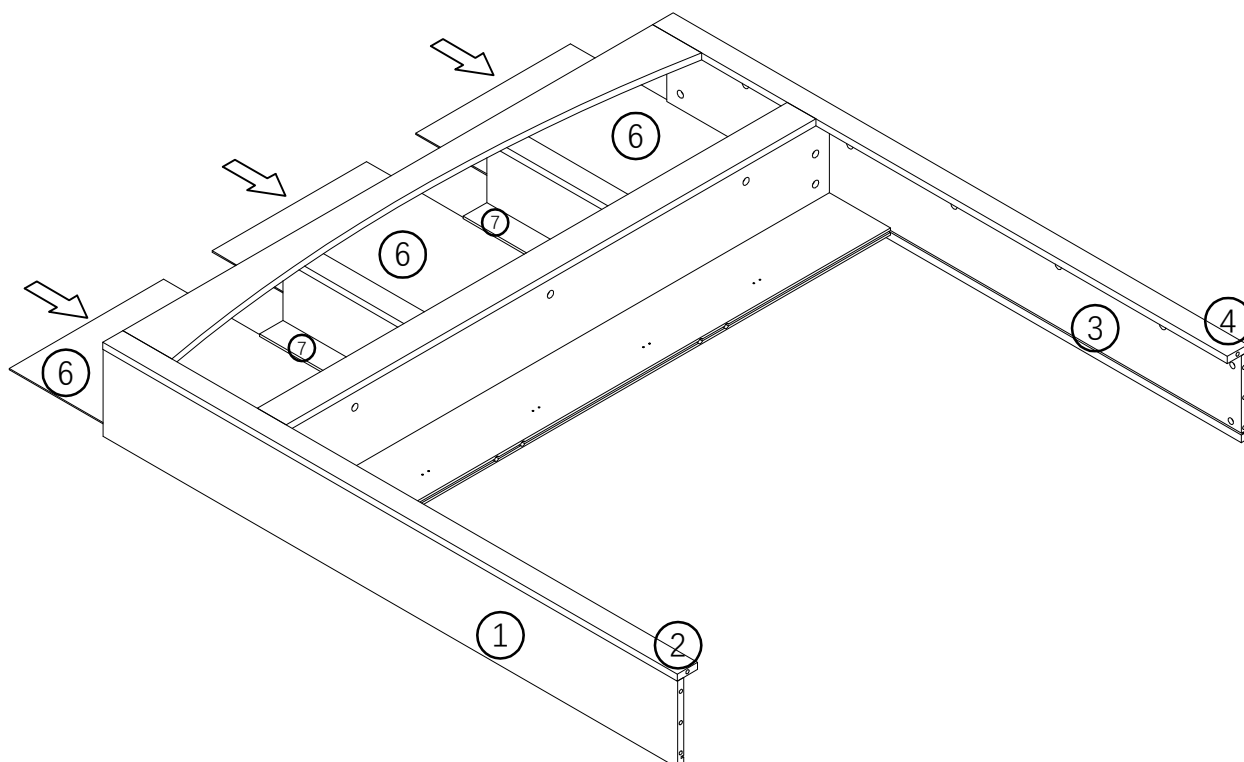


Assembly Instructions

Step 12

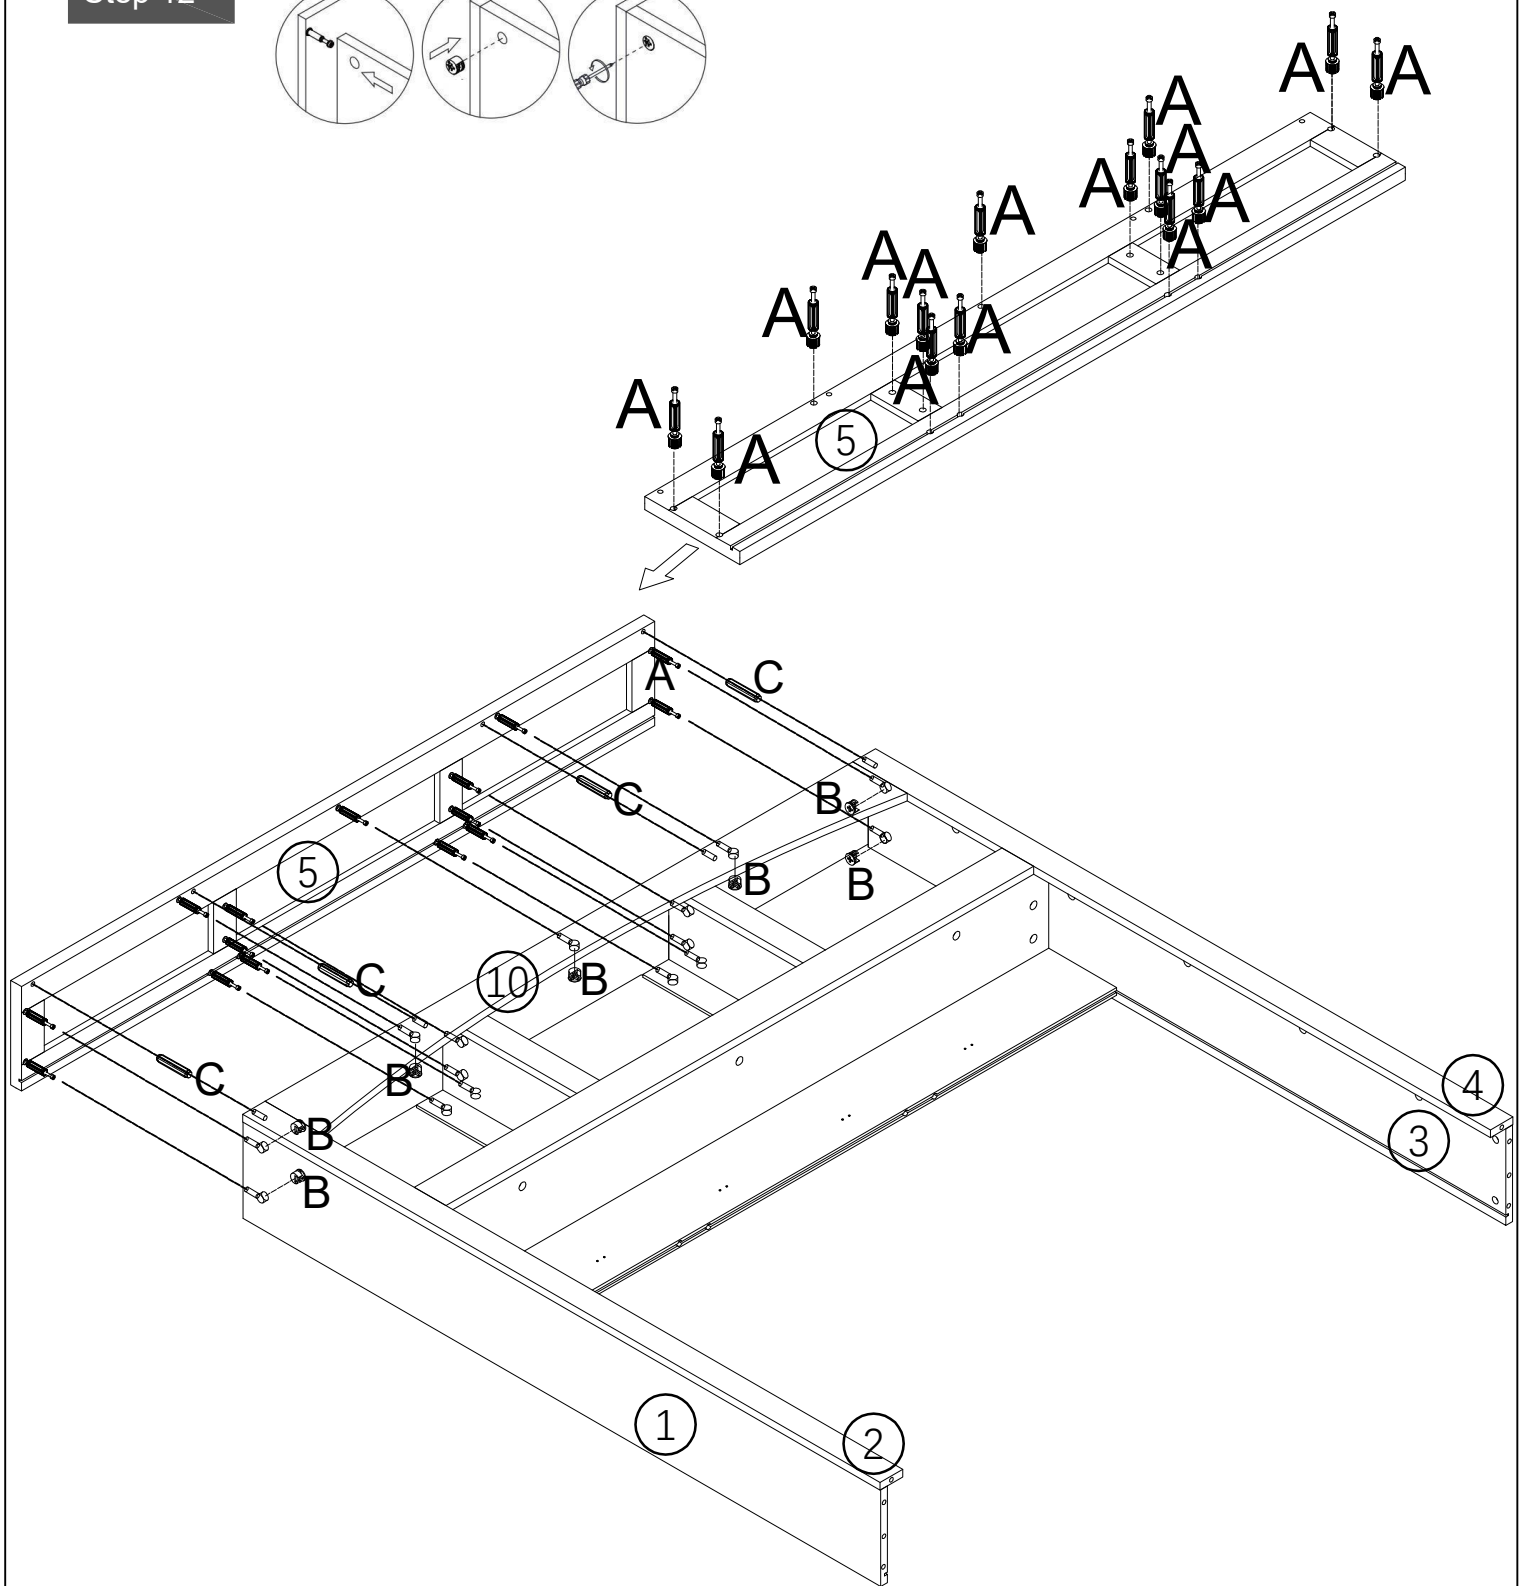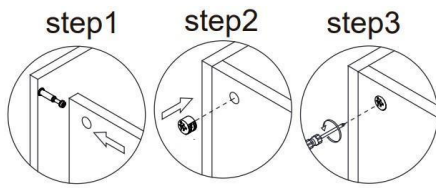

(A)




Cam Bolt x 15

(B)



Cam lock x 7

(C)



Dowel x 4



Assembly Instructions

Step 13

step1

step2

step3

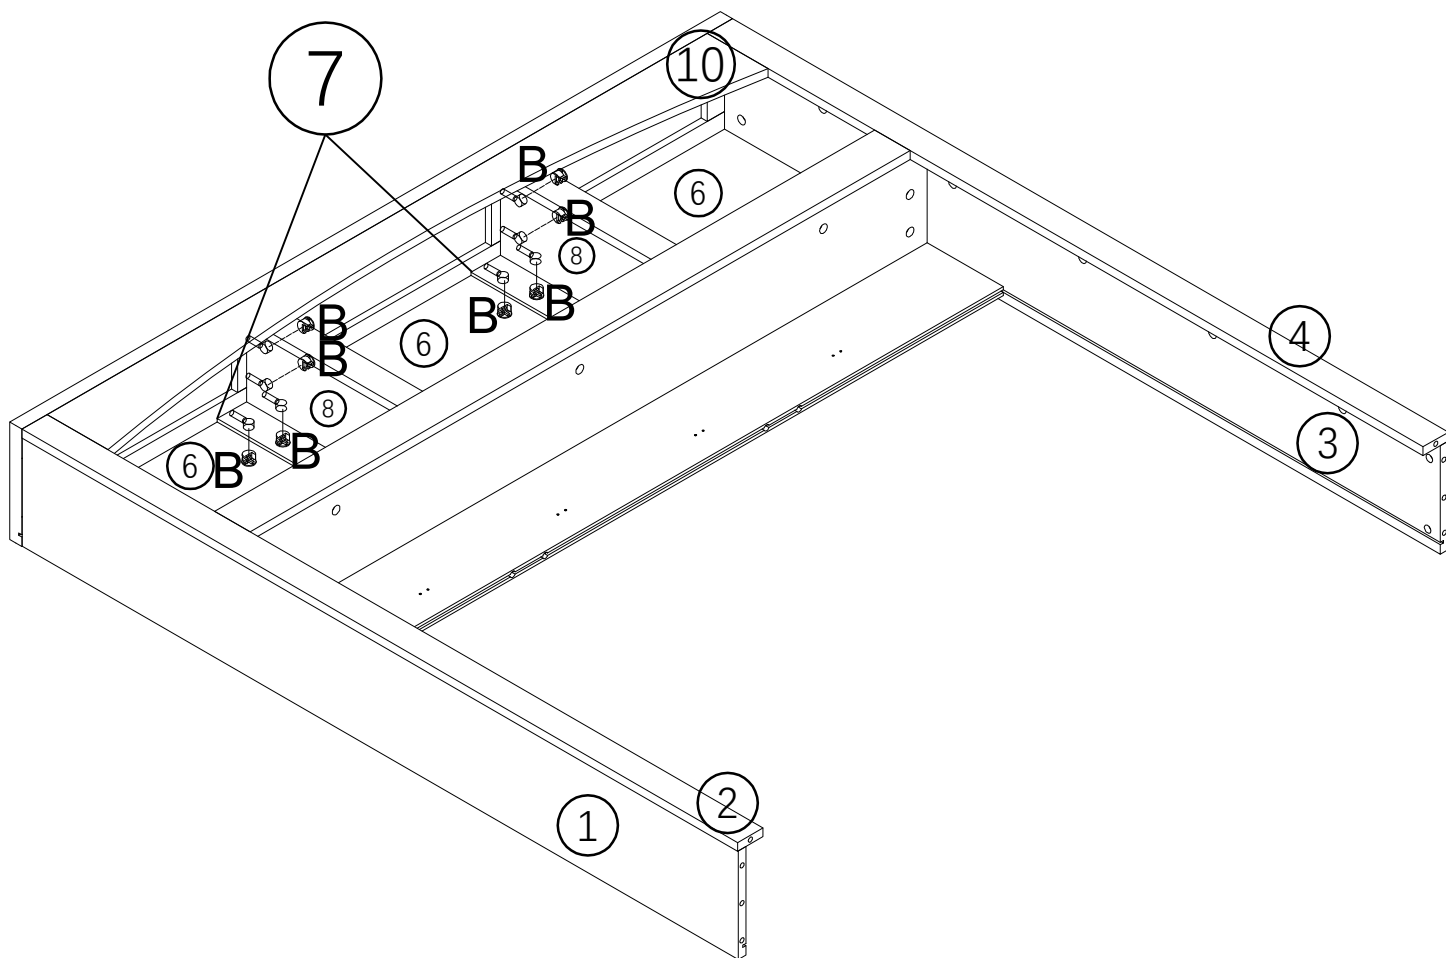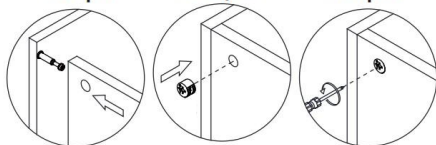


(B)



Cam lock x 8

Assembly Instructions

Step 14

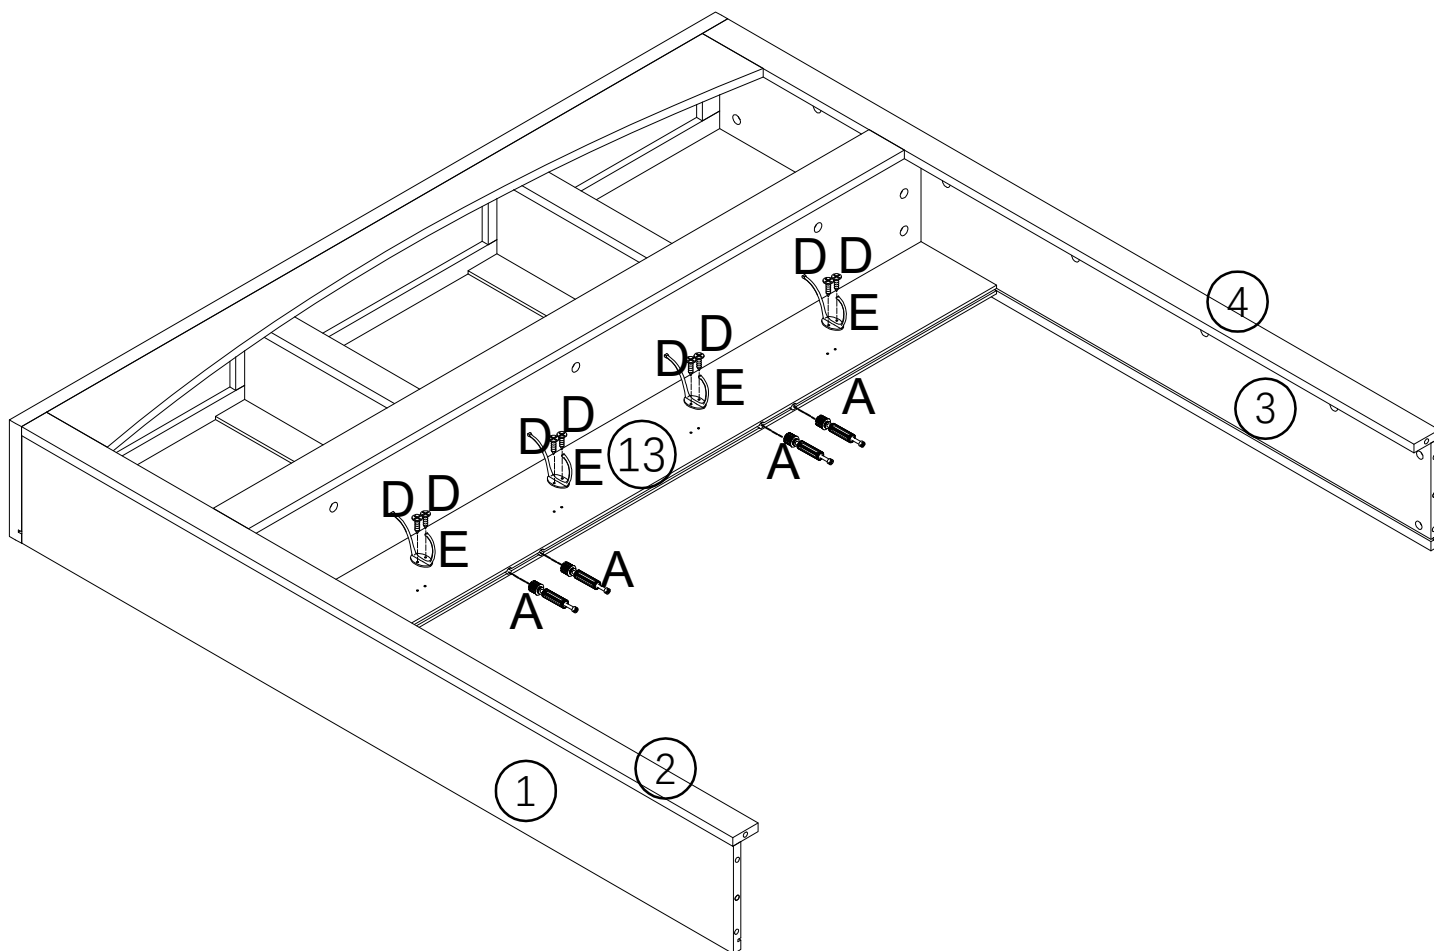

(A)



Cam Bolt x 4

(D)



3.5*14mm Screw x 8



(E)



Clothes hook x 4

Assembly Instructions

Step 15

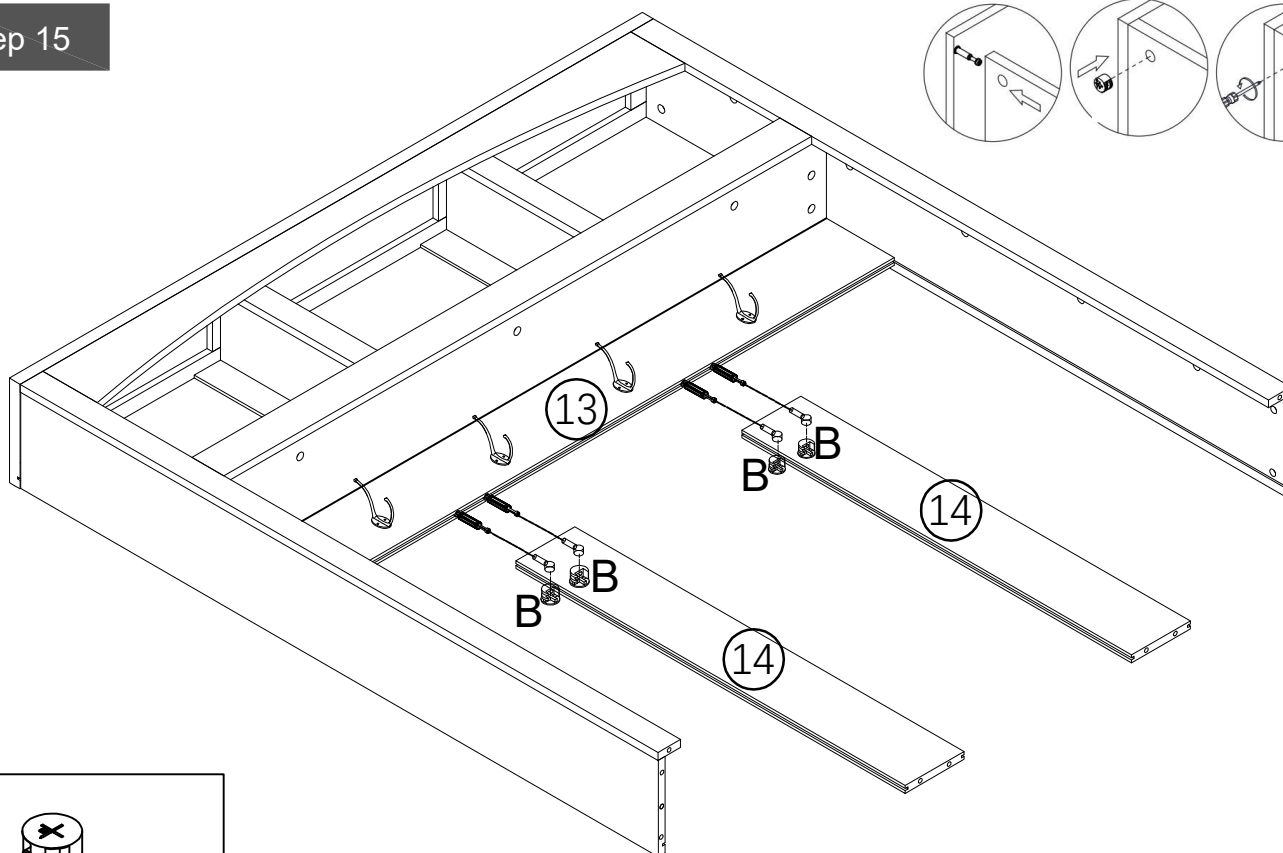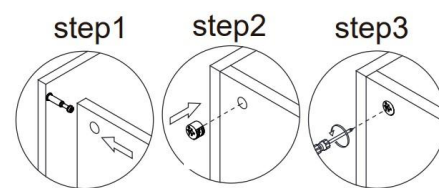


(B)





Cam lock x 4

Step 16

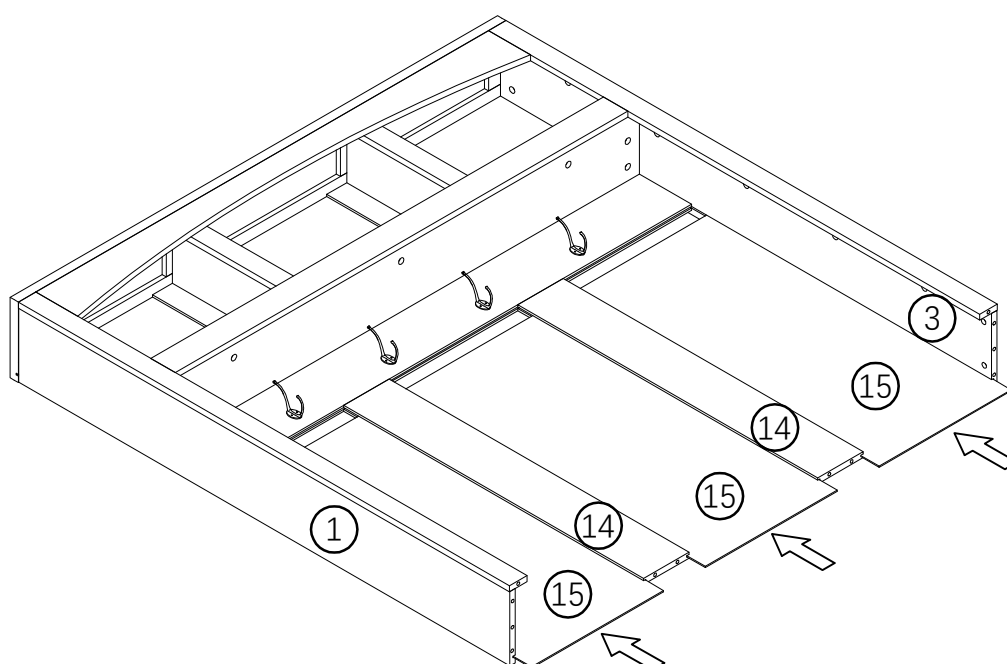

Assembly Instructions

Step 17

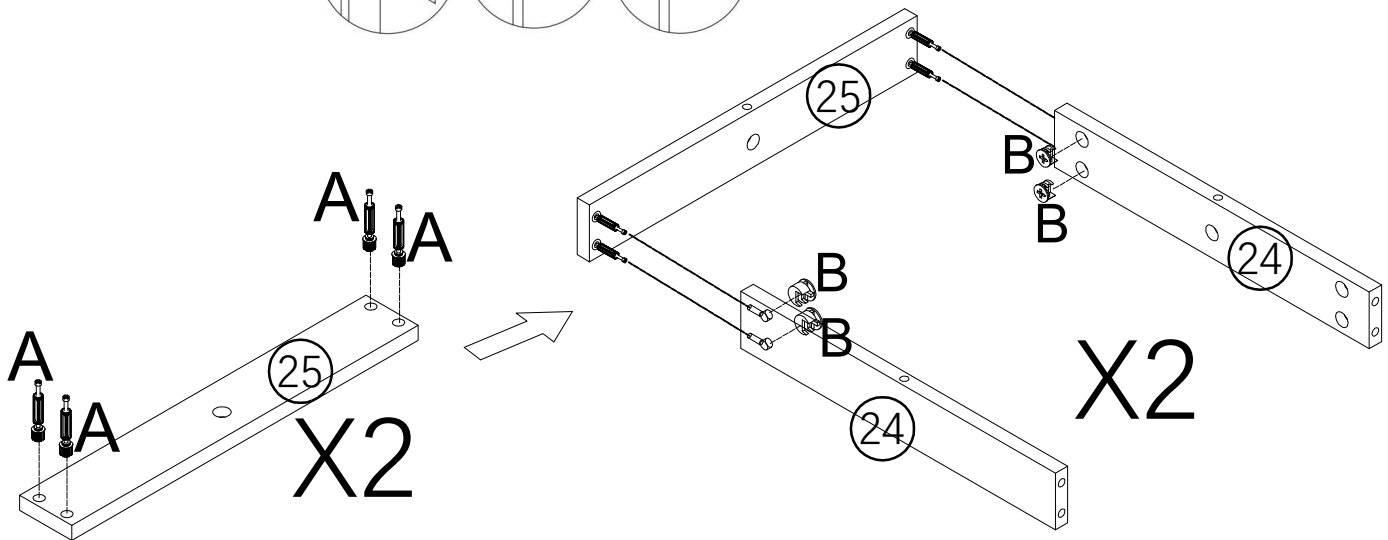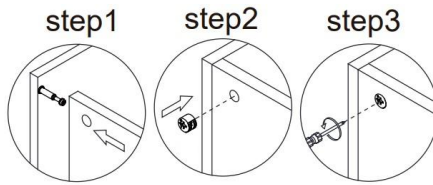

(A)






Cam Bolt x 8

(B)



Cam lock x 8

Step 18

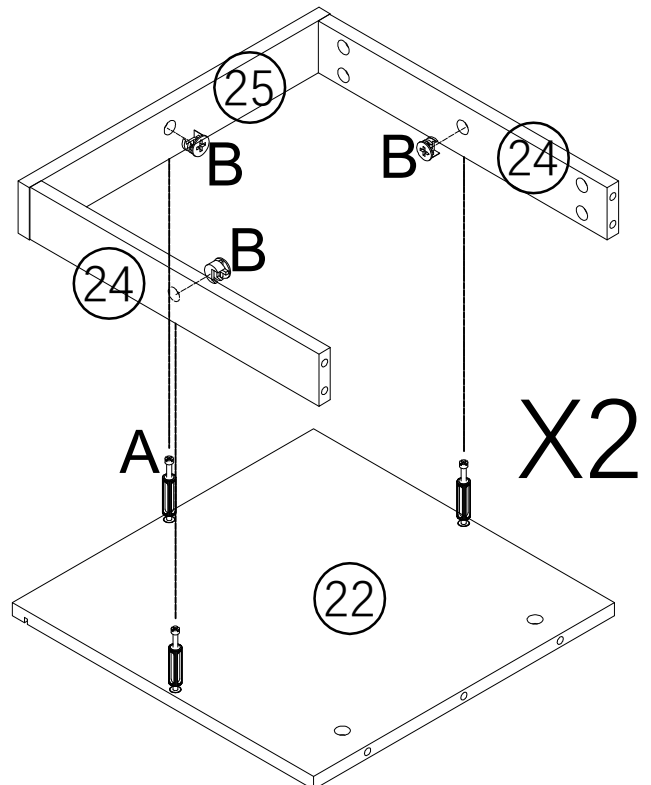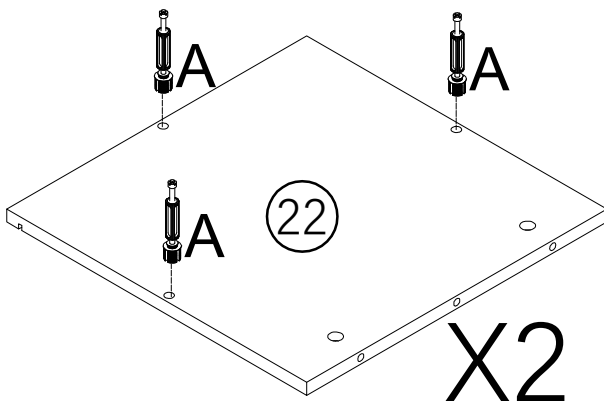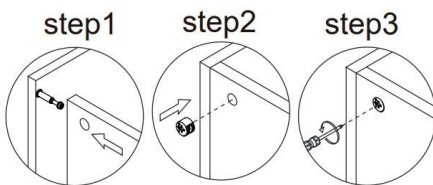

(A)



Cam Bolt x 6


(B)



Cam lock x 6

Assembly Instructions

Step 19

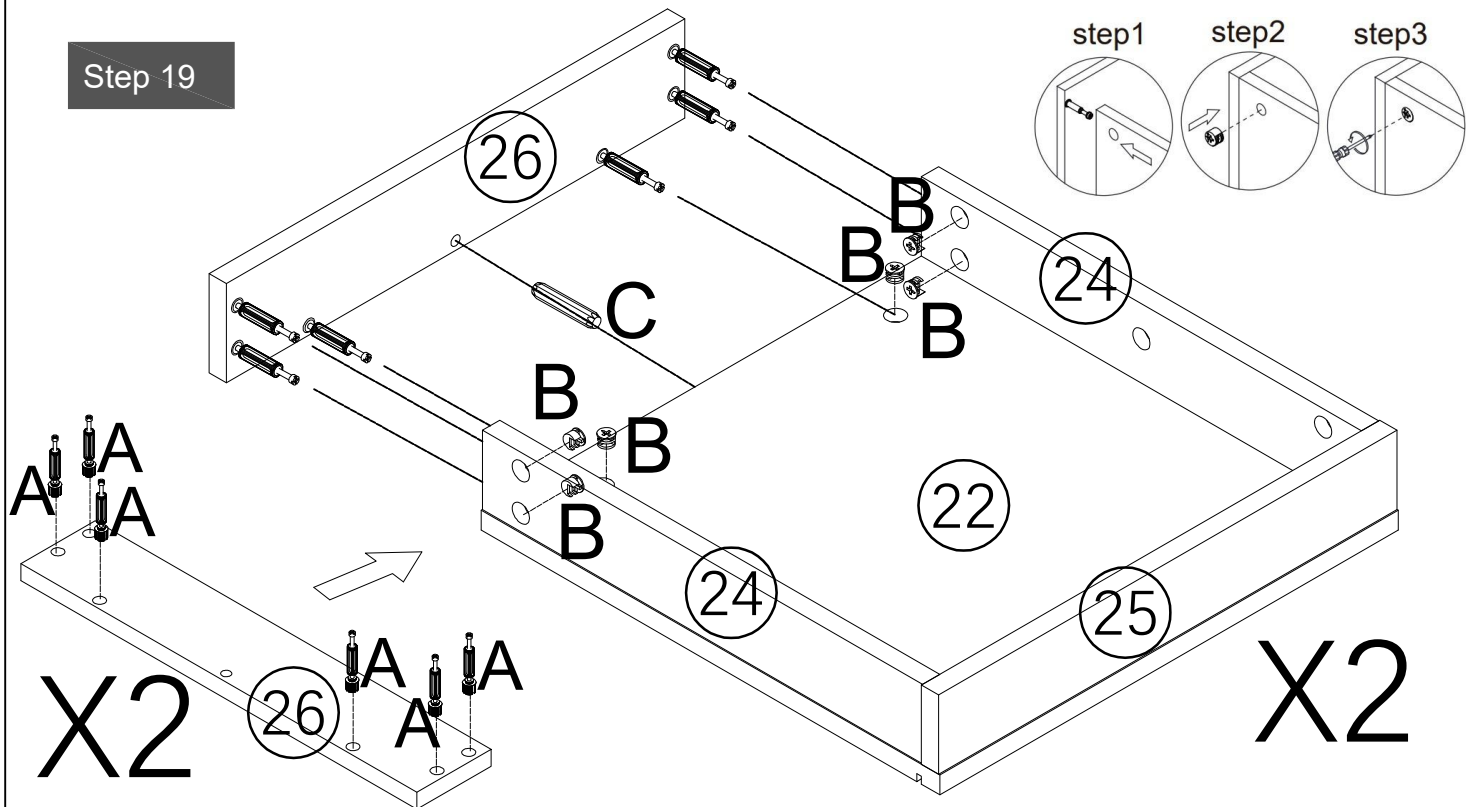

(A)




Cam Bolt x 12

(B)




Cam lock x 12

(C)



Dowel x 2

Step 20

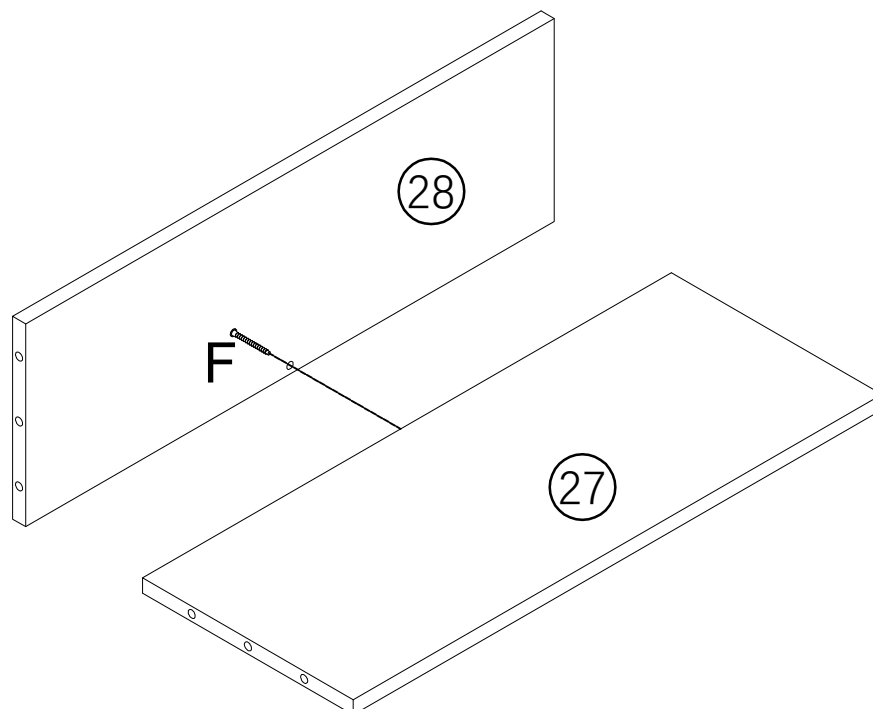


(F)



7*50mm Screw x 1

Assembly Instructions

Step 21

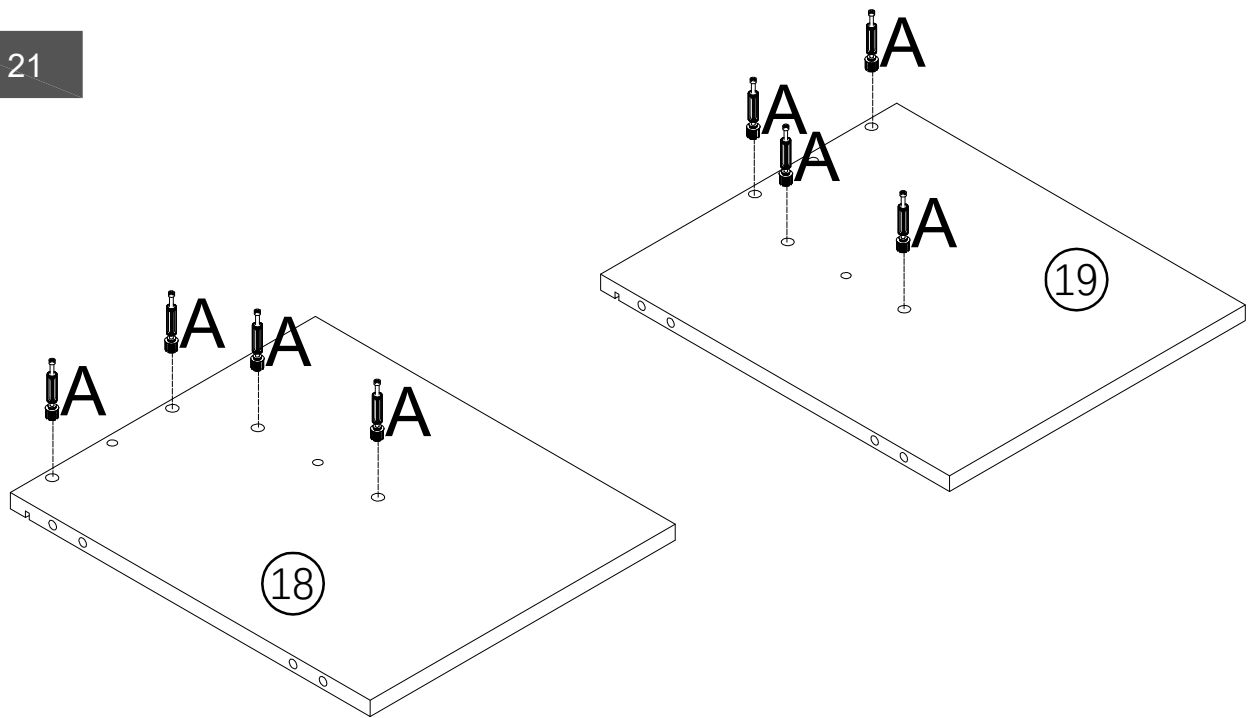


(A)



Cam Bolt x 8

Step 22

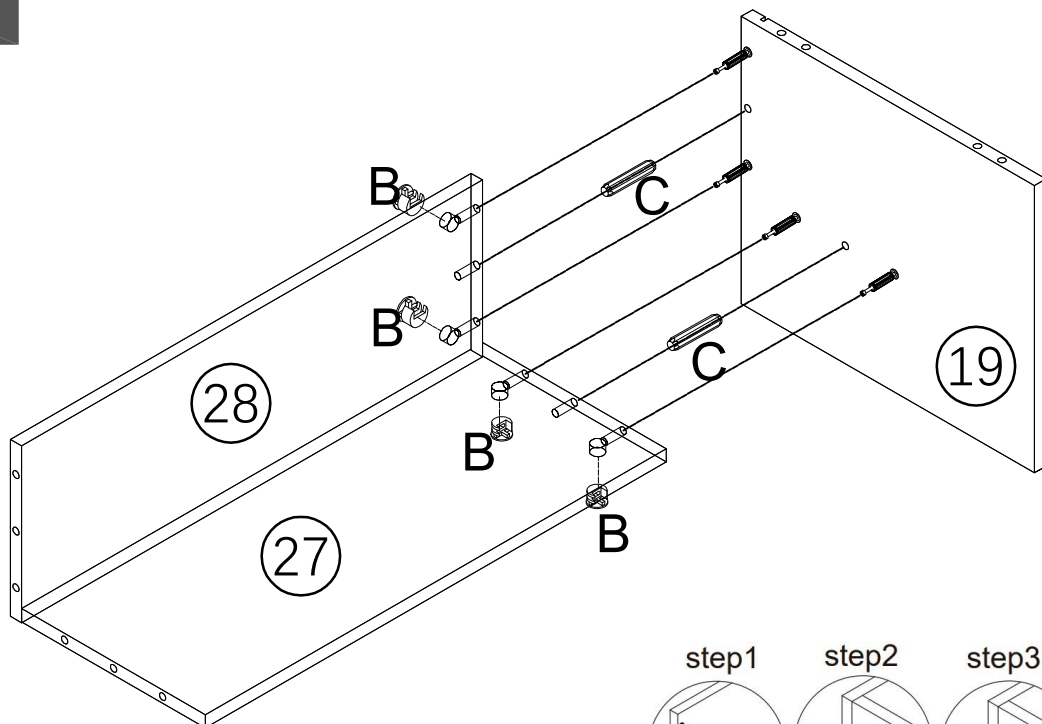


(B)




Cam lock x 4

(C)




Dowel x 2

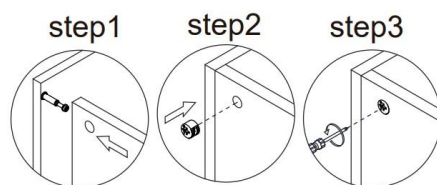

Assembly Instructions

Step 23

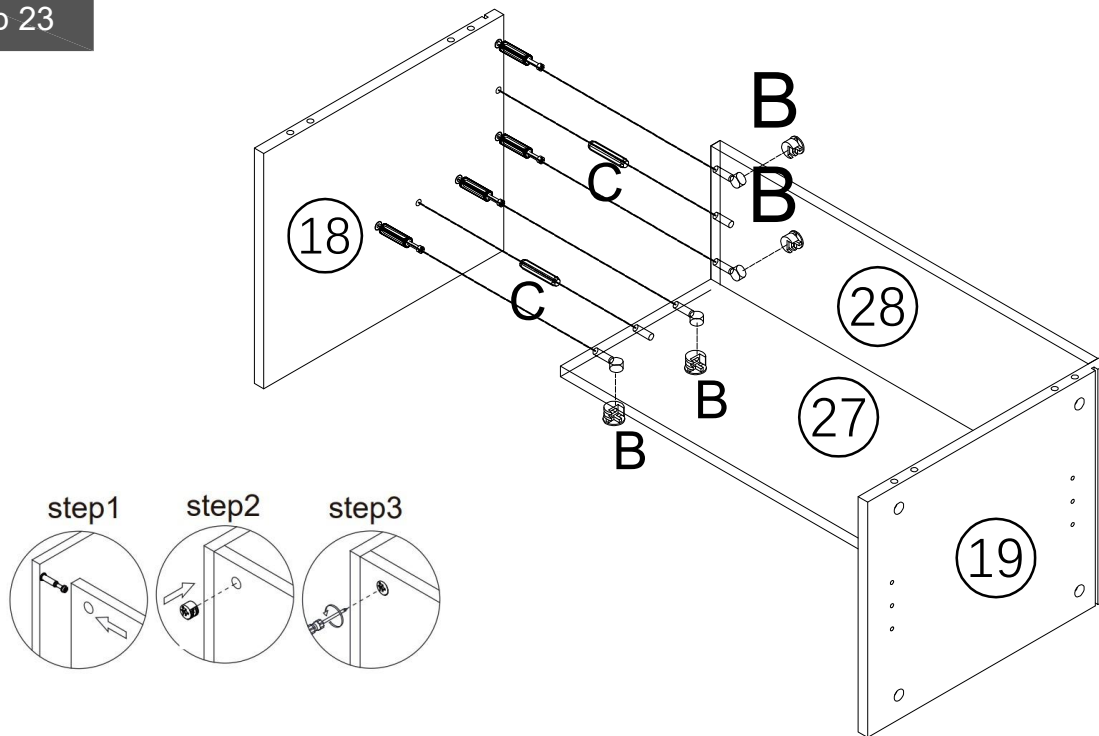


(B)




Cam lock x 4

(C)



Dowel x 2

Step 24

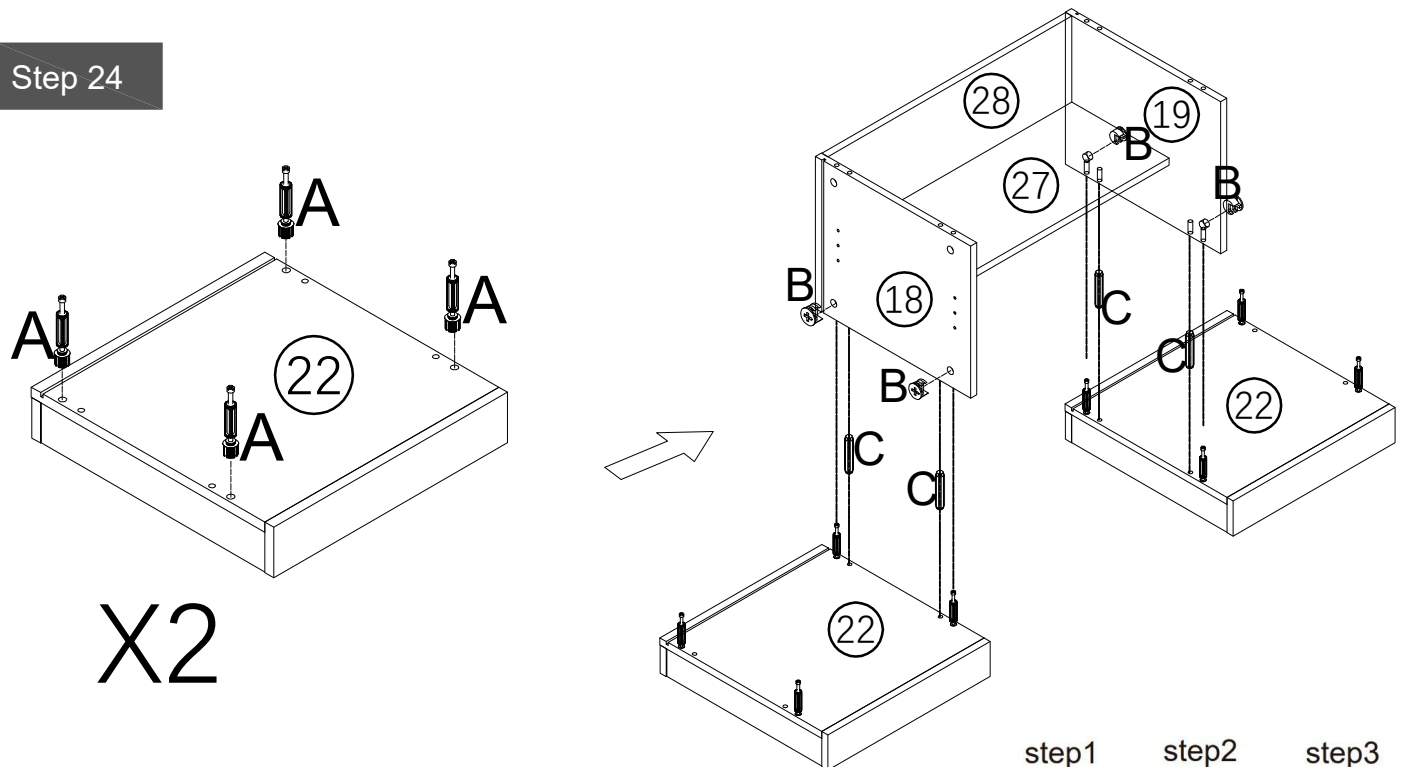

X2

(A)




Cam Bolt x 8

(B)




Cam lock x 4

(C)





Dowel x 4

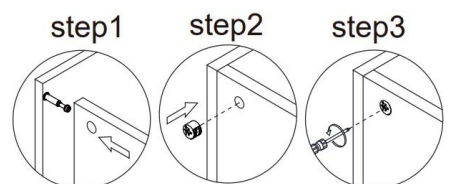

Assembly Instructions

Step 25

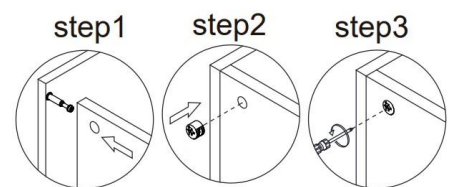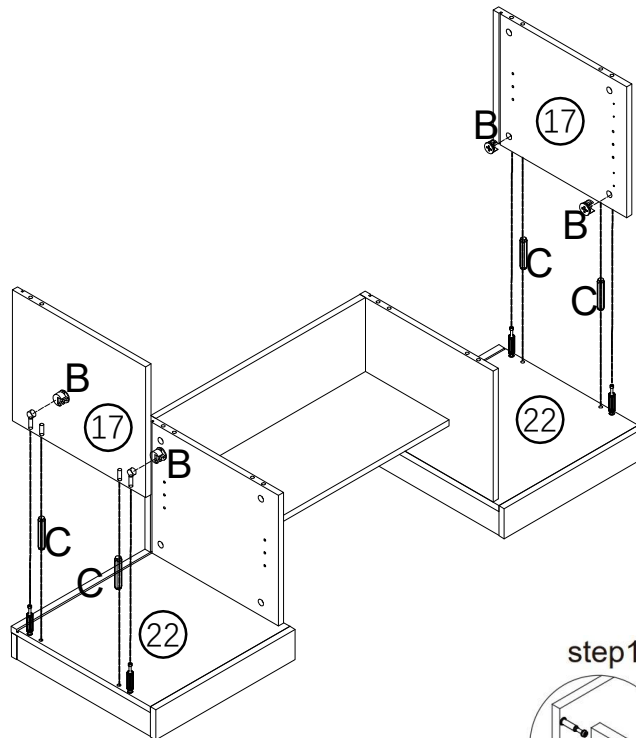


(B)




Cam lock x 4

(C)




Dowel x 4

Step 26

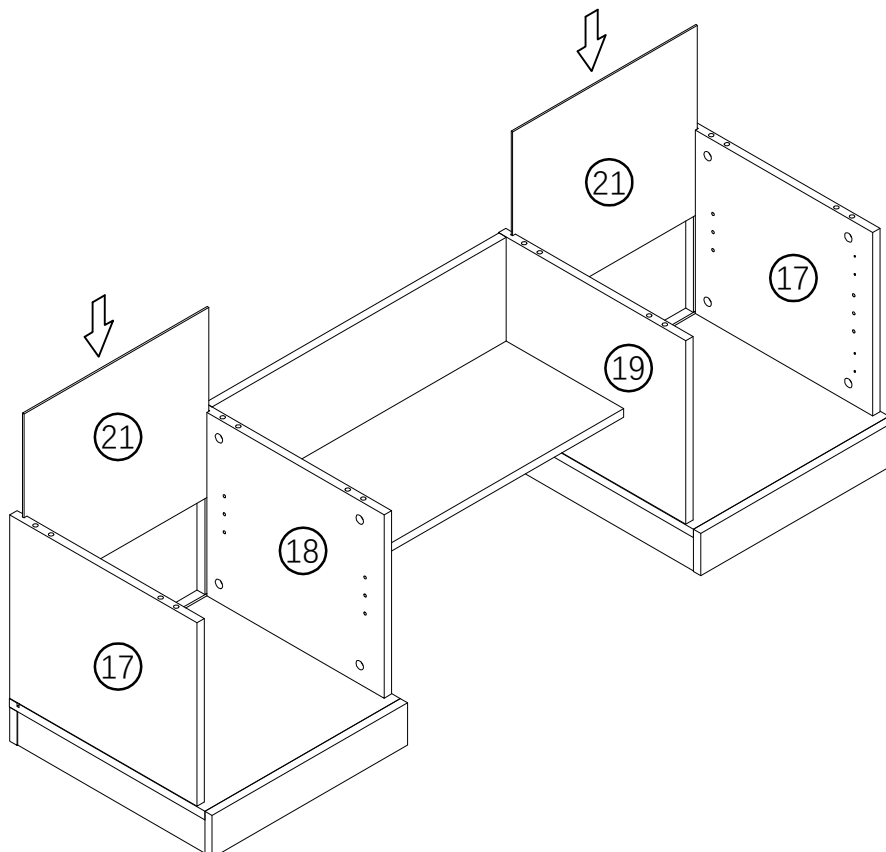

Assembly Instructions

Step 27

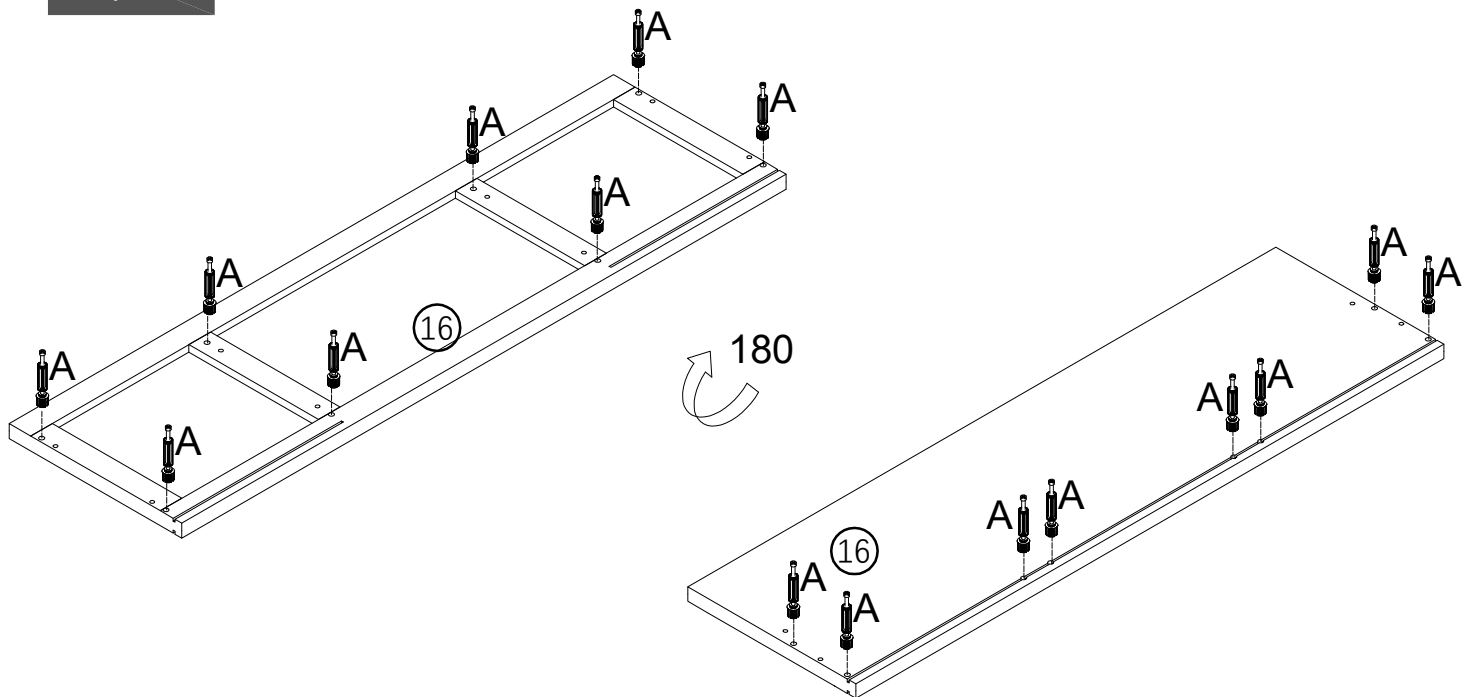


(A)



Cam Bolt x 16

Step 28

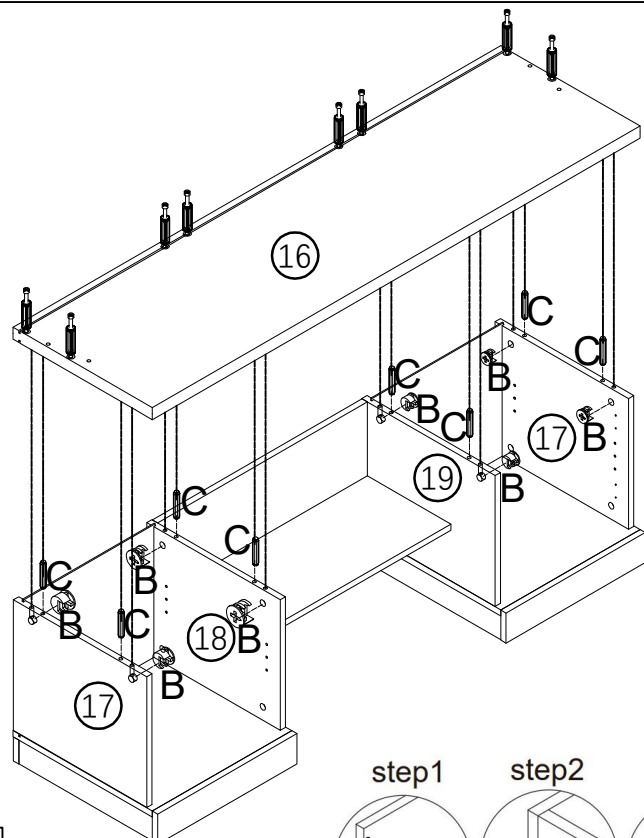


(B)




Cam lock x 8

(C)




Dowel x 8

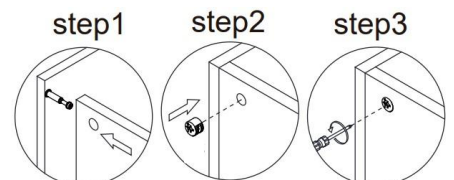

Assembly Instructions

Step 29

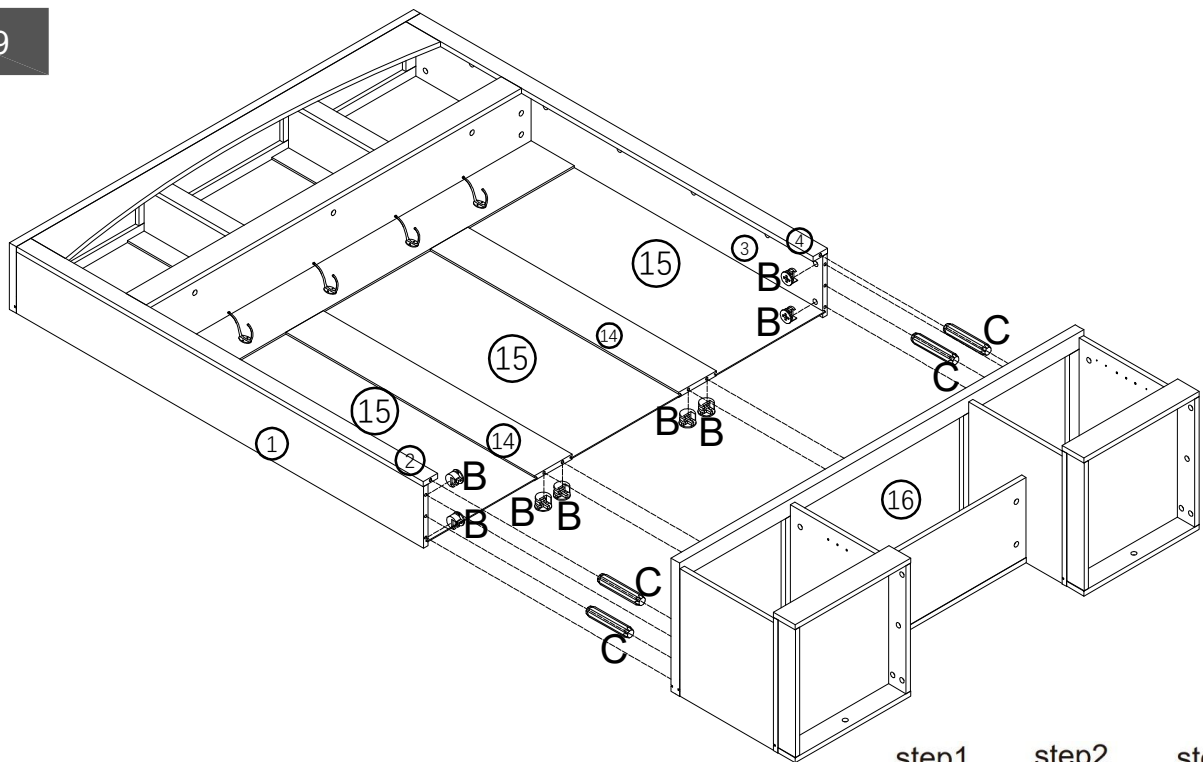


(B)




Cam lock x 8

(C)




Dowel x 4


step1

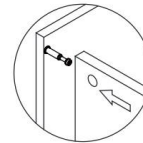


step2

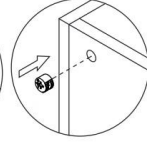

step3

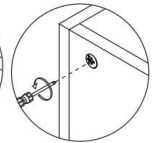

Step 30

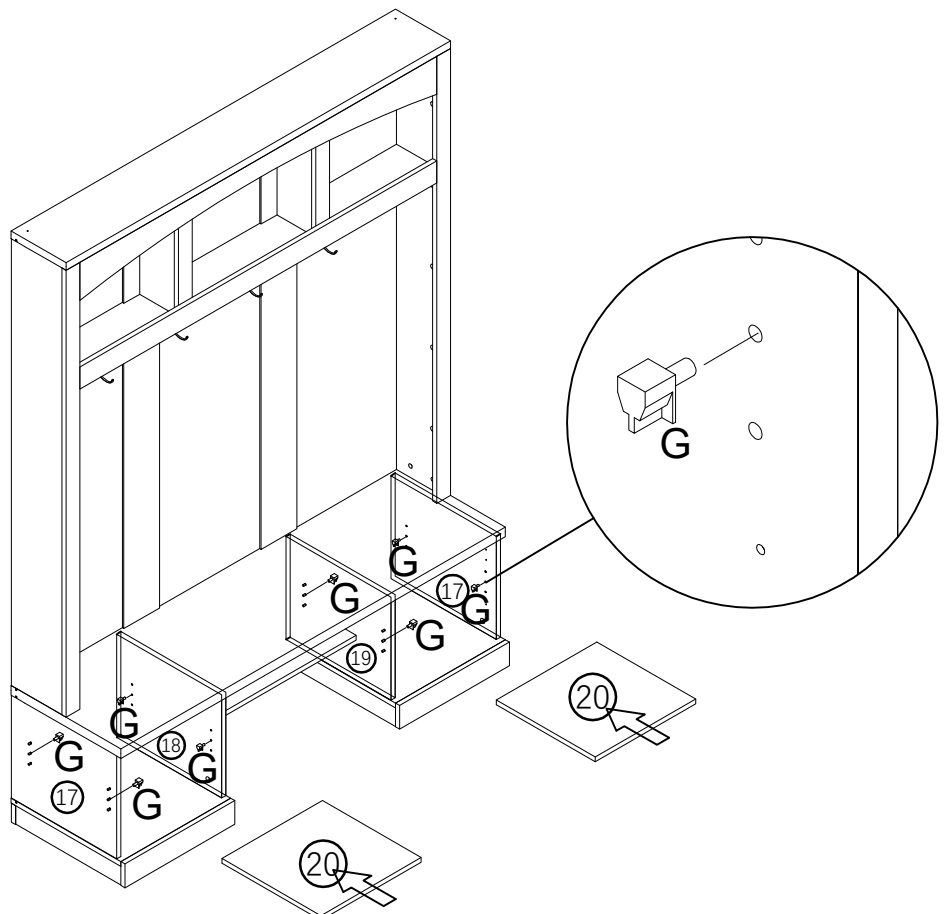


(G)



Movable partition bracket x 8

Assembly Instructions

Step 31

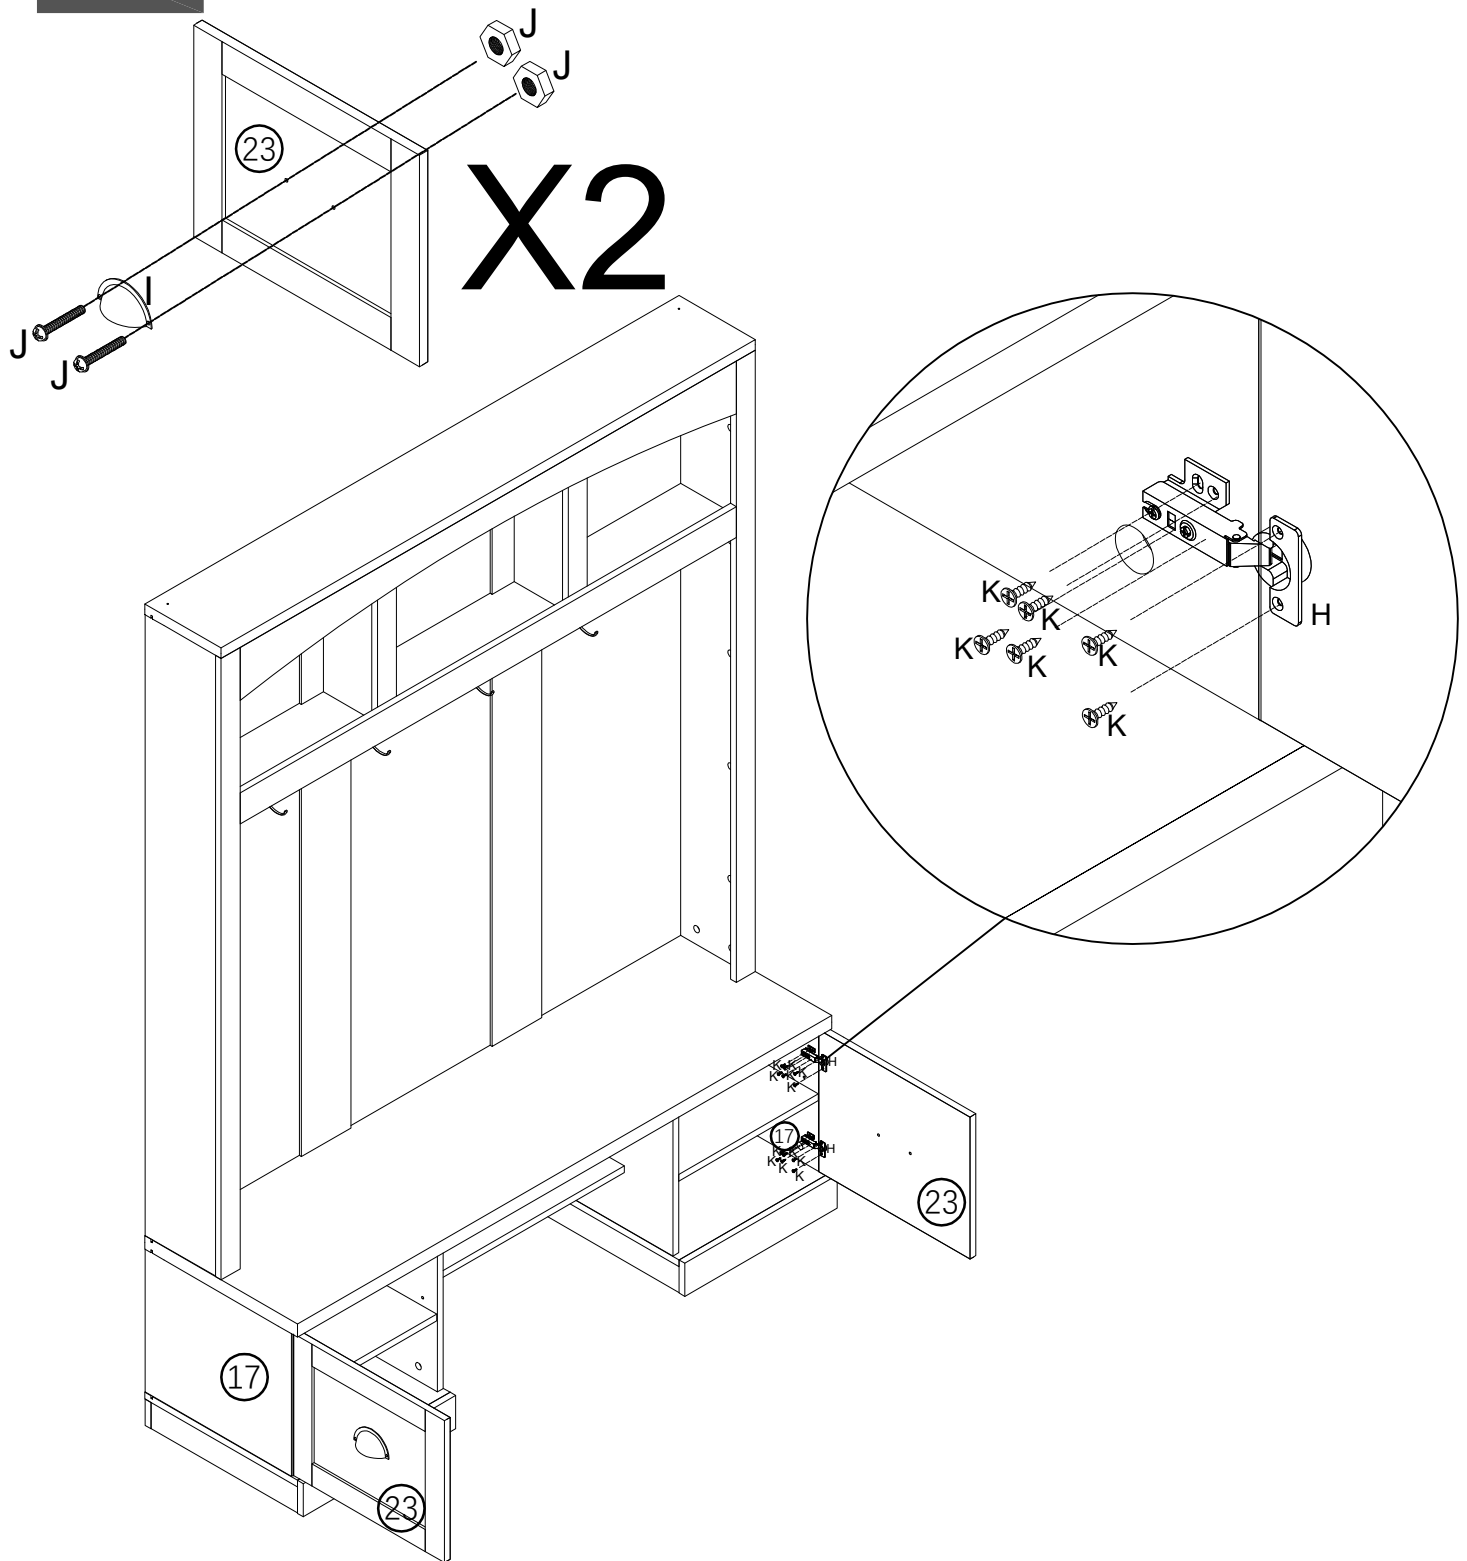

(H)



Hinge x 4

(I)



Handle x 2

(J)



Screw+Nut x 4


(K)



3.5*14mm Screw x 24

Assembly Instructions

Step 32

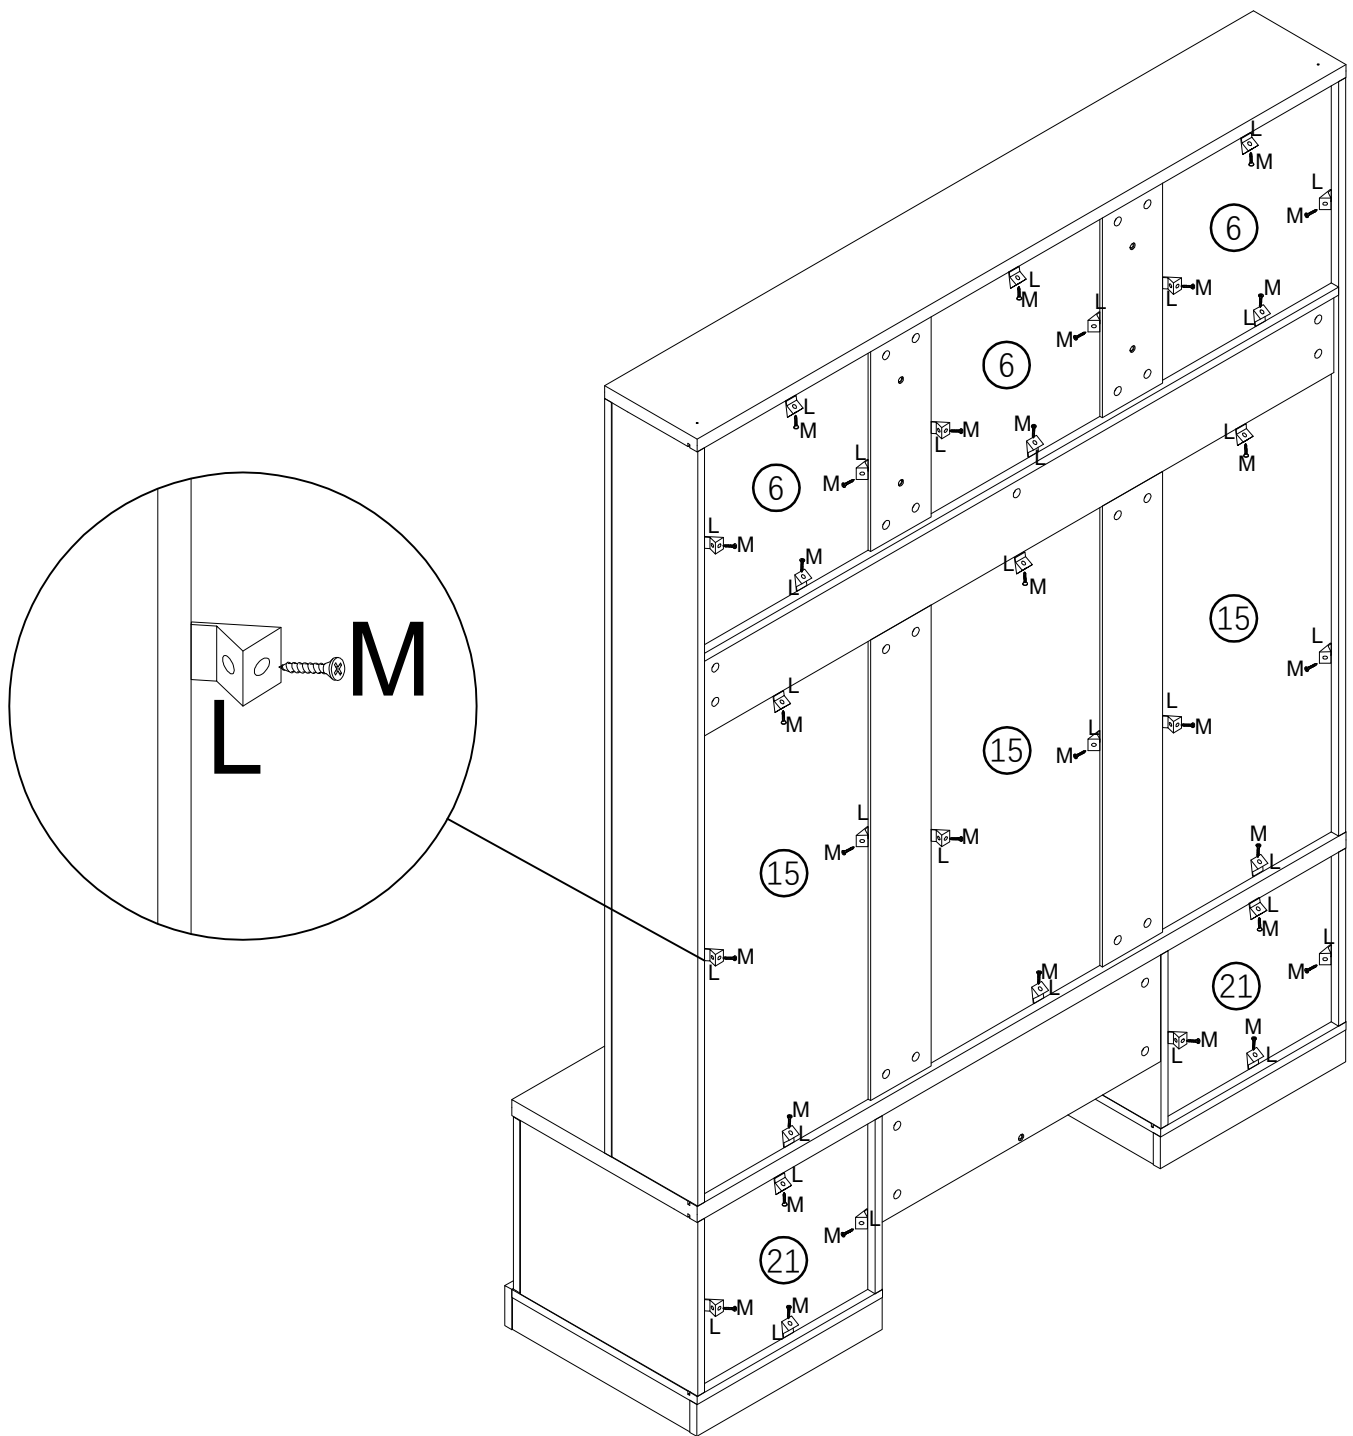

(L)



Plastic buckle x 32


(M)





3*12mm Screw x 32

Assembly Instructions

Step 33

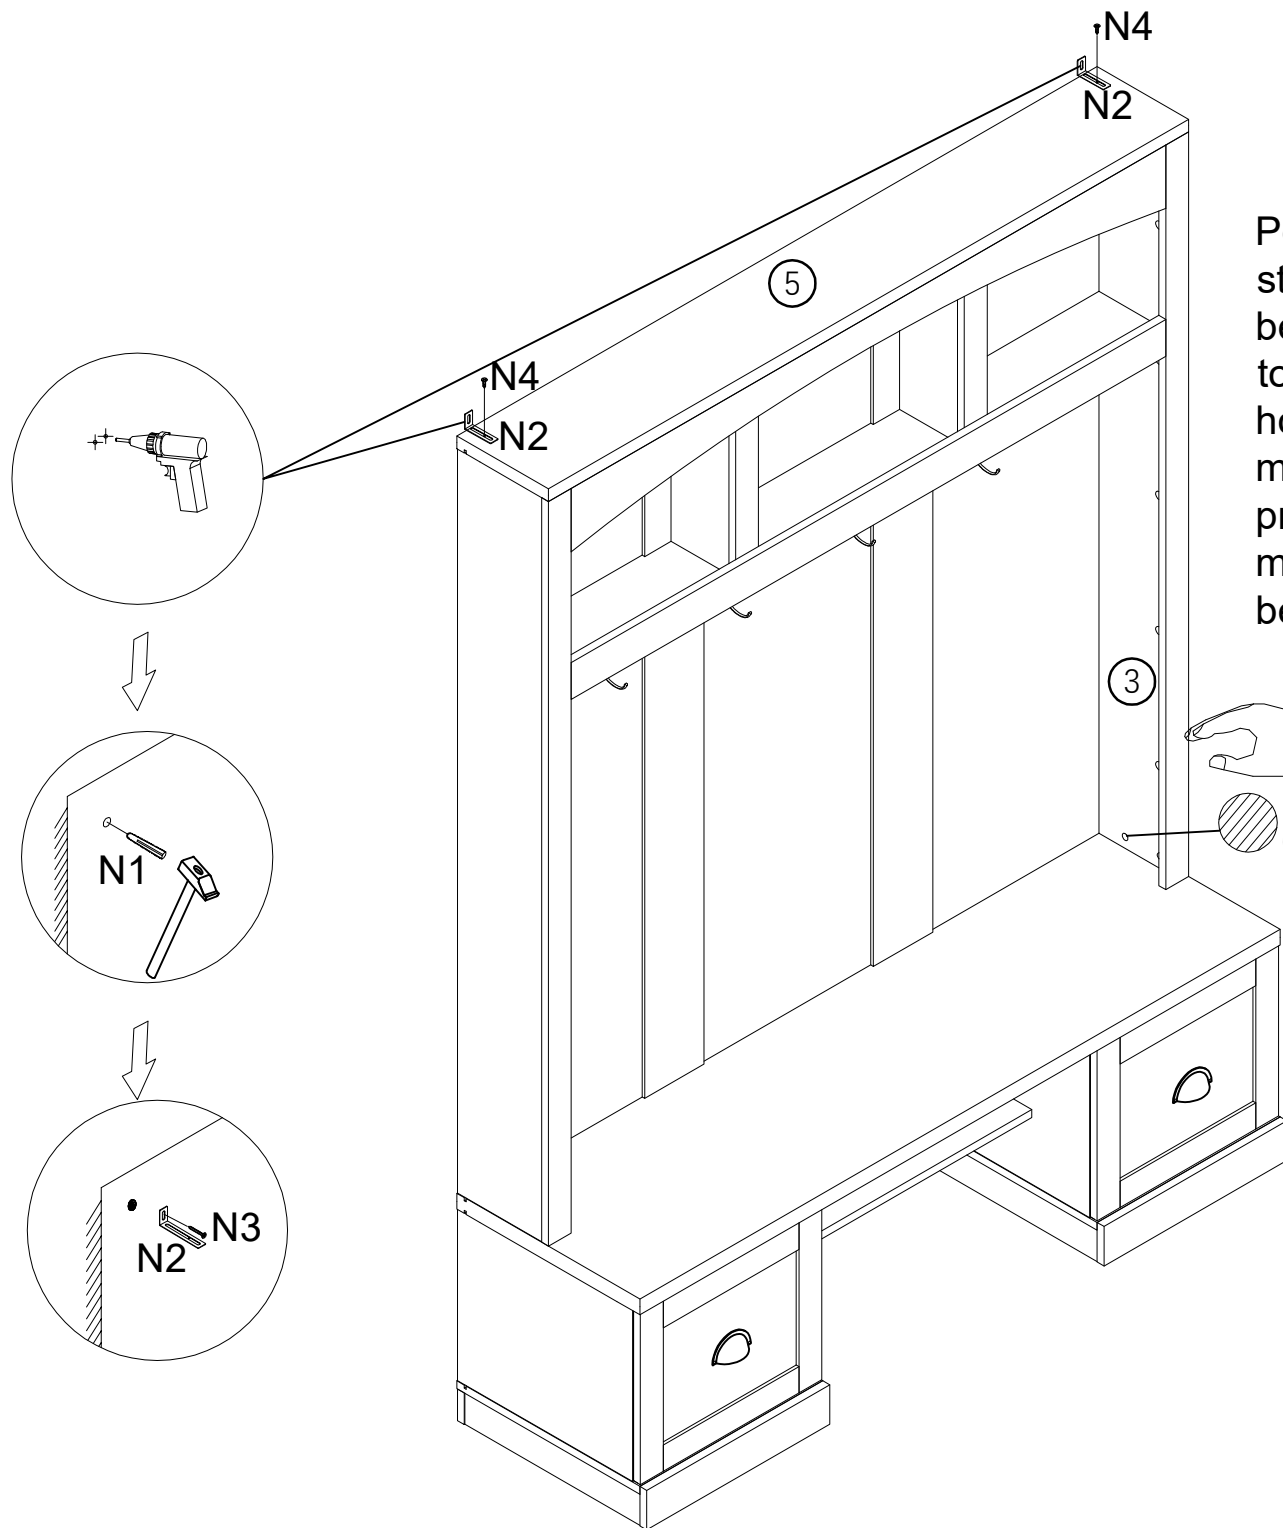

Perfect stickers can be attached to exposed holes to make the product more beautiful.

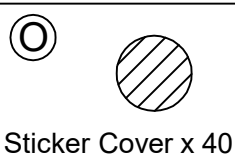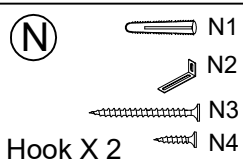

Assembly Instructions

Step 34

