



Assembly Instructions






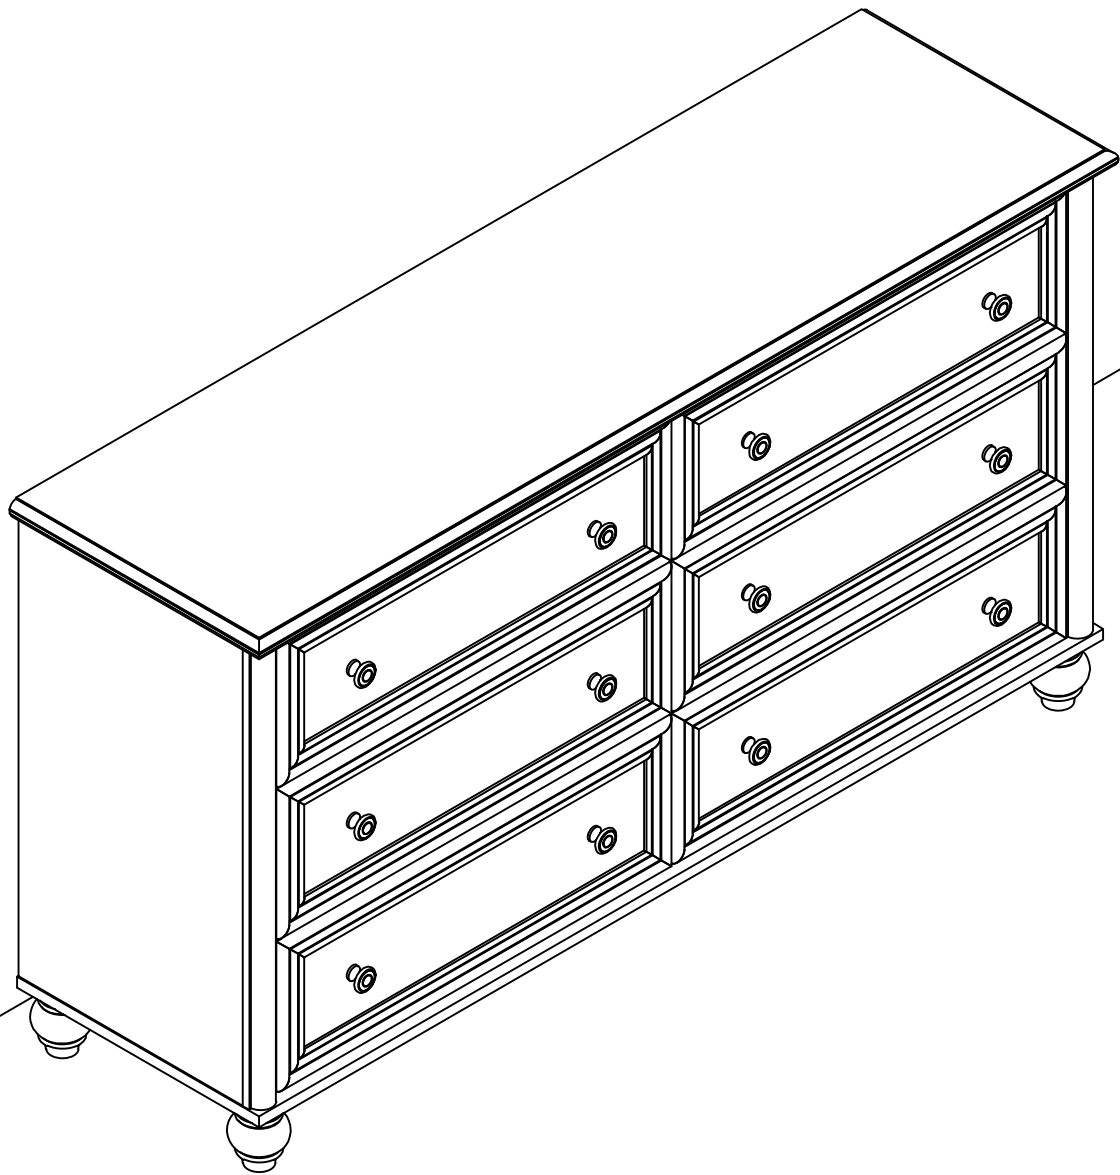


Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground. Dragging may cause loose connectors, affecting stability and service life



PART LIST

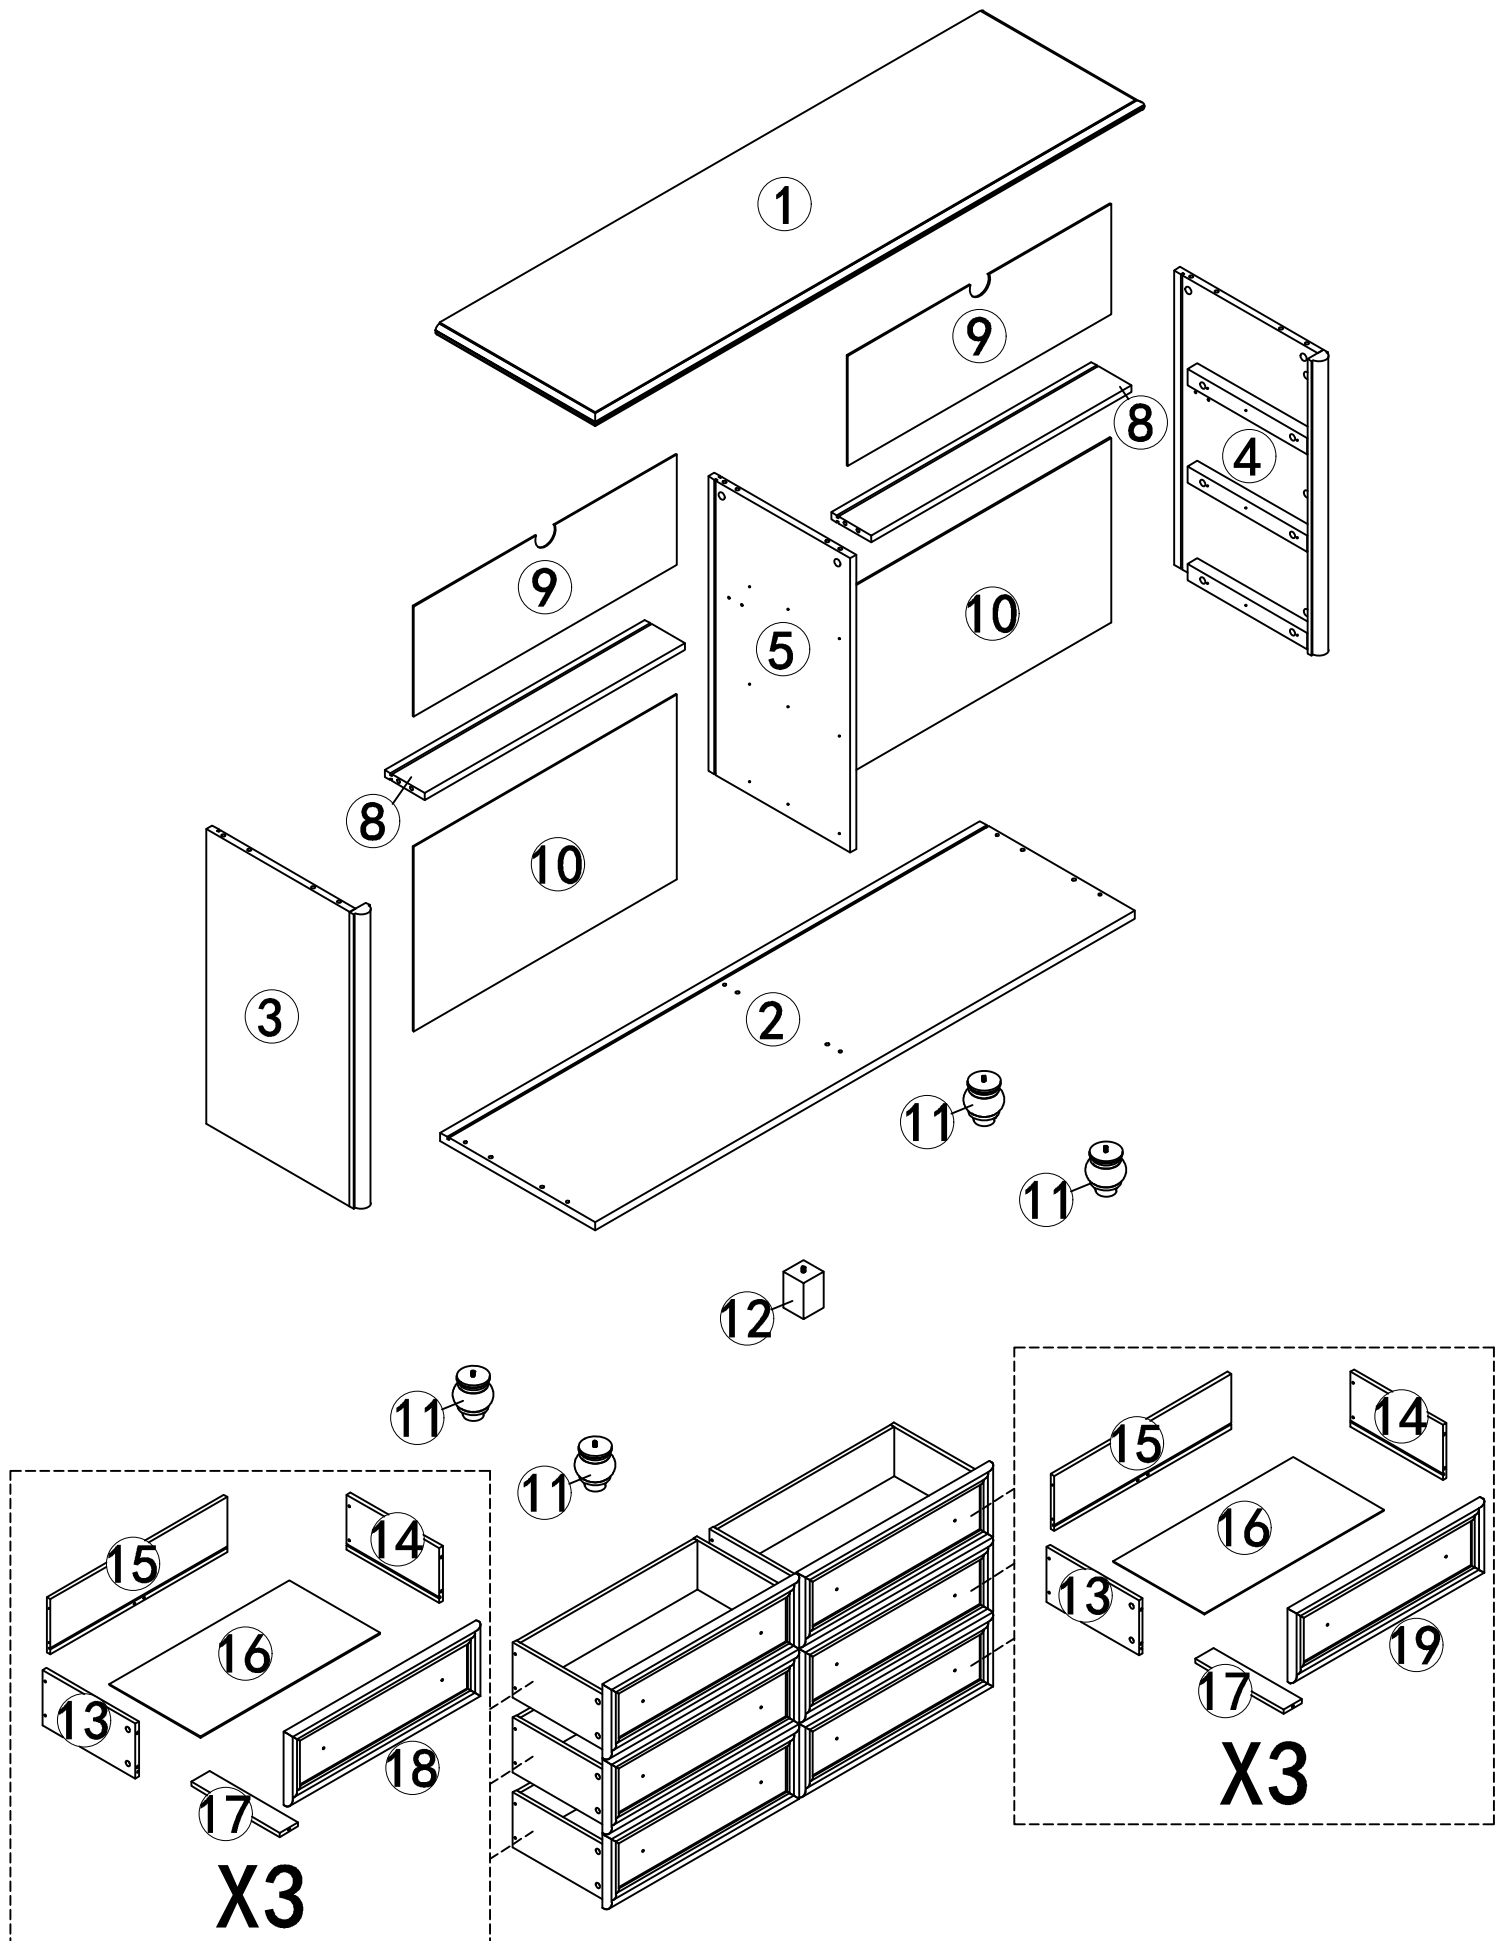


HARDWARE LIST

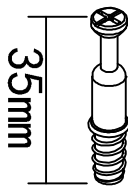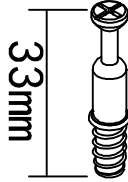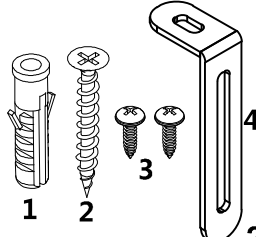A  35mm Ø6x35mm (14+1)PCS	B  Ø15x9.5mm (44+3)PCS	C  Ø4x32mm (36+3)PCS
D  Ø8x30mm (12+1)PCS	E  Ø5x40mm (6+1)PCS	F  33mm Ø6x33mm (30+2)PCS
G  (16+1)PCS	H  Ø3x15mm (16+1)PCS	I  1 2 3 4 2SET
J  Ø3x12mm (72+3)PCS	K  6SET	L  12PCS
M  Ø4x12mm (12+1)PCS	 1PC	 1PC


! K X 6SET

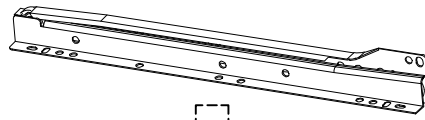


CL




CR




DL



DR

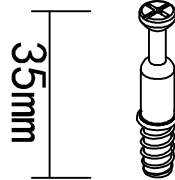


A

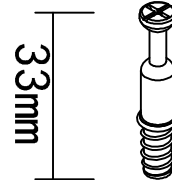


F




I =




1



2



3


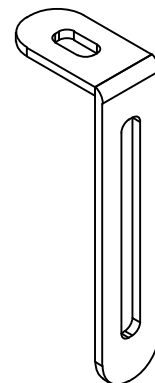


4





STEP 1

J

X 18PCS




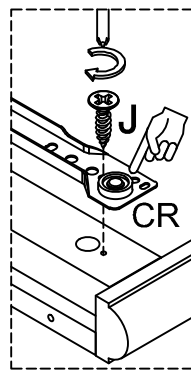
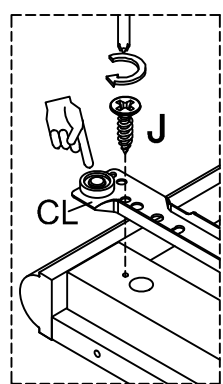


STEP 2

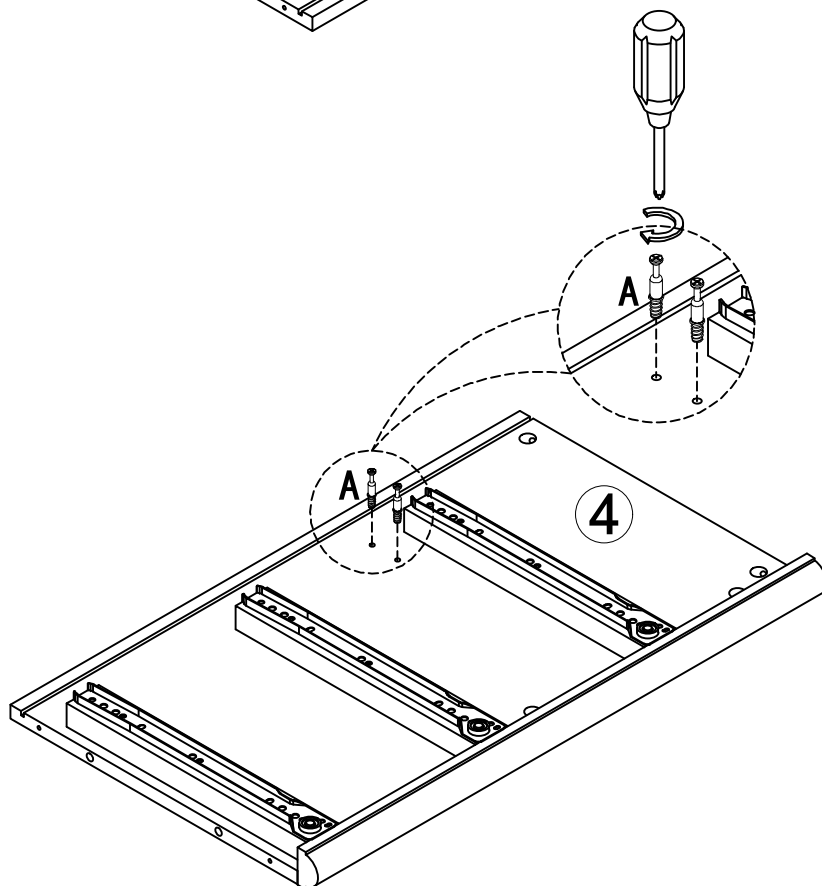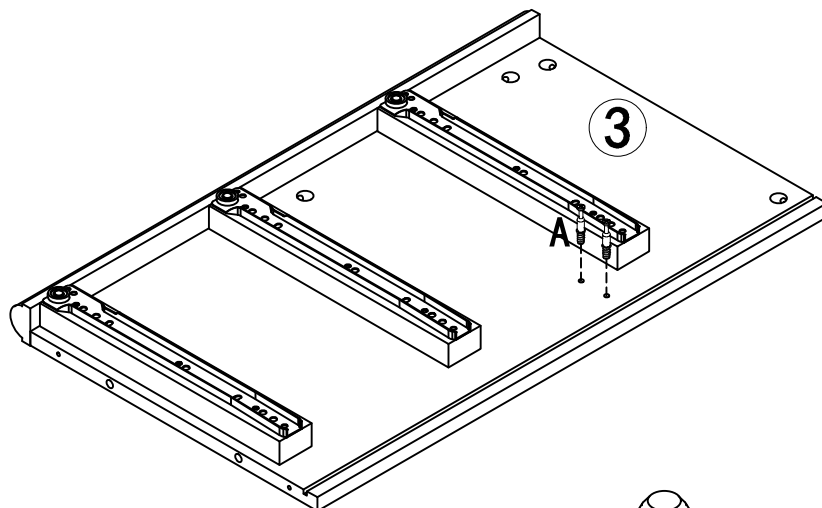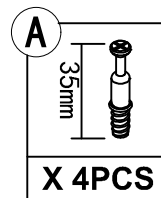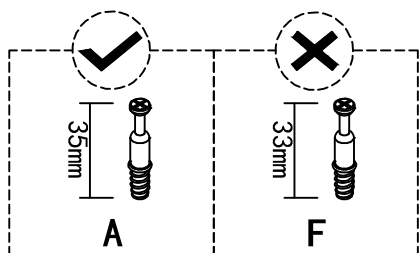


STEP 3





X3

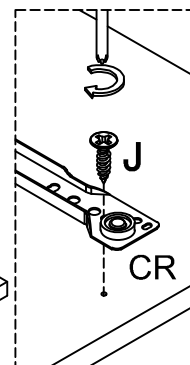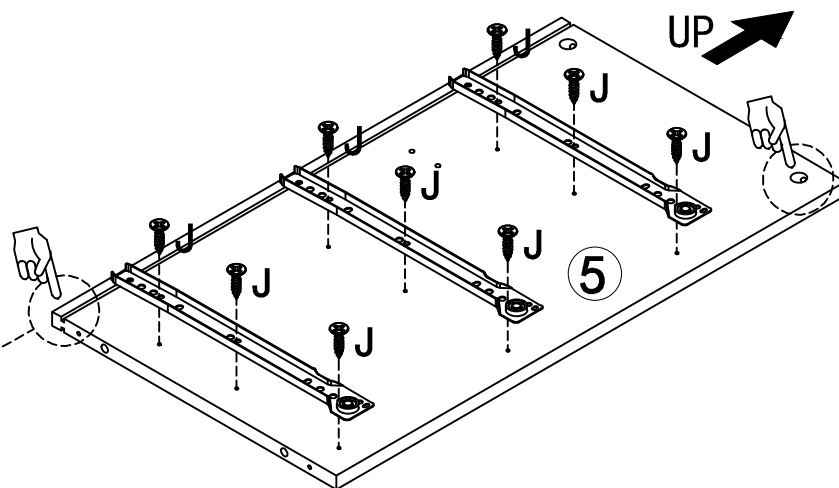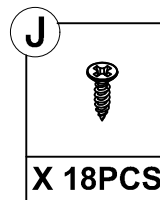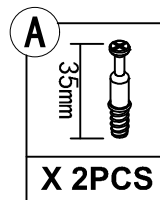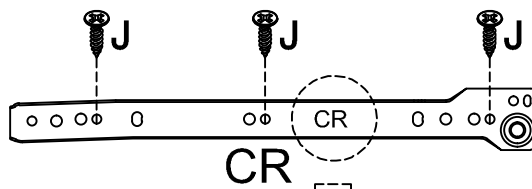

ROTATE 180°

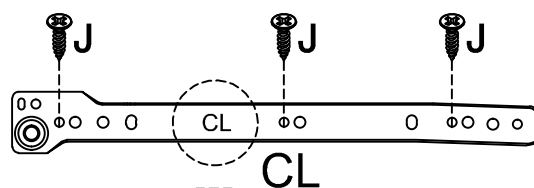

X3

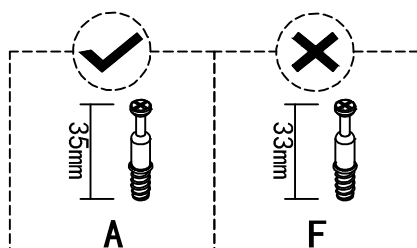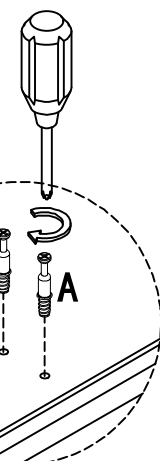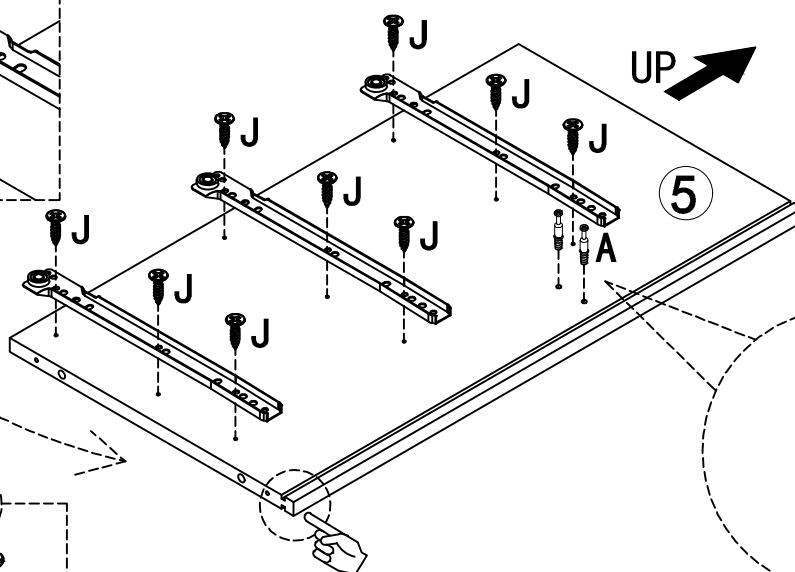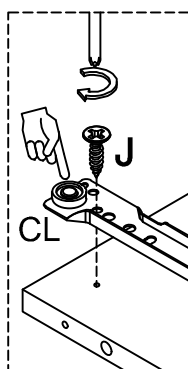


STEP 4

B



X 2PCS


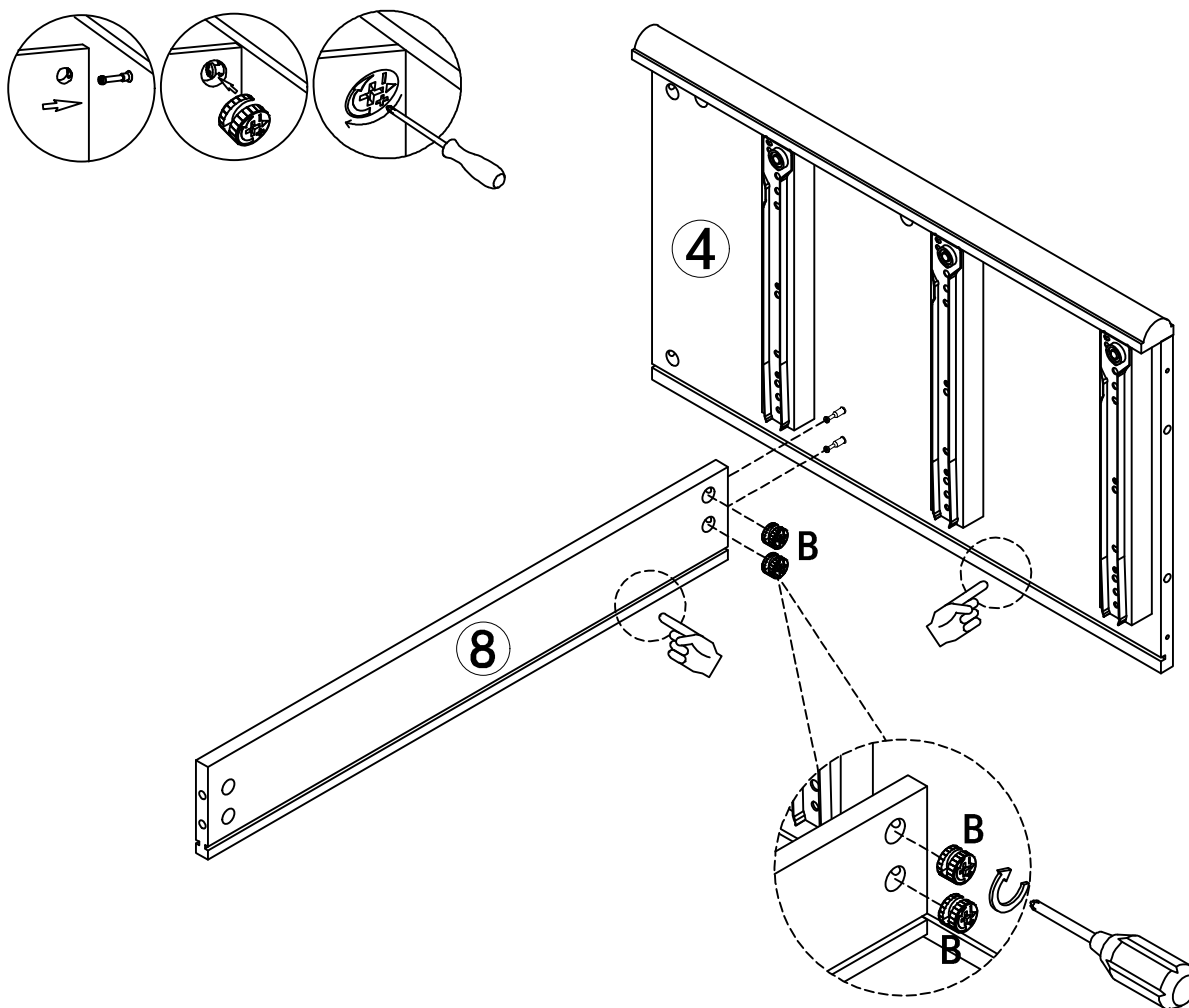


STEP 5




B



X 2PCS

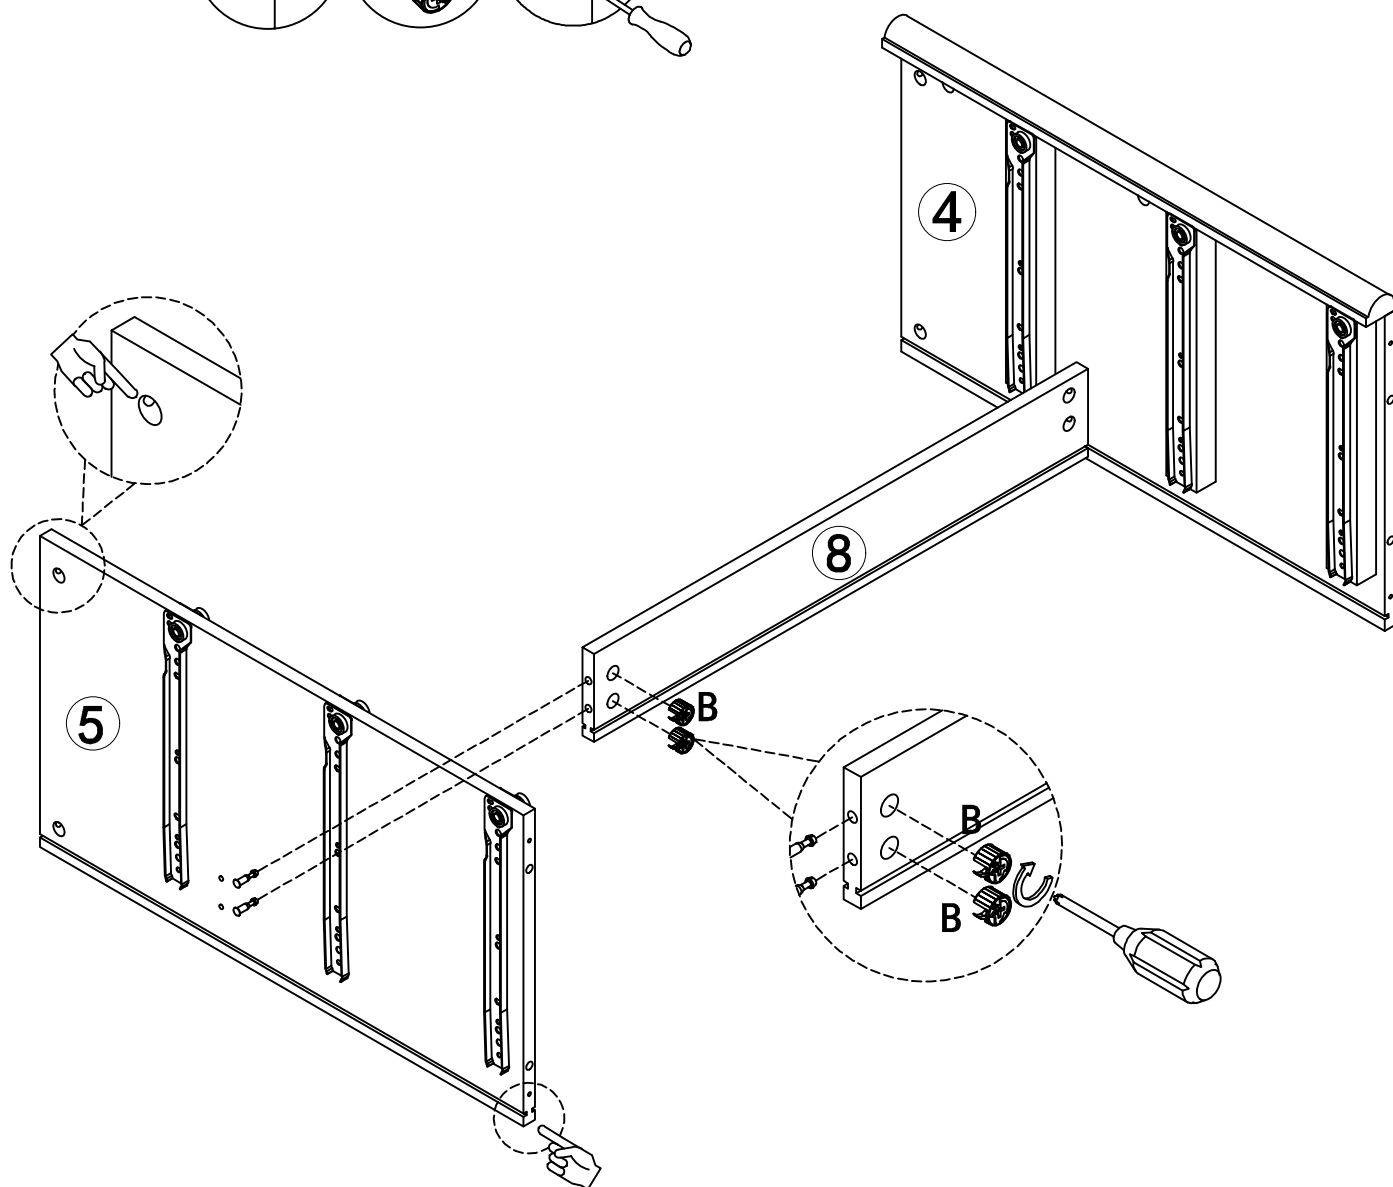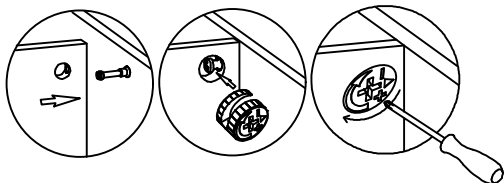

STEP 6

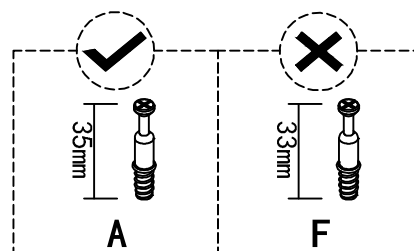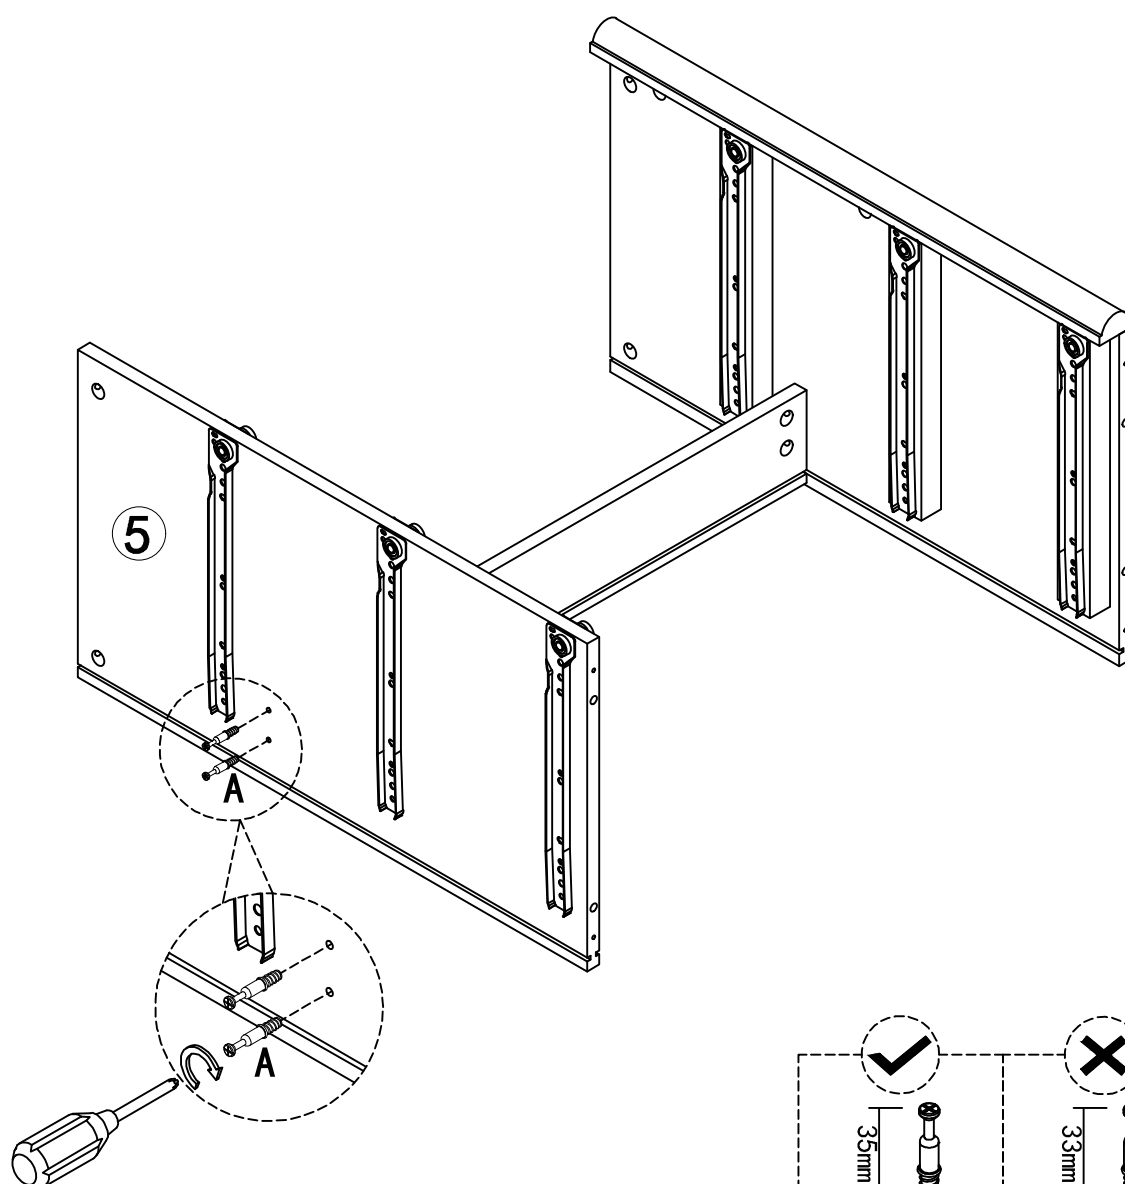
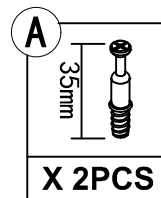


STEP 7

B



X 2PCS

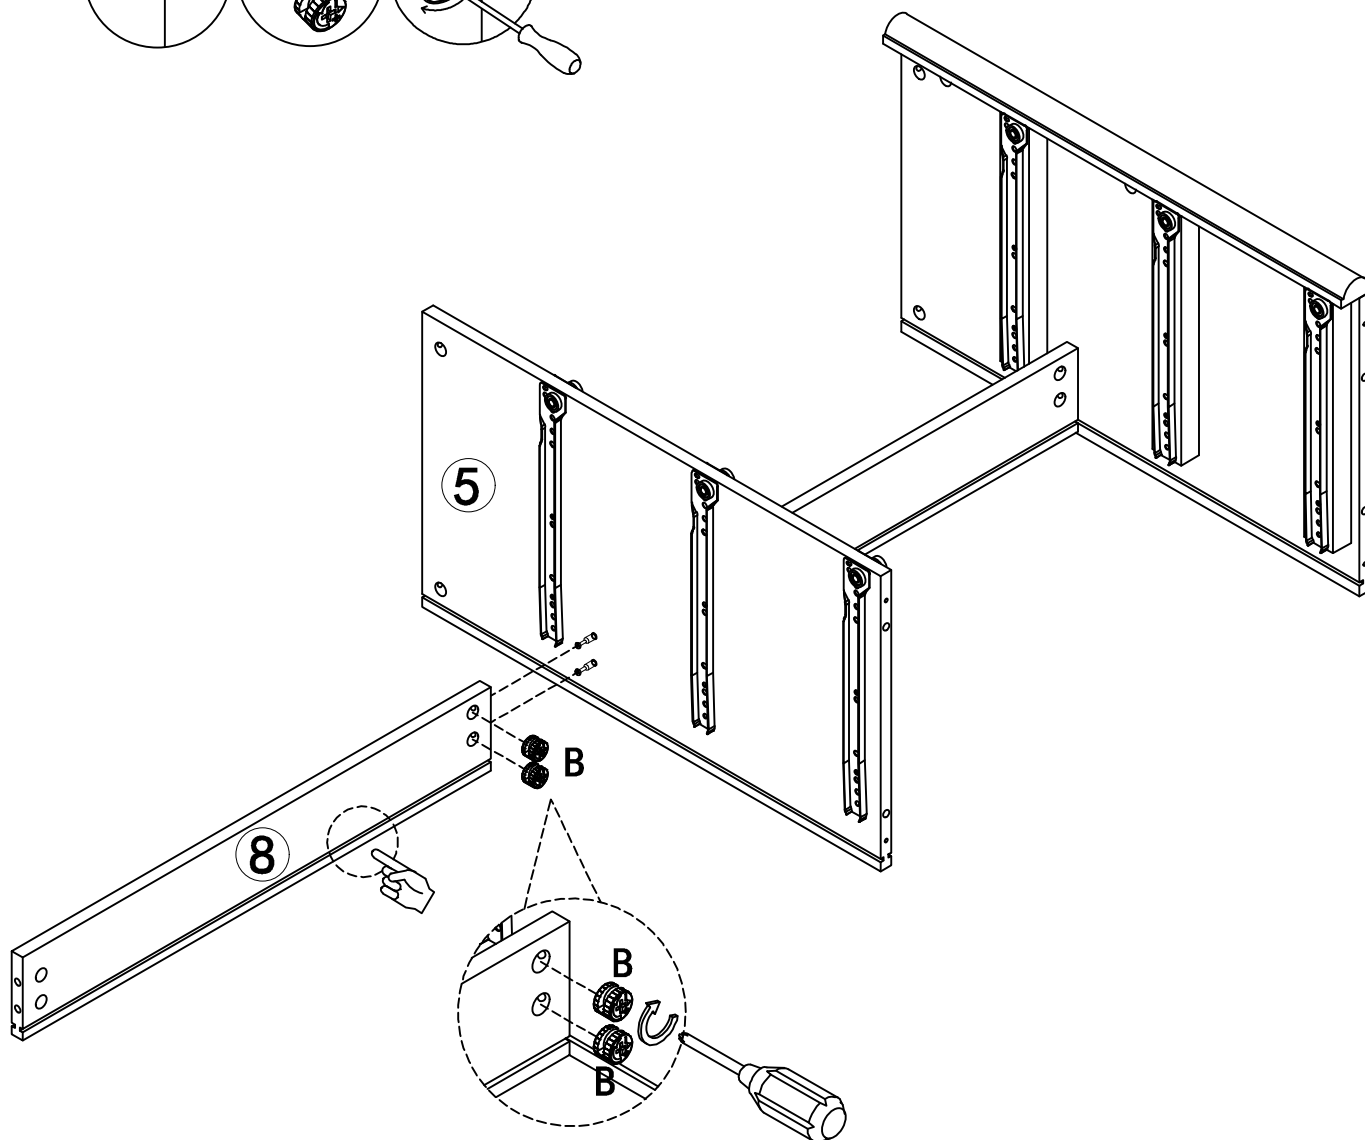
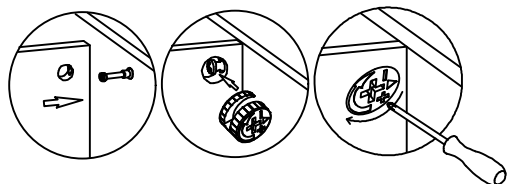


STEP 8

B





X 2PCS

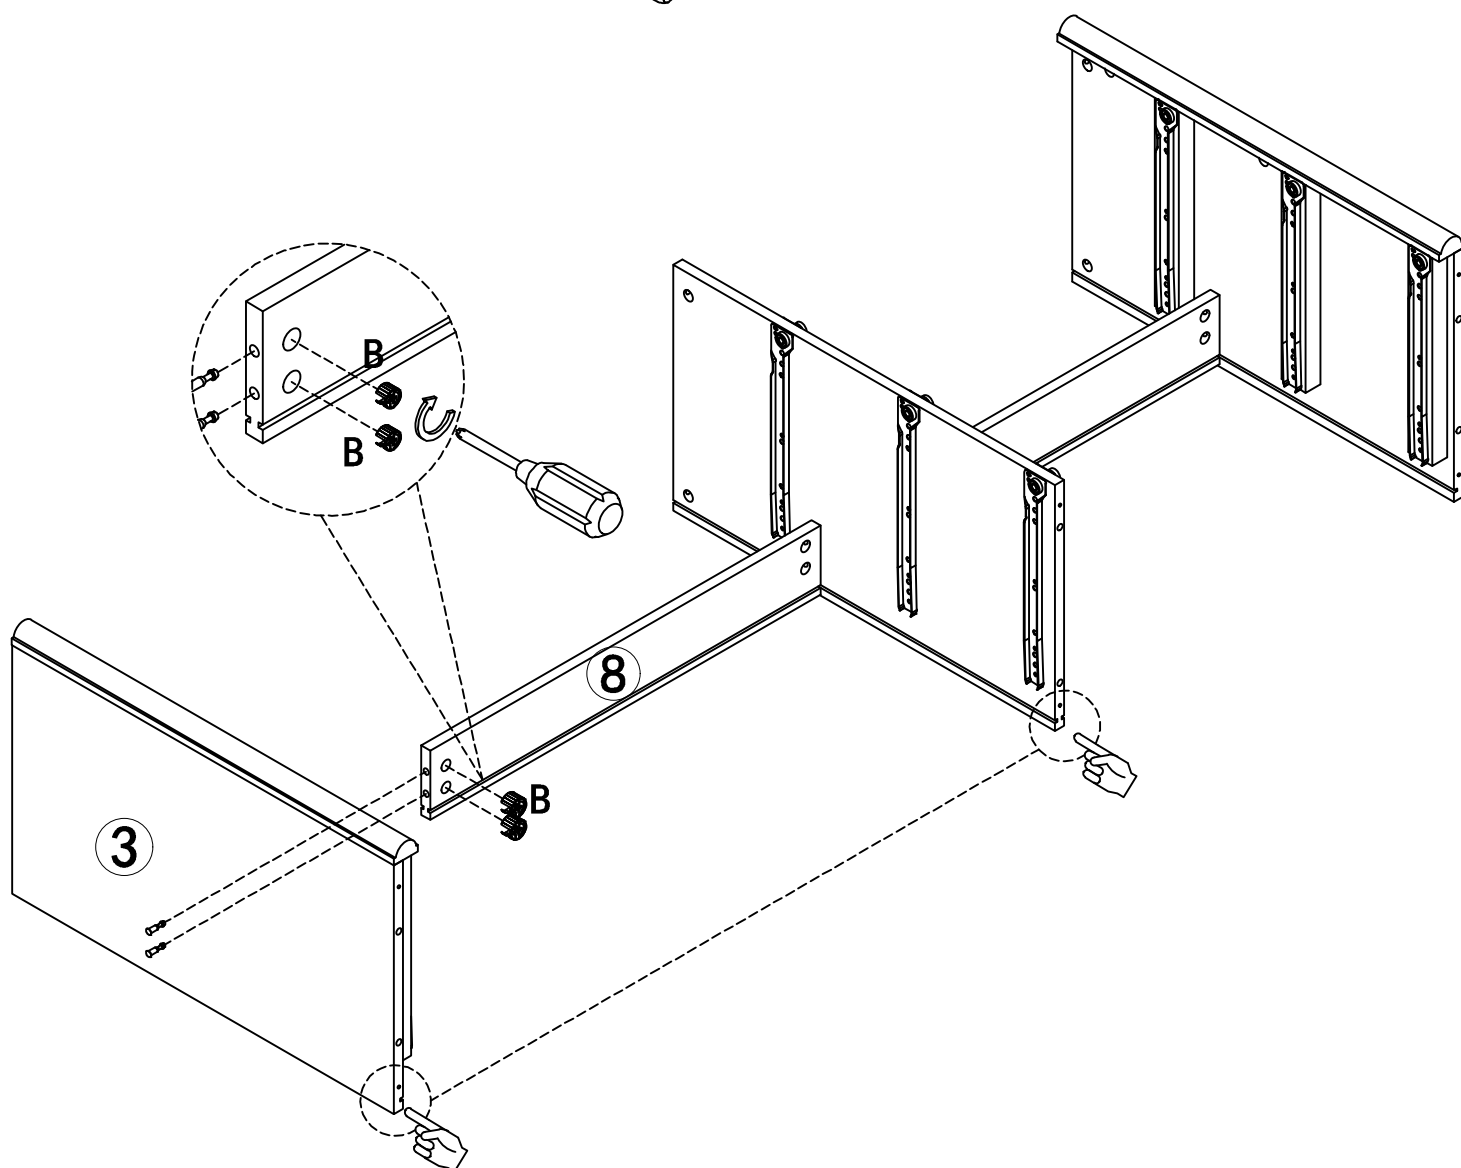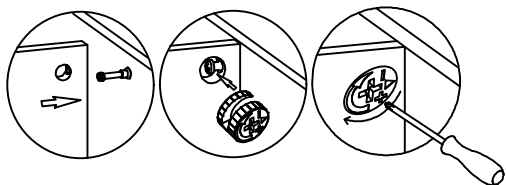



STEP 9

D

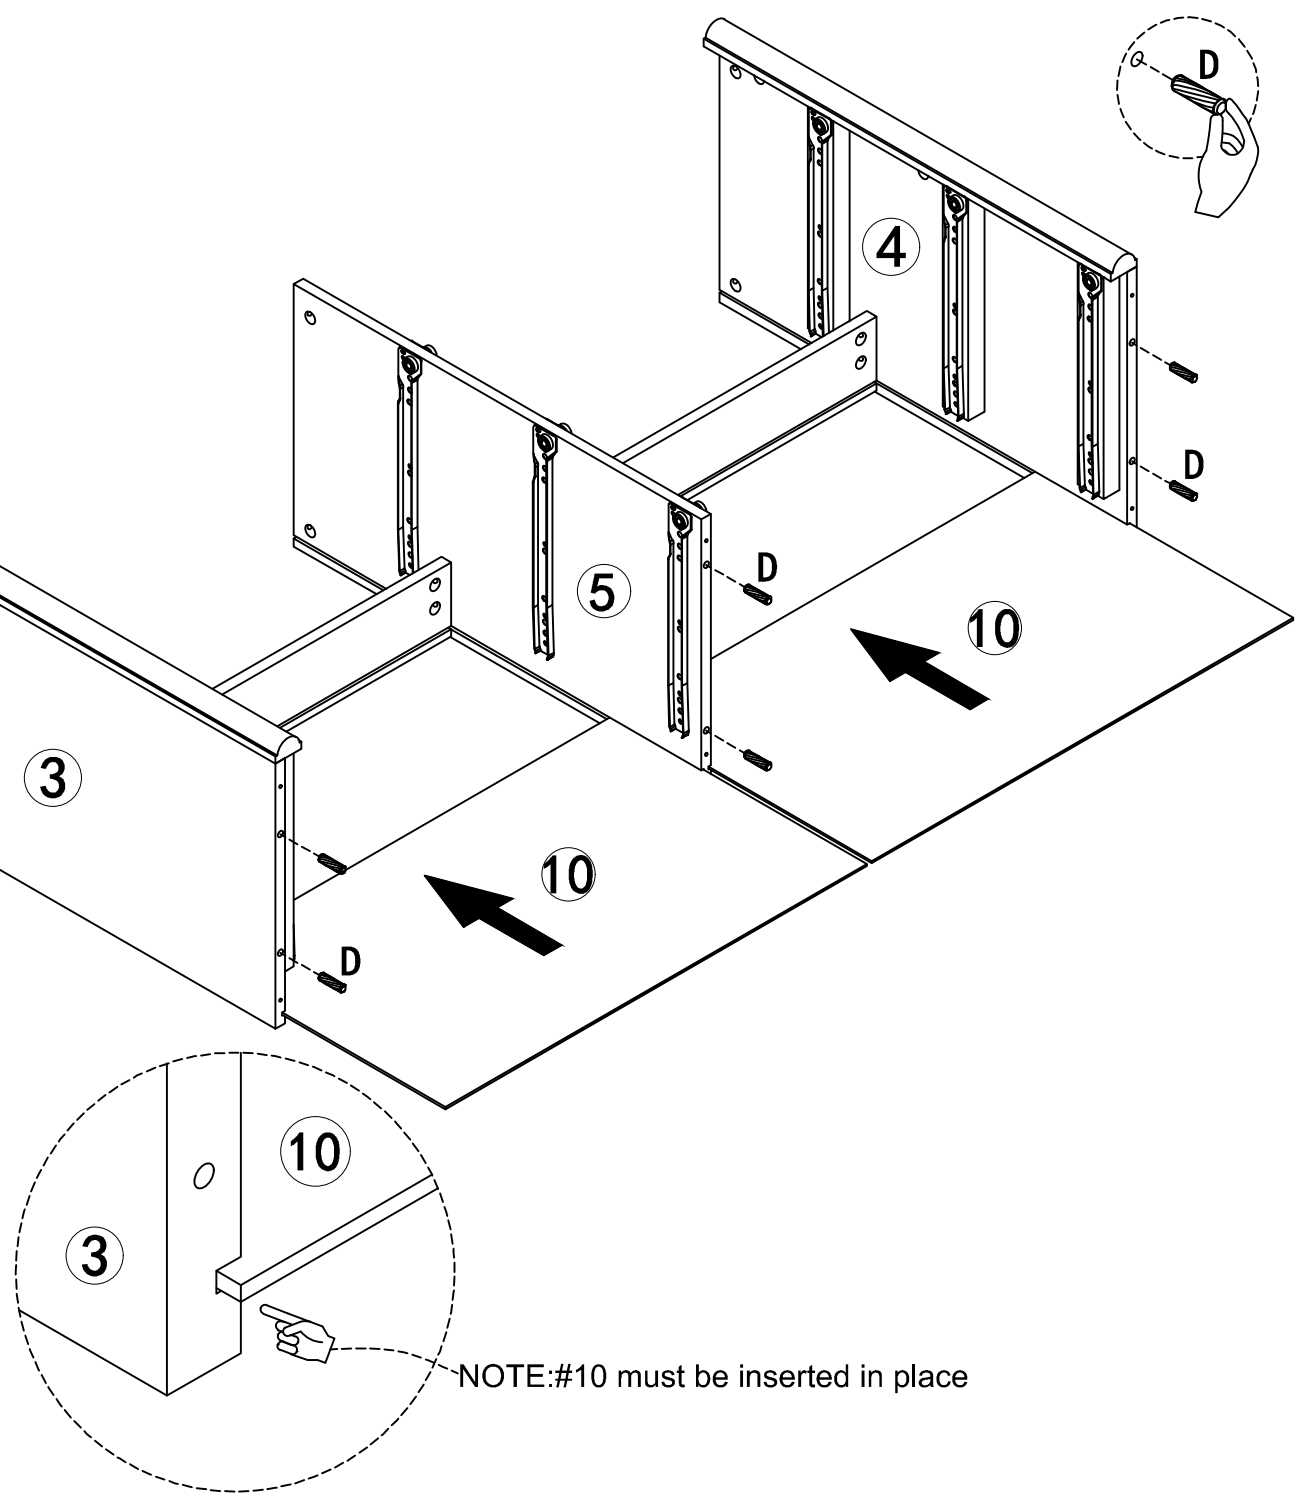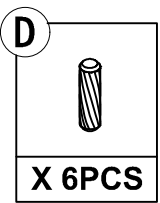


-NOTE:#10 must be inserted in place



STEP 10

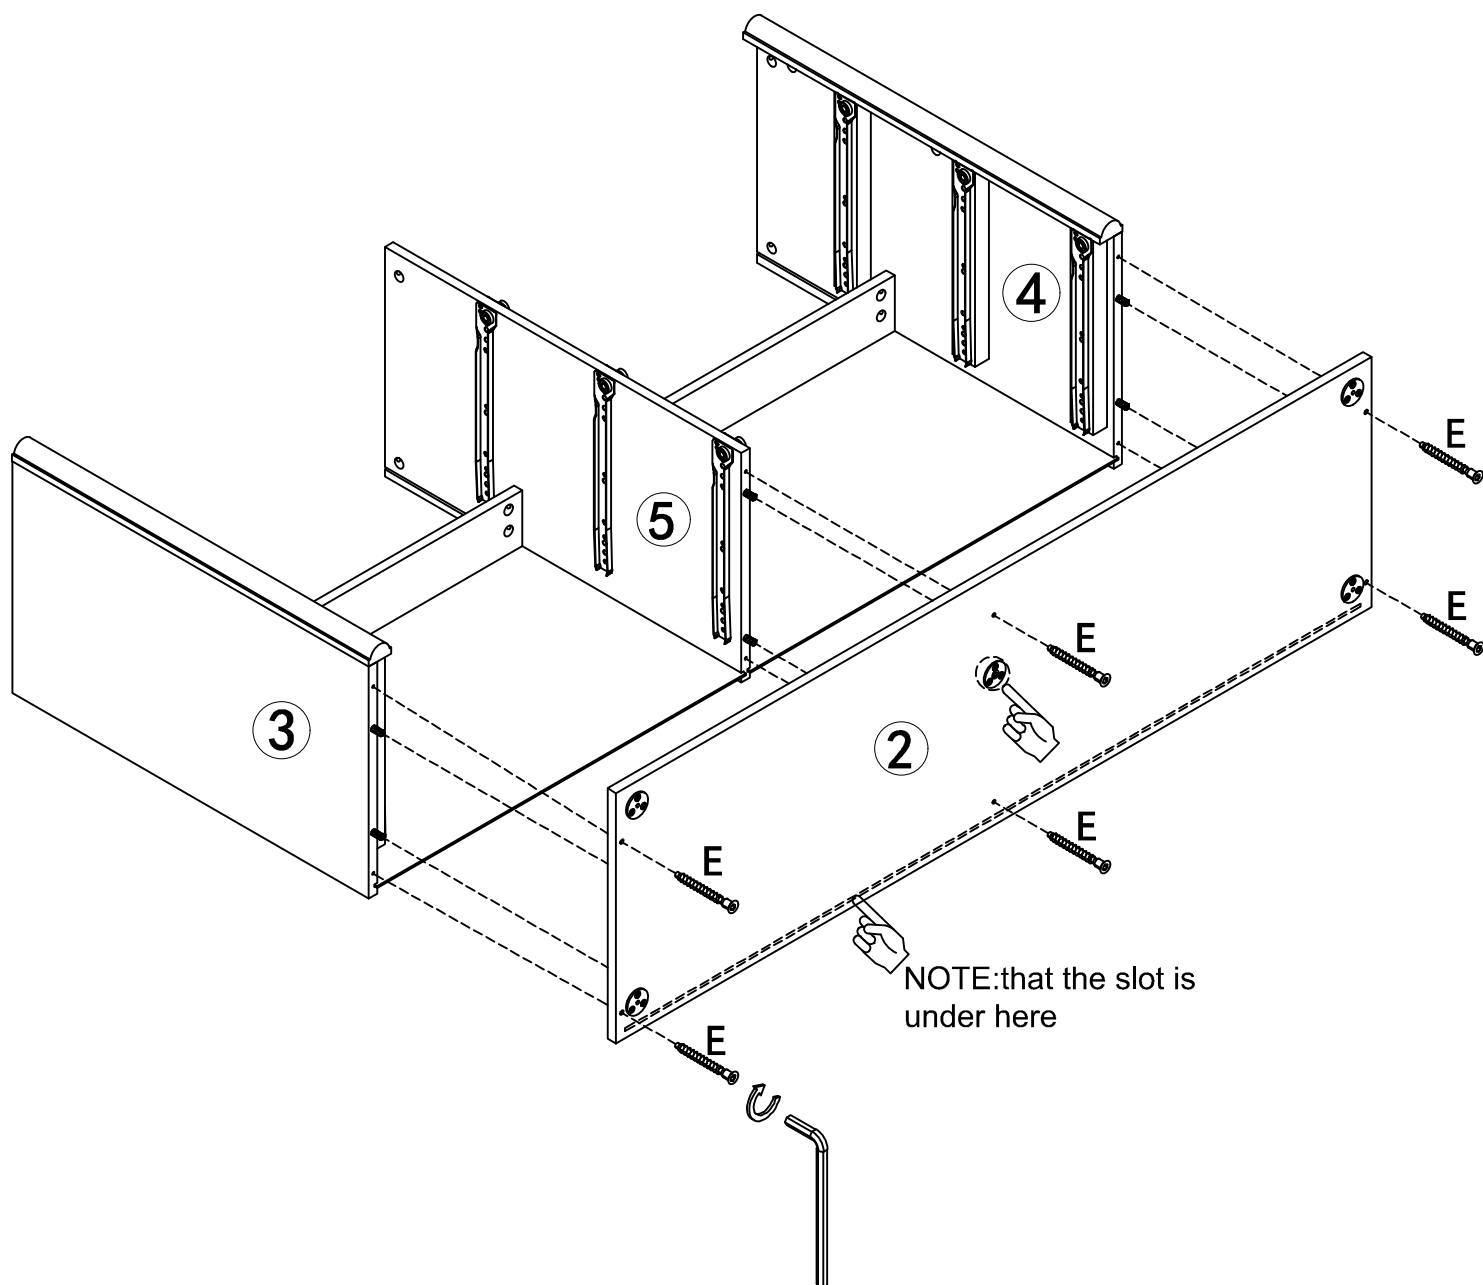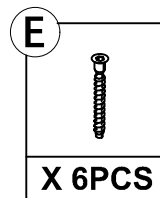






STEP 11

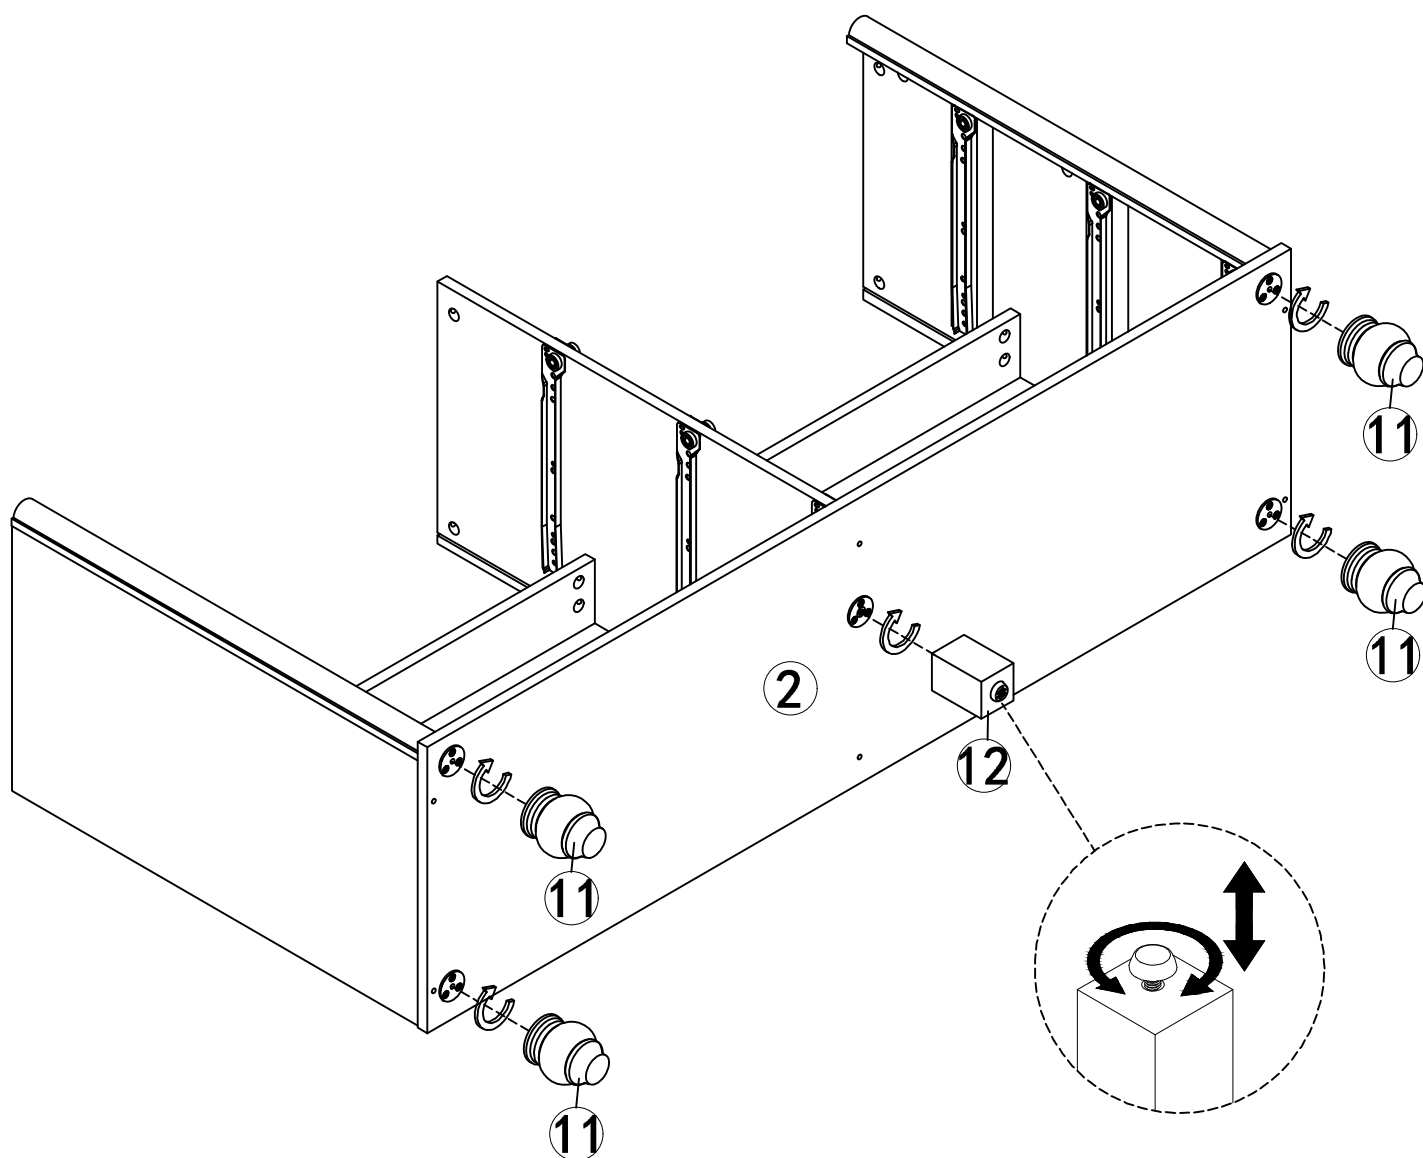

STEP 12

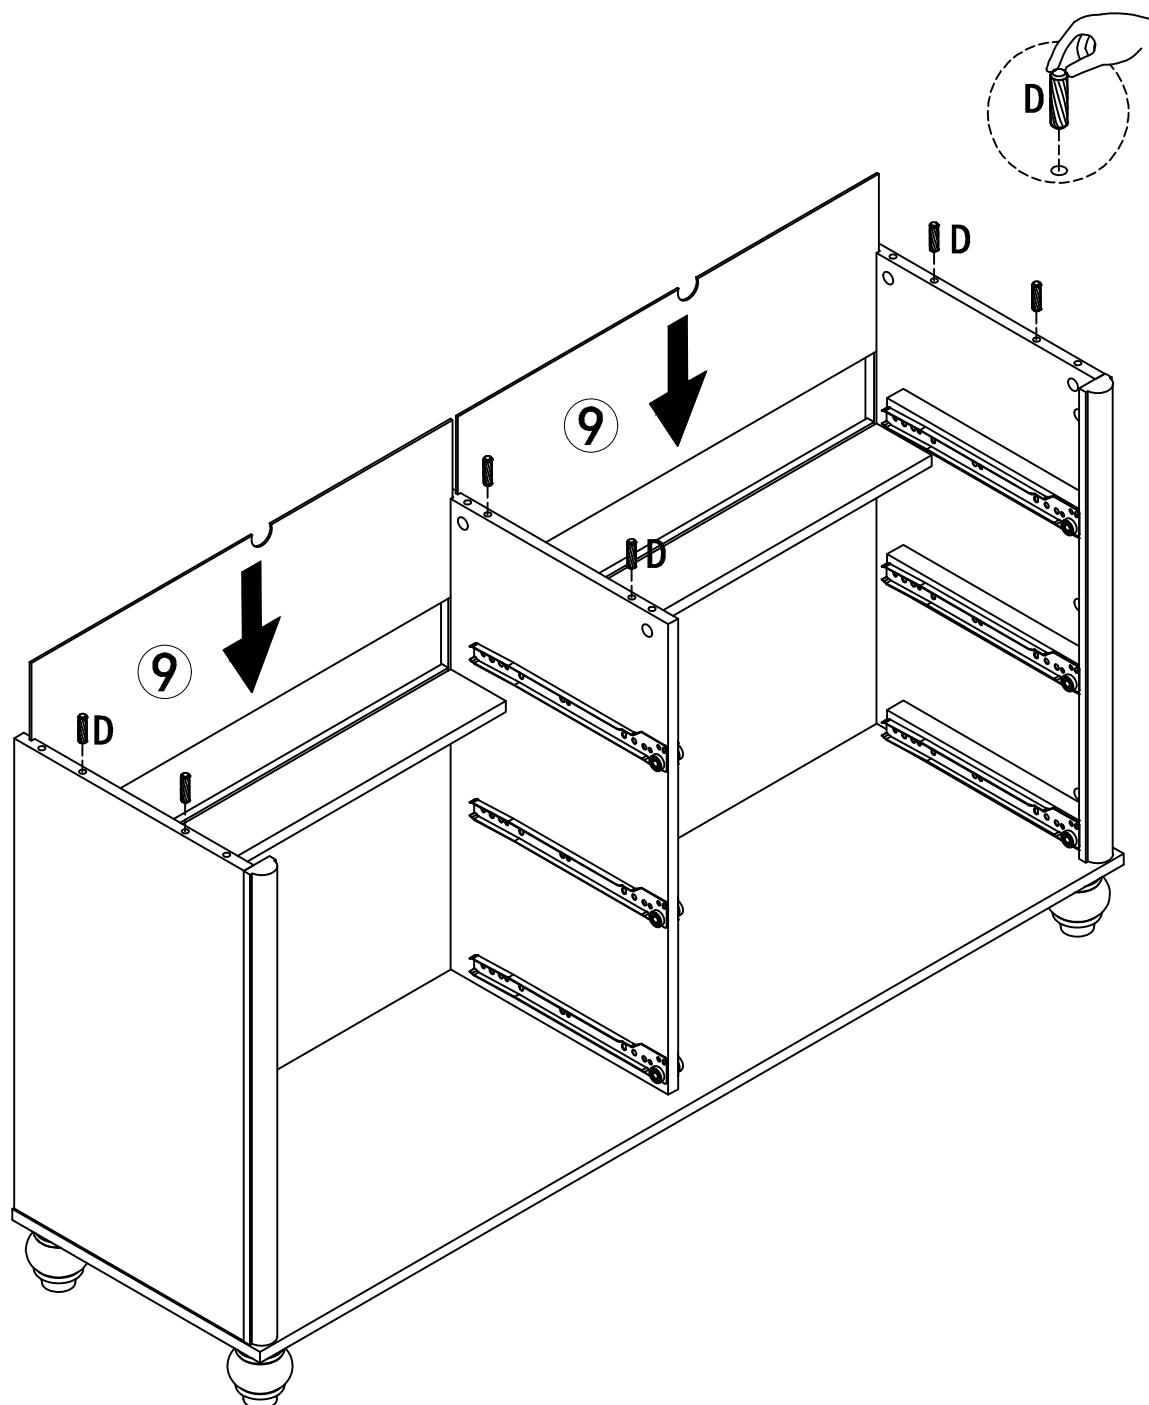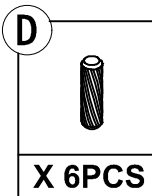

STEP 13

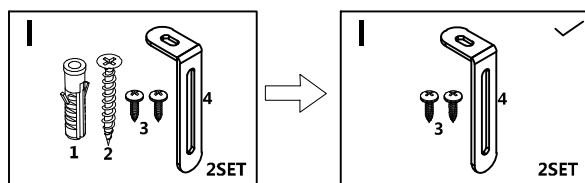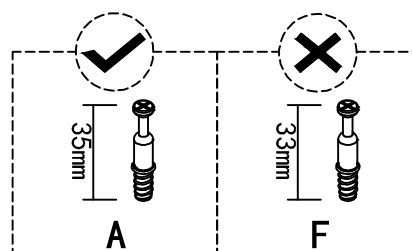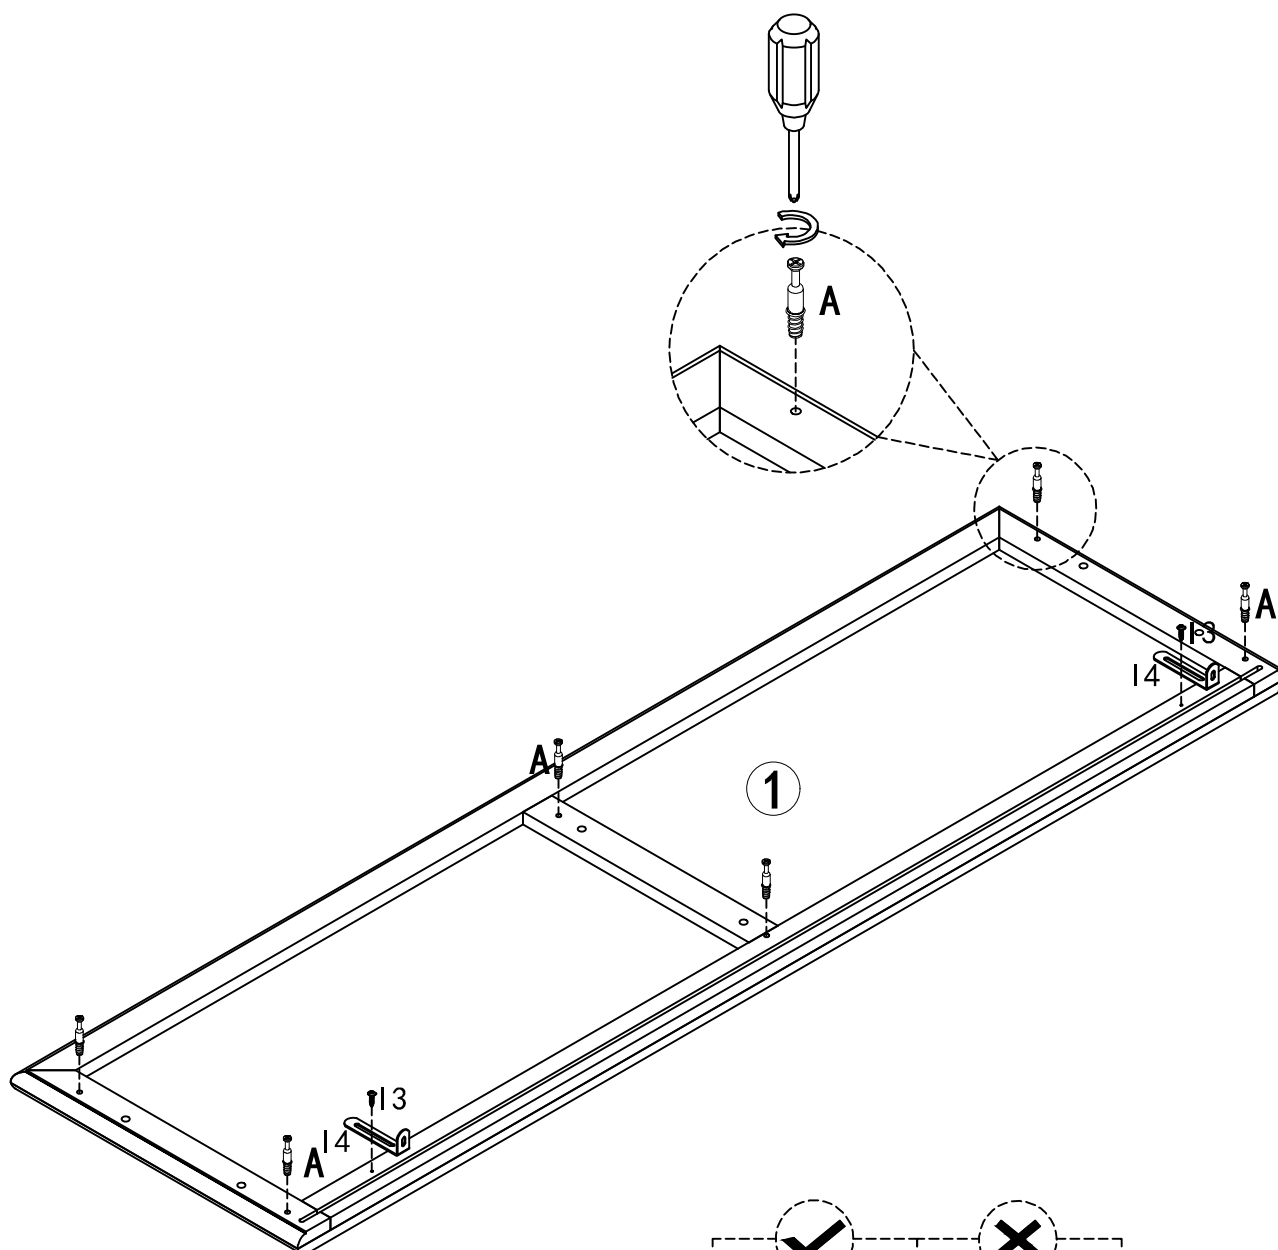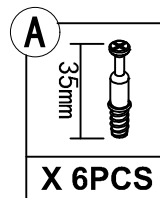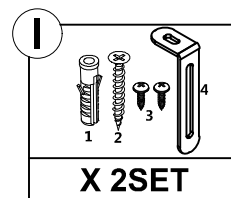


Note: Put the anti-tip device I4 on the top, near the back side, and fix it with a screw I3.

STEP 14




B




X 6PCS

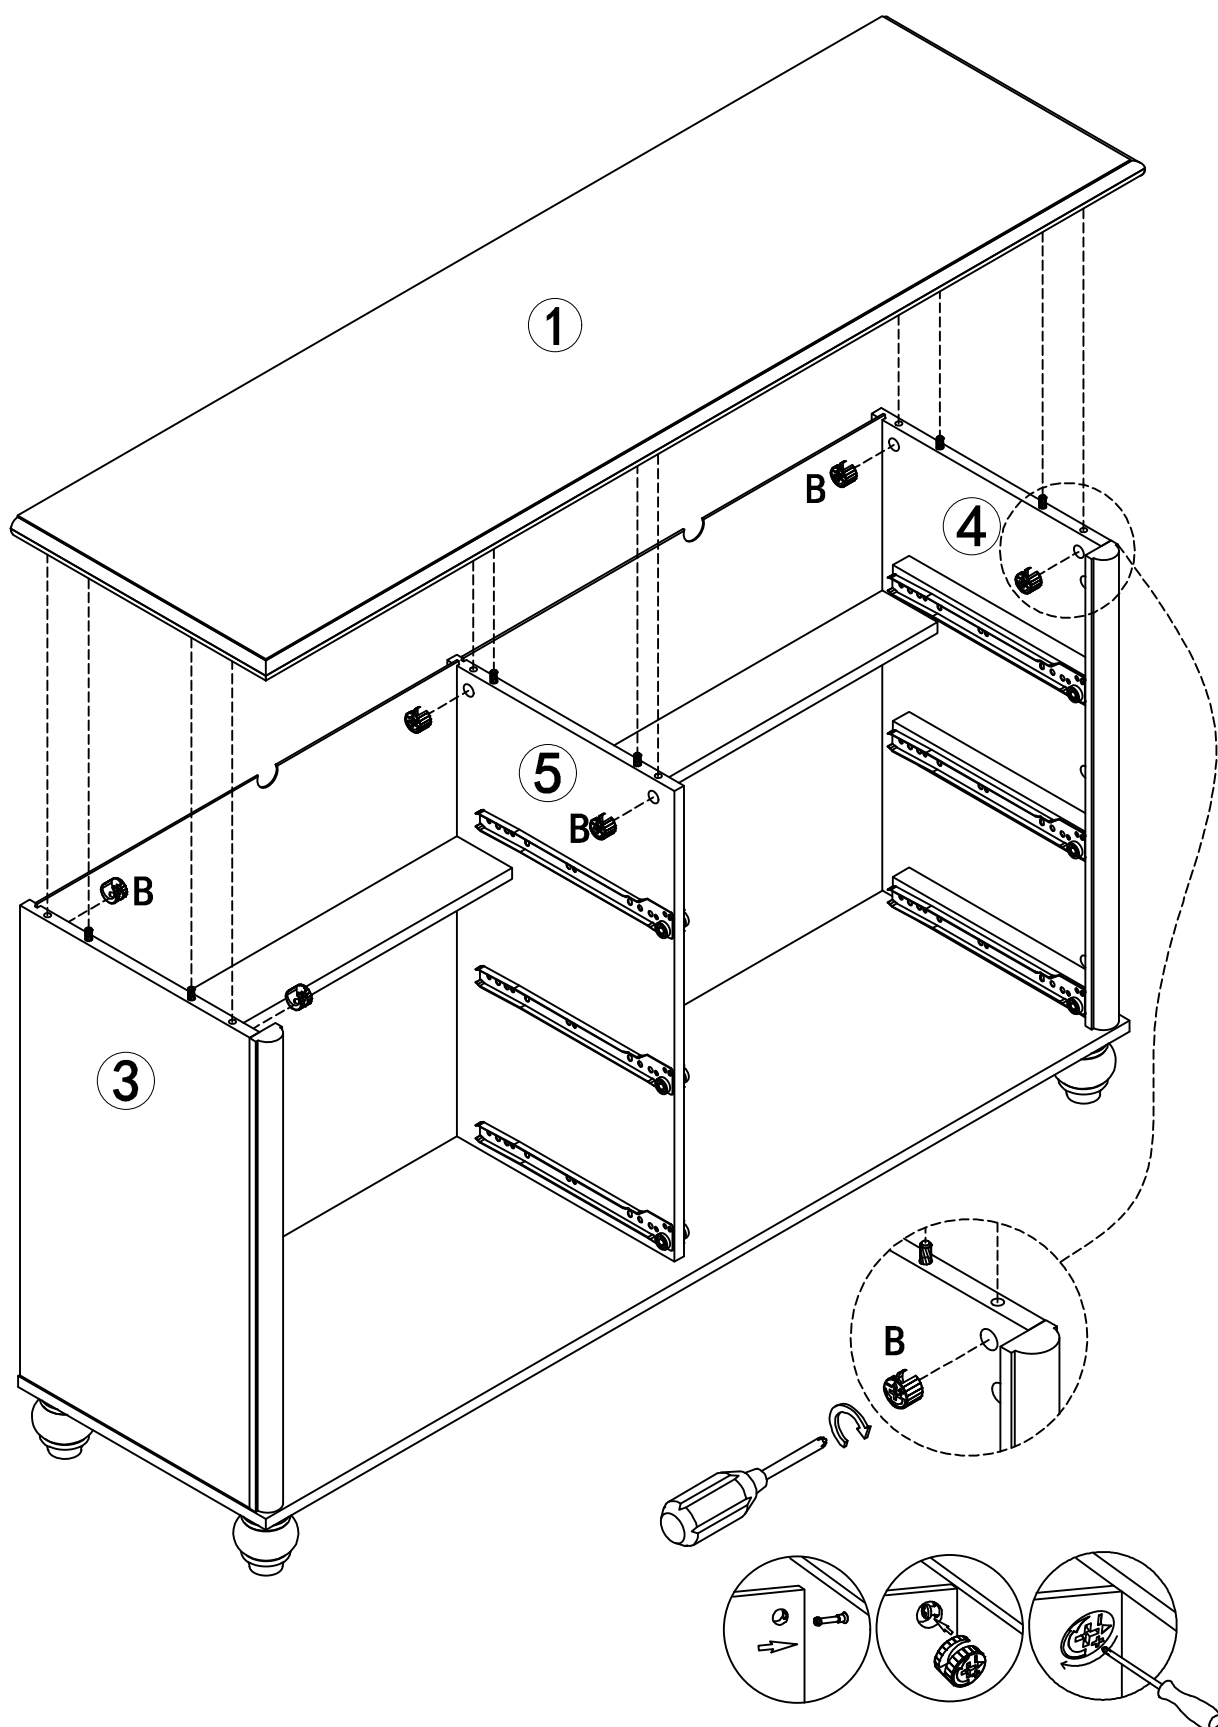

STEP 15

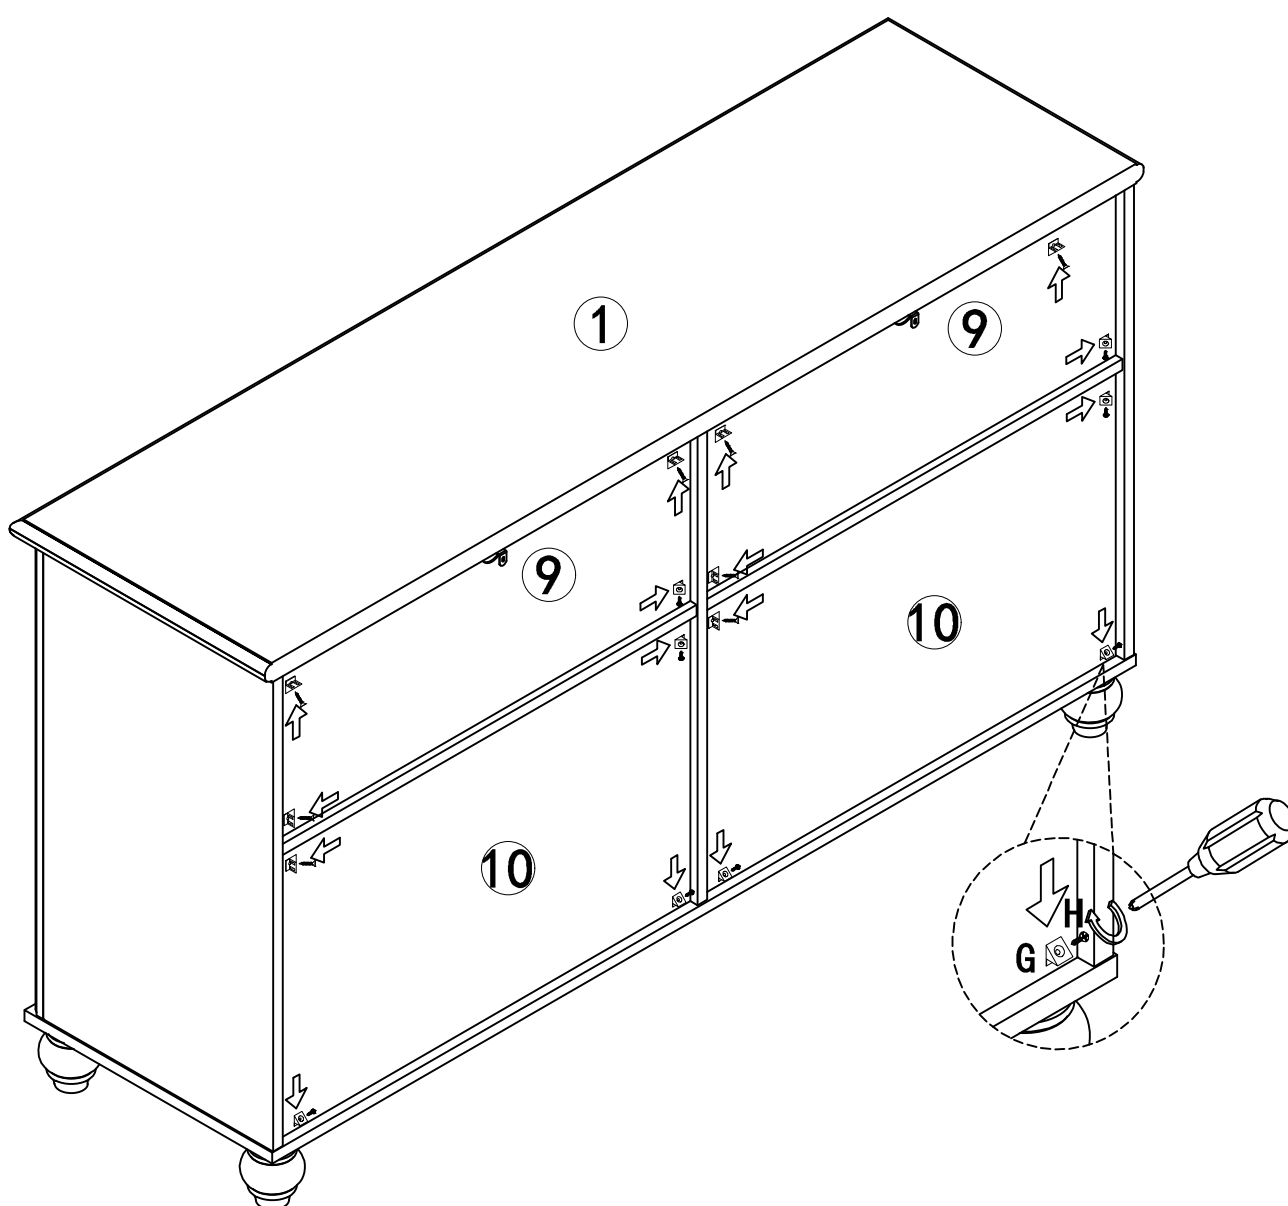
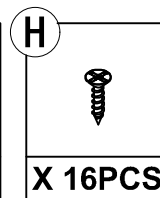
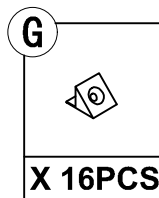


STEP 16



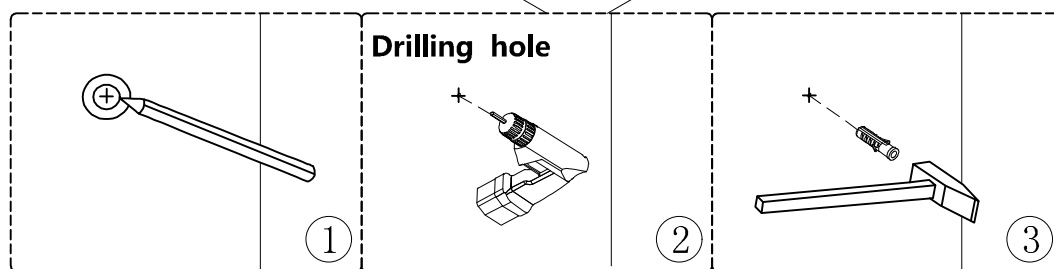


Drill a hole in the wall, then hammer the I1 into the wall with a hammer











Note: Follow step
Link I4 and I1 with a I2 using a
screwdriver, and assembly it tightly.

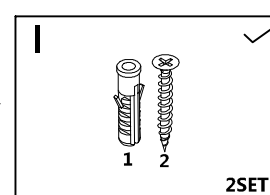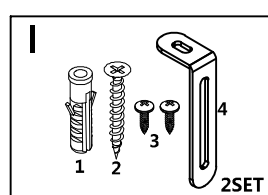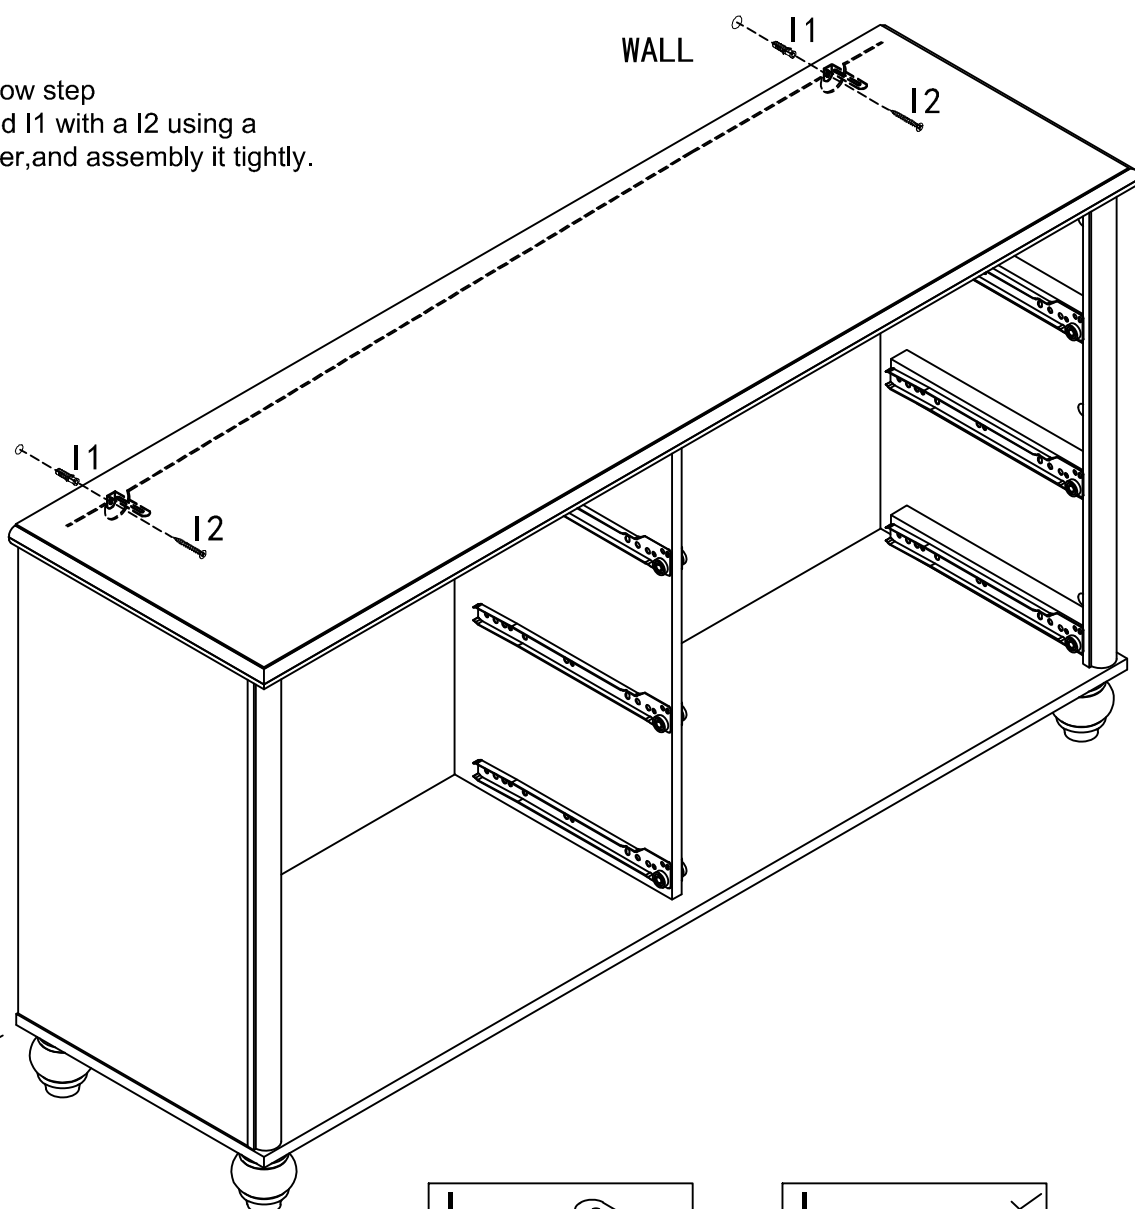





STEP 17

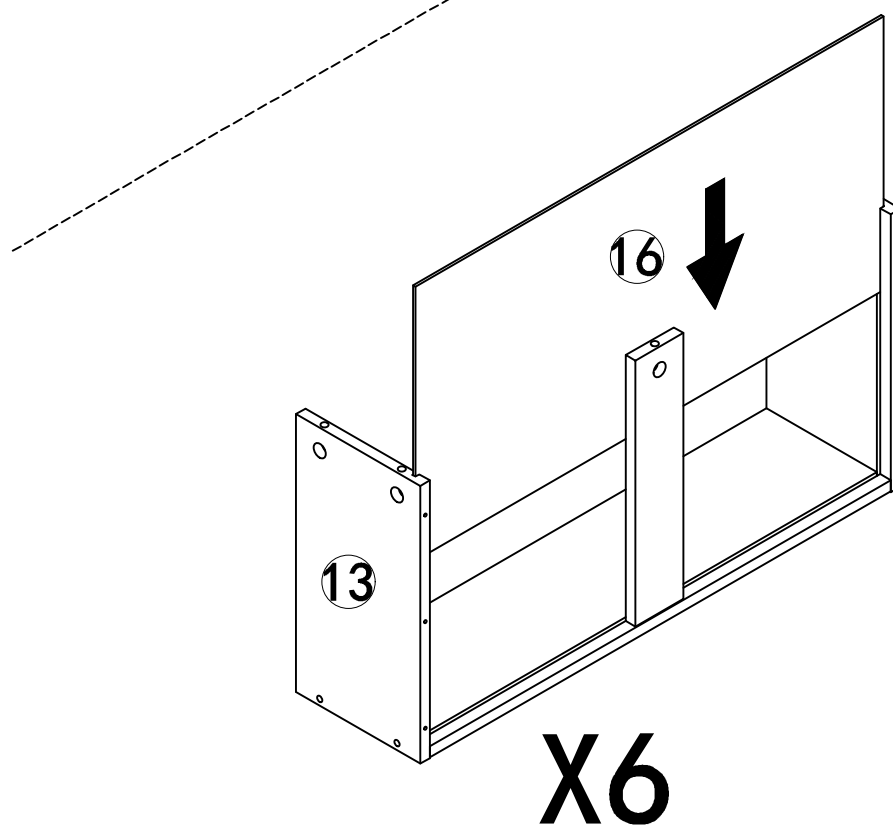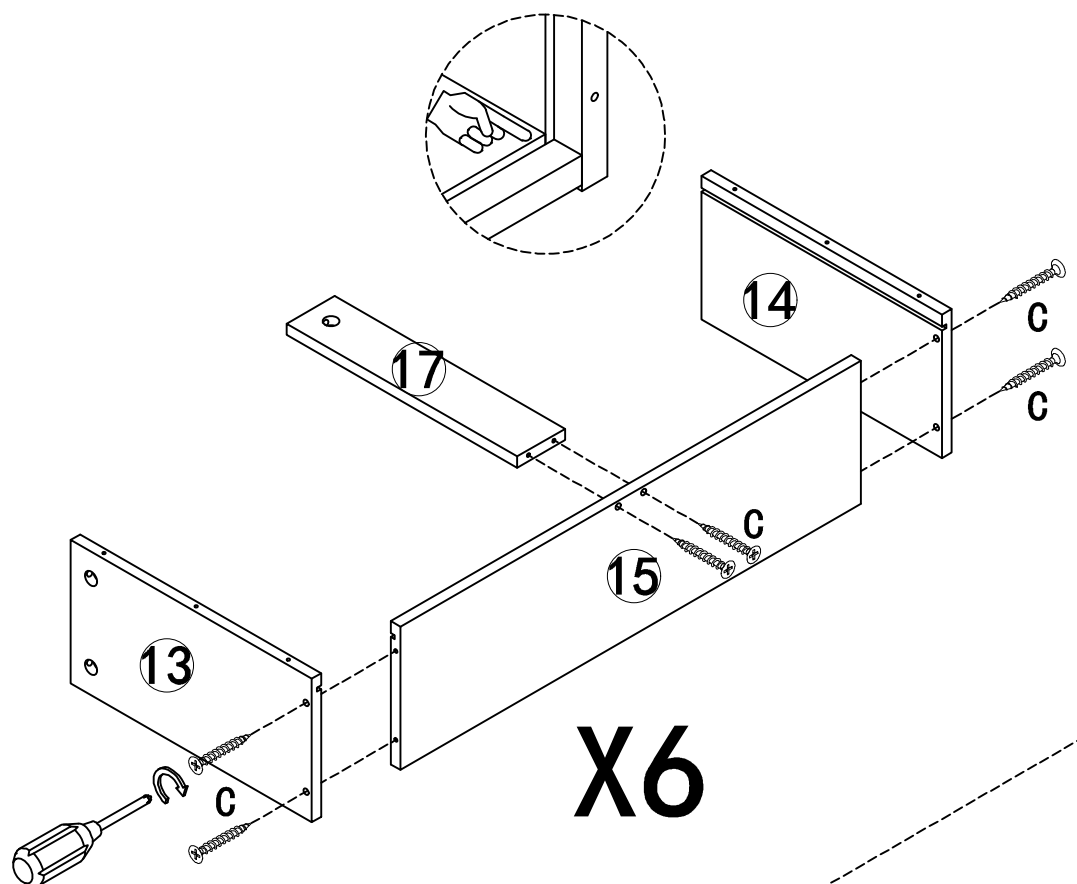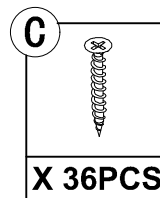



STEP 18

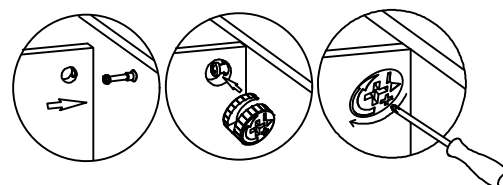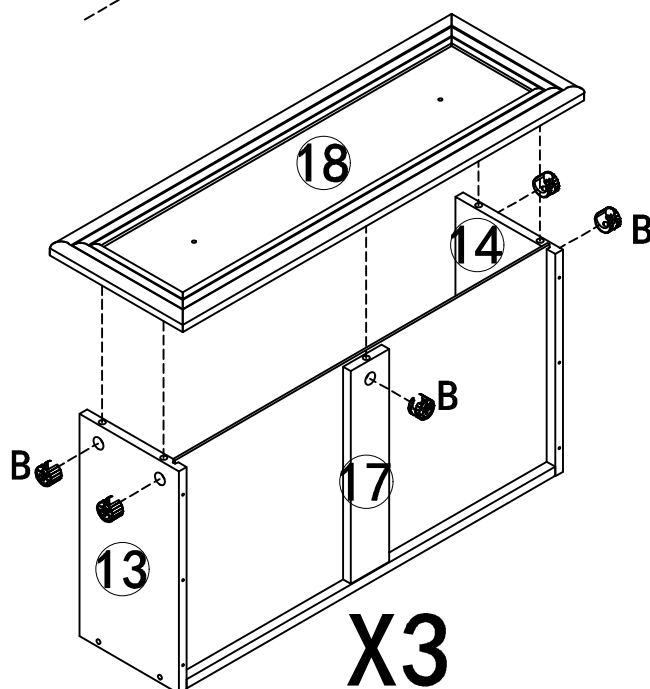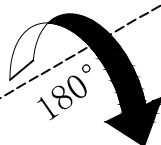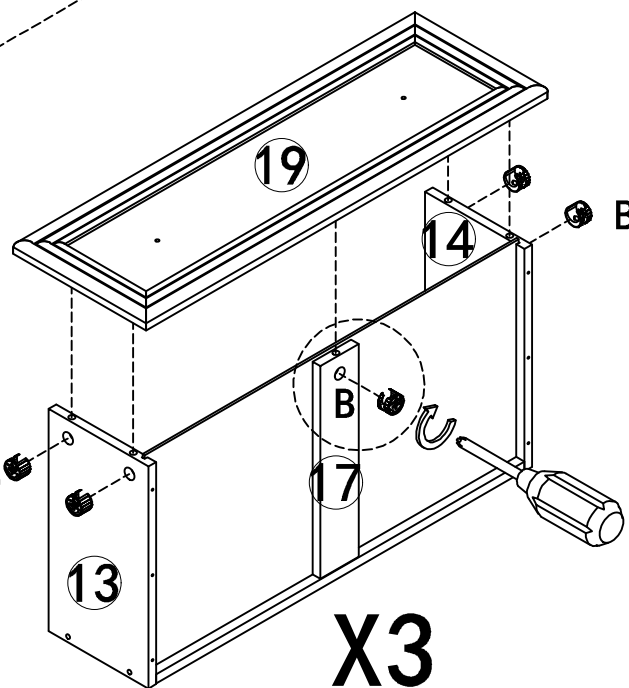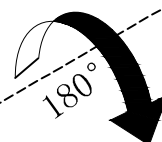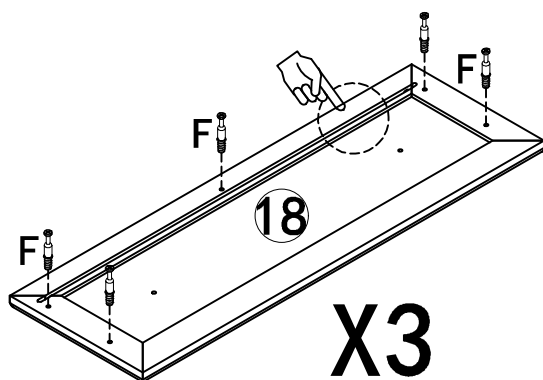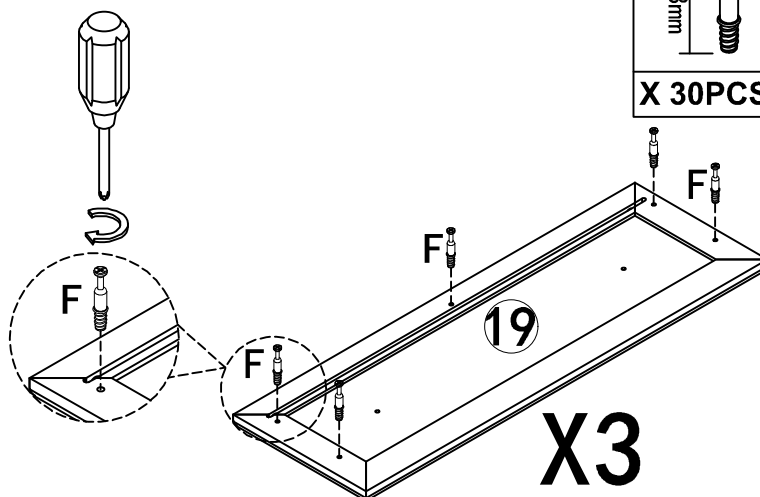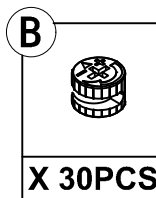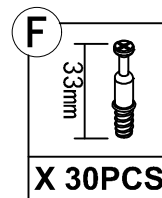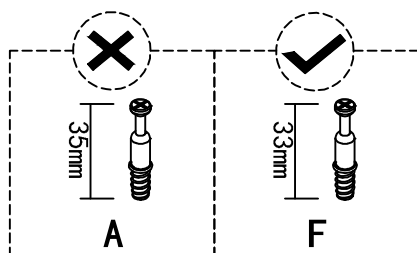


STEP 19

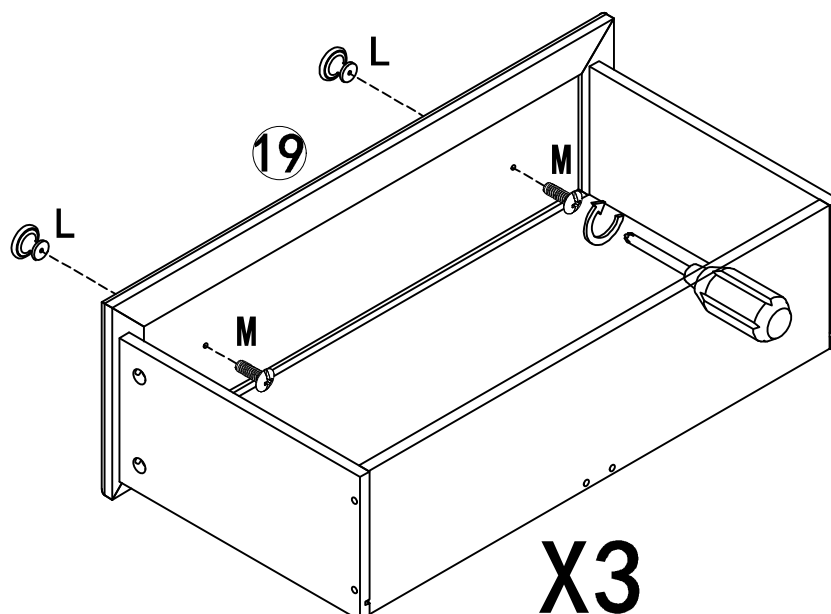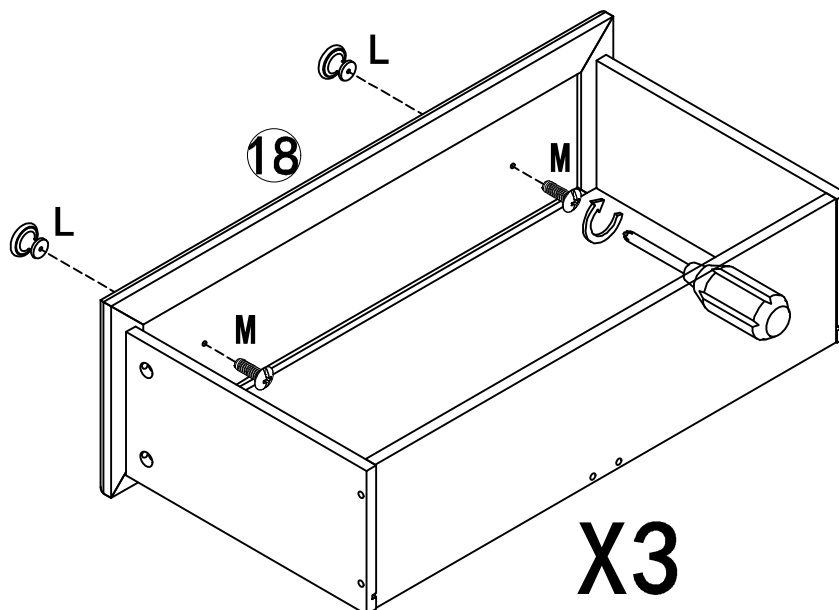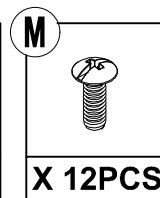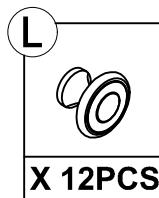

STEP 20

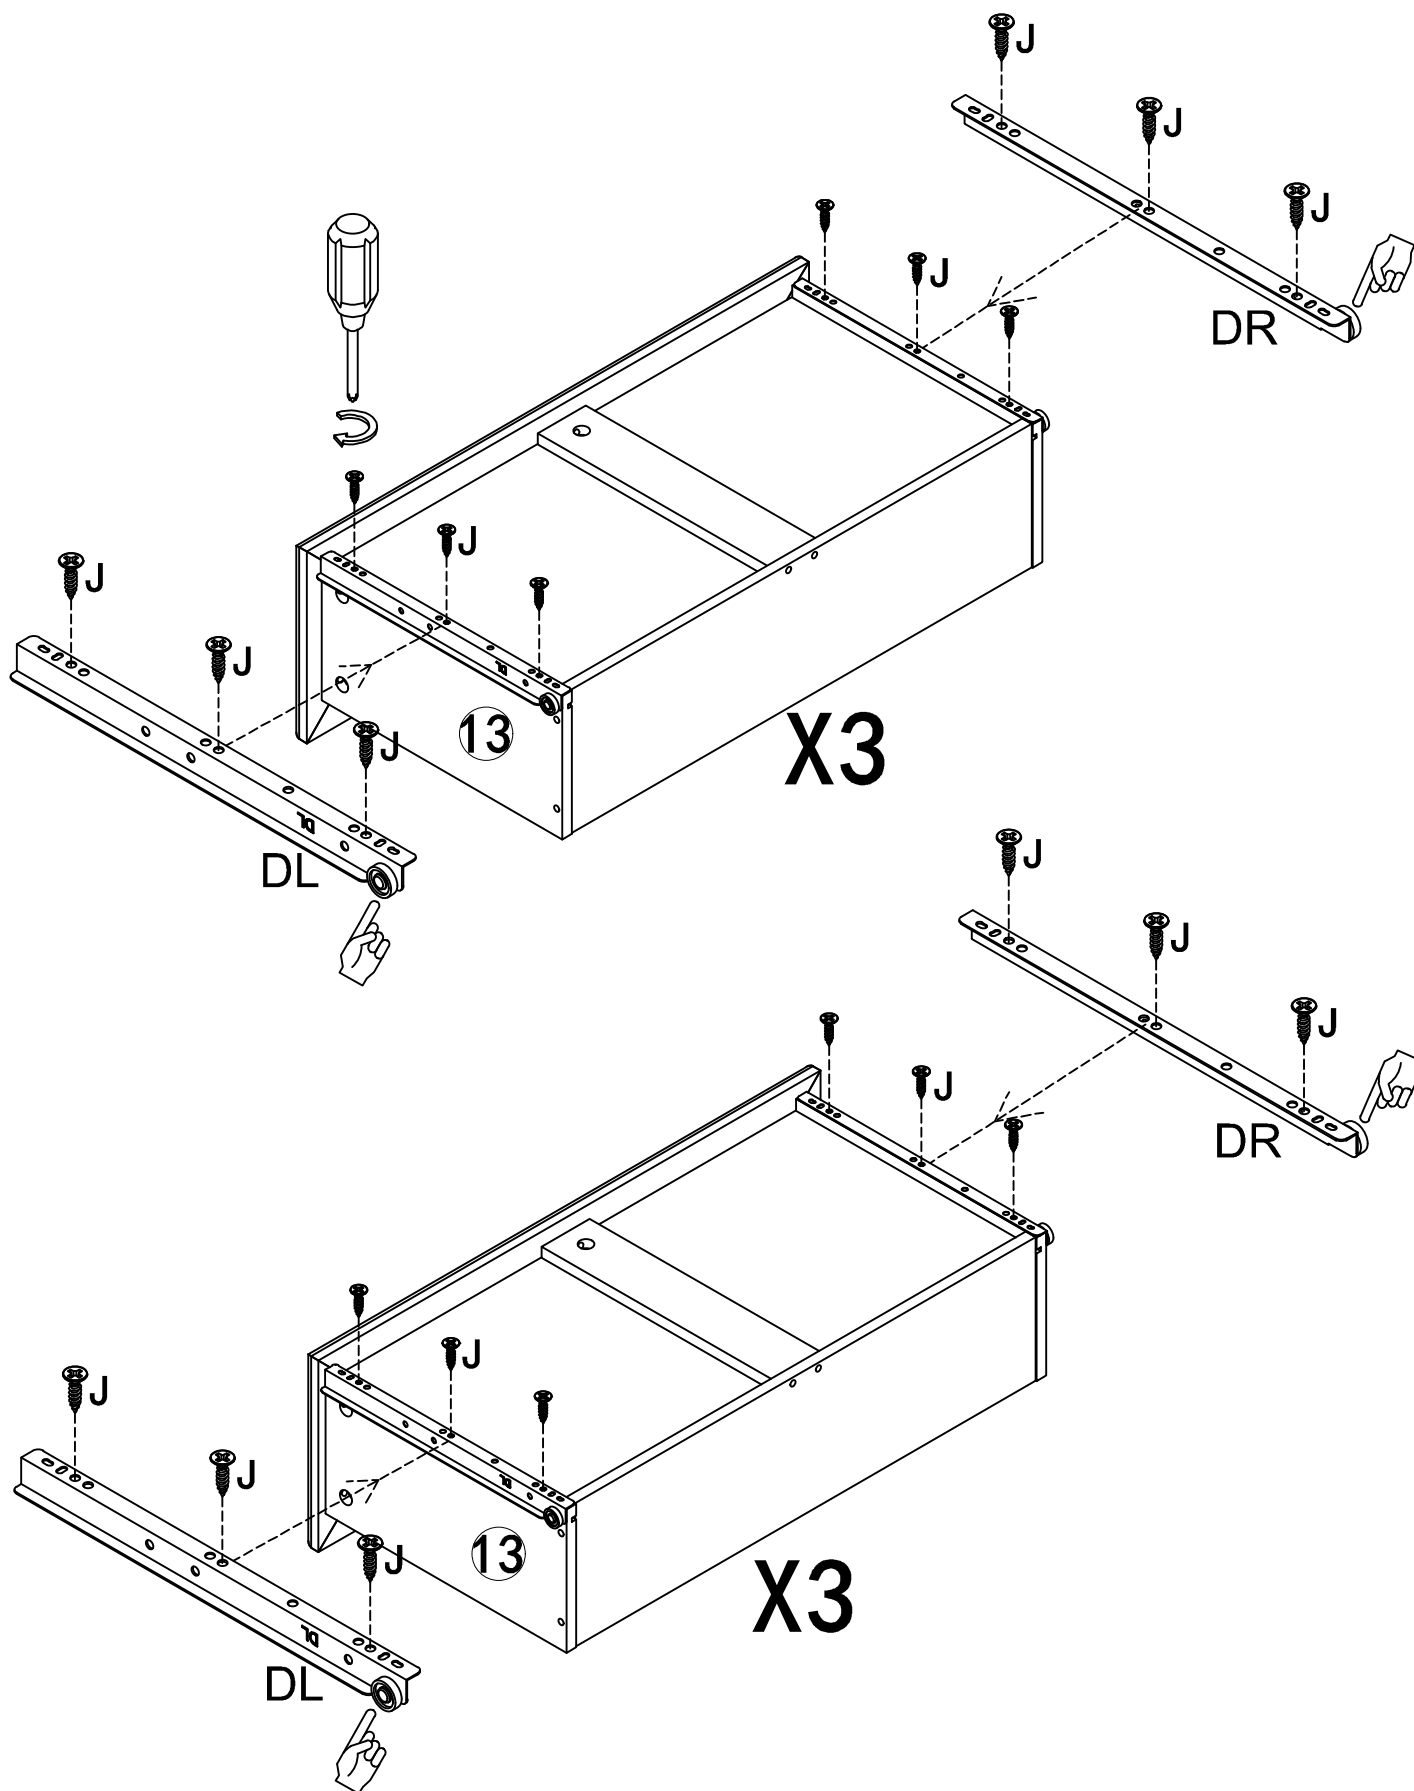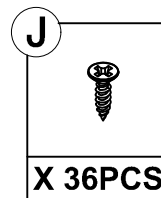

STEP 21

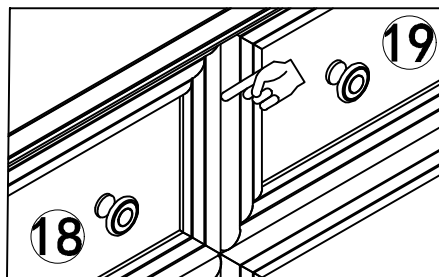

Note: Please insert the drawer into the corresponding position according to the number

