


WALKER EDISON

®

Accent Cabinet

SKU# WEBRI31444DB1

SKU# WEBRI31444AW1

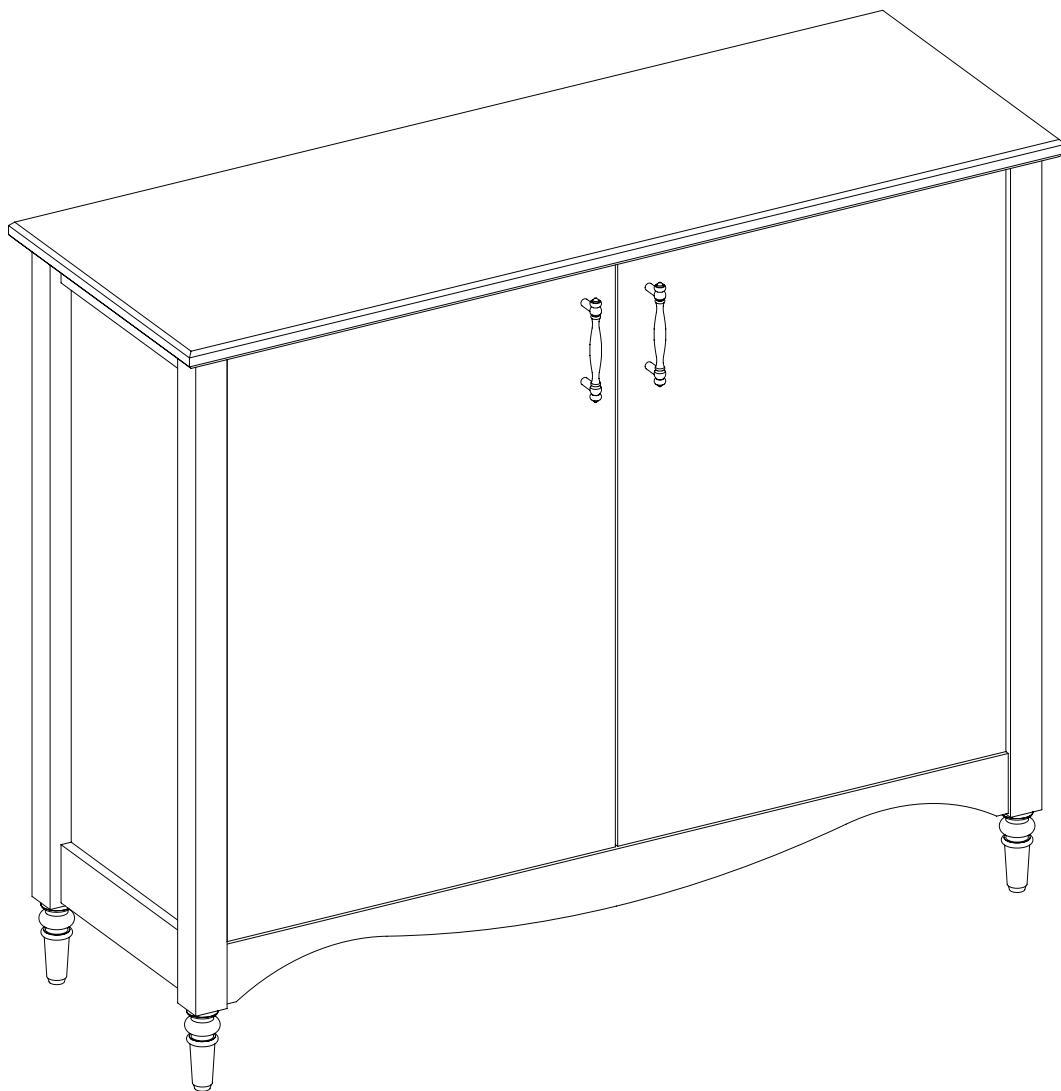

For Residential Use Only


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

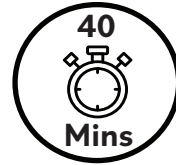

People recommended for assembly

Make it a team effort! Grab a friend for quicker, easier assembly.

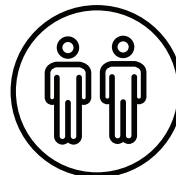

2 People Build

Tools Needed

Grab a Phillips head screwdriver to conquer this assembly.
Phillips head screwdriver is not included.



Use power tools with caution


You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.






Scan to get assembly tips and help!

WE Parts List

Part Number	Description	Quantity
A	Bottom Panel	1
B	Bottom Panel Front rail	1
C	Bottom Panel Back rail	1
D	Left Side Panel	1
E	Right Side Panel	1
F	Front Top Rail	1
G	Top Panel	1
H	Front Top Rail	1
I	Adjustable Shelf	1
J	Adjustable Shelf Front rail	1
K	Left Door	1
L	Right Door	1

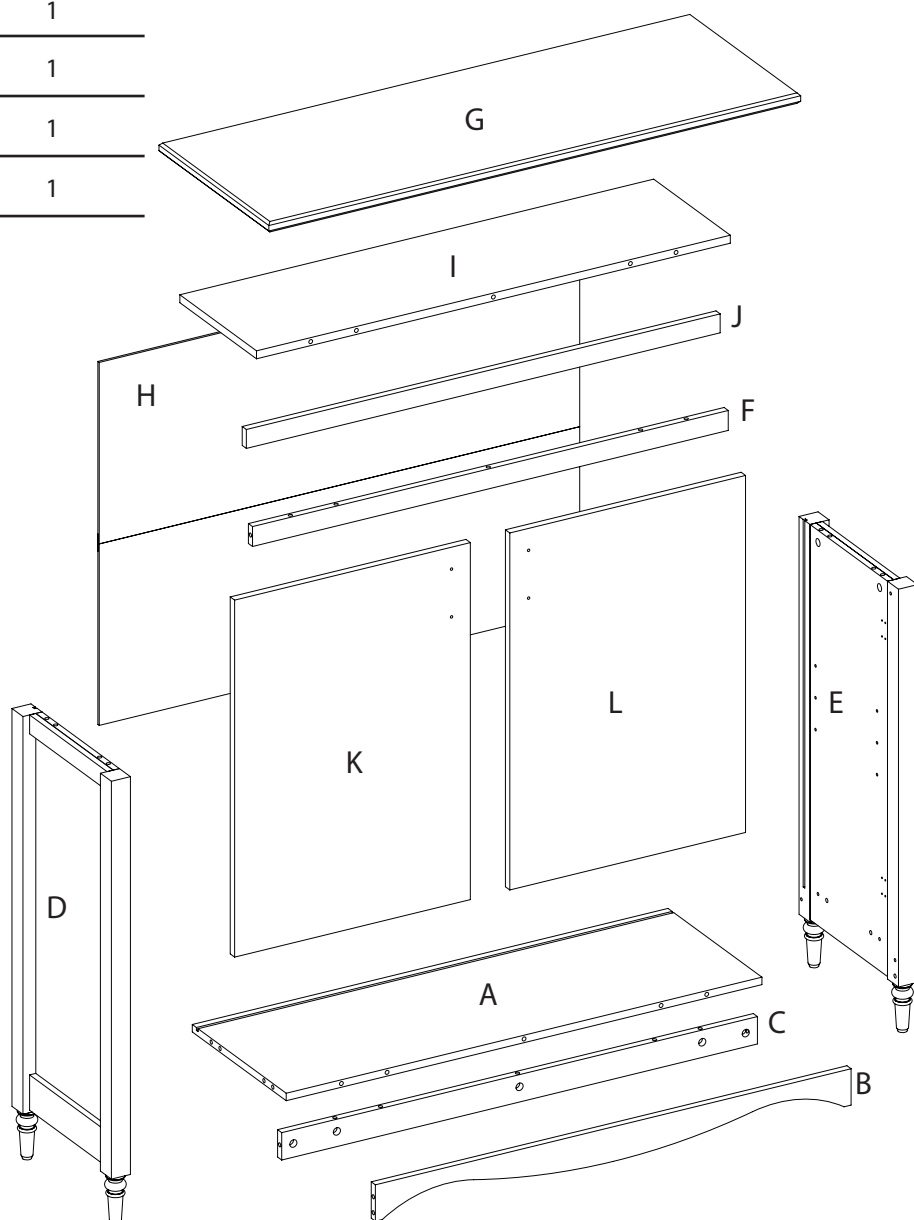

WE Hardware List

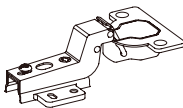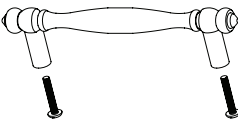	Part	Size	Name	Quantity	Part code
AA		Ø6X34MM	Cam Bolt	26	PC-KDBZNCH34
BB			Cam Lock	26	PC-KDCZNCH11
CC		Ø8X30MM	Wood Dowels	18	PH-DWLNTL001
DD			Back Panel Bracket	10	PH-BKTBRW017
EE		Ø30MM	Cover	4	PH-KDPXXX011
FF		Ø5X16MM	Shelf Pin	4	PC-SPNND5L16
GG			Euro Hinge	4	PH-HNGPC35CS95
HH		Ø3.5X15MM	Screw	24	PH-SCRNKL008
II		Ø10.5	Door Bumper	2	PH-BMPCLR001
JJ			Handle with screw	2	PWEBRI31444-JJ
KK			Tipping Restraint Hardware	1	PH-FTRHH510


*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

WE Installed Replacements Parts


Part	Size	Name	Quantity	Part code
LL		Threaded Insert	8	PH-THRZNC001
MM		Drawer Slide	4	PWEBRI31444-MM

Step 1

Let's get started! First, screw the cam bolts (AA) into the pre-drilled holes in the bottom panel (A) and bottom panel front rail (B) as shown in the image below.

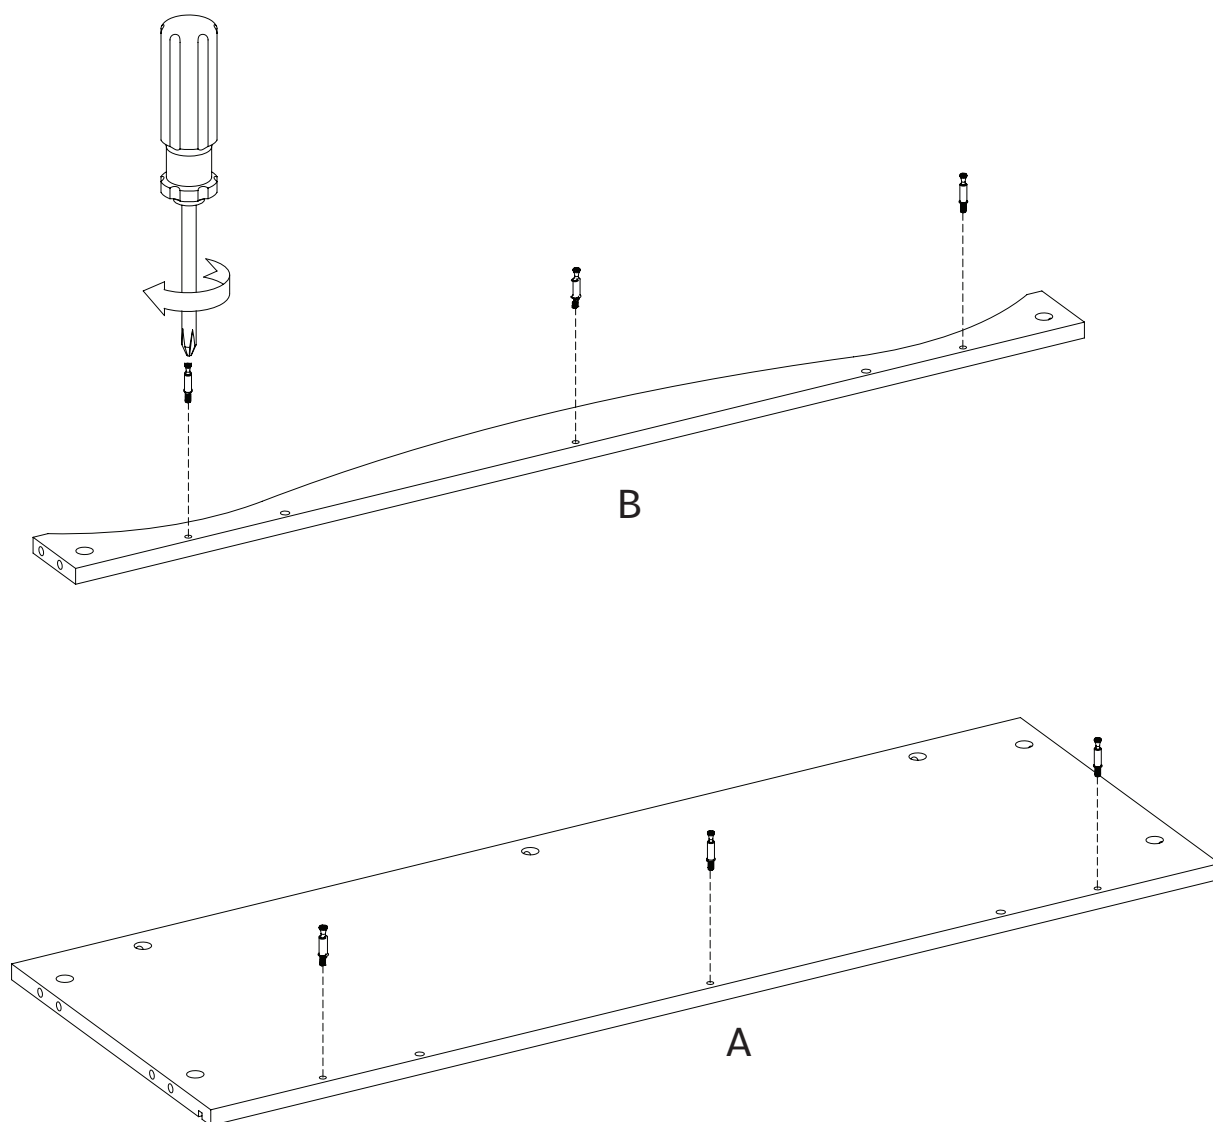


AA



[x6]

Step 2

Insert the wood dowels (CC) into the pre-drilled holes in the bottom panel (A).

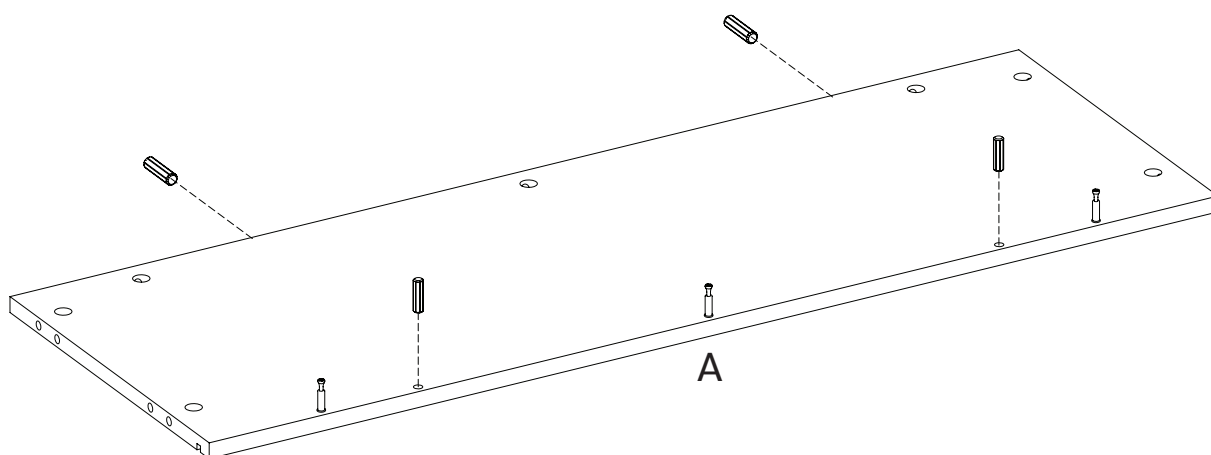



CC



[x4]

Step 3

Align the cam bolts on bottom panel front rail (B) with the pre-drilled holes on bottom panel (A), then use the cam locks (BB) to fasten front rail (B) and bottom panel (A) together.

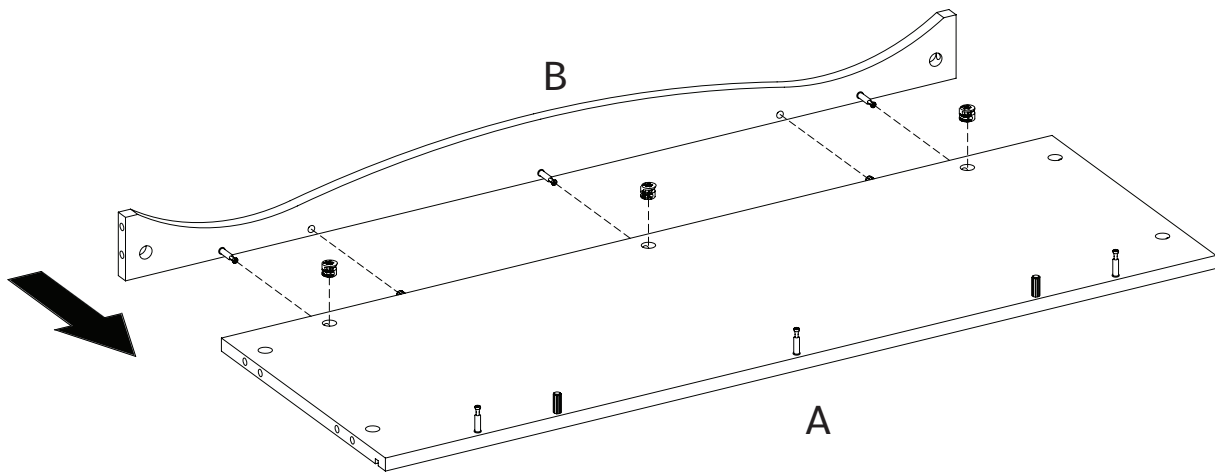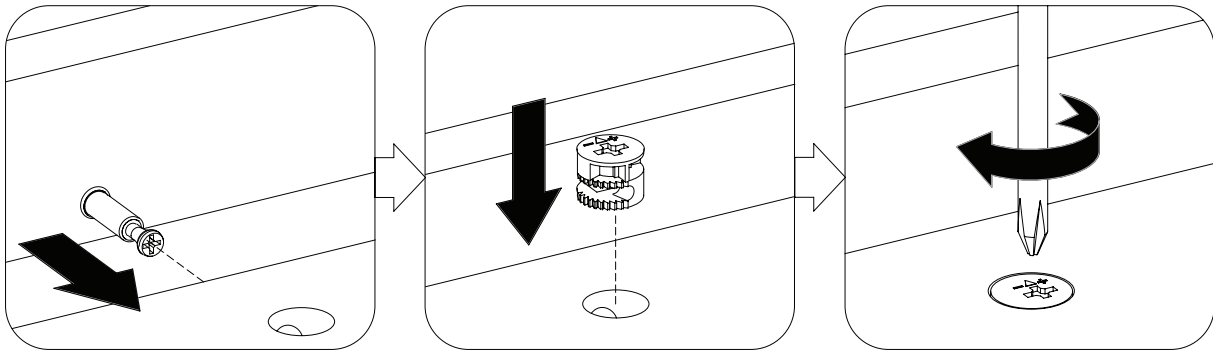



BB



[x3]

Step 4

Attach the bottom panel back rail (C) to the bottom panel (A), align the cam bolts to the pre-drilled holes of the bottom panel back rail (C), then secure it to the bottom panel (A) using the cam locks (BB).

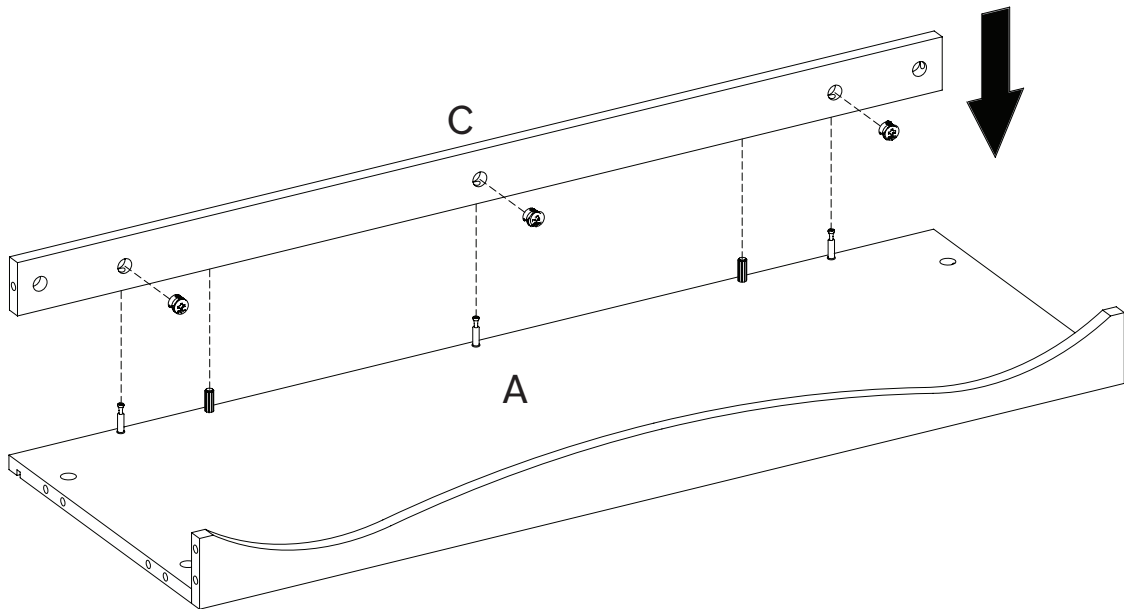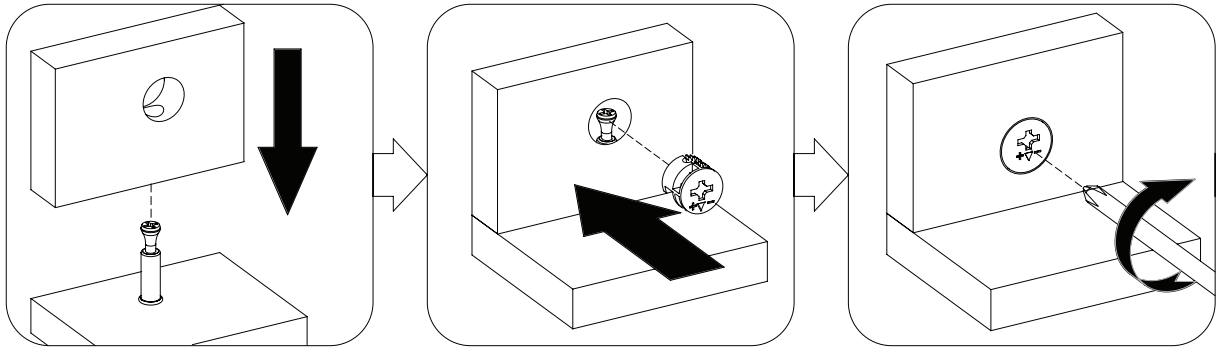



BB



[x3]

Step 5

Screw the cam bolts (AA) into the pre-drilled holes in the left side panel (D) and right side panel (E) as shown in the image below.

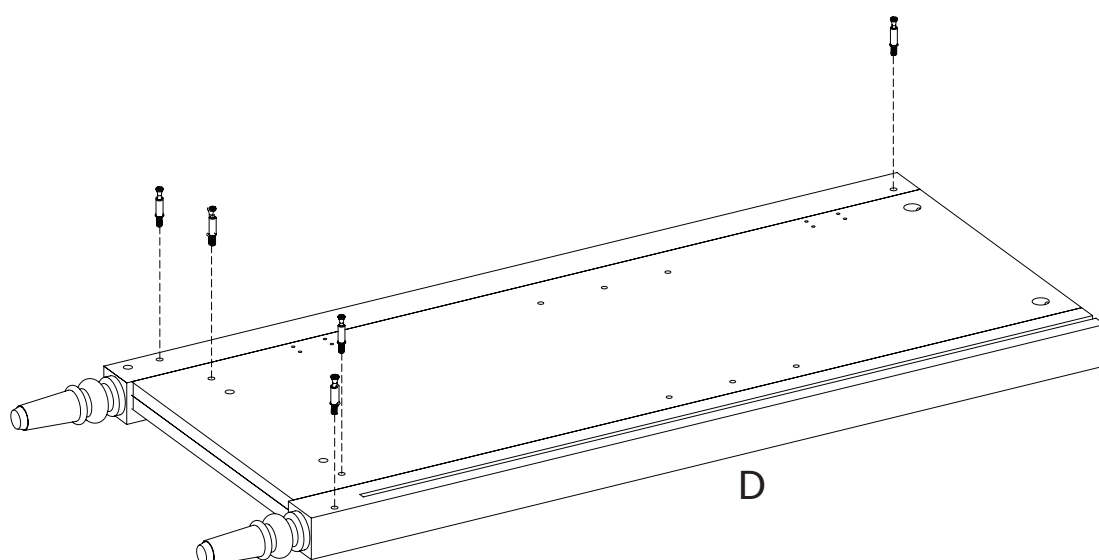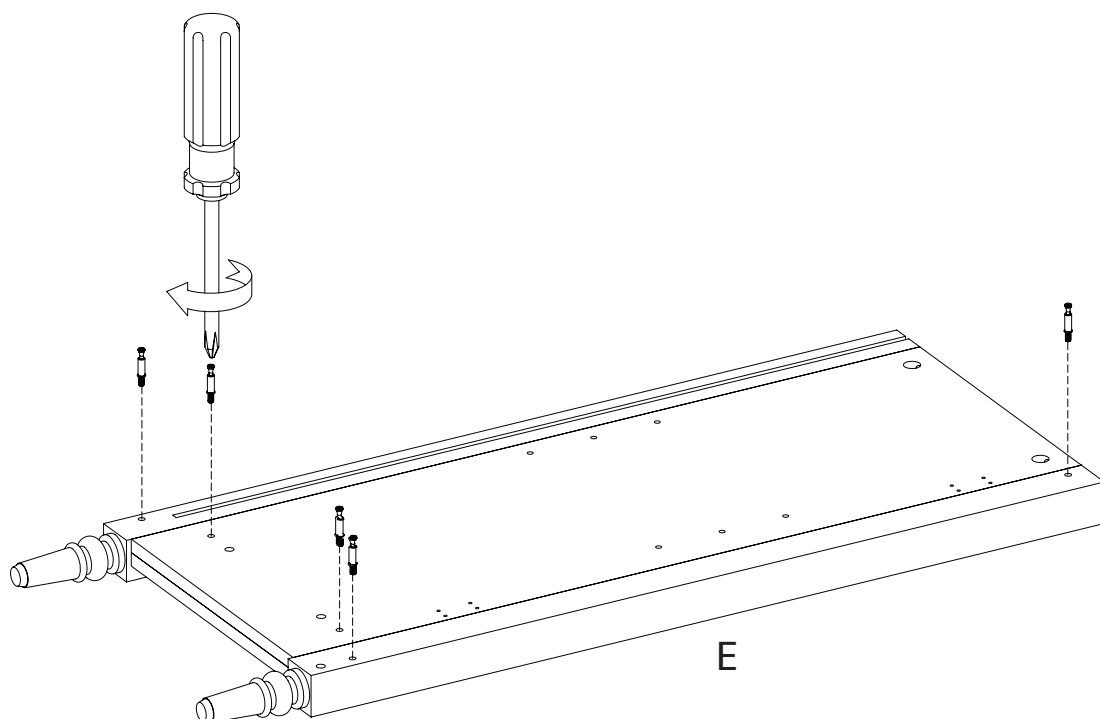


AA



[x10]

Step 6

Insert the wood dowels (CC) into the pre-drilled holes in the left side panel (D).

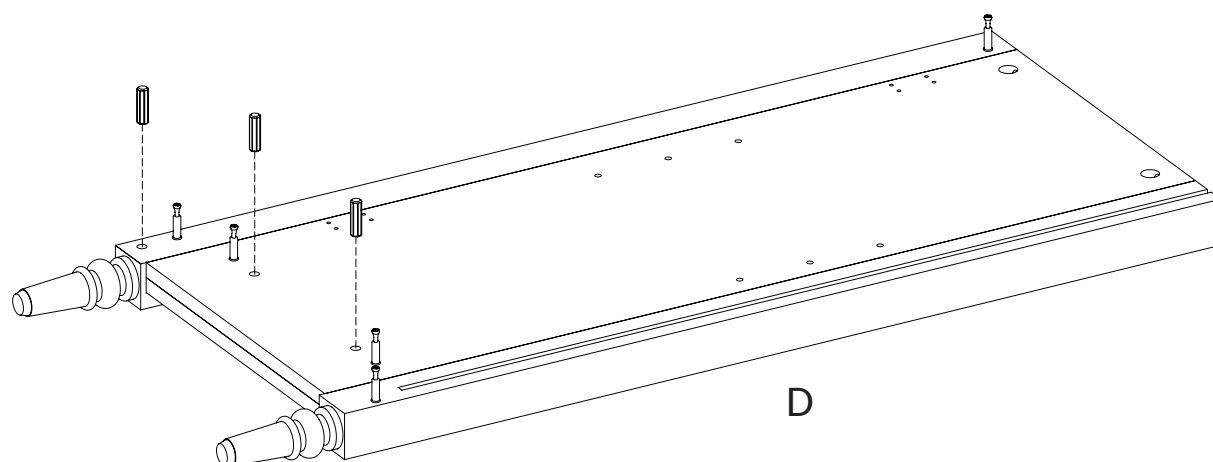



CC



[x3]

Step 7

Align the cam bolts on left side panel (D) with the pre-drilled holes on the bottom panel (A) and front top rail (F), then use the cam locks (BB) to fasten them together.

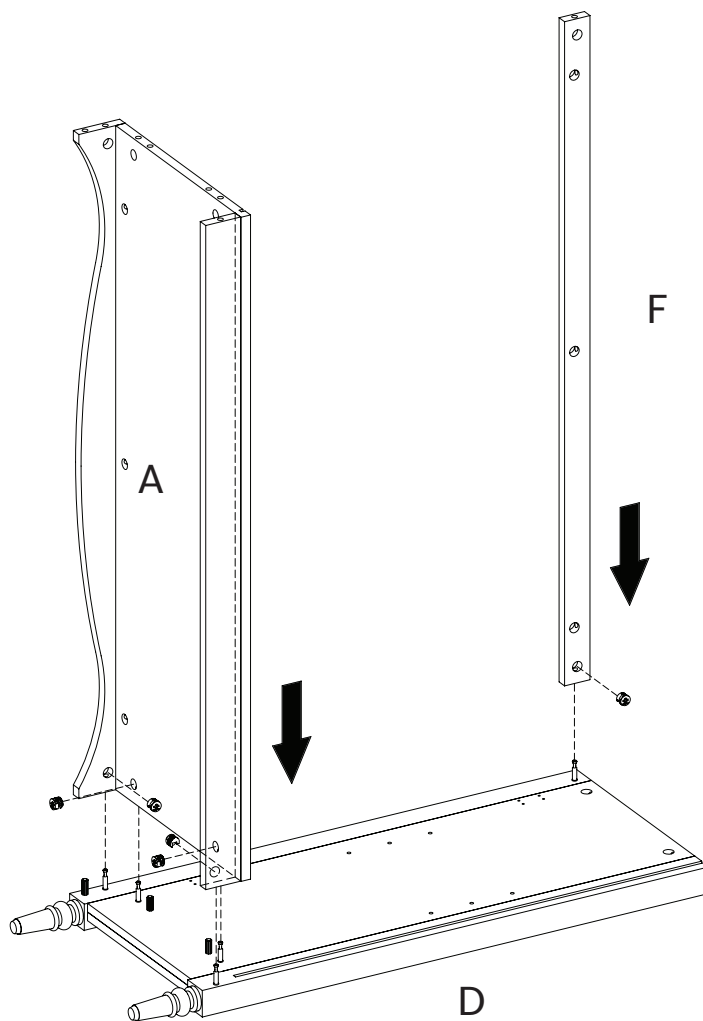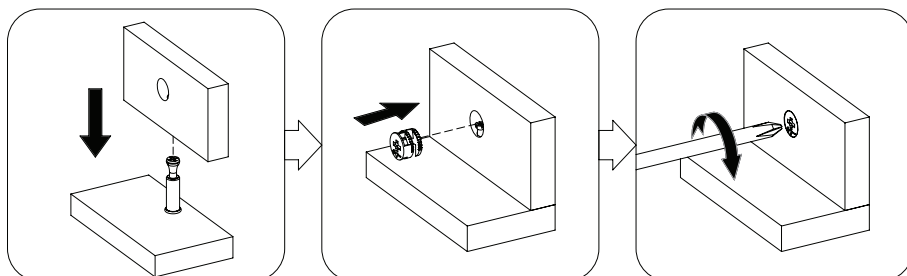


BB



[x5]

Step 8

Insert the wood dowels (CC) into the pre-drilled holes on the bottom panel (A).

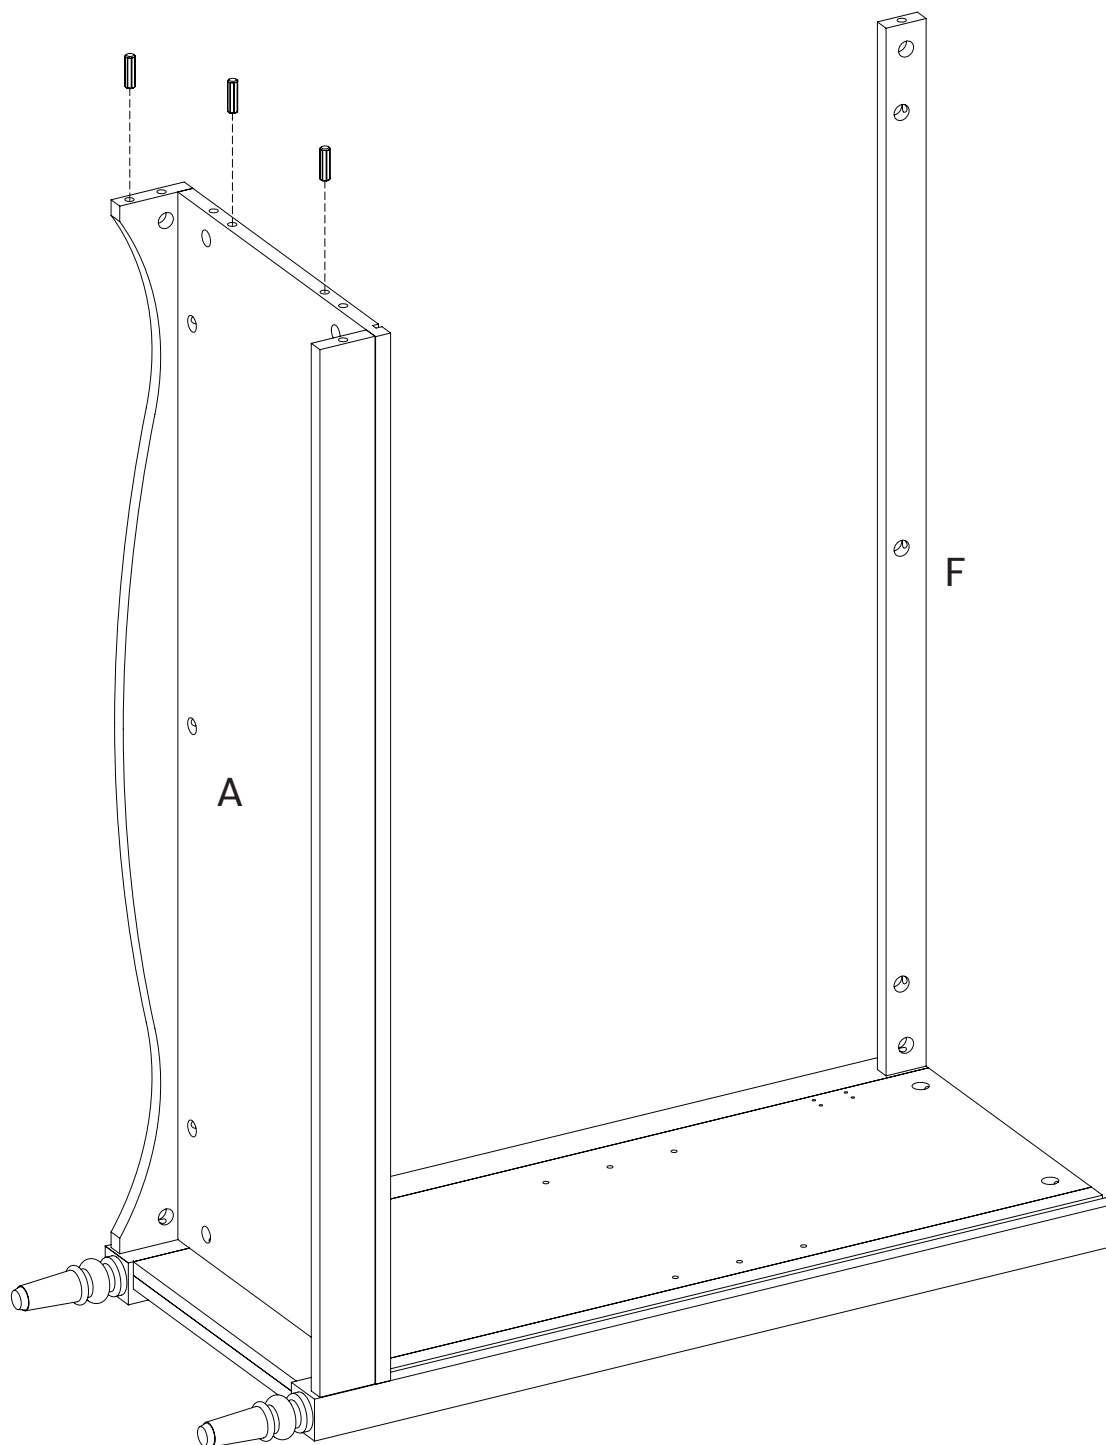



CC



[x3]

Step 9

Align the cam bolts on right side panel (E) with the pre-drilled holes on the bottom panel (A) and front top rail (F), then use the cam locks (BB) to fasten them together.

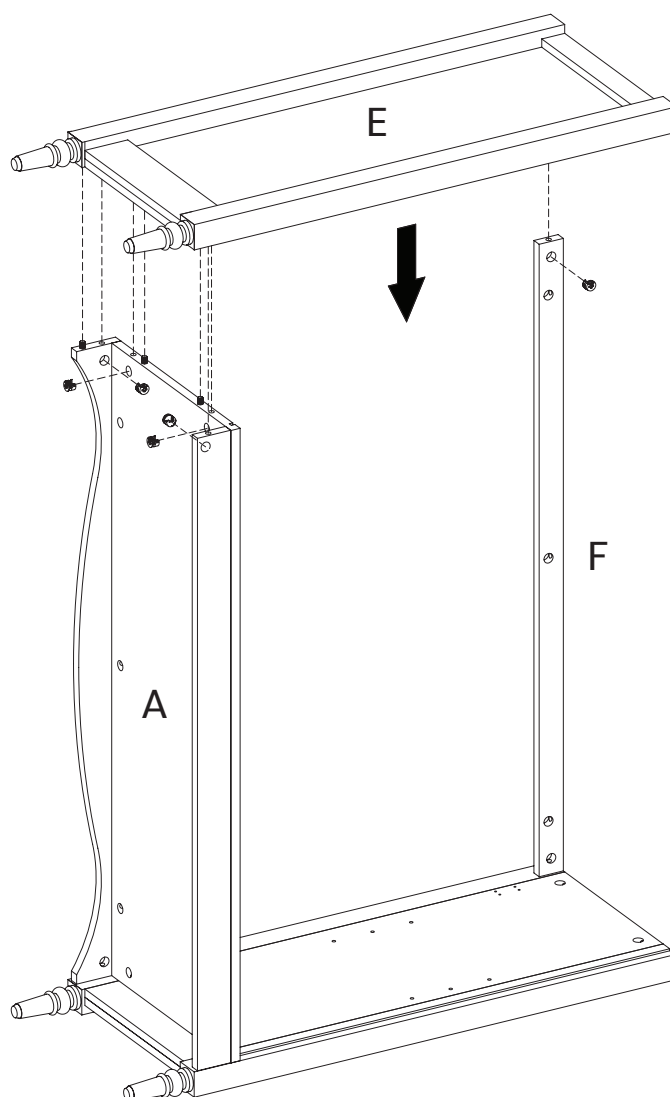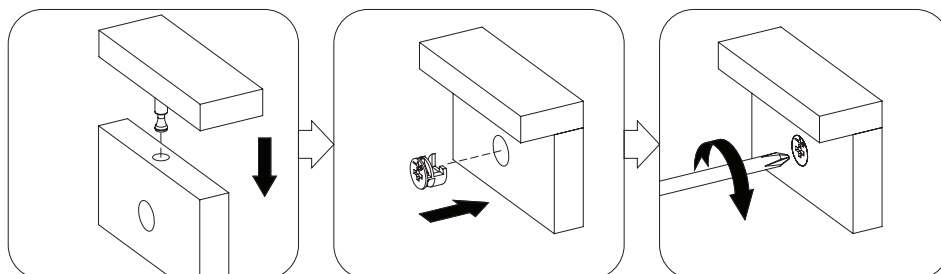


BB



[x5]


Step 10

Slide the back panel (H) into position as shown.

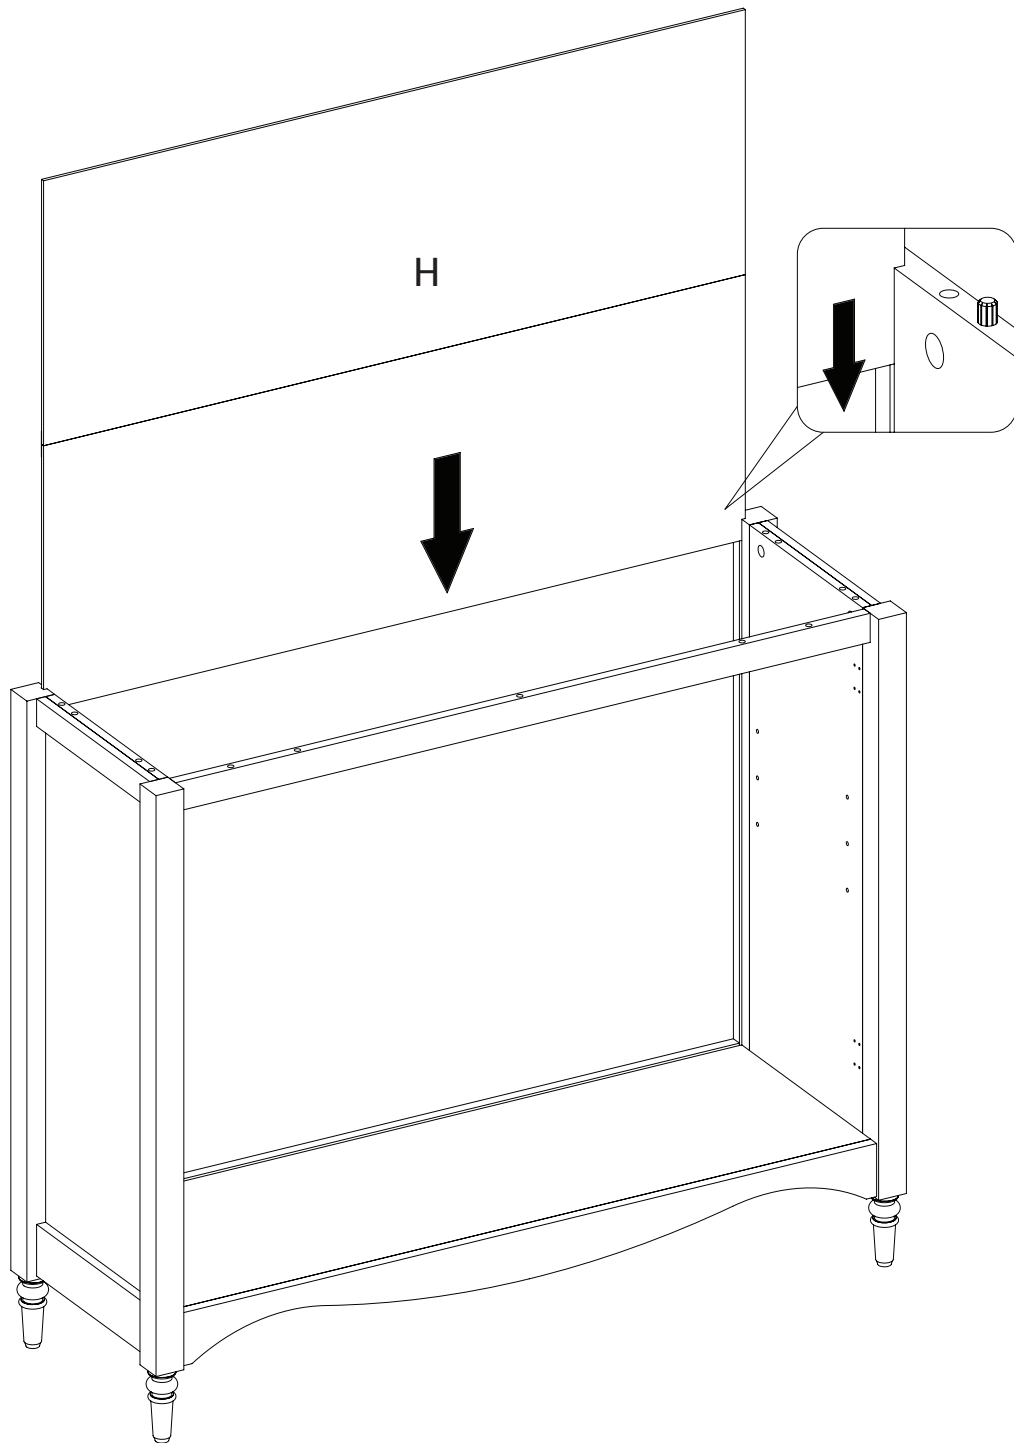

Step 11

Insert the wood dowels (CC) into the pre-drilled holes in the left side panel (D), right side panel (E) and front top rail (F).

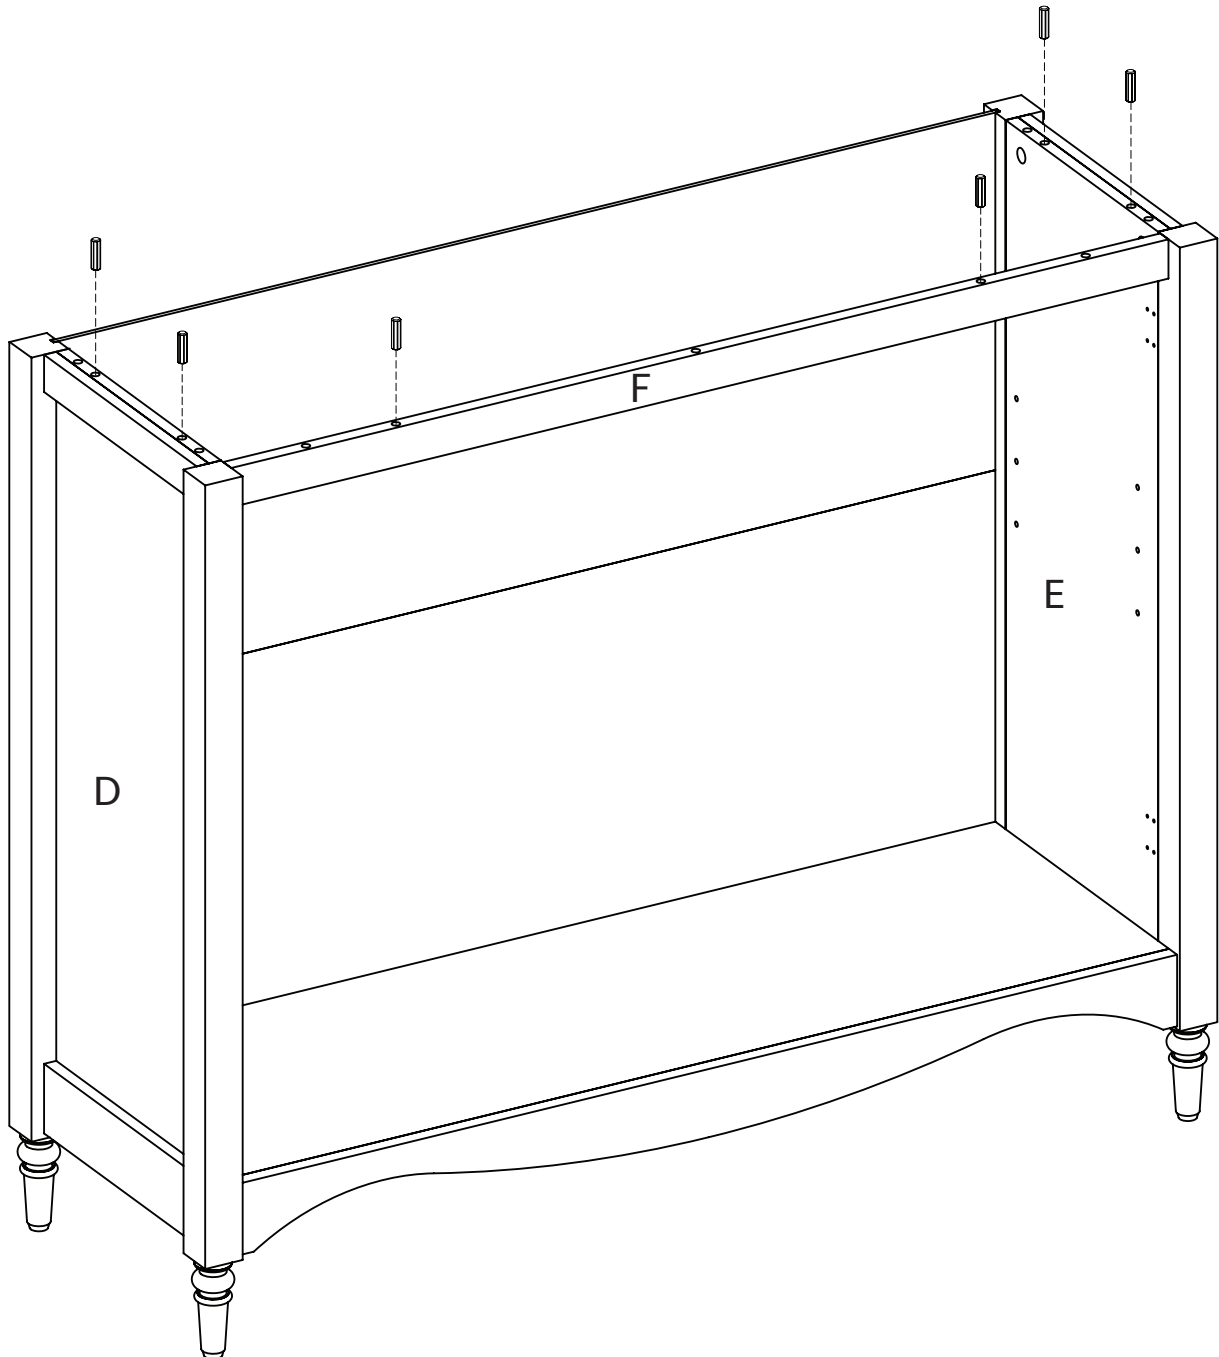


CC




[x6]

Step 12

Screw the cam bolts (AA) into the pre-drilled holes in the top panel (G).

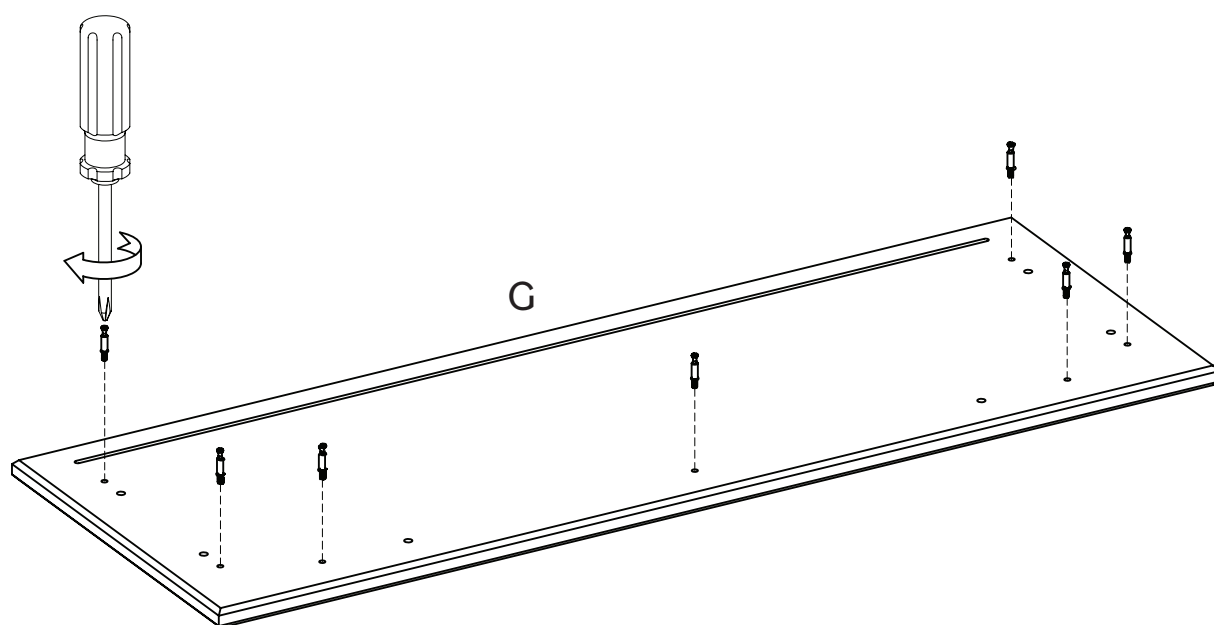



AA

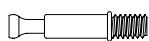

[x7]

Step 13

Align the cam bolts to the pre-drilled holes and attach the top panel (G) to the main assembly using the cam locks (BB).

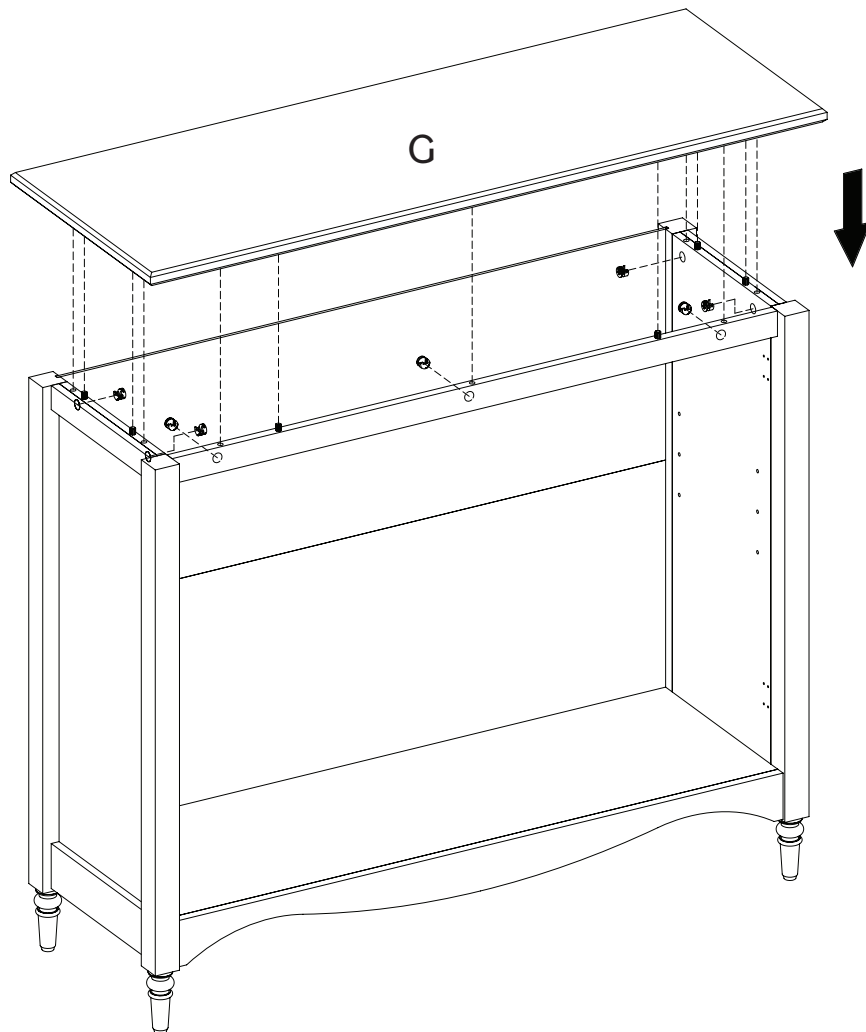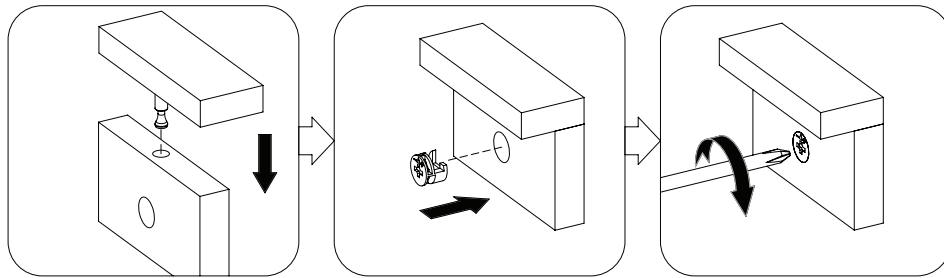


BB



[x7]

Step 14

Place the back panel bracket (DD) between the back panels and the grooves of the assembly as shown. Fasten each back panel bracket (DD) using pre-attached screws.

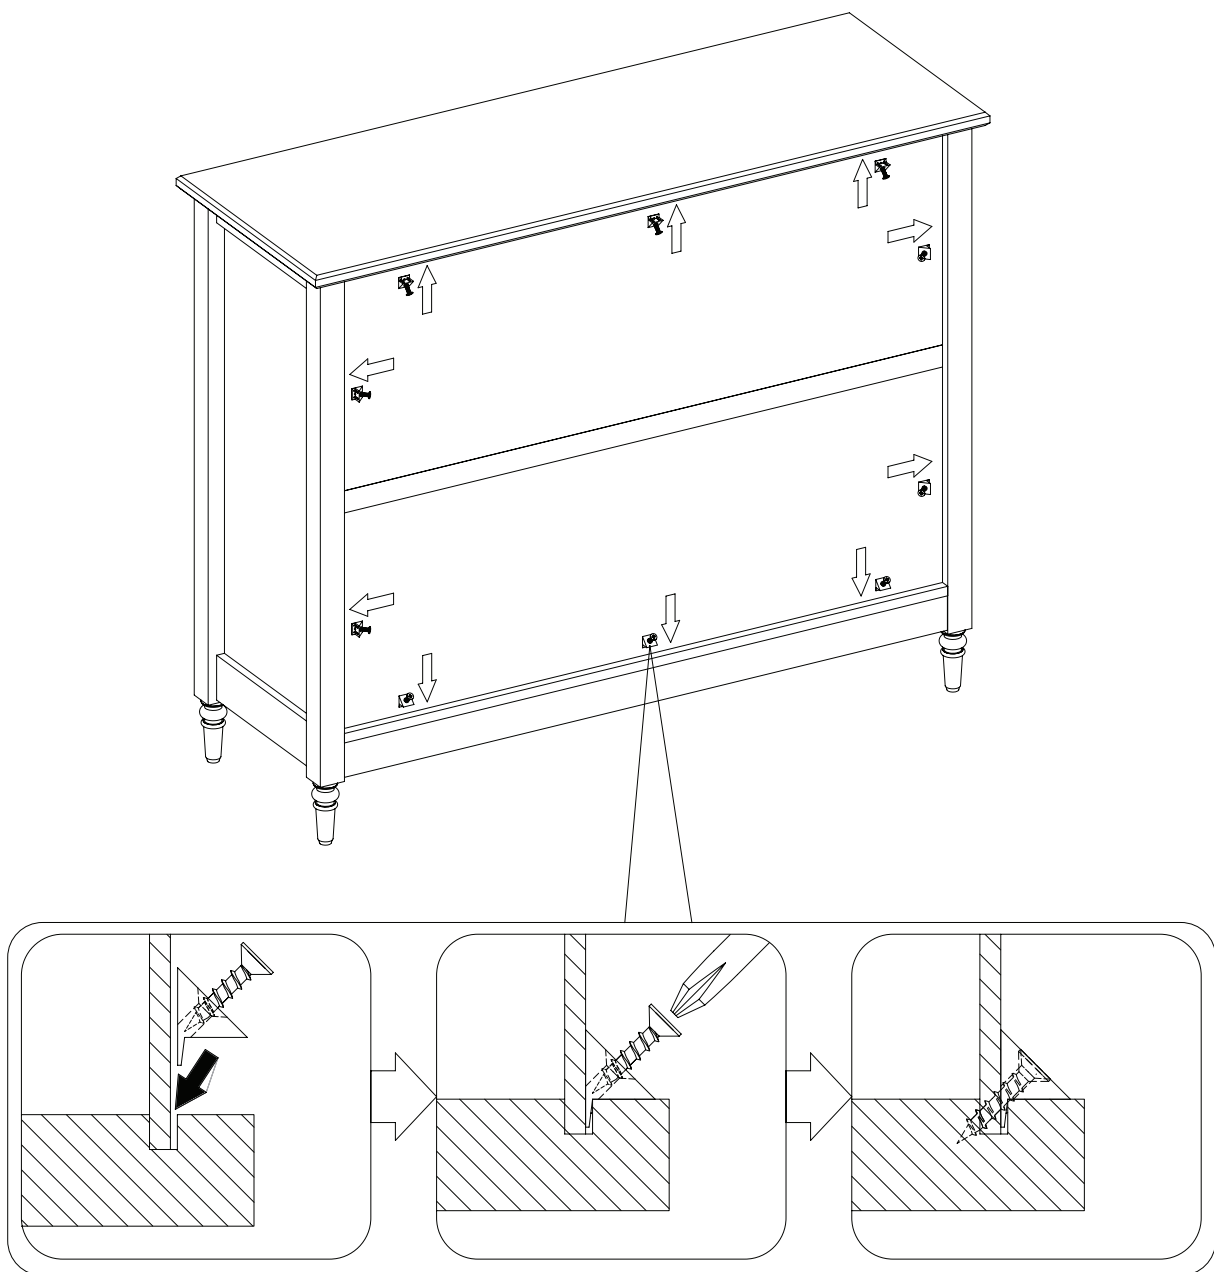


DD



[x10]

Step 15

Place the cover (EE) over the cam locks as image shown.

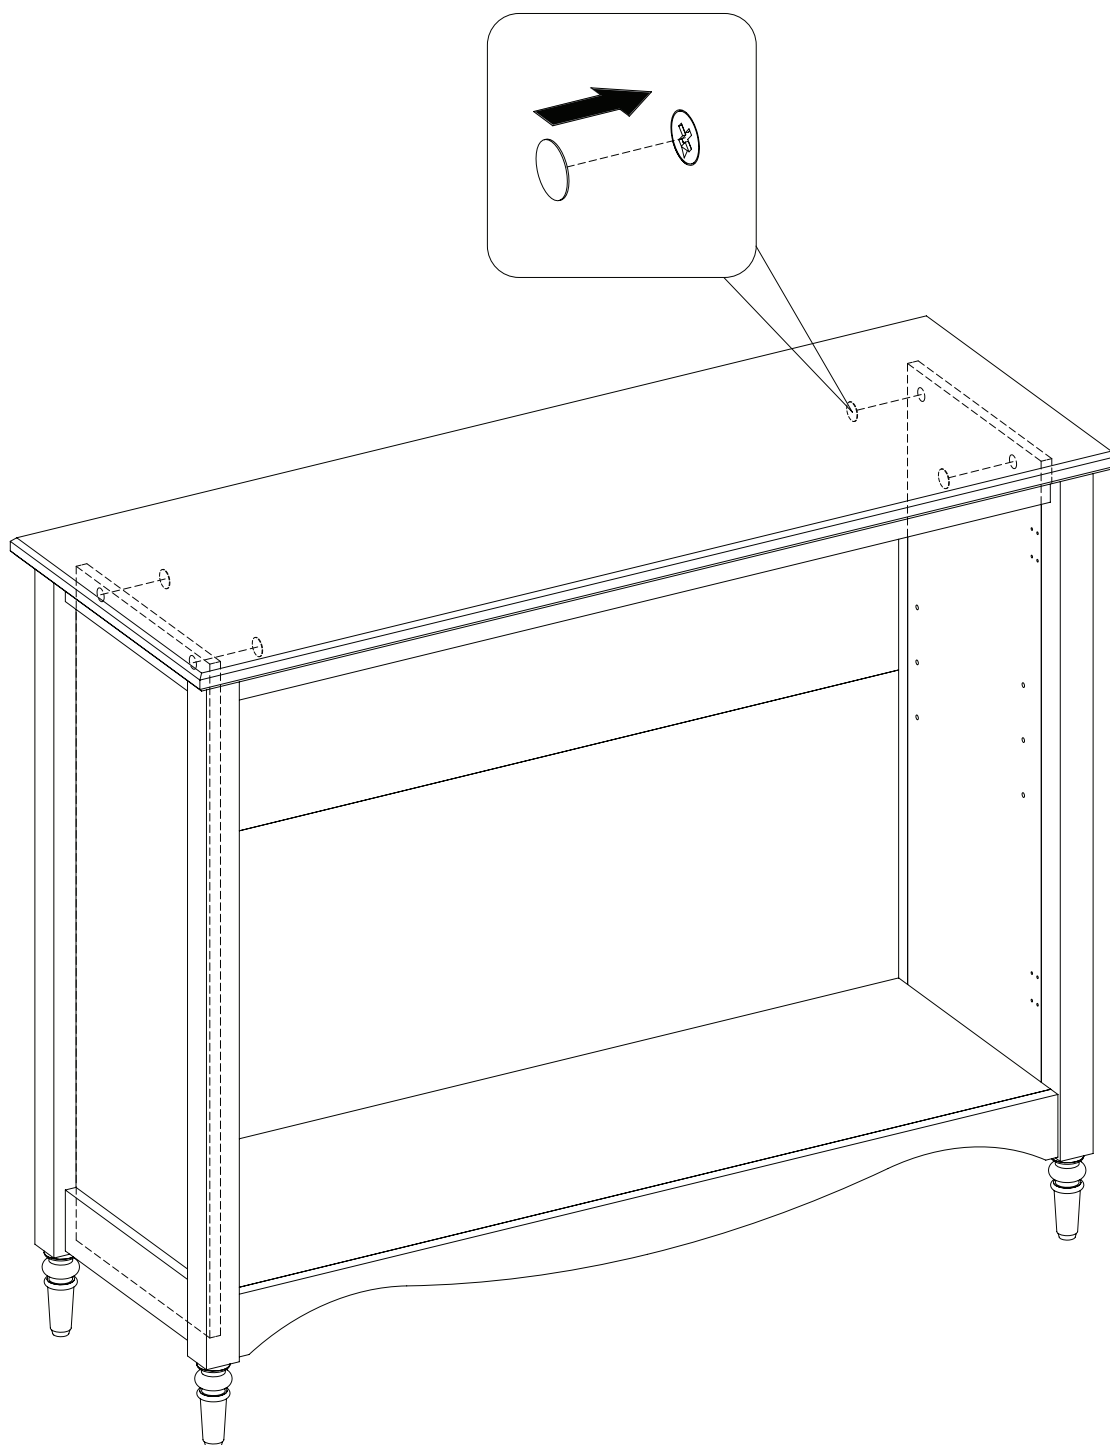



EE




[x4]

Step 16

Screw the cam bolts (AA) into the pre-drilled holes in the adjustable shelf front rail (J). Insert the wood dowels (CC) into the pre-drilled holes on the adjustable shelf (I).

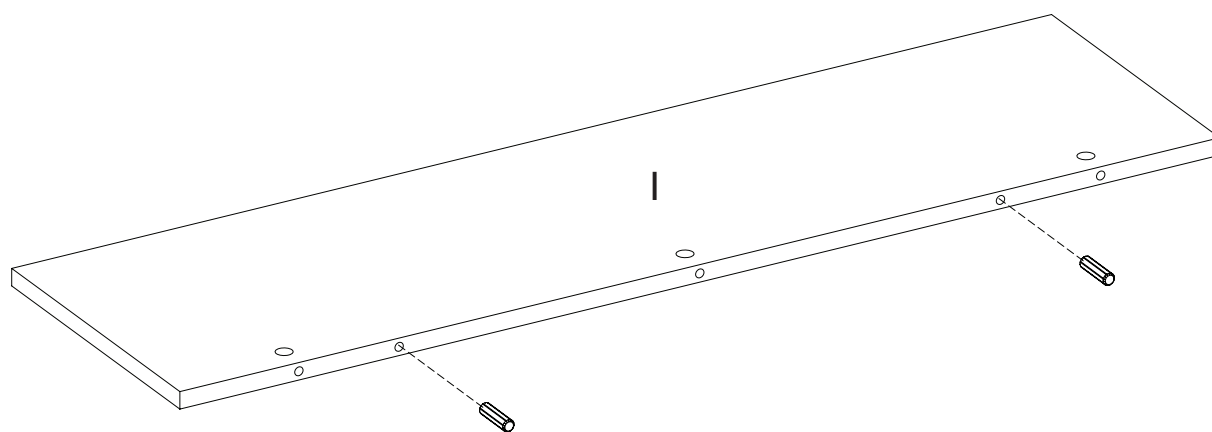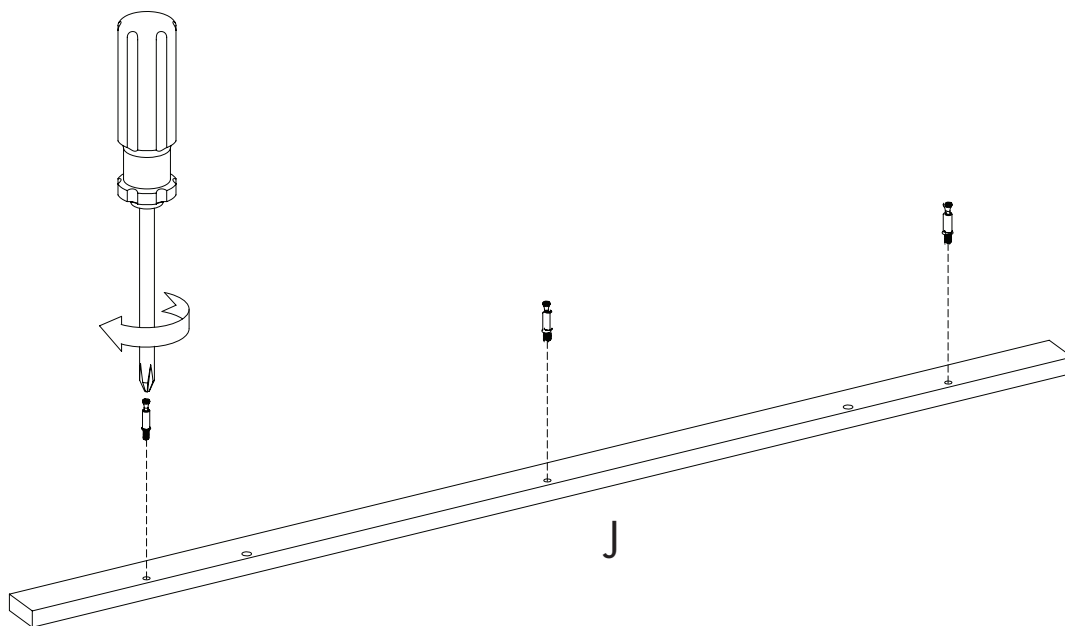

AA

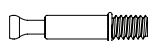

[x3]



CC



[x2]

Step 17

Align the cam bolts on adjustable shelf front rail (J) with the pre-drilled holes on adjustable shelf (I), then use the cam locks (BB) to fasten adjustable shelf front rail (J) and adjustable shelf (I) together.

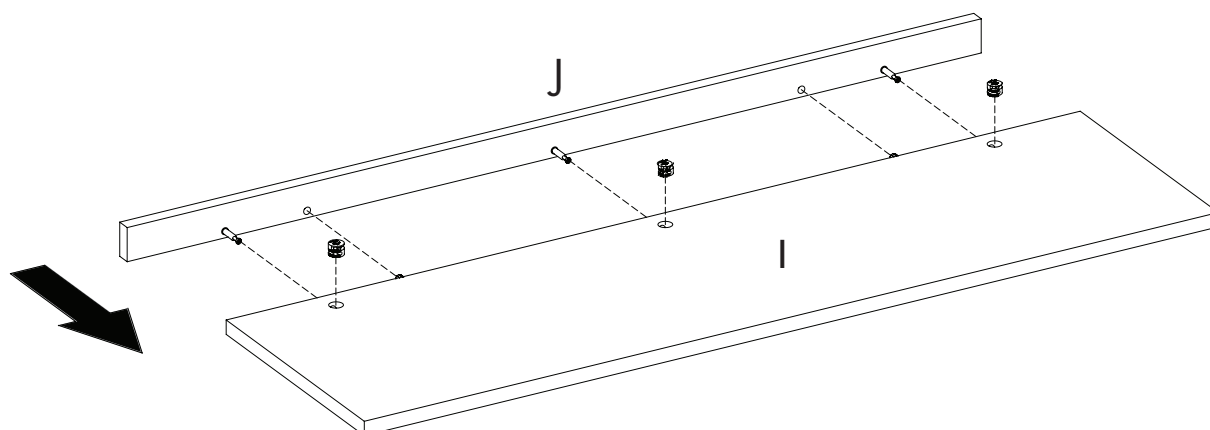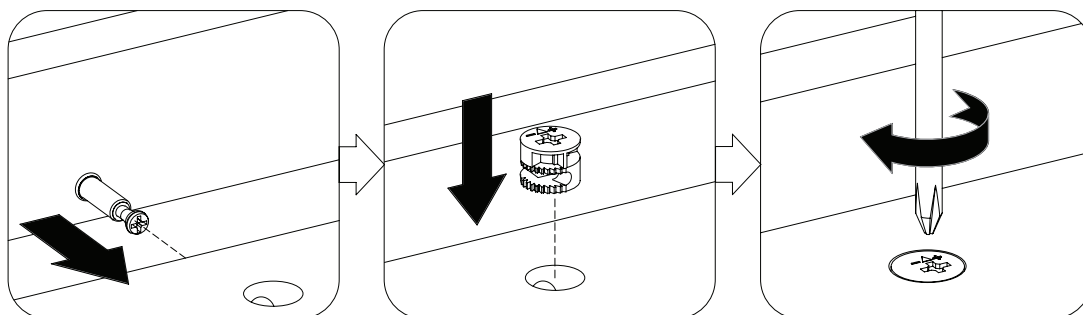



BB



[x3]

Step 18

Choose the shelf height as needed to insert the shelf pin (FF). then, put the adjustable shelf (I) on the shelf pin.

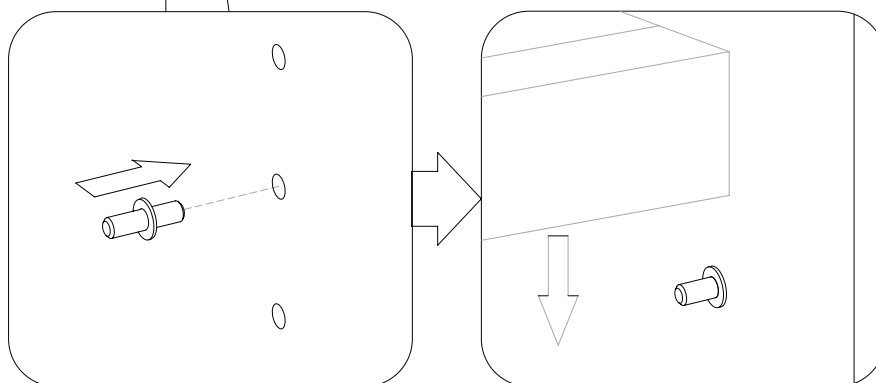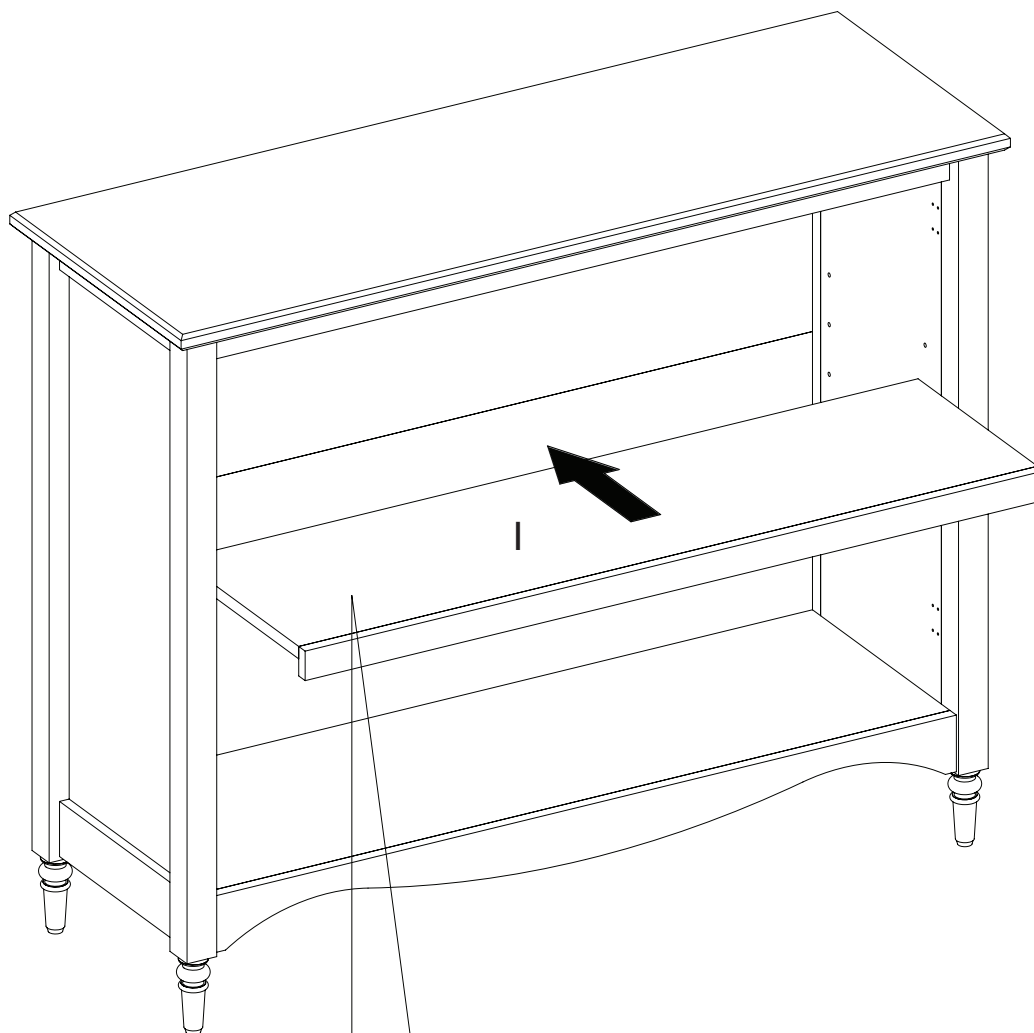


FF




[x4]

Step 19

Screw the euro hinge (GG) into the pre-drilled holes in the left door (K) and right door (L) with screws (HH). Then, place the door bumper (II) as shown.

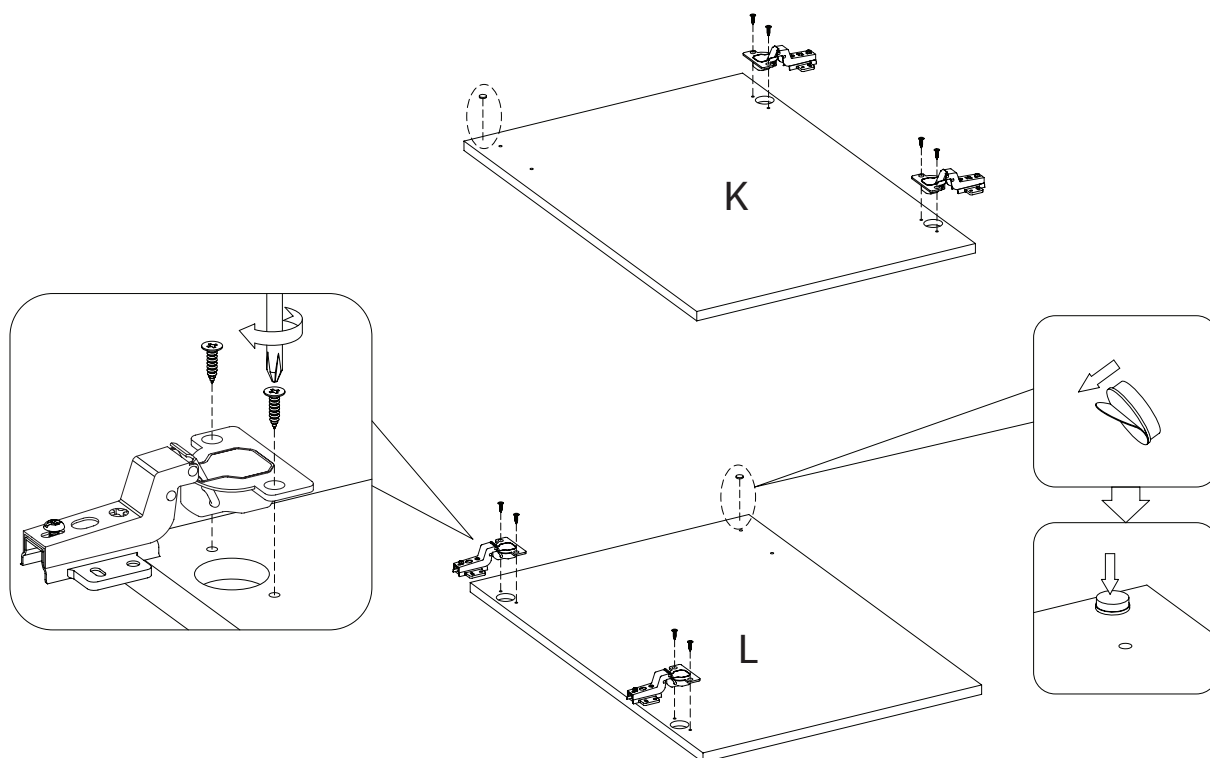

GG

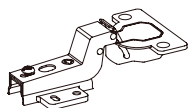

[x4]

HH



[x8]



II



[x4]



Step 20

Let's attach the handles. Align the handle (JJ) to the pre-drilled holes on the outside of the left door (K) and right door (L) and insert the screw on the other side to secure it in place.

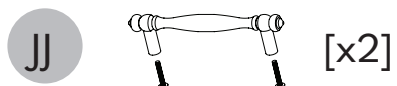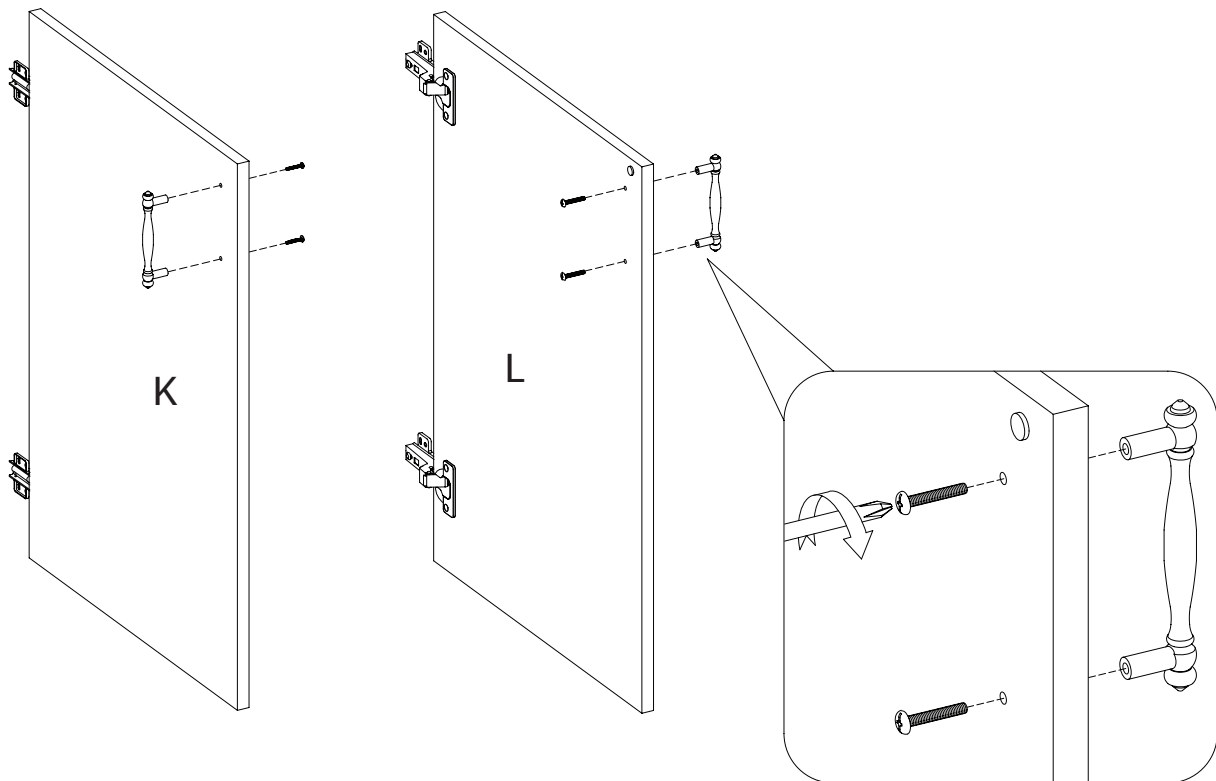

Step 21

Screw the assembled left door (K) and right door (L) into the pre-drilled holes in the assembled unit using the screw (HH) as shown.

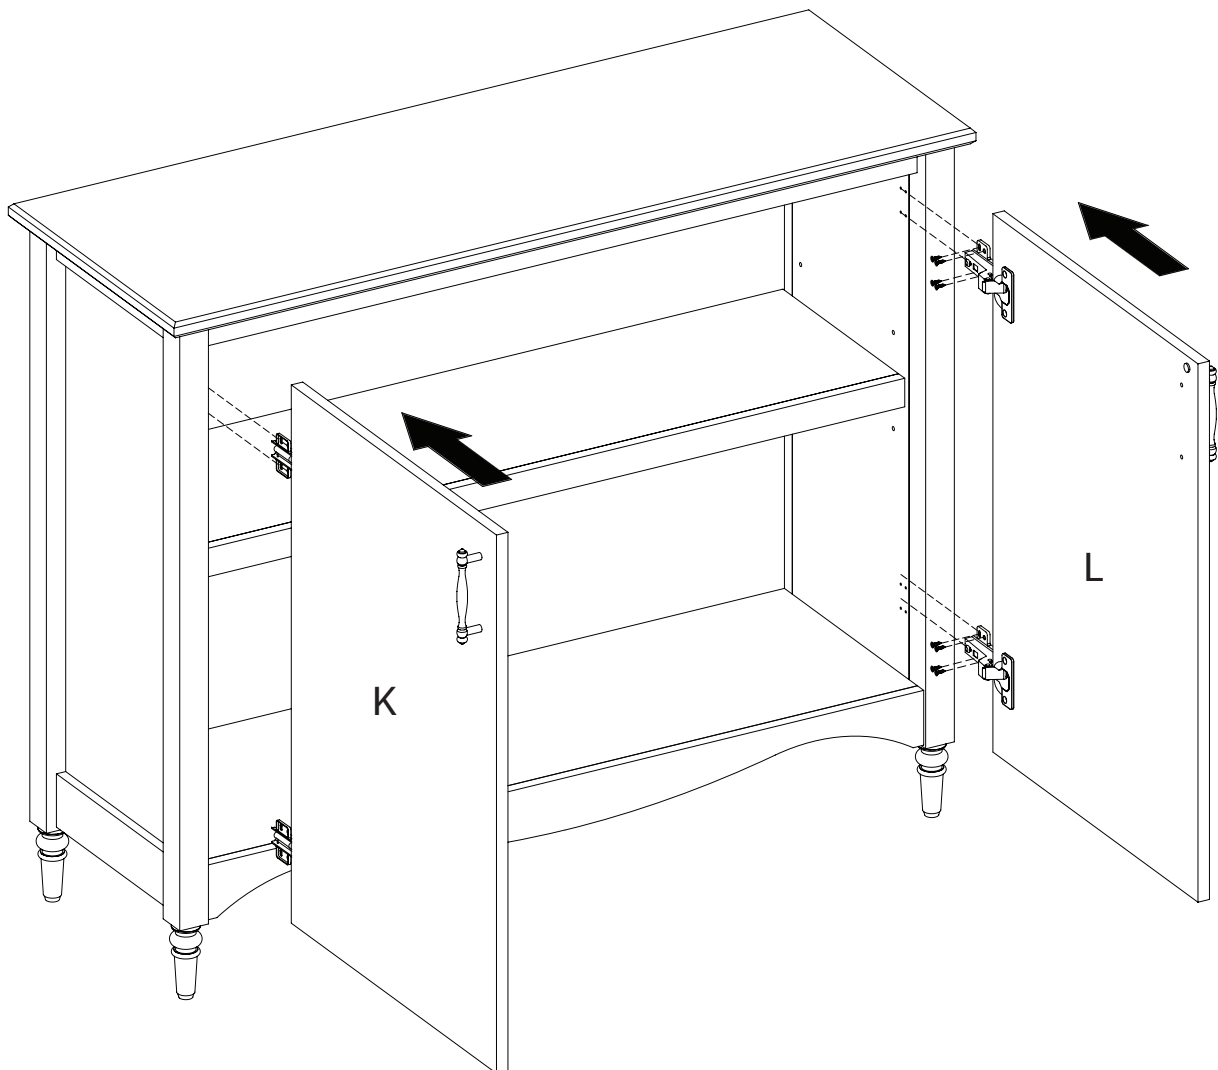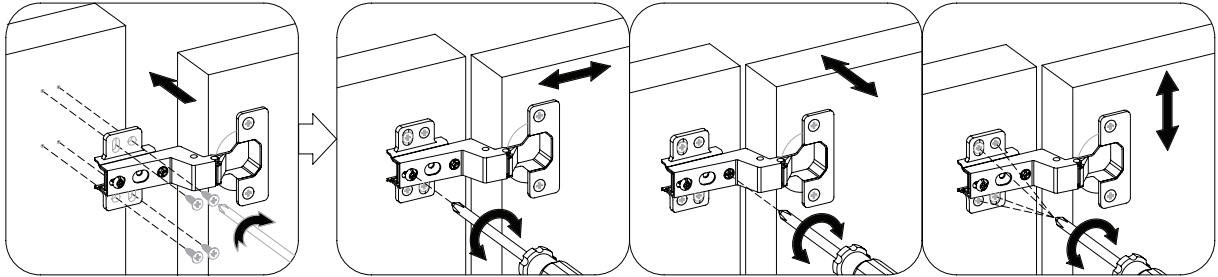


HH




[x16]

Note: If you find the doors need to be adjusted slightly, turn the appropriate screw as illustrated.

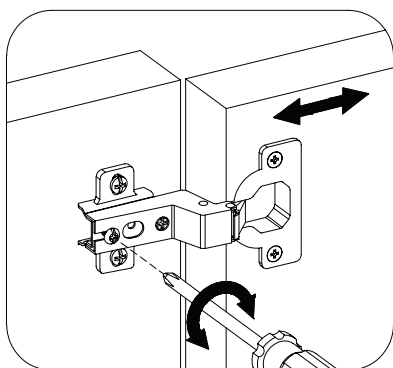


TO ADJUST DOOR FORWARD OR BACKWARD

Loosen the screw and slide the hinge into position, then retighten.

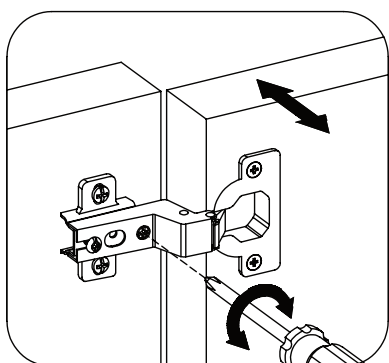

TO ADJUST DOOR RIGHT OR LEFT

Loosen the screw to move the door away from the hinge. Tighten to move the door toward the hinge. Afloje el tornillo para alejar la puerta de la bisagra. Apriete para mover la puerta hacia la bisagra.

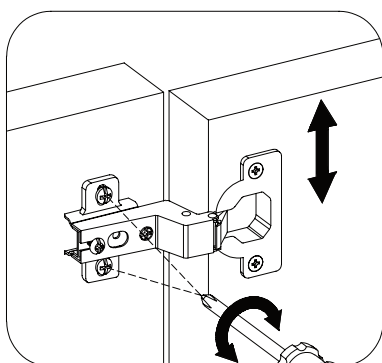


TO ADJUST DOOR UP OR DOWN

Adjust the four screws at the top and bottom of the hinge. Each screw should be loosened or tightened in small increments.

Step 22


Adjust the floor levelers so that the unit feels sturdy on the floor.

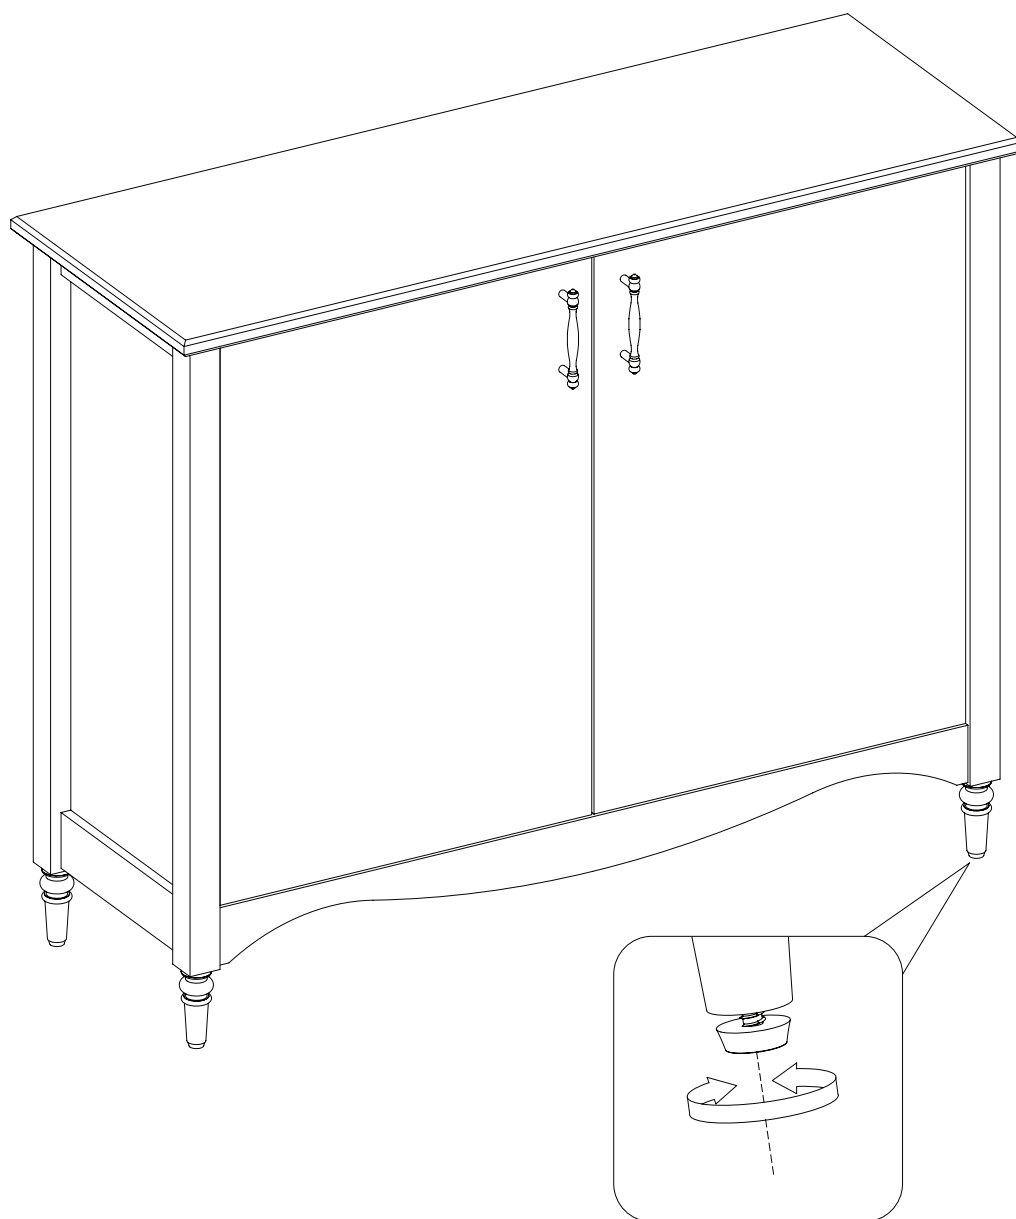

Note: It is very important that your unit is properly leveled. After moving your unit to its final location, you may need to adjust the floor levelers.

Step 23

Attach the tip-restraint hardware (KK) to the back before securing it to the wall, as shown below.

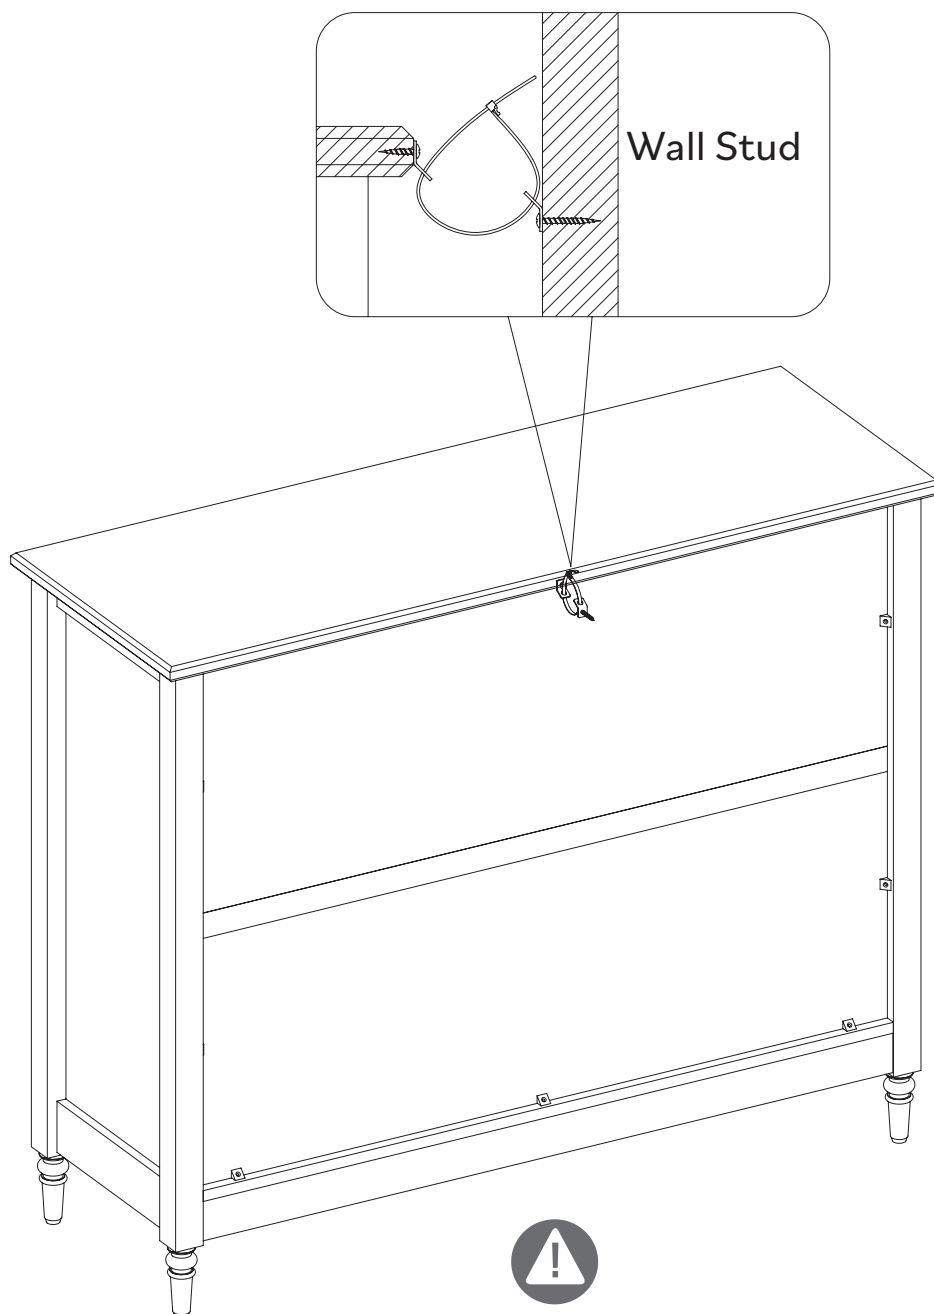


Warning: You must install the tip restraint hardware to help prevent any accidents or damage to the unit. We strongly recommend attaching the tip restraint hardware to a wall stud and your unit. For all other wall types, please visit your local hardware store to obtain the proper hardware.

KK



[x1]

Final Assembly

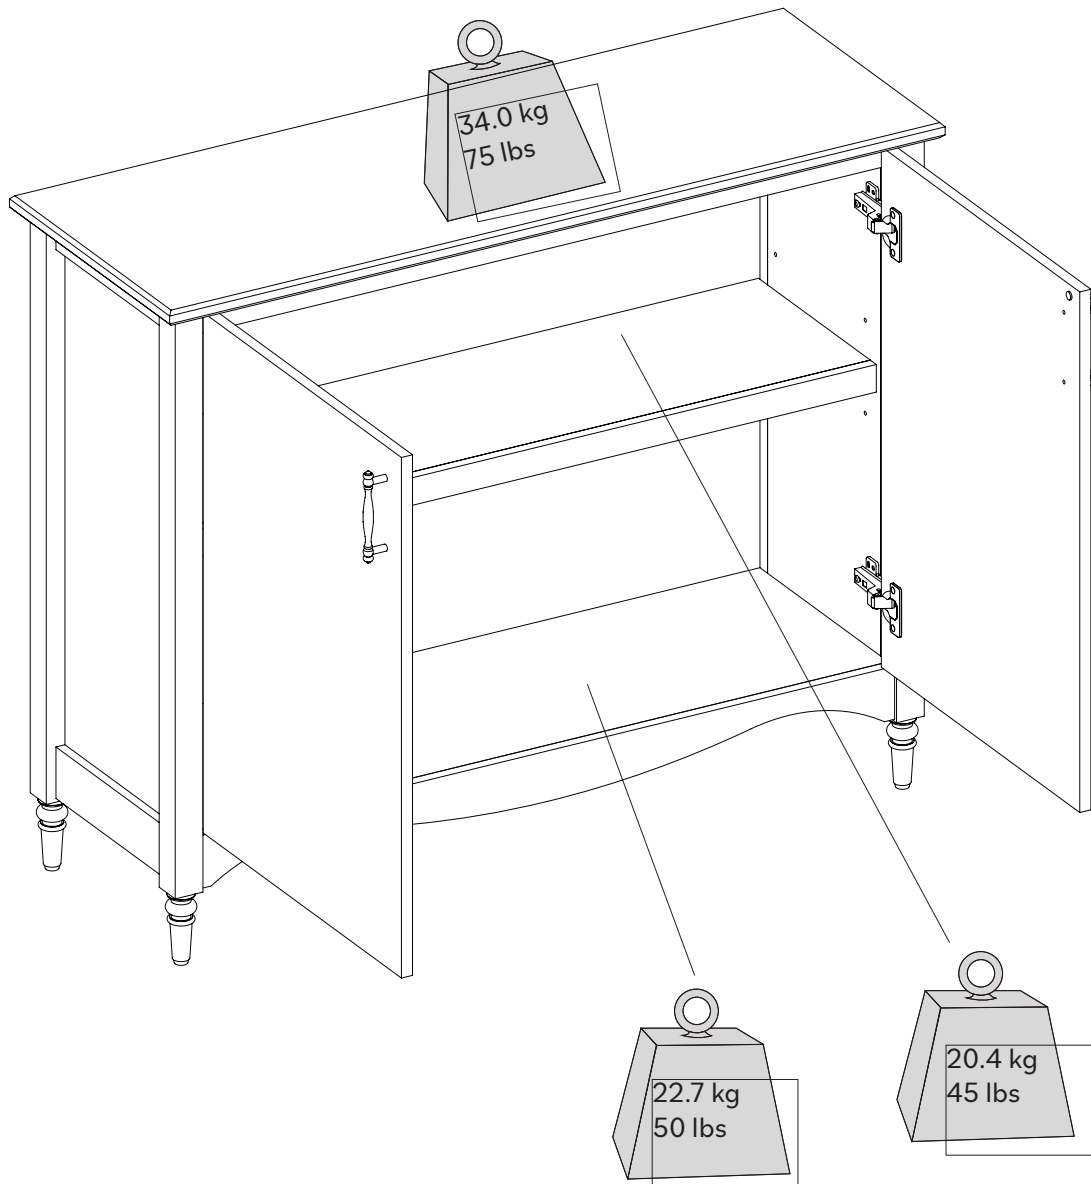

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkeredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue.

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday 8am-3pm MST

For details on Assembly Videos, Assembly Instructions, Replacement Parts, and Customer service.

SCAN HERE

