


ASSEMBLY INSTRUCTION

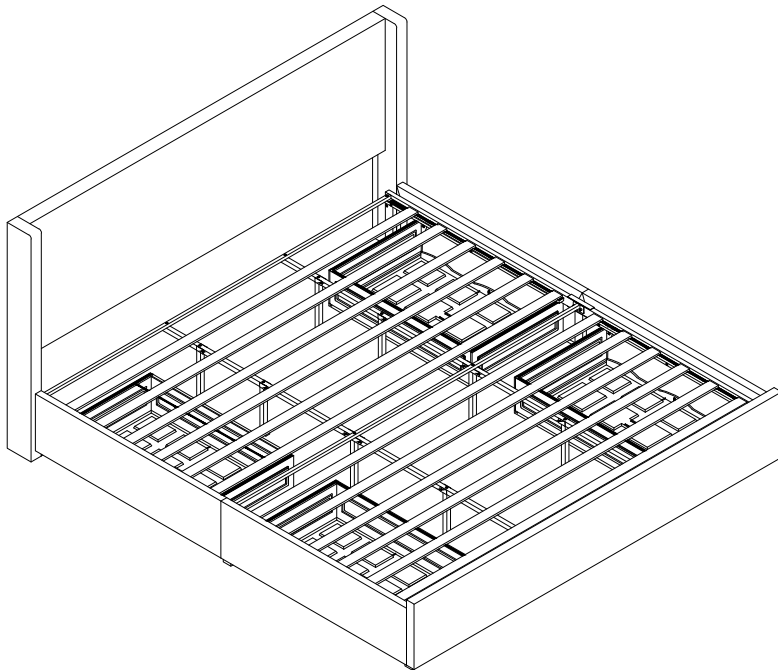


WARNING: OPEN THE HEADBOARD BACK ZIPPER, THE BED REST PARTS IN IT.



**Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!**

IMPORTANT NOTE

- 1. ALL OTHER PART INSIDE THE HEADBOARD
PLEASE OPEN THE ZIPPER OF HEADBOARD, AND TAKE OUT ALL
OTHER PART BEFORE ASSEMBLY.**
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A
CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
4. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS
NECESSARY.
5. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE
FIRMLY SECURED.
6. NEED PARTS OR ASSISTANCE? EMAIL US AT
7. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.


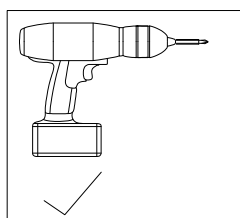


Gloves x1 pair


















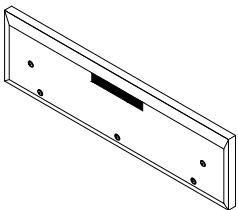
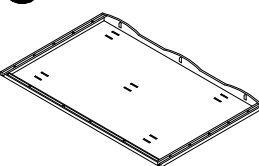
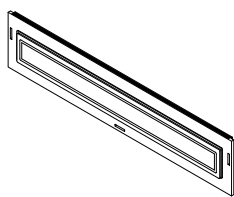
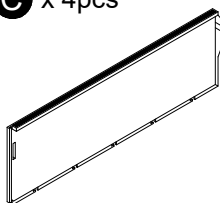
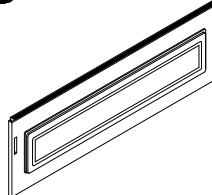

Please note gloves.
This fabric is very light colour.
So when assembling bed,
please wear them.

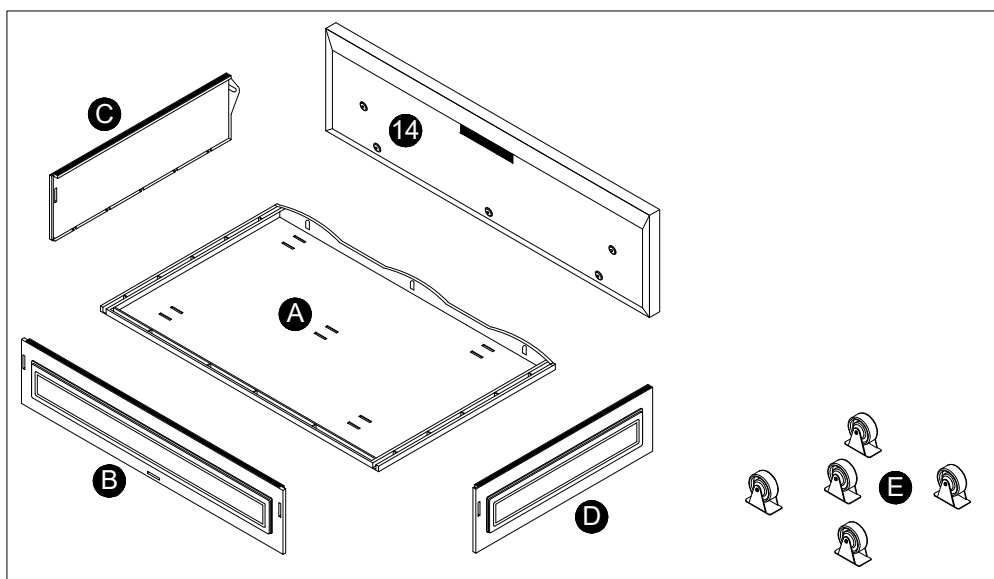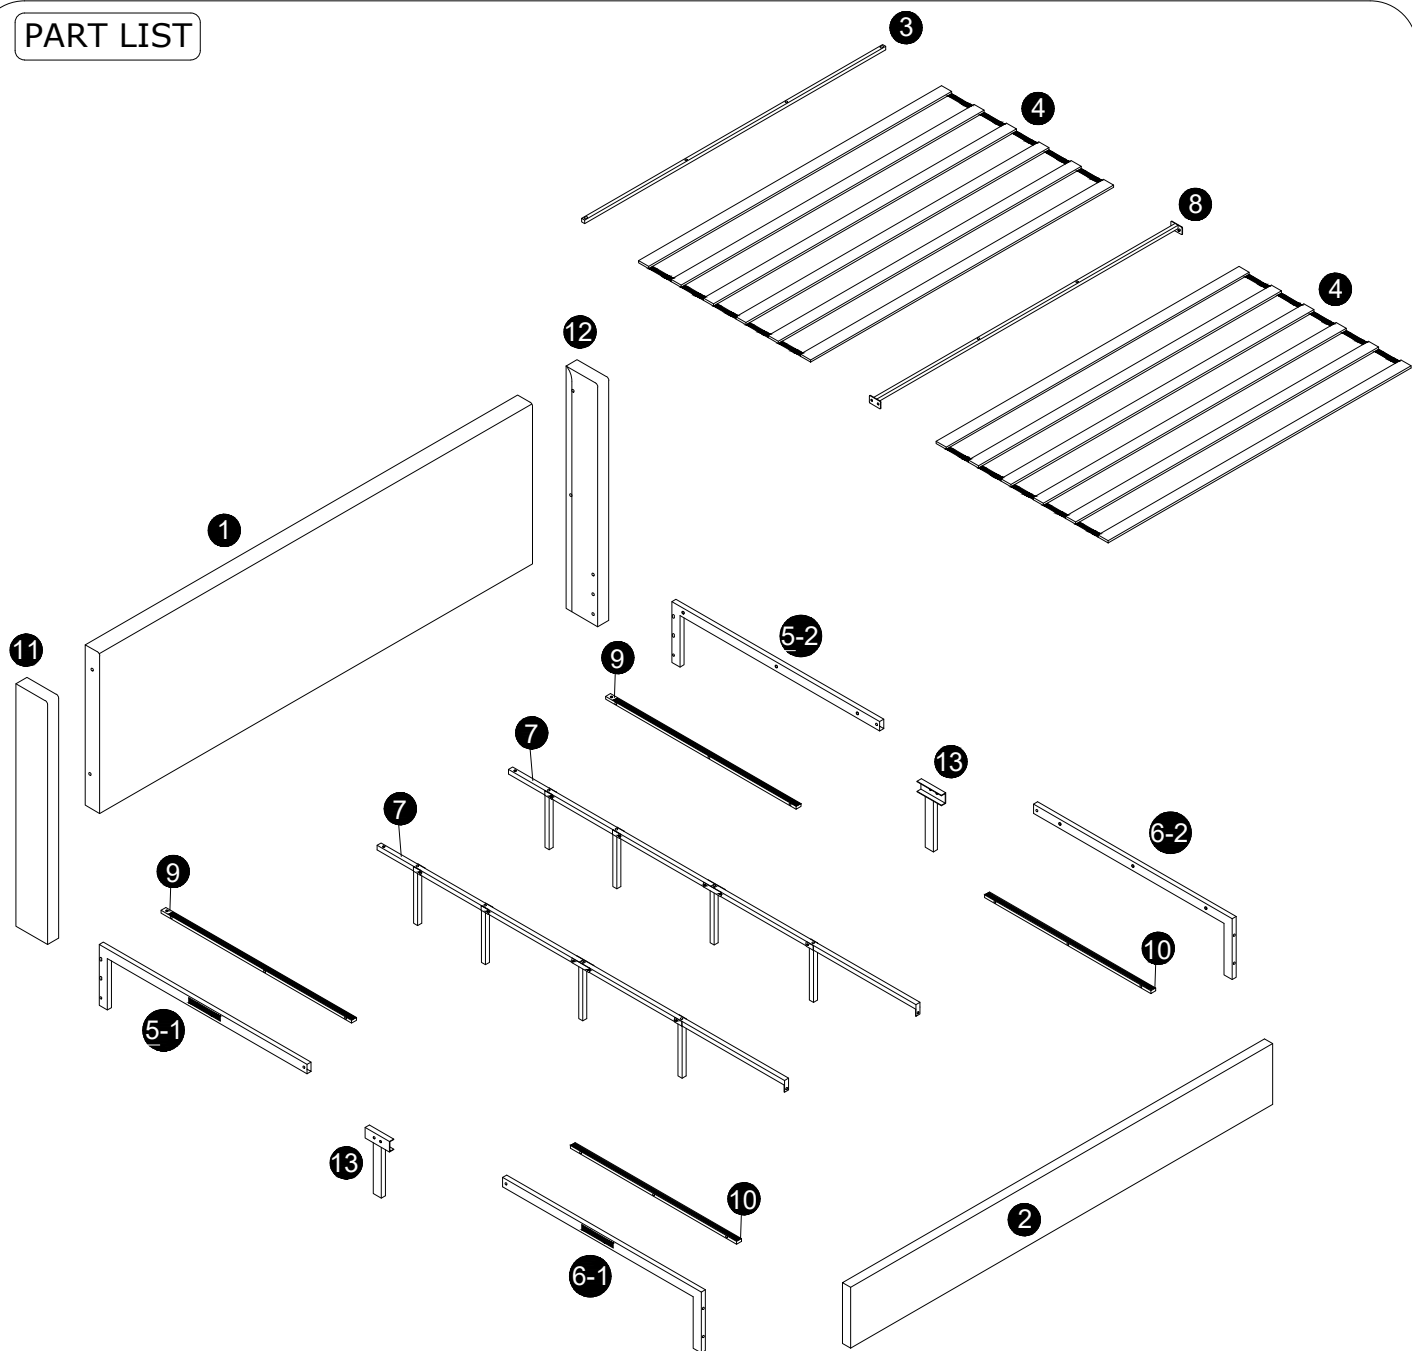PART LIST





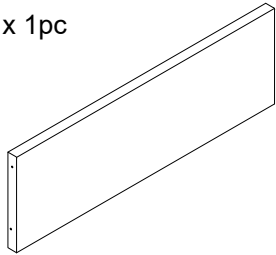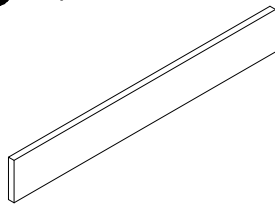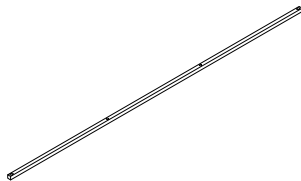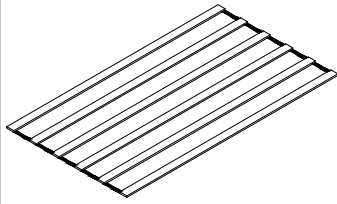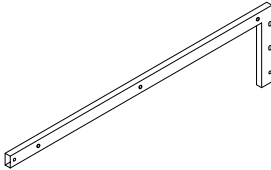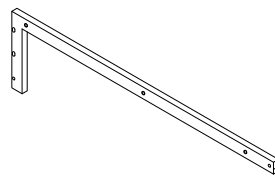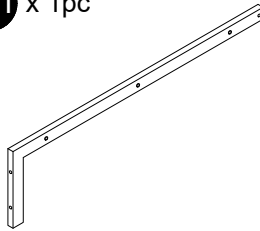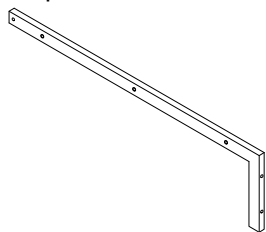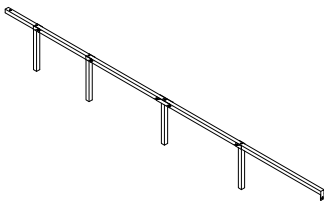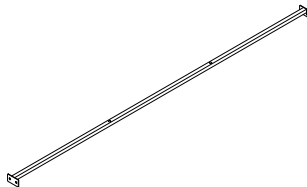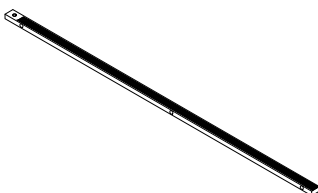











x4

PART LIST


1 x 1pc 	2 x 1pc 	3 x 1pc 	4 x 2pcs 	
5-1 x 1pc 	5-2 x 1pc 	6-1 x 1pc 	6-2 x 1pc 	
7 x 2pcs 	8 x 1pc 	9 x 2pcs 	10 x 2pcs 	
11 x 1pc 	12 x 1pc 	13 x 2pcs 	14 x 4pcs 	
A x 4pcs 	B x 4pcs 	C x 4pcs 	D x 4pcs 	E x 20pcs 

HARDWARE LIST


 H1 M5 x 1pc	 H2 M4 x 1pc	 H3 M8x35mm x 22pcs	 H4 M8x45mm x 6pcs	
 H5 M8 x 20pcs	 H6 M8x17mm x 16pcs	 H7 M8x22mm x 4pcs	 H8 M8x65mm x 4pcs	 H9 M6x35mm x 10pcs
 H10 M6x60mm x 2pcs	 H11 M6 x 8pcs	 H12 M6 x 8pcs	 H13 M6x15mm x 20pcs	 H14 x 12pcs

1 **NOTE:** PLEASE OPEN THE ZIPPER ON THE BACK OF **1** AND TAKE OUT THE PARTS.


Open the zipper

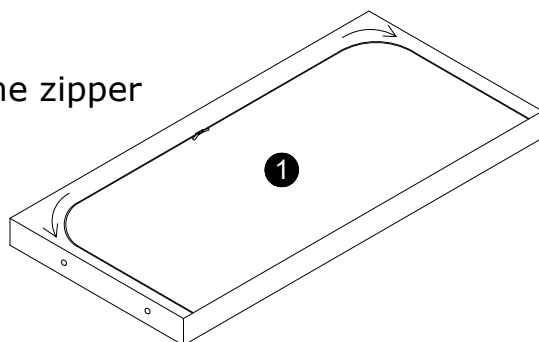

2

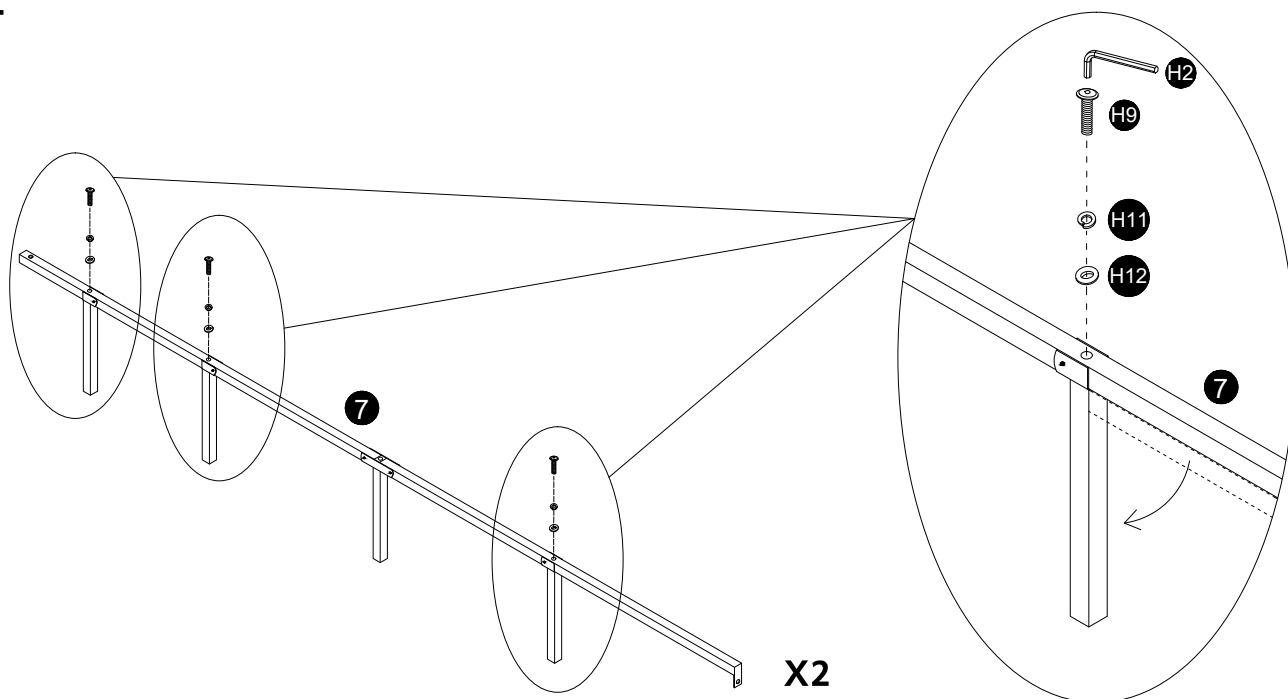


3

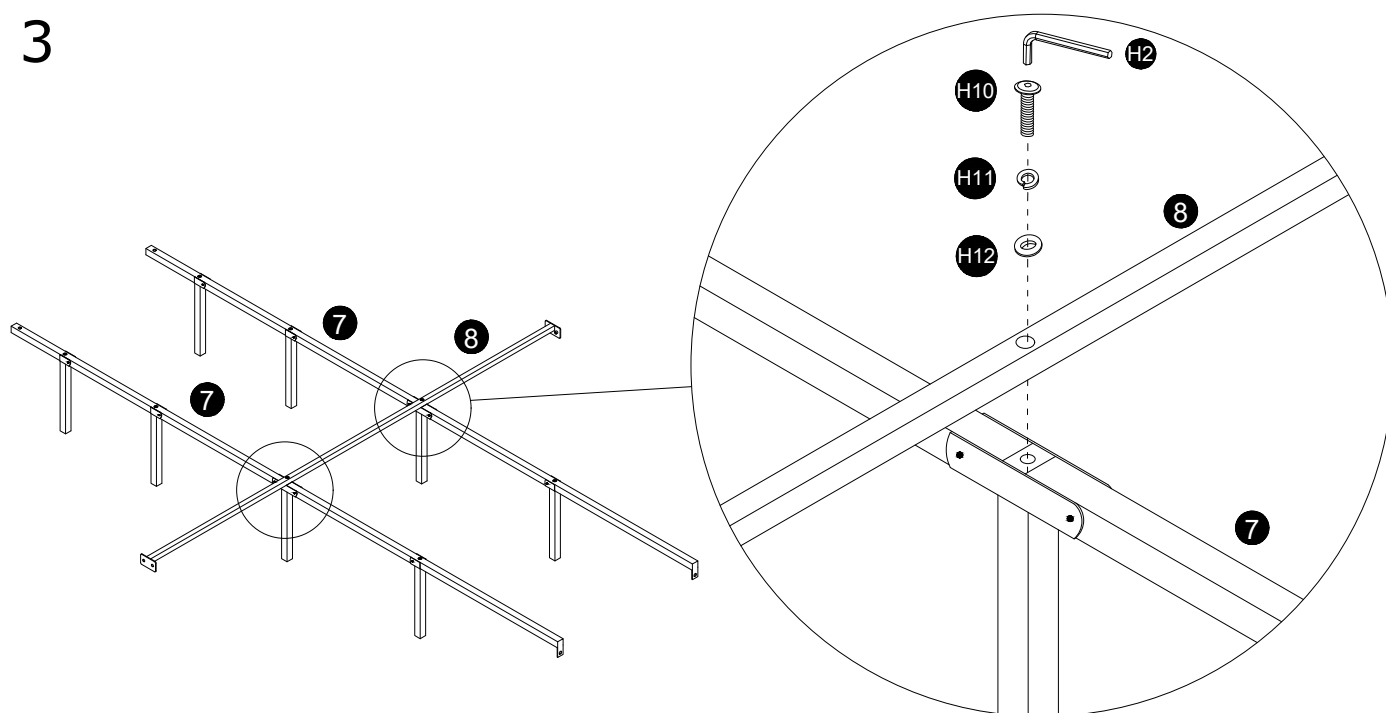


4

a:

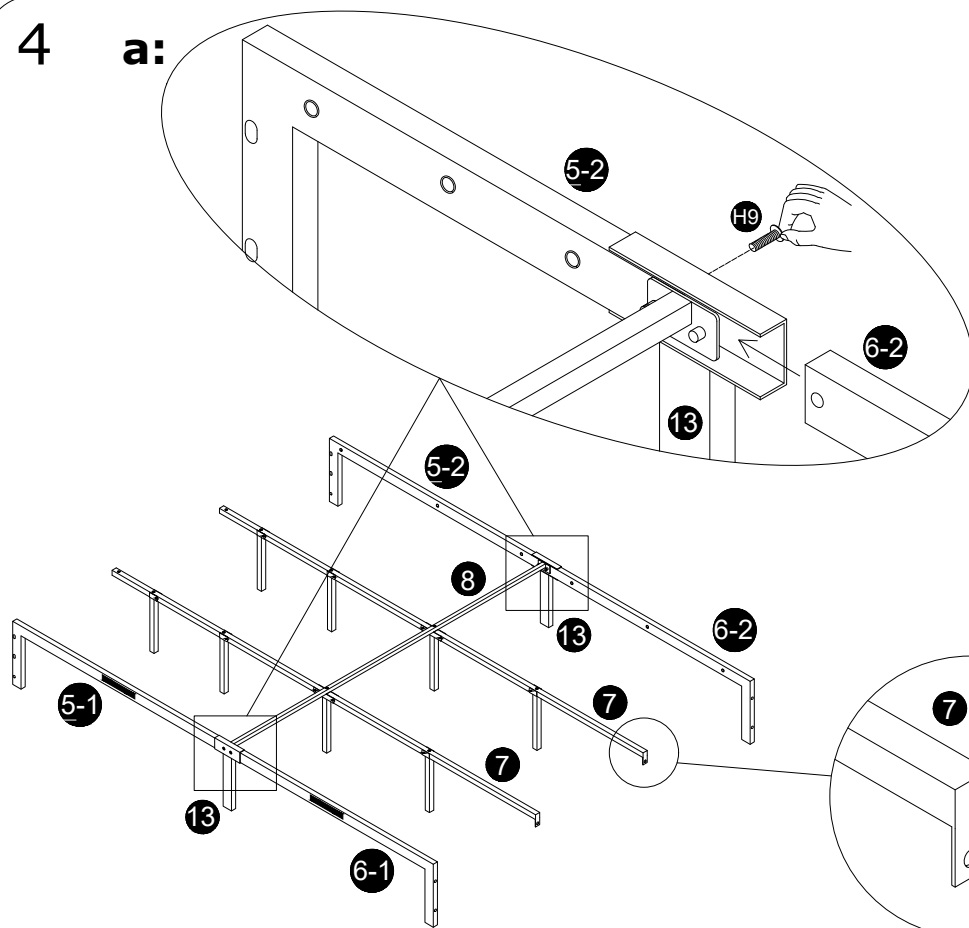


b:


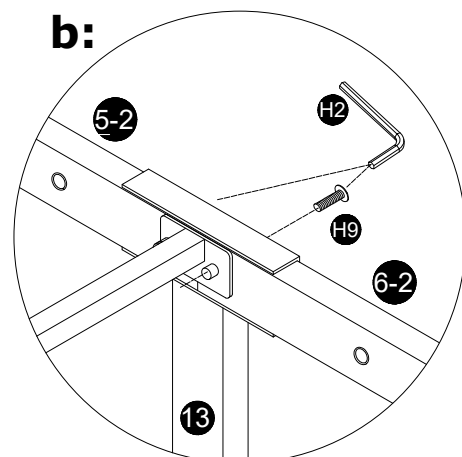


Fully tighten all fixings.



5

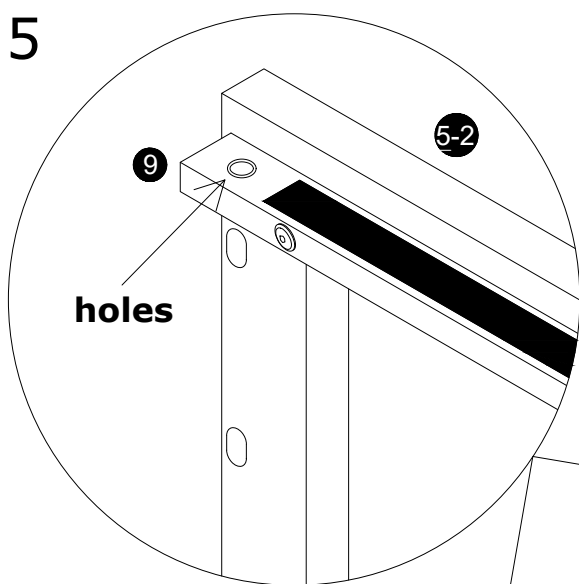

holes

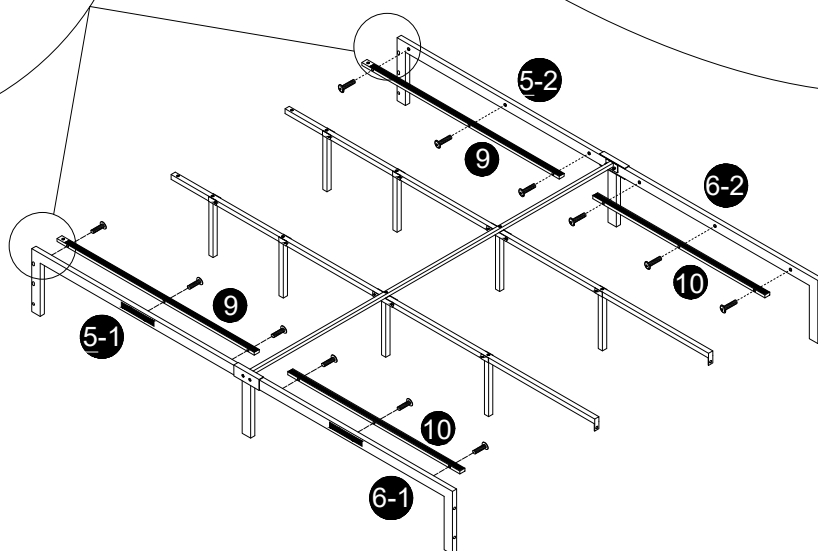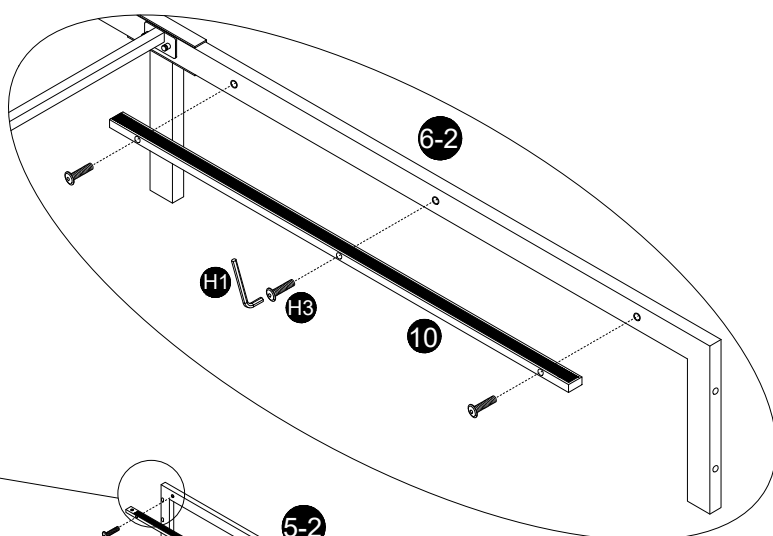


6

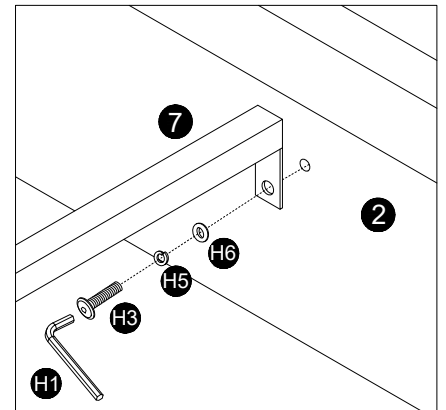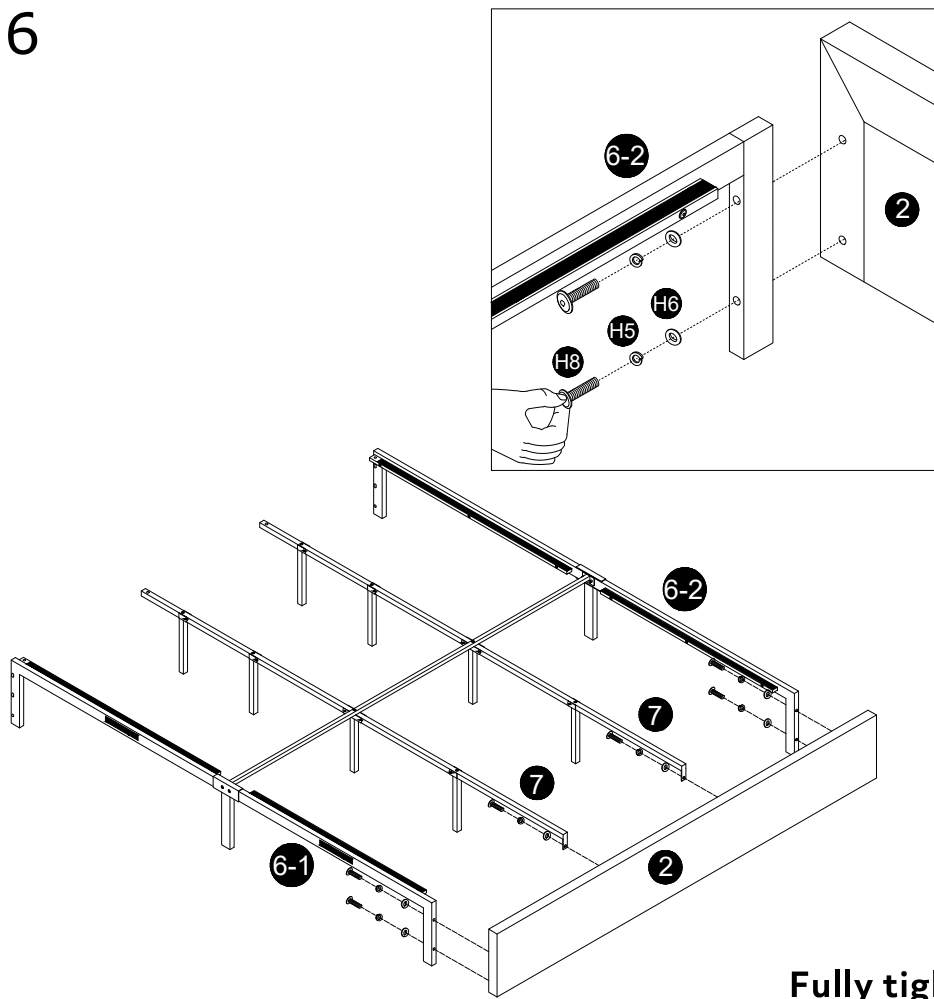


Fully tighten all fixings.

7

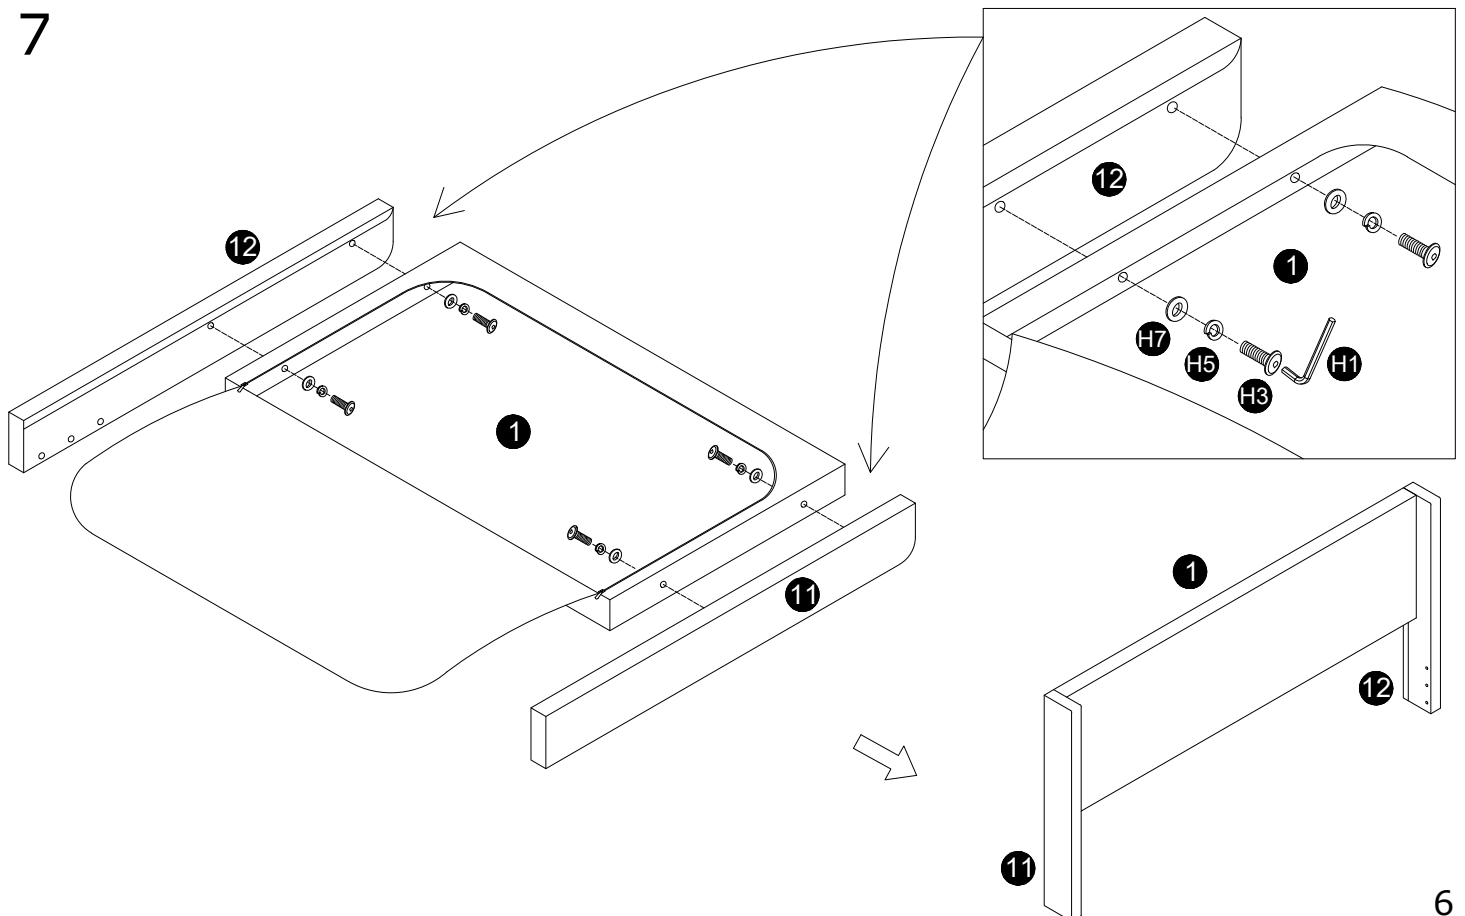


8

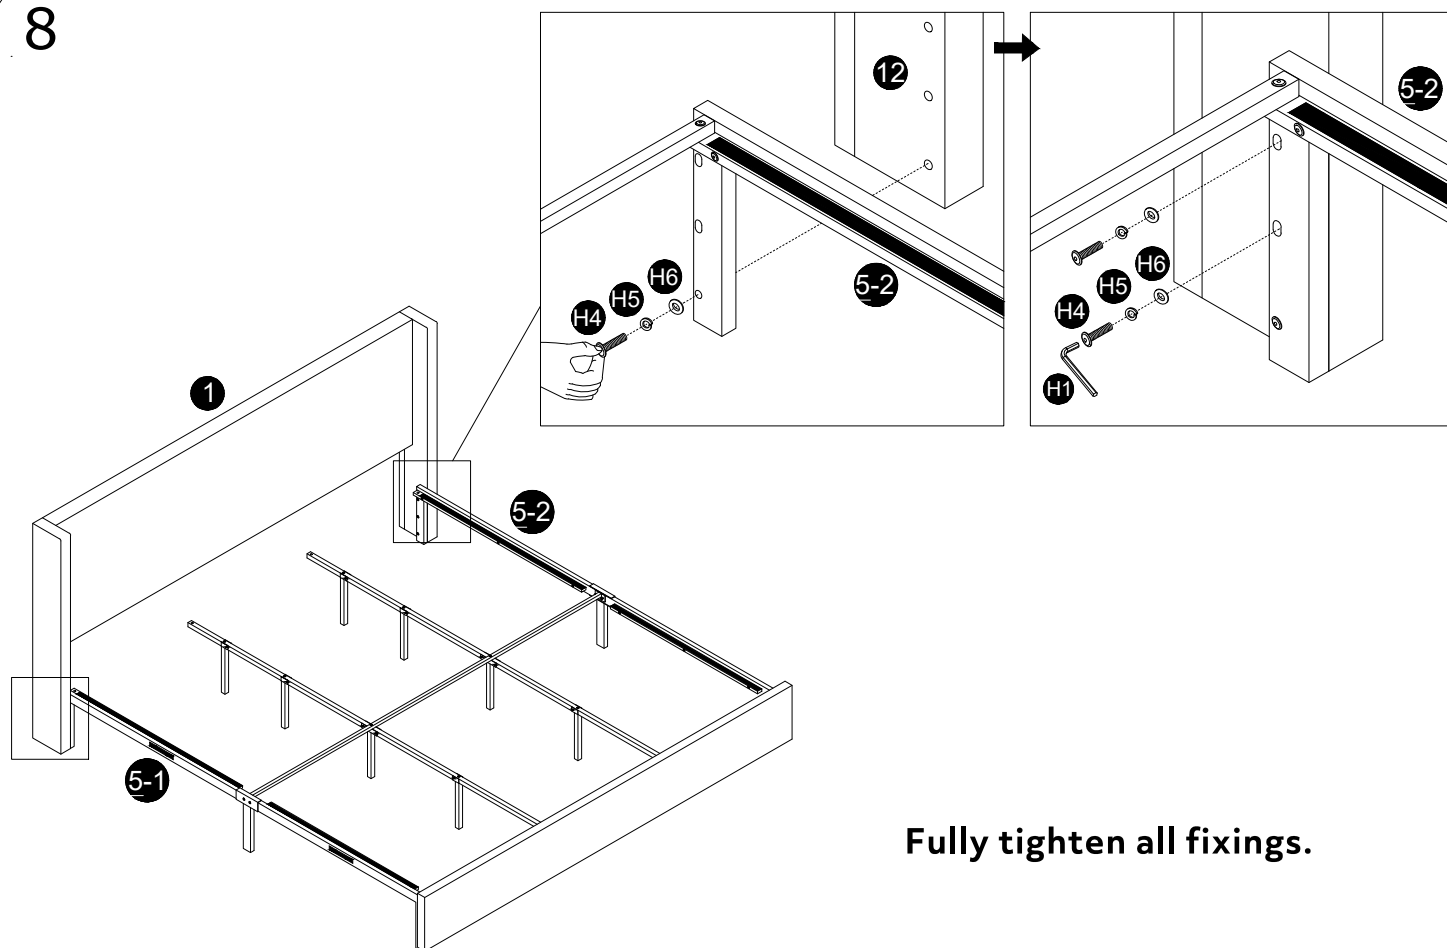


Fully tighten all fixings.



9

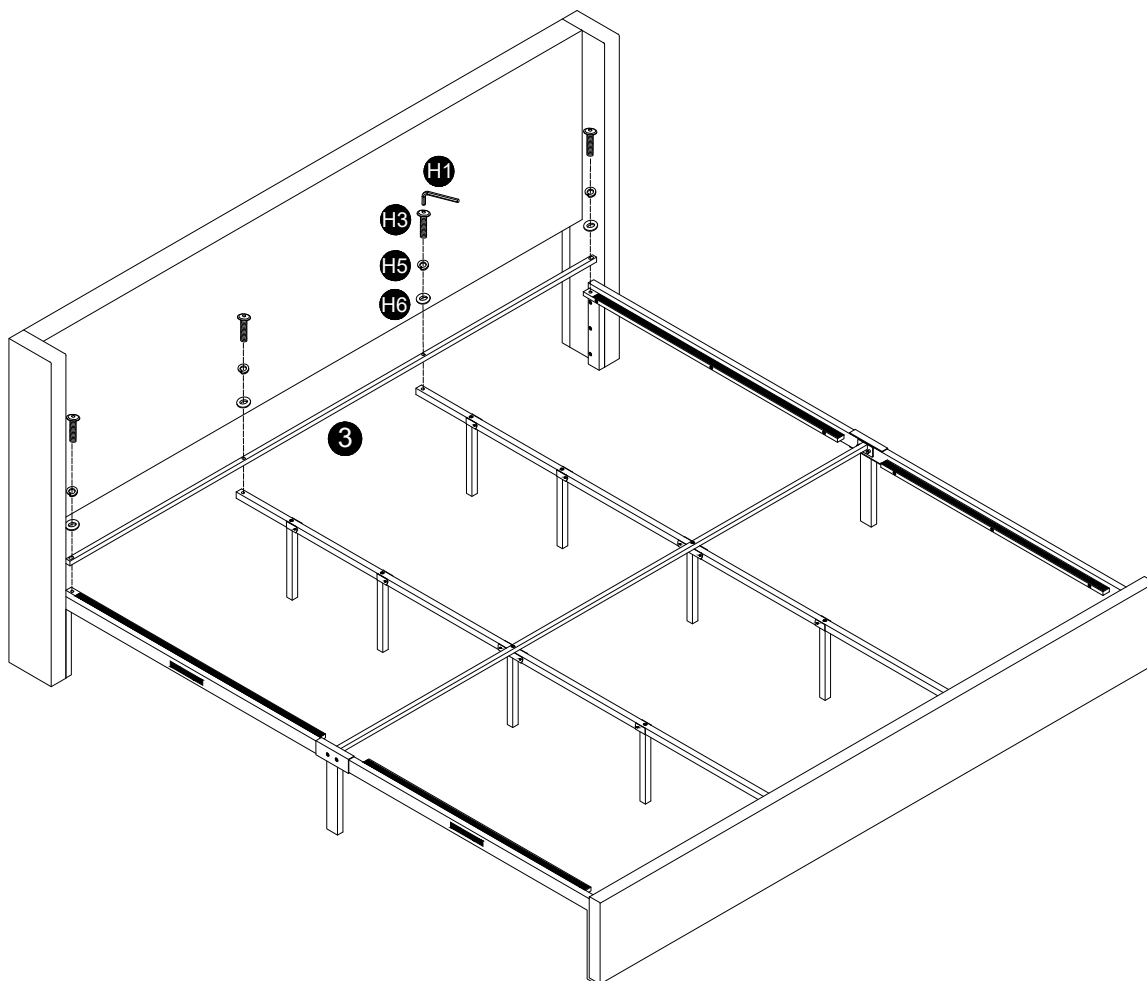


10

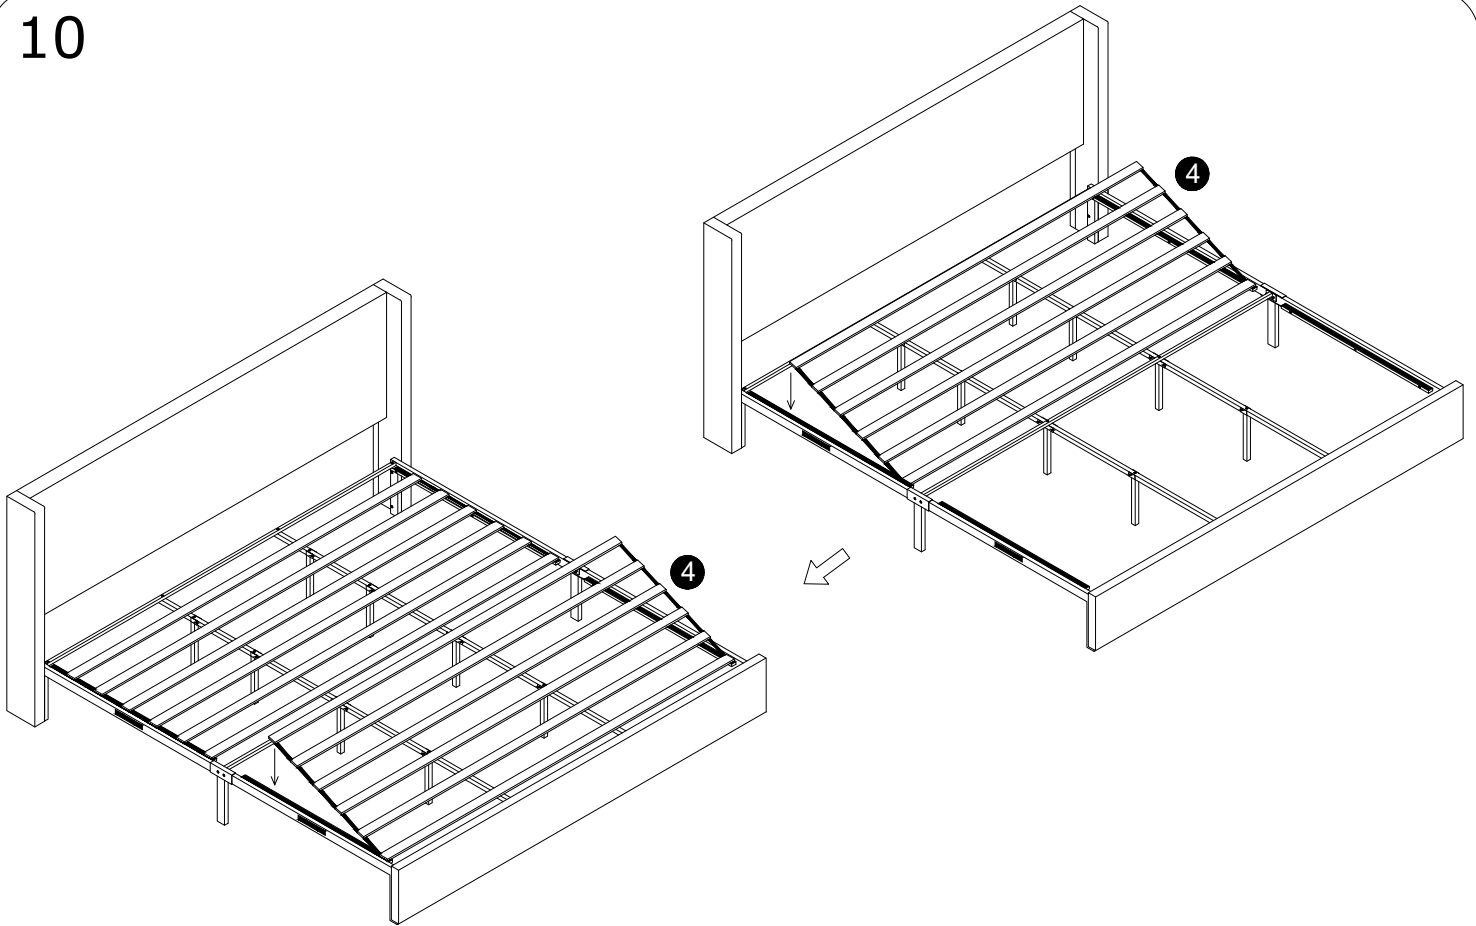

- 11** Put plastic baseboard (A) flat on the floor, assemble side baffles (C&D), following the assemble picture aligning them inward, ensuring all fit into all slots, and push forcefully until the side panels are flush with the baseboard.

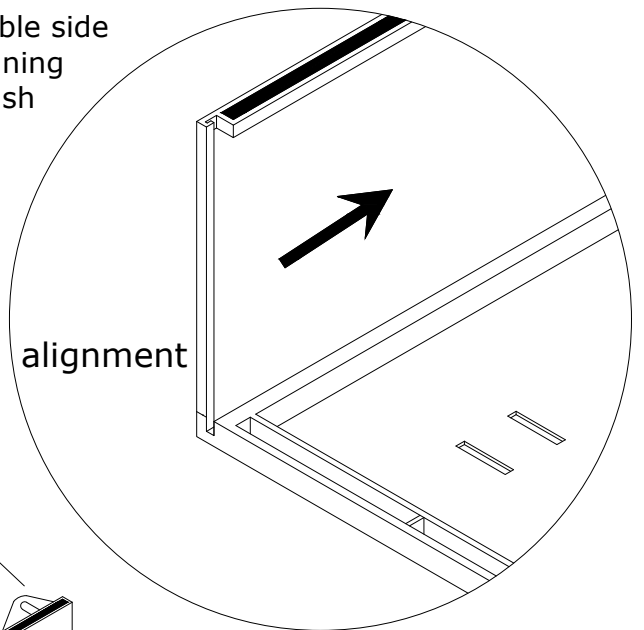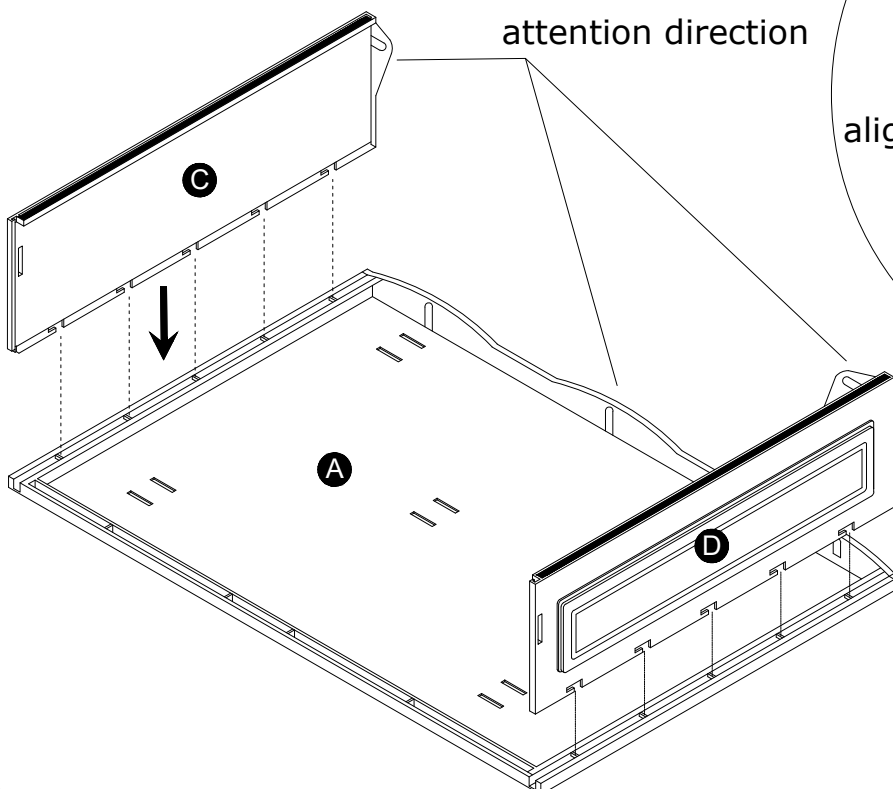


12

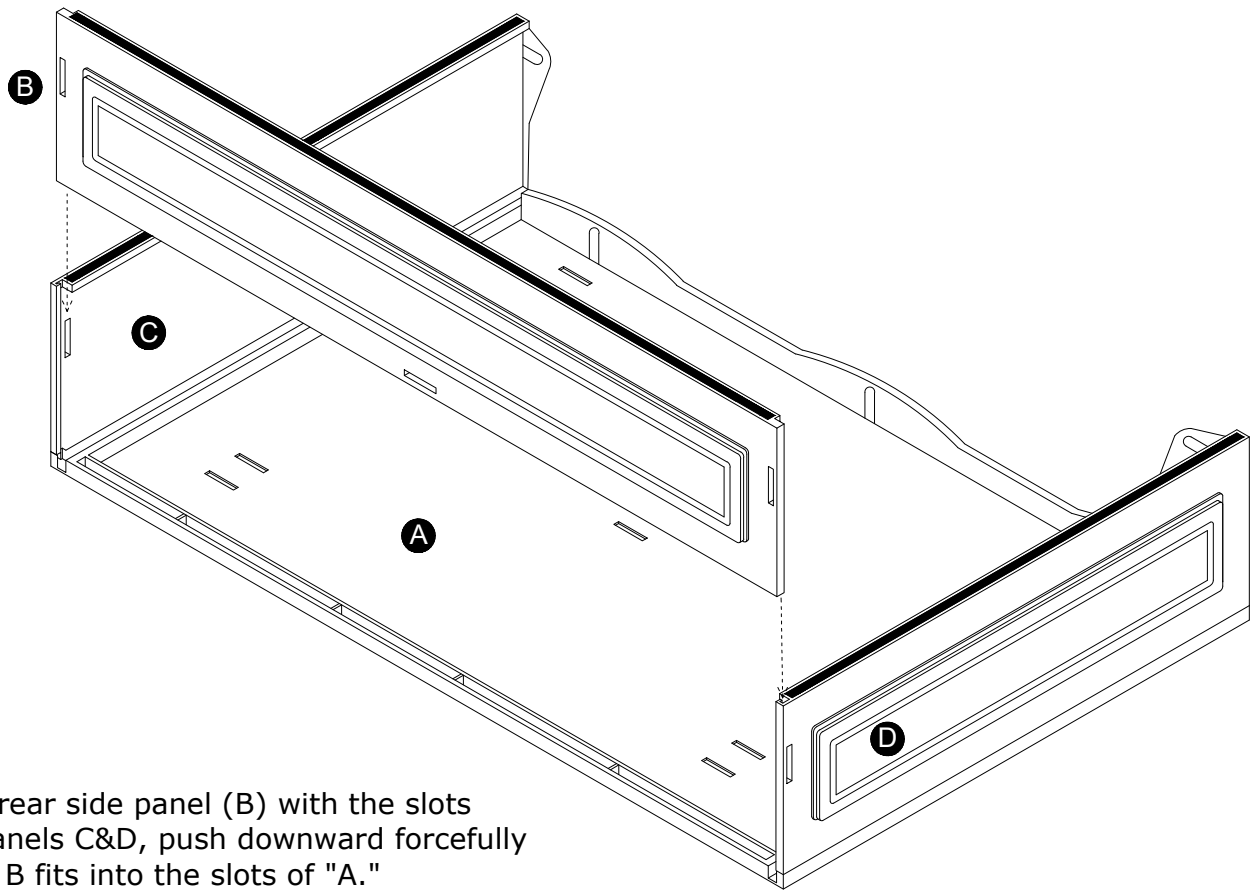



Align the rear side panel (B) with the slots on side panels C&D, push downward forcefully to ensure B fits into the slots of "A."

13


Take clip H14 and secure side panels D&B, B&C, and A&B, ensure the clips fully engage with the slots.

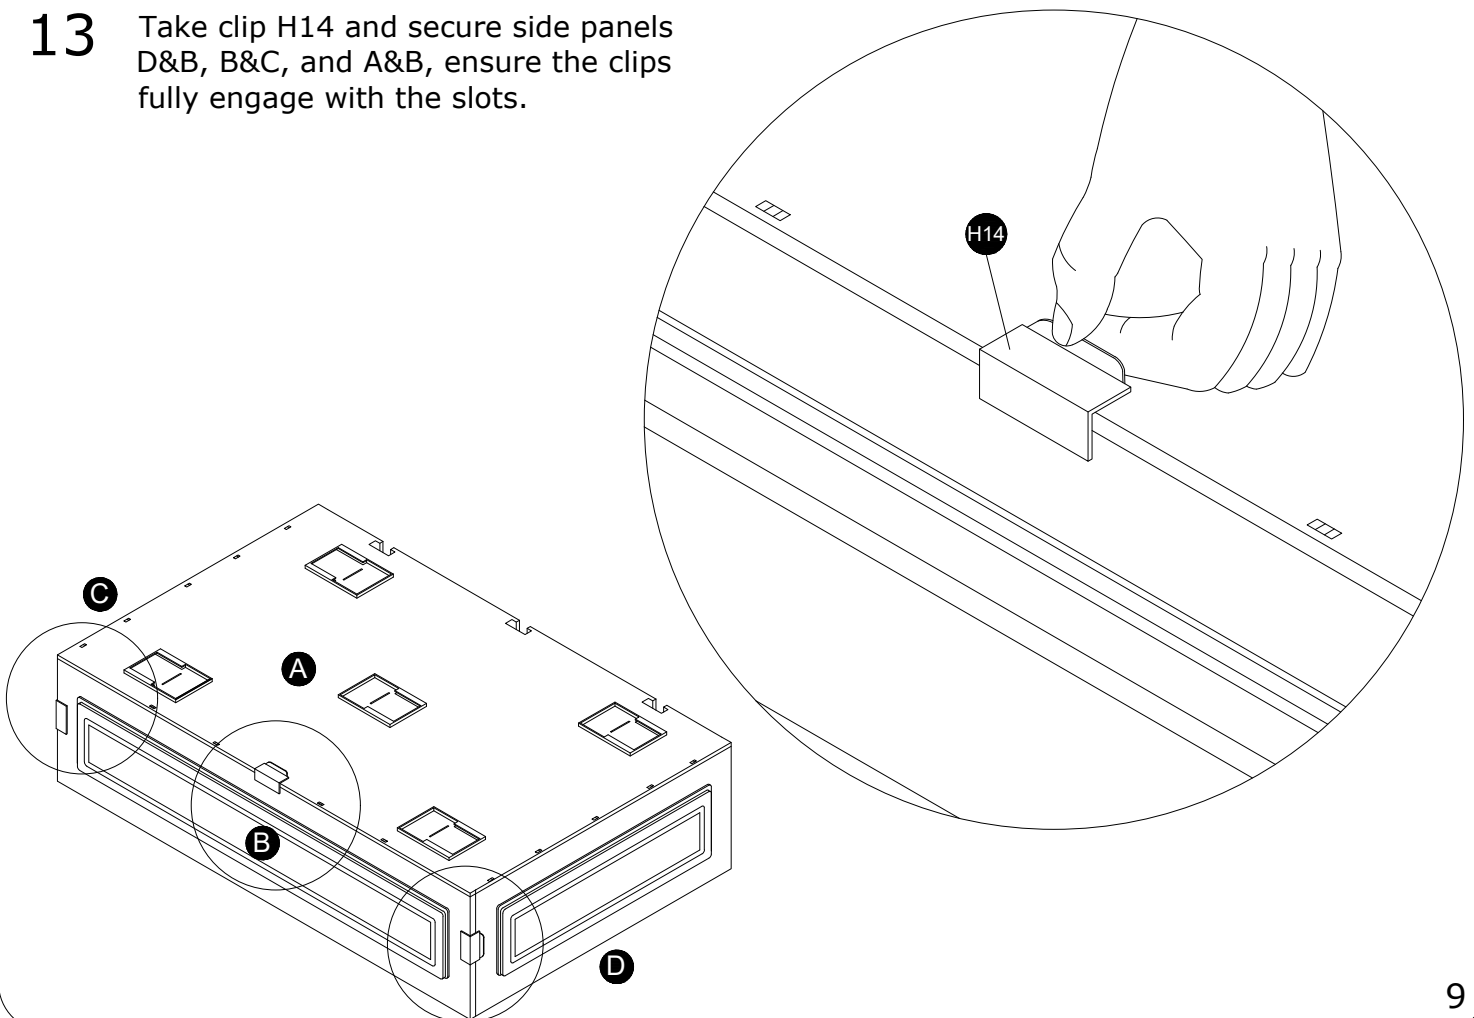


- 14** Install wheels "E" by forcefully pushing them into the slots; once pushed to the bottom, a protrusion will engage with the metal sheet to prevent them from easily coming off. All five part "E" wheels need to be installed correctly.

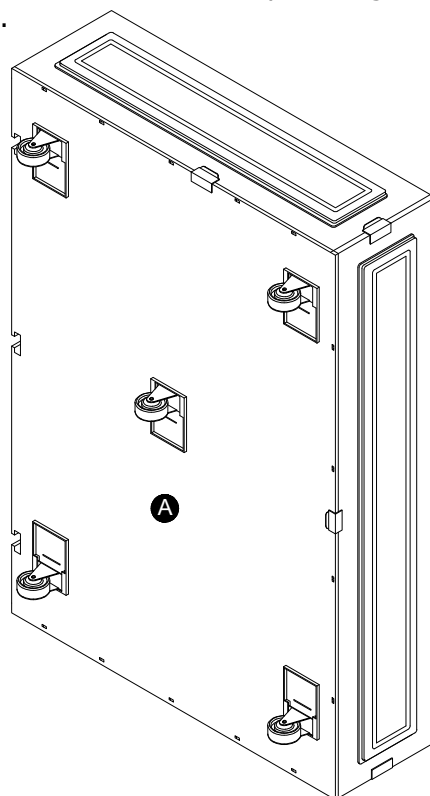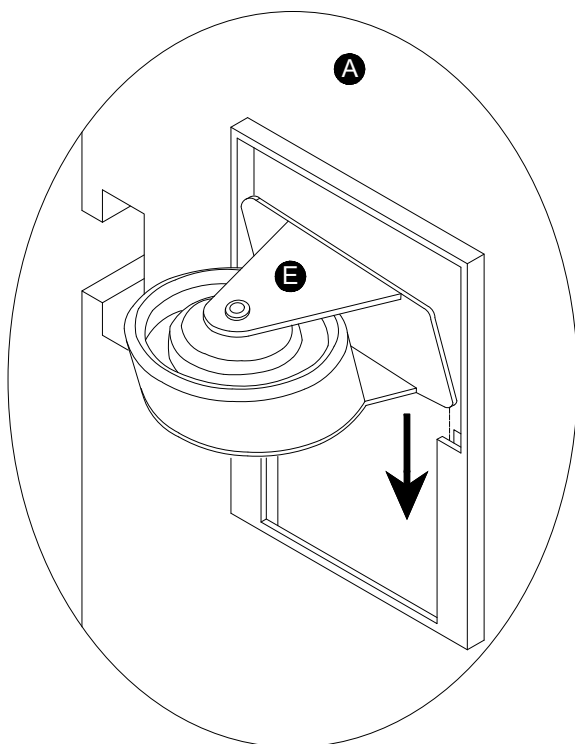

- 15** Take screw H13, first install it into drawer panel 14, then screw in the bottom 3 screws partially leaving them protruding 8mm (for easy installation). Insert the drawer bottom A into the three screws of the panel, ensuring no distortion of the drawer and panel to prevent plastic parts from breaking during installation.

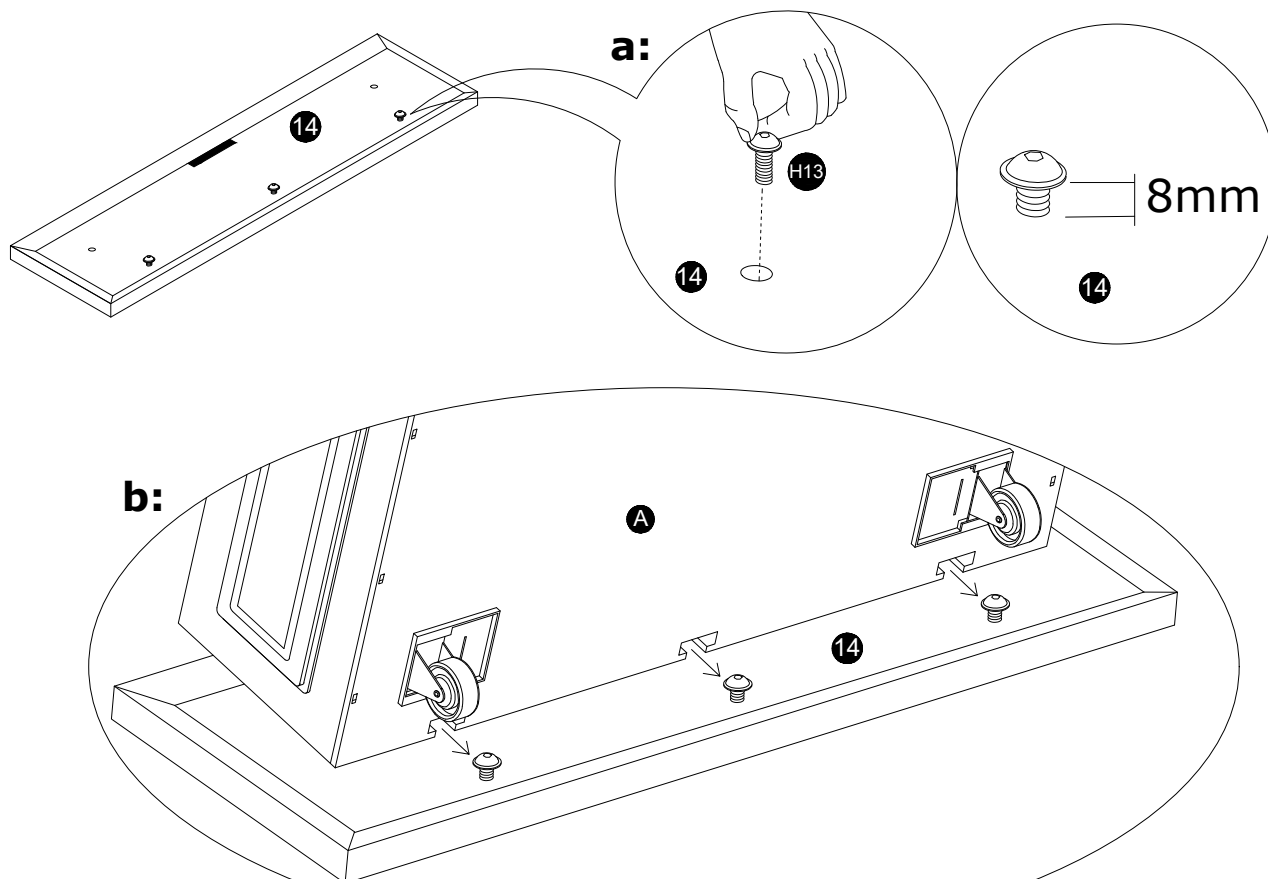


16

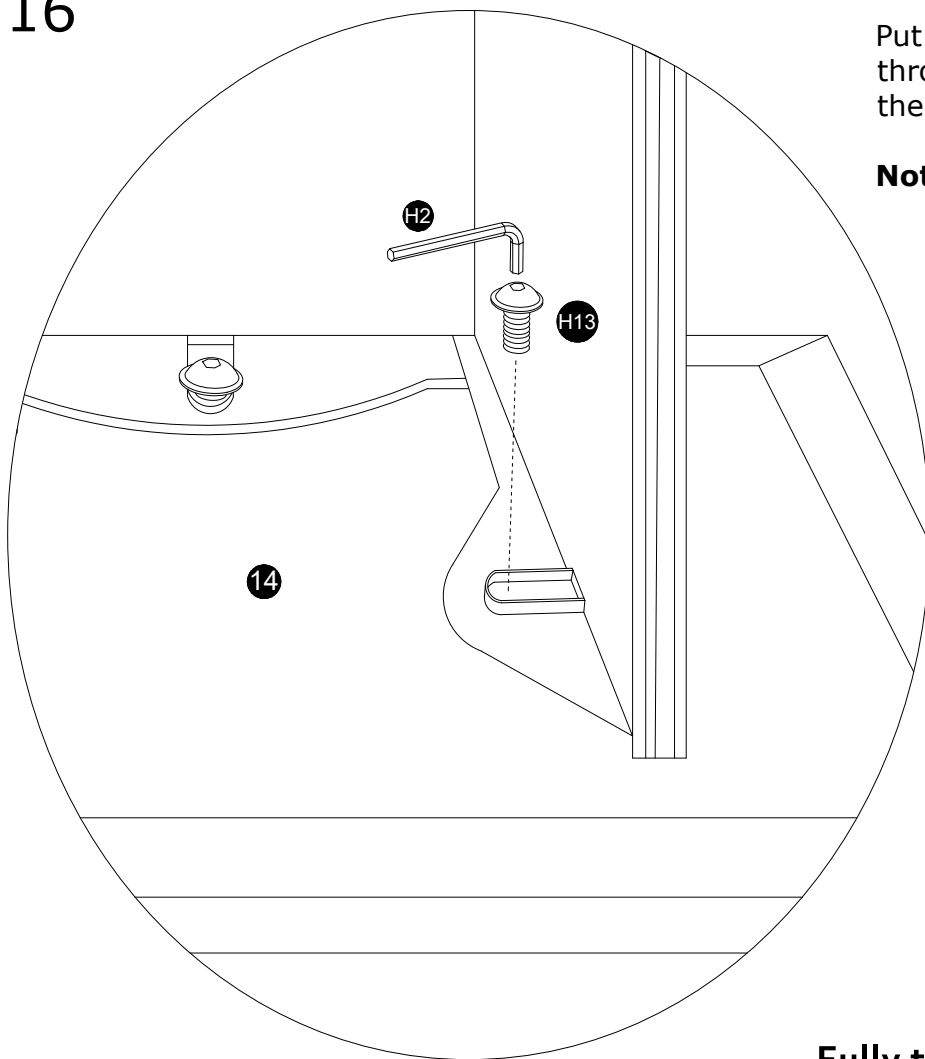


Put the drawer flat, install screw H13 through the holes in drawer sides C&D, then tighten all screws.

Note: Plastic drawers should not be installed with power tools; tightening manually is sufficient.

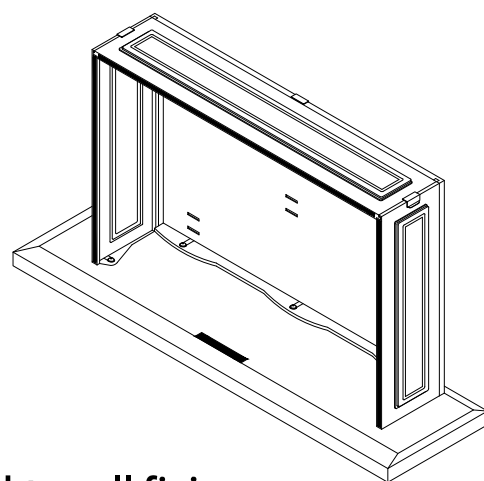

Fully tighten all fixings.

17

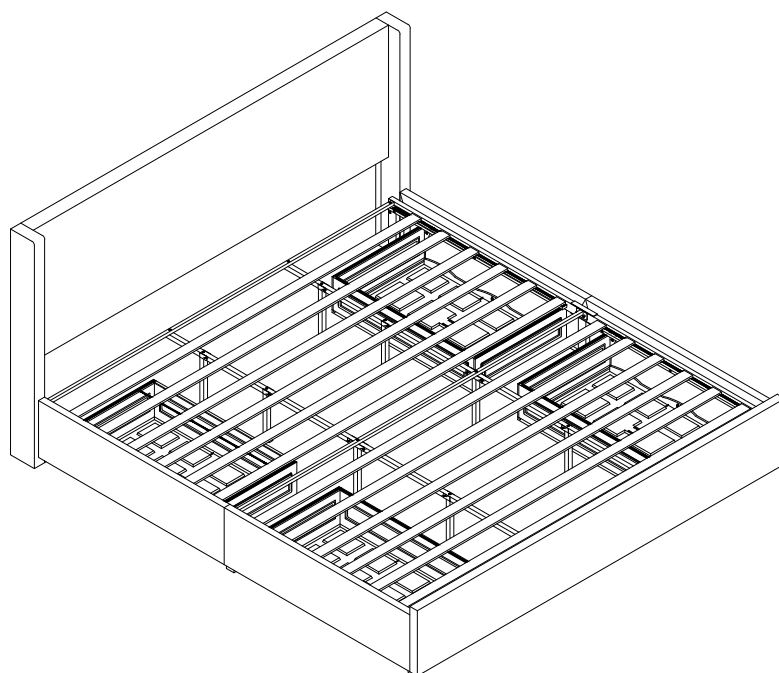

In the interest of our environment please dispose of all packaging thoughtfully.