
































Assembly Instructions

Storage Cabinets

A	B	C	D	E	F1	F2	G
							
X3	x1	x2	--	Long x6	Short x10	Short 4	x1


H1	H2	J	K	L	I	II	III	N
								
x4	2+2	x12	x40	x8	4mm x2	5mm x1	x1	x1

①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
									
x4	x3	x9	x4	x4	x2	M4*25 x12	M4*13 x4	M3*25 x4	M5*12 x12

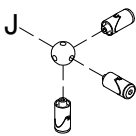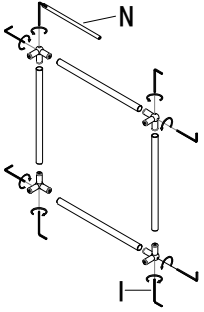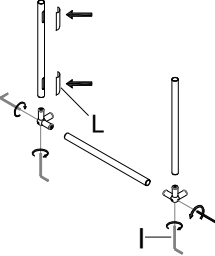Step 1	Step 2	Step 3	Step 4
 <p>Don't tighten too tightly</p> <p>Kx3 x12</p>	<p>using N: Assistance tools</p>  <p>Rotate counterclockwise using I: 4mm</p> <p>F1x4 x2</p>	 <p>Attention: The hole position faces inward 80 °: Then use transparent film to cover the hole position</p> <p>F1x1 F2x2 x2</p>	 <p>Rotate clockwise using II: 5mm</p> <p>Kx2 x2</p>

Step 5


Attention: The hole position of E is slightly below the horizontal line
To lock the screws M5*12

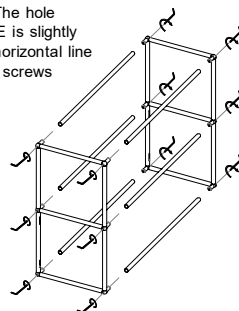

Ex6


Step 6

Align the four corners from top to bottom and forcefully tap in and lock the screws M5*12

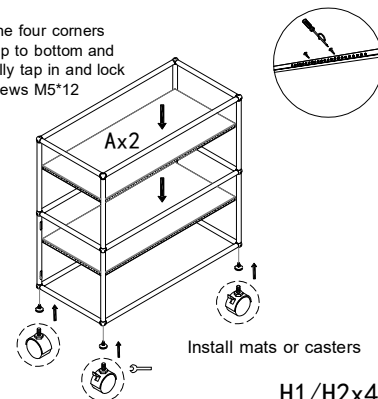

H1/H2x4


Step 7



Only 3*③ are needed here
The remaining hole position is spare

② x1
③ x3


Step 8

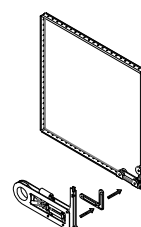

Align hole positions

① x1
④ x1


Step 9

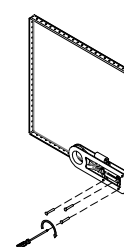

Only 3*⑦ are needed here

⑦ x3


Step 10



Same as the step 7
Pay attention to distinguishing left and right

② x1
③ x3


Step 11

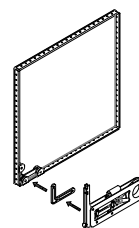

Same as the step 8

① x1
④ x1


Step 12

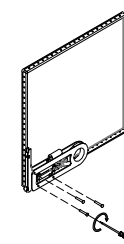

Same as the step 9

⑦ x3

Step 13

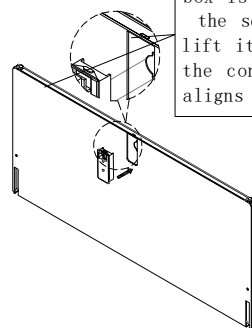


Note: After the lock box is inserted into the square hole, lift it up so that the convex part aligns with the hole.

⑥ x1


Step 14

keep the keyhole like "—"
 Then screw on the screws

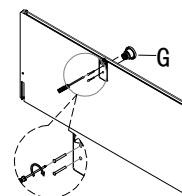


⑨ x2


Step 15

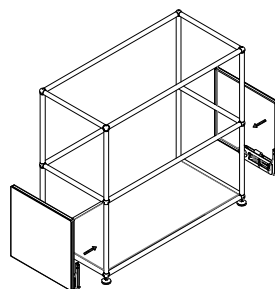

Step 16

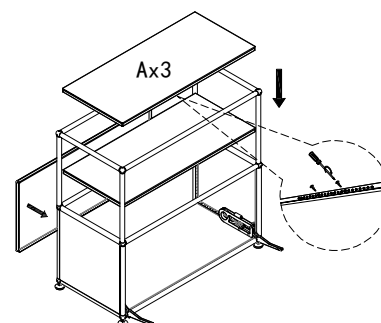

Step 17

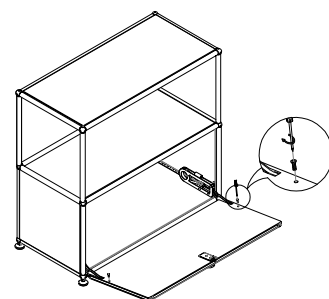

⑧ x2

Finish

