












Assembly Manual

Armchair with Ottoman

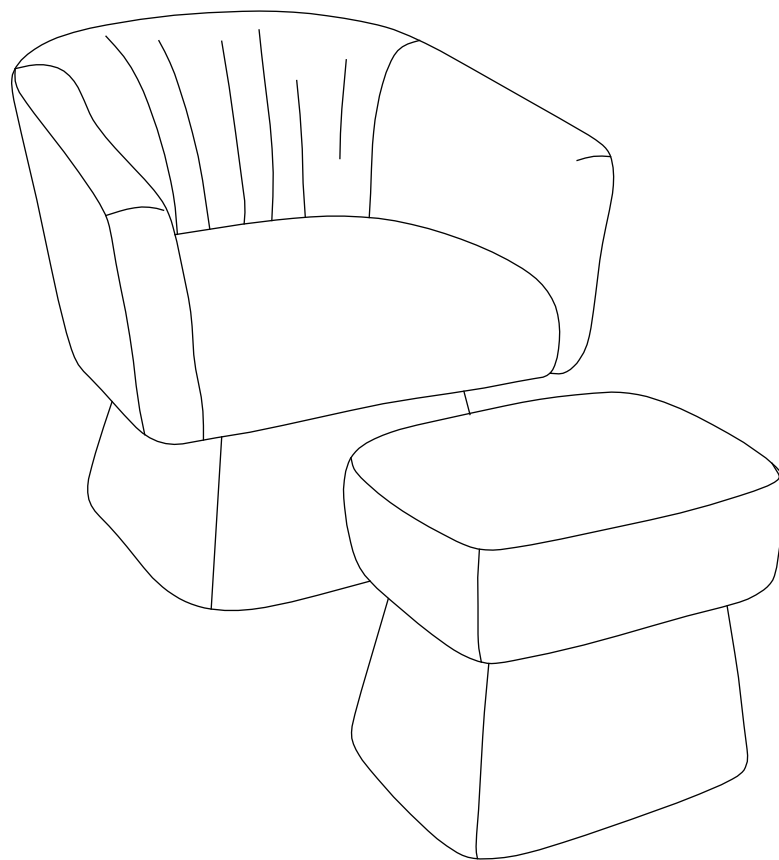




 CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

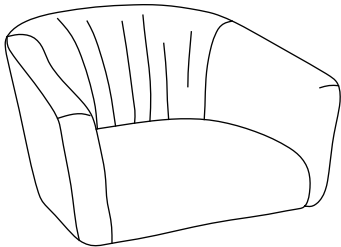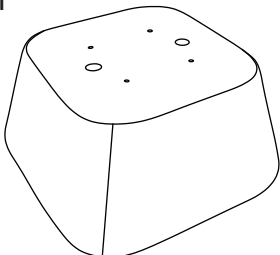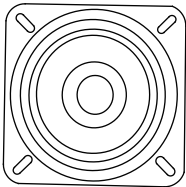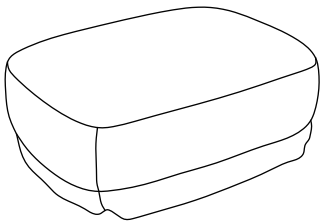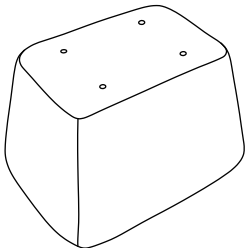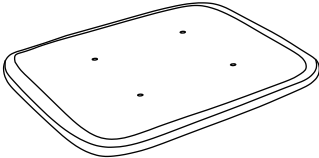
A x 1  Chair Body	B x 1  Chair Base	C x 1  Swivel Plate
D x 1  Ottoman Cushion	E x 1  Ottoman Base	F x 1  Ottoman Board
H1 x 8  M6X18mm Short Bolt	H2 x 4  M6X40mm Long Bolt	H3 x 8  M6 Spring Washer
H4 x 12  M6X16mm Flat Washer	T1 x 1  Allen Wrench	

ASSEMBLY INSTRUCTIONS

- 1 Open the carton package and remove all the parts and hardware from the accessory bag. Make sure all of the parts same as above lists as shown. Open the vacuum-packed bag containing the Ottoman Cushion (D).
Note: DO NOT use sharp tools such as knives or scissors to open these bags as it could potentially damage the cushions. Please use your hands to gently pull the bags apart.

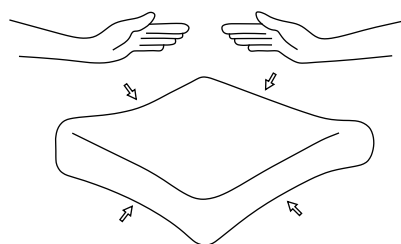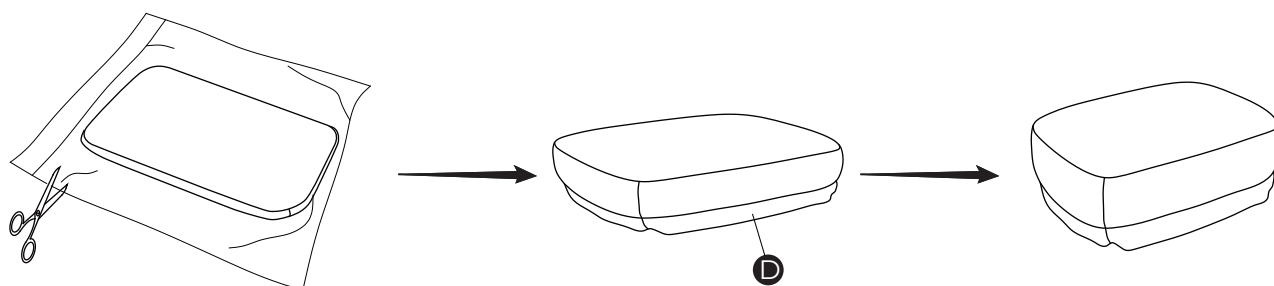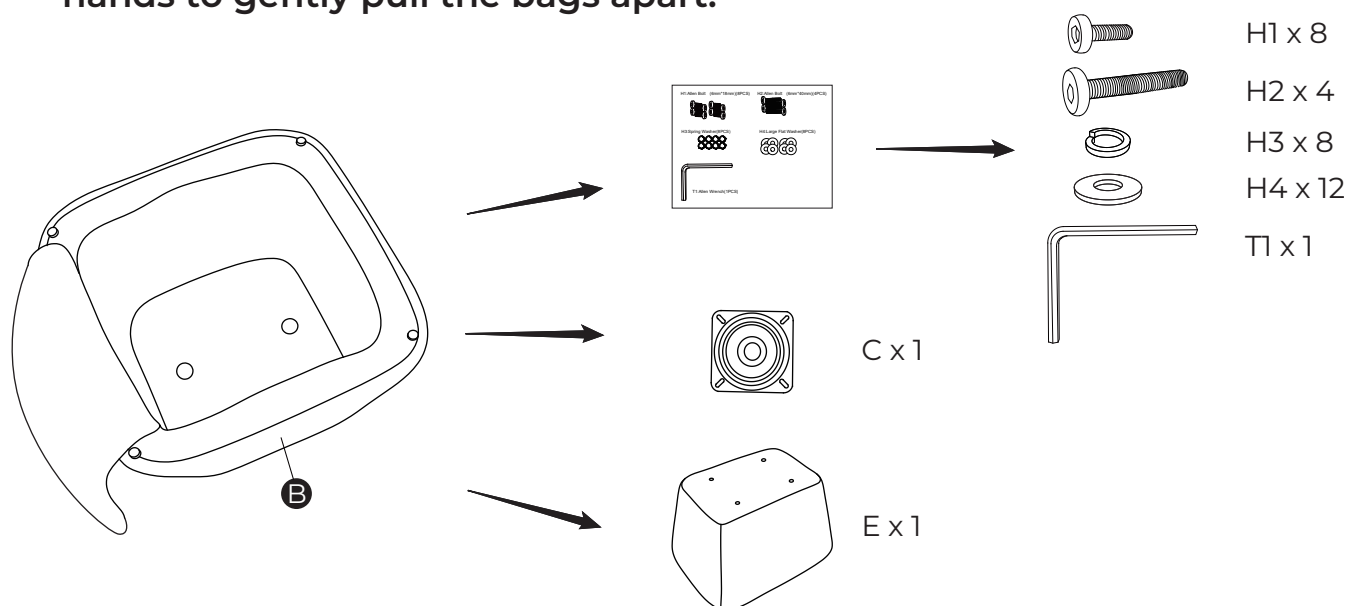


Due to package compression for better shipment, the fabric may have wrinkles, these wrinkles will gradually disappear. Please pat the Ottoman Cushion (D) to help it return to the original thickness.

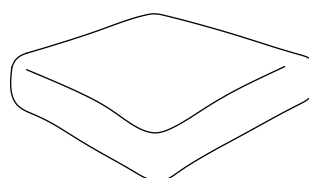


Please be patient and wait for the cushions to return to its fluffy state, which may take 48 to 72 hours.


- 2 Rotate the Swivel Plate (C) by 45 degrees.

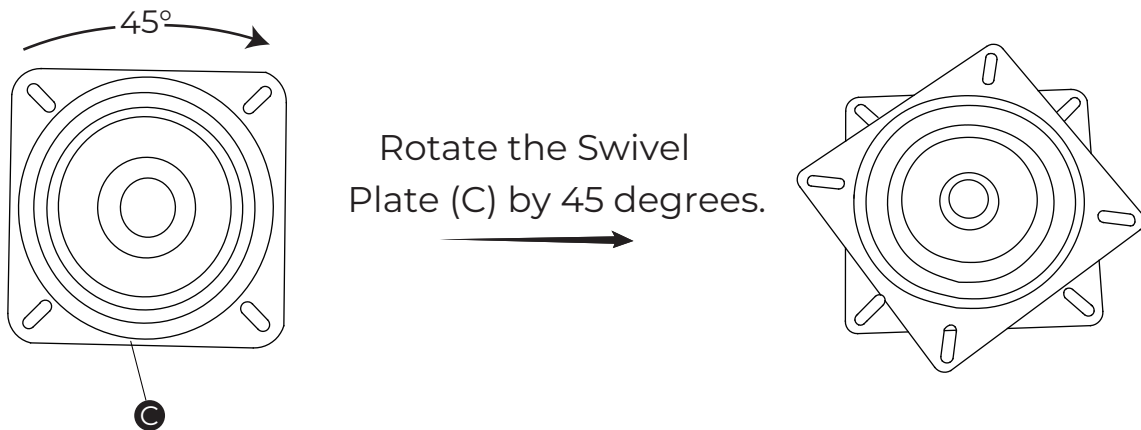


- 3 Attach the Swivel Plate (C) to the Chair Base (B) using Short Bolts (H1), Spring Washers (H3), Flat Washers (H4) and Allen Wrench (T1).
Note: Do not fully tighten any bolts initially. After all four bolts are attached, use Allen Wrench (T1) to fully tighten them.

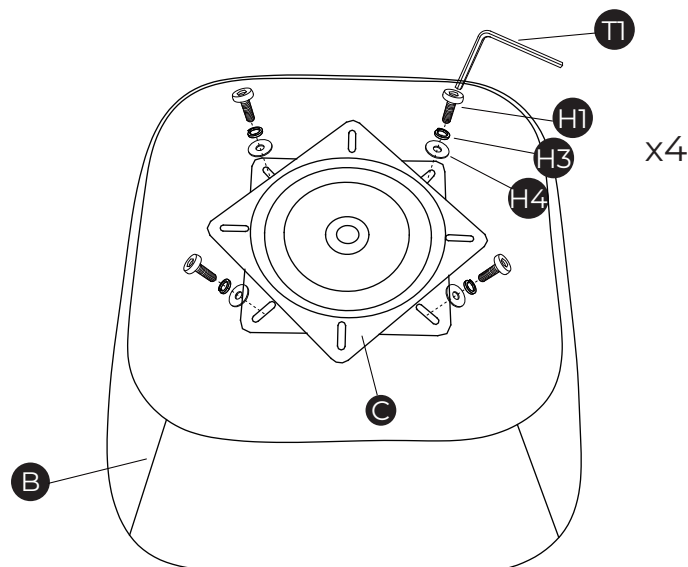


- 4** Attach the Chair Base (B) to the Chair Body (A) using Short Bolts (H1), Spring Washers (H3), Flat Washers (H4) and Allen Wrench (T1). **Do not fully tighten.** Then, rotate the Chair Base (B) by 90 degrees. Attach the remaining Short Bolts (H1), Spring Washers (H3) and Flat Washers (H4) using Allen Wrench (T1). **Fully tighten all bolts.**

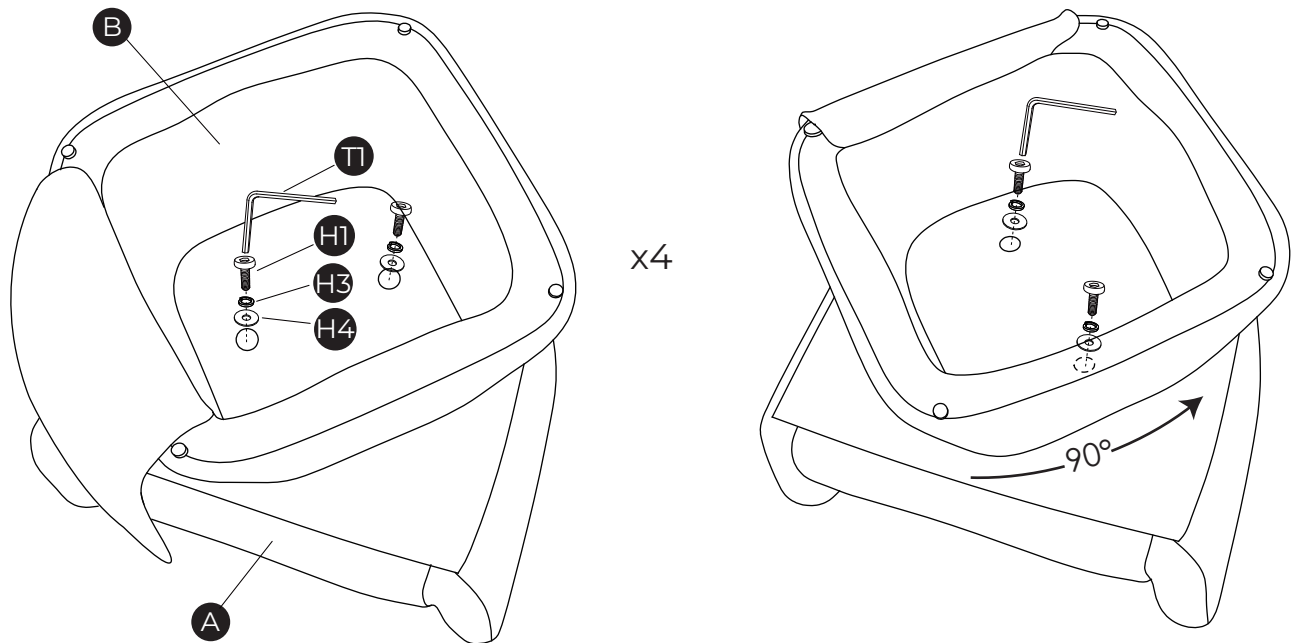


- 5** Close the bottom zipper. Assembly complete, it's ready to use.

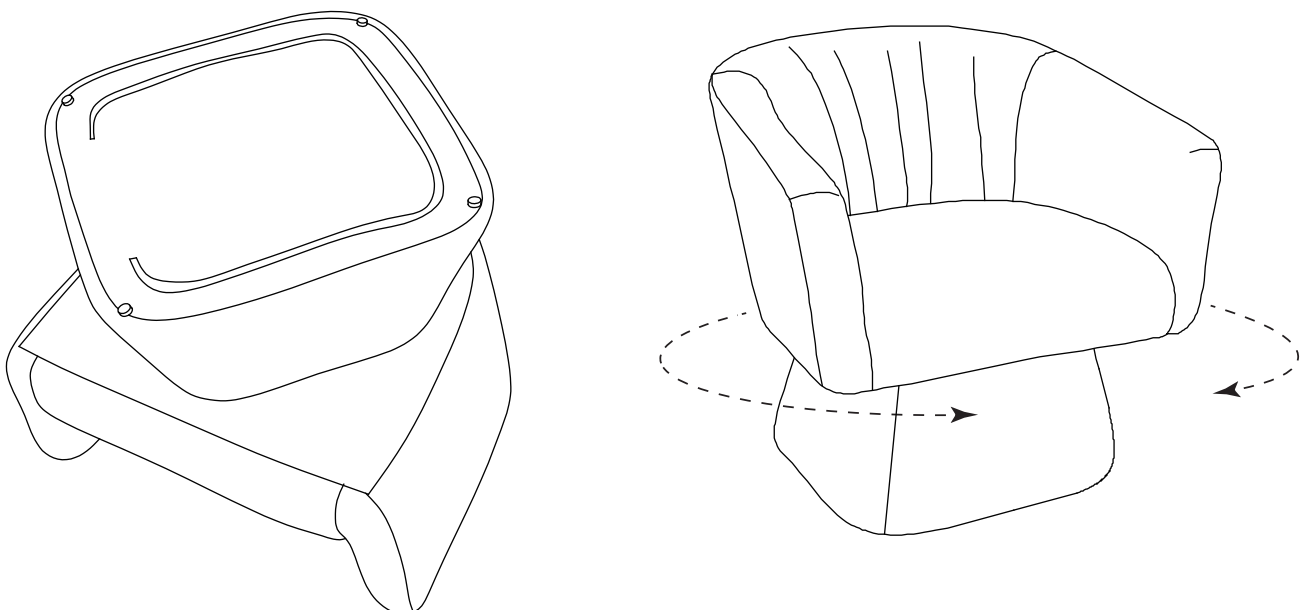

- 6** Attach the Ottoman Board (F) to the Ottoman Base (E) using Long Bolts (H2), Flat Washers (H4) and Allen Wrench (T1). Fully tighten all bolts.

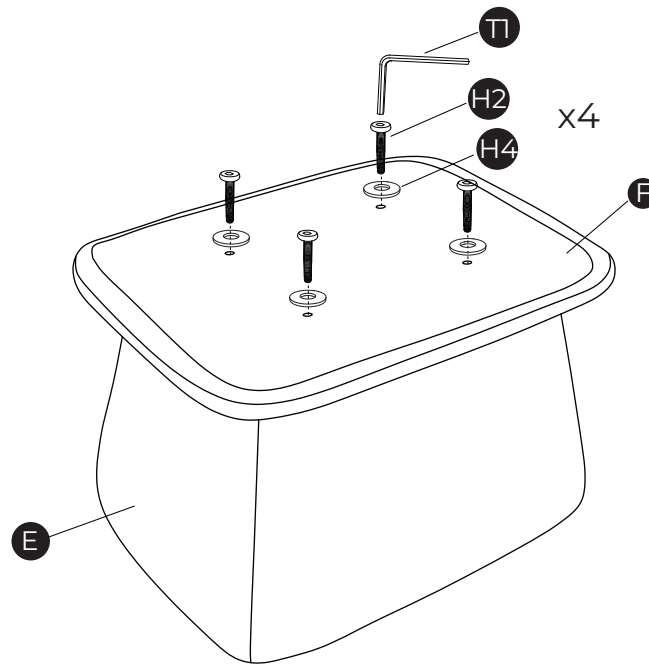

- 7** Attach the Ottoman Cushion (D) to the Ottoman Board (F), attach the Velcro along the edges of the board.

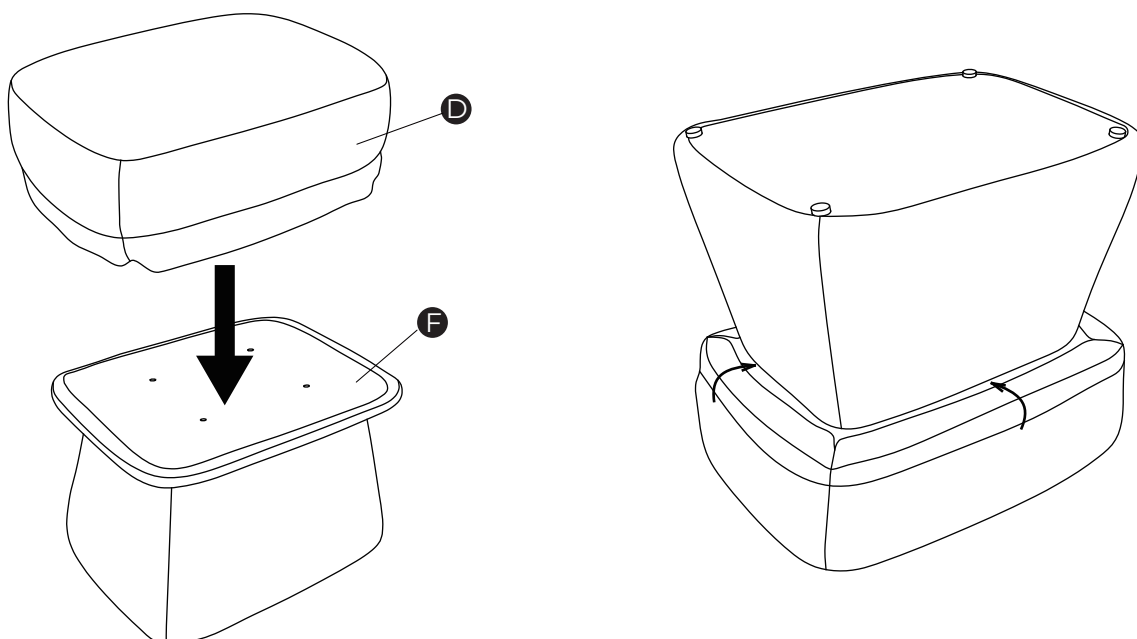

- 8** Assembly complete, it's ready to use.

