

TVCONSOLE

PAGE 10F 7

ASSEMBLY TIPS:

- Remove hardware from box and sort by size.
- Please check to see that all hardware and parts are present prior to start of assembly.
 Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.


2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

90 MINUTES

PARTS IDENTIFICATION

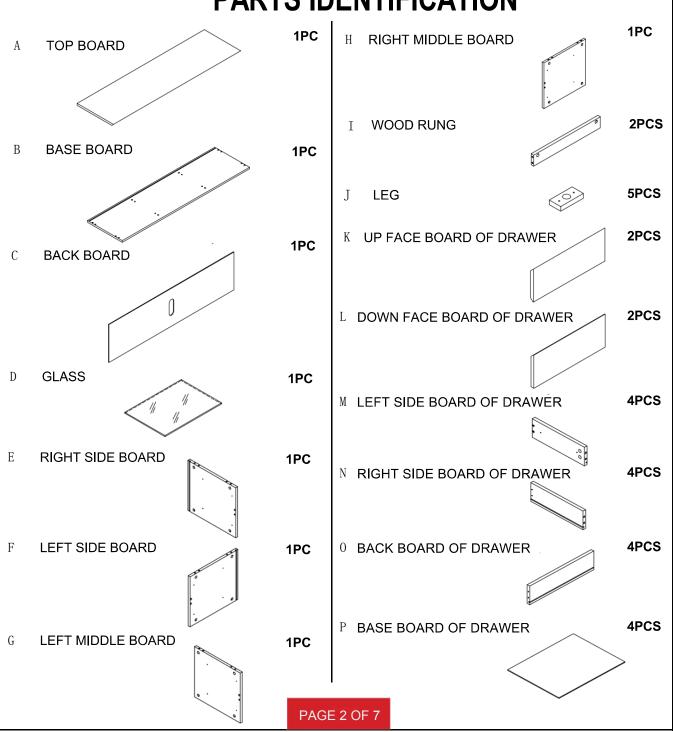

Z HARDWARE IDENTIFICATION

1 BOLT

M6*32

36PCS

2 BOLT CAP

(I)

36PCS

3 WOOD PLUG

20PCS

Ø8*30

4 SCREW

M4*25

10PCS

5 SCREW

Cummu

16PCS

M4*35

6 SLIDE RAIL

8PCS

7 SCREW

Dates

48PCS


M3.5*12

8 SHELF PIN




4SET


STEP 1

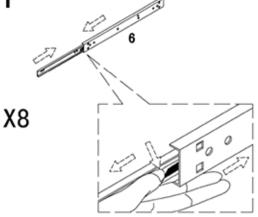


STEP 2

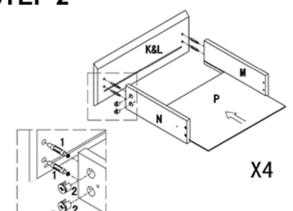



STEP 3

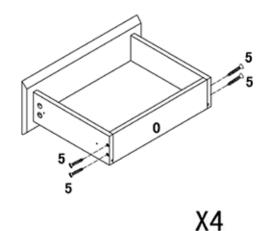


STEP 4

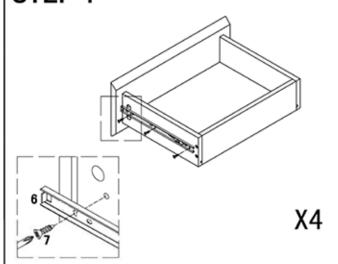


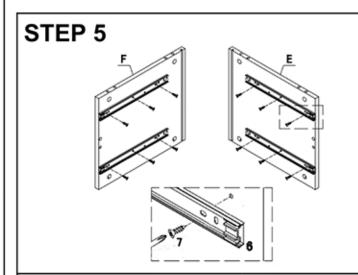


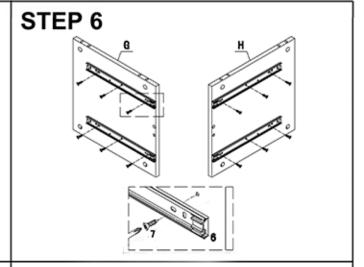



STEP 7

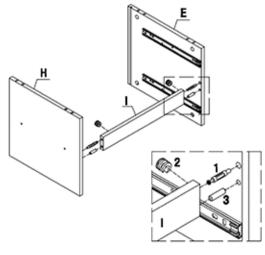

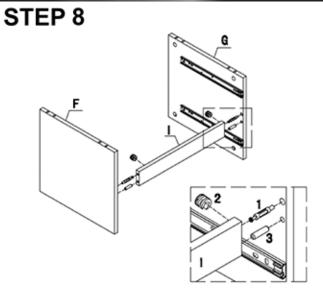


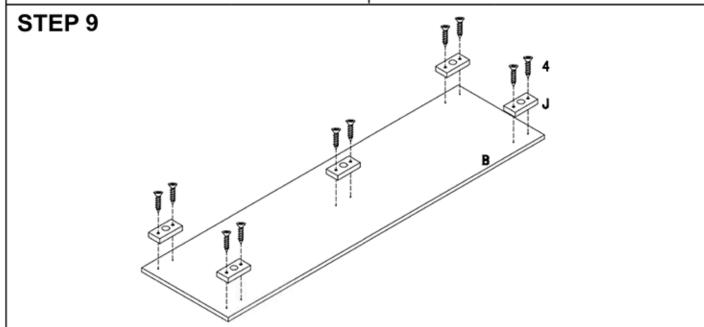

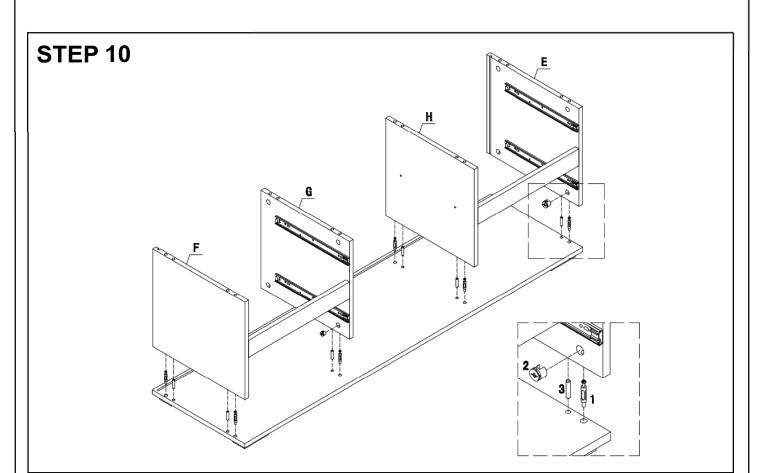


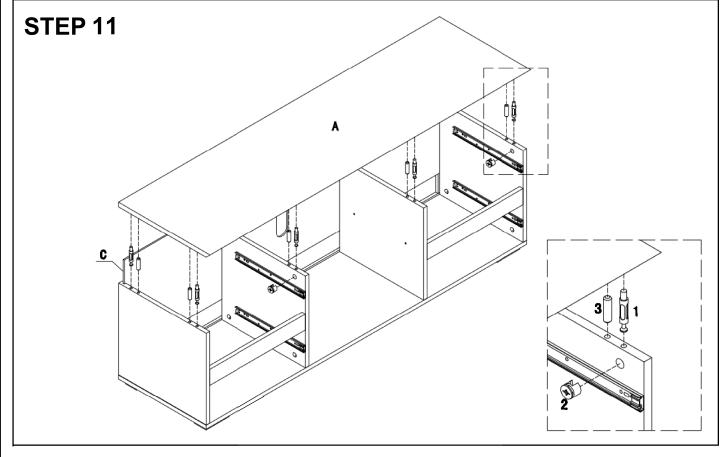


STEP 12

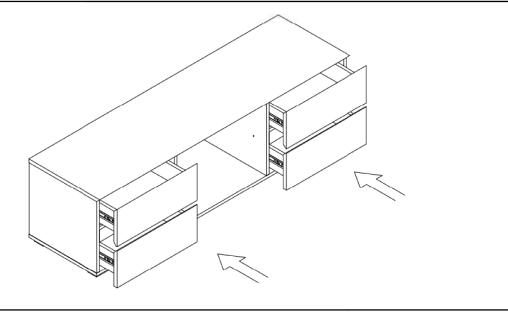


STEP 13

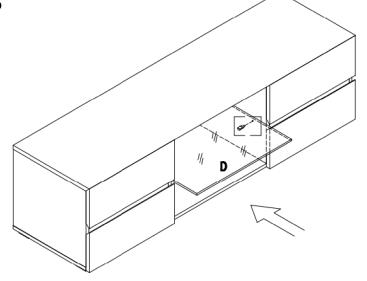


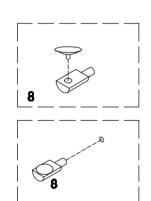

STEP 14

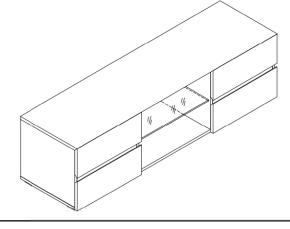



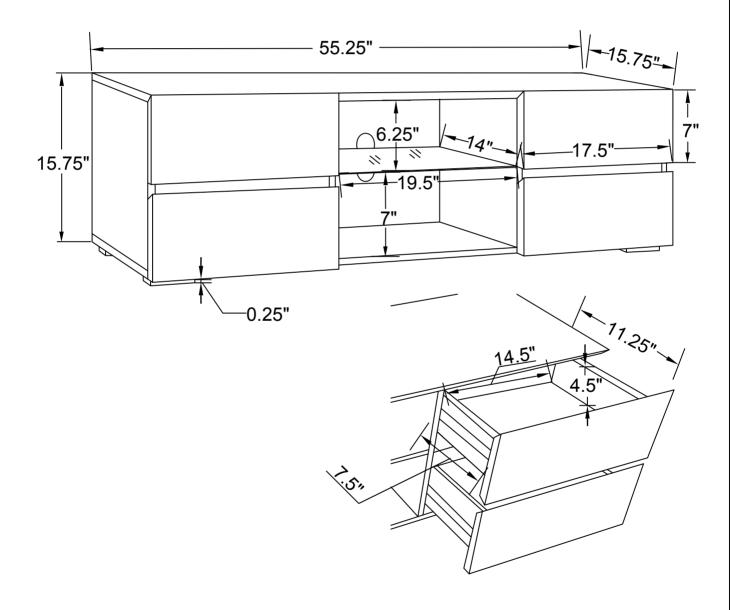

Note:Dimension tolerance±5%