



# ASSEMBLY INSTRUCTION

## Arm and Daybed


Thanks you for purchasing this quality product . Be sure to check al packing material carefully for smal parts that may have come loose inside the carton during shipment.

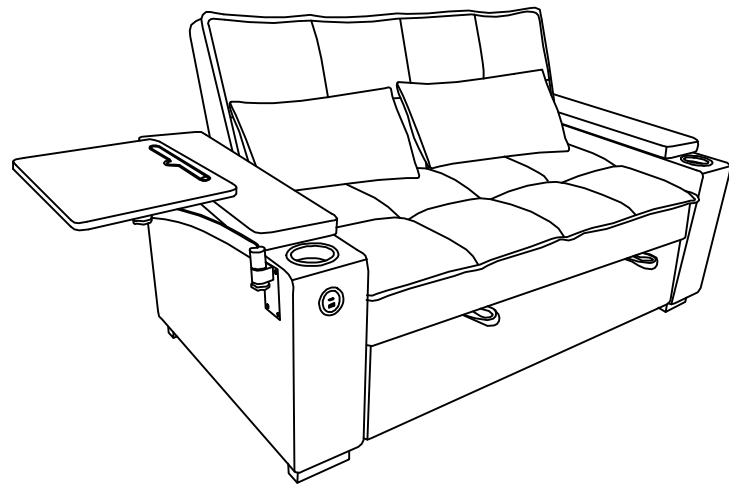


### Parts list:

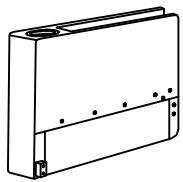

A\*1PC

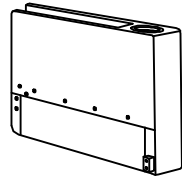

B\*1PC

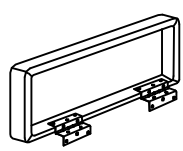


C\*2PCS




D\*2PCS




E\*1PC




F\*4PCS

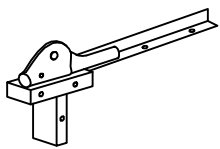


G\*1PC

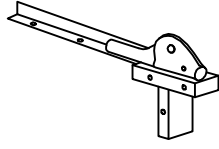


H\*1PC

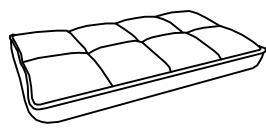


I\*1PC

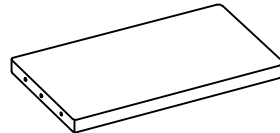


J\*1PC

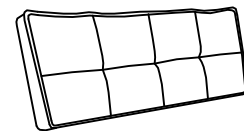


K\*1PC

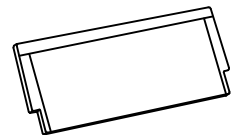


L\*1PC

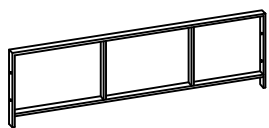


M\*1PC

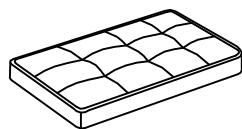

N\*1PC

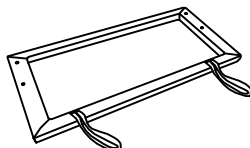


O\*1PC

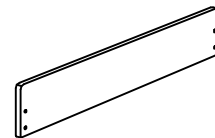


P\*1PC



Q\*1PC

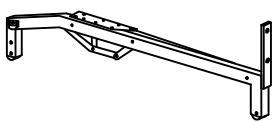

R\*1PC



S\*1PC



Y\*2PCS

### Hardware list:



20mm  
① 20PCS



25mm  
② 8PCS



50mm  
③ 8PCS



90mm  
④ 12PCS



M6\*30  
⑤ 12PCS



M6\*45  
⑥ 6PCS



⑦ 12PCS




⑧ 18PCS



⑨ 12PCS




⑩ 1PC

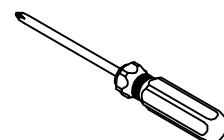


⑪ 1PC


**Step 1:**

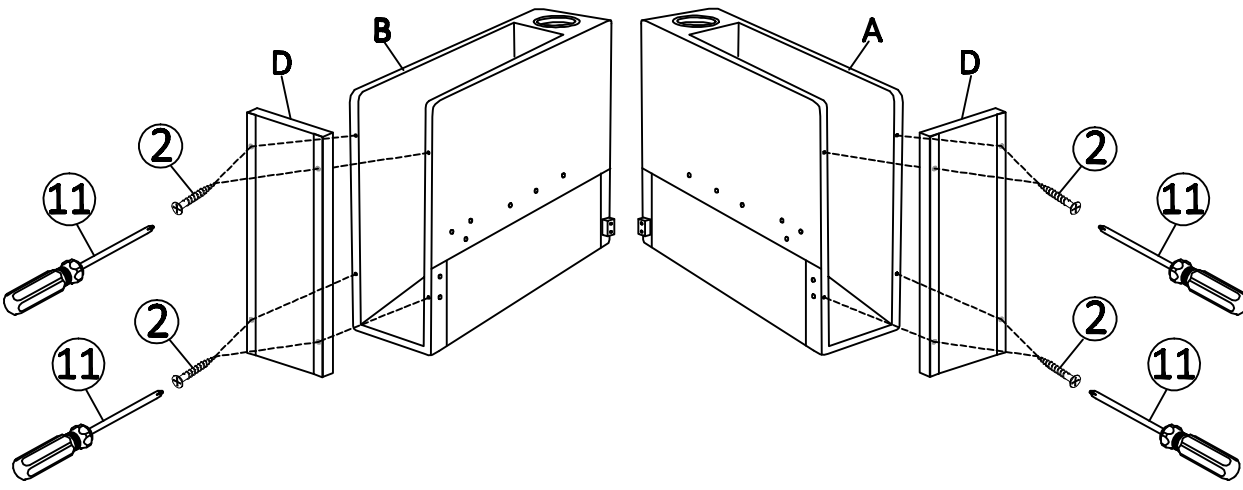


**Step 2:**

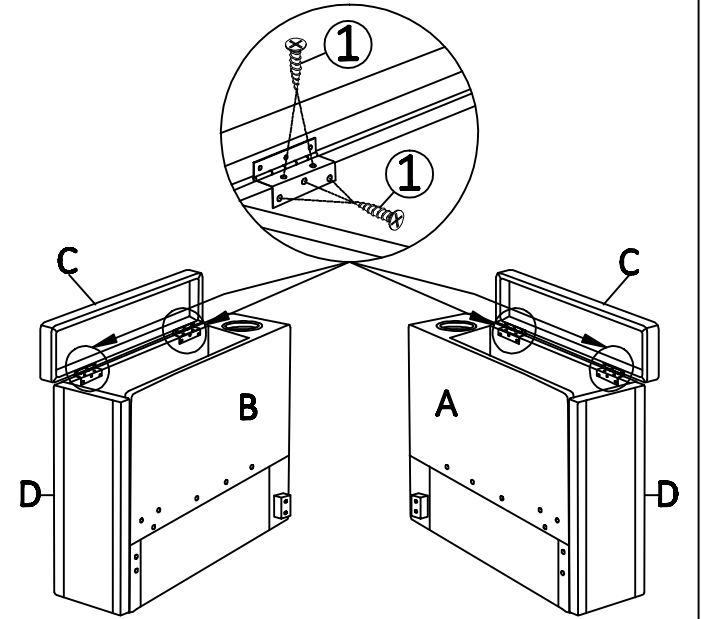


**Step 3:**

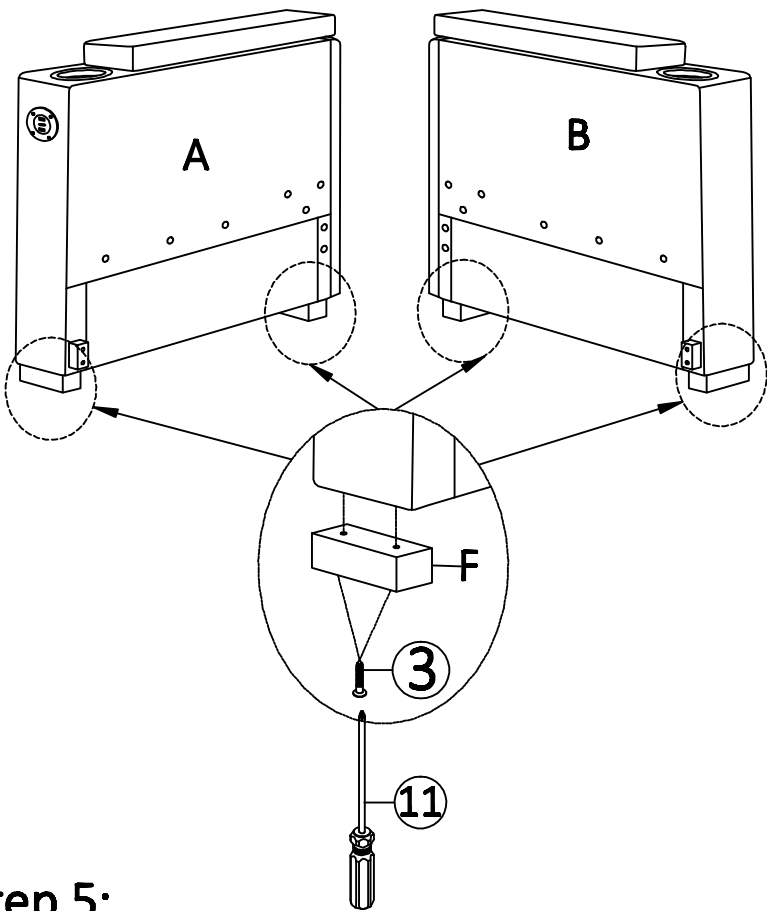


**Step 4:**

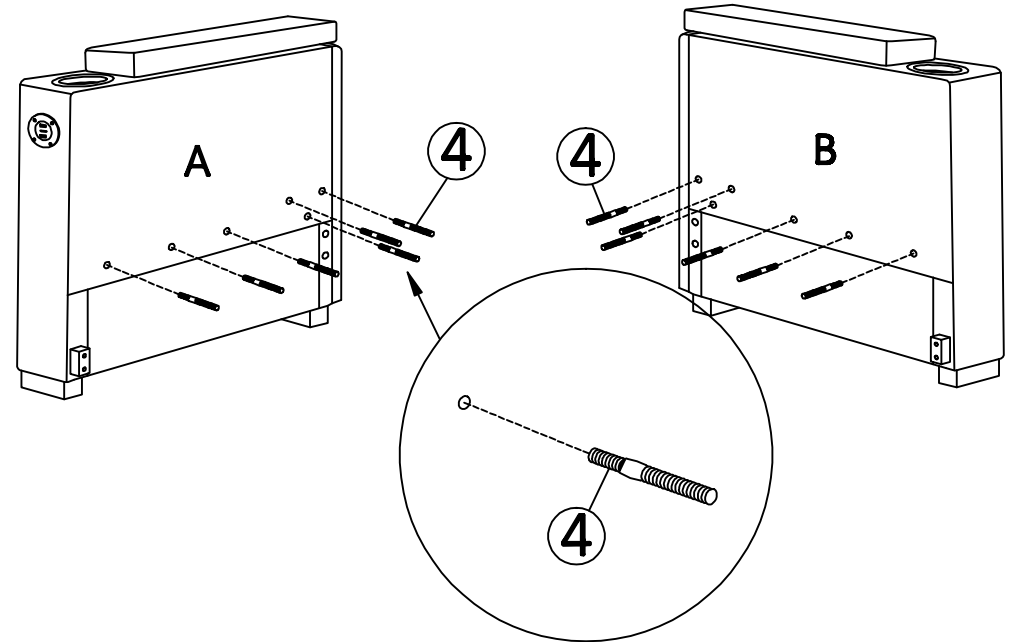



**Step 5:**

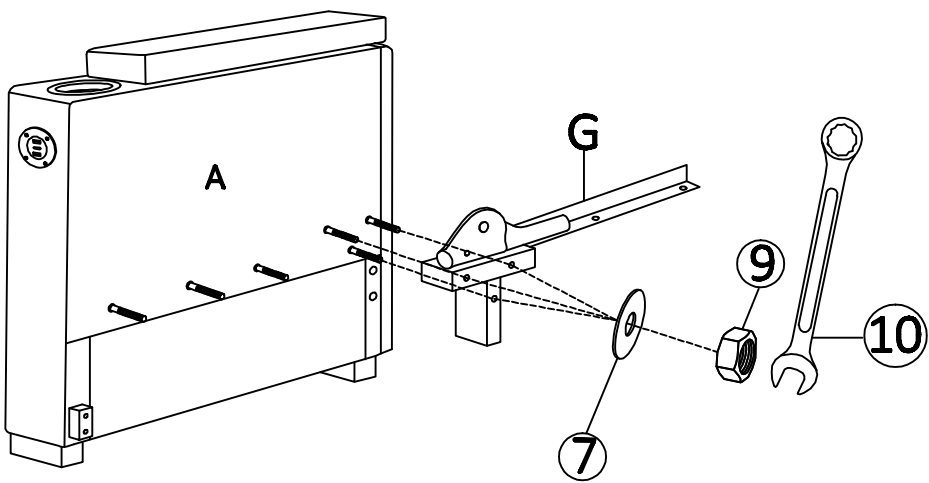

**Step 6:**

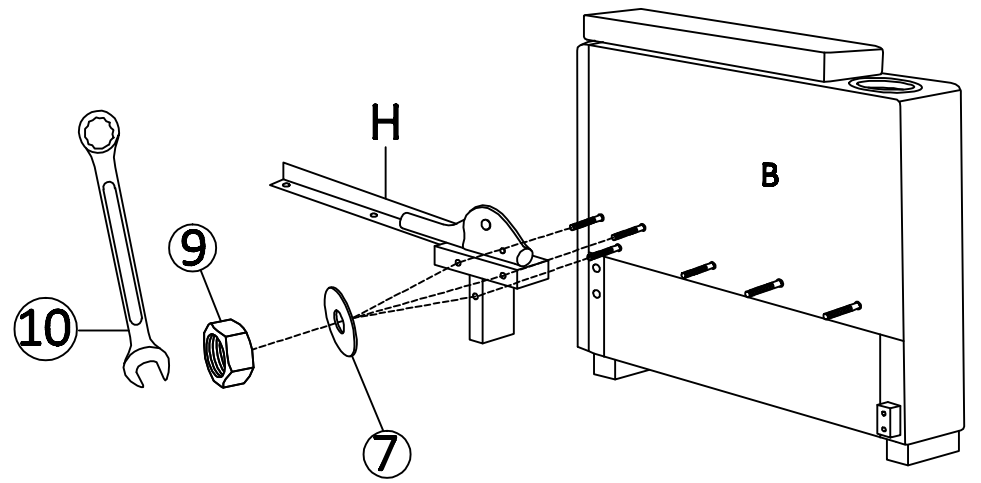


**Step 7:**

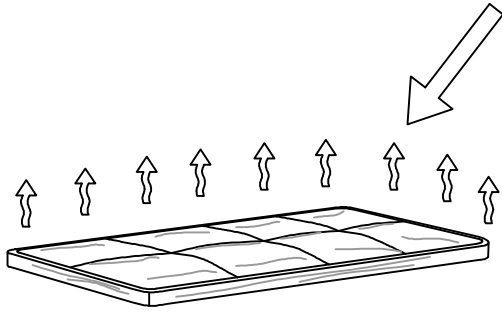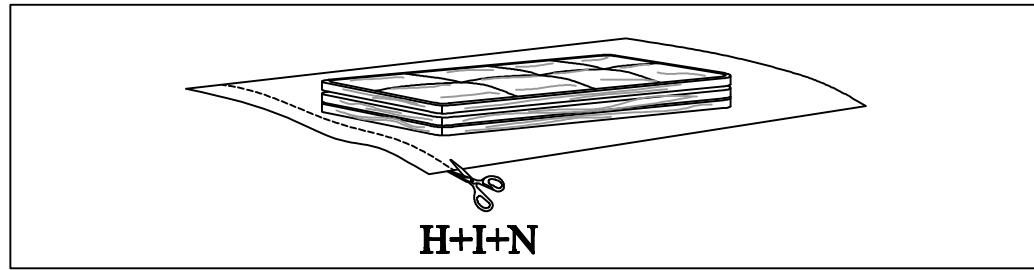


**H\*1**

Please wait for 72 hours

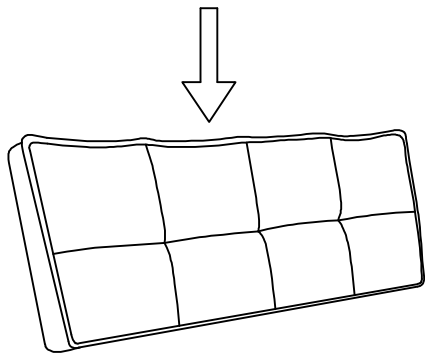


**H\*1**

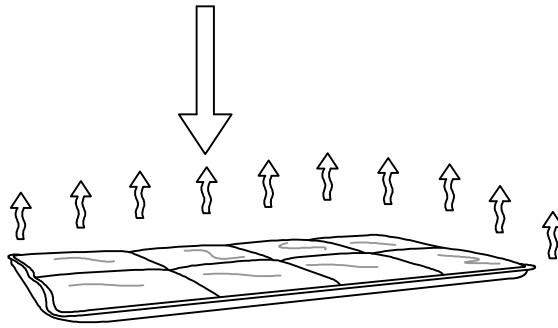


**I\*1**

Please wait for 72 hours

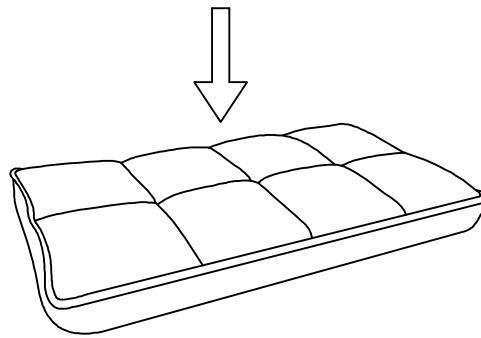


**I\*1**

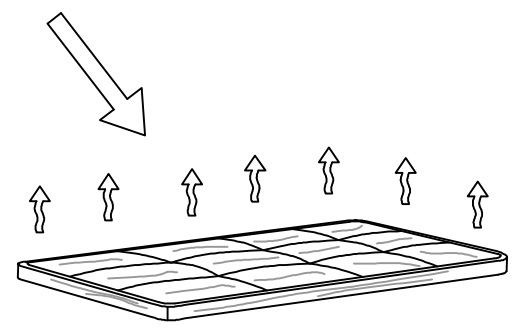

**N\*1**


Please wait for 72 hours

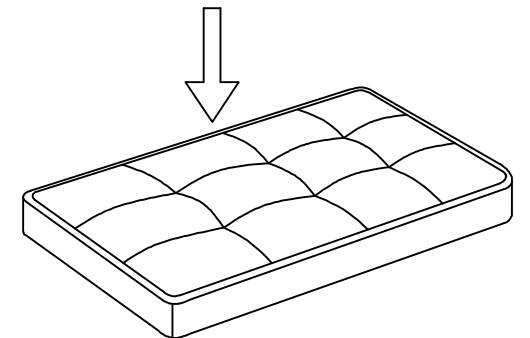


**N\*1**

**Step 8:**

**Touch fastener**

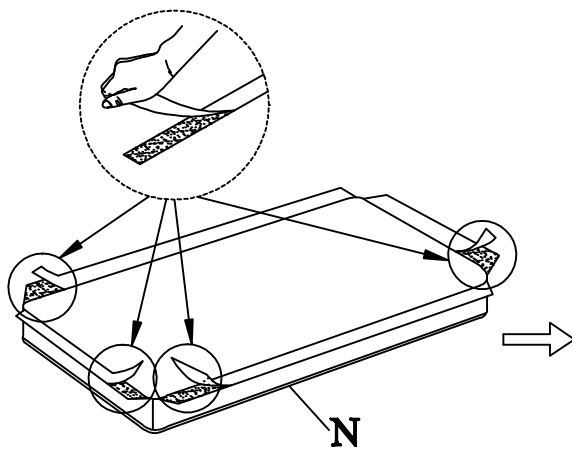


**Step 9:**

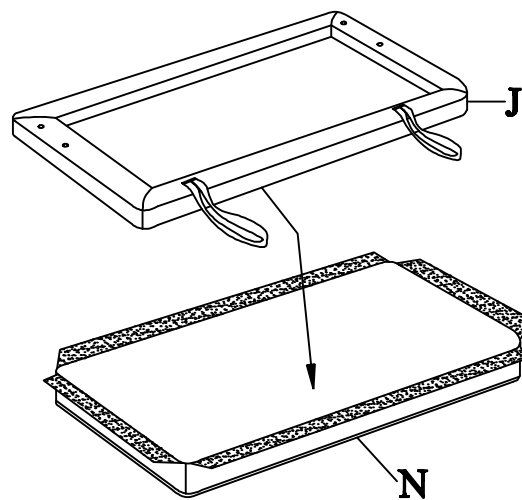


**Step 10:**


**Touch fastener**

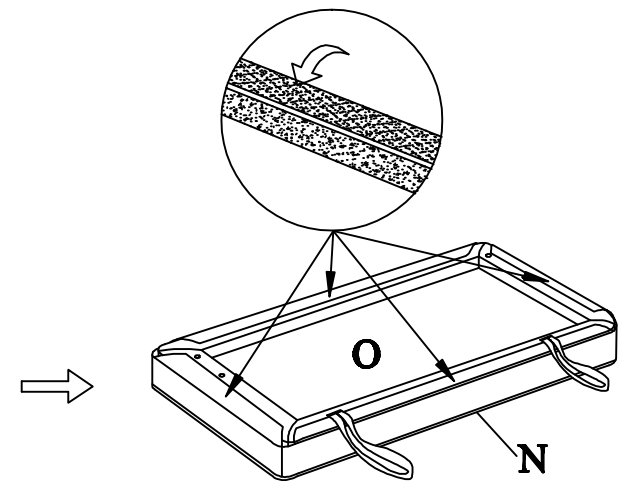


**Step 11:**

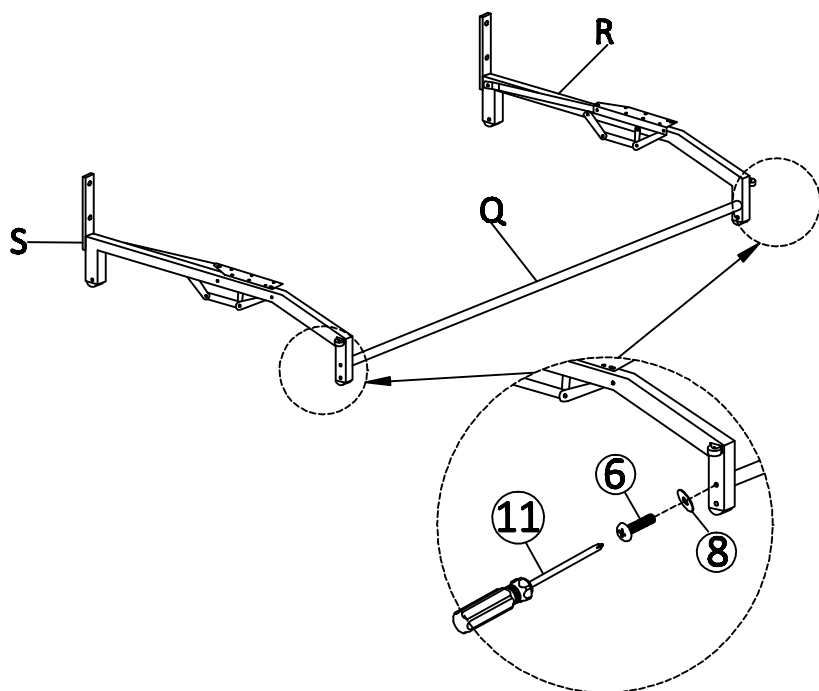


**Step 12:**

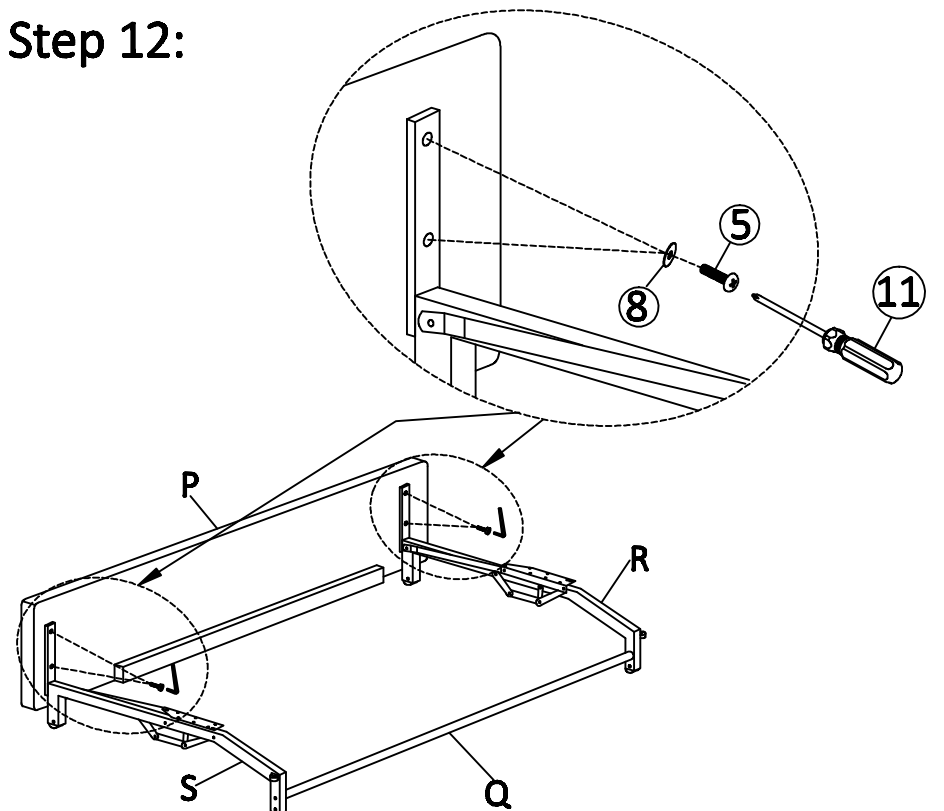

Step 13:

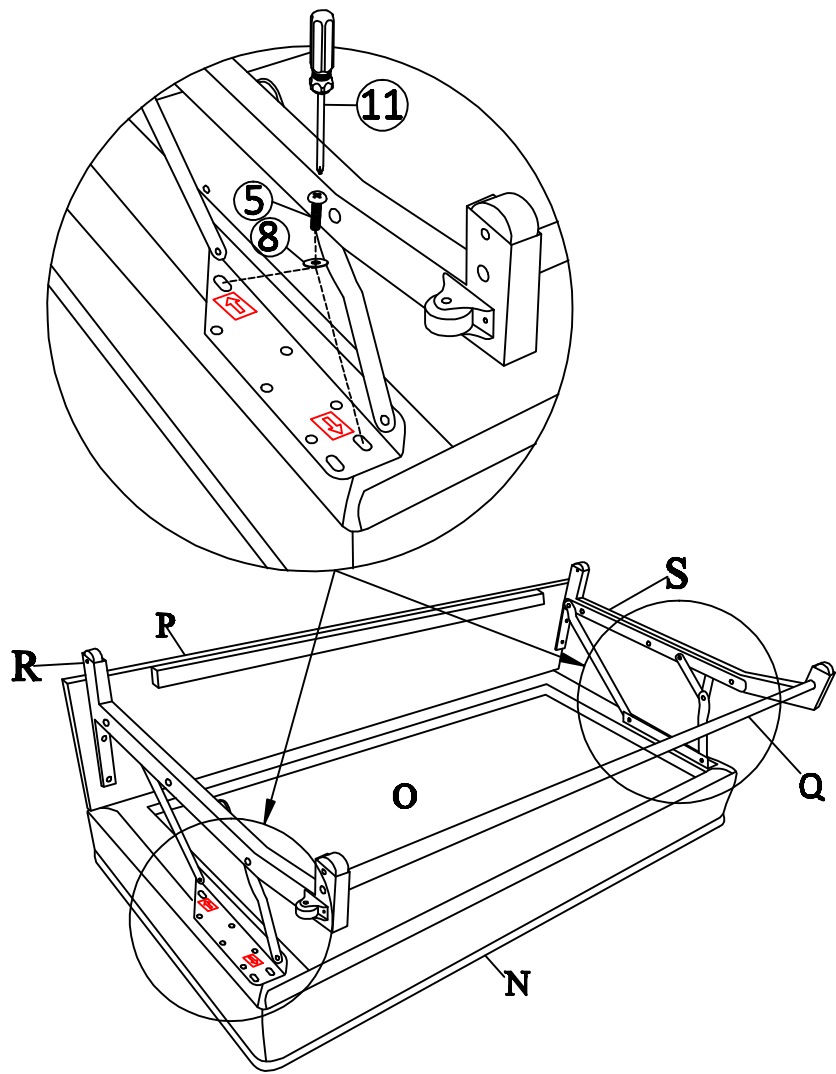

Step 14:


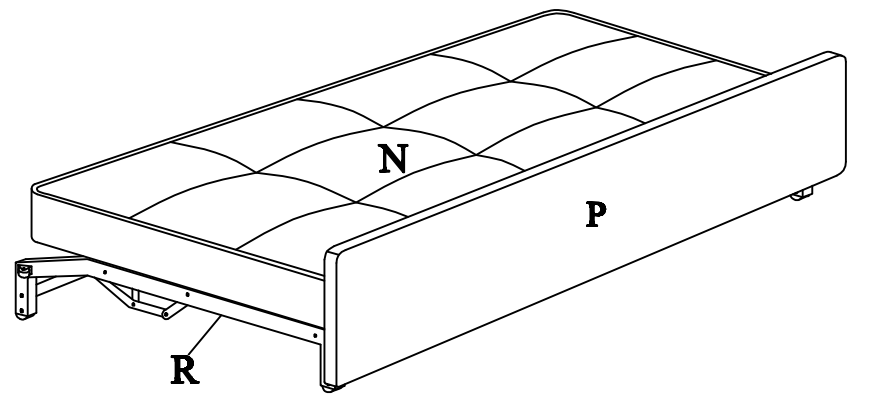


Step 15:


Step 16:

Step 17:

Touch fastener

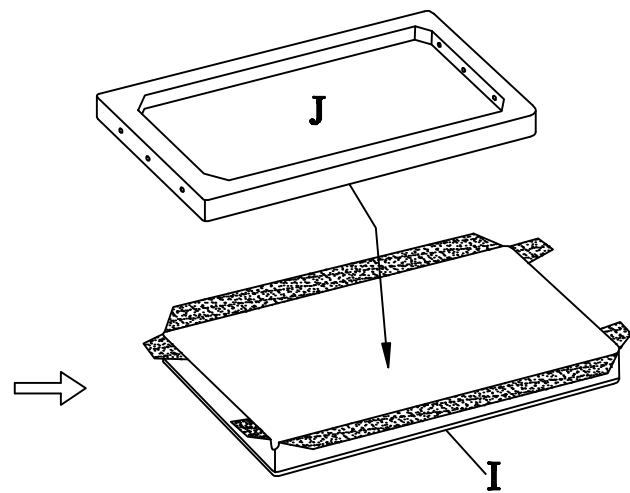
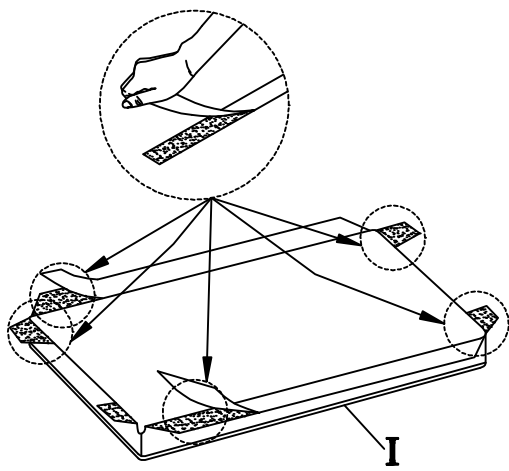


Touch fastener

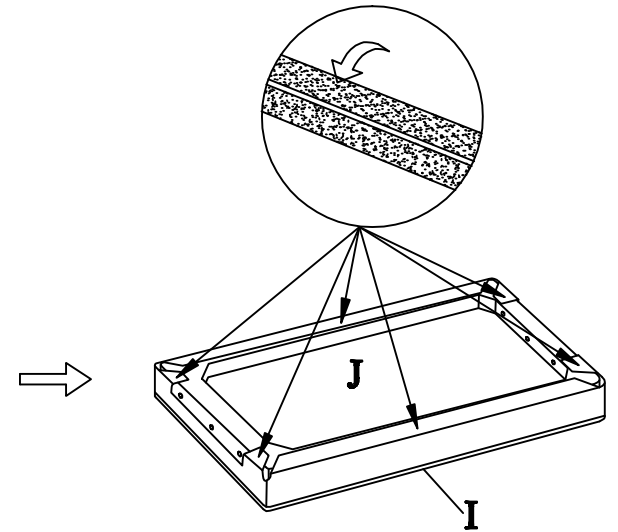



Step 18:

Step 19:

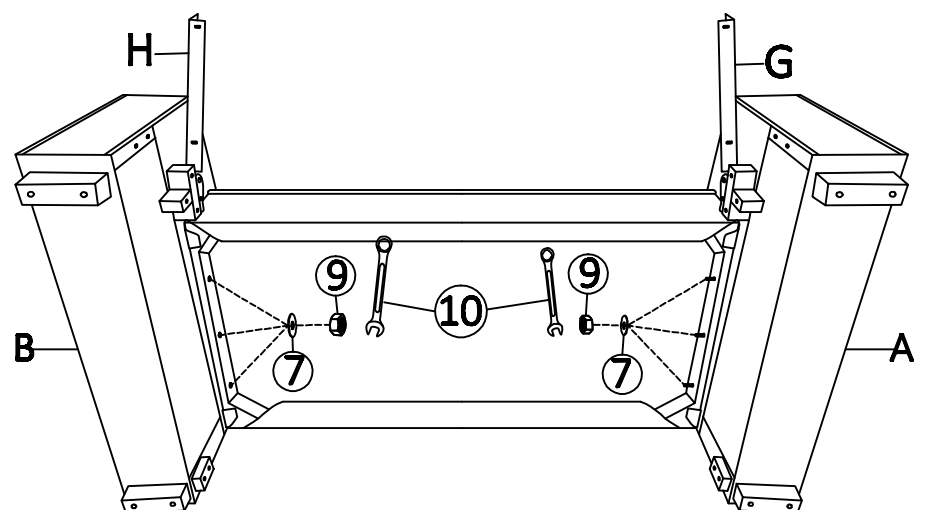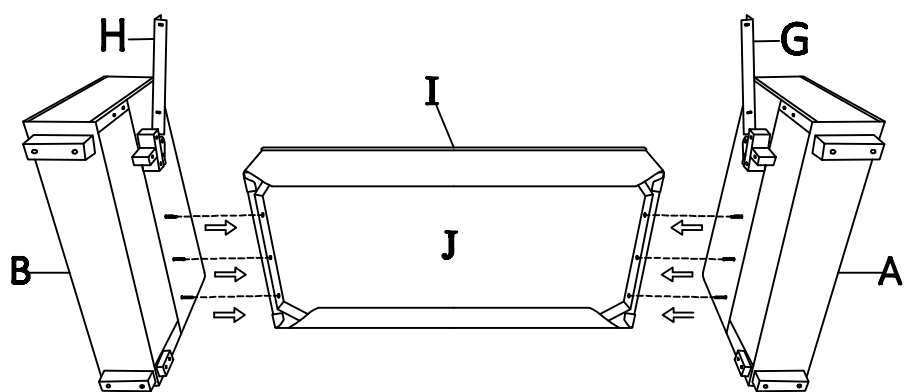


Step 20:

Step 21:

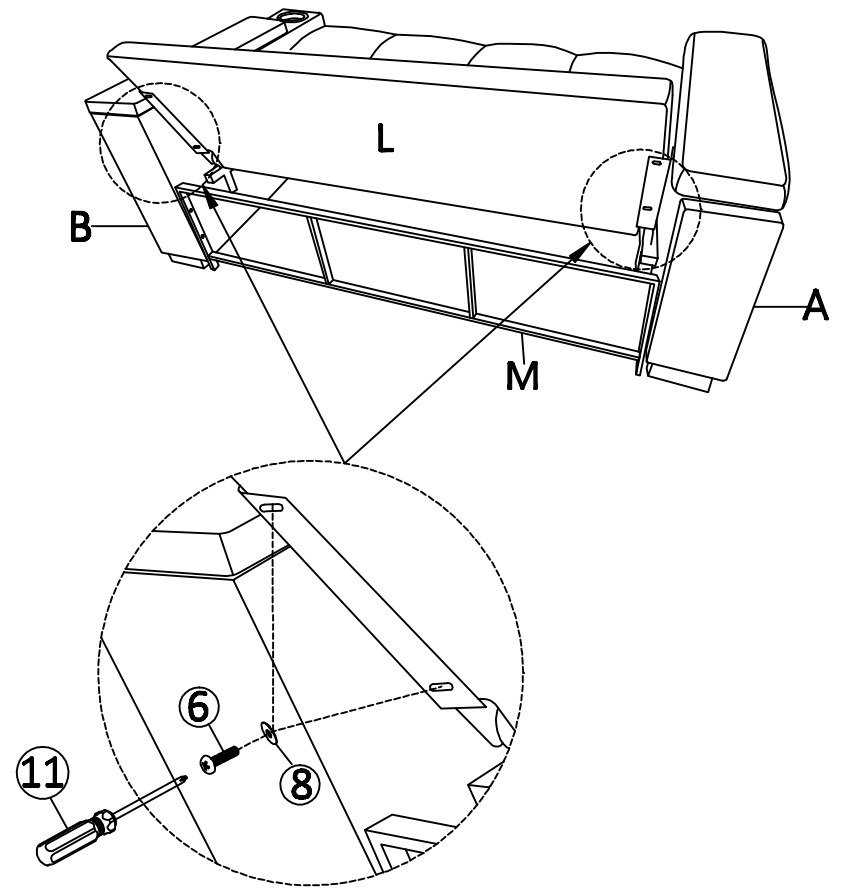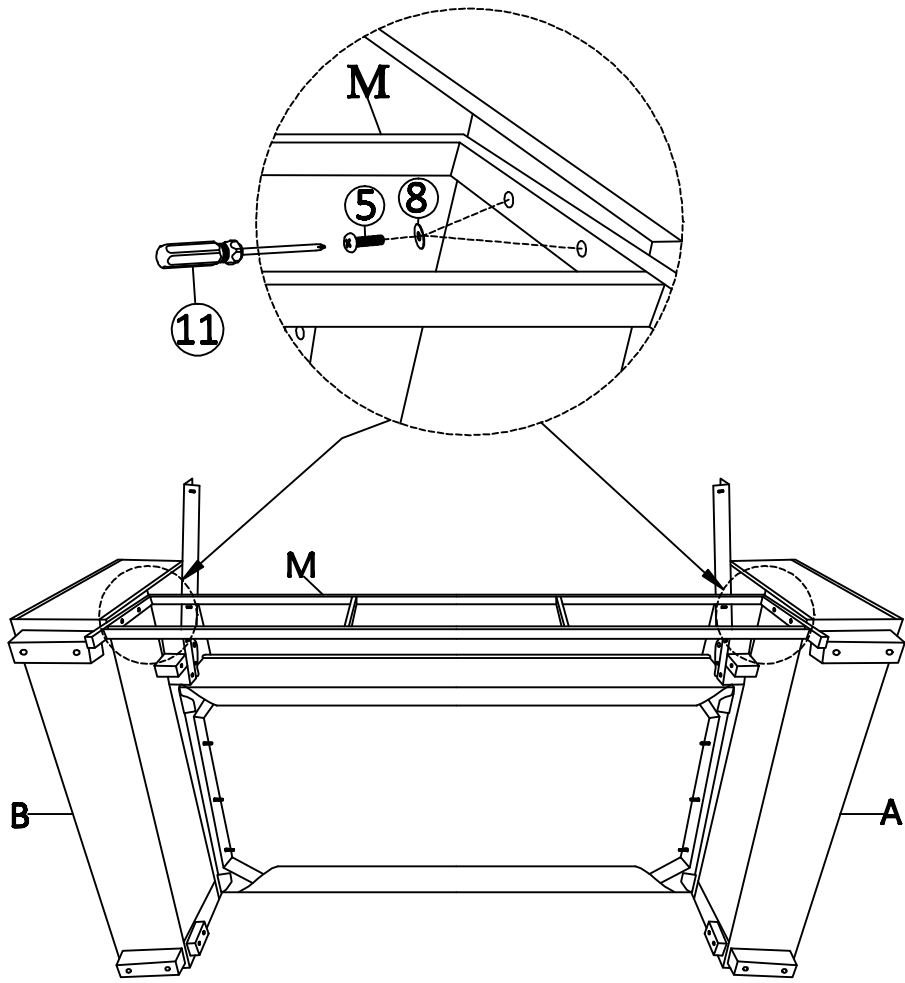

Step 22:

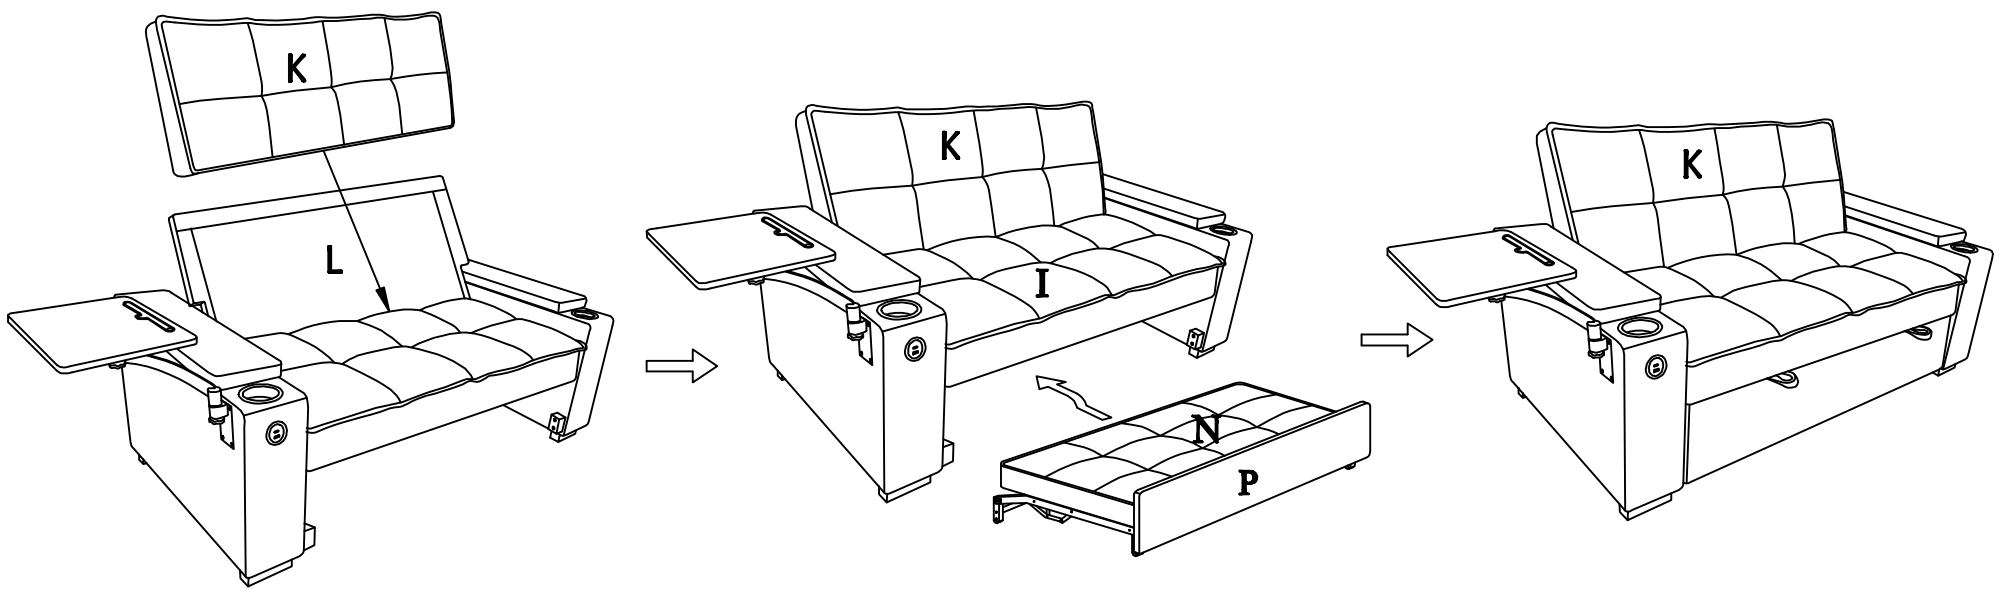

Step 23:

