ASSEMBLY INSTRUCTIONS

FULL BED

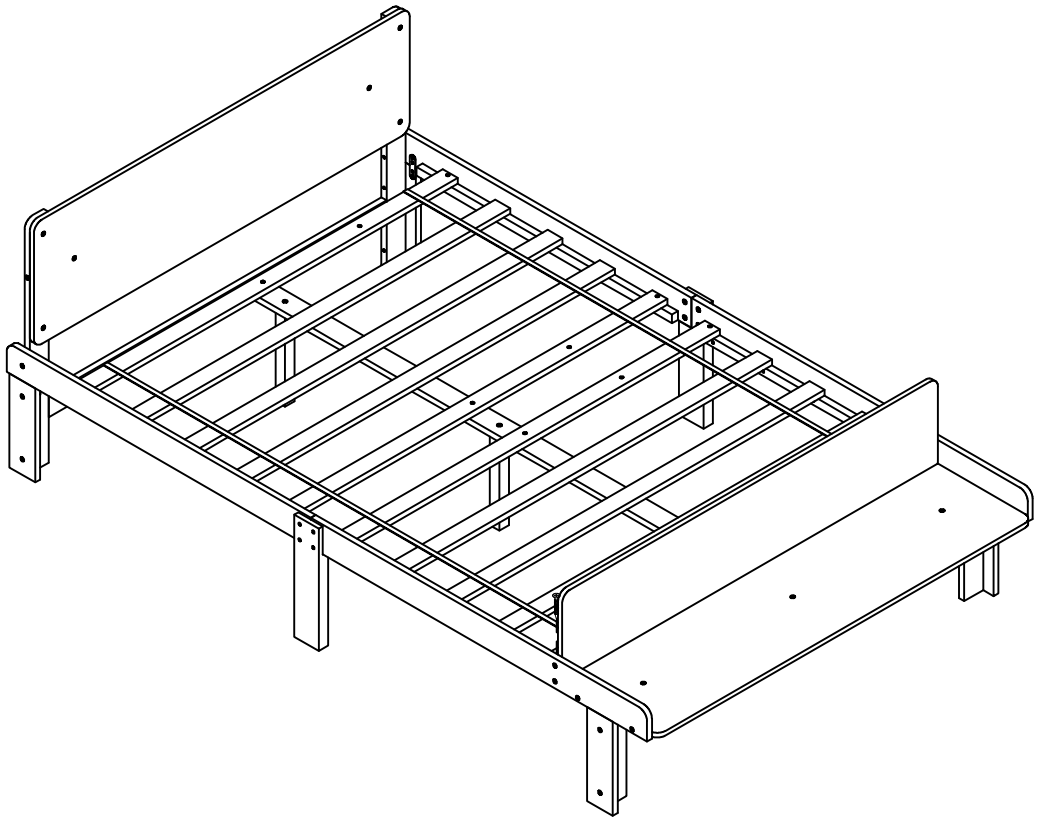

Detail View

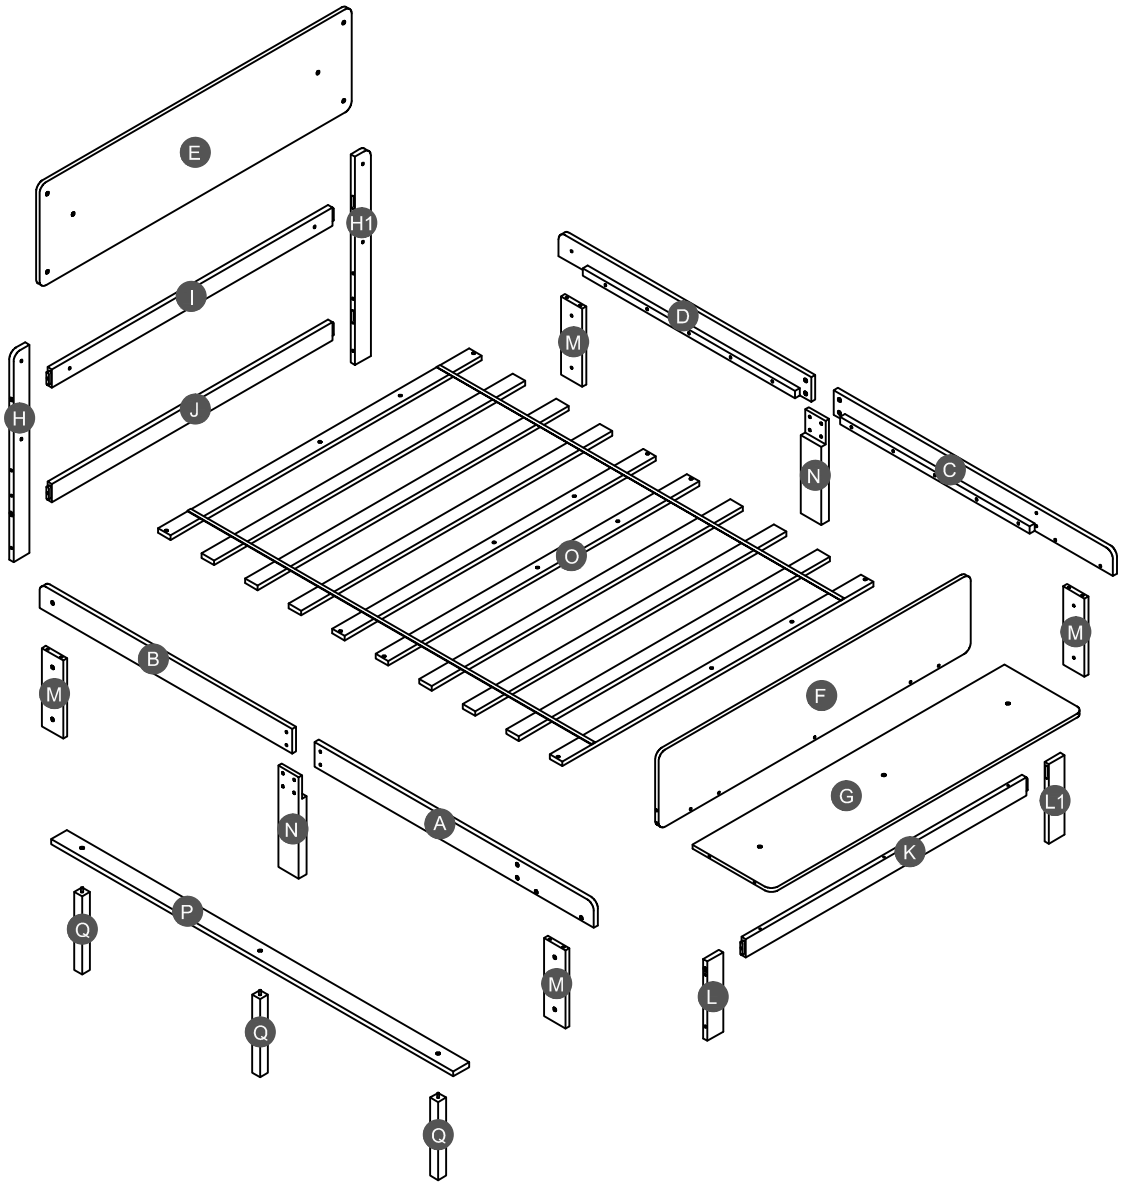

Part List

A  Side rail (Left front) - 1pc	**B**  Side rail (Left back) - 1pc	**C** Side rail (Right front) - 1pc
D Side rail (Right back) - 1pc	**E**  Back panel - 1pc	**F**  Divider panel - 1pc
G  Front panel - 1pc	**H** Leg HB (Left) - 1pc	**H1**  Leg HB (Right) - 1pc
I  Upper horizontal bar HB - 1pc	**J** Lower horizontal bar HB - 1pc	**K** Horizontal bar FB - 1pc
L  Leg FB (Left) - 1pc	**L1**  Leg FB (Right) - 1pc	**M**  Support leg - 4pcs
N  Support side rail - 2pcs	**O** 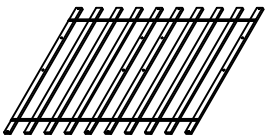 Slat - 1Set = 10pcs	**P** Lower support slat - 1pc
Q Leg support -3pcs		

Hardware List

1  Ø8*30mm	**2**  (Ø15)1/4"*100mm	**3**  (Ø12)1/4"*60mm
Wood dowel (10pcs)	Hex-Head bolts (6pcs)	Hex-Head bolts (21pcs)
4 (Ø12)1/4"*30mm	**5** 1/4"*15 (9.5mm)	**6** (Ø12)1/4"*40mm
Hex-Head bolts (14pcs)	Horizontal-Hole bolts(27pcs)	Hex-Head bolts (3pcs)
7 (1/4")4.5*58mm	**8**  Ø4*30mm	**9** 75*20*2 mm
Allen key (1pc)	Wood screws (12pcs)	Metal bracket (4pcs)
10 24*28*28*2mm	**11** Ø3.5*15mm	
Metal bracket (4pcs)	Wood screws (24pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

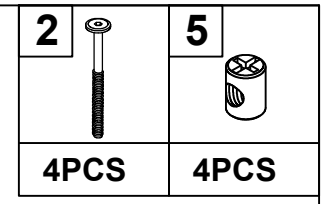

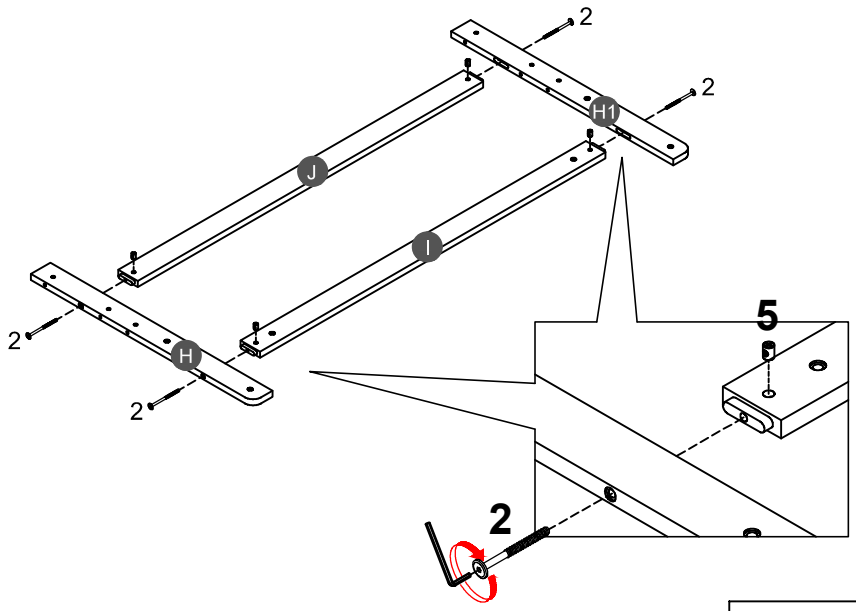

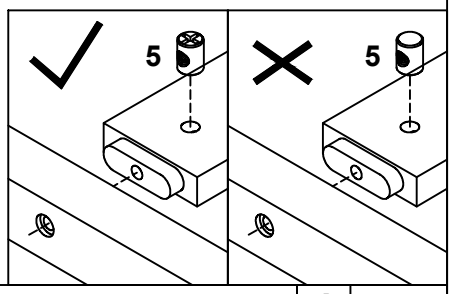

Note:Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

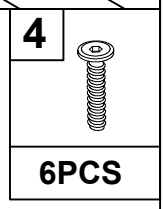

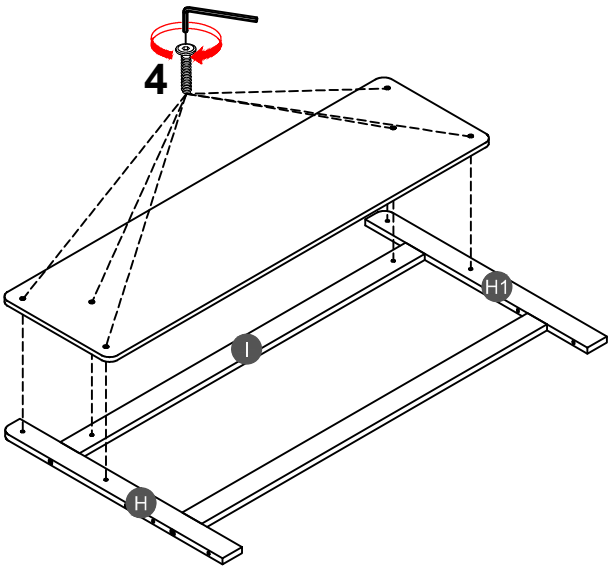

STEP 3:

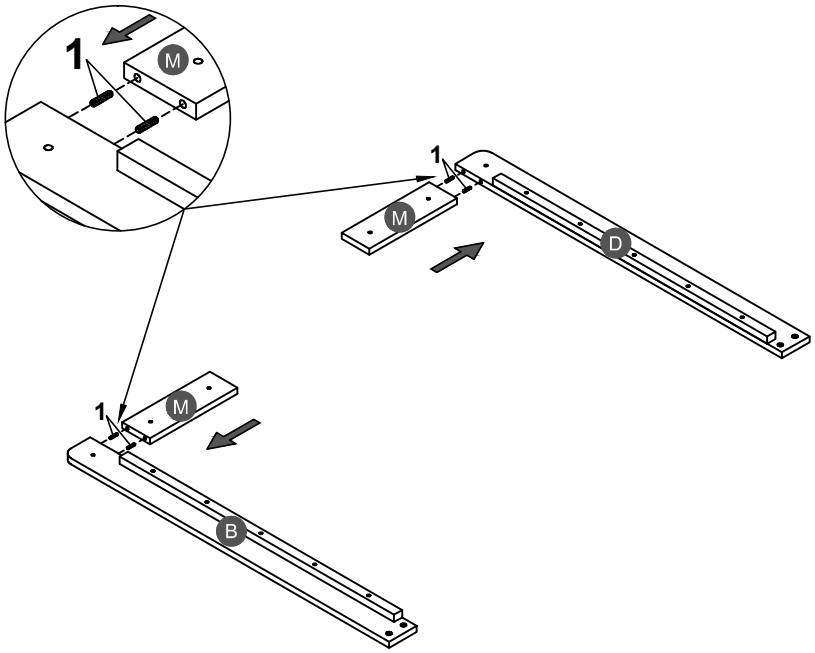

1	
	4PCS

STEP 4:

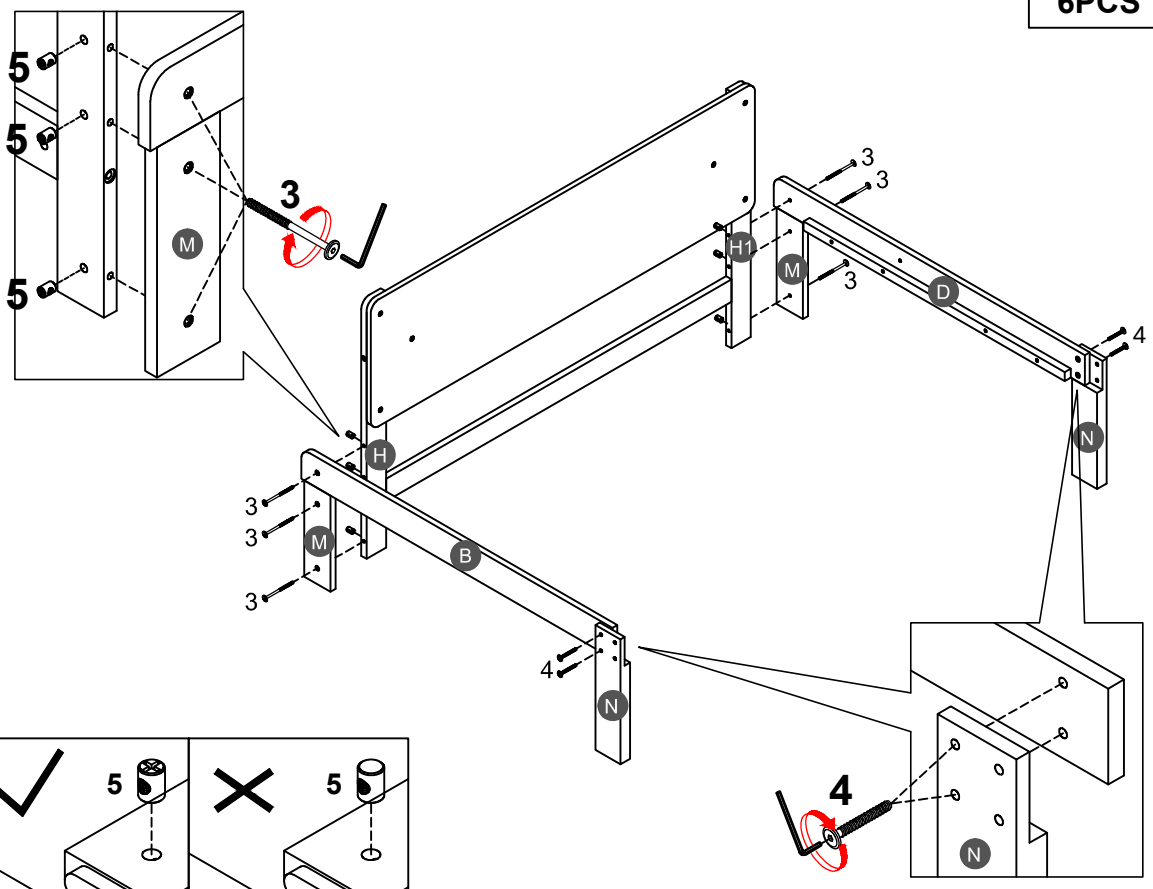

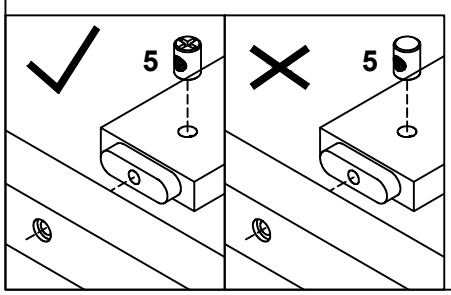

Note:Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

3	4
6PCS	4PCS

5
6PCS

STEP 5:

2	5
2PCS	2PCS

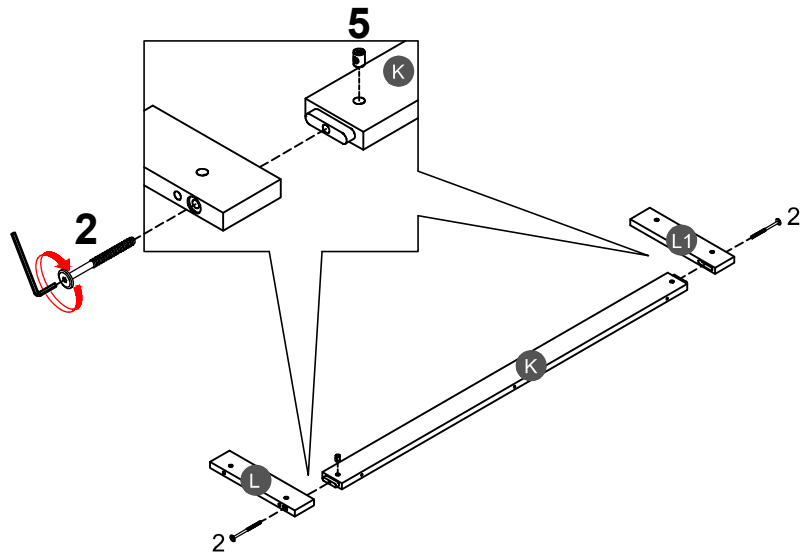

STEP 6:

1	3	4	5
4PCS	4PCS	4PCS	4PCS

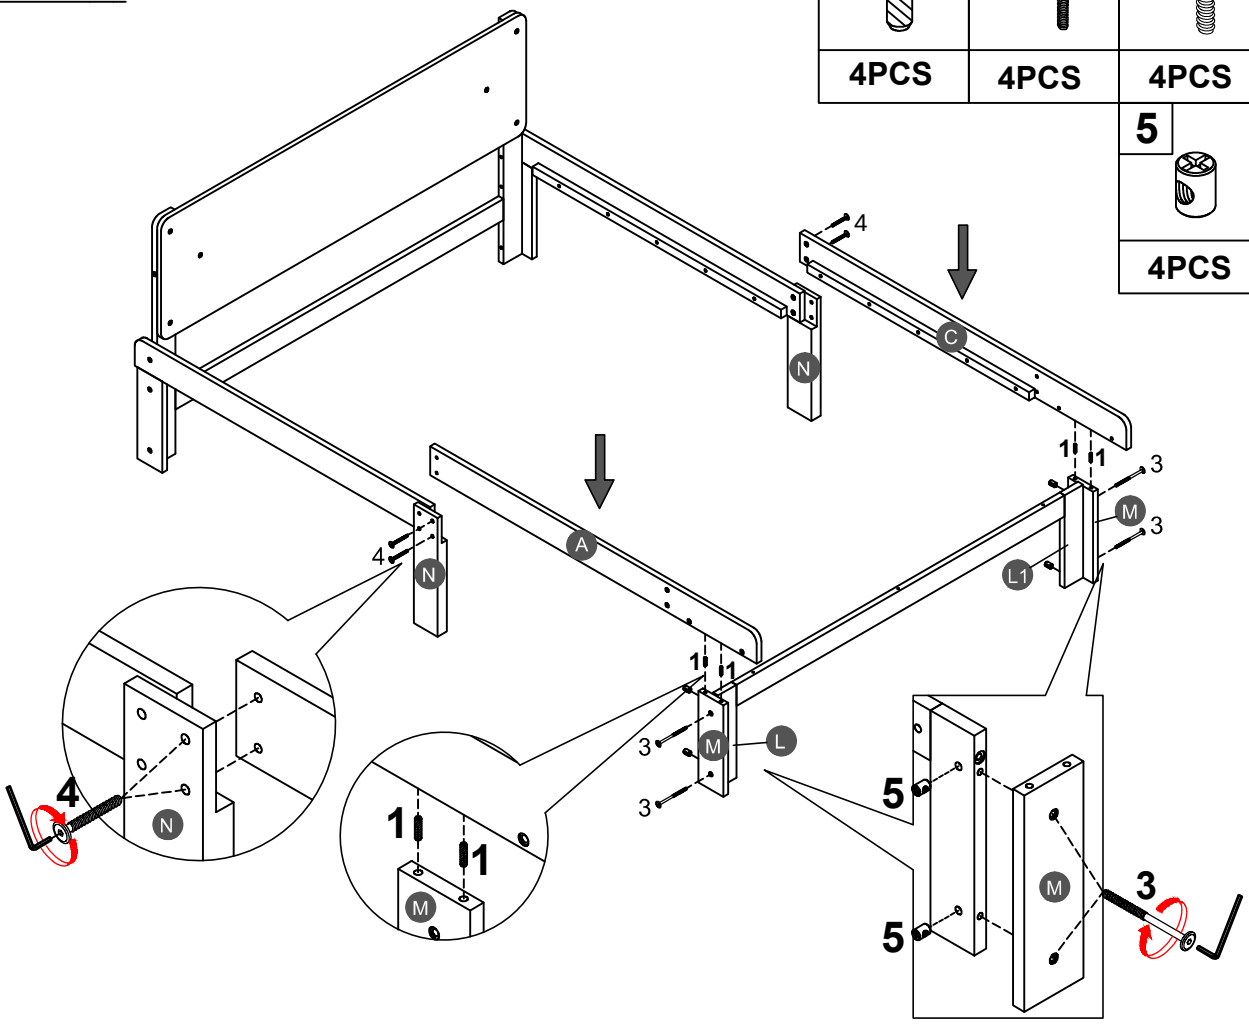

STEP 7:

3	5
4PCS	4PCS

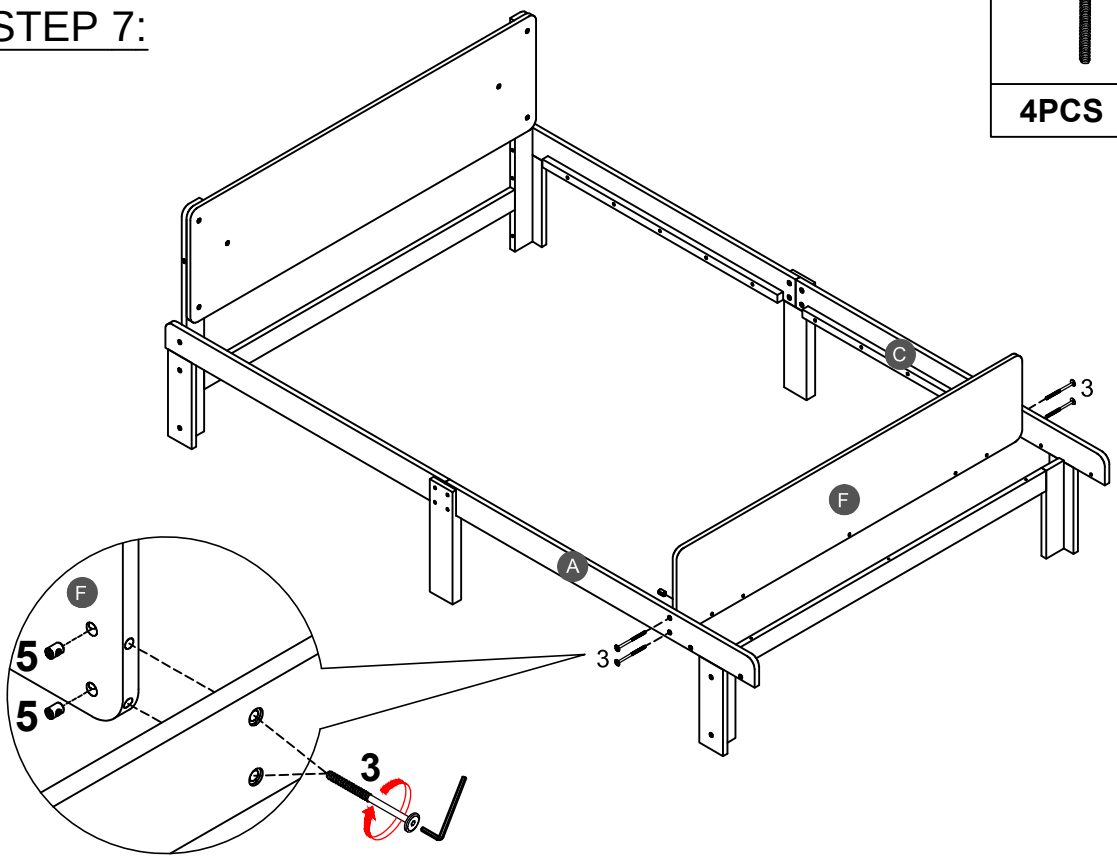

STEP 8:

1
2PCS

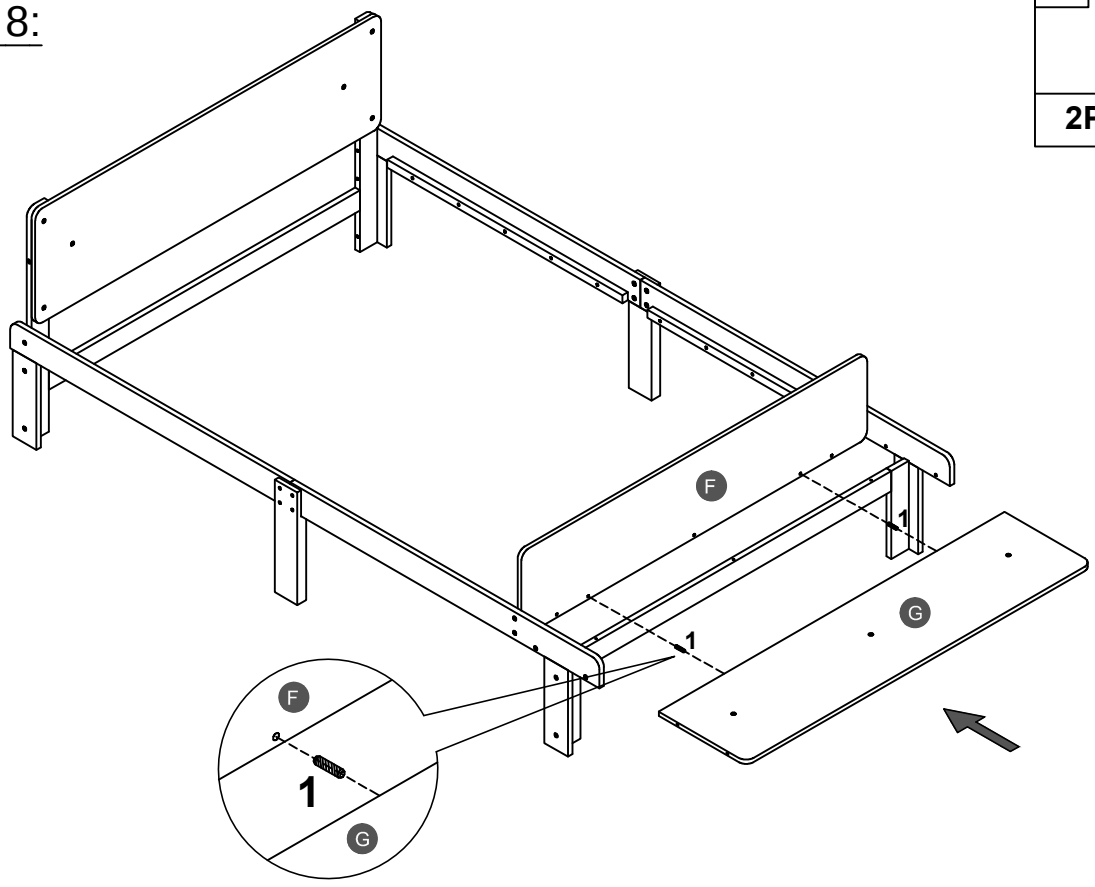

STEP 9:

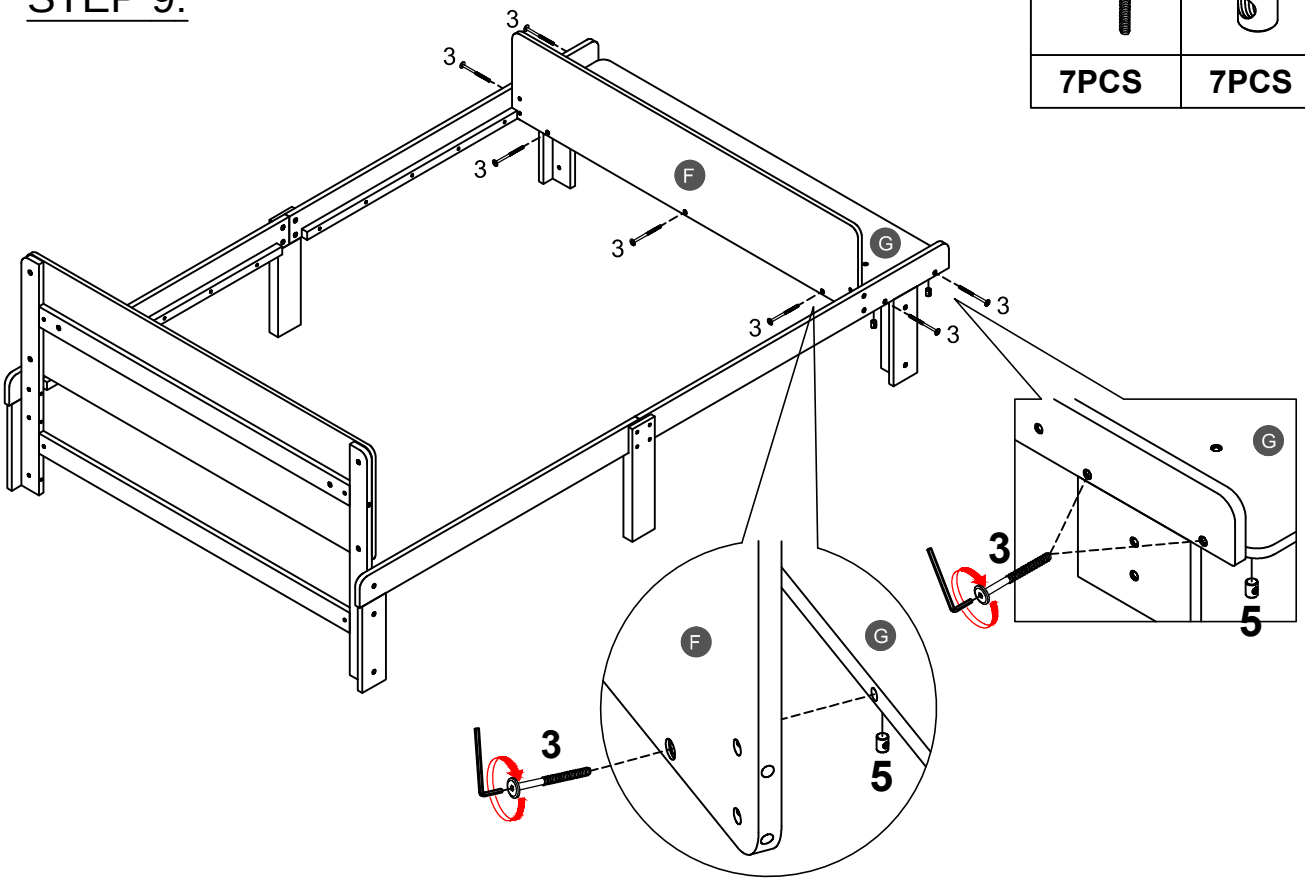

STEP 10:

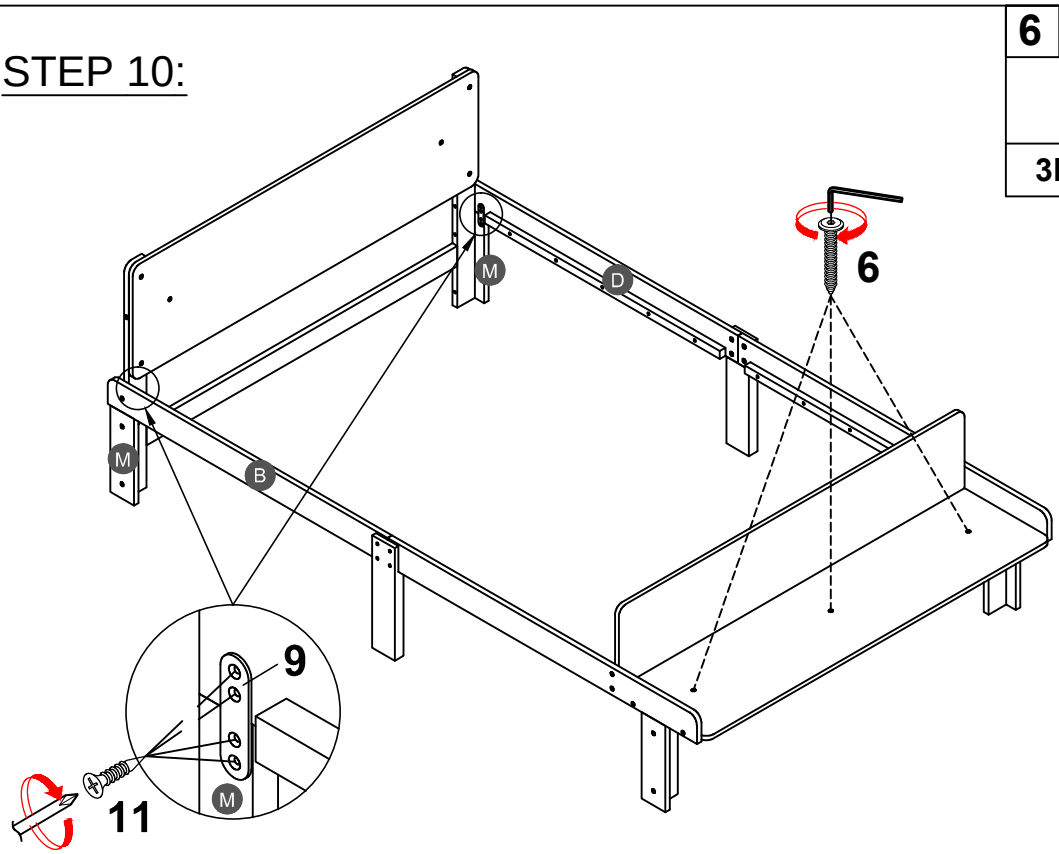

STEP 11:

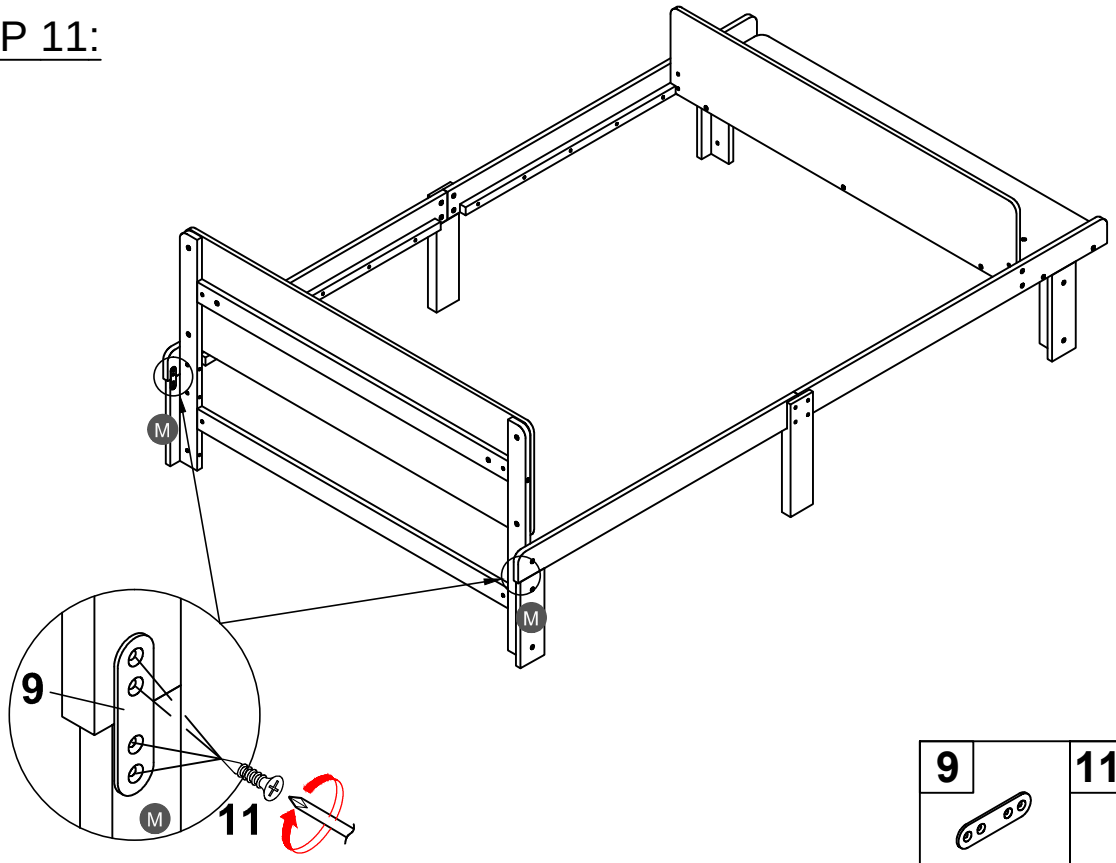

9	11
2PCS	8PCS

STEP 12:

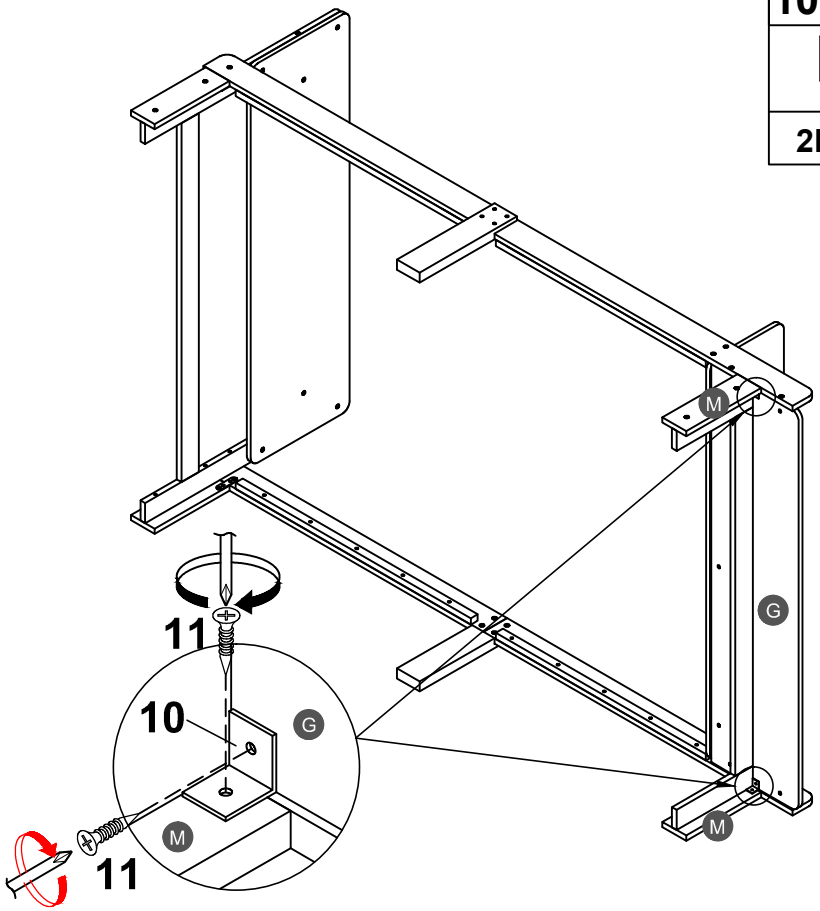

10	11
2PCS	4PCS

STEP 13:

10	11
2PCS	4PCS

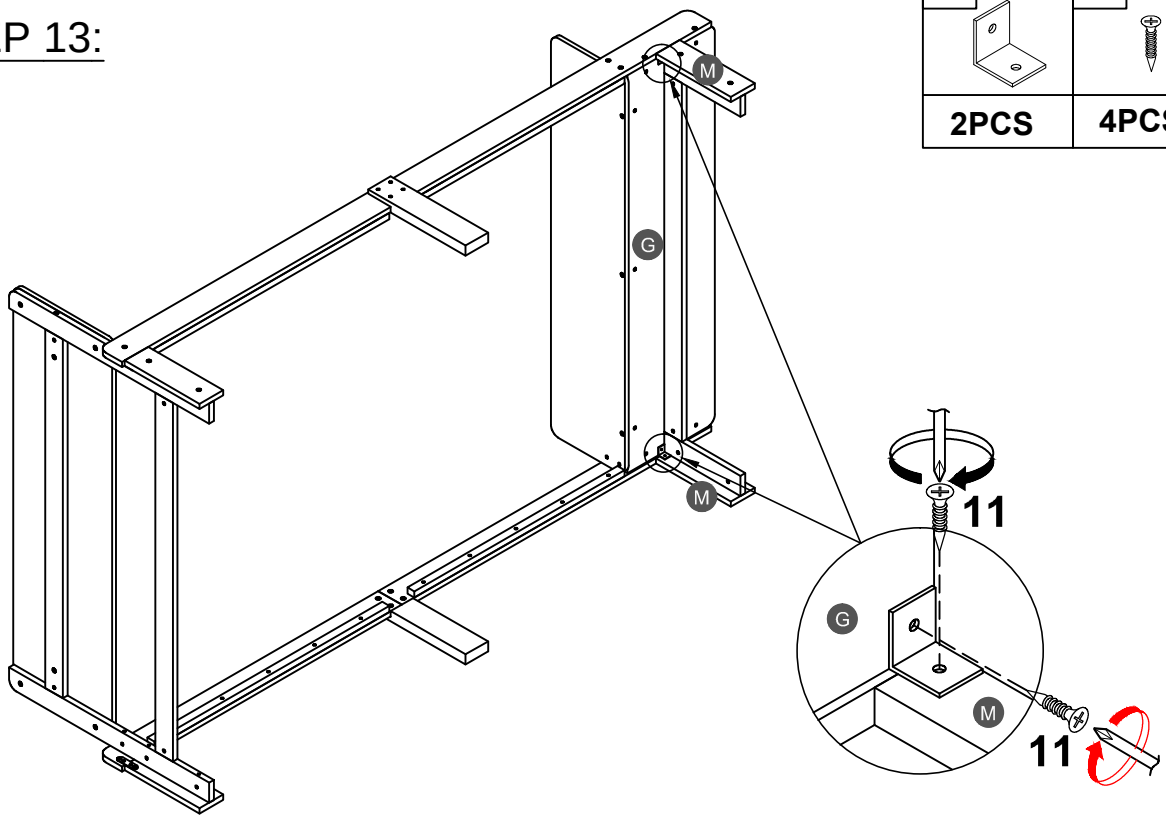

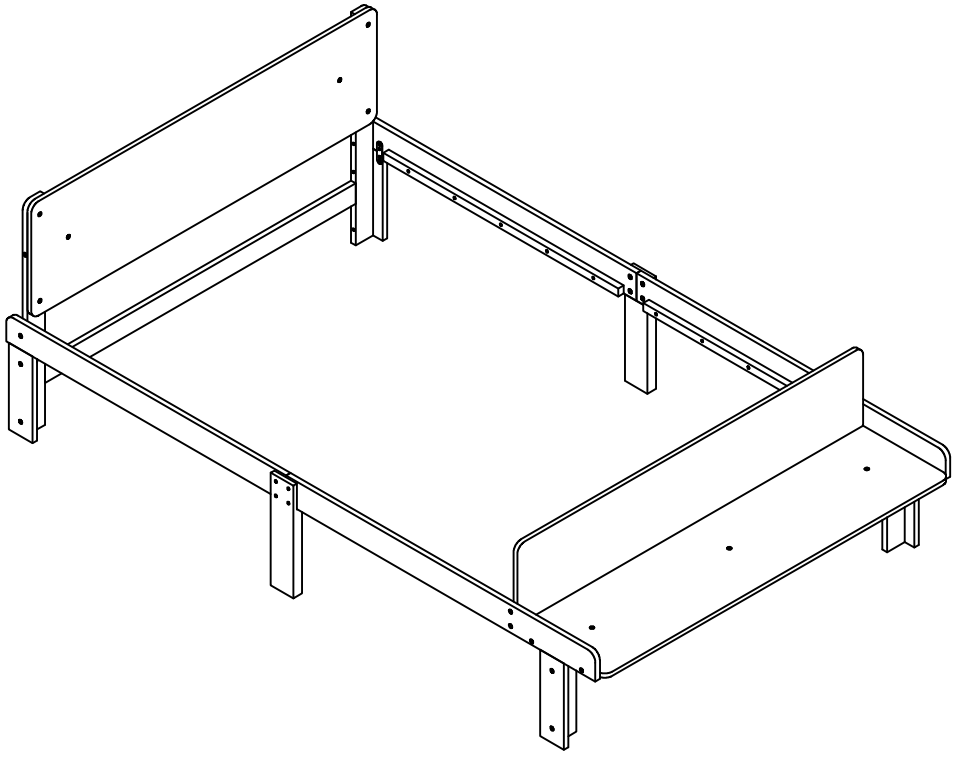

STEP 14:

8

8PCS

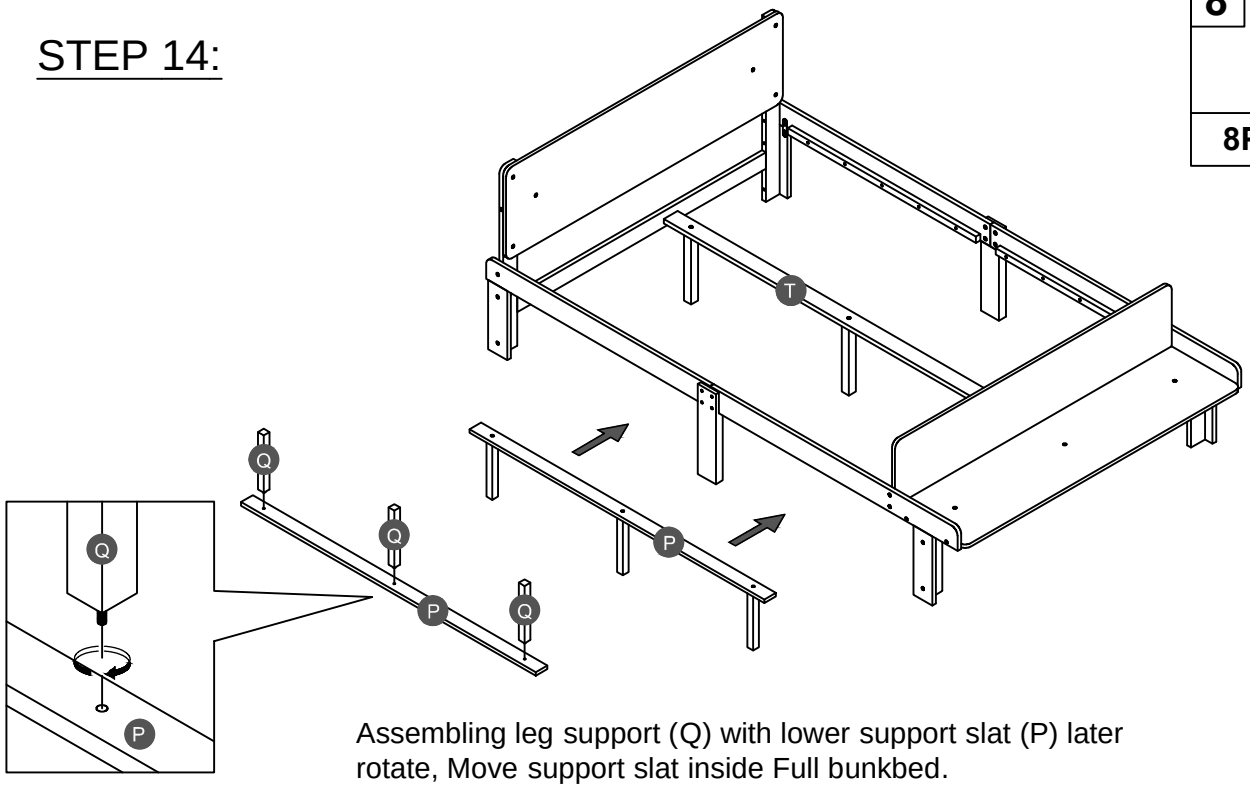

Assembling leg support (Q) with lower support slat (P) later rotate, Move support slat inside Full bunkbed.

STEP 15:

8

12PCS

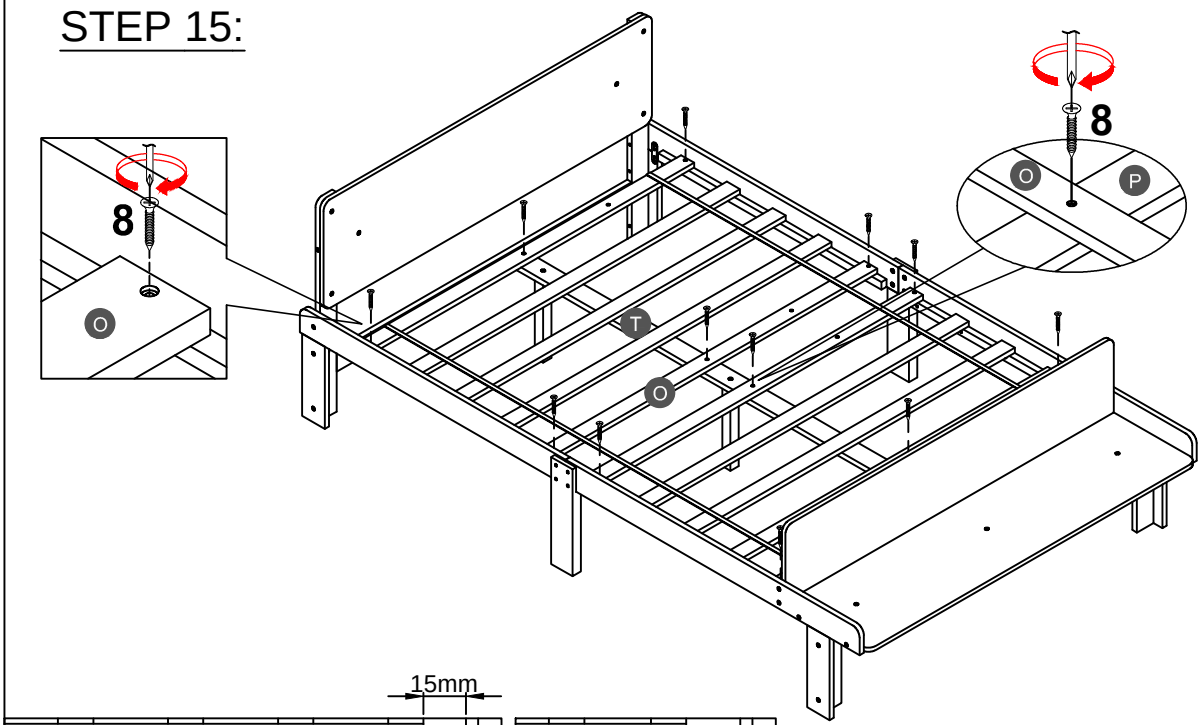

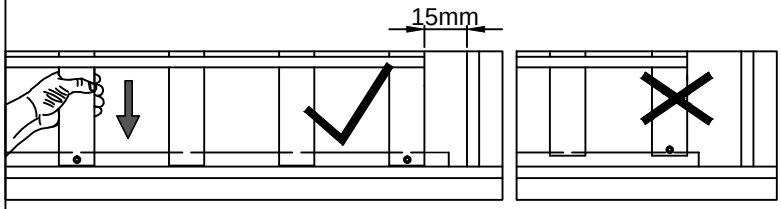

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.