


①



②


N:white

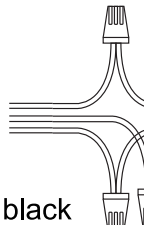


L:black



Green

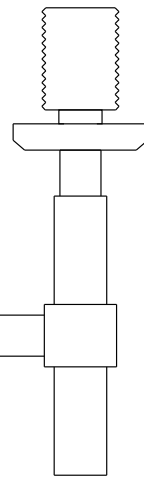

③

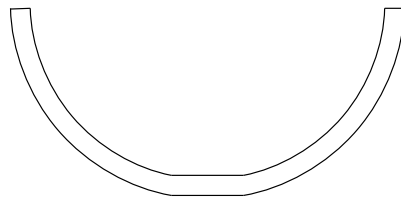


⑤




④



⑥



⑦

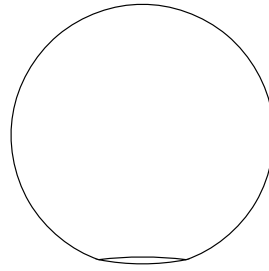

2*G9 Max 40W Not included

Double Armed Sconce Instruction

Safety First

Turn OFF power at the breaker panel and verify the wires are not live before beginning.

Installation Steps

- **Step 1: Attach the Mounting Plate**

Attach the round mounting plate to the wall junction box with the two #8-32 screws supplied. The two threaded posts must face outward and sit level.

- **Step 2: Wire the Fixture**

Wire the fixture body (3):

1. Connect black (hot) to black, white (neutral) to white, and green/bare (ground) to green/bare or the ground screw on the plate.
2. Twist connectors clockwise and tuck all splices neatly inside the box.
3. Slide the fixture's backplate onto the threaded posts and hand-tighten the decorative cap nuts (2) until the backplate is snug against the wall.

- **Step 3: Attach the Horizontal Arm**

Attach the horizontal arm to the main fixture body if not already assembled.

- **Step 4: Position the Glass Shades**

Carefully lower each glass shade over the sockets, centering them on the stems.

- **Step 5: Secure the Retaining Collars**

Place the small retaining collars over each socket and turn clockwise to clamp the glass shades securely. Do not overtighten.

- **Step 6: Install the G9 Bulbs**

Insert two G9 bulbs (max 40W each, not included) straight into the sockets until they click fully into place.

- **Step 7: Attach the Decorative Glass Covers**

Restore power at the breaker panel and test the sconce. The bulbs should illuminate evenly and the shades should be stable with no wobble.

Final Check

Restore power at the breaker panel and test the sconce. The bulbs should illuminate evenly and the shades should be stable with no wobble.