


METAL PRIVACY SCREEN FENCE PANEL ASSEMBLY MANUAL

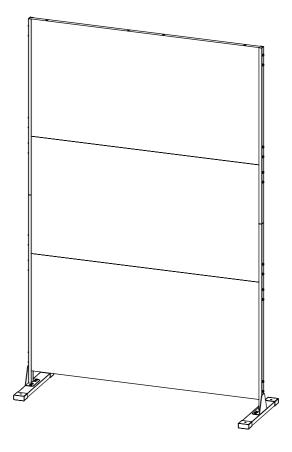

KOZYARD LLC PRODUCTS WWW.KOZYARD.COM

©Copyright 2016 - 2023 Kozyard LLC. | All Rights Reserved. Version:20231006


Assembly Instructions

- Prior to assembly, ensure that you lay out and identify all the parts listed in the parts list.
- Tighten all nuts and bolts securely. Hand-tighten all bolts before use. Avoid using power tools or applying excessive force during assembly and bolt tightening.
- If you encounter any difficulties during assembly or if any part is missing or damaged, please don't hesitate to contact our customer service team via email at info@kozyard.com or by calling our toll-free number at 866-355-0018.


Care and warranty

- The wind capacity rate of this screen is lbs.
- Clean the frame components with a mild soap solution, then rinse thoroughly. Avoid using bleach, acid, or any other solvents on frame components.
- For a comprehensive warranty policy, please visit www.kozyard.com. Be aware that warranty terms can change without prior notification.
- For the best performance and safety of your screen, inspect and tighten all bolts and fasteners regularly

ASSEMBLY PARTS AND TOOL

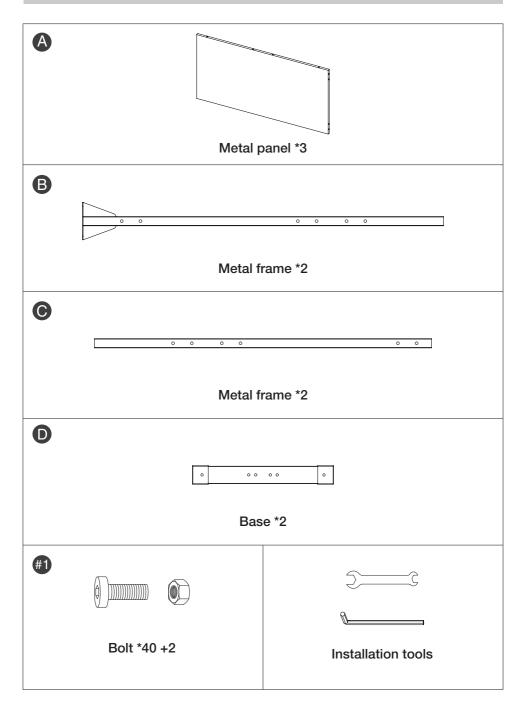


ASSEMBLY INSTRUCTIONS

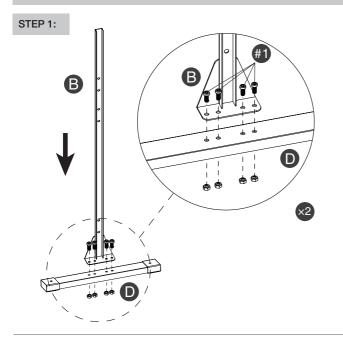



Connect Metal Frame (Part B) to Base (Part D) using the #1 Screw, as illustrated in the diagram.

STEP 2:

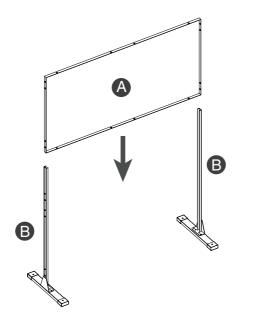


Place Panel (Part A) between the two frames (Part B).

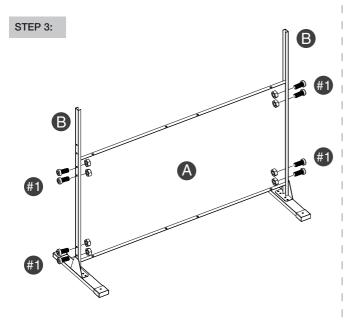





STEP 4:

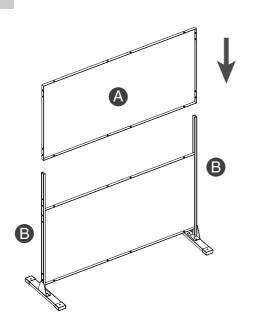


Place the second panel (Part A) between the two frames (Part B), as indicated in the diagram

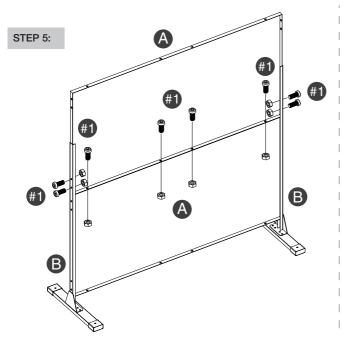

Attach the two panels (Part A) to each other simultaneously affixing the second panel (Part A) to the frames (Part B) using #1 screws, as show the diagram.

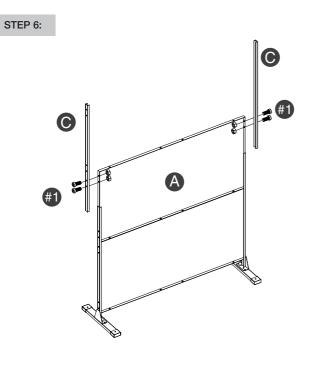


Connect Frames (Part C) to the second panels (Part A) using #1 screws, as indicated in the diagram.

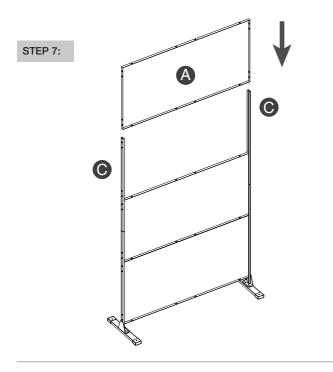


Place the third panel (Part A) between the two frames (Part C), as show the diagram.

Attach the third panel (Part A) to the second one while simultaneously affixing the third panel (Part A) to frames (Part C) using #1 screws, as shown in the diagram.

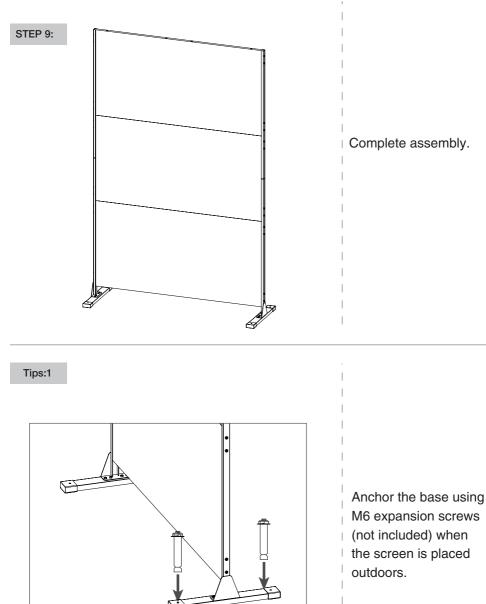

(The set does not include expansion screws)

M6 expansion screws

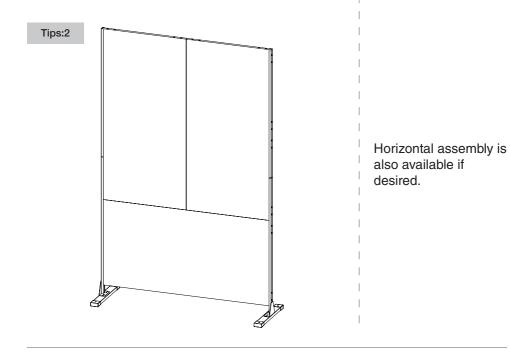

Horizontal assembly is also available if desired.





Enjoy Cozy Life!

SUPPORT: Toll free : 1-866-355-0018 www.kozyard.com email: support@kozyard.com

SOCIAL MEDIA: O Follow us on Instagram www.instagram.com/kozyard

KOZYARD LLC